

28 TELETYPEWRITER CABINETS - FOR KSR AND RO SETS
DISASSEMBLY AND REASSEMBLY

CONTENTS	PAGE	
1. GENERAL.	1	2.02 On console model, open the lower compartment by turning the screws one quarter turn and lower the panel.
2. DISASSEMBLY AND REASSEMBLY. .	1	B. Skintight or Rack-Mounted Cabinet (Cover)
A. Single Unit Console Model or Table Model Cabinets	1	2.03 To remove cabinet from set.
B. Skintight or Rack-Mounted Cabinets (Cover)	1	(1) Unlatch lock lever at front of keyboard and lift cabinet upward and off.
C. Wall-Mounted Cabinet (Cover) . .	1	(2) Further disassembly is unnecessary for installation or removal of equipment.
D. Cabinets for Multiple-Mounted KSR and RO Sets	1	C. Wall-Mounted Cabinet (Cover)
1. GENERAL		2.04 To remove the cabinet from set:
1.01 This section covers disassembly of four KSR and RO Cabinets and Covers only to the extent necessary to install or remove the components which they house. Further disassembly should be undertaken, refer to exploded illustrations in the appropriate parts section.		(1) Unlatch and lower the bottom compartment door.
1.02 This section is revised to delete the ASR cabinets and add wall-mounted cabinets, rack-mounted cabinets, and cabinets for multiple-mounted KSR and RO Sets. Since this is a general revision, marginal arrows ordinarily used to indicate changes and additions are omitted.		(2) Remove two screws inside the back bottom edge of the cabinet that fasten the cabinet to the wall plate.
2. DISASSEMBLY AND REASSEMBLY		(3) Pull bottom of cabinet away from wall and lift upward and off.
A. Single Unit Console Model or Table Model Cabinet		D. Cabinets for Multiple-Mounted KSR and RO Sets
2.01 Removal of Crossbar		2.05 To gain access to the inside front of the cabinet, unlatch the covers and pull the drawer forward. For access to the lower compartment pull open the access door.
(1) Unlatch and raise the cabinet dome.		2.06 To remove the back panel, unscrew the mounting screws and lift out.
(2) Reach inside the cabinet and loosen the knurled thumb screws at each end of the crossbar.		2.07 The base assemblies with paper winders may be lifted out the back way a short distance, if desired, without disconnecting any cables. For further removal, the cables must be removed.
(3) Slide the bar toward either end and lift out.		2.08 If necessary the drawer slides may be disassembled from the sides of the cabinet by removing the four screws in each slide.