

33 TYPING UNIT

ADJUSTMENTS

CONTENTS	PAGE	CONTENTS	PAGE
1. GENERAL	4	Keyboard follower lever spring . . .	17
2. BASIC UNIT	9	Shaft left bearing gap	11
Carriage Area		Stop bail spring	17
Final printing alignment	131	Trip lever engagement	14
Fourth pulse linkage positioning	55	Trip shaft position	12
Front rollers clearance	51	Form Feed Area	
Left slide guideplate reset	61	Cam lobe position - S	106
Power bail roller clearance	52	Clutch shoe lever gap - S	102
Print drive lever positioning	56	Form feed belt tension - S	101
Print hammer bail spring	67	Form-out bail spring - S	120
Print hammer trip lever release	62	Form-out contact operating bail	
Print hammer trip lever reset	63	clearance - S	120
Print hammer trip lever spring	67	Form-out contact pressure and	
Print suppression latchlever		gap - S	120
endplay	58	Form-out lever overtravel - S	105
Print suppression latchlever		Form-out lever — reset clearance	
release	65	- S (early design)	108
Rack and pinion backlash	52	Form-out lever — reset clearance	
Rear rail position	53	- S (late design)	109
Rear roller clearance	54	Form-out lever spring - S	105
Reset lever positioning	57	Latchlever assembly spring - S	105
Ribbon drive lever spring	71	Latchlever spring - S	102
Ribbon feed pawl spring	71	Line feed bail spring - S	115
Ribbon guide spring	67	Line feed lever line-up and	
Ribbon positioning	64	endplay - S	104
Ribbon power lever drive	70	Line feed lever spring - S	115
Ribbon ratchet spring	71	Line feed pawl stripping - S	114
Ribbon reverse arm spring	71	Line feed selection	115
Right side guideplate reset	60	Reset follower lever spring - S	106
Rotary drive bail spring	68	Trip lever engagement (final) - S	
Slide guideplate springs	59	(late design)	112
Slide springs	69	Trip lever engagement — form-out	
Typewheel "home" position		- S	110
(preliminary)	66	Trip lever engagement — line feed	
Typewheel positioning (preliminary)	59	- S (early design)	111
Typewheel return spring	68	Trip lever engagement —	
Vertical drive bail spring	68	(preliminary) - S	103
Distributor Area		Trip lever spring - S	102
Brush holder gap	11	Trip lever upstop position - S	
Brush holder position	15	(early design)	113
Brush holder spring	16	Trip shaft endplay - S	104
Clutch latchlever spring	16	Function Area	
Clutch shoe lever gap	13	Automatic codebar spring	41
		Bearing alignment	33

CONTENTS	PAGE
Bell clapper gap	50
Blocking lever springs	39
Carriage drive bail endplay	50
Carriage return lever — latch clearance	49
Carriage return spring	50
Codebar guide position	40
Codebar reset bail spring	36
Codebar reset guide position	38
Codebar reset lever line-up	35
Codebar reset lever position	36
Codebar springs	41
Coding and installation of TP180801 universal function lever	155
End-of-line bell signal - S	130
End-of-line latch spring	80
Function bail spring	45
Function lever code arrangement	156
Function lever retainer	45
Function lever springs	43
Function pawl spring	42
Function shaft and casting position	48
Left rocker drive	42
Line feed function strip lever spring - S	43
Line length selection	128
Main shaft rotation	33
Margin bell bellcrank clearance	129
Print suppression and no. 4 codebar spring	41
Print suppression cam follower spring	47
Print suppression latch — horizontal clearance	37
Print suppression latch — vertical clearance	47
Right rocker drive	44
Rocker shaft position and endplay	34
Selector blocking levers positioning	39
Stripper bail clearance	46
 Main Shaft Area	
Clutch shoe lever spring	25
Clutch shoe spring	25
Codebar and function clutch latchlever springs	24
Codebar and function clutch shoe lever gaps	24
Codebar clutch endplay	20
Codebar clutch trip lever engagement	22
Codebar clutch trip lever line-up	21
Driven gear line-up	20
Form feed clutch endplay - S	100
Function clutch endplay	19
Function clutch position (preliminary)	19

CONTENTS	PAGE
Function clutch trip lever engagement	23
Latchlever endplay	100
Left bearing position	18
Selector cam endplay	18
Trip lever springs	23
Trip shaft latchlever endplay	21
 Motor Area	
Belt tension (final)	10
Belt tension (preliminary)	10
Gear backlash	9
 Paper Controls	
Paper alarm contact lever clearance - S	126
Paper alarm contact pressure and gap - S	126
Paper lever spring - S	126
 Platen Area	
Cam zero position	117, 118
Copyholder wire position - F	93
Detent position - F	85
Detent position - S	116
Detent ratchet pawl spring - S	116
Form length selection - S	119
Idler position - S	107
Left margin position - F	80
Left margin position - S	125
Line feed blocking lever spring - F	86
Line feed drive arm clearance - F	87
Line feed drive link position - F	89
Line feed drive link spring — horizontal - F	86
Line feed drive link spring — vertical - F	86
Line feed pawl downstop position - F	90
Line feed pawl spring - F	85
Line feed selection - F	84
Line feed stripper plate clearance - F	92
Line feed upstop bracket position - F	88
Paper guide springs - F	81
Paper guide spring - S	94
Paper guideplate clearance - S	99
Paper guideplate springs - F	81
Paper guideplate spring - S	94
Paper straightener bail spring - F	81
Platen detent pawl spring - F	89
Platen endplay - F	95
Platen — horizontal position - F	78
Platen — horizontal position - S	96, 97
Platen knob position - S	94
Platen knob spring - S	94

CONTENTS	PAGE	CONTENTS	PAGE
Pressure roller clearance - F	91	Armature spring	143
Printing line position (final) - S	122	Blocking follower lever spring	133
Printing line position (preliminary)		Blocking latch spring	143
- S	121	Blocking link clearance	132
Reset follower lever — reset		Character suppression contact	
position - S	117	wire gap	142
Right margin position - S	125	Code contact wire gap	146 ←
Right paper guide position - S	123	Coding the answer-back drum	158
Vertical type alignment - F	79	Contact wire spring	145
Vertical type alignment - S	97, 98	Control lever spring — horizontal	133
Wire guide position - S	124	Control lever spring — vertical	
Zeroizing button - S	107	(early design)	143
Selector Area		Control lever spring — vertical	
Armature bracket position		(late design)	144
(preliminary)	26	Detent spring	145
Armature spring	28	Drum position	134
Latchlever spring	29	Feed lever position	136
Pushlever springs	31	Feed lever spring	146
Receiving margins	130	Feed pawl position	137
Selector clutch torque	32	Feed pawl spring	145
Selector lever springs	30	HERE IS bellcrank positioning	138
Shoe lever gap and trip lever		Tripbail positioning	139
engagement	27	Trip lever adjusting tab clearance	141
Spacing locklever spring	30	Trip lever clearance	135
Start lever spring	29	Trip lever overtravel and armature	
Stripper bail spring	31	gap	140
Trip lever spring	27	Trip lever spring	144
Spacing Area		Trip magnet position	141
Carriage bounce	83	Auxiliary Contact Assembly (TP183549)	
Carriage return arm springs	83	Front contact spring	149
Carriage return latch spring	83	Time delay contact bracket position	149
Carriage return lever spring	74	Function Area	
Carriage return lever — unlatch		Coding and installation of TP180801	
clearance	82	universal function lever	155
Check pawl spring	76	Function Box Switches	
Feed pawl spring	75	Contact assembly position	147
Feed pawl stop position	72	Print-Nonprint	
Feed pawl travel	76	Armature spring	151
Left margin printing	127	Latch bellcrank spring	152
Space bellcrank spring	72	Nonprint codebar spring	154
Space suppression lever clearance —		Nonprint function lever clearance	150
printing	73	Release magnet overtravel	152
Space suppression lever clearance —		Solenoid bracket position	151, 153
spacing	74	Receive-Only Sets	
Space suppression lever spring	75	Keyboard adjusting bracket	
Spacing belt tension	77	position	148
3. VARIATIONS TO BASIC			
ADJUSTMENTS	132		
Answer-Back Area			
Answer-back drum code			
arrangement	161		

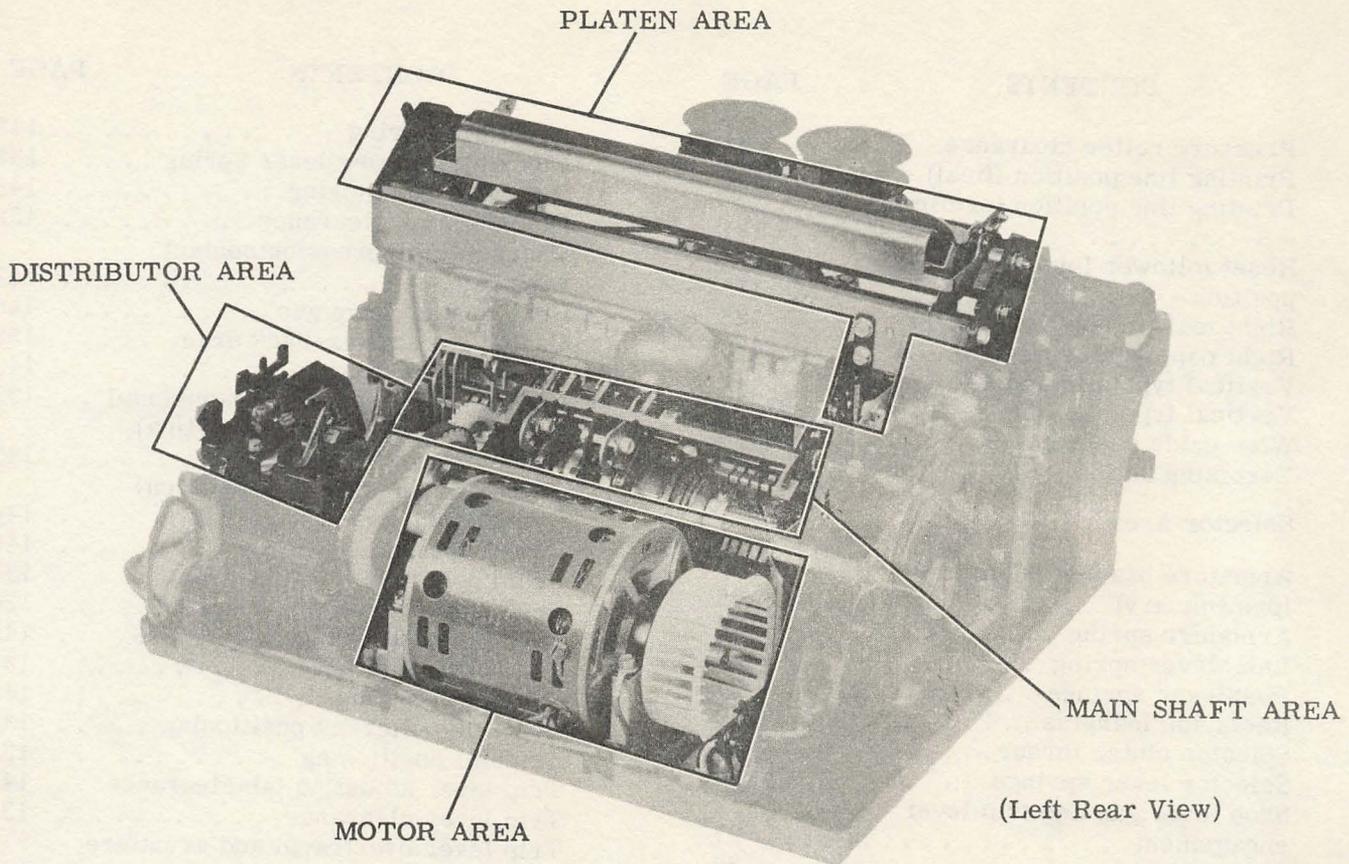


Figure 1 - Distributor, Main Shaft, Motor, and Platen Areas

1. GENERAL

1.01 This section provides adjustment information for the 33 typing unit. It is re-issued to include the latest changes. Marginal arrows indicate the changes.

1.02 In the adjustments covered in this section, location of clearances, position of parts, and point and angle of scale applications are illustrated by line drawings. Requirements and procedures are set forth in the several texts that accompany the line drawings. Required tools are included in TP185830 maintenance tool kit and are listed in Section 570-005-800TC. A DXD800 Signal Distortion Test Set was used to determine the requirements for the selector receiving margins.

1.03 Adjustments are divided into two categories — basic and variations. Basic adjustments apply to all friction feed and/or sprocket feed typing units. Adjustments found under variations apply only to typing units which

have the particular feature(s) under consideration. The F and S following an adjustment title mean that the adjustment applies only to friction feed (F) or sprocket feed (S) typing units. No letter designation indicates that the adjustment applies to both types of equipment.

1.04 Adjustments are presented in a definite order which is considered the best to follow when completely readjusting the equipment. Certain interrelated adjustments, which appear on the same page, should be checked and adjusted in a definite sequence. The sequence is indicated by the letters (A), (B), etc. No single adjustment should be undertaken without first completely understanding the procedure and knowing the requirements. Therefore, read a procedure all the way through before making an adjustment or checking a spring tension.

Note: Disconnect the typing unit from any ac or dc potential prior to inspection, minor repair, extensive maintenance, or a complete readjustment.

1.05 References to left, right, front, rear, etc consider the typing unit to be viewed from a position where the carriage area faces

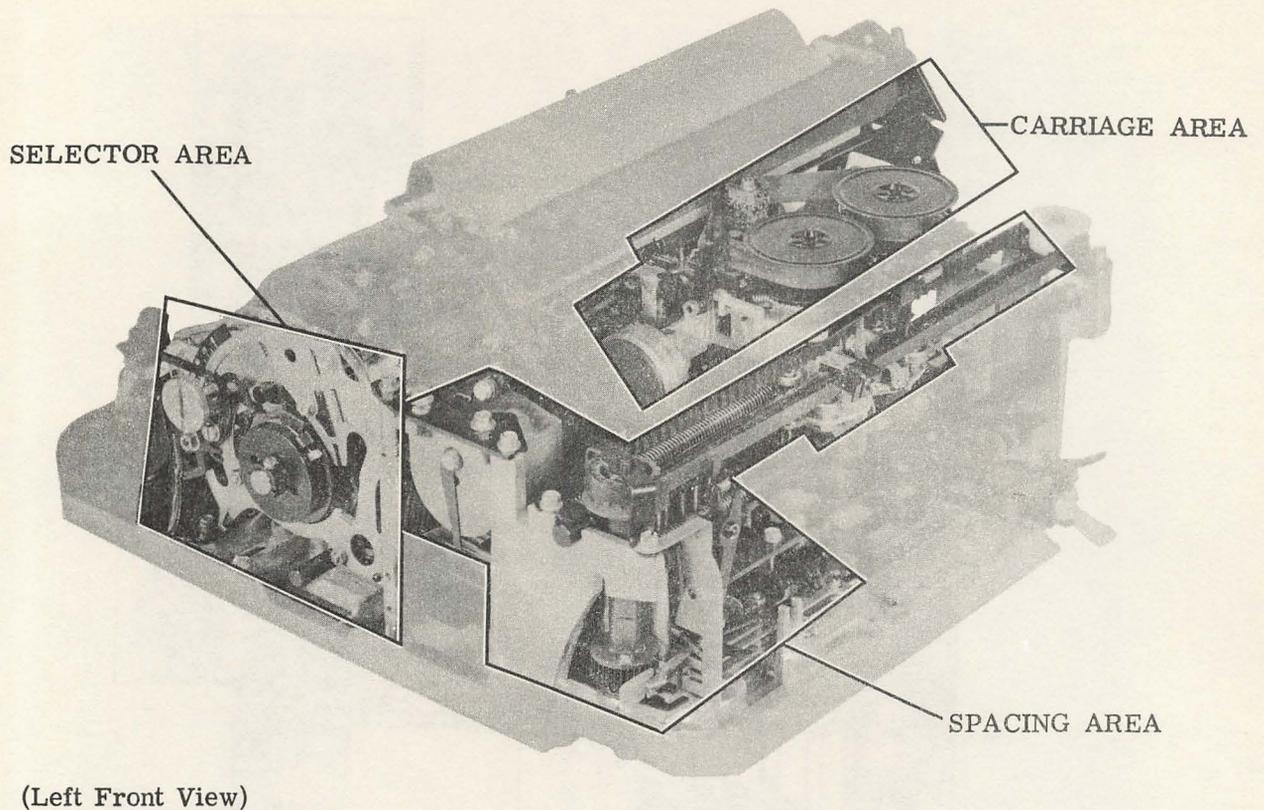


Figure 2 - Carriage, Selector, and Spacing Areas

up and the selector area is located to the viewer's left.

1.06 Unless specifically stated otherwise, make screws or nuts friction tight to make an adjustment and tighten them securely once the adjustment has been made.

1.07 When a procedure calls for using pry points or slots to make an adjustment, place a screwdriver between the points or in the slots and pry parts in the proper direction.

1.08 Due to a high degree of congestion within certain areas of some typing units, some disassembly will be required prior to making certain adjustments. If parts or subassemblies are removed from the typing unit to facilitate the making of an adjustment, be sure that they are subsequently replaced. Recheck any adjustments that may have been affected by the removal of parts or subassemblies.

Note 1: Do not remove parts and/or subassemblies unless it is considered absolutely necessary to perform an adjustment.

Note 2: Instructions for the disassembly and reassembly of parts and/or subassemblies are given in the appropriate disassembly and reassembly section and/or appropriate illustrated parts section.

Note 3: Do not lift typing unit while holding any part of the selector mechanism. Excessive strain on the selector mechanism, due to the weight of the typing unit, may cause selector malfunctioning. See appropriate disassembly and reassembly section for the proper method of lifting typing unit from its subbase.

1.09 Related adjustments are listed with some of the adjustment texts and are primarily intended to aid in troubleshooting the equipment. As an example, suppose that in searching for a

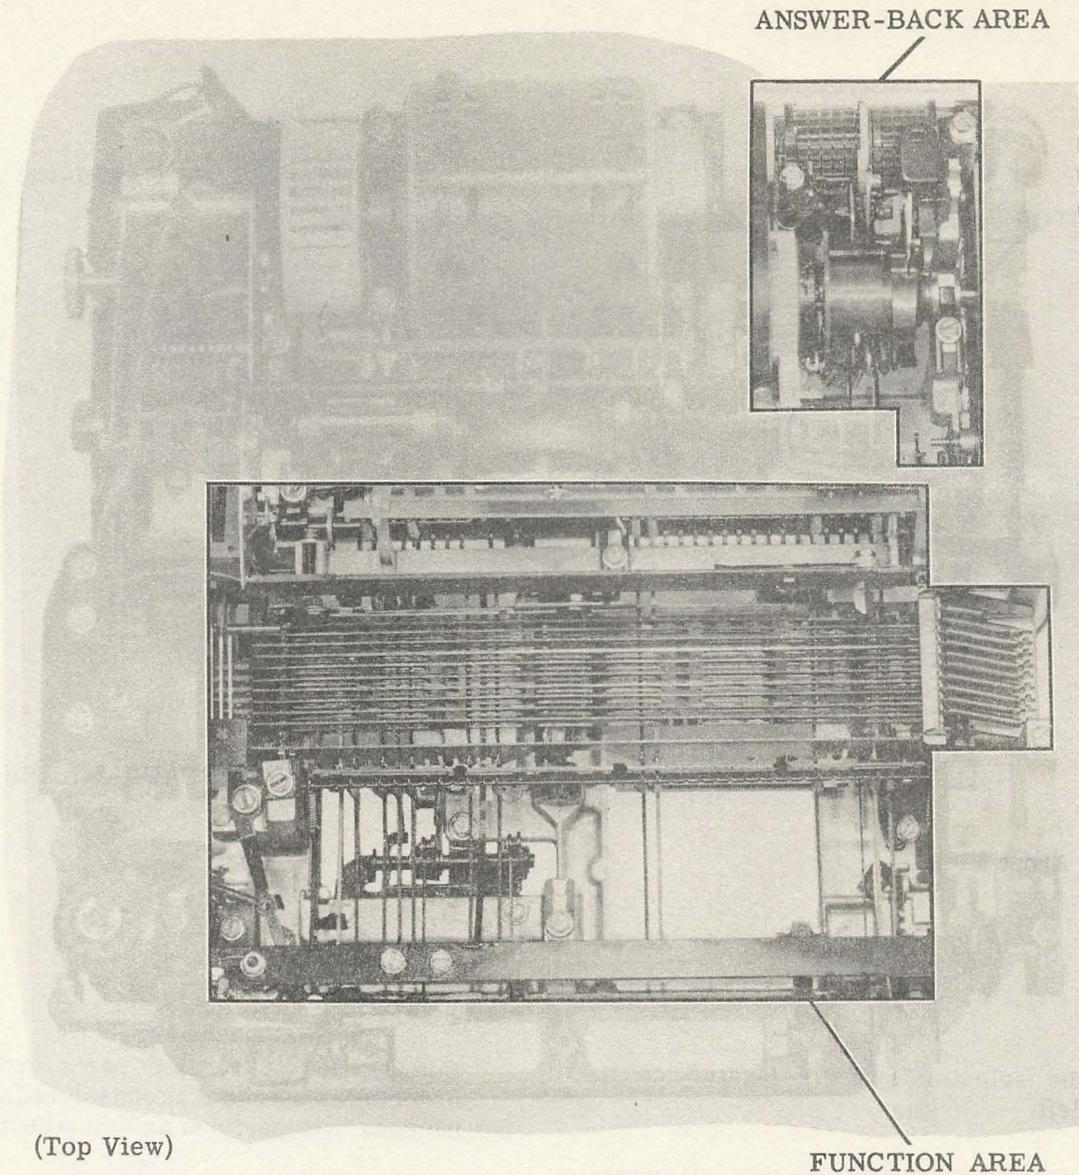


Figure 3 - Answer-Back and Function Areas

trouble it is discovered that the FUNCTION CLUTCH POSITION adjustment does not meet its requirement. Under Related Adjustments it is indicated that this adjustment is affected by the LEFT BEARING POSITION adjustment. First, check it to see if it is the cause of the trouble. Also, it is indicated that the FUNCTION CLUTCH POSITION adjustment affects FUNCTION CLUTCH ENDPLAY, CODEBAR CLUTCH ENDPLAY, and CODEBAR CLUTCH TRIP LEVER LINE-UP adjustments. If the former adjustment is changed, check the latter adjustments.

Note: Information in parentheses () following any related adjustment gives the associated paragraph number and area, if different from the paragraph number at the top of the page.

1.10 The spring tensions specified in this section are indications, not exact values. Therefore, to obtain reliable readings, it is important that spring tensions be measured by spring scales placed in the positions shown on pertinent line drawings. Springs that do not meet their requirements should be replaced by

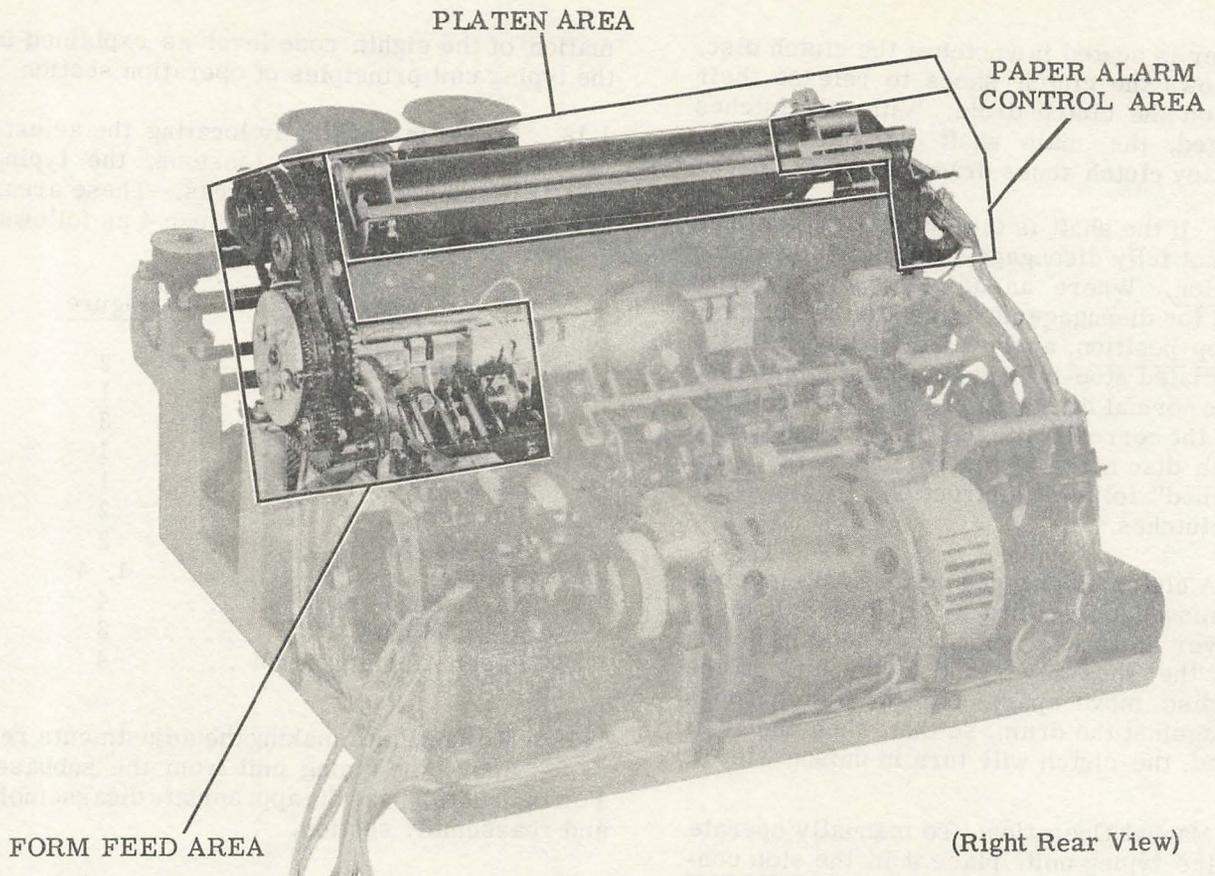


Figure 4 - Paper Alarm Control, Form Feed, and Platen Areas

new ones. Only those springs that directly affect the operation of the typing unit are measured, however, others may be measured indirectly in the process. If, at first, the spring tension requirement cannot be met, replace the indicated spring being directly measured. Then if the requirement is not met, any springs that are indirectly measured in the procedure should be replaced, one at a time, with the performance of requirement checks each time a spring is replaced.

Note 1: Use only spring scales which are recommended by the manufacturer and found in Maintenance Tools Section 570-005-800.

Note 2: The spring tensions may be checked in any sequence.

1.11 All adjustment procedures should be started with the typing unit in the stop condition. It is in the stop condition when the selector armature is in its attracted (frontward) position and all clutches are disengaged.

1.12 To place the typing unit in the stop condition, use TP185832 armature clip to hold the selector armature in its attracted

(frontward) position. Rotate the main shaft clockwise (as viewed from the left) until all clutches are in a stop position. Fully disengage all of the clutches as instructed in 1.13 following.

Note 1: A stop position is that position where a shoe lever contacts a trip lever.

Note 2: The distributor clutch will not disengage if the typing unit is removed from a set unless the keyboard adjusting bracket is adjusted per 3.17. Adjustment must be remade to set requirements when the typing unit is replaced in an ASR or KSR set.

Note 3: The distributor clutch will not disengage unless the answer-back drum is in its home position, which is the position where the control lever is fully detented into the indent on the answer-back drum.

1.13 When disengaged, a clutch is latched so that a shoe lever is held in its stop position by a trip lever while a corresponding

latchlever is seated in a notch of the clutch disc. This allows the clutch shoes to release their tension on the clutch drum. With all clutches disengaged, the main shaft will turn freely without any clutch shoes dragging.

Note: If the shaft is turned by hand, a clutch will not fully disengage upon reaching a stop position. Where an adjustment procedure calls for disengagement, rotate the clutch to a stop position, apply a screwdriver to the associated stop-lug, and push the clutch disc in the normal direction of main shaft rotation until the corresponding latchlever seats in its clutch disc notch. As a reminder, the word "latched" follows instructions to disengage the clutches.

1.14 A clutch is engaged when a trip lever is moved up so that it no longer holds a shoe lever in its stop position. When this action occurs, the shoe lever and a stop-lug on the clutch disc move apart, and the clutch shoes wedge against the drum, so that when the shaft is turned, the clutch will turn in unison with it.

1.15 Manual Operation: To manually operate the typing unit, place it in the stop condition as instructed in 1.12 and 1.13. Momentarily permit the armature to move to its unattracted (rearward) position to trip the selector clutch. Slowly rotate the main shaft clockwise (as viewed from the left) until all push levers have moved under their respective selector levers. Using a spring hook, strip the push levers from under the selector levers corresponding to the spacing elements of the code combination to be set up. Then continue to rotate the main shaft until the proper condition is set up or the character is cleared through the typing unit.

1.16 The selector levers are numbered 1, 2, 3, 4, 5, 7, 6, and 8 from left to right. To set up the character Y, for example, whose 8-level code combination is 1--45-78, strip the push levers from the 2, 3, and 6 selector levers.

1.17 Code combinations within this section are not always given as parity codes. Parity codes are obtained by proper transfor-

mation of the eighth code level as explained in the typing unit principles of operation section.

1.18 To aid in physically locating the adjustments and spring tensions, the typing unit is divided into eleven areas. These areas are indicated in Figures 1 through 4 as follows:

<u>Area</u>	<u>Figure</u>
Carriage	2
Distributor	1
Function	3
Main Shaft	1
Motor	1
Selector	2
Spacing	2
Platen	1, 4
Form Feed	4
Answer-Back	3
Paper Alarm Control	4

1.19 To facilitate making the adjustments remove the typing unit from the subbase. For instruction, see the appropriate disassembly and reassembly section.

1.20 Carriage Drive Bail and Function Bail Positioning: The following procedures may be used to locate the carriage drive bail and the function bail positions on units having indicator marks on the function cam and carriage drive link:

(a) The carriage drive bail is in its most rearward position when the indicator mark on the carriage drive link is centrally located within the second notch on the function cam and the hole in the cam is toward the rear.

(b) The function bail is in its uppermost position when the mark on the carriage drive link is centrally located within the first notch on the function cam and the hole in the cam is down.

(c) The function bail is in its lowermost position when the mark on the carriage drive link is centrally located within the third notch on the function cam and the hole in the cam is up.

2. BASIC UNIT

2.01 Motor Area

GEAR BACKLASH

To Check

Find position of tightest pinion and intermediate gear engagement. Hold intermediate gear stationary. Observe fan rim radial motion.

Requirement

Min 0.010 inch---Max 0.032 inch play at fan rim.


To Adjust

Loosen mounting screws and position motor gear bracket. Tighten screws.

Related Adjustment

Affects

BELT TENSION (2.02)

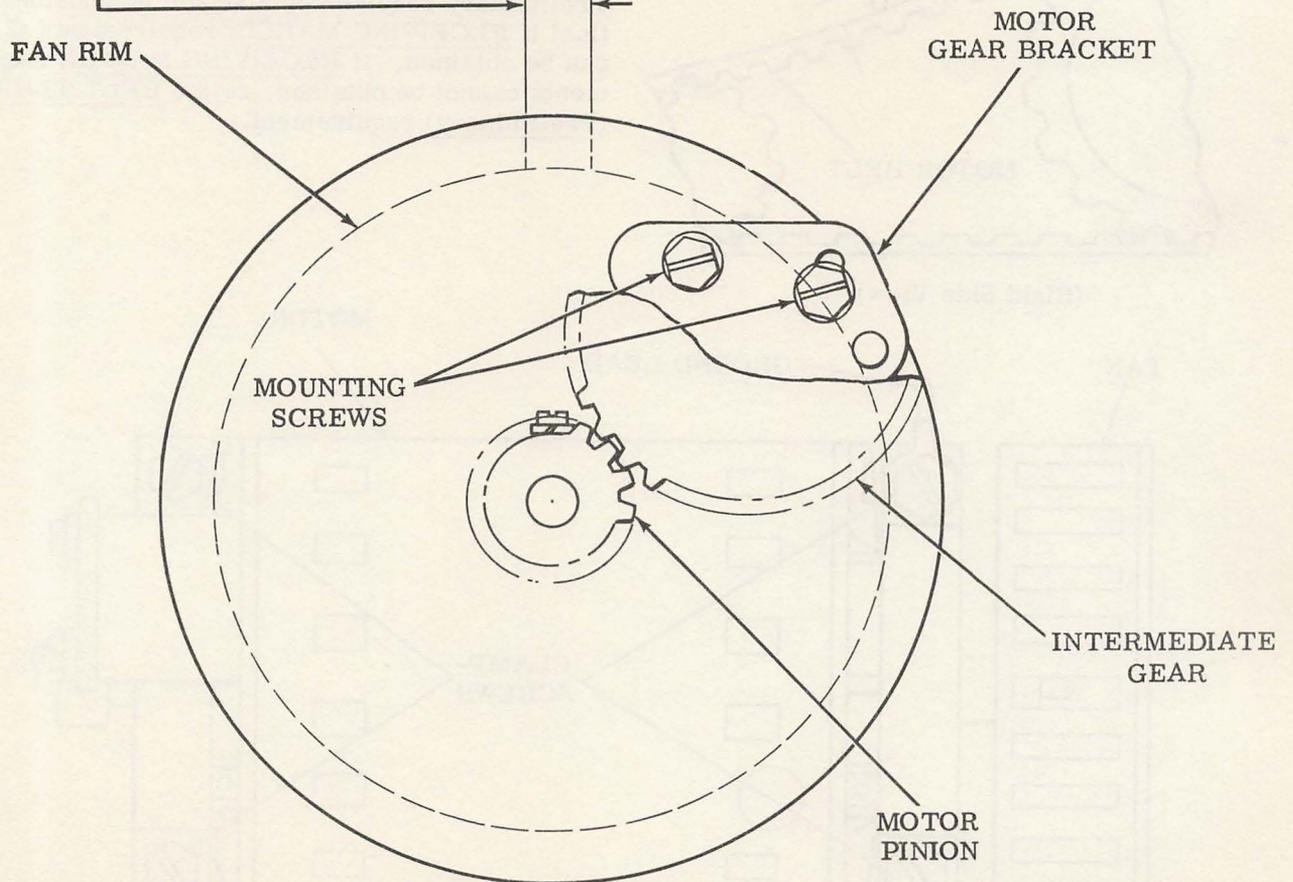

(Right Side View)

2.02 Motor Area (continued)

BELT TENSION (Preliminary)

To Check

Rotate fan clockwise (viewed from left) until upper level of motor belt becomes taut. Using a spring scale, apply 16 oz force at center of belt.

Requirement

Min 0.100 inch---Max 0.135 inch deflection at center of motor belt.



To Adjust

Loosen four clampscrews and rotate motor in cradle. Tighten clampscrews.

Related Adjustments

Affected By


GEAR BACKLASH (2.01)

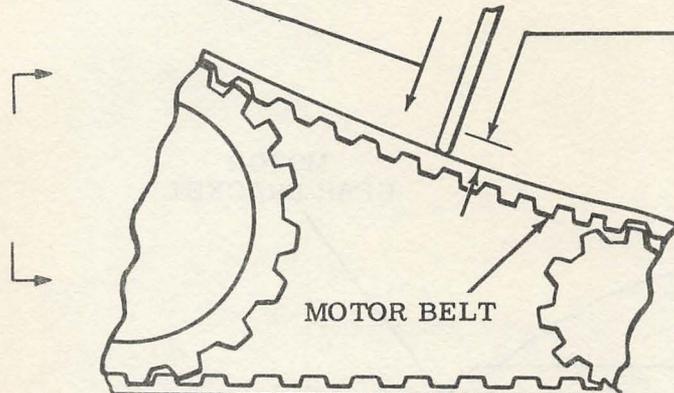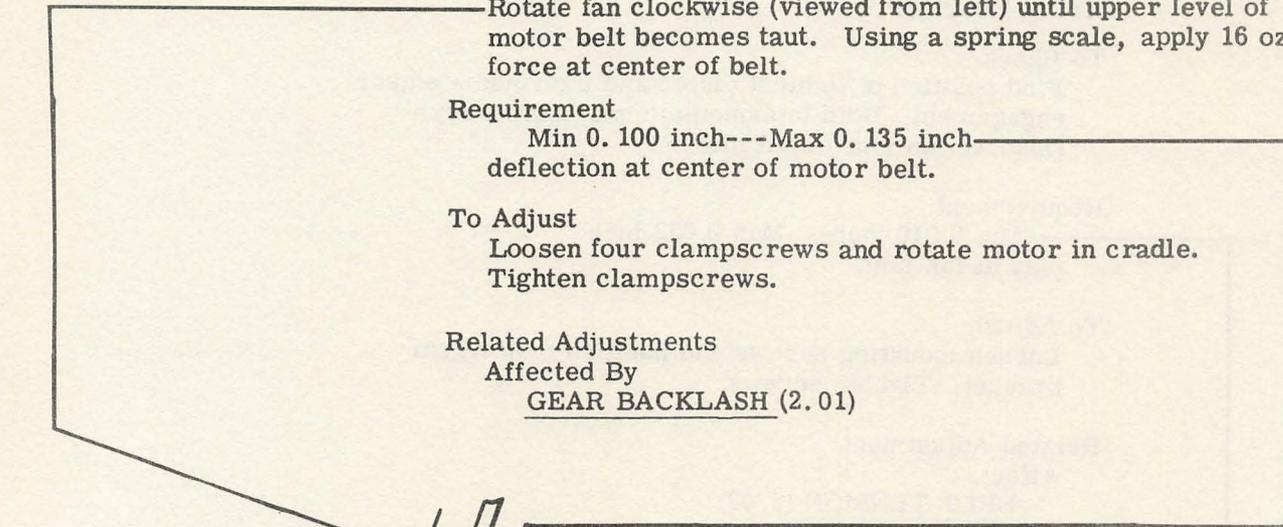

(Right Side View)

BELT TENSION (Final)

Preliminary requirements should be considered final if RECEIVING MARGIN requirements (2.124) can be obtained. If RECEIVING MARGIN requirements cannot be obtained, refine BELT TENSION (Preliminary) requirement.

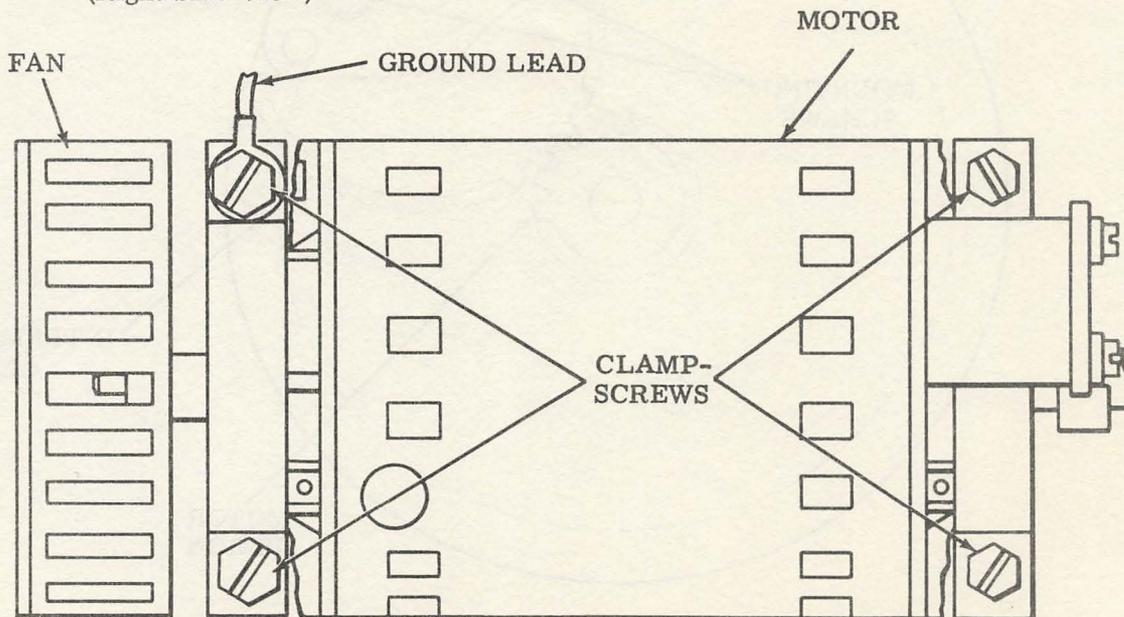

(Top View)

2.03 Distributor Area

(B) SHAFT LEFT BEARING GAP

Requirement

Min some---Max 0.012 inch between left bearing and clutch gear assembly as gauged by eye.


To Adjust

Disengage (latch) distributor clutch. Hold clutch gear assembly firmly to right. Position left bearing with clampscrews loosened. Tighten left bearing clampscrews.

Related Adjustments

Affected By

BRUSH HOLDER GAP (2.03)

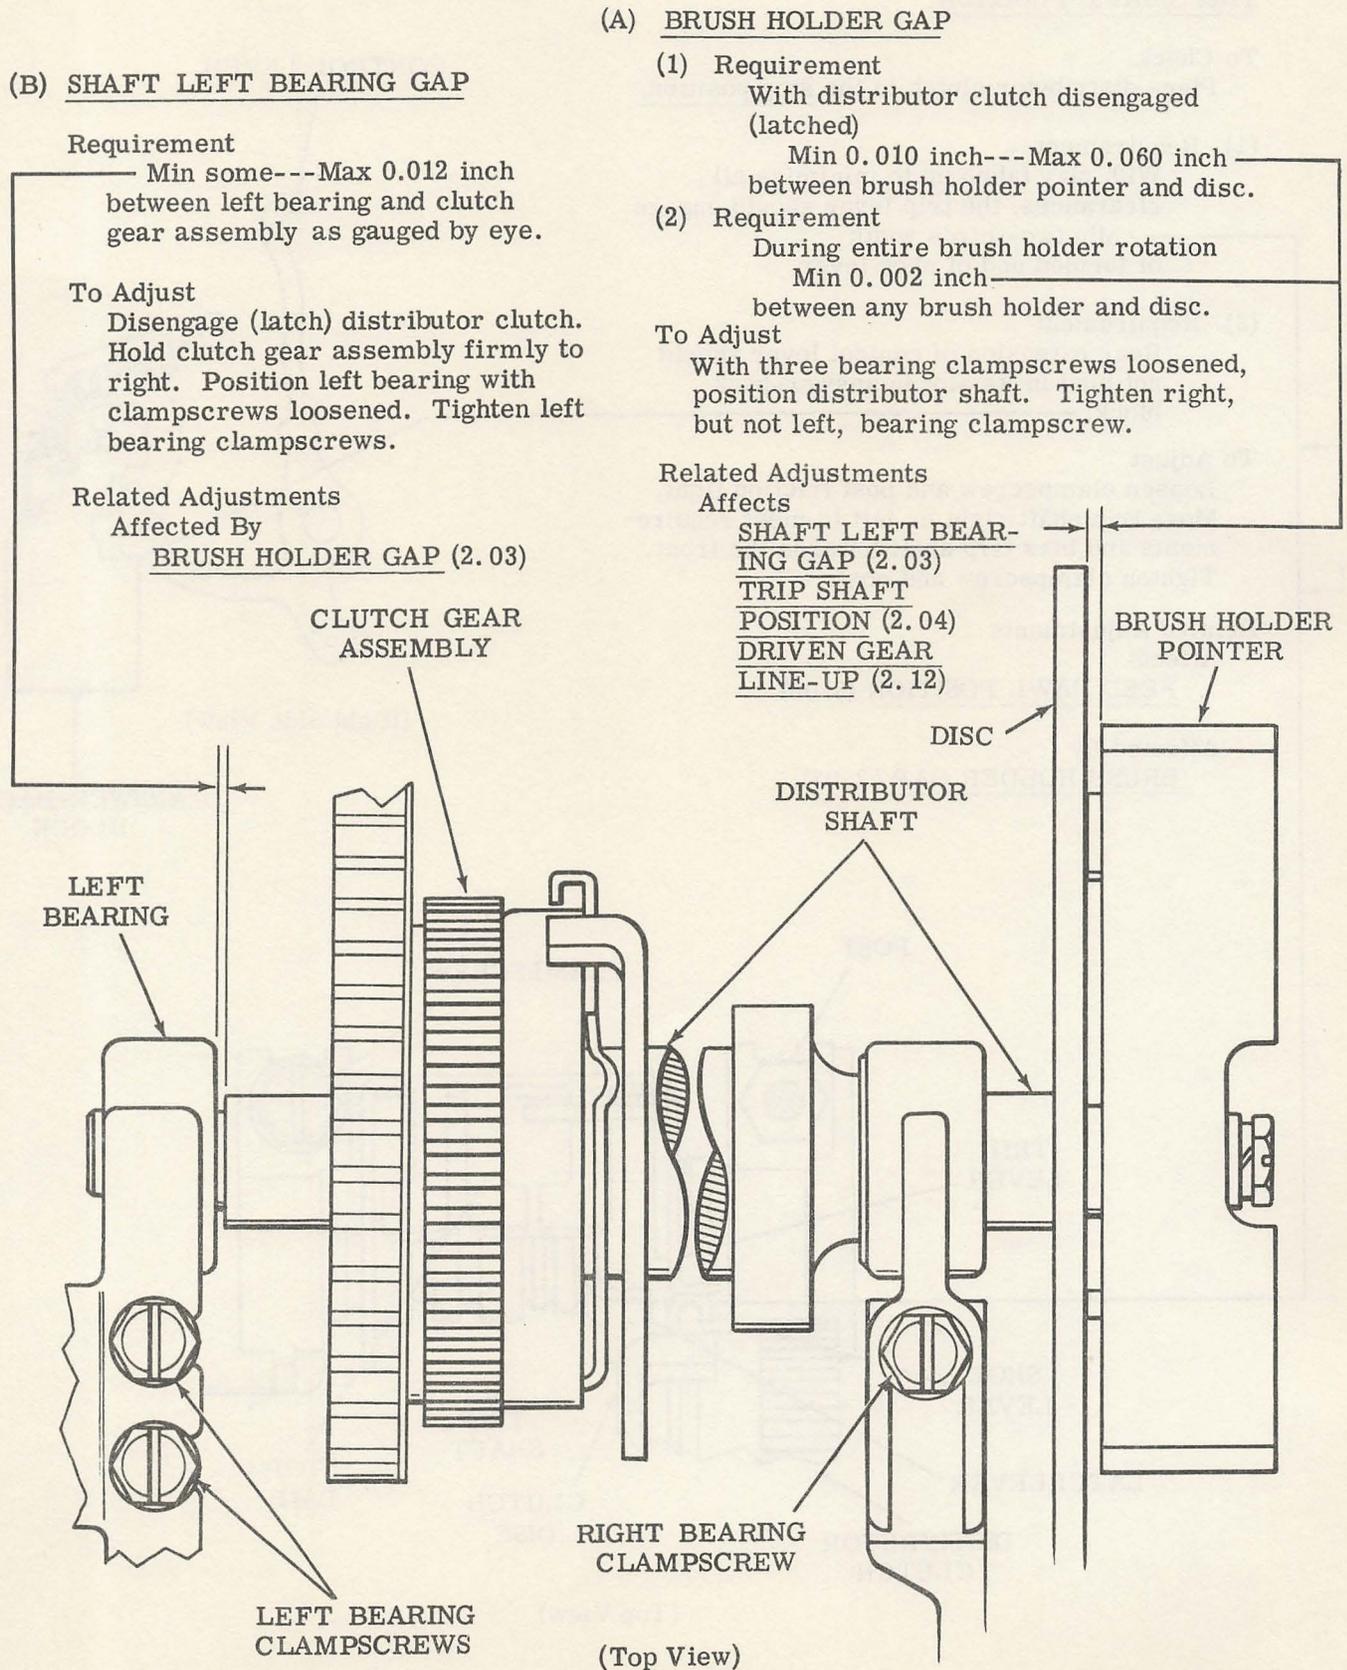

(A) BRUSH HOLDER GAP

(1) Requirement

With distributor clutch disengaged (latched)

Min 0.010 inch---Max 0.060 inch between brush holder pointer and disc.

(2) Requirement

During entire brush holder rotation

Min 0.002 inch

between any brush holder and disc.

To Adjust

With three bearing clampscrews loosened, position distributor shaft. Tighten right, but not left, bearing clampscrew.

Related Adjustments

Affects

SHAFT LEFT BEARING GAP (2.03)

TRIP SHAFT

POSITION (2.04)

DRIVEN GEAR

LINE-UP (2.12)

2.04 Distributor Area (continued)

TRIP SHAFT POSITION

To Check

Place distributor clutch in the stop position.

(1) Requirement

With play taken up to minimize all clearances, the trip lever should engage — Min two-thirds width of formed end of shoe lever.

(2) Requirement

Rear extension of control lever should not bind in its slot in answer-back block.

To Adjust

Loosen clampscrew and post friction tight. Move trip shaft right or left to meet requirements and bias trip shaft towards the front. Tighten clampscrew and post.

Related Adjustments


Affects

FEED PAWL POSITION (3.06)

Affected By

BRUSH HOLDER GAP (2.03)

CONTROL LEVER

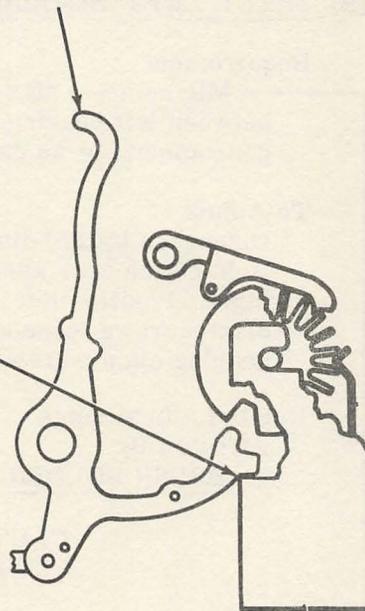

(Right Side View)

ANSWER-BACK BLOCK

POST

CLAMPSCREW

TRIP LEVER

SHOE LEVER

LATCHLEVER

DISTRIBUTOR CLUTCH

TRIP SHAFT

CLUTCH DISC

STOP BAIL

(Top View)

2.05 Distributor Area (continued)

CLUTCH SHOE LEVER GAP**To Check**

With distributor clutch disengaged and latched, measure and record clearance between shoe lever and stop-lug. Trip distributor clutch by moving trip lever rearward. Fully seat the clutch shoes by applying slight pressure against the shoe lever along its normal path of forward travel. Measure and record same clearance as above.

(1) Requirement


With distributor clutch disengaged (latched)
Min 0.015 inch
between stop-lug and shoe lever.

(2) Requirement

Clearance between stop-lug and shoe lever
Min 0.050 inch---Max 0.080 inch
greater when distributor clutch is engaged than when disengaged.

To Adjust


Remove answer-back drum. With clamp-screw friction tight, position trip lever using pry point. Tighten clampscrew. Replace answer-back drum.

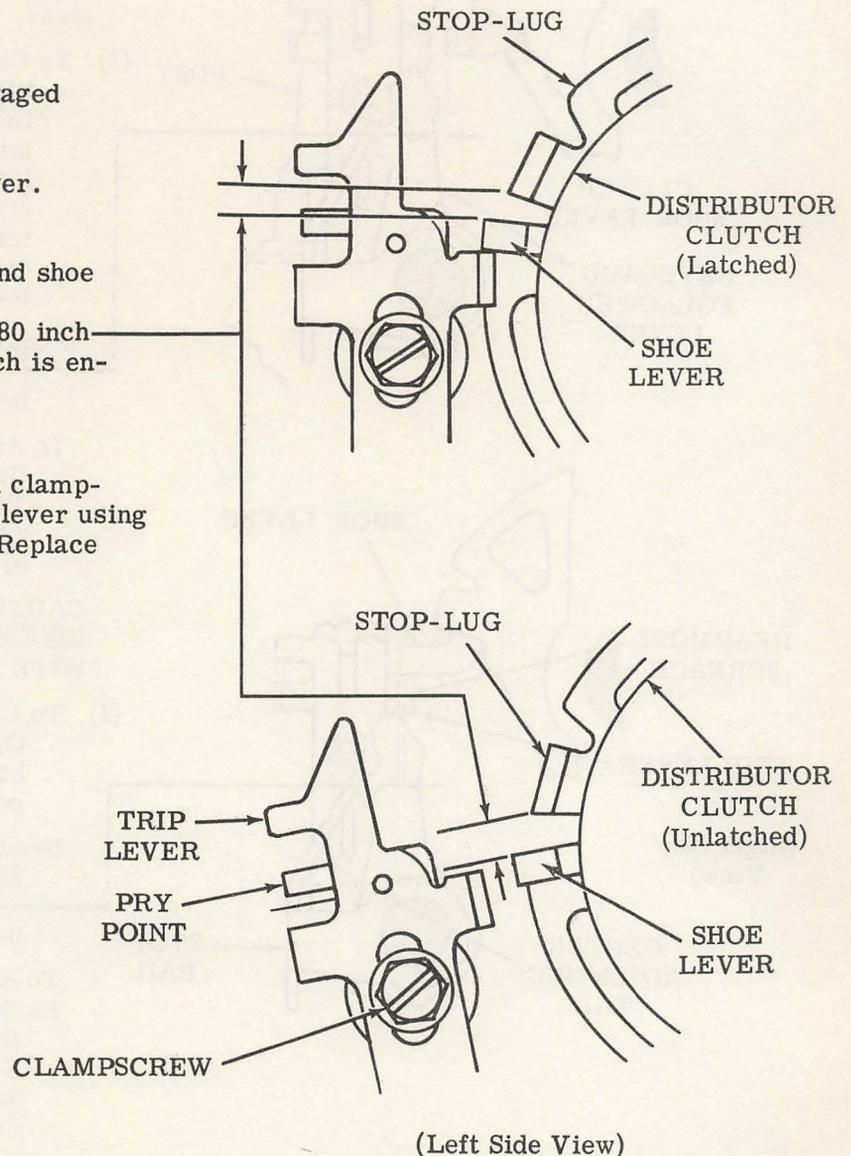

2.06 Distributor Area (continued)

Note 1: Before proceeding, replace typing unit onto subbase. For instructions, see the appropriate disassembly and reassembly section.

Note 2: Do not lift typing unit while holding any part of the selector mechanism. Note the proper method for lifting the typing unit. This method is described in the appropriate disassembly and reassembly section.

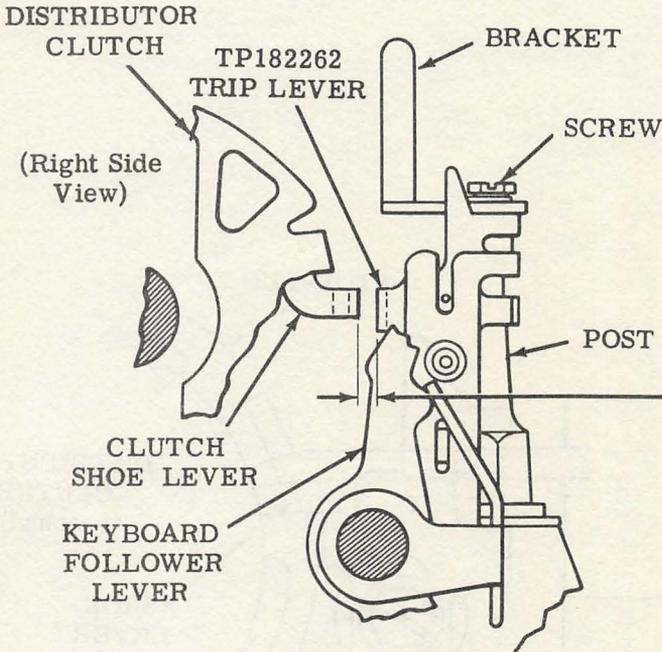

TRIP LEVER ENGAGEMENT

Note 3: The answer-back control lever and reader trip lever should not be touching their respective stop bail adjusting tabs when checking this adjustment.


Note 4: Perform (1) To Check only on late design units containing the TP182262 trip lever.

- (1) To Check
Disengage (latch) distributor clutch. Depress any nonfunction keytop to unlatch distributor clutch. If necessary, loosen screw and position bracket to obtain clearance between bracket and trip lever. Tighten screw. Rotate clutch to align upper edges of shoe lever and trip lever.

Requirement
Min 0.015 inch---Max 0.035 inch between shoe lever and trip lever.

To Adjust
Remove answer-back drum. Use TP180993 bending tool to bend center adjusting tab. Replace answer-back drum.

CAUTION: TO PREVENT ELECTRICAL SHOCK EXERCISE CARE WHEN WORKING WITH TYPING UNIT UNDER POWER.

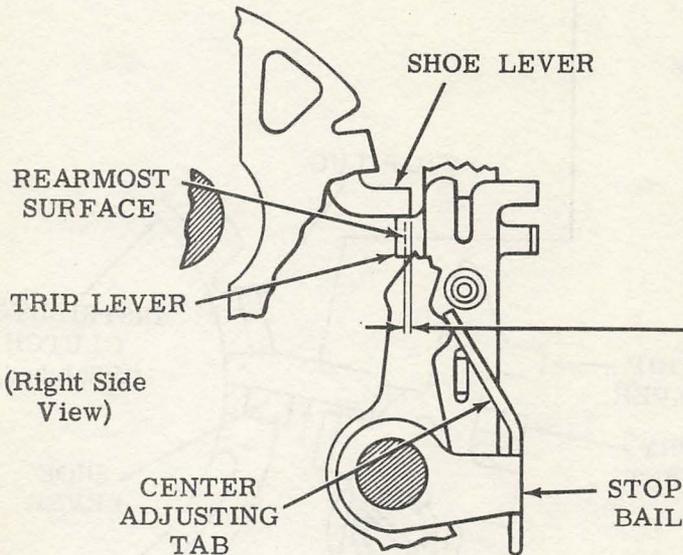

- (2) To Check
Operate typing unit under power. Place keyboard universal lever in latched position.

Requirement
Shoe lever should be
Min flush---Max 0.015 inch beyond rearmost surface of trip lever.

To Adjust
Early Design (without TP182262)
Remove answer-back drum. Use TP180993 bending tool to bend center adjusting tab. Replace answer-back drum.

Late Design (with TP182262)
Loosen screw friction tight and position bracket. Tighten screw.

2.07 Distributor Area (continued)

BRUSH HOLDER POSITION


Requirement

With distributor clutch disengaged (latched) pointer should be within locating mark.

To Adjust


Loosen mounting screw and position distributor brush holder. Tighten mounting screw.

Note: Rotate the brush holder in a clockwise direction only.

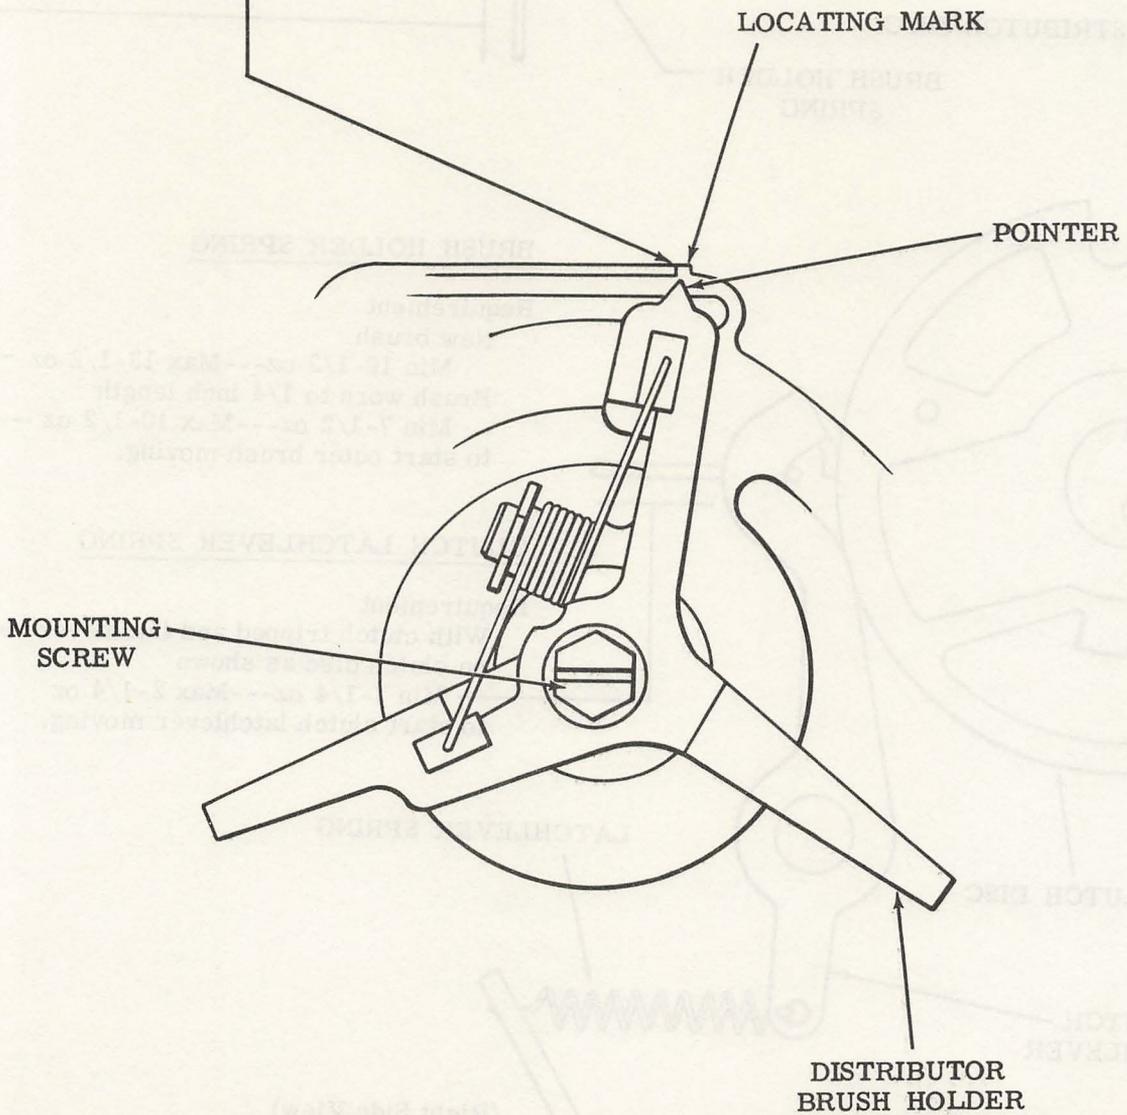

(Right Side View)

2.08 Distributor Area (continued)

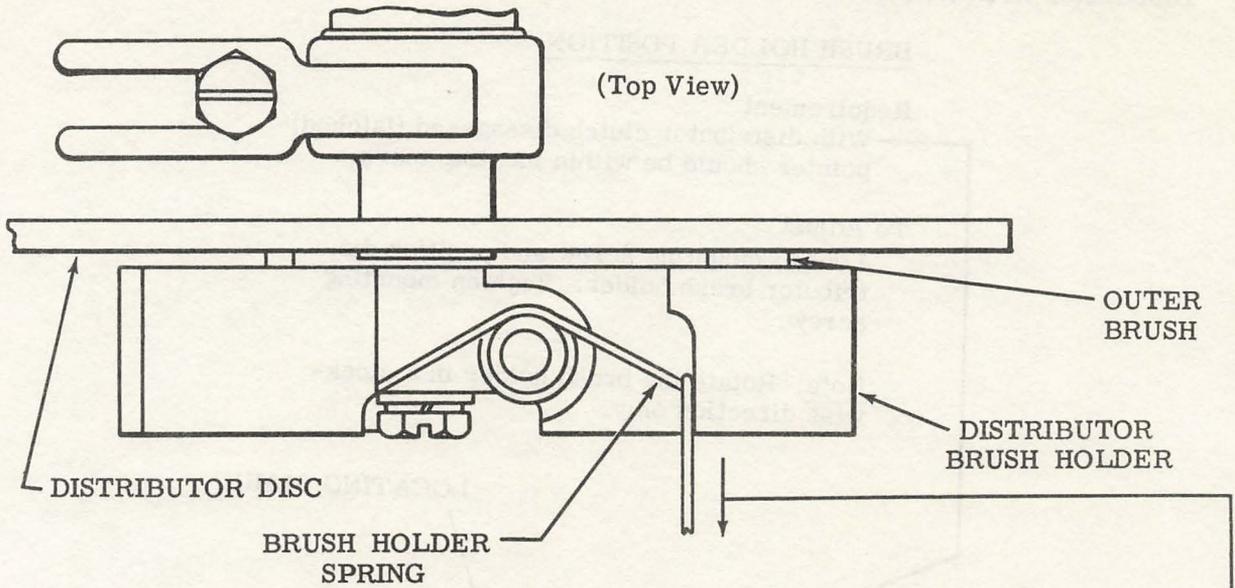

BRUSH HOLDER SPRING

Requirement

New brush

Min 10-1/2 oz---Max 13-1/2 oz

Brush worn to 1/4 inch length


Min 7-1/2 oz---Max 10-1/2 oz
to start outer brush moving.

CLUTCH LATCHLEVER SPRING



Requirement

With clutch tripped and latchlever resting
on clutch disc as shown

Min 1-1/4 oz---Max 2-1/4 oz
to start clutch latchlever moving.

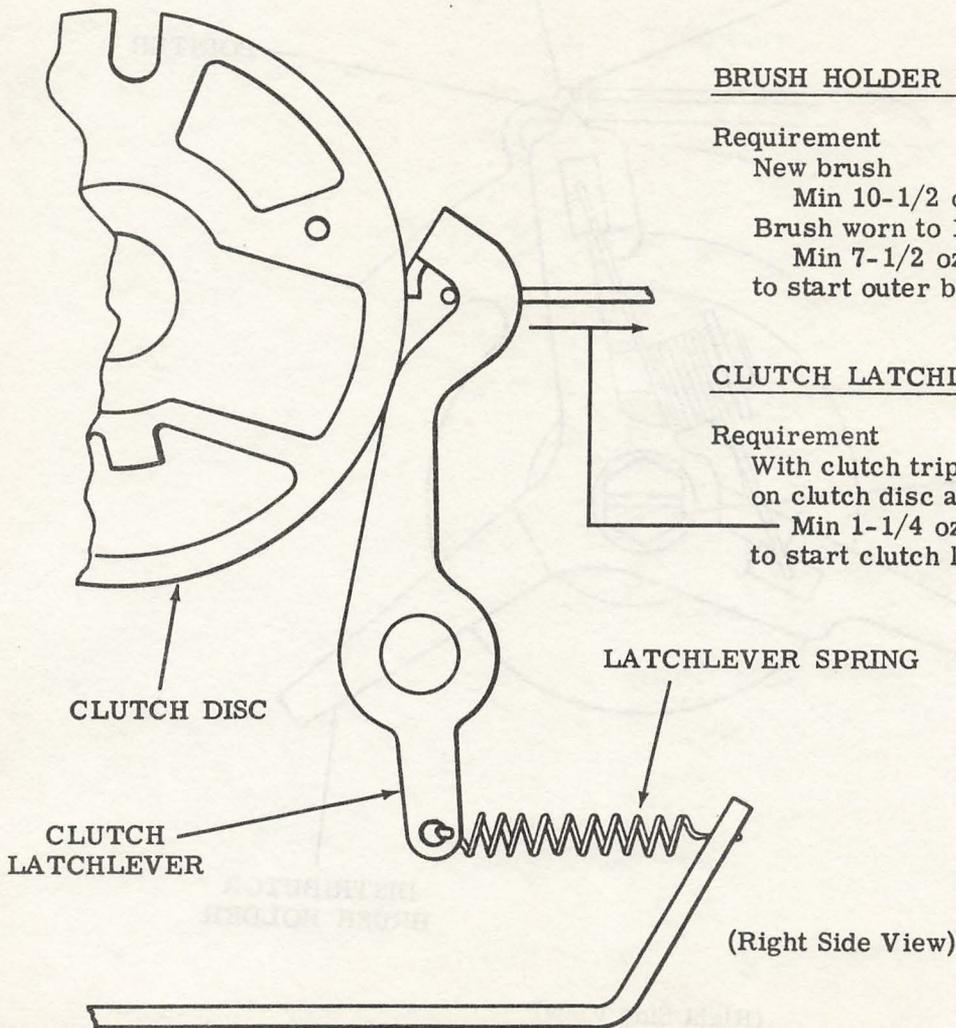

2.09 Distributor Area (continued)

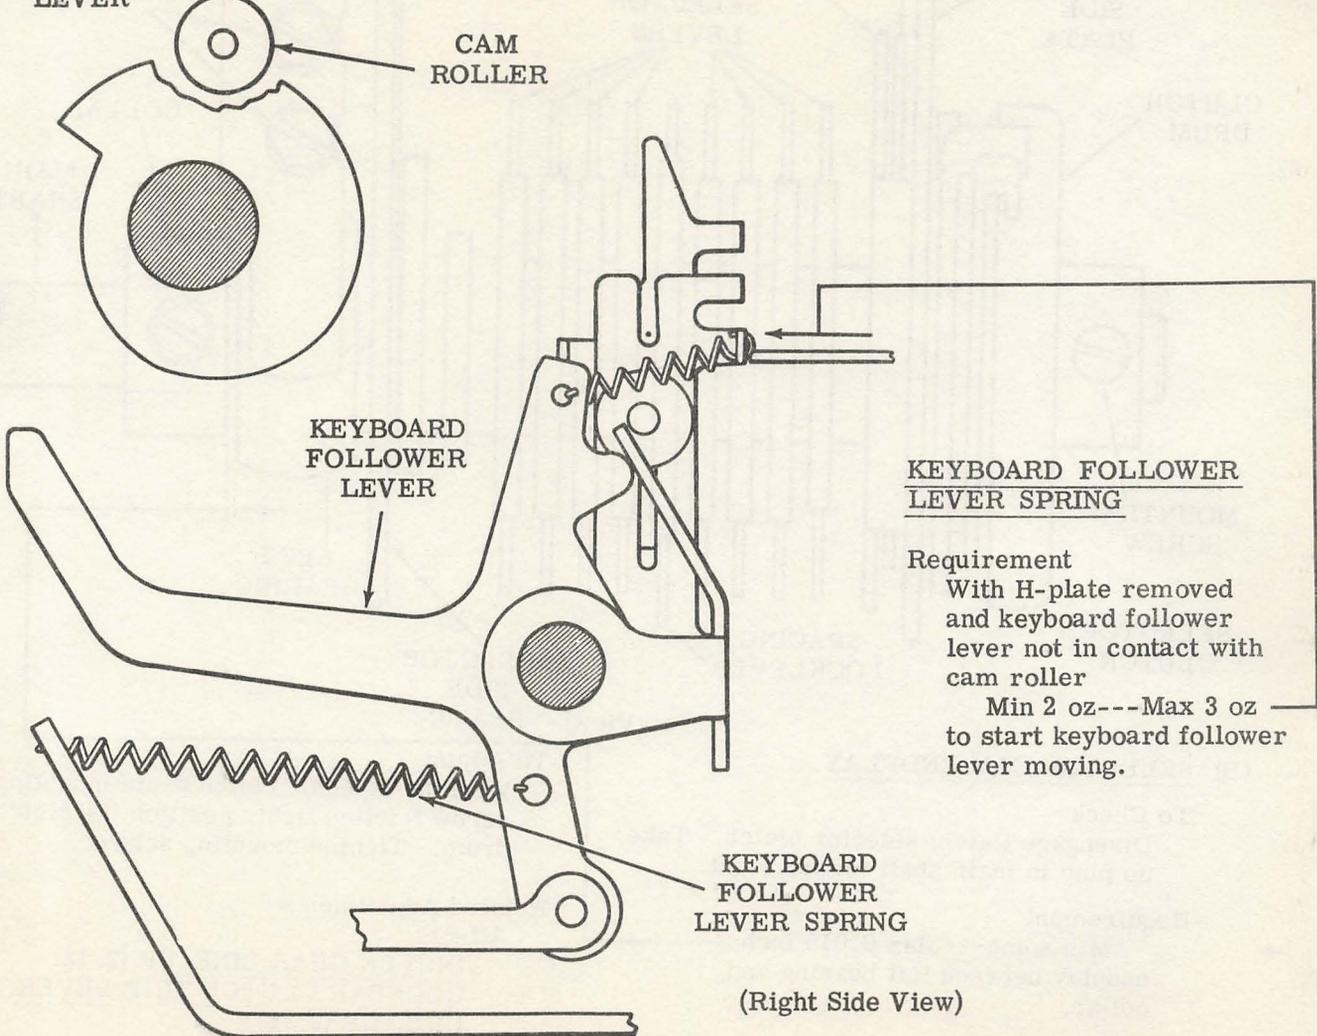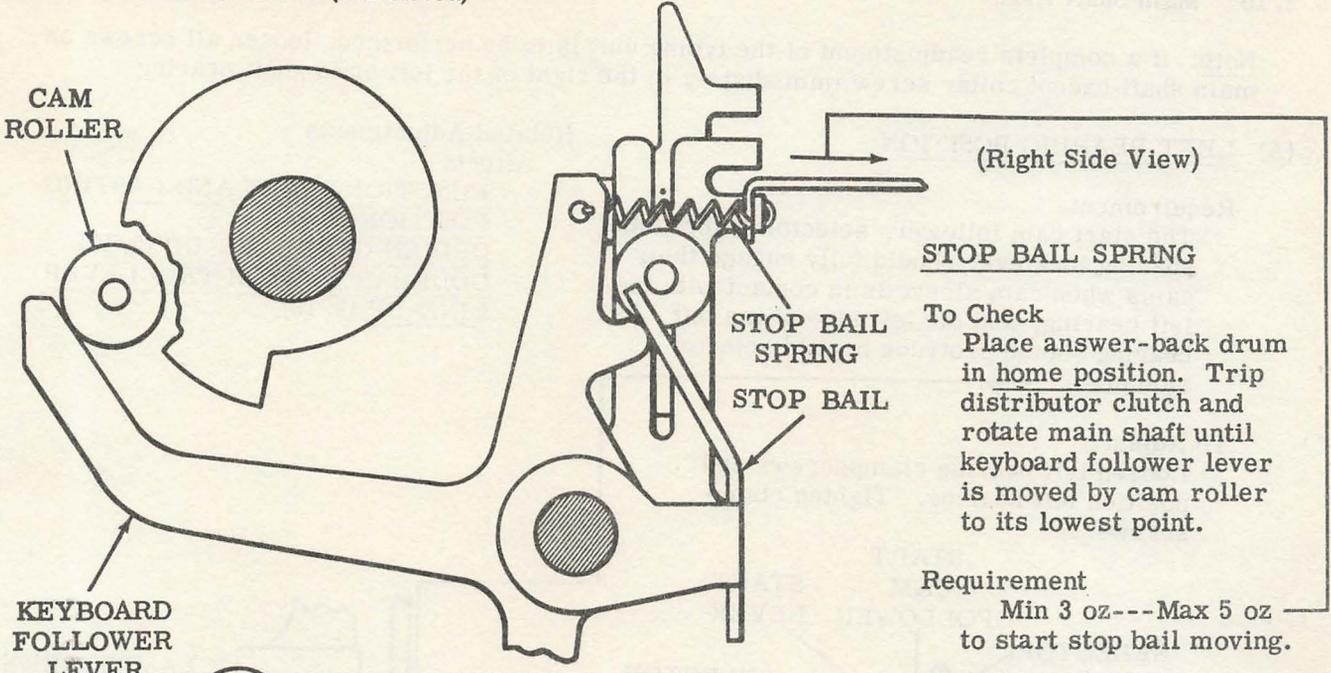

2.10 Main Shaft Area

Note: If a complete readjustment of the typing unit is to be performed, loosen all screws on main shaft except collar screw immediately to the right of the left main shaft bearing.

(A) LEFT BEARING POSITION

Related Adjustments
Affects


Requirement

The start cam follower, selector levers, and spacing locklever should fully engage their cams when cam sleeve is in contact with the left bearing, and the left side of the left bearing should protrude beyond selector side plate.

- FUNCTION SHAFT AND CASTING POSITION (2.40)
- DRIVEN GEAR LINE-UP (2.12)
- CODEBAR CLUTCH TRIP LEVER LINE-UP (2.13)

To Adjust

Loosen left bearing clampscrews and position left bearing. Tighten clampscrews.

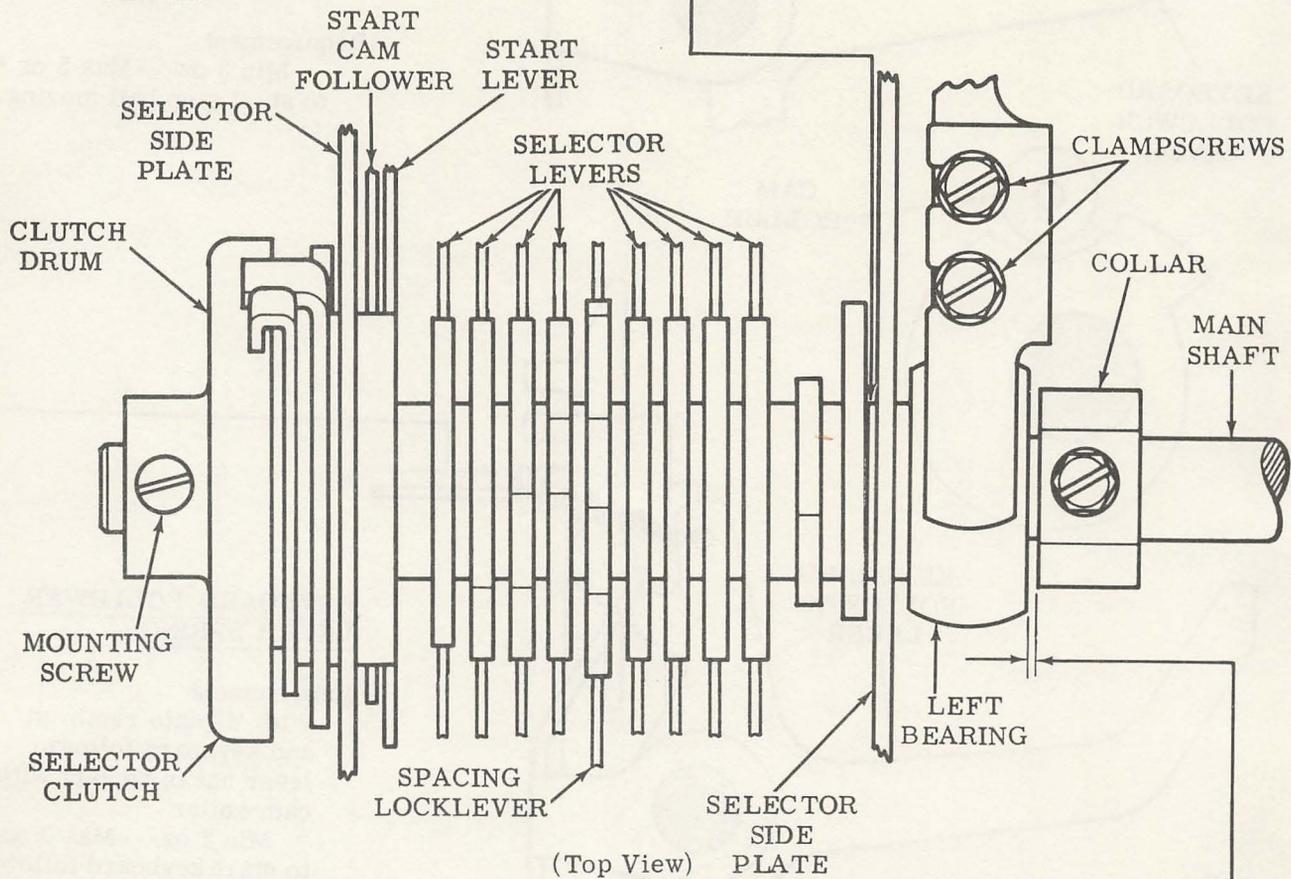

(B) SELECTOR CAM ENDPLAY

To Check

Disengage (latch) selector clutch. Take up play in main shaft toward right.

Requirement

Min some---Max 0.015 inch endplay between left bearing and collar.

To Adjust

With the selector clutch drum mounting screw friction tight, position the clutch drum. Tighten mounting screw.

Related Adjustments
Affects

- DRIVEN GEAR LINE-UP (2.12)
- CODEBAR CLUTCH TRIP LEVER LINE-UP (2.13)

2.11 Main Shaft Area (continued)

Note: Adjustment (A) is to be done only when completely readjusting the typing unit.

(B) FUNCTION CLUTCH ENDPLAY

To Check
Disengage (latch) function clutch. Take up clearances to make function clutch endplay a maximum.

Requirement
Min 0.005 inch---Max 0.015 inch endplay in function clutch.

To Adjust
Loosen collar clampscrew and position function clutch to meet requirement. Tighten clampscrew.


Related Adjustment Affected By
FUNCTION CLUTCH POSITION (2.11)

(A) FUNCTION CLUTCH POSITION (Preliminary)

To Check
Take up play to minimize clearance between carriage drive eccentric and end of roller shaft.

Requirement
Min 0.020 inch---Max 0.040 inch clearance between carriage drive eccentric and end of roller shaft as gauged by eye.

To Adjust
Loosen the left and right function casting clampscrews (do not loosen the center clampscrew) friction tight and align the left side of lower portion of function casting with left side of lower projection of codebar basket rear tie bar by moving function casting.
Loosen drum mounting screw and position function clutch to meet requirement. Tighten drum mounting screw.*

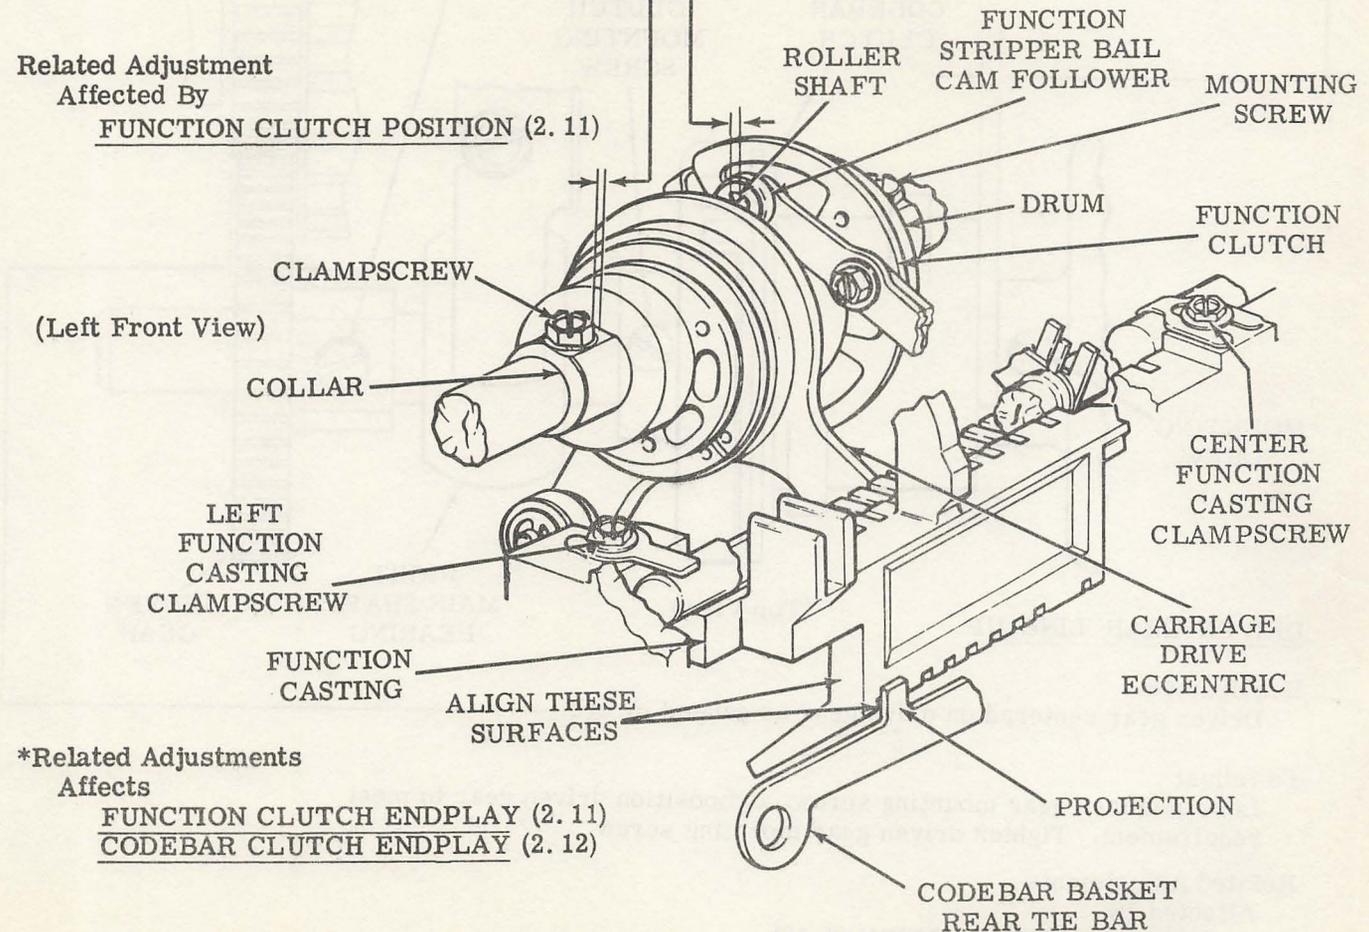

2.12 Main Shaft Area (continued)

CODEBAR CLUTCH ENDPLAY

To Check

Disengage (latch) codebar clutch. Take up clearances to make codebar clutch endplay a maximum.

Requirement

Min 0.005 inch---Max 0.015 inch endplay in codebar clutch.

To Adjust

Loosen codebar clutch mounting screw and position codebar clutch to meet requirement. Tighten codebar clutch mounting screw.


Related Adjustments

Affects

- CODEBAR CLUTCH TRIP LEVER LINE-UP (2.13)
- CODEBAR RESET LEVER LINE-UP (2.27)

Affected By

- FUNCTION CLUTCH POSITION (2.11)

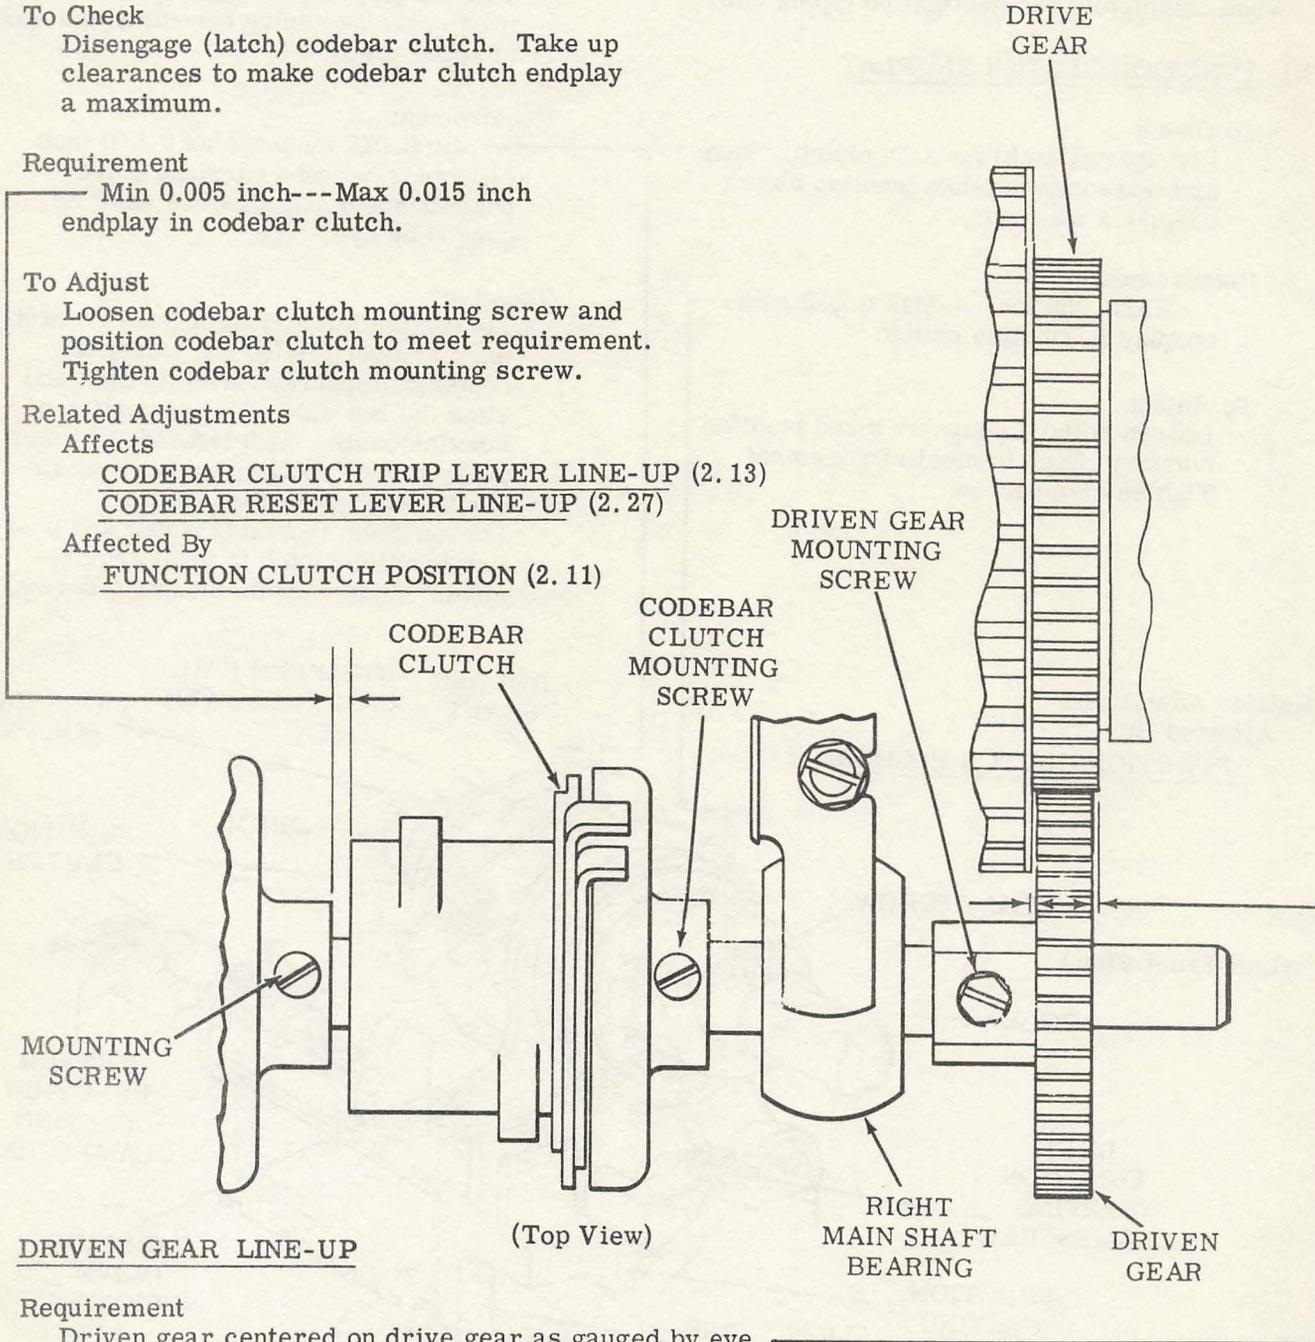

DRIVEN GEAR LINE-UP

(Top View)

Requirement

Driven gear centered on drive gear as gauged by eye.

To Adjust

Loosen driven gear mounting screw, and position driven gear to meet requirement. Tighten driven gear mounting screw.

Related Adjustments

Affected By

- LEFT BEARING POSITION (2.10)
- BRUSH HOLDER GAP (2.03)
- SELECTOR CAM ENDPLAY (2.10)

2.13 Main Shaft Area (continued)

CODEBAR CLUTCH TRIP LEVER LINE-UP


(1) Requirement

As gauged by eye, codebar clutch trip lever approximately aligned with shoe lever

within 0.030 inch.

(2) Requirement

Min 0.005 inch between function clutch trip roller's shaft and codebar reset cam when all play is taken up to make clearance minimum.

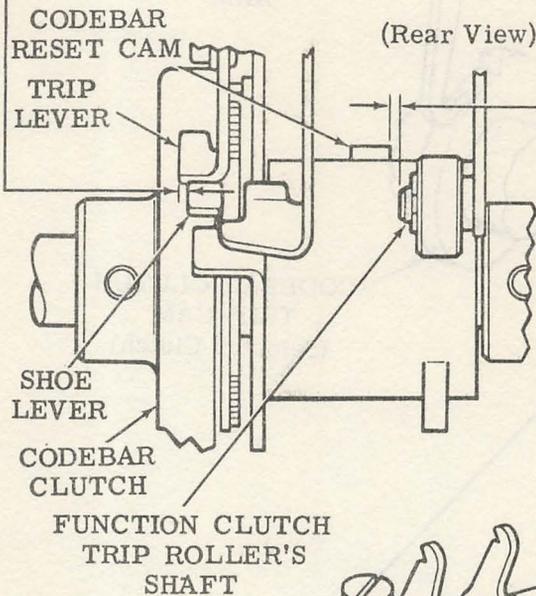

To Adjust

Loosen clampscrew and position trip lever.

Note: It may also be necessary to loosen setscrew in collar.

Related Adjustments

Affects

TRIP SHAFT LATCHLEVER ENDPLAY (2.13)

CODEBAR CLUTCH TRIP LEVER ENGAGEMENT (2.14)

Affected By

LEFT BEARING POSITION (2.10)

SELECTOR CAM ENDPLAY (2.10)

CODEBAR CLUTCH ENDPLAY (2.12)


TRIP SHAFT LATCHLEVER ENDPLAY

Requirement

Min some---Max 0.012 inch endplay in latchlevers, as gauged by eye.

To Adjust

Loosen setscrew and position collar. Tighten setscrew. On units with TP186731 compression ring, compress ring tabs and position ring. Clearance to be measured between function clutch latchlever and trip lever.

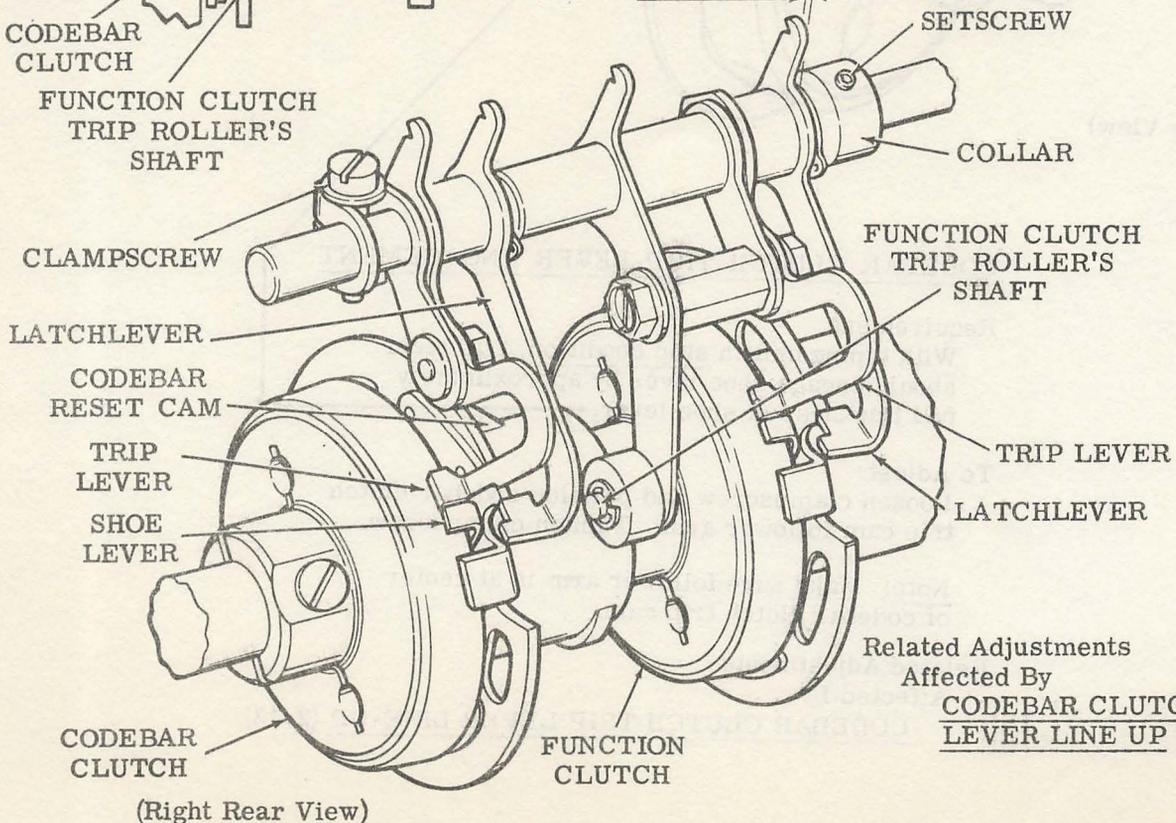


Related Adjustments

Affected By

CODEBAR CLUTCH TRIP LEVER LINE UP (2.13)

2.14 Main Shaft Area (continued)

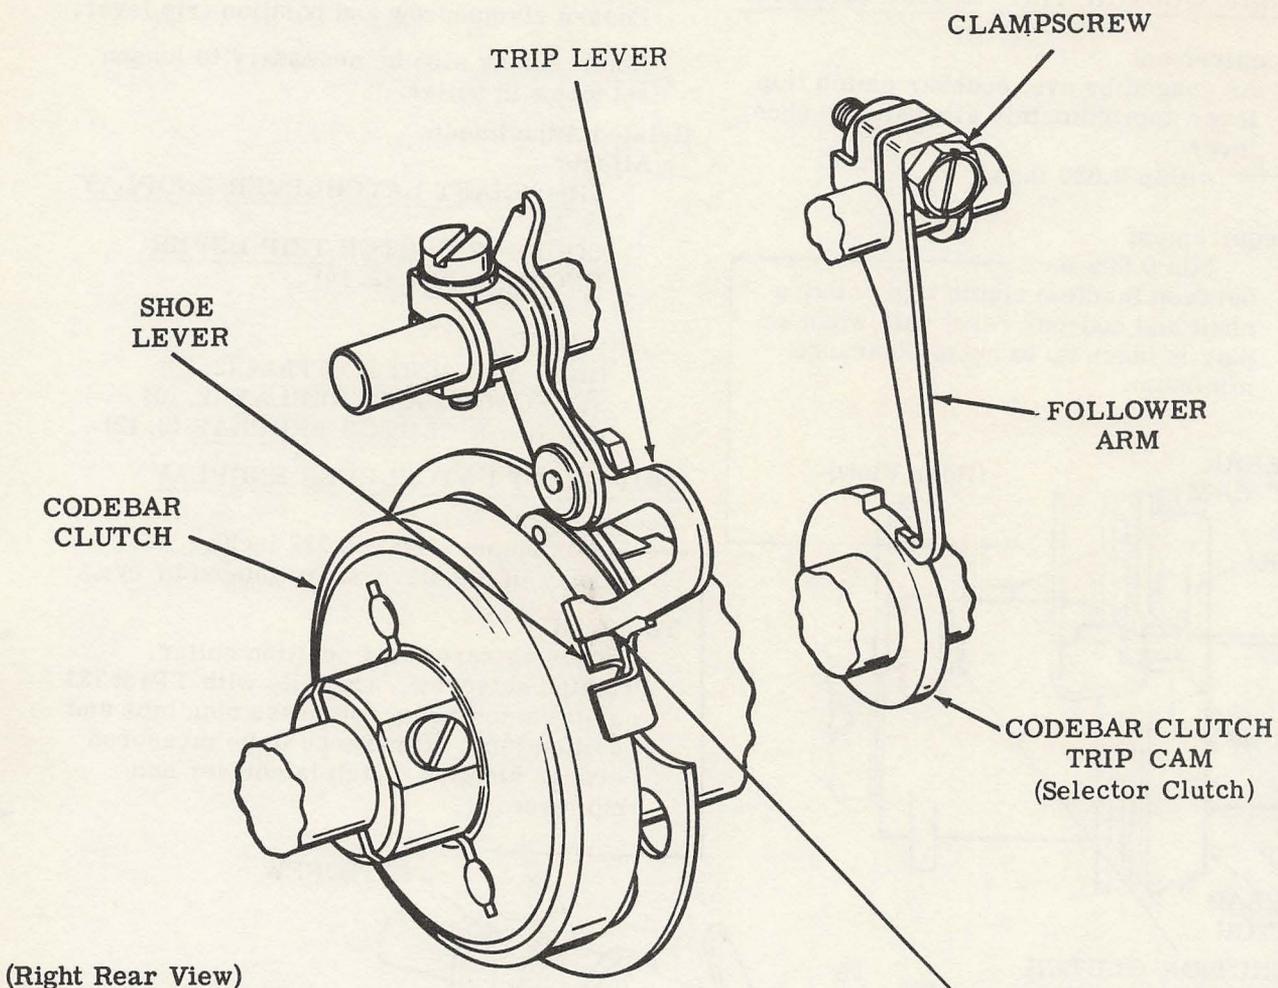

CODEBAR CLUTCH TRIP LEVER ENGAGEMENT

Requirement

With typing unit in stop condition, trip lever should engage shoe lever by approximately full thickness of shoe lever.

To Adjust

Loosen clampscrew and position codebar clutch trip cam follower arm. Tighten clampscrew.

Note: Make sure follower arm is at center of codebar clutch trip cam.

Related Adjustments

Affected By

CODEBAR CLUTCH TRIP LEVER LINE-UP (2.13)

2.15 Main Shaft Area (continued)

TRIP LEVER SPRINGS

Note: Check for both codebar and function clutches.

Requirement


With clutch engaged, codebar clutch

Min 6 oz---Max 12 oz

function clutch

Min 2 oz---Max 4 oz

to start trip lever moving.

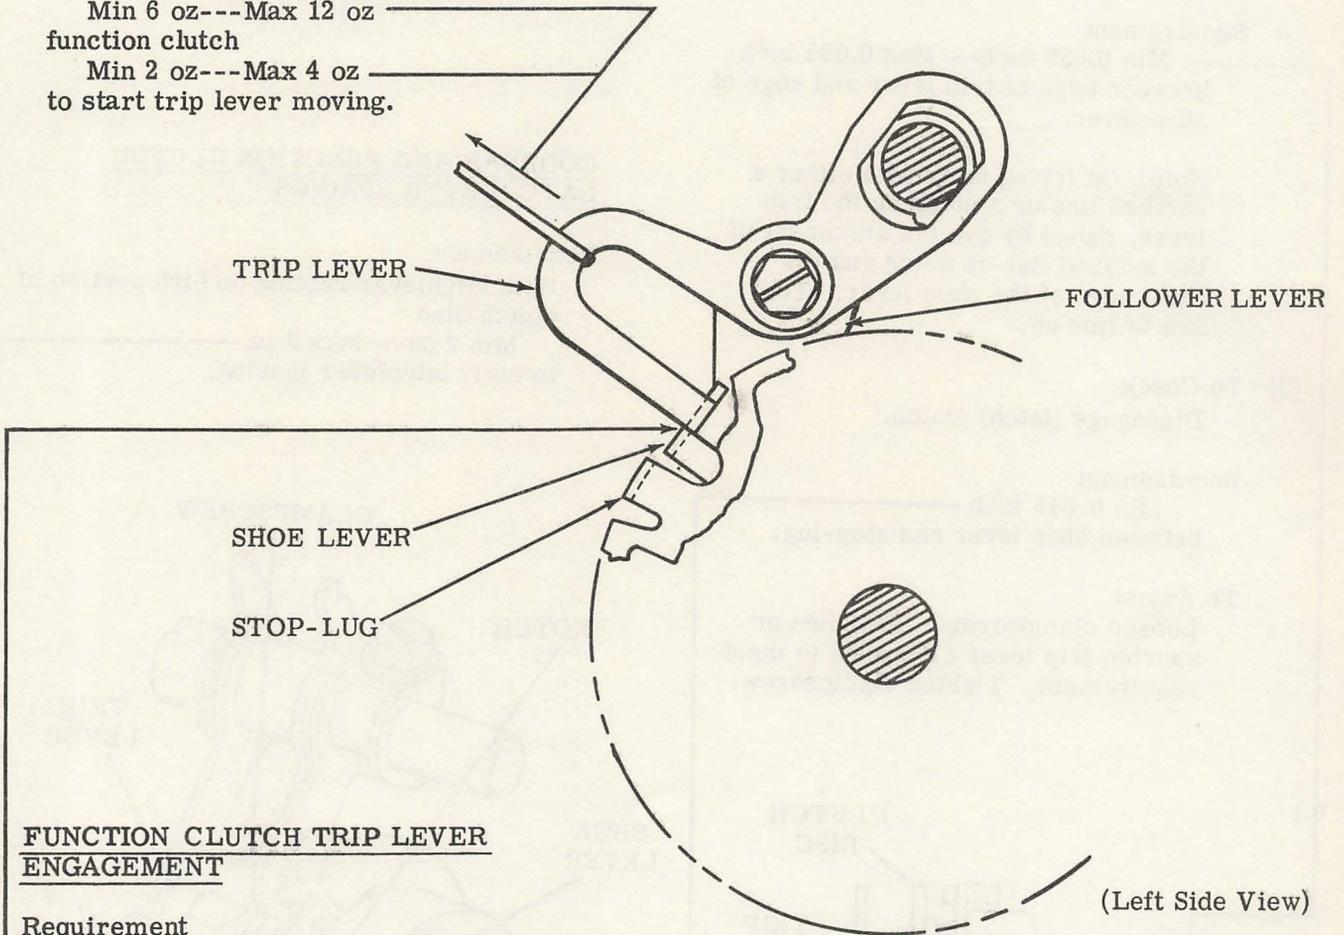


Requirement

With typing unit in stop condition, trip lever should engage shoe lever by approximately full thickness of shoe lever.

To Adjust

Loosen clampscrew and position follower lever. Tighten clampscrew.

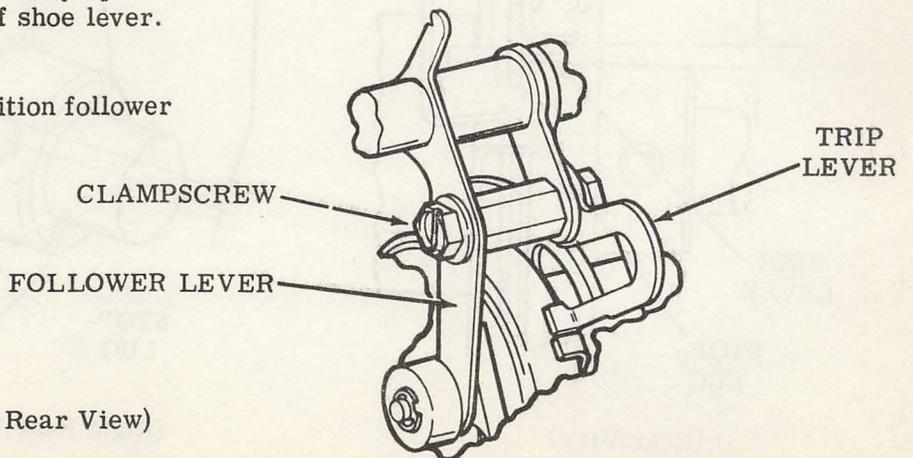

2.16 Main Shaft Area (continued)

CODEBAR AND FUNCTION CLUTCH SHOE LEVER GAPS

(1) To Check

Disengage (latch) clutch. Trip clutch by lifting trip lever. Permit trip lever to come to rest on shoe lever. Fully seat clutch shoes by applying slight pressure against shoe lever along its normal path of forward travel.

Requirement

Min 0.055 inch---Max 0.085 inch
between edge of trip lever and edge of shoe lever.

Note: On typing units with either a scribed line or a notch on the trip lever, gauge by eye the alignment of the scribed line or notch and the front edge of the shoe lever. They are to line up.

(2) To Check

Disengage (latch) clutch.

Requirement

Min 0.015 inch
between shoe lever and stop-lug.

To Adjust


Loosen clampscrew. Lengthen or shorten trip lever clearance to meet requirement. Tighten clampscrew.

CODEBAR AND FUNCTION CLUTCH LATCHLEVER SPRINGS


Requirement

With latchlever resting on high portion of clutch disc

Min 2 oz---Max 3 oz
to start latchlever moving.

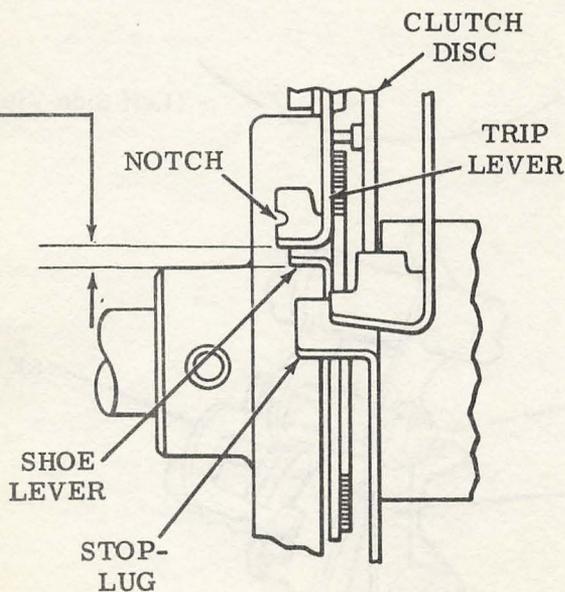

(Rear View)

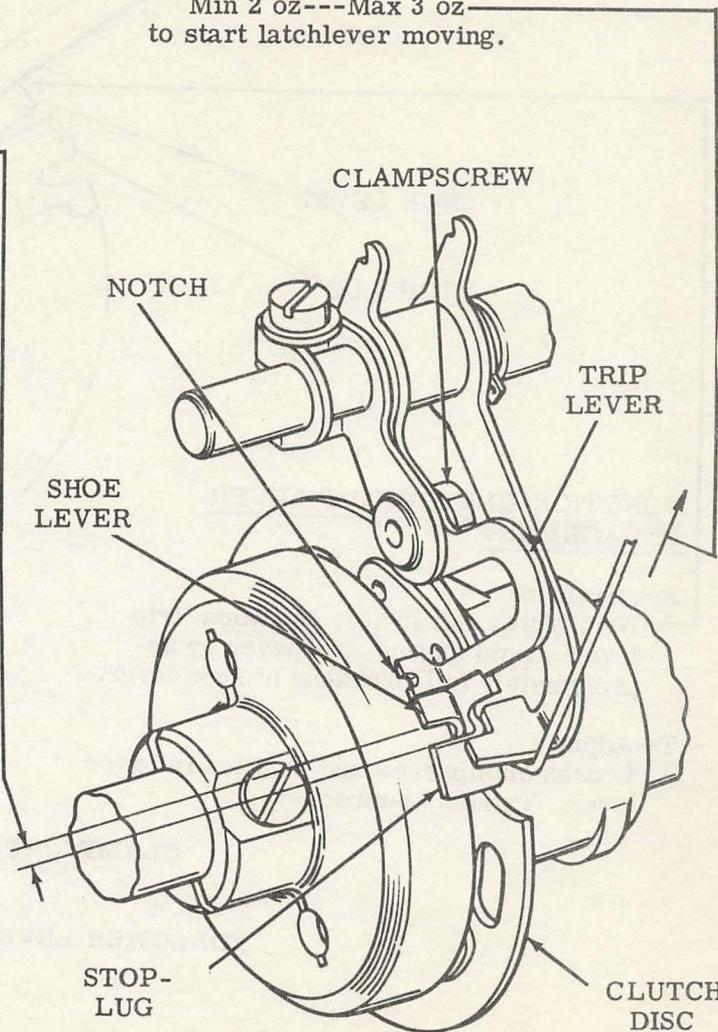


(Right Rear View)

2.17 Main Shaft Area (continued)

Note 1: These tensions apply to all clutches.

CLUTCH SHOE LEVER SPRING

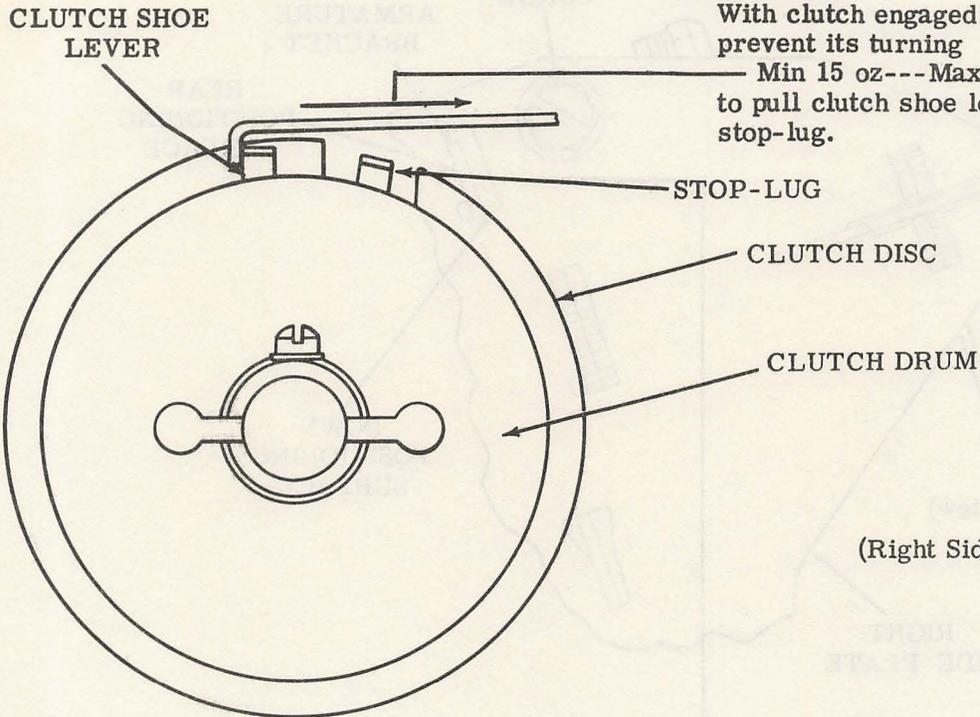


(Right Side View)

Requirement

With clutch engaged and clutch disc held to prevent its turning
 Min 15 oz---Max 20 oz
 to pull clutch shoe lever into contact with stop-lug.

CLUTCH SHOE SPRING

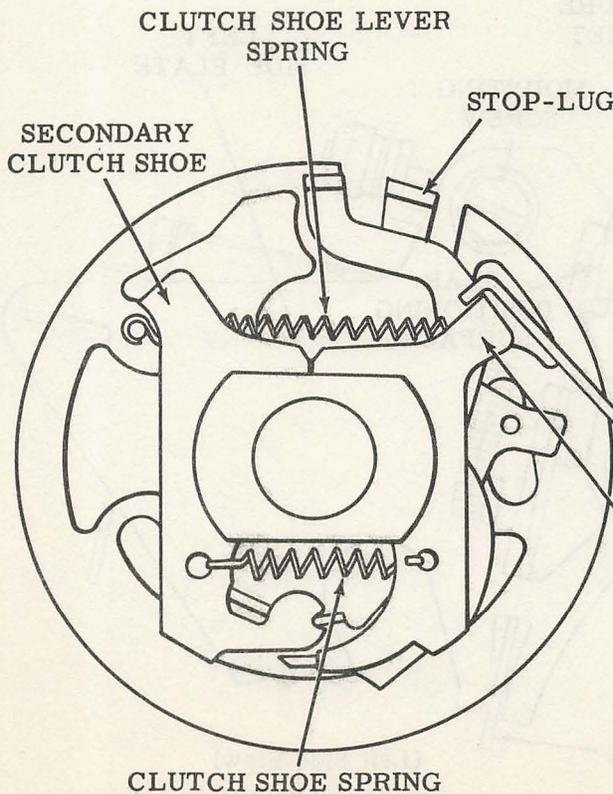

(Left Side View)

Note 2: In order to check this spring tension, it is necessary to remove the clutch from the main shaft. Therefore, it should not be checked unless there is reason to believe it will not meet its requirement.


To Check

Remove clutch drum.

Requirement

Min 3 oz---Max 5 oz
 to start primary clutch shoe moving.

2.18 Selector Area

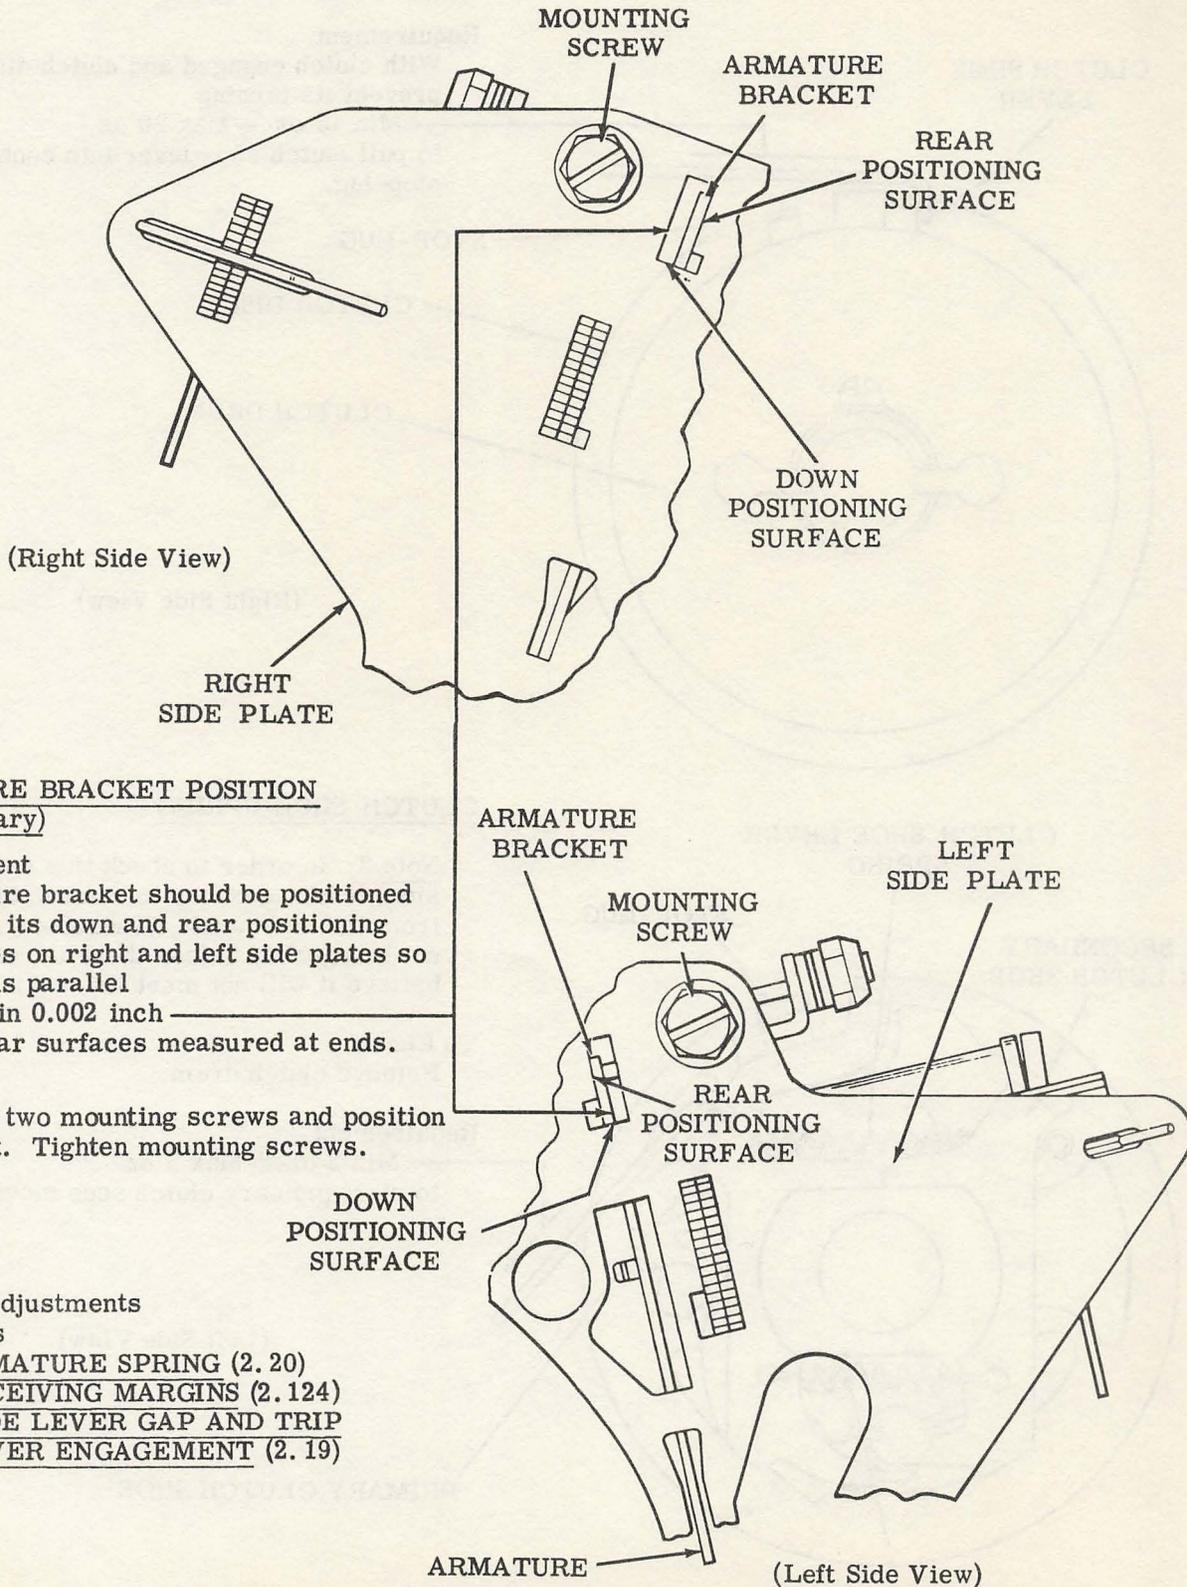

ARMATURE BRACKET POSITION
(Preliminary)

Requirement

Armature bracket should be positioned against its down and rear positioning surfaces on right and left side plates so that it is parallel within 0.002 inch with rear surfaces measured at ends.

To Adjust


Loosen two mounting screws and position bracket. Tighten mounting screws.

Related Adjustments

Affects

- ARMATURE SPRING (2.20)
- RECEIVING MARGINS (2.124)
- SHOE LEVER GAP AND TRIP LEVER ENGAGEMENT (2.19)

2.19 Selector Area (continued)

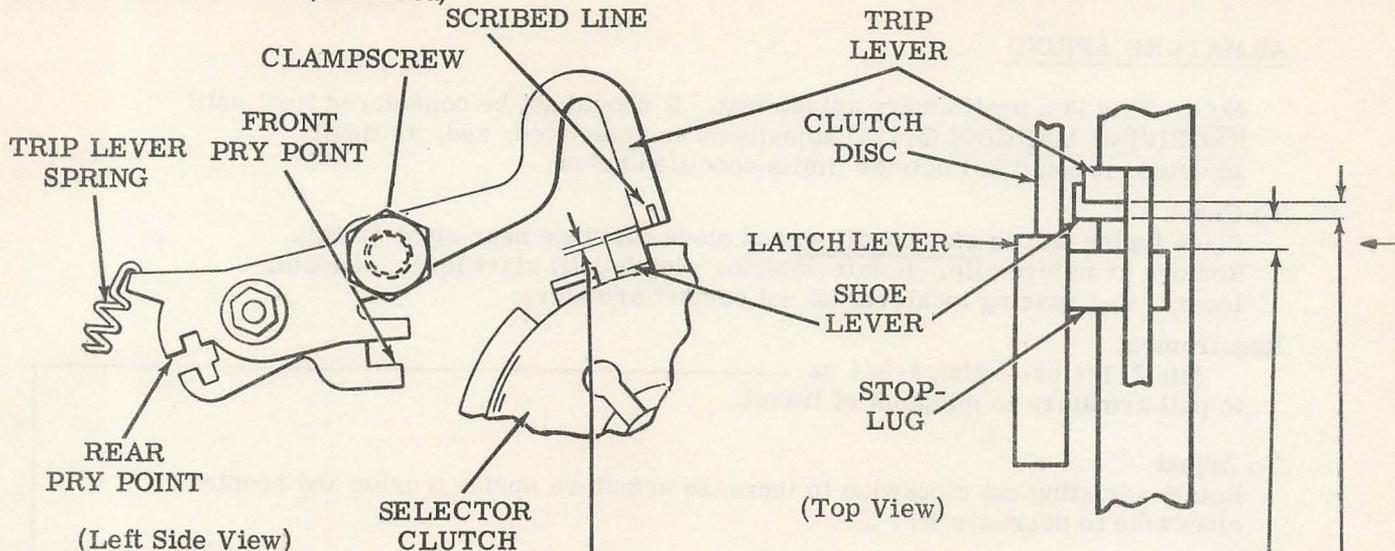


TRIP LEVER SPRING

Requirement

With typing unit in stop condition and shoe lever held away from trip lever

Min 6 oz---Max 7-3/4 oz
to start trip lever moving.

Note 1: Start lever and latchlever springs also influence this spring tension. Check them individually if above requirement is not met. If they meet requirements, replace trip lever spring.

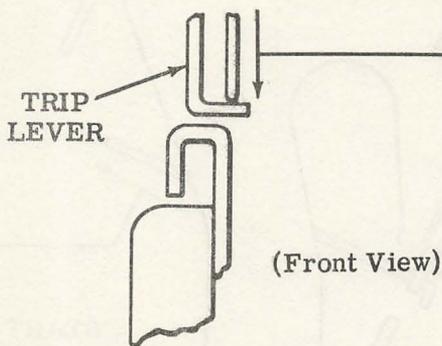

Note 2: On typing units with either a scribed line or a notch on the trip lever, gauge by eye the alignment of the scribed line or notch and the front edge of the shoe lever. They are to line up.

SHOE LEVER GAP AND TRIP LEVER ENGAGEMENT

(1) To Check

Set up an all-spacing code in selector. Manually latch selector clutch by rotating clutch disc counter clockwise. Trip selector clutch. Apply slight pressure on trip lever to fully seat clutch shoes.

Requirement

Min 0.055 inch---Max 0.085 inch
between edge of trip lever and edge of shoe lever.

(2) To Check

Manually seat selector clutch by rotating clutch disc counterclockwise against latchlever.

Requirement

Min 0.015 inch
between shoe lever and stop-lug.

(3) To Check

Disengage (latch) selector clutch.

Requirement

Trip lever should engage shoe lever
Min 2/3 thickness
of shoe lever.

To Adjust

Loosen clampscrew friction tight and position trip lever using front and/or rear pry points. Tighten clampscrew.

Related Adjustments

Affects

RECEIVING MARGINS (2.124)

Affected By

ARMATURE BRACKET POSITION (2.18)

2.20 Selector Area (continued)

ARMATURE SPRING

Note: This is a preliminary adjustment. It should not be considered final until RECEIVING MARGINS (2.124) adjustment is completed, and, as finally adjusted, it could fall outside limits specified below.

To Check

Place typing unit in stop condition and move carriage near right margin. Remove armature clip. Rotate selector clutch until start lever, selector levers, and spacing locklever do not contact armature.

Requirement

Min 2-1/4 oz---Max 4-3/4 oz _____
to pull armature to midpoint of travel.

To Adjust

Rotate adjusting nut clockwise to increase armature spring tension and counter-clockwise to decrease it.


Related Adjustments

Affects

RECEIVING MARGINS (2.124)

Affected By

ARMATURE BRACKET POSITION (2.18)

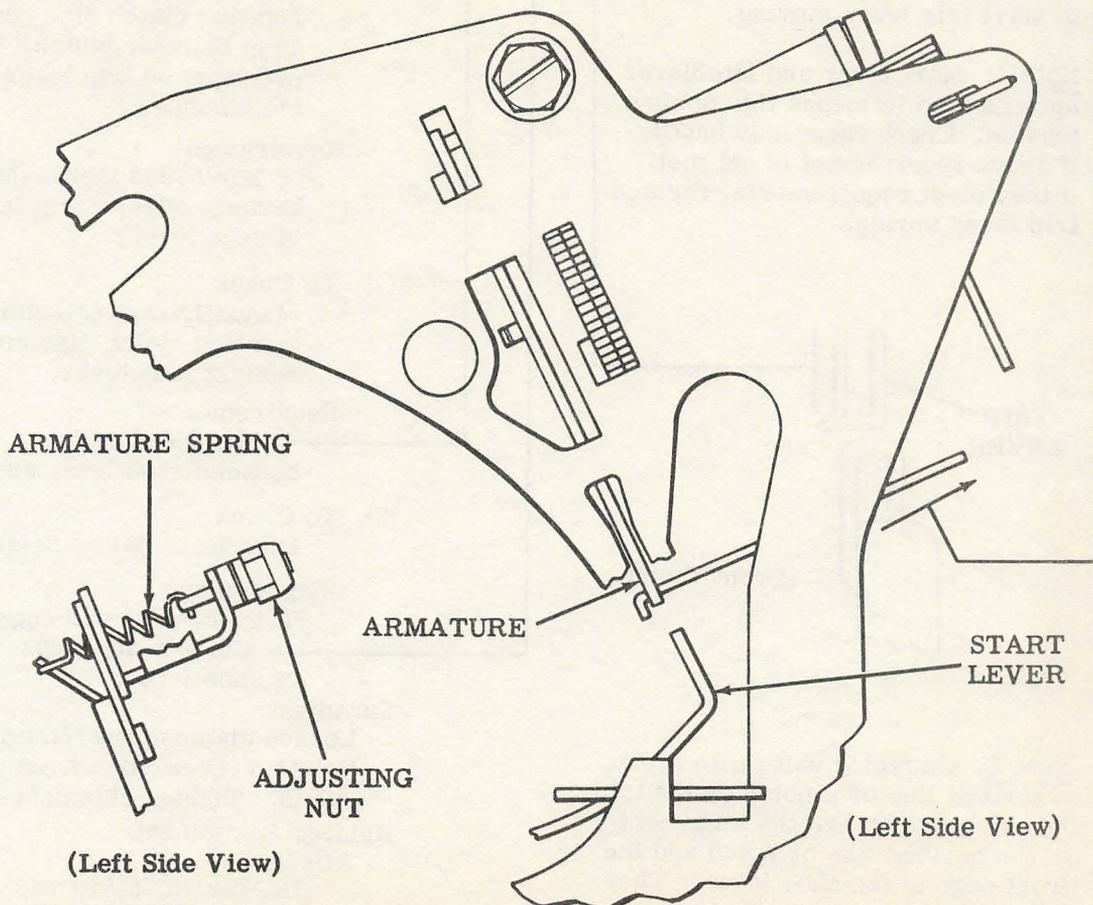

2.21 Selector Area (continued)


START LEVER SPRING

Requirement

With typing unit in stop condition

Min 19 oz---Max 23 oz

to pull start lever spring to installed length.

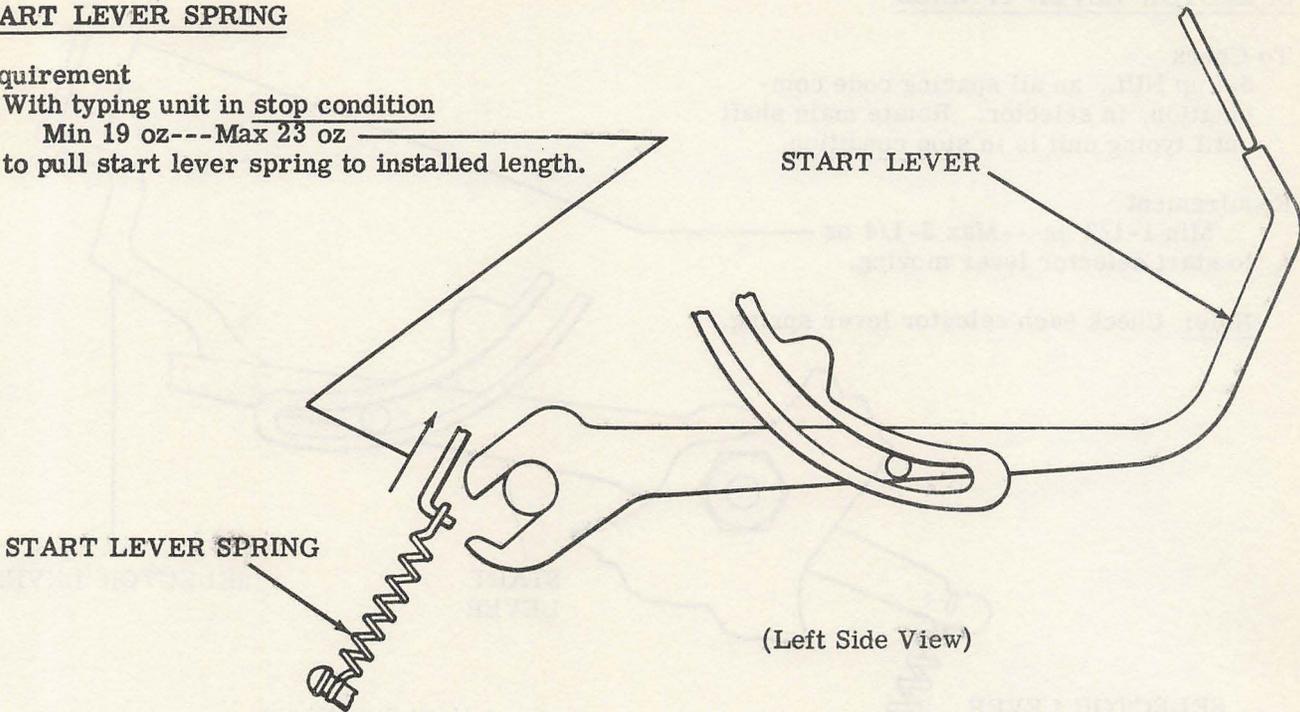

(Left Side View)


LATCHLEVER SPRING

Requirement

With selector latchlever resting on high part of clutch disc

Min 2 oz---Max 3 oz

to start selector latchlever moving.

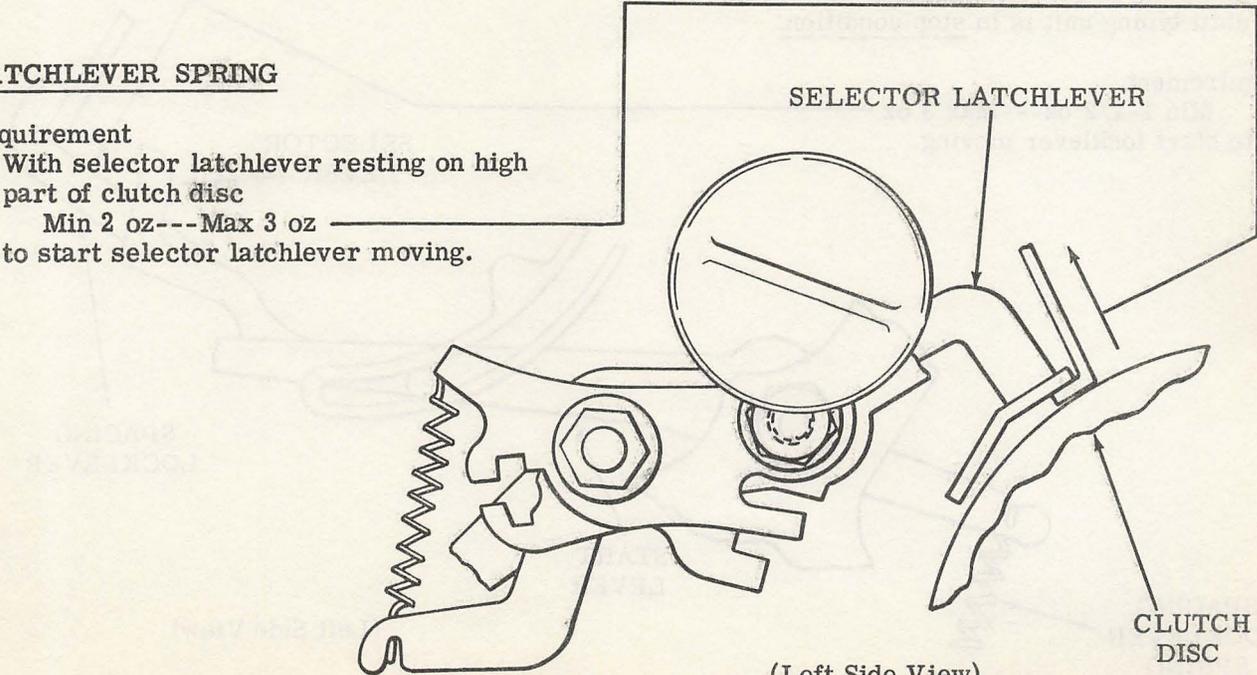

(Left Side View)

2.22 Selector Area (continued)

SELECTOR LEVER SPRINGS


To Check

Set up NUL, an all spacing code combination, in selector. Rotate main shaft until typing unit is in stop condition.

Requirement

Min 1-1/2 oz---Max 3-1/4 oz
to start selector lever moving.

Note: Check each selector lever spring.

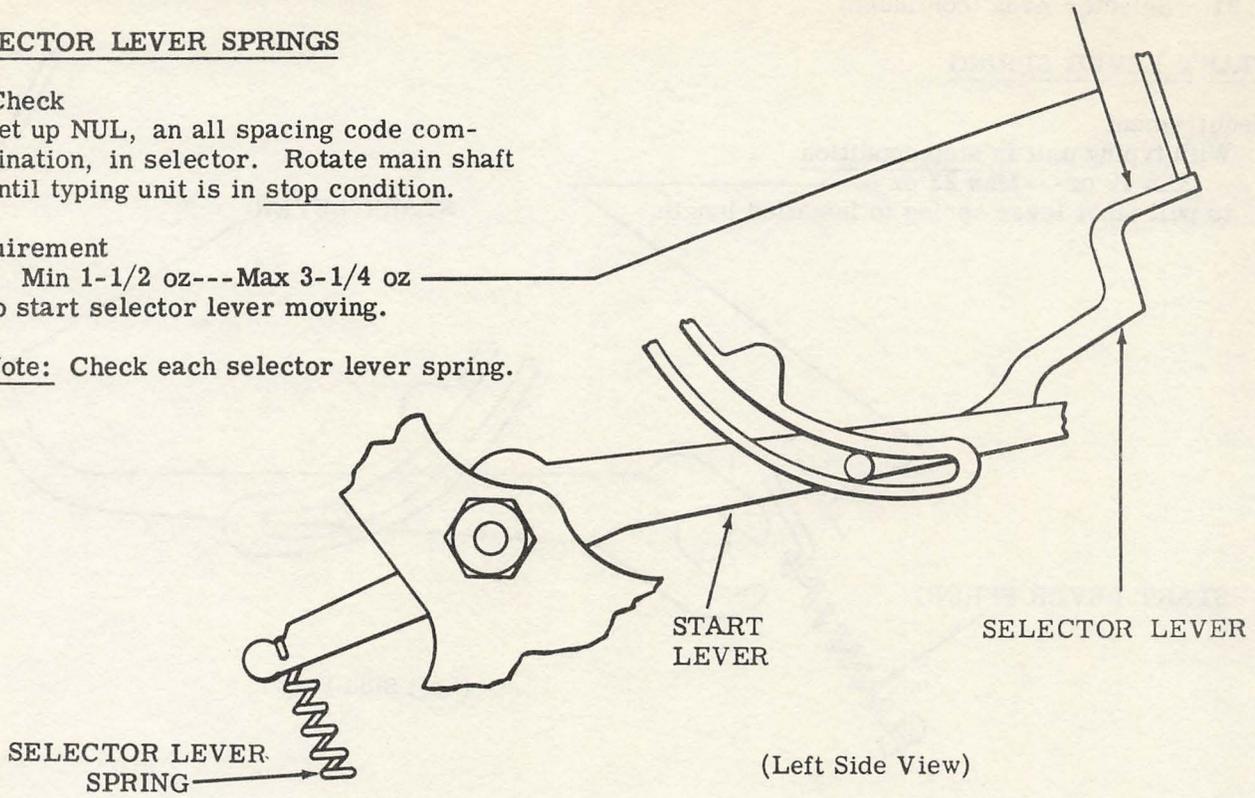


SPACING LOCKLEVER SPRING

To Check

Set up NUL, an all spacing code combination, in selector. Rotate main shaft until typing unit is in stop condition.

Requirement

Min 1-1/2 oz---Max 3 oz
to start locklever moving.

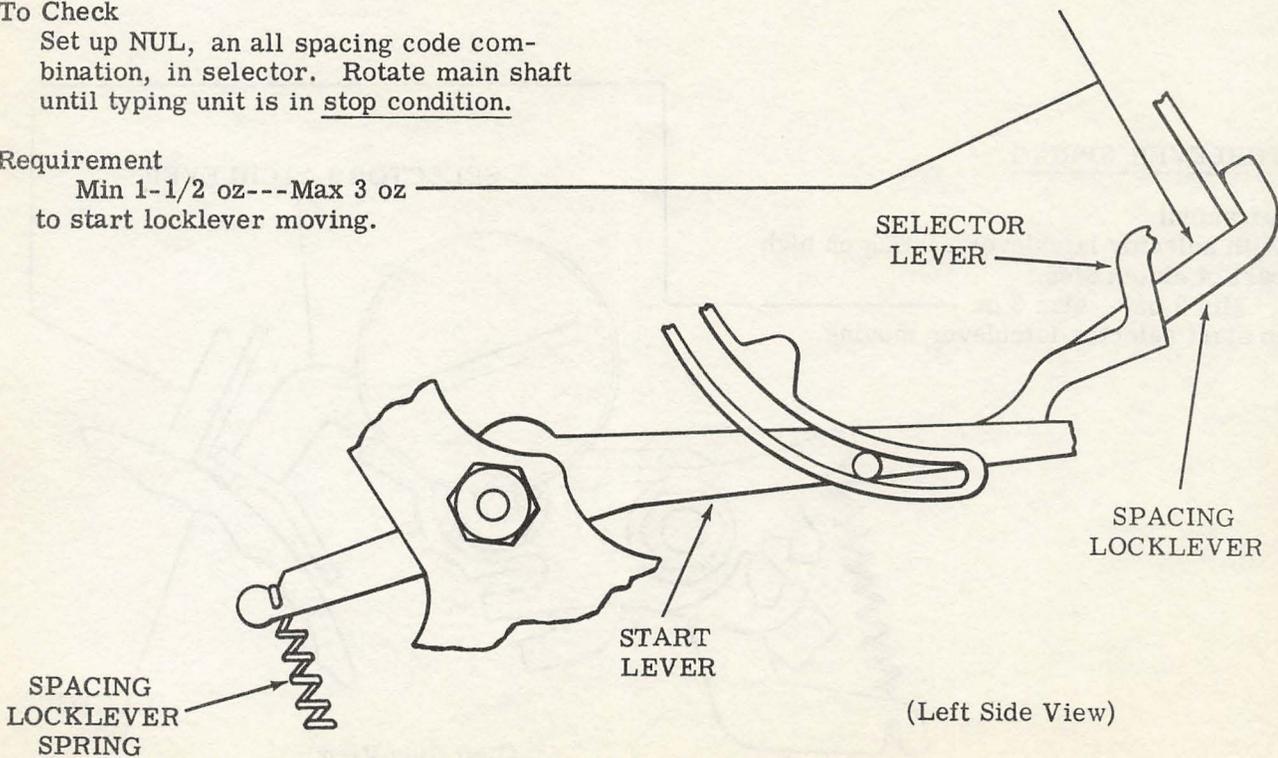

2.23 Selector Area (continued)


STRIPPER BAIL SPRING

To Check

Set range finder at 60. Set up NUL, an all spacing code combination, in selector. Rotate main shaft until typing unit is in stop condition.

Requirement

Min 1/4 oz---Max 1 oz
to start stripper bail moving.

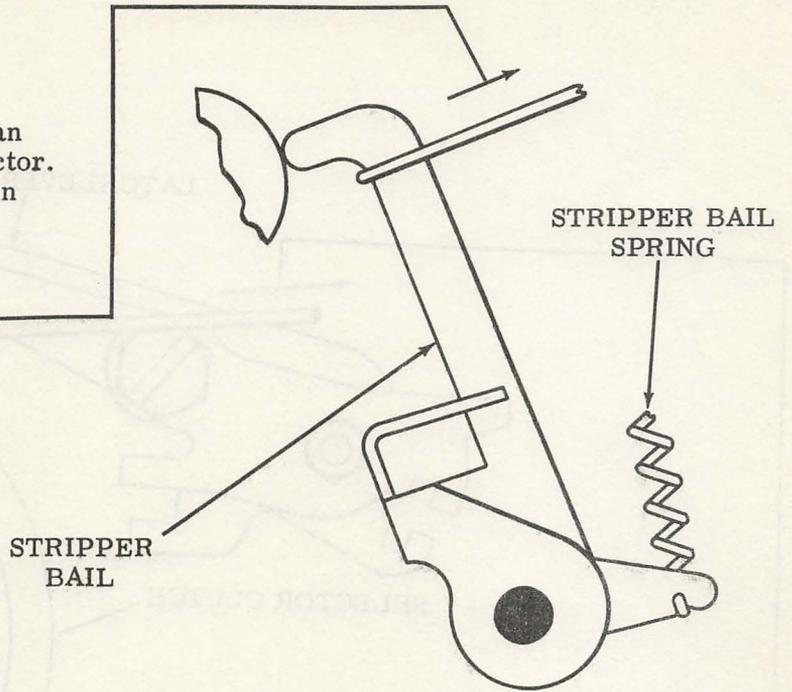

(Left Side View)


PUSH LEVER SPRINGS

Note 1: To measure this tension, selector mechanism must be removed from typing unit. Therefore, do not check it unless there is cause to suspect it will not meet requirement.

CAUTION: BEFORE REMOVING SELECTOR CLUTCH, MAKE SURE ARMATURE IS IN THE SPACING POSITION. HOLD SELECTOR LEVERS IN PLACE AWAY FROM SELECTOR CLUTCH WITH TP184098 TOOL.

Requirement


With blocking lever held away from push lever
Min 1-1/2 oz---Max 3 oz
to start push lever moving.

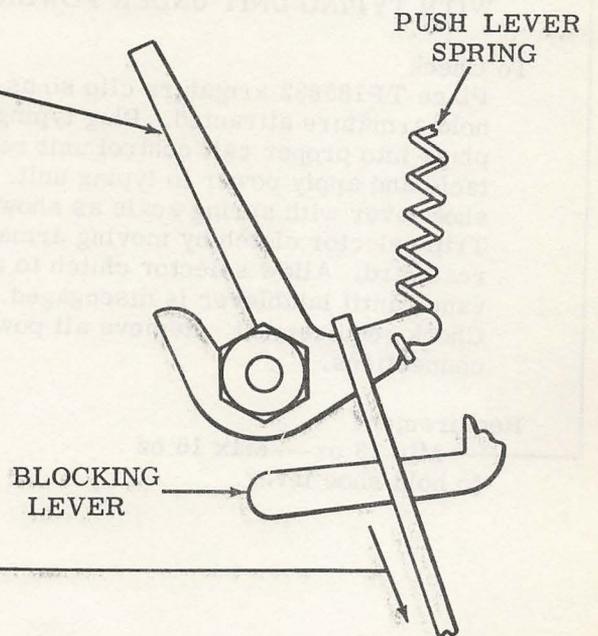

(Left Side View)

Note 2: Check each push lever spring.

2.24 Selector Area (continued)

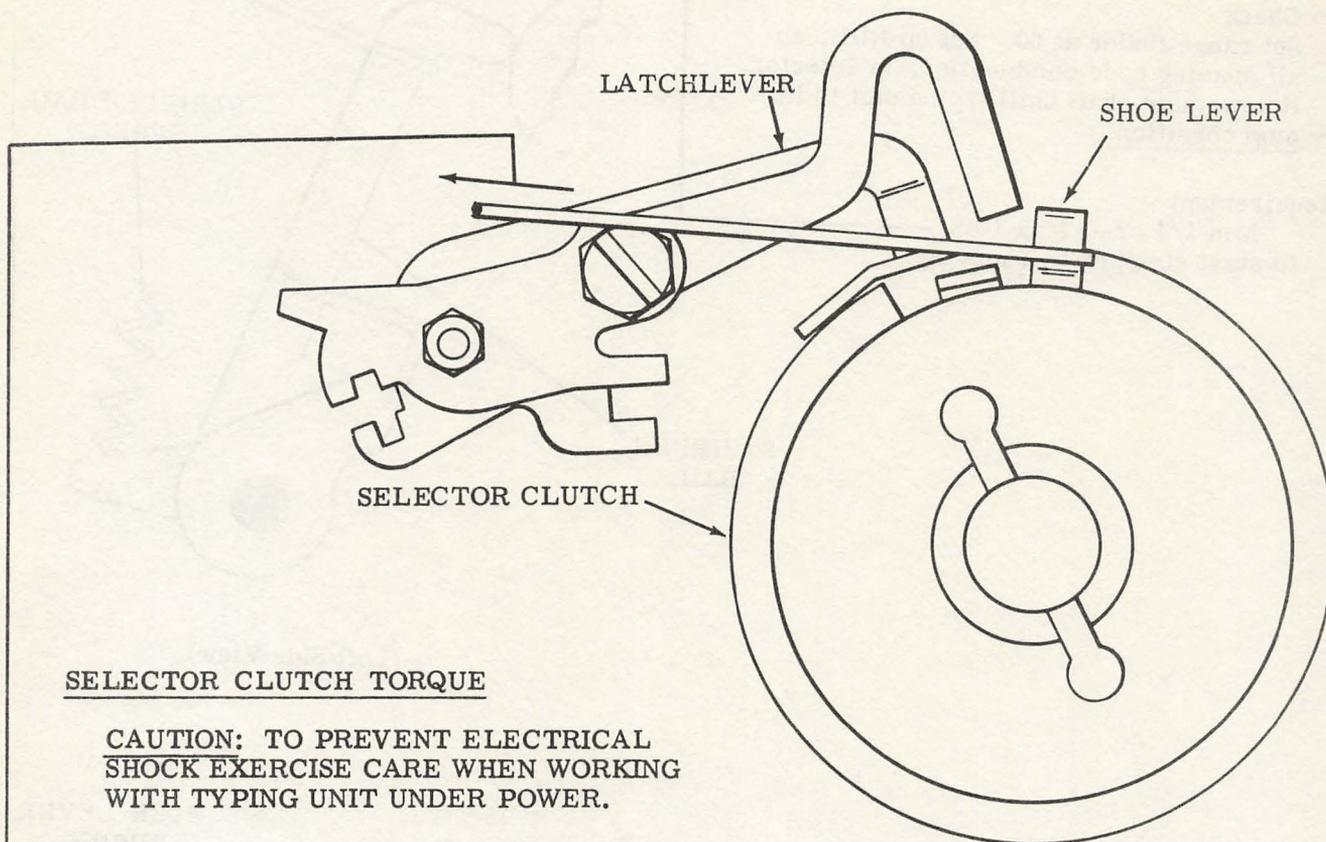

SELECTOR CLUTCH TORQUE

CAUTION: TO PREVENT ELECTRICAL SHOCK EXERCISE CARE WHEN WORKING WITH TYPING UNIT UNDER POWER.

To Check

Place TP185832 armature clip so as to hold armature attracted. Plug typing unit plugs into proper call control unit receptacle and apply power to typing unit. Hold shoe lever with spring scale as shown. Trip selector clutch by moving armature rearward. Allow selector clutch to advance until latchlever is disengaged. Check requirement. Remove all power connections.

Requirement

Min 13 oz---Max 16 oz
to hold shoe lever.

(Left Side View)

2.25 Function Area

(A) MAIN SHAFT ROTATION

Note 1: This adjustment should be checked when adjustments affecting the typing unit drive system have been disturbed.

(1) To Check

With motor drive belt removed and all clutches disengaged (latched), manually rotate main shaft.

Requirement

No excessive drag or binding should be detected.

(2) To Check

With motor belt installed and all clutches disengaged (latched), manually rotate main shaft.

Requirement

No excessive drag or binding should be detected.

Note 2: Excessive drag or binding when the main shaft is rotated will cause insufficient receiving margins.

To Adjust

If requirements are not met, check following adjustments:

GEAR BACKLASH (Motor Area) (2.01)

BELT TENSION (Motor Area) (2.02)

LEFT BEARING POSITION (Main Shaft Area) (2.10)

SELECTOR CAM ENDPLAY (Main Shaft Area) (2.10)

FUNCTION CLUTCH ENDPLAY (Main Shaft Area) (2.11)

CODEBAR CLUTCH ENDPLAY (Main Shaft Area) (2.12)

DRIVEN GEAR LINE-UP (Main Shaft Area) (2.12)

FORM FEED CLUTCH ENDPLAY - S (Main Shaft Area) (2.93)

SHOE LEVER GAP AND TRIP LEVER ENGAGEMENT (Selector Area) (2.19)

BEARING ALIGNMENT (2.25)

(B) BEARING ALIGNMENT

Note 3: This adjustment applies to main shaft bearings, distributor shaft bearings, function rocker shaft bearings, and codebar reset bail bearings. It should only be made if bearing clamps have been loosened, or if a bind is detected in associated shafts.

Requirement

Bearings should be aligned with their respective shaft.

To Adjust

(a) With bearing clamps loosened, position bearing using finger pressure while rotating associated shaft. Tighten clampscrews.

(b) If bind still exists, keep bearing clamp tightened and apply a light blow vertically to top of bearing clamp.

2.26 Function Area (continued)

ROCKER SHAFT POSITION AND ENDPLAY

(1) Requirement

Both bearings should be centered on base casting, as gauged by eye.

To Adjust

Loosen collar setscrews and bearing clampscrews and position bearings.
Tighten bearing clampscrews.

(2) Requirement

The left end of function rocker shaft should line up with inside top edge of base casting lip, however:

0.030 inch misalignment is permissible to the left.


0.060 inch misalignment is permissible to the right.

(3) Requirement

Min some---Max 0.010 inch
endplay in function rocker shaft.

To Adjust

Loosen setscrews and position function rocker shaft and both collars.
Tighten both setscrews.

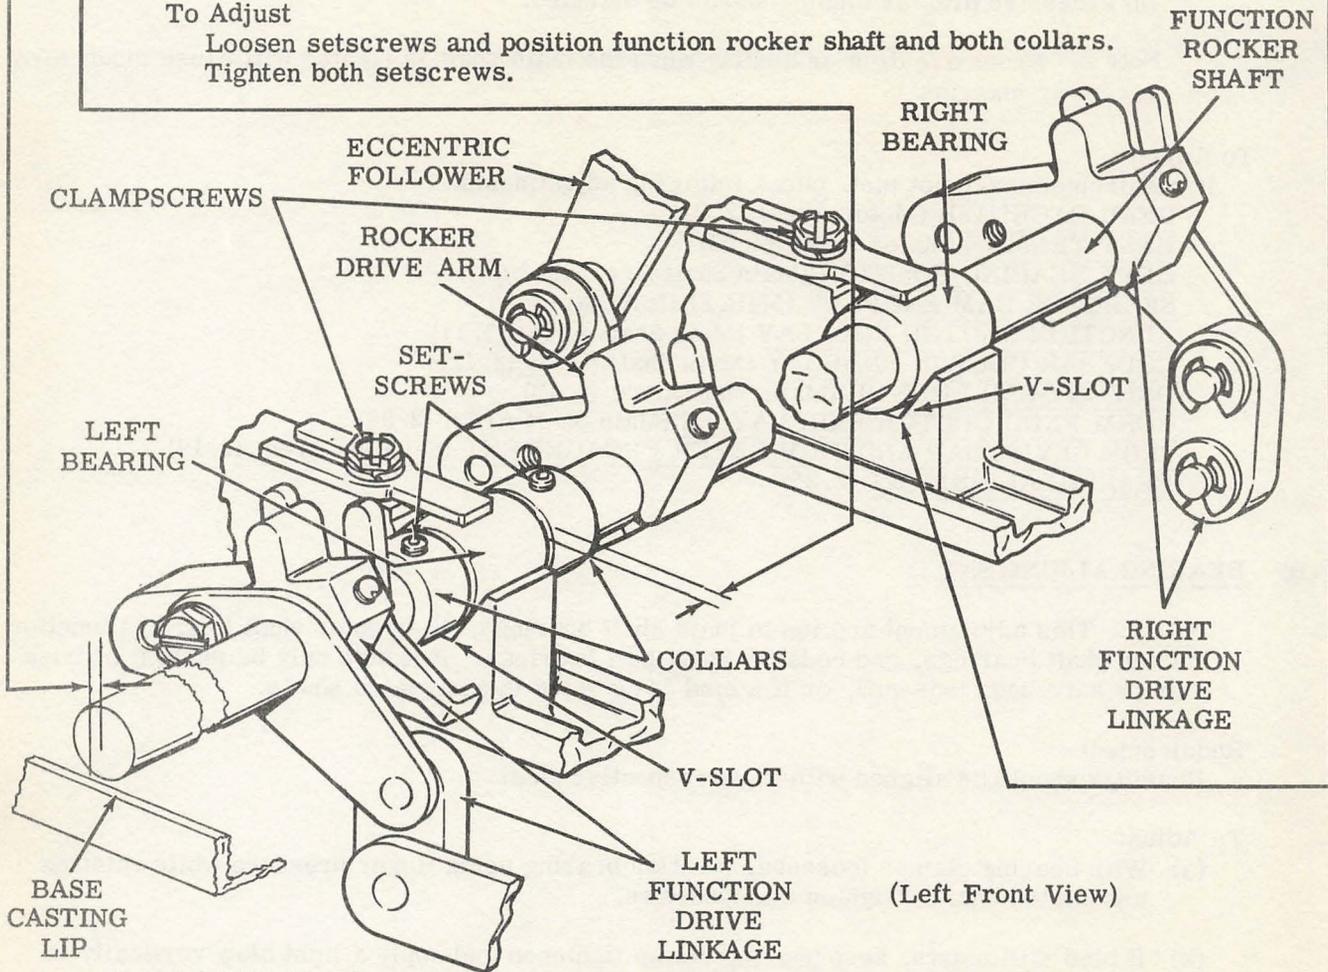


Related Adjustments
Affects

CODEBAR RESET LEVER LINE-UP (2.27)

CODEBAR RESET LEVER POSITION (2.28)

PRINT SUPPRESSION LATCH — HORIZONTAL CLEARANCE (2.29)

2.27 Function Area (continued)

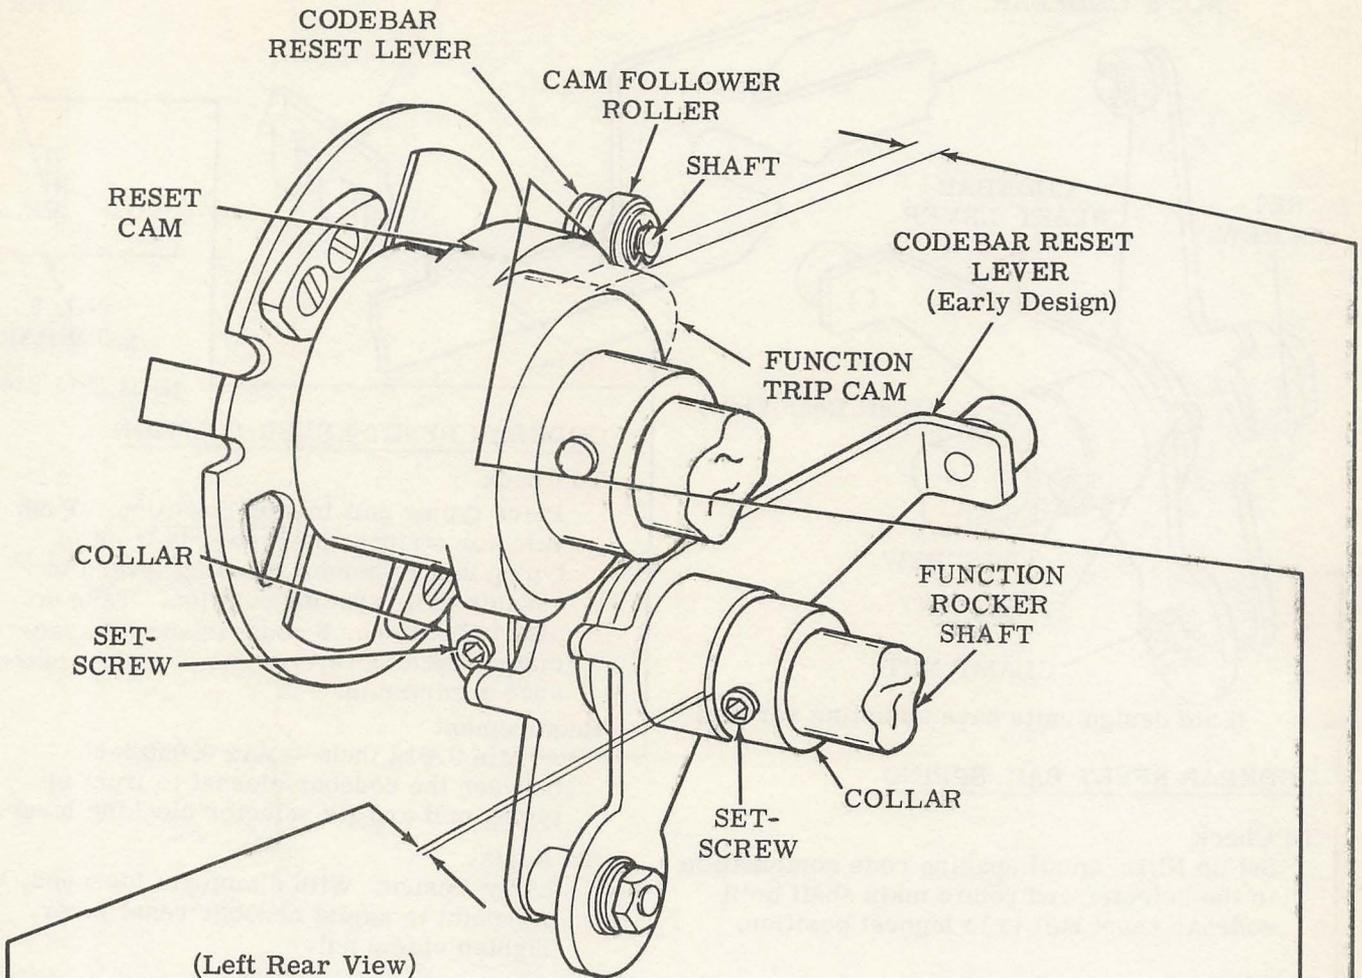CODEBAR RESET LEVER LINE-UPRequirement

With typing unit in stop condition

- (1) Cam follower roller approximately centered on reset cam, as gauged by eye,
Max 0.020 inch overhang permitted on right side only.
- (2) Min some---Max 0.010 inch endplay in codebar reset lever.
- (3) Min 0.005 inch between cam follower roller's shaft and function trip cam.

To Adjust

Loosen setscrews and position two collars.

Related AdjustmentsAffects



CODEBAR RESET LEVER POSITION (2.28)

Affected By

ROCKER SHAFT POSITION AND ENDPLAY (2.26)

CODEBAR CLUTCH ENDPLAY (2.12)

2.28 Function Area (continued)

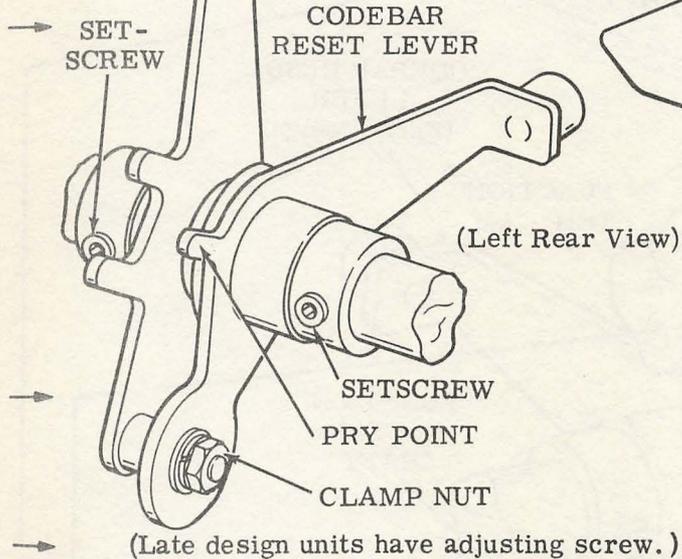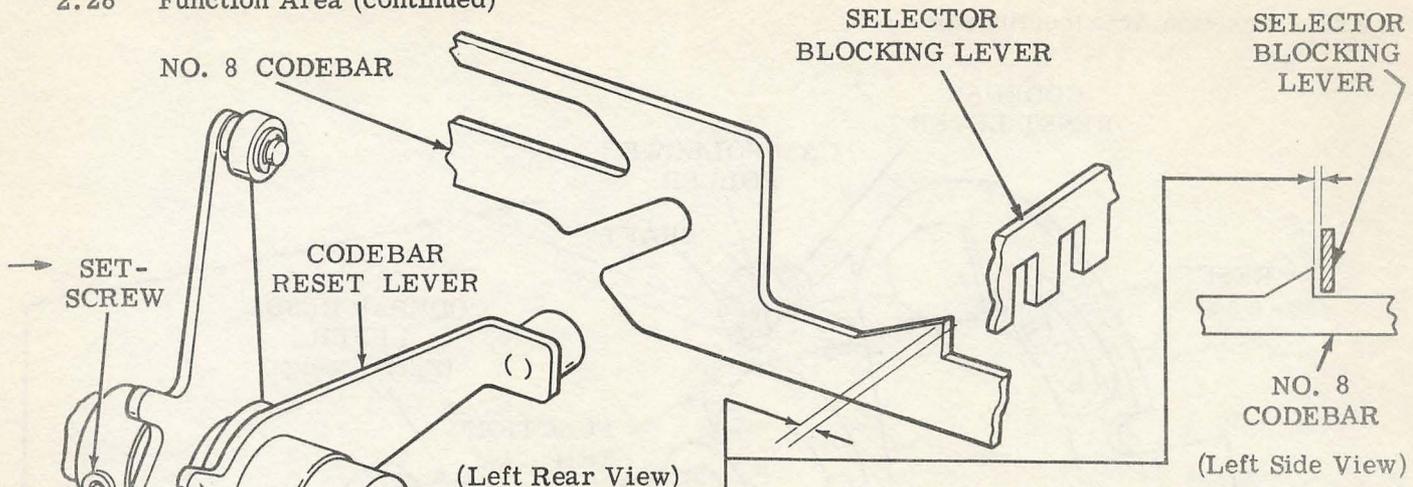

CODEBAR RESET LEVER POSITION

To Check

Place typing unit in stop condition. Push selector stripper bail towards front of typing unit to permit blocking levers to assume their spacing position. Take up play between no. 8 codebar and its associated blocking lever so as to make clearance a minimum.

Requirement

Min 0.012 inch---Max 0.030 inch between the codebar closest to front of typing unit and its selector blocking lever.

To Adjust

- Early Design: With clamp nut loosened, use pry point to adjust codebar reset lever. Tighten clamp nut.
- Late Design (With adjusting screw): Loosen two setscrews and adjust by turning adjusting screw. Tighten setscrews.


CODEBAR RESET BAIL SPRING

To Check

Set up NUL, an all spacing code combination, in the selector and rotate main shaft until codebar reset bail is in highest position.

Requirement

Min 5-3/4 oz---Max 8-3/4 oz to start codebar reset bail moving.

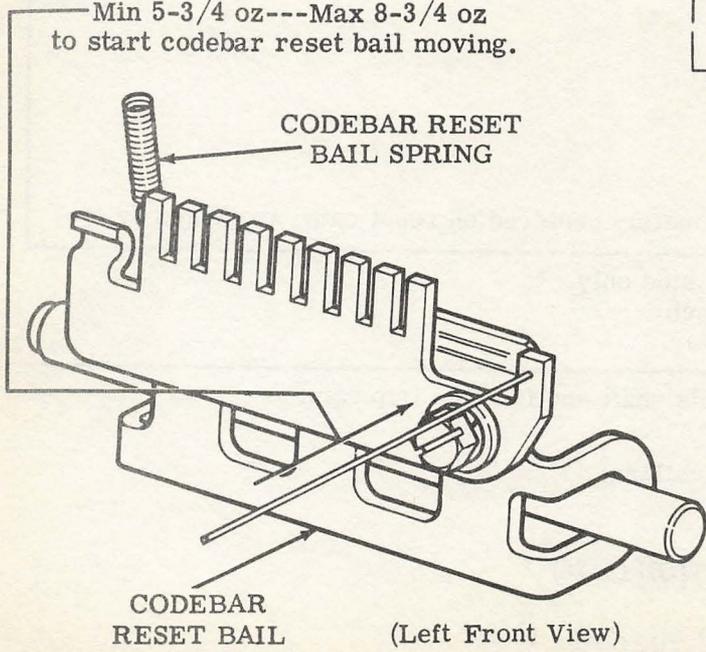

Related Adjustments

Affects

- PRINT SUPPRESSION LATCH — HORIZONTAL CLEARANCE (2.29);
- PRINT SUPPRESSION LATCH — VERTICAL CLEARANCE (2.39);
- FUNCTION SHAFT AND CASTING POSITION (2.40);
- REAR RAIL POSITION (Carriage Area) (2.45);
- FOURTH PULSE LINKAGE POSITIONING (Carriage Area) (2.47);
- PRINT SUPPRESSION LATCH-LEVER RELEASE (Carriage Area) (2.57);
- SPACE SUPPRESSION LEVER CLEARANCE — PRINTING (Spacing Area) (2.65);

Affected By

- ROCKER SHAFT POSITION AND END-PLAY (2.26);
- CODEBAR RESET LEVER LINE-UP (2.27)

2.29 Function Area (continued)

PRINT SUPPRESSION LATCH — HORIZONTAL CLEARANCE

(1) Requirement

With typing unit in the stop condition
Min 0.010 inch---Max 0.025 inch
 between print suppression latch and
 print suppression codebar.

Note 1: Disregard Requirement (2)
 for typing units which are not equipped
 with TP180744 collars.

(2) Requirement

Print suppression cam follower and
 latch should move freely.

Note 2: Some typing units have one
 clamp nut to loosen, others two,
 depending upon the configuration of
 the latch bracket used.

To Adjust

Loosen clamp nut(s) and setscrews in
 collars (see Note 1 and Note 2). Position
 latch bracket using pry point to meet
 Requirement (1). Tighten clamp nuts.
 Position collars to meet Requirement
 (2). Tighten setscrews.

Related Adjustments


Affects

FUNCTION SHAFT AND CASTING POSITION (2. 40)

Affected By

ROCKER SHAFT POSITION AND ENDPLAY (2. 26)

CODEBAR RESET LEVER POSITION (2. 28)

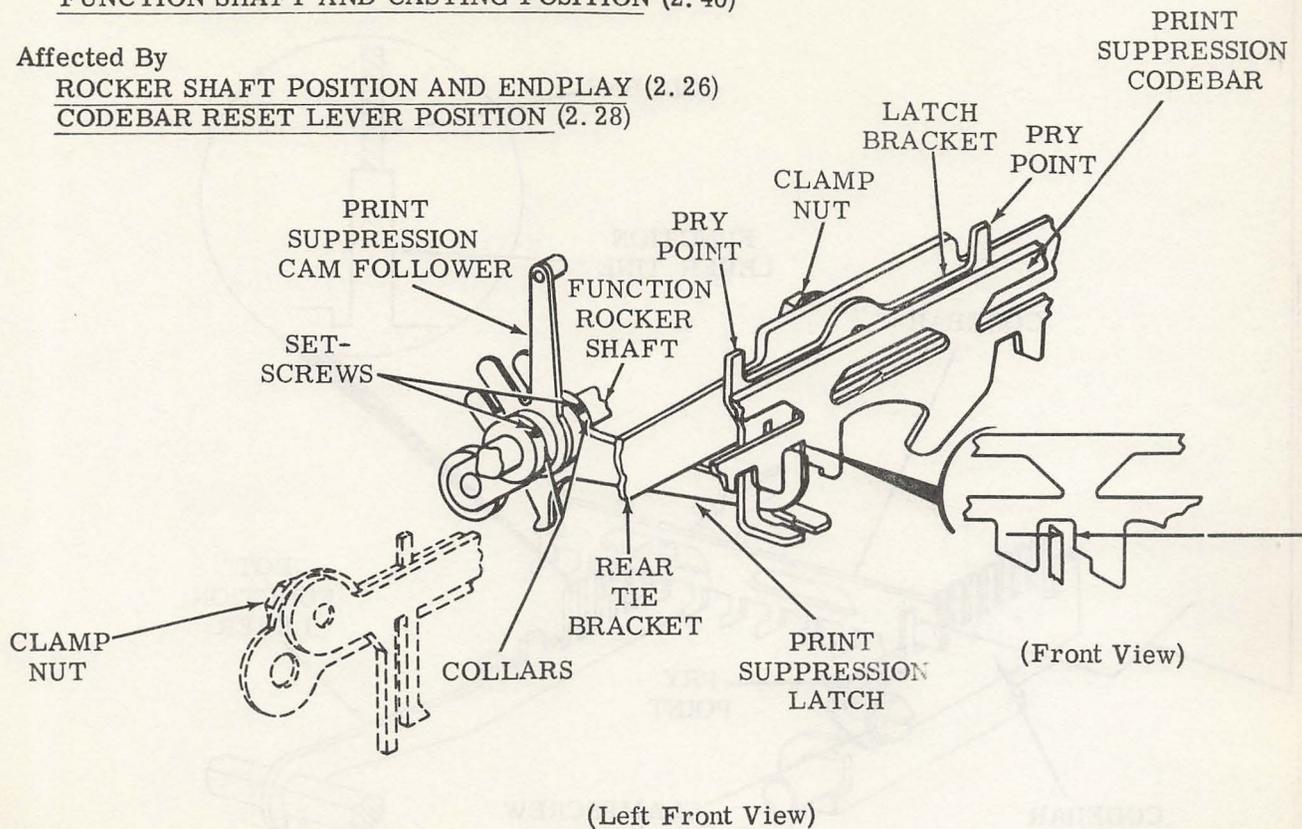

2.30 Function Area (continued)

CODEBAR RESET GUIDE POSITION

(1) Requirement

Codebars should have no noticeable curvature when viewed from their ends.

Note: The following To Check is for units equipped with TP181574 $\overline{\text{EOT}}$ function lever, TP180801 universal function lever, or similar function levers.

To Check


Manually set up RUBOUT, an all marking code combination, in the selector. Rotate main shaft until the function lever reaches its highest point of travel. Lightly take up any play between the function lever and codebars.

(2) Requirement

The codebars should fully engage the function lever tines.

To Adjust

Loosen clampscrew and position codebar guide using pry point. Tighten clampscrew.

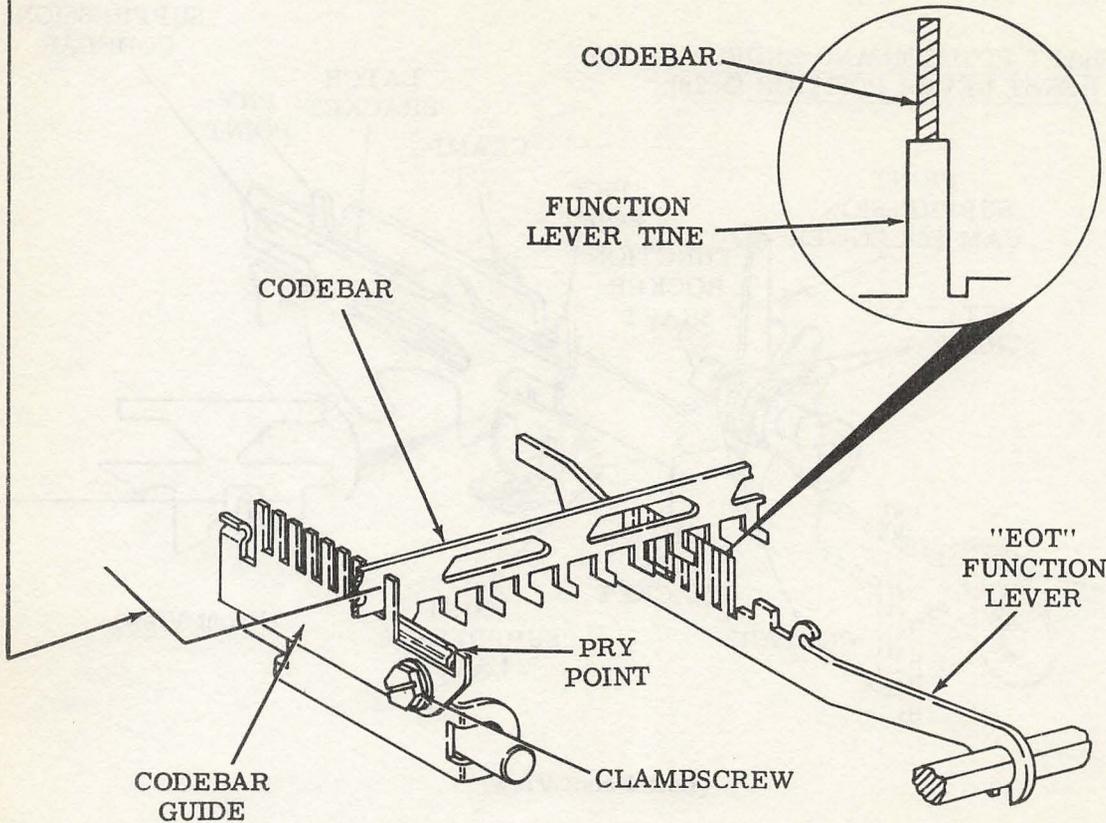

(Left Front View)

2.31 Function Area (continued)

SELECTOR BLOCKING LEVERS POSITIONING

Note: Set range finder to 80 on scale for both (1) and (2) To Check.

(1) To Check


Manually operate typing unit and set up RUBOUT, an all marking code combination in selector. Continue rotating main shaft until selector levers are on peak of their respective cams and codebar ends are approximately flush with left edge of their associated blocking levers.

(1) Requirement

Min 0.006 inch---Max 0.050 inch
between the no. 1 blocking lever and its associated codebar.

(2) Requirement

Min 0.003 inch
between all remaining blocking levers and their associated codebars.

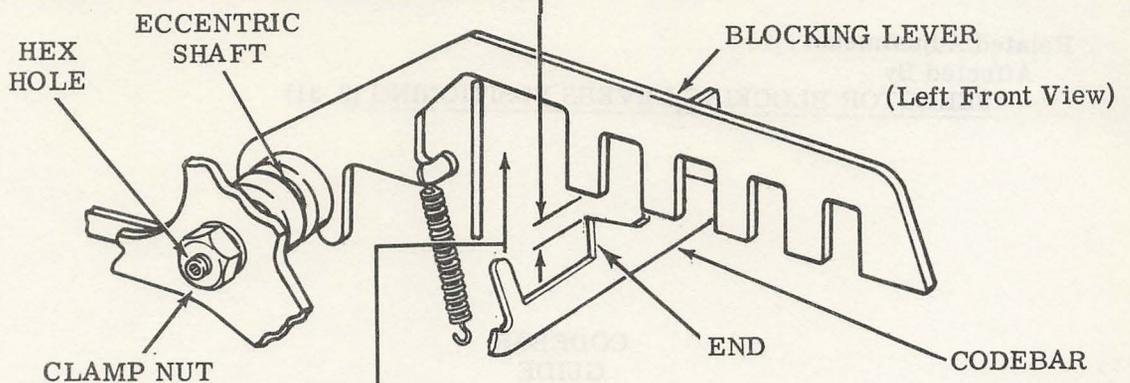

(2) To Check

Manually rotate main shaft. Hold armature forward in its marking position and rotate main shaft until selector clutch shoe lever is in vertical (12 o'clock) position. Continue rotating main shaft until shoe lever reaches 3 o'clock position as viewed from left, and note any vertical motion of no. 1 or no. 2 blocking levers.

Requirement

No visible vertical motion of no. 1 or no. 2 blocking levers while selector clutch shoe lever is moving from 12 o'clock to 3 o'clock position.

To Adjust

Loosen clamp nut and position eccentric with hex key wrench. Keep high part of eccentric toward rear of typing unit. Tighten clamp nut.

Related Adjustments

Affects

CODEBAR GUIDE POSITION (2. 32)

BLOCKING LEVER SPRINGS

To Check

Set up NUL, an all spacing code combination, in the selector. Rotate main shaft until typing unit is in stop condition.

Requirement

Min 1/2 oz---Max 1-1/4 oz
to start blocking lever moving.

Note: Check each blocking lever spring.

2.32 Function Area (continued)

CODEBAR GUIDE POSITION

To Check

Place typing unit in stop condition and manually operate the typing unit until the no. 1 blocking lever is in its lowest position.

(1) Requirement

No. 1 codebar centrally located in guide slot, as gauged by eye.

(2) Requirement

No. 1 blocking lever should engage the full thickness of no. 1 codebar.


To Adjust

Loosen clampscrew. Position codebar guide. Tighten clampscrew.

Related Adjustments

Affected By

SELECTOR BLOCKING LEVERS POSITIONING (2.31)

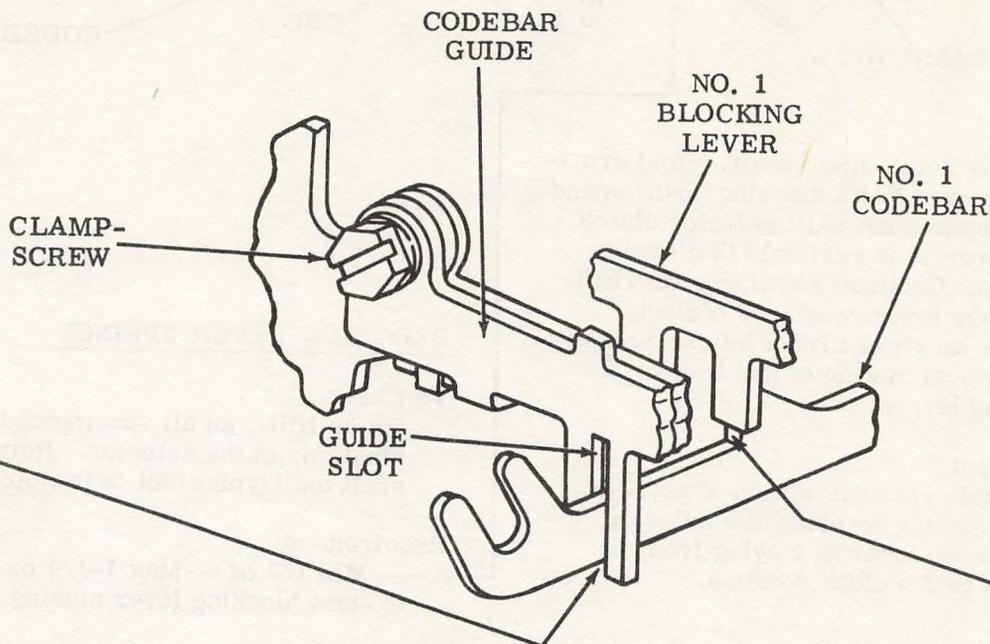

(Left Front View)

2.33 Function Area (continued)

AUTOMATIC CODEBAR SPRING

Requirement

With carriage at left margin TP180948 automatic codebar


Min 1/2 oz---Max 1-3/4 oz
TP183495, TP183496, TP183497 automatic codebars

Min 2 oz---Max 3 oz
to start automatic codebar moving.

AUTOMATIC CODEBAR

AUTOMATIC CODEBAR SPRING

(Front View)

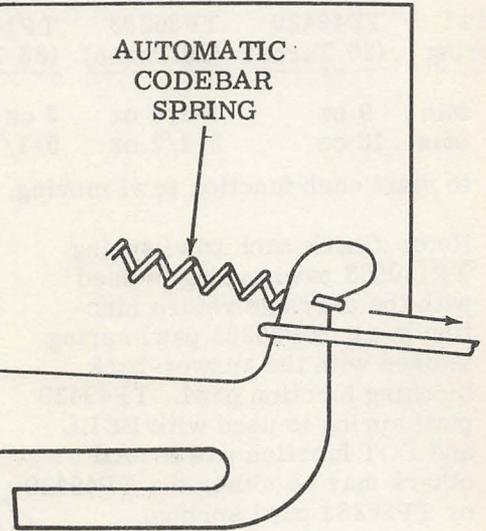

PRINT SUPPRESSION AND NO. 4 CODEBAR SPRING

Requirement

With typing unit in stop condition and no. 4 codebar follower on carriage lifted

Min 12 oz---Max 14 oz
to start codebar moving.

Note 1: Check the print suppression and no. 4 codebar spring.

CODEBAR SPRINGS

Note 2: Check each codebar spring other than automatic, print suppression and no. 4.

Requirement

With typing unit in stop condition and codebar follower lifted:

Min 5-1/2 oz---Max 7-1/2 oz
to start codebar moving.

FOLLOWER



CODEBAR SPRING

(Front View)

CODEBAR

(Front View)

GUIDE POST

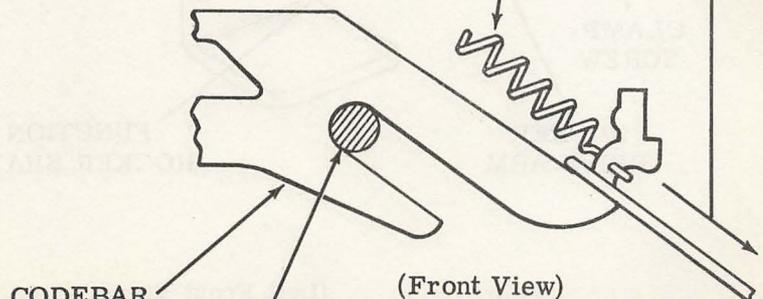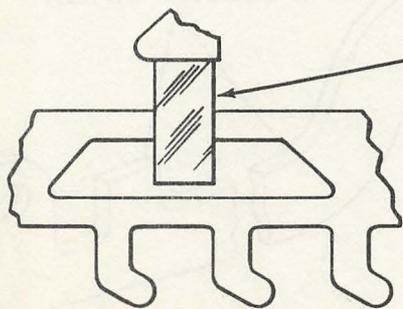

2.34 Function Area (continued)

FUNCTION PAWL SPRING

Requirement

With typing unit in stop condition and all external loads which would influence the requirement removed

Pawl Spring	TP49420 (26 Turns)	TP86283 (38 Turns)	TP180863 (33 Turns)
-------------	-----------------------	-----------------------	------------------------

Min	9 oz	1-1/4 oz	3 oz
Max	13 oz	2-1/2 oz	5-1/2 oz

to start each function pawl moving.

Note: Check each pawl spring. TP180863 pawl spring is used with the carriage return function pawl. TP86283 pawl spring is used with the answer-back blocking function pawl. TP49420 pawl spring is used with BELL and EOT function pawls. All others may be either the TP49420 or TP86283 pawl springs.

LEFT ROCKER DRIVE

To Check

Set up carriage return code combination (1-34---8) in selector. Rotate main shaft until function bail is at highest point of travel. Take up carriage return function lever play in an upward direction at the pivot to minimum clearance.

Requirement

Min 0.015 inch---Max 0.050 inch between carriage return function lever and its function pawl.

To Adjust


Loosen clampscrew. Use pry point to adjust rocker drive arm. Tighten clampscrew.

Note: On early design units pry point is on the center drive arm. On late design units pry point is on left side of left drive arm.

Related Adjustments


Affects

- RIGHT ROCKER DRIVE (2.36)
 - CARRIAGE RETURN LEVER — LATCH CLEARANCE (2.41)
 - FUNCTION LEVER RETAINER (2.37)
 - SPACE SUPPRESSION LEVER CLEARANCE - SPACING (2.66)
 - LINE FEED DRIVE ARM CLEARANCE - F (Platen Area) (2.80)
- Related Tape Punch Adjustments (Refer to Section 574-125-700TC)

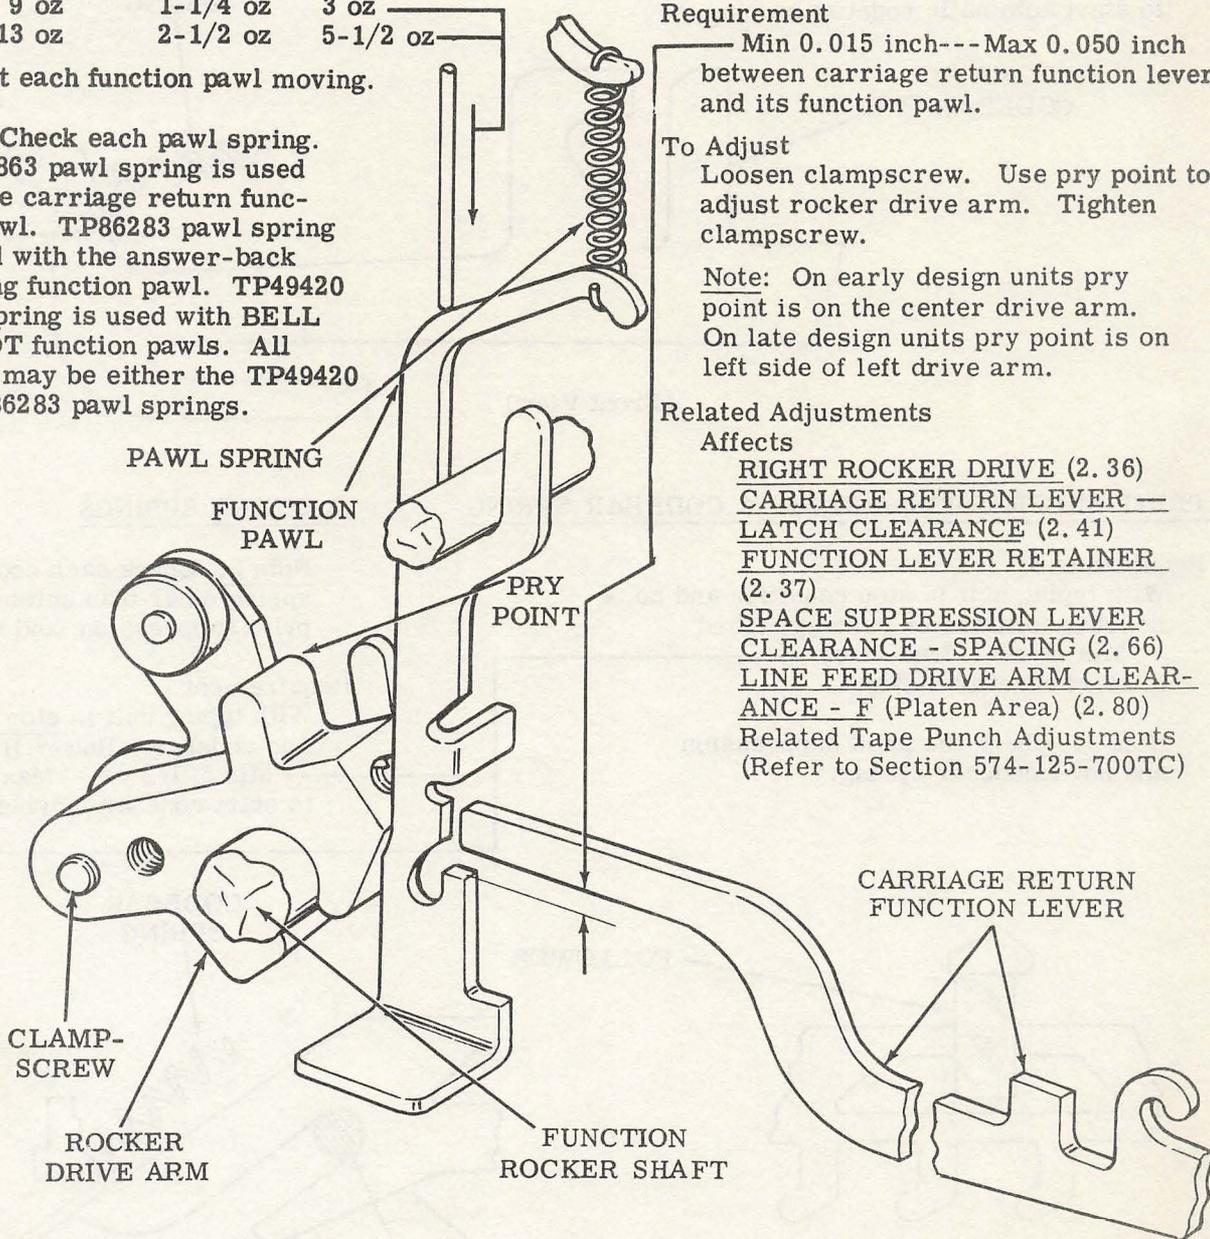

(Left Front View)

2.35 Function Area (continued)

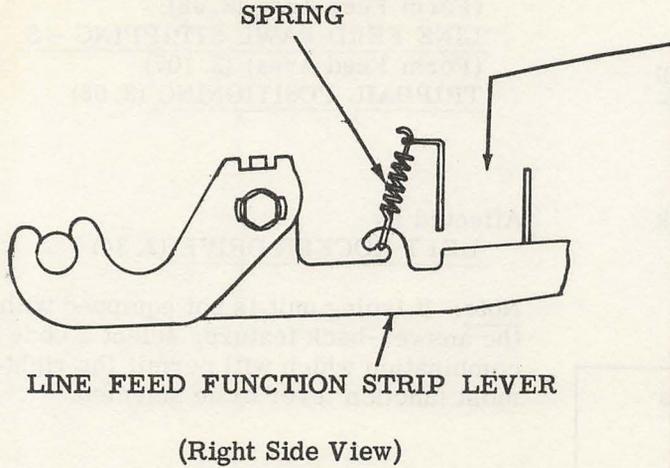

LINE FEED FUNCTION STRIP LEVER SPRING - S

Requirement

With a spring scale positioned on the line feed function strip lever

Min 23 oz---Max 30 oz
to start the line feed function strip lever moving.

FUNCTION LEVER SPRINGS

Requirement

With typing unit in stop condition, the spring scale requirements to start each function lever moving are


- (1) Min 19 oz---Max 24 oz to start LF and AUTO LF function levers moving.

Note 1: Hold the blocking pawl up when checking this requirement.

- (2) Min 3-1/2 oz---Max 5-1/2 oz to start carriage return function lever moving.

Note 2: Hold carriage return lever in frontward position.

- (3) Min 3-1/2 oz---Max 5-1/2 oz to start remaining function levers moving.

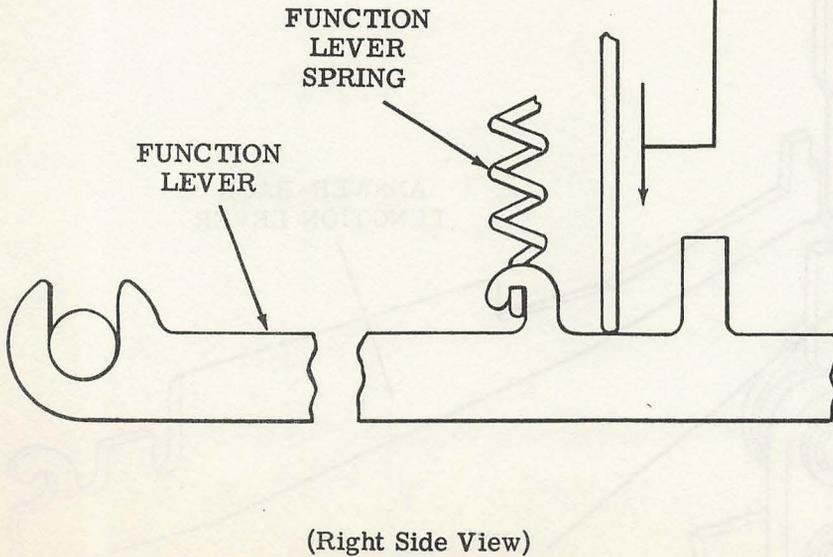

2.36 Function Area (continued)

RIGHT ROCKER DRIVE

To Check

Disengage (latch) distributor clutch. Set up answer-back character ENQ code combination (1-3-----) in selector. Rotate main shaft until function bail is at its highest point. Make sure that distributor clutch has not been tripped. Take up answer-back function lever play in an upward direction at the pivot to minimize clearance.

Requirement

Min 0.015 inch---Max 0.050 inch
between answer-back function lever and its function pawl.

To Adjust

Loosen clampscrew. Use pry point to adjust right rocker arm. Tighten clampscrew.

Related Adjustments

Affects

FORM-OUT LEVER OVERTRAVEL - S

(Form Feed Area (2.98))

LINE FEED PAWL STRIPPING - S


(Form Feed Area) (2.107)

TRIPBAIL POSITIONING (3.08)


Affected By

LEFT ROCKER DRIVE (2.34)

Note: If typing unit is not equipped with the answer-back feature, select a code combination which will permit the right-most function lever to be selected.

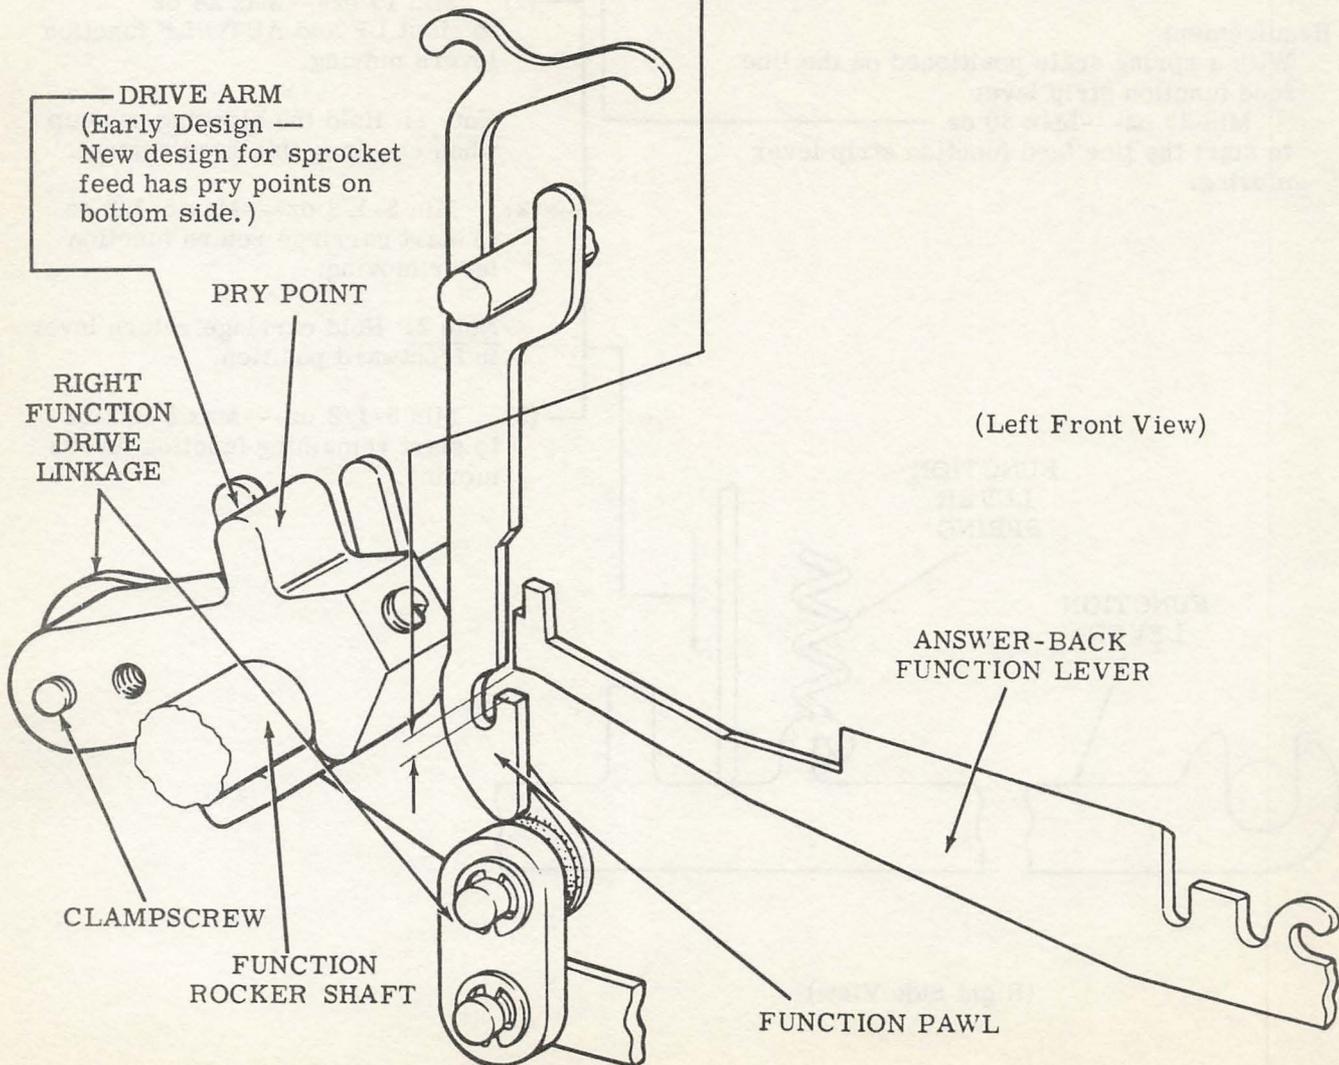

2.37 Function Area (continued)

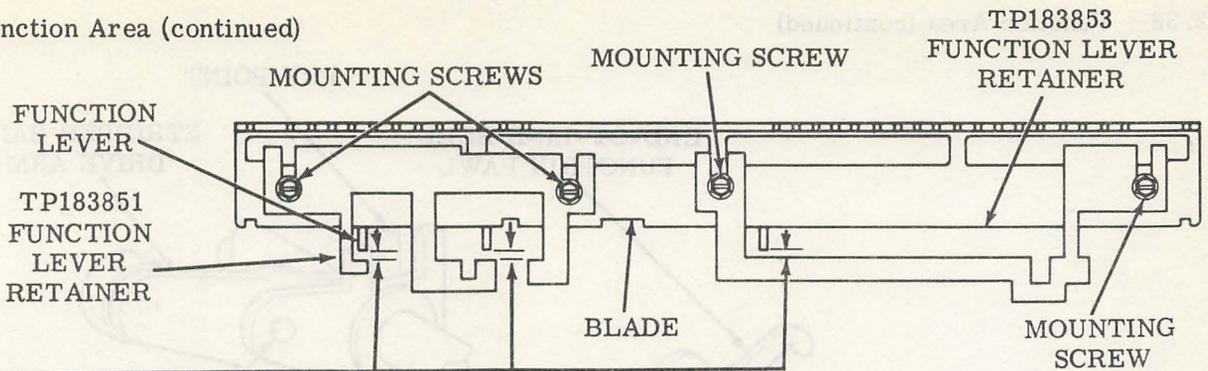

FUNCTION LEVER RETAINER

Units equipped with TP183851 (left and TP183853 (right) function lever retainers.


To Check

With an all marking code combination in the selector, manually operate the typing unit until the blade is at its highest point of travel.

Requirement

Min some---Max 0.040 inch between the function lever retainers and function levers at the closest point.

Note: The lower edges at the mounting portion of the retainer should not extend below the lower edge of the blade.

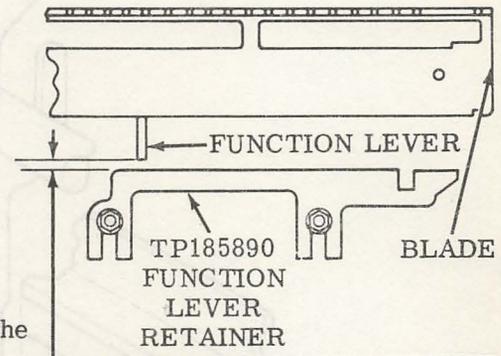

Units equipped with the TP185890 function lever retainers and the print-nonprint feature.

To Check

With an all marking code combination in the selector, manually operate the typing unit until the blade is at the lowest point of travel.

Requirement

Min some---Max 0.020 inch between the retainer and the function lever closest to it.


To Adjust

Loosen mounting screws and position retainers. Tighten screws.

FUNCTION BAIL SPRING


Requirement

With typing unit in stop condition
Min 72 oz---Max 104 oz to pull each function bail spring to installed length.

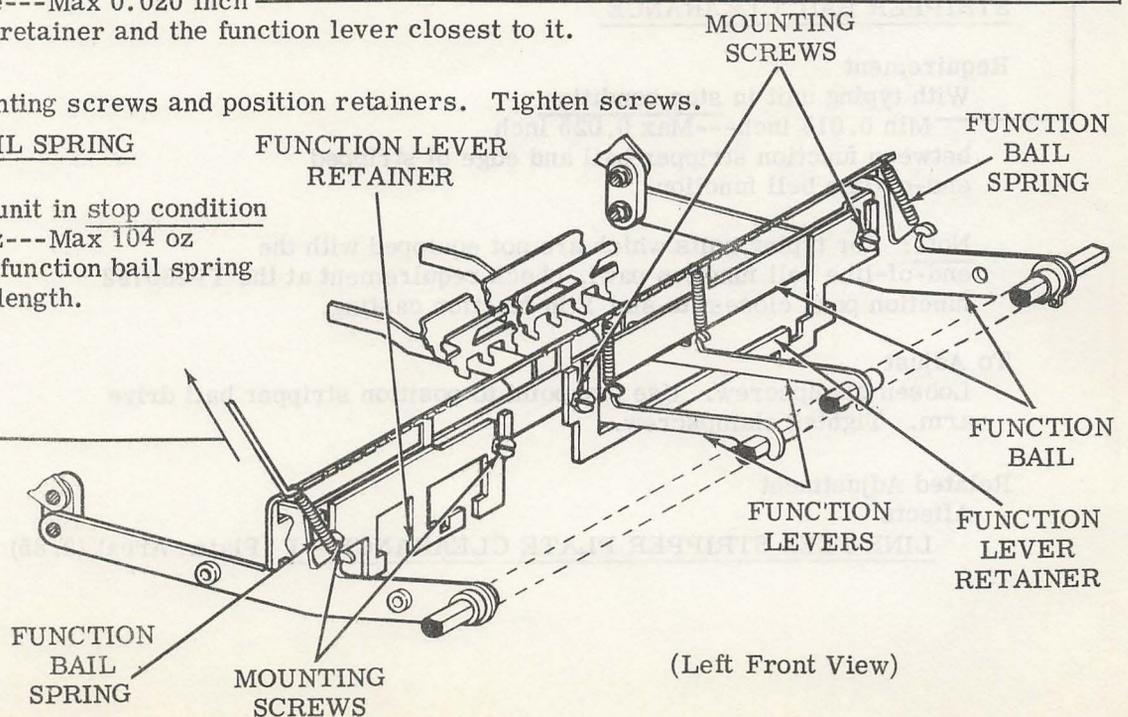

(Left Front View)

2.38 Function Area (continued)

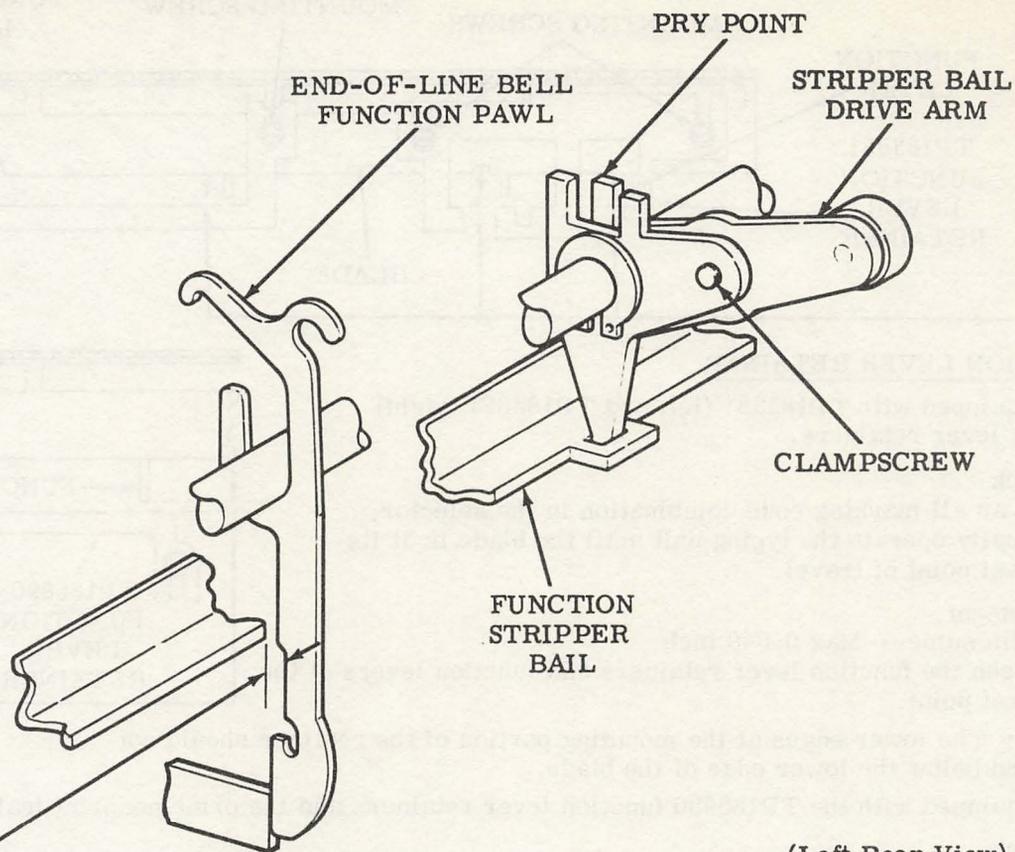

(Left Rear View)

STRIPPER BAIL CLEARANCE

Requirement

With typing unit in stop condition
Min 0.015 inch---Max 0.025 inch
between function stripper bail and edge of stripped
end-of-line bell function.

Note: For typing units which are not equipped with the
end-of-line bell function pawl, check requirement at the TP180792
function pawl closest to slot F in function casting.

To Adjust


Loosen clampscrew. Use pry point to position stripper bail drive
arm. Tighten clampscrew.

Related Adjustment

Affects

LINE FEED STRIPPER PLATE CLEARANCE - F (Platen Area) (2.85)

2.39 Function Area (continued)

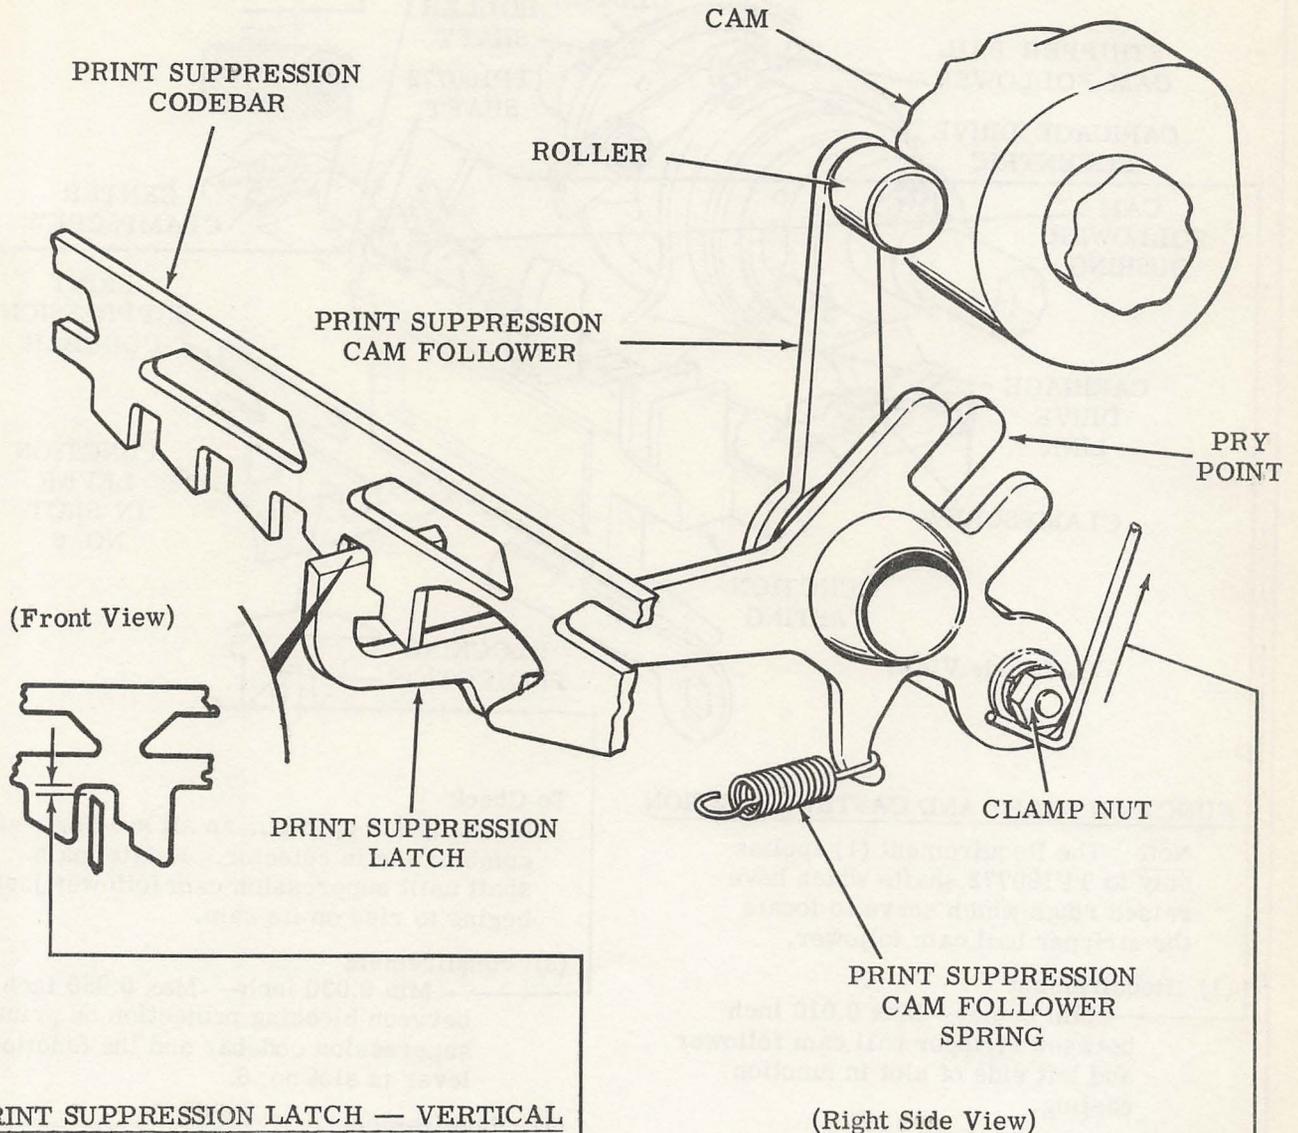

PRINT SUPPRESSION LATCH — VERTICAL CLEARANCE

Requirement

With typing unit in stop condition and print suppression cam follower roller resting on its cam

Min 0.015 inch---Max 0.050 inch
between print suppression latch and print suppression codebar.

To Adjust

Loosen clamp nut. Using pry point, position print suppression cam follower. Tighten clamp nut.

Related Adjustments

Affected By

CODEBAR RESET LEVER POSITION (2.28)


PRINT SUPPRESSION CAM FOLLOWER SPRING

Requirement

With typing unit in stop condition

Min 10 oz---Max 14 oz
to start print suppression cam follower moving.

2.40 Function Area (continued)

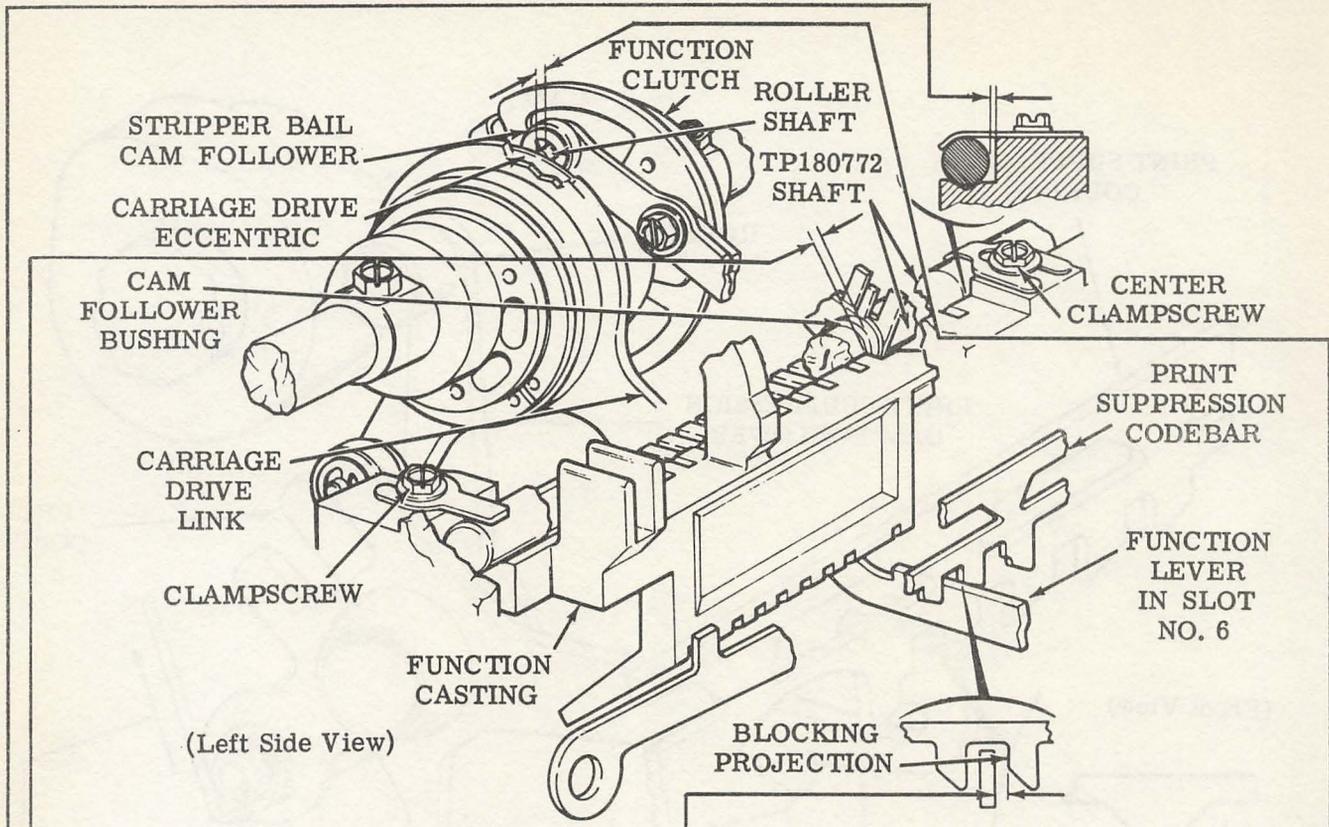FUNCTION SHAFT AND CASTING POSITION

Note: The Requirement (1) applies only to TP180772 shafts which have raised rings which serve to locate the stripper bail cam follower.

(1) Requirement

Min some---Max 0.010 inch between stripper bail cam follower and left side of slot in function casting.

To Adjust

Loosen clampscrews and position TP180772 shaft.

(2) Requirement

The shaft should be in contact with, or not more than
 Max 0.003 inch
 away from the vertical surface at the center of the function casting.

To Adjust

With the center and two end clampscrews loosened, position to meet Requirements (1) and (2).

To Check

Manually set up NUL, an all spacing code combination in selector. Rotate main shaft until suppression cam follower just begins to rise on its cam.

(3) Requirement

Min 0.030 inch---Max 0.050 inch between blocking projection on print suppression codebar and the function lever in slot no. 6.

(4) Requirement

Min 0.005 inch
 between carriage drive eccentric and roller shaft on stripper bail cam follower with play taken up to make clearance a minimum.

To Adjust

With the two end clampscrews loosened, position casting to meet Requirements (3) and (4). Tighten clampscrews.

Related Adjustments

Affected By

CODEBAR RESET LEVER POSITION
 (2.28)
PRINT SUPPRESSION LATCH —
HORIZONTAL CLEARANCE (2.29)
LEFT BEARING POSITION (2.10)

2.41 Function Area (continued)


CARRIAGE RETURN LEVER - LATCH CLEARANCE

To Check

Position carriage to center of typing unit and carefully remove carriage return spring. Set up carriage return code combination (1-34---8) in selector. Rotate main shaft until function bail reaches lowest point of travel. Position left end of carriage return lever rearward to eliminate its play.

(1) Requirement

Early design
 carriage return lever flush with
 carriage return latch
 Within 0.005 inch

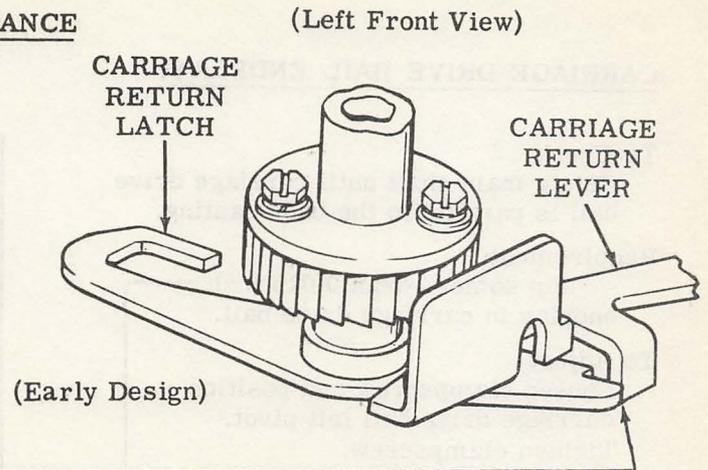

(2) Requirement


Late design
 Min some---Max 0.030 inch
 between carriage return lever and
 carriage return latch.

To Adjust

Loosen clampscrew. Use pry points to position carriage return lever. Tighten clampscrew. Replace carriage return spring.

Related Adjustment

Affected By
LEFT ROCKER DRIVE (2.34)

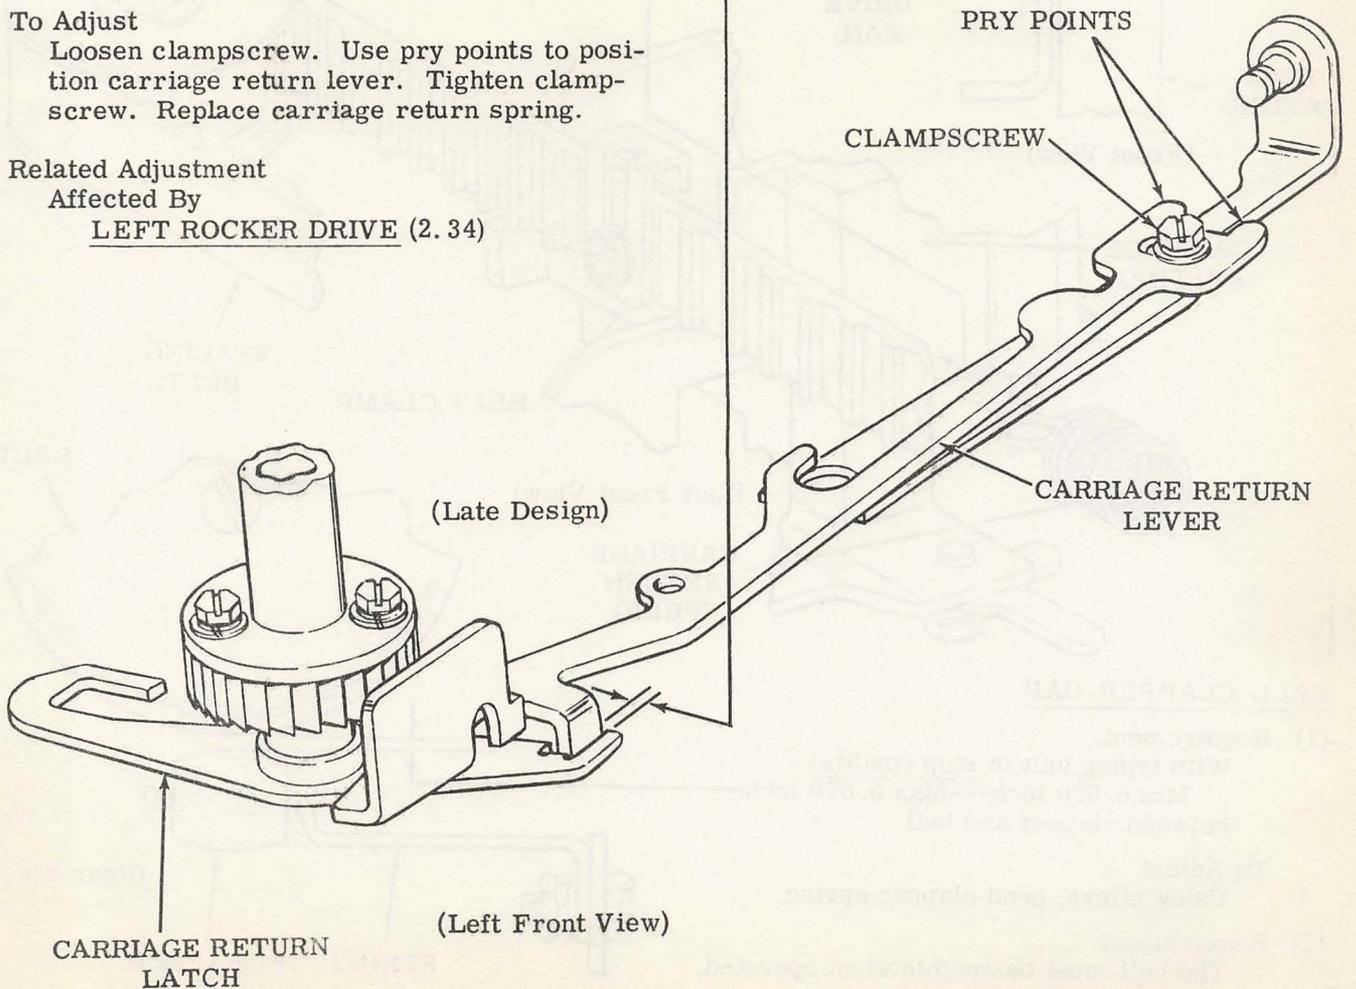


2.42 Function Area (continued)

CARRIAGE DRIVE BAIL ENDPLAY

To Check
 Rotate main shaft until carriage drive bail is parallel to the base casting.


Requirement
 Min some---Max 0.015 inch
 endplay in carriage drive bail.

To Adjust
 Loosen clampscrew and position carriage drive bail left pivot. Tighten clampscrew.

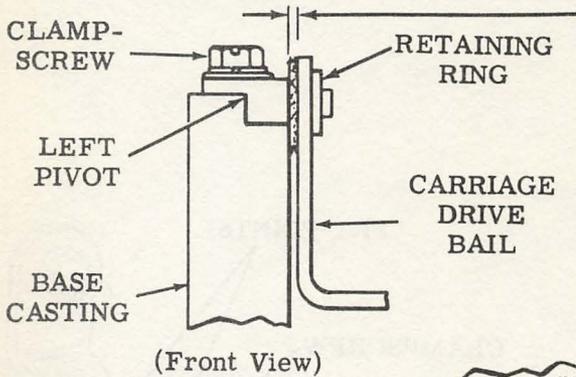

CARRIAGE RETURN SPRING

Requirement
 With typing unit in stop condition and carriage at right margin
 Min 56 oz---Max 64 oz
 to pull carriage return spring to installed length.

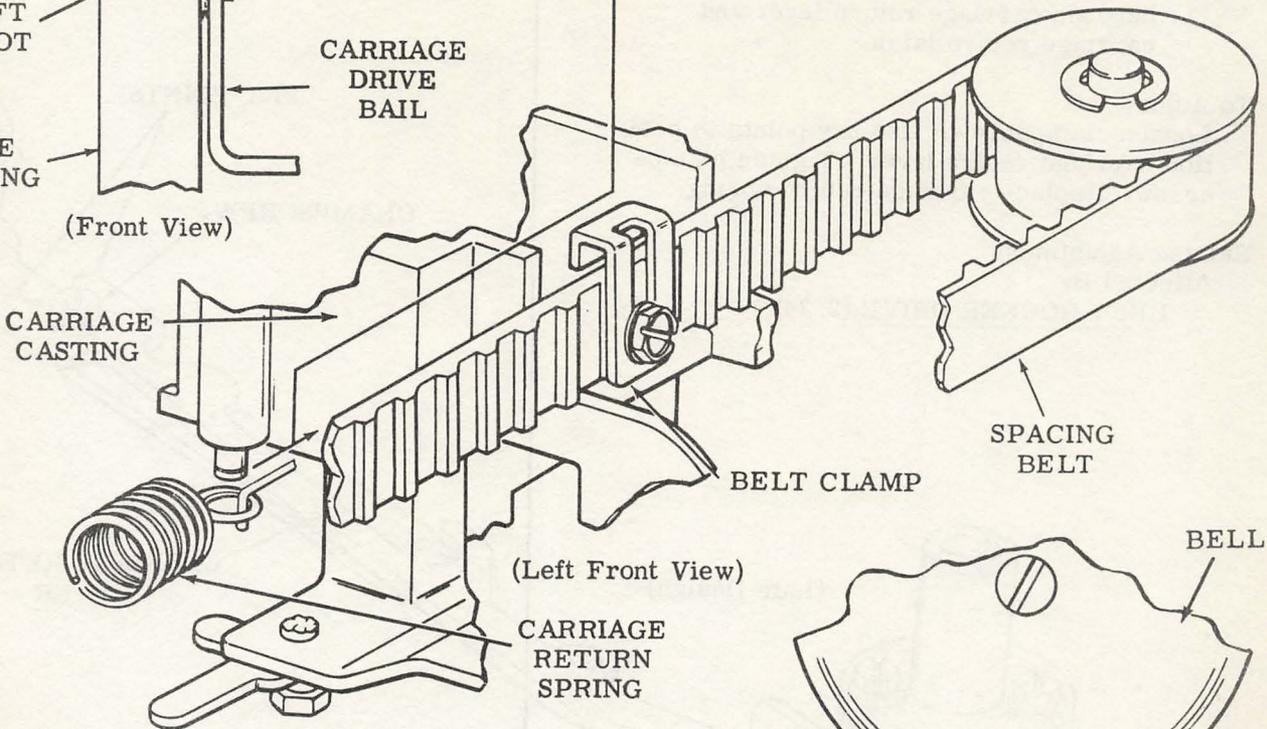


BELL CLAPPER GAP

(1) Requirement
 With typing unit in stop condition
 Min 0.030 inch---Max 0.070 inch
 between clapper and bell.

To Adjust
 Using pliers, bend clapper spring.

(2) Requirement
 The bell must be audible when operated.

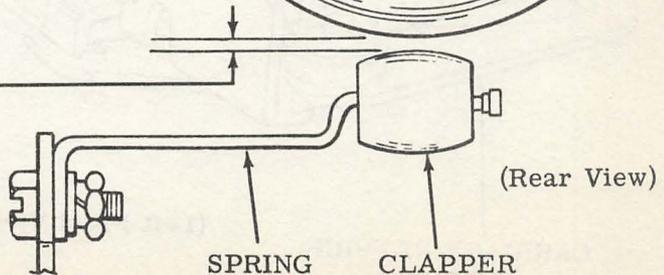

2.43 Carriage Area

FRONT ROLLERS CLEARANCE

Note 1: This adjustment does not apply to typing units equipped with nonadjustable parts such as TP183503 bearing housing and TP183504 bearing retainer.

To Check

Place typing unit in stop condition.
Remove the carriage return spring.
Take up roller play toward the front of the typing unit.

Requirement

Min some---Max 0.005 inch
between carriage front roller and
carriage front rail.


To Adjust

Loosen mounting nut and position
each roller against rail by means
of eccentric shaft. Slowly back off
eccentric shaft to meet requirement.
Tighten mounting nut.

Note 2: Some positions of carriage front
roller may show a slight drag condition.
This is acceptable providing there is no
perceptible increase in carriage friction
due to condition.

Related Adjustments**Affects**

PRINT DRIVE LEVER POSITIONING (2.48)
PRINT SUPPRESSION LATCHLEVER RELEASE (2.57)
RIBBON POWER LEVER DRIVE (2.62)
PLATEN HORIZONTAL POSITION - F (2.70)
PLATEN HORIZONTAL POSITION - S (2.89)

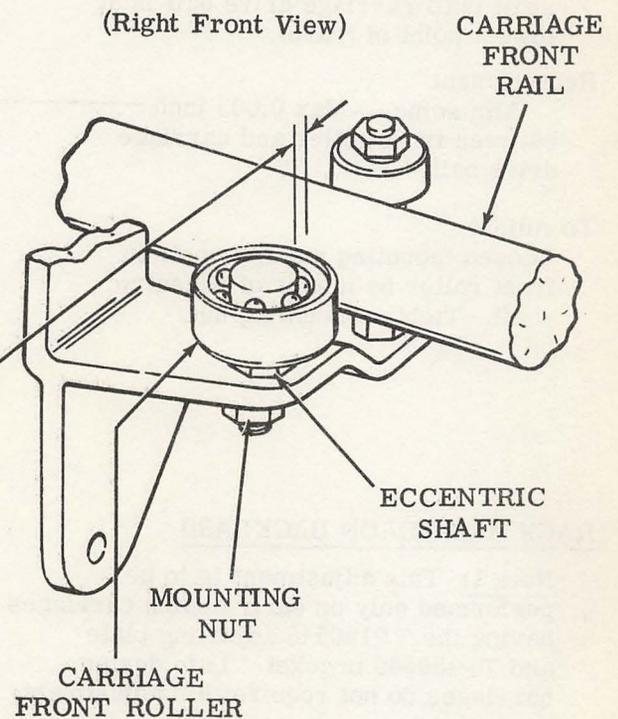

2.44 Carriage Area (continued)

POWER BAIL ROLLER CLEARANCE

To Check


Trip function clutch and rotate main shaft until carriage drive bail is at lowest point of travel.

Requirement

Min some---Max 0.005 inch between front roller and carriage drive bail.

To Adjust

Loosen mounting nut and position front roller by means of eccentric shaft. Tighten mounting nut.

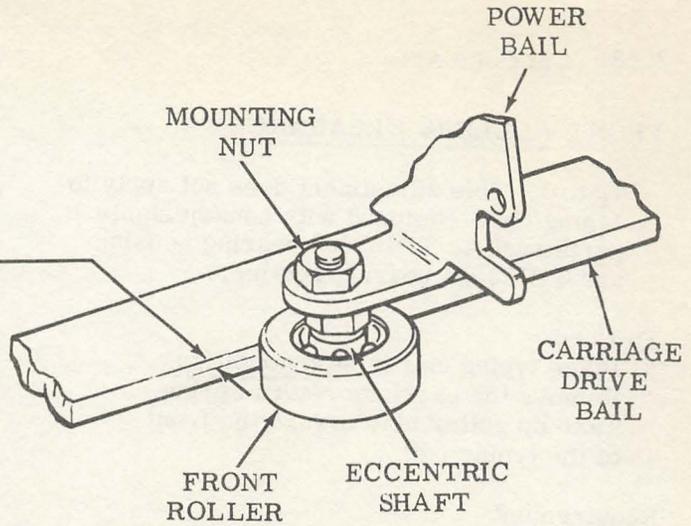

(Left Front View)

RACK AND PINION BACKLASH

Note 1: This adjustment is to be performed only on early design carriages having the TP180548 adjusting plate and TP180549 bracket. Late design carriages do not require this adjustment.

To Check



Place typing unit in stop condition.

Requirement

Each rack should have Min some---Max 0.010 inch backlash.

To Adjust

Loosen lock plate clampscrews and move lock plate towards the rear. Loosen one adjusting plate clampscrew friction tight and place a 0.010-inch feeler gauge between the rack and adjusting plate. Position adjusting plate for no play between the rack and pinion using pry point. Tighten adjusting plate clampscrew and remove feeler gauge. Repeat procedure for adjusting plate on other side. Position lock plate against adjusting plates. Tighten lock plate clampscrews.

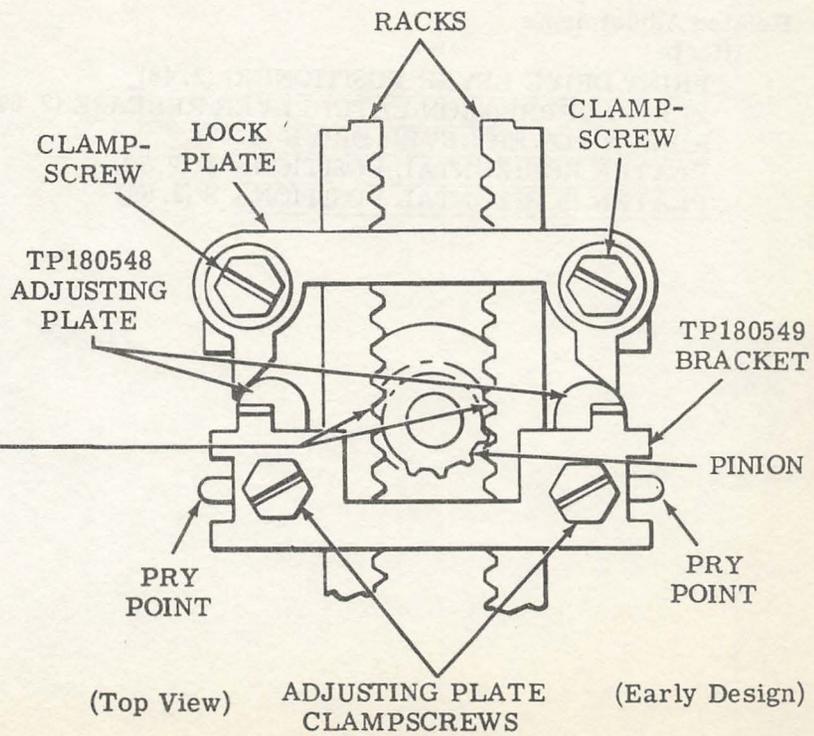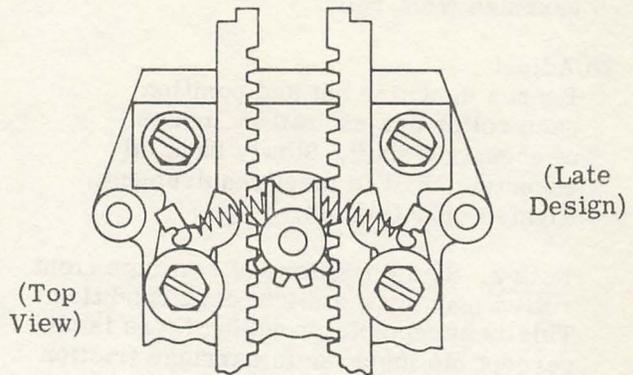

(Top View) (Early Design)

Note 2: Do not loosen both adjusting plate clampscrews at the same time.

2.45 Carriage Area (continued)

REAR RAIL POSITION

(1) To Check

Position the dashpot plunger just outside the dashpot cylinder. With the selector no. 1 code level in the marking condition, rotate the main shaft until the shift slide is in its uppermost position and contacts the stop plate. Take up all play to minimize the required clearance.

Requirement

Min 0.025 inch---Max 0.040 inch between bottom edge of shift slide and top edge of stop plate.

(2) To Check

Condition the typing unit as in (1) To Check above except place carriage to the right with center of the typewheel 1/2 inch from the right hand margin.

Requirement

Min 0.025 inch---Max 0.040 inch between bottom edge of shift slide and top edge of stop plate.

(3) To Check


Calculate the difference between the recorded measurements in To Check (1) and To Check (2) above.

Requirement

Max 0.010 inch difference between recorded measurements.

To Adjust

Loosen two carriage rear rail mounting screws friction tight, and position carriage rear rail using pry point. Tighten mounting screws.

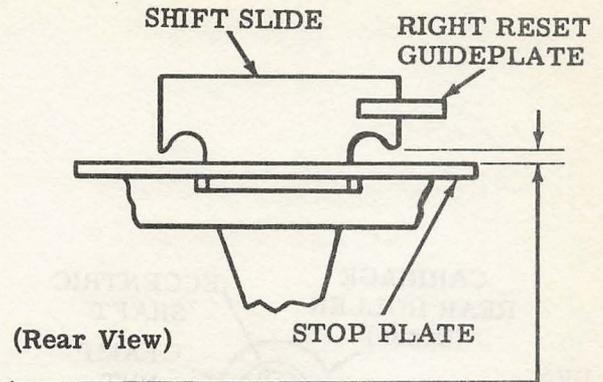


Related Adjustments

Affects

- PRINT DRIVE LEVER POSITIONING (2.48)
- FOURTH PULSE LINKAGE POSITIONING (2.47)
- RESET LEVER POSITIONING (2.49)
- PRINT SUPPRESSION LATCHLEVER RELEASE (2.57)
- PRESSURE ROLLER CLEARANCE (Platen Area) (2.84)
- REAR ROLLER CLEARANCE (2.46)
- RIGHT SLIDE GUIDEPLATE RESET (2.52)
- LEFT SLIDE GUIDEPLATE RESET (2.53)
- PRINT HAMMER TRIP LEVER RELEASE (2.54)
- PRINT HAMMER TRIP LEVER RESET (2.55)
- RIBBON POWER LEVER DRIVE (2.62)
- VERTICAL TYPE ALIGNMENT - F (2.71)
- VERTICAL TYPE ALIGNMENT - S (2.90)

Affected By

- CODEBAR RESET LEVER POSITION (Function Area) (2.28)

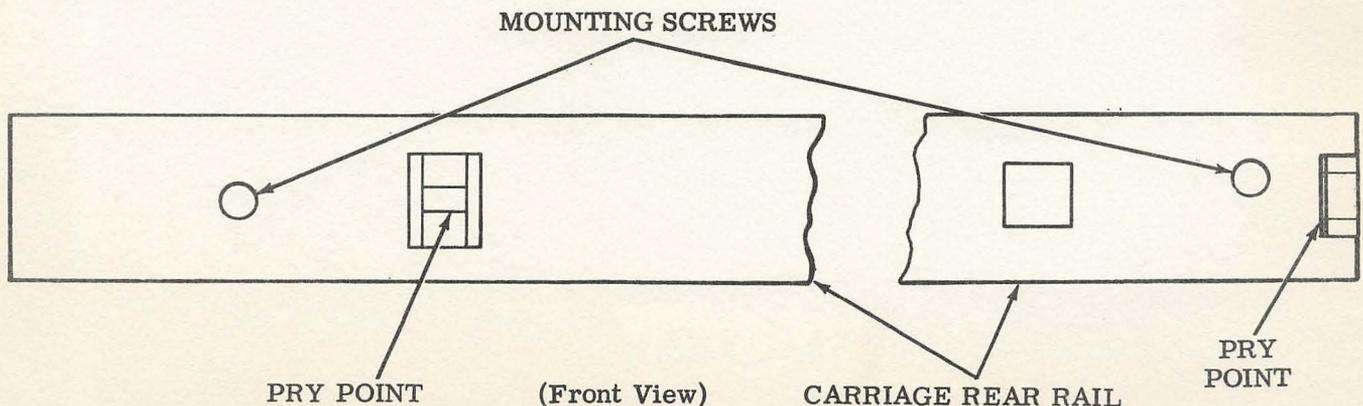

2.46 Carriage Area (continued)

REAR ROLLER CLEARANCE

To Check

Rotate main shaft until carriage drive bail is in rearmost position.

Requirement

Min some--- Max 0.008 inch between carriage rear rail and carriage rear roller (upper).

To Adjust

Loosen clamp nut and position eccentric shaft with hex wrench in hex hole. Tighten clamp nut.

Related Adjustments

Affects

FOURTH PULSE LINKAGE POSITIONING
(2.47)

PRINT DRIVE LEVER POSITIONING
(2.48)

RESET LEVER POSITIONING (2.49)


RIGHT SLIDE GUIDEPLATE RESET
(2.52)

PRINT HAMMER TRIP LEVER RELEASE
(2.54)

PRINT HAMMER TRIP LEVER RESET
(2.55)

Affected By

REAR RAIL POSITION (2.45)

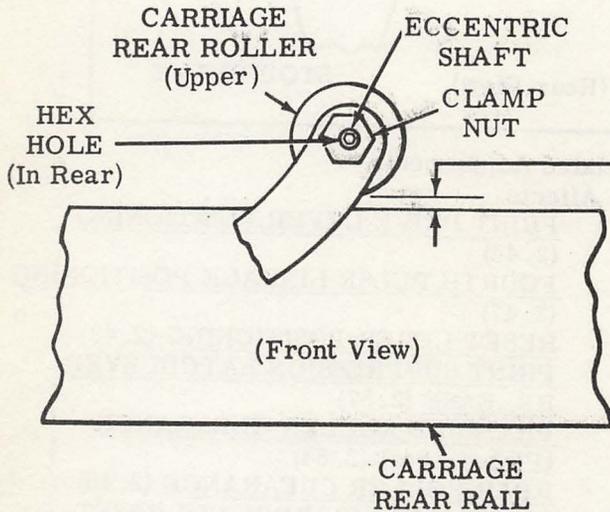

2.47 Carriage Area (continued)

FOURTH PULSE LINKAGE POSITIONING**To Check**


Place carriage to left margin. With an all marking code combination set up in selector, manually operate the typing unit until the function clutch just trips. Take up play in left rack in a downward direction. Check requirement, then repeat requirement check with carriage at the right margin.

Requirement

Min 0.005 inch---Max 0.055 inch
between rotary drive arm and left rack.

To Adjust

Bend pulse lever using pry points.

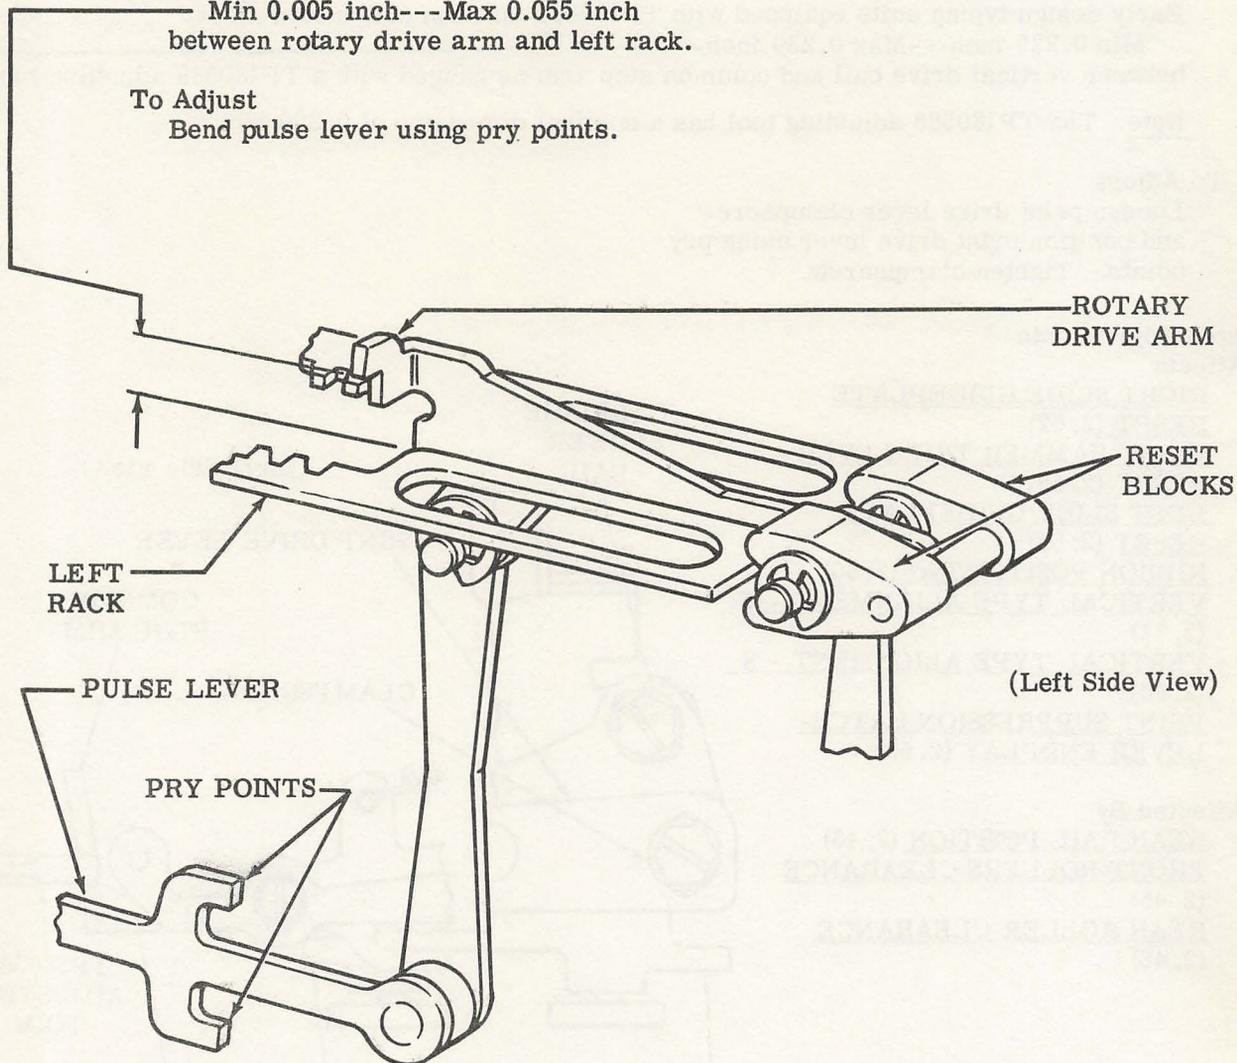**Related Adjustments****Affected By**

- CODEBAR RESET LEVER POSITION (Function Area) (2.28)
- REAR RAIL POSITION (2.45)
- REAR ROLLER CLEARANCE (2.46)

2.48 Carriage Area (continued)

(B) PRINT DRIVE LEVER POSITIONING

To Check

Place typing unit in stop condition and move carriage until its power bail rollers are positioned directly above the carriage drive link. Take up play in vertical drive bail in a downward direction, and take up play in common stop arm toward the left.

Requirement

Late design typing units equipped with TP183993 function clutch cam sleeve

Min 0.065 inch---Max 0.090 inch
between vertical drive bail and common stop arm.

Early design typing units equipped with TP180806 function clutch cam sleeve

Min 0.229 inch---Max 0.239 inch
between vertical drive bail and common stop arm as gauged with a TP180588 adjusting tool.

Note: The TP180588 adjusting tool has a nominal dimension of 0.234 inch.

To Adjust

Loosen print drive lever clampscrew and position print drive lever using pry points. Tighten clampscrew.

Related Adjustments

Affects

RIGHT SLIDE GUIDEPLATE

RESET (2.52)

PRINT HAMMER TRIP LEVER

RESET (2.55)

LEFT SLIDE GUIDEPLATE

RESET (2.53)

RIBBON POSITIONING (2.56)

VERTICAL TYPE ALIGNMENT - F
(2.71)

VERTICAL TYPE ALIGNMENT - S
(2.90)


PRINT SUPPRESSION LATCH-LEVER ENDPLAY (2.50)

Affected By

REAR RAIL POSITION (2.45)

FRONT ROLLERS CLEARANCE
(2.45)

REAR ROLLER CLEARANCE
(2.46)

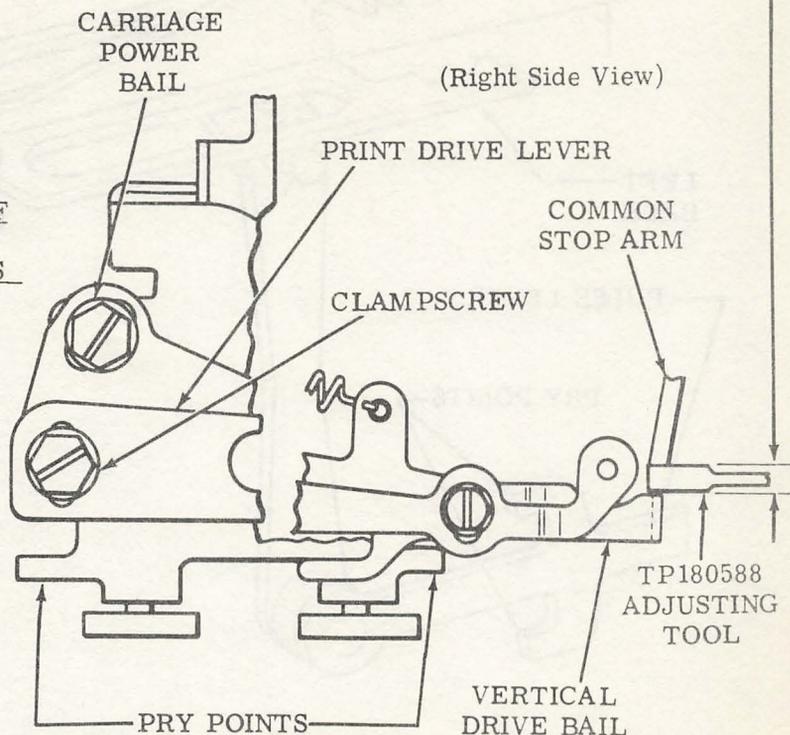

2.49 Carriage Area (continued)

RESET LEVER POSITIONING

Requirement

When typing unit returns to stop condition, racks should be completely reset.

To Adjust

Place carriage in center of typing unit. Loosen clampscrew and allow positioning spring to fully reset racks. Tighten clampscrew.

Related Adjustments


Affects

RIBBON POWER LEVER DRIVE (2.62)


Affected By

REAR RAIL POSITION (2.45)

REAR ROLLER CLEARANCE (2.46)

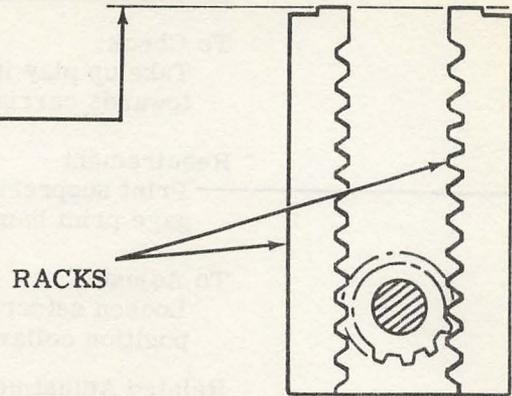

(Top View)

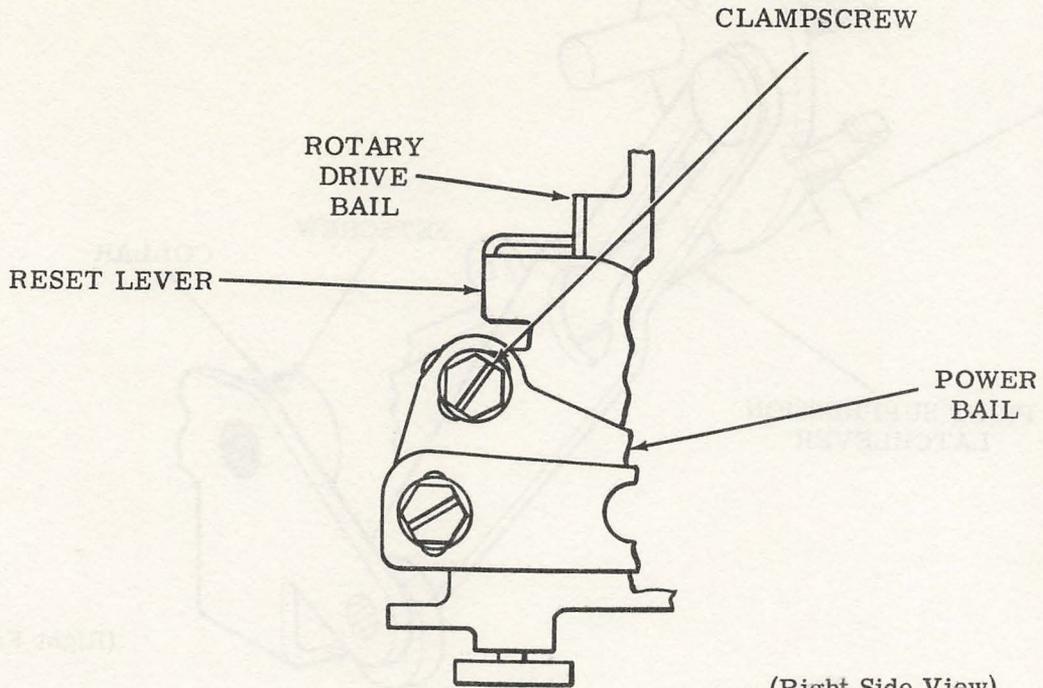

(Right Side View)

2.50 Carriage Area (continued)

PRINT SUPPRESSION LATCHLEVER ENDPLAY

To Check

Take up play in print suppression latchlever towards carriage casting.

Requirement

Print suppression latchlever should fully engage print hammer bail with no binds.


To Adjust

Loosen setscrew with hex key wrench and position collar. Tighten setscrew.

Related Adjustments


Affected By

PRINT DRIVE LEVER POSITIONING (2.48)

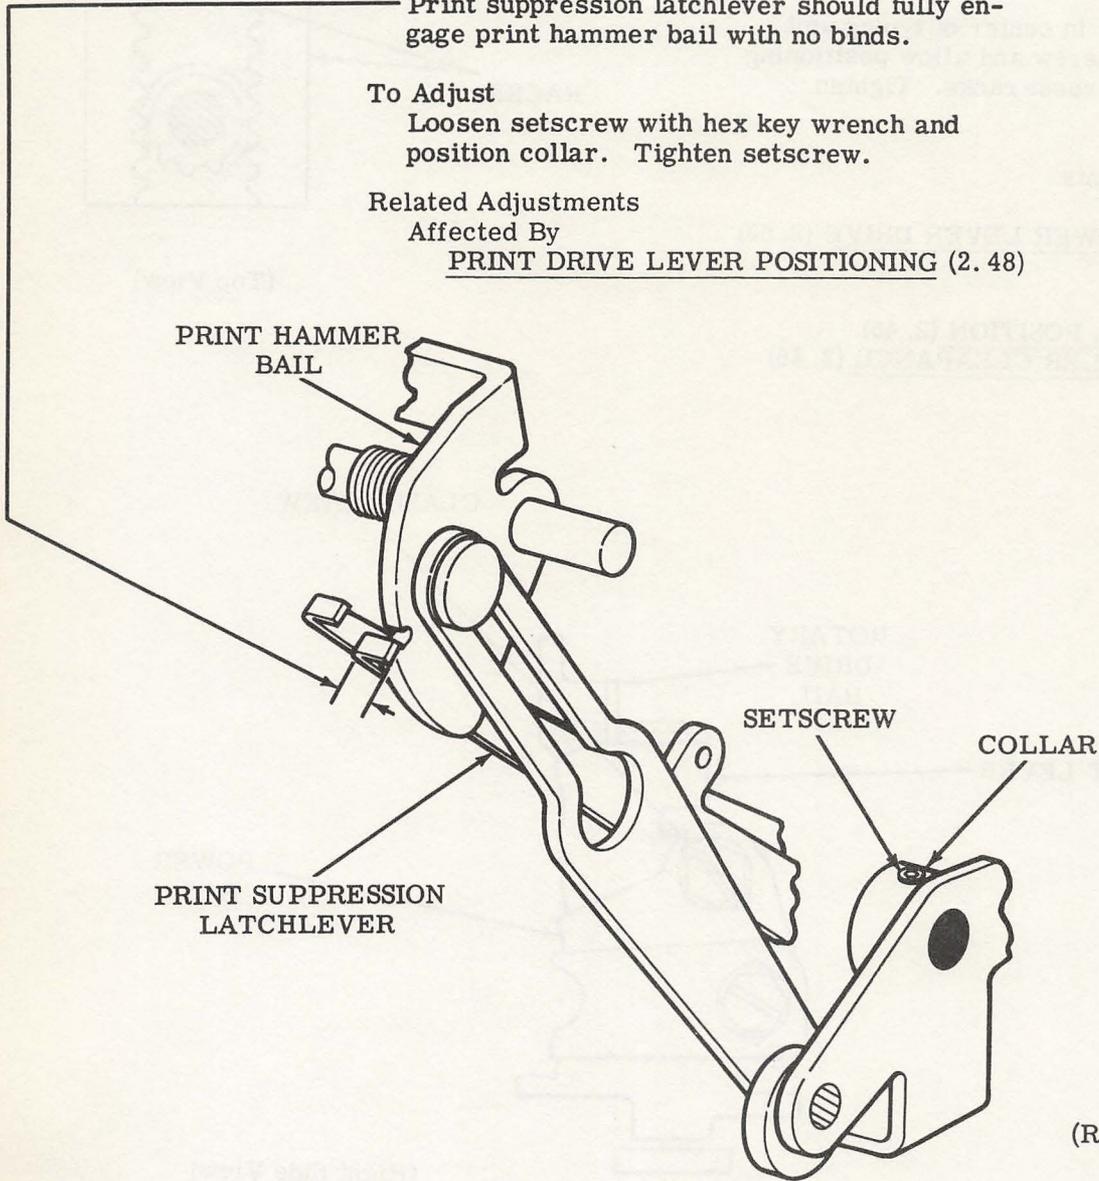

(Right Front View)

2.51 Carriage Area (continued)

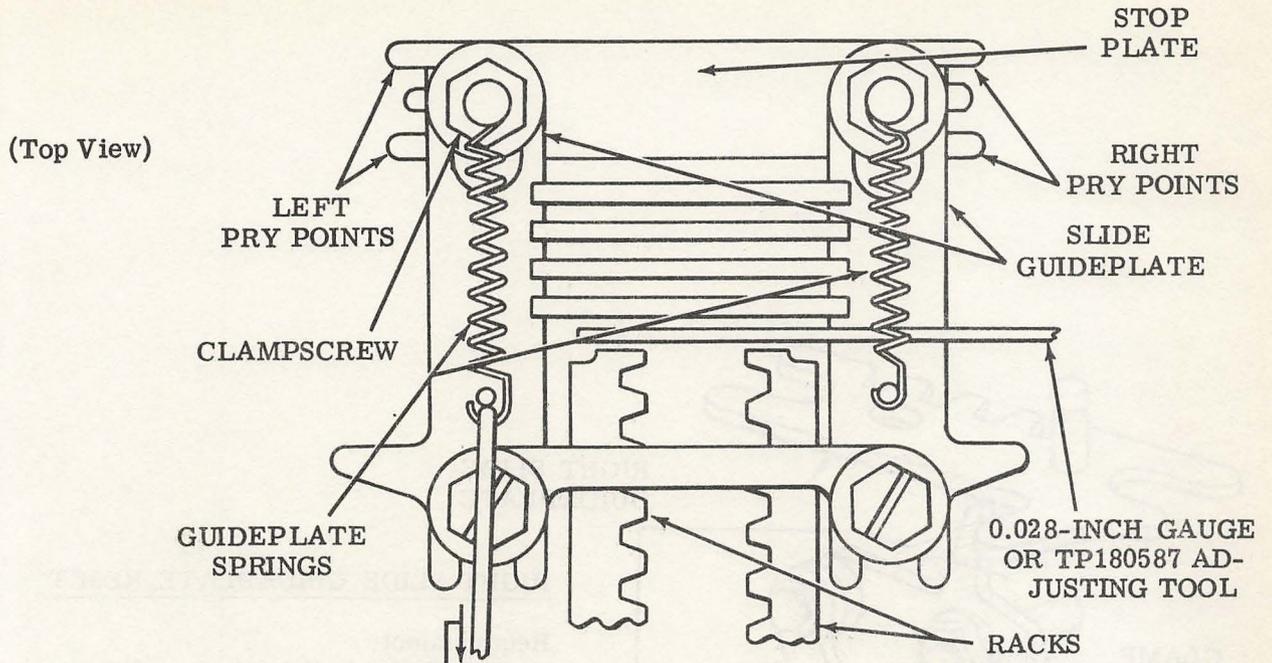

TYPEWHEEL POSITIONING (Preliminary)

Note 1: Final print alignment is found in 2.125.

To Check

Set up code combination in selector of a character in counterclockwise field of typewheel. Rotate main shaft until carriage drive bail is in rearmost position. Check to see if vertical row containing character is properly selected. Repeat for a character in clockwise field.

Requirement

Typewheel positioning correct in both clockwise and counterclockwise directions.

To Adjust

Place typing unit in stop condition. Open up LEFT SLIDE GUIDEPLATE RESET (2.53) and RIGHT SLIDE GUIDEPLATE RESET (2.52) adjustments. Loosen two clampscrews friction tight. Place either 0.028-inch guage or TP180587 adjusting tool across end of racks. Fold reset lever in place and position stop plate so that entire slide assembly is tight against racks and tool.

Related Adjustments

Affects

- LEFT SLIDE GUIDEPLATE RESET (2.53)
- RIGHT SLIDE GUIDEPLATE RESET (2.52)

SLIDE GUIDEPLATE SPRINGS


Note 1: To check slide guideplate springs, it is necessary to remove the carriage mechanism from the typing unit. See appropriate disassembly and reassembly section. Do not check unless there is reason to believe that the slide guideplate springs will not meet their requirement.

Requirement

Min 1 oz---Max 3 oz _____
to pull each spring to installed length.

Note 2: Check right and left springs.

2.52 Carriage Area (continued)

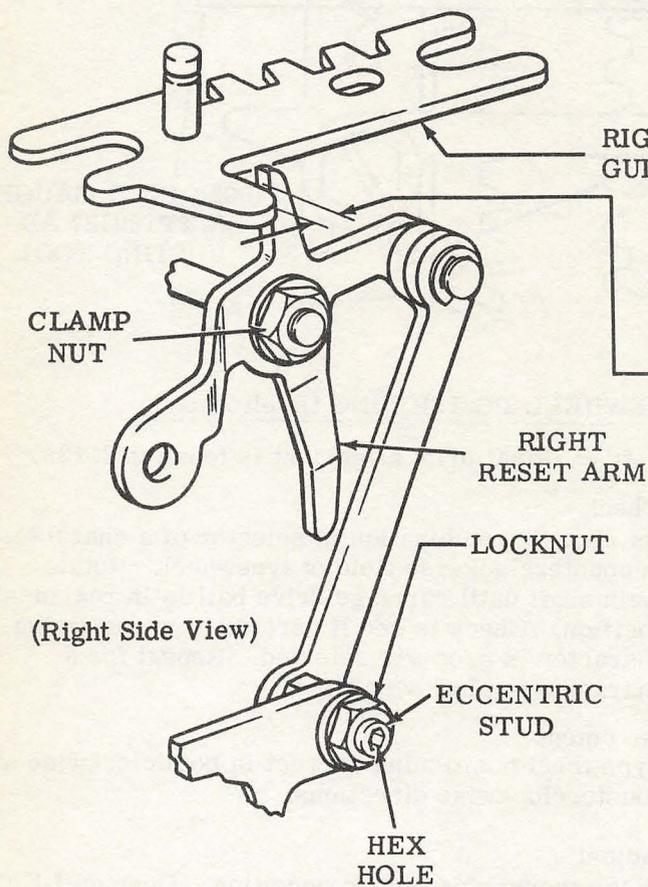

RIGHT SLIDE
GUIDEPLATE

RIGHT SLIDE GUIDEPLATE RESET

Requirement

With typing unit in stop condition

Min some---Max 0.015 inch

between right slide guideplate and the right reset arm when right and left slide guideplates are held toward front to make clearance a maximum.

To Adjust

Loosen eccentric stud locknut. Rotate eccentric stud with hex wrench in hex hole. Tighten locknut.

Related Adjustments

Affects

LEFT SLIDE GUIDPLATE RESET (2.53)

PRINT HAMMER TRIP LEVER

RELEASE (2.54)

RIBBON POSITIONING (2.56)

Affected By

REAR RAIL POSITION (2.45)

REAR ROLLER CLEARANCE (2.46)

PRINT DRIVE LEVER POSITIONING (2.48)

TYPEWHEEL POSITIONING (2.51)

2.53 Carriage Area (continued)

LEFT SLIDE GUIDEPLATE RESET**Requirement**

With typing unit in stop condition

Min some---Max 0.015 inch
between left slide guideplate and left reset
arm when the right and left slide guide-
plates are held toward the front to make
clearance a maximum.

To Adjust

Loosen left reset arm clamp nut. Position
left reset arm using pry point. Tighten
clamp nut.

Related Adjustments**Affects**

RIBBON POSITIONING (2.56)


Affected By

REAR RAIL POSITION (2.45)

PRINT DRIVE LEVER POSITIONING (2.48)

TYPEWHEEL POSITIONING (2.51)

RIGHT SLIDE GUIDEPLATE RESET (2.52)

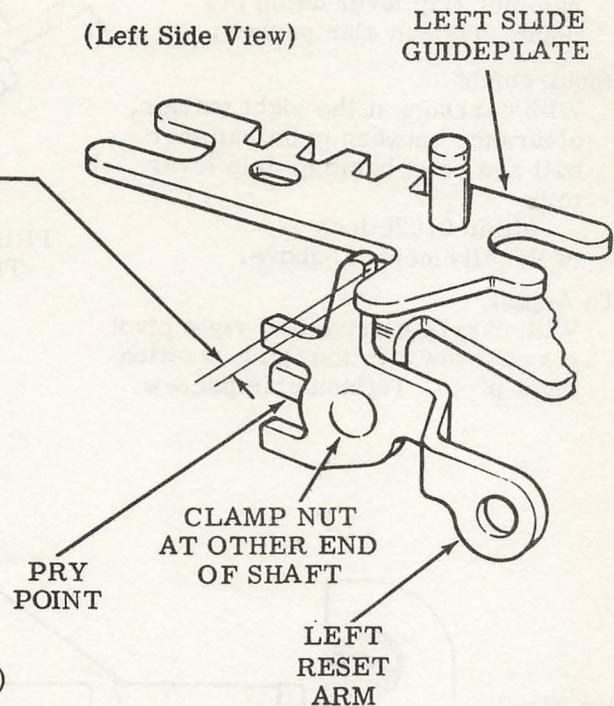

2.54 Carriage Area (continued)

PRINT HAMMER TRIP LEVER RELEASE

(Right Side View)

To Check

Place carriage at left margin. Rotate main shaft until carriage drive bail reaches its rearmost position. Take up play to minimize required clearance.

(1) Requirement

Min 0.040 inch---Max 0.110 inch between print hammer bail and print hammer trip lever.

To Adjust


Loosen print hammer trip lever clampscrew and position print hammer trip lever using pry point. Tighten clampscrew.

(2) Requirement

With carriage at the right margin, clearance between print hammer bail and print hammer trip lever to be within 0.020 inch of Requirement (1) above.

To Adjust

With carriage drive bail right pivot clampscrew friction tight, position right pivot. Tighten clampscrew.

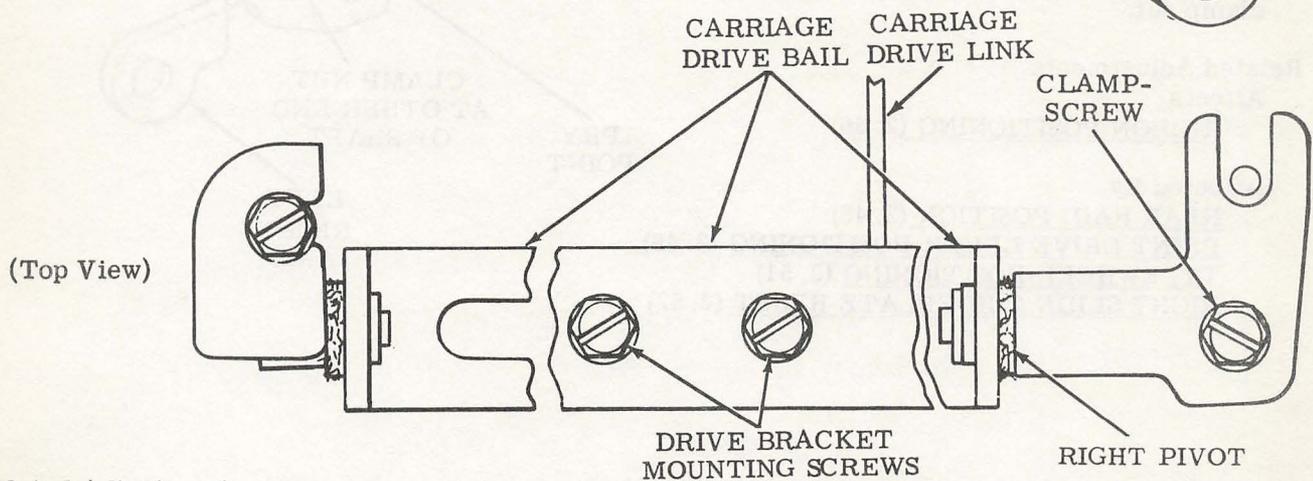**Related Adjustments****Affects**

FEED PAWL STOP POSITION (Spacing Area) (2.64)
PRINT HAMMER TRIP LEVER RESET (2.55)

RIGHT SLIDE GUIDEPLATE RESET (2.52)

REAR RAIL POSITION (2.45)

REAR ROLLER CLEARANCE (2.46)

2.55 Carriage Area (continued)

PRINT HAMMER TRIP LEVER RESET**Requirement**

With typing unit in stop condition
 Min 0.010 inch---Max 0.050 inch
 between print hammer bail and print
 hammer trip lever.


To Adjust

Loosen clamp nut and position print
 hammer reset arm eccentric pivot
 with hex key wrench in hex hole.
 Tighten clamp nut.

Note: Keep high part of eccentric
 pivot toward front of typing unit.

Related Adjustment**Affected By**

REAR RAIL POSITION (2.45)
REAR ROLLER CLEARANCE (2.46)
PRINT DRIVE LEVER POSITIONING (2.48)
PRINT HAMMER TRIP LEVER RELEASE (2.54)

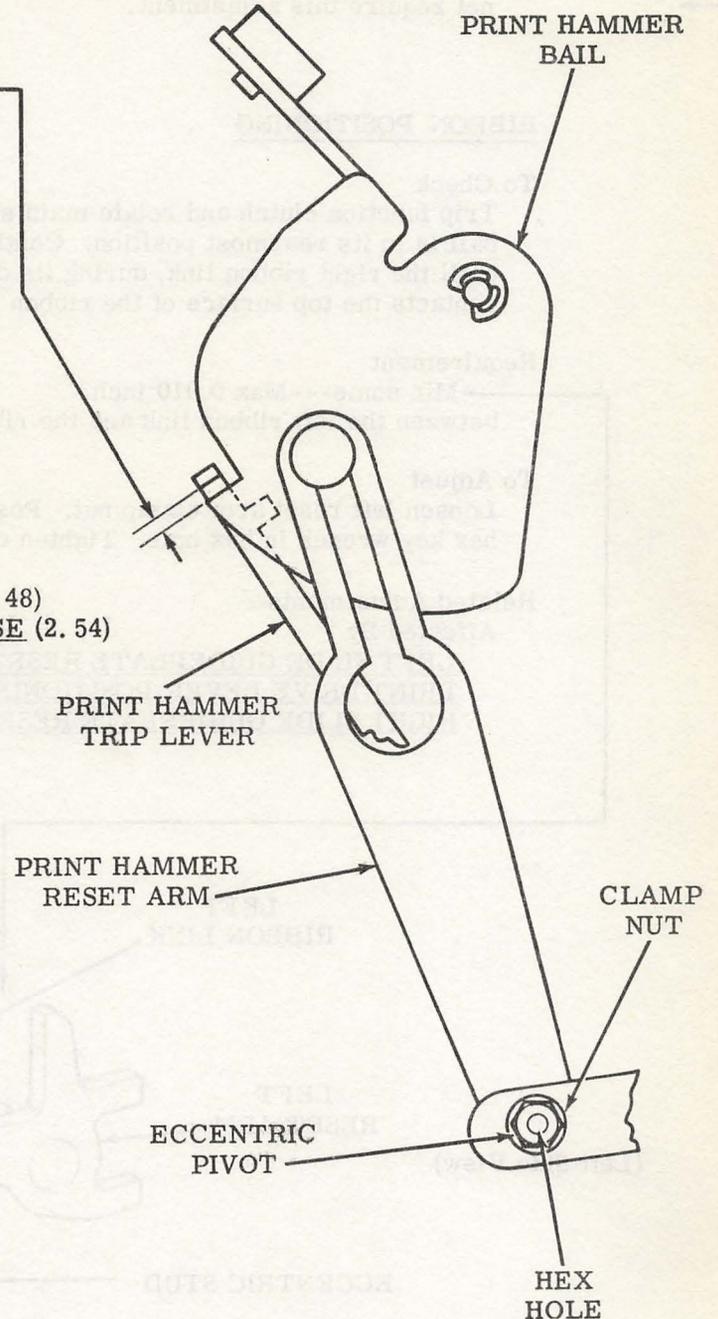

2.56 Carriage Area (continued)

Note: Do not perform the following adjustment on typing units equipped with the two-color printing feature. Typing units with TP186732 ribbon link do not require this adjustment.

RIBBON POSITIONING

To Check

Trip function clutch and rotate main shaft until carriage drive bail is in its rearmost position. Continue rotating main shaft until the right ribbon link, during its downward travel, just contacts the top surface of the ribbon guide.

Requirement

Min some---Max 0.010 inch between the left ribbon link and the ribbon guide as gauged by eye.


To Adjust

Loosen left reset arm clamp nut. Position eccentric stud using hex key wrench in hex hole. Tighten clamp nut.

Related Adjustments

Affected By

- LEFT SLIDE GUIDEPLATE RESET (2.53)
- PRINT DRIVE LEVER POSITIONING (2.48)
- RIGHT SLIDE GUIDEPLATE RESET (2.52)

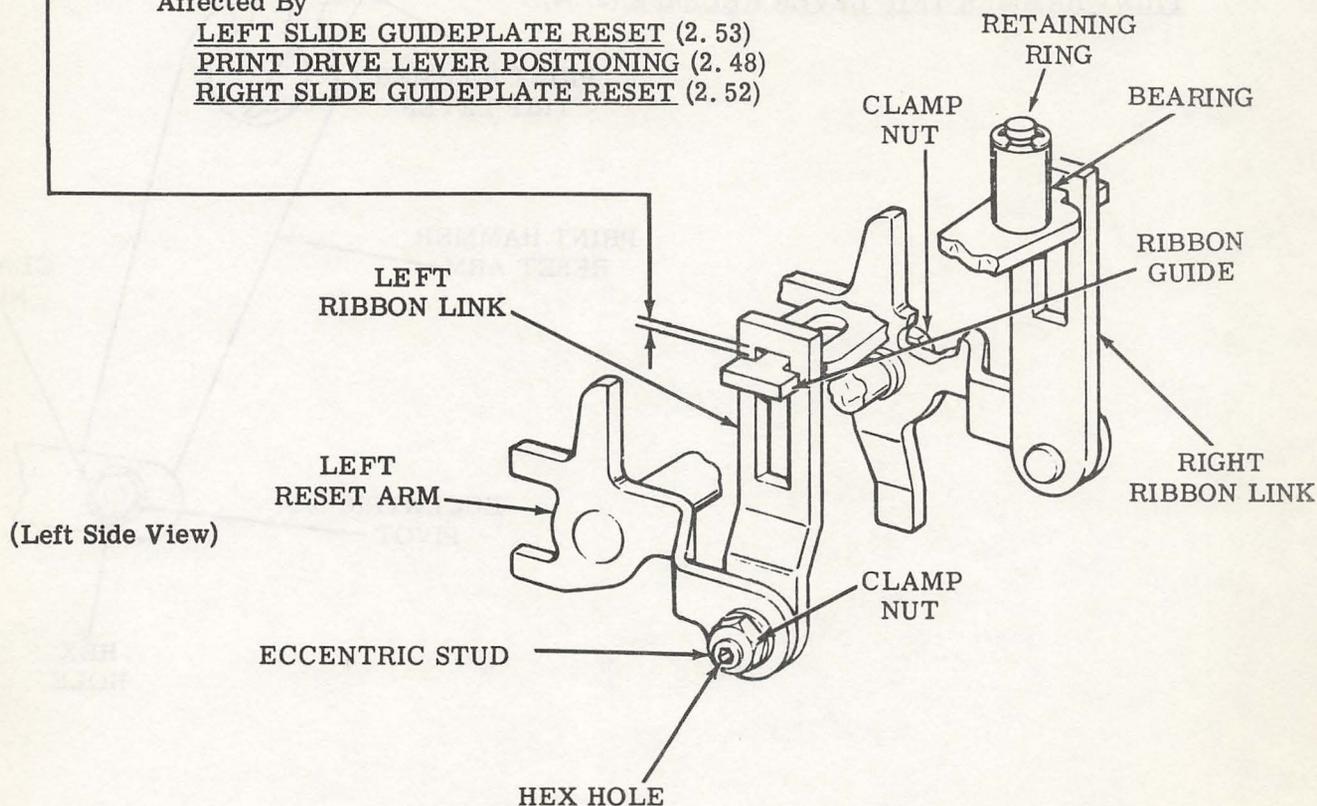

2.57 Carriage Area (continued)

PRINT SUPPRESSION LATCHLEVER RELEASE

To Check

Place carriage approximately 1/2 inch from left margin. Set up the "T" (--3-5-78) code combination in the selector. Rotate main shaft until the carriage drive bail reaches its rearmost position. The print suppression codebar must be all the way (fully) up.

Requirement

—Min 0.015 inch---Max 0.055 inch

between print suppression latchlever and print hammer bail when play in print suppression latchlever is taken up to make gap a minimum. ←

To Adjust

With print suppression latchlever held against print hammer bail, bend print suppression latchlever using pry points.

Note: Use top pry point to make gap larger. Use bottom pry point to make gap smaller.


Related Adjustments

Affected By

CODEBAR RESET LEVER POSITION (Function Area) (2.28)


FRONT ROLLERS CLEARANCE (2.43)

REAR RAIL POSITION (2.45)

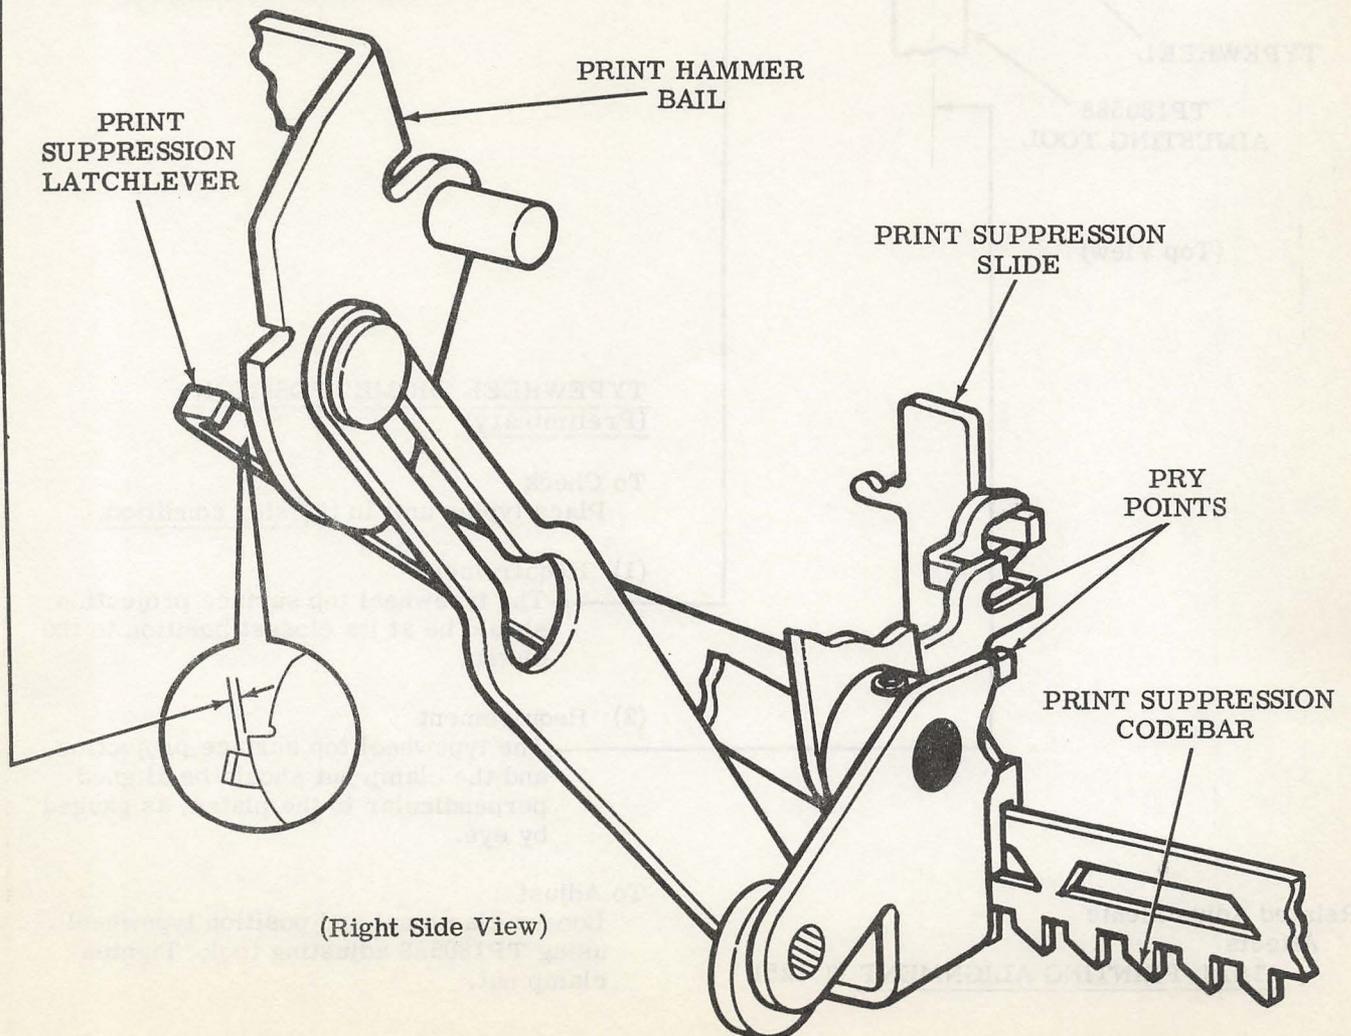

(Right Side View)

2. 58 Carriage Area (continued)

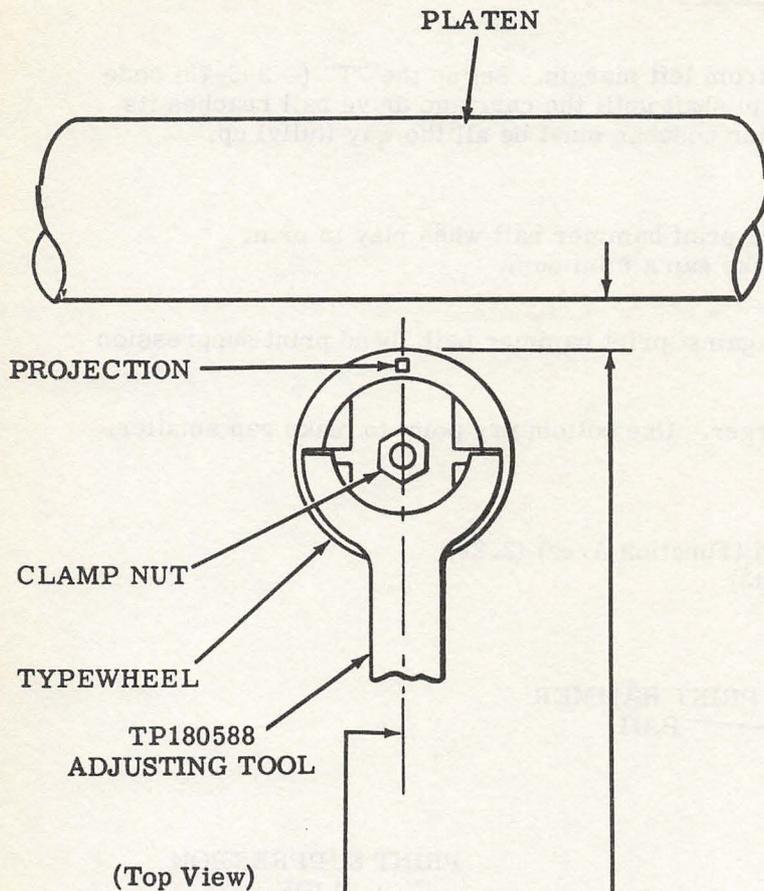

TYPEWHEEL "HOME" POSITION
(Preliminary)

To Check

Place typing unit in the stop condition.

(1) Requirement

The typewheel top surface projection should be at its closest position to the platen.

(2) Requirement

The typewheel top surface projection and the clamp nut should be aligned perpendicular to the platen, as gauged by eye.

Related Adjustments
Affects

FINAL PRINTING ALIGNMENT (2.125)

To Adjust



Loosen clamp nut and position typewheel using TP180588 adjusting tool. Tighten clamp nut.

2.59 Carriage Area (continued)

PRINT HAMMER BAIL SPRING

Requirement

With typing unit in stop condition
 Min 3 oz---Max 4-1/2 oz
 to start print hammer moving.

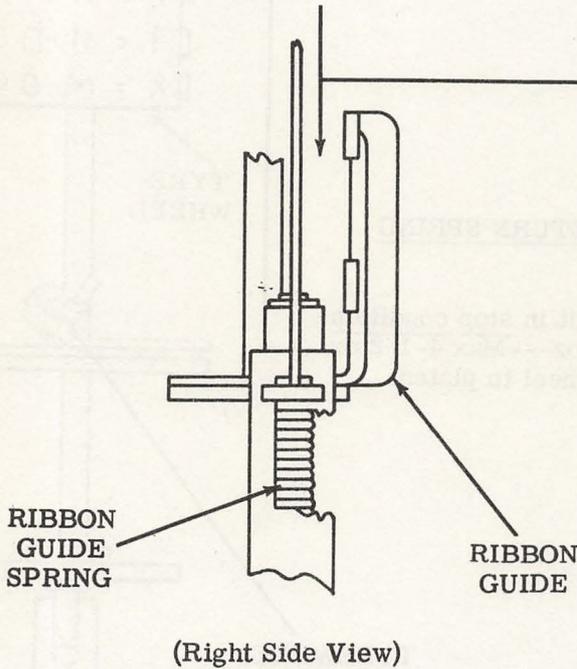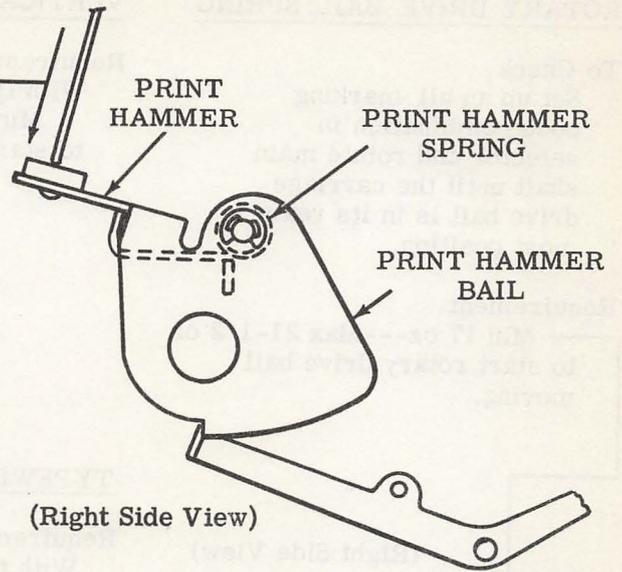


RIBBON GUIDE SPRING

To Check

Remove ribbon from ribbon guide. Trip selector clutch and rotate main shaft until carriage drive bail is in rearmost position.

Requirement

Min 6 oz---Max 9 oz
 to start ribbon guide moving.

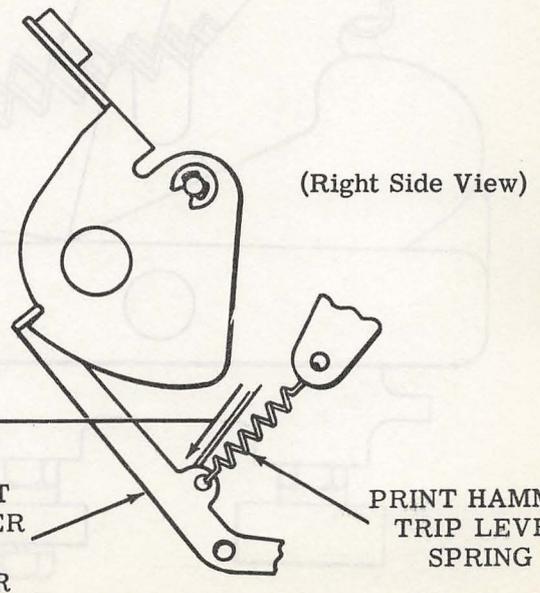

PRINT HAMMER TRIP LEVER SPRING

Requirement

With typing unit in stop condition
 Min 1 oz---Max 2-1/2 oz
 to start print hammer trip lever moving.

2.60 Carriage Area (continued)

ROTARY DRIVE BAIL SPRING

To Check

Set up an all marking code combination in selector and rotate main shaft until the carriage drive bail is in its rear-most position.

Requirement

Min 17 oz---Max 21-1/2 oz to start rotary drive bail moving.

VERTICAL DRIVE BAIL SPRING


Requirement

With typing unit in stop condition
Min 13 oz---Max 18 oz to start typewheel moving.


TYPEWHEEL RETURN SPRING

Requirement

With typing unit in stop condition
Min 2-1/2 oz---Max 4-1/2 oz to move typewheel to platen.

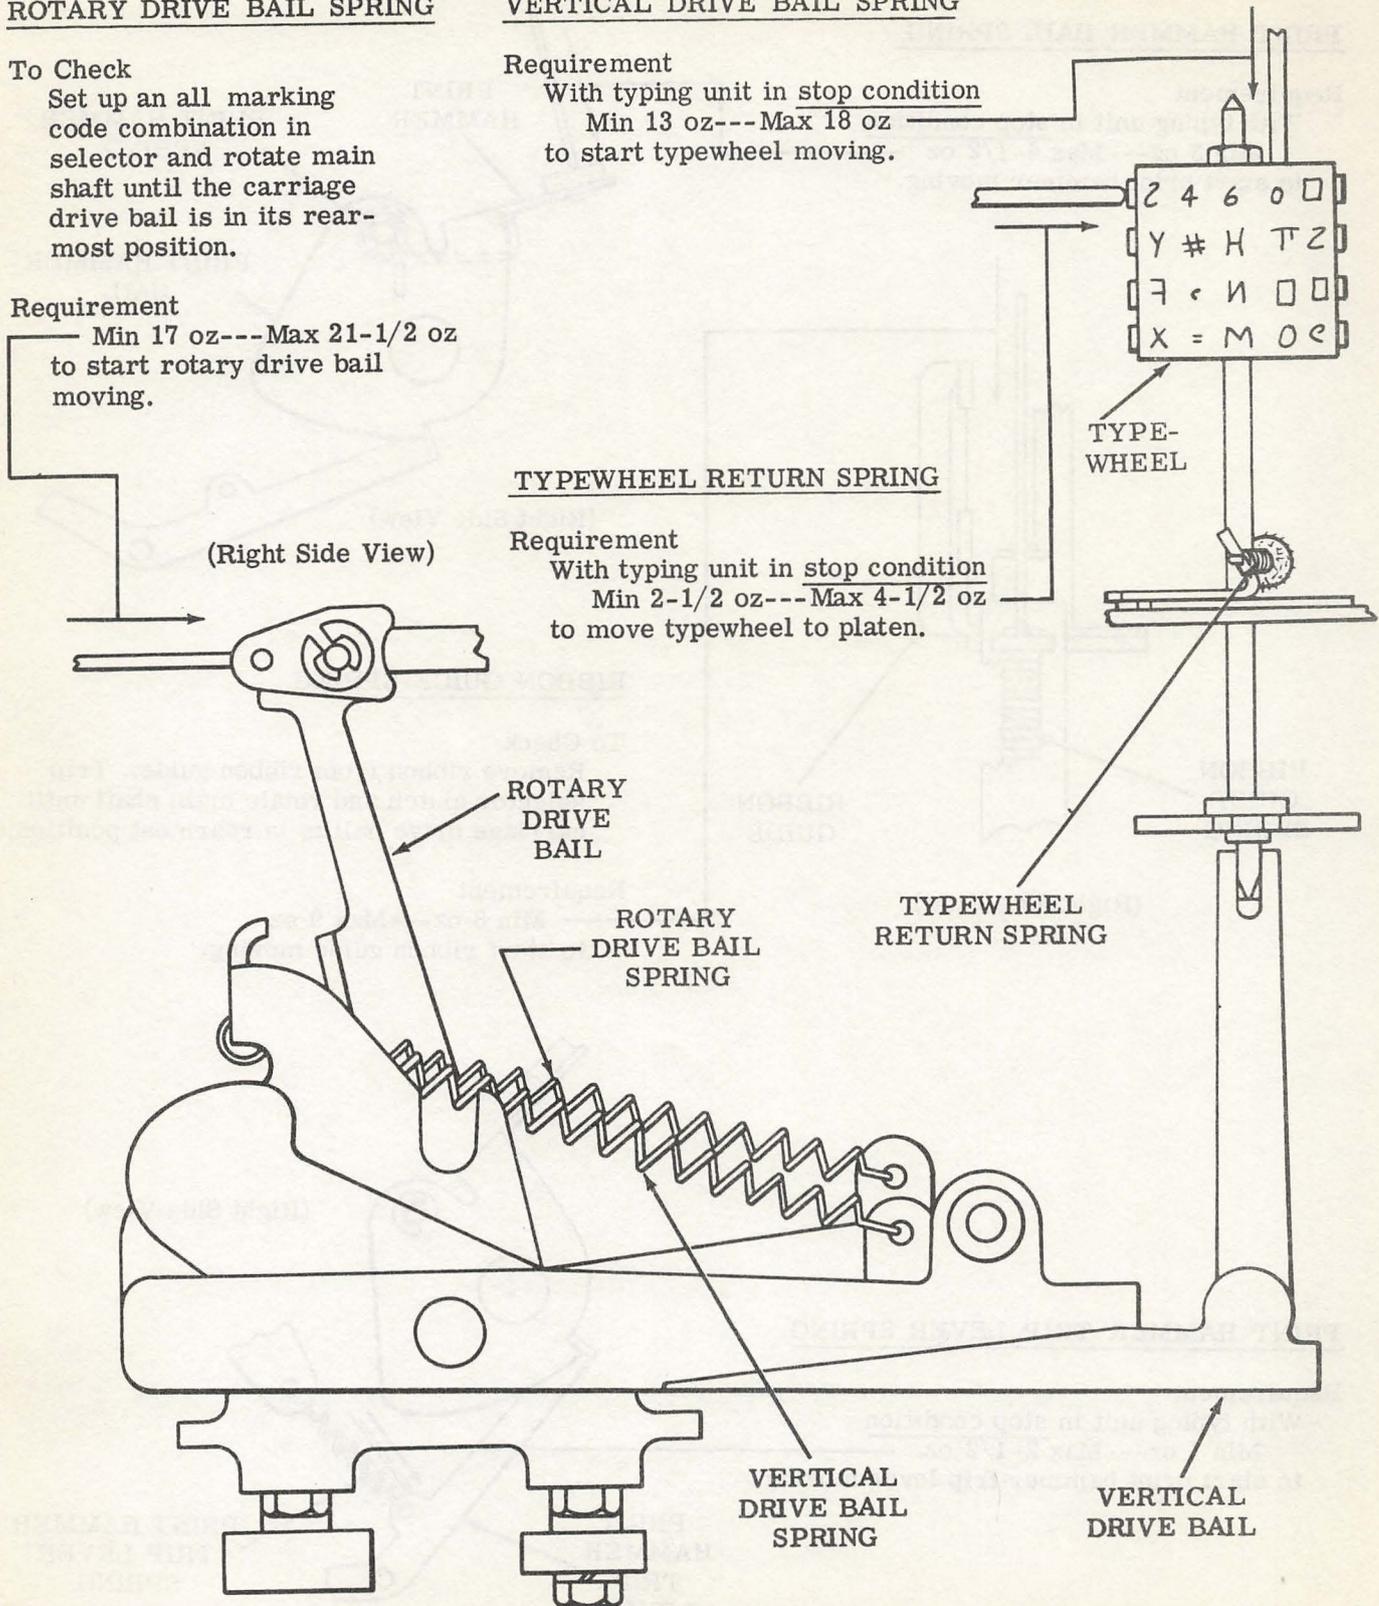

2. 61 Carriage Area (continued)

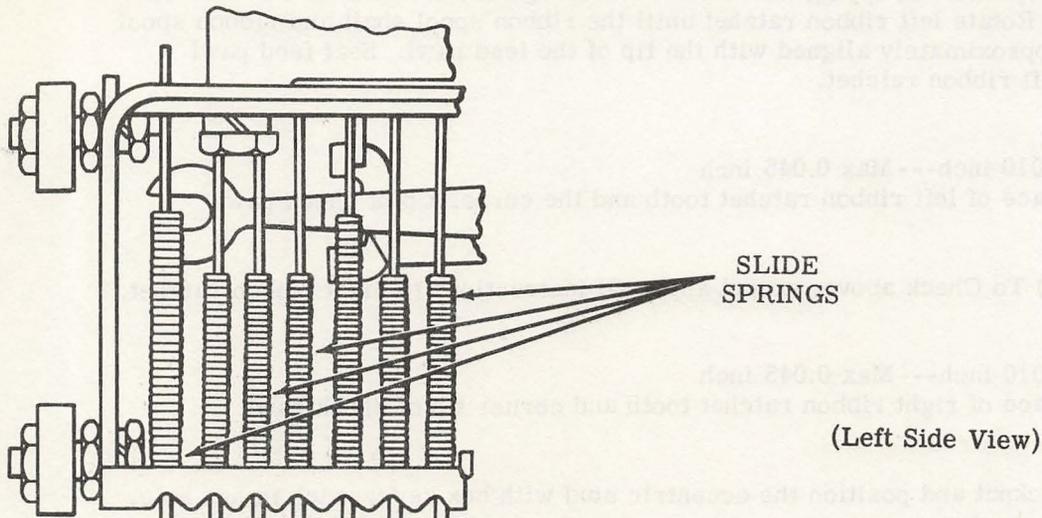

(Left Side View)

SLIDE SPRINGS

Note: To check tensions of the slide springs, it is necessary to remove the carriage mechanism from typing unit. For instructions see appropriate disassembly and reassembly section. Do not check unless there is reason to believe that the slide springs do not meet their requirements.

Requirement

With carriage power bail in its stop position, towards the front, it should require values as shown in chart, to start slides moving.

* Print Suppression

SLIDE NO.	5 AND 7	4	2 AND 3	1	PS*
Min	1/4 oz	3-3/4 oz	2 oz	1/4 oz	3-3/4 oz
Max	1-1/4 oz	4-1/2 oz	3 oz	1 oz	4-1/2 oz

2.62 Carriage Area (continued)

RIBBON POWER LEVER DRIVE

(1) To Check

Manually operate the typing unit until the carriage drive bail is in the rearmost position. Rotate left ribbon ratchet until the ribbon spool shaft and ribbon spool pin are approximately aligned with the tip of the feed pawl. Seat feed pawl against left ribbon ratchet.

Requirement

Min 0.010 inch---Max 0.045 inch
between face of left ribbon ratchet tooth and the corner tip of check pawl.

(2) To Check

Repeat (1) To Check above, except apply all instructions to right ribbon ratchet.

Requirement

Min 0.010 inch---Max 0.045 inch
between face of right ribbon ratchet tooth and corner tip of check pawl.

To Adjust


Loosen locknut and position the eccentric stud with hex key wrench in hex hole. Tighten locknut.

Note: Position eccentric stud to the bottom of its mounting slot when tightening locknut.

Related Adjustments

Affected By

- FRONT ROLLERS CLEARANCE (2.43)
- REAR RAIL POSITION (2.45)
- RESET LEVER POSITIONING (2.49)

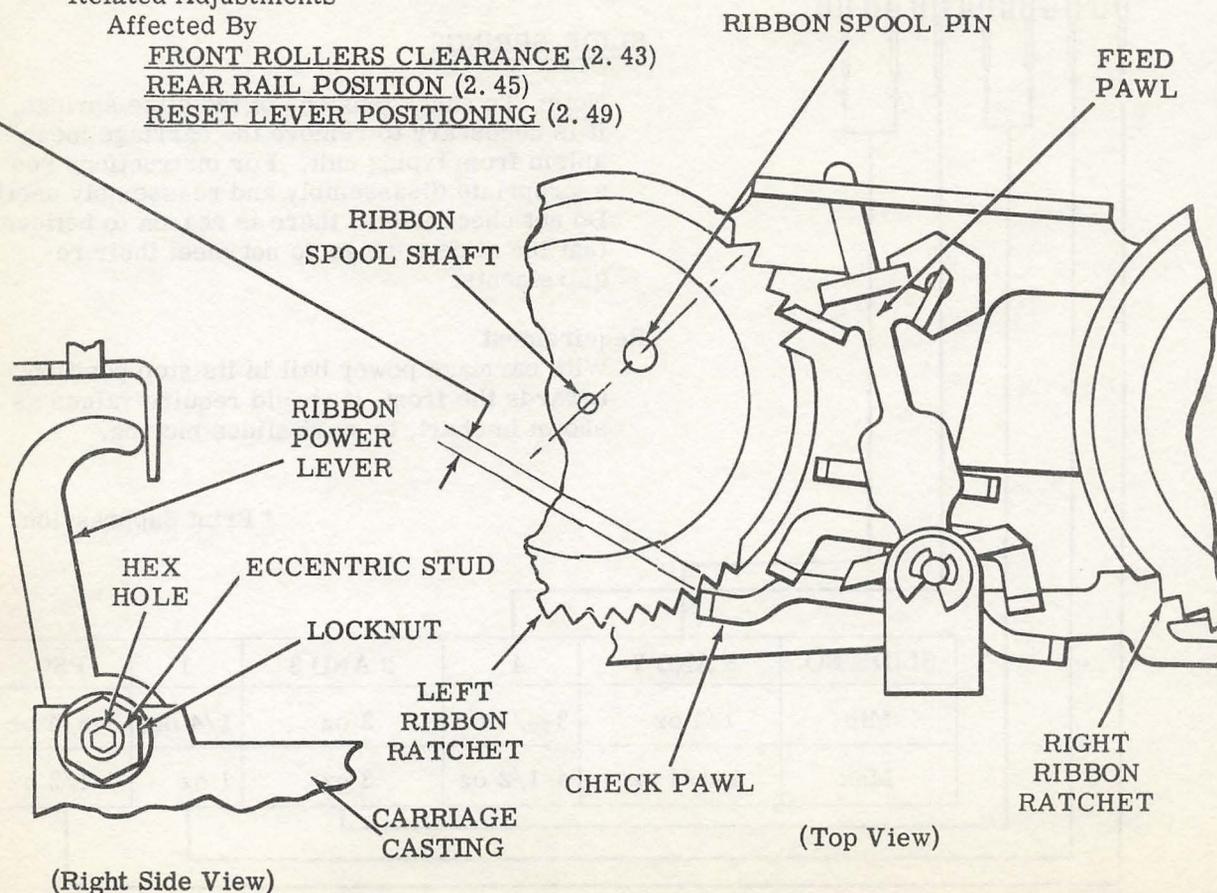

2.63 Carriage Area (continued)

RIBBON RATCHET SPRING

Requirement

With feed and check pawls disengaged from ratchet wheel.


Min 1-1/2 oz---Max 3-1/2 oz
to start ratchet wheel moving.

RIBBON REVERSE ARM SPRING

Requirement

With typing unit in stop condition and ribbon removed

Min 1-1/2 oz---Max 3 oz
to start reverse arm moving.

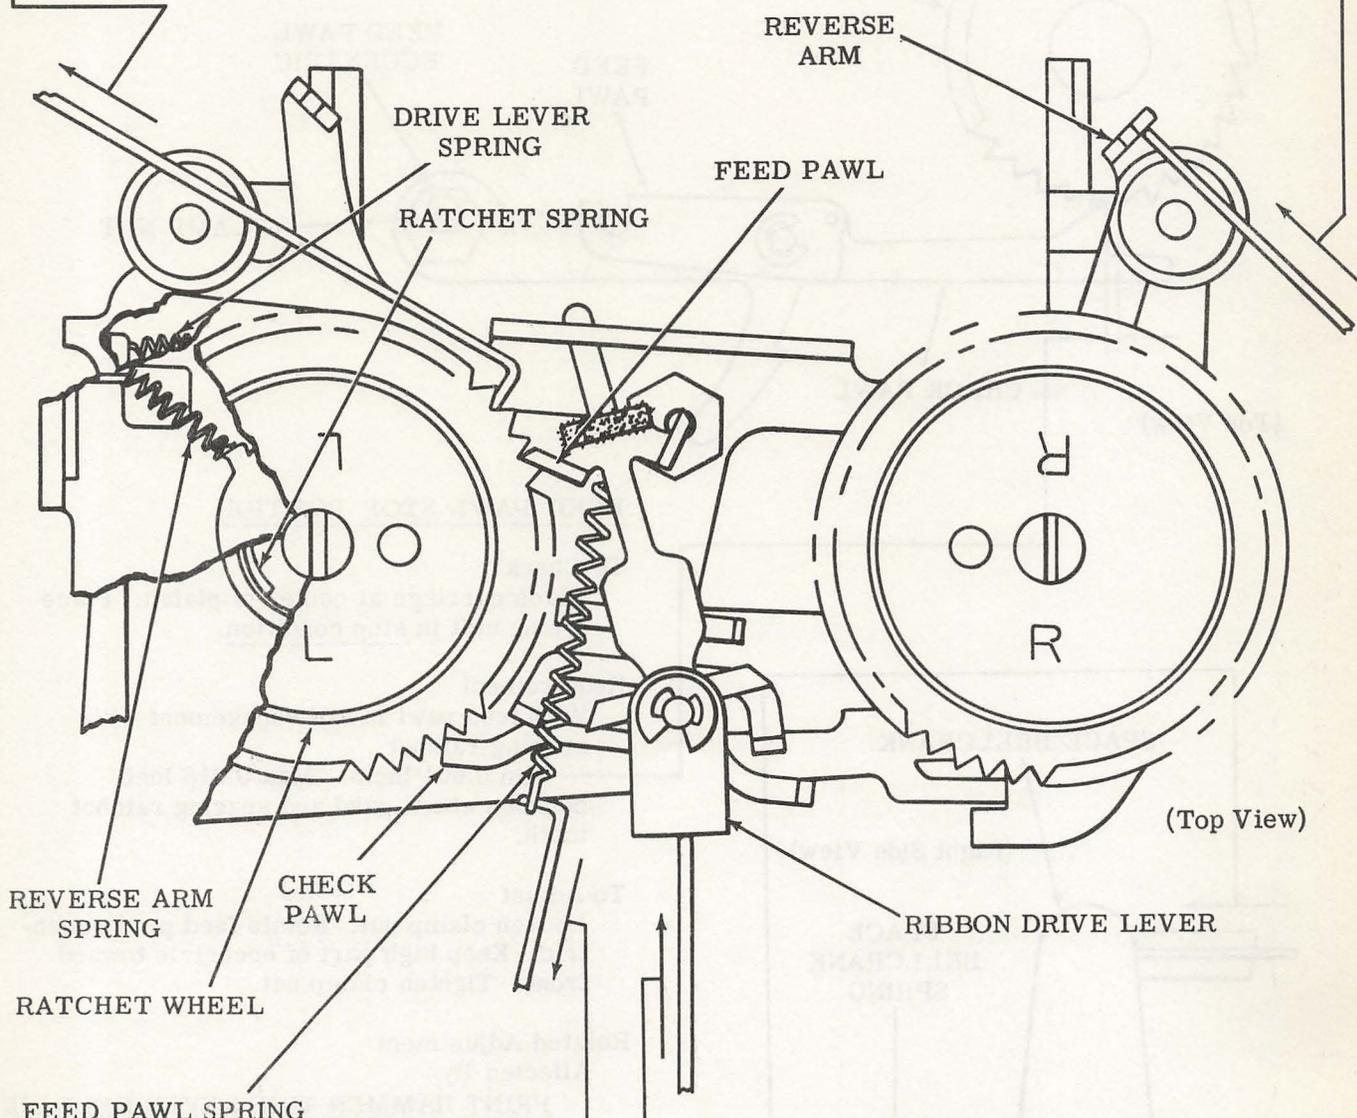

(Top View)

RIBBON FEED PAWL SPRING

Requirement

With typing unit in stop condition

Min 2-1/2 oz---Max 4 oz
to pull feed pawl spring to installed length.


RIBBON DRIVE LEVER SPRING

Requirement

With typing unit in stop condition

Min 5-1/2 oz---Max 9 oz
to start ribbon drive lever moving.

2.64 Spacing Area

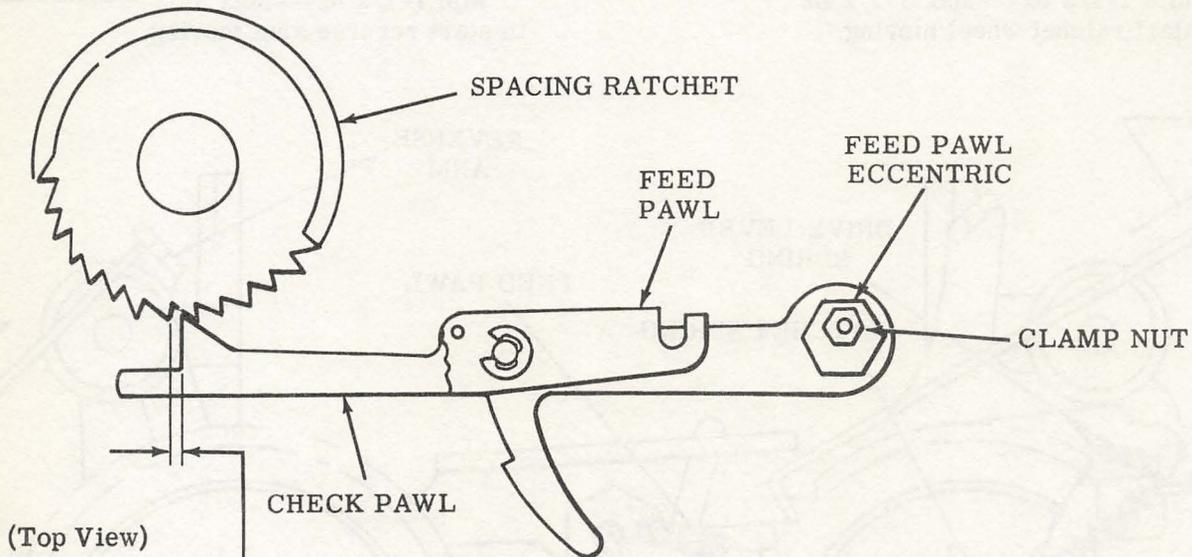

(Top View)

FEED PAWL STOP POSITION

To Check
Place carriage at center of platen. Place typing unit in stop condition.


Requirement
With feed pawl in full engagement with spacing ratchet
— Min 0.004 inch---Max 0.018 inch
between check pawl and spacing ratchet tooth.

To Adjust
Loosen clamp nut. Rotate feed pawl eccentric. Keep high part of eccentric toward front. Tighten clamp nut.

Related Adjustment
Affected By
PRINT HAMMER TRIP LEVER RELEASE
(Carriage Area) (2.54)

SPACE BELLCRANK SPRING

Requirement
With typing unit in stop condition
— Min 3 oz---Max 5 oz
to start bellcrank moving.

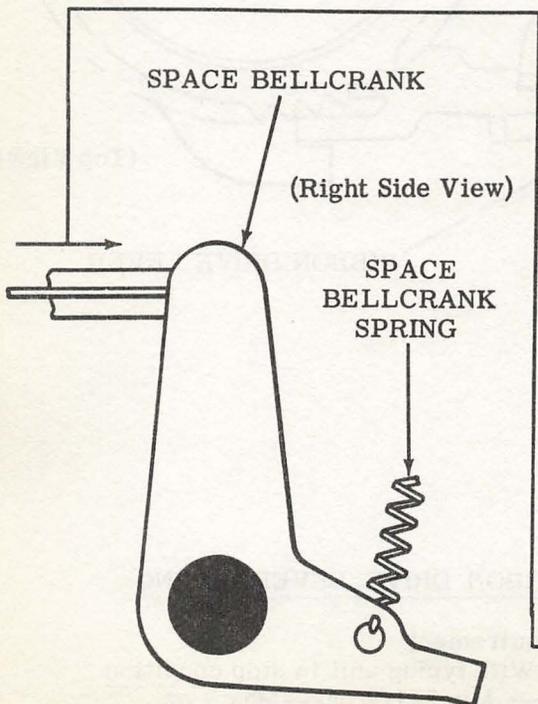

(Right Side View)

2. 65 Spacing Area (continued)


SPACE SUPPRESSION LEVER CLEARANCE — PRINTING

To Check

Move carriage to the center of platen. Set up the @ code combination (-----78) in the selector. Rotate the main shaft until the front vertical surface of the right end of feed pawl is aligned with notch on space suppression lever.

(1) Requirement

With all play taken up to minimize gap
Min 0.005 inch---Max 0.040 inch
between right end of feed pawl and tip
of notch on the space suppression lever.

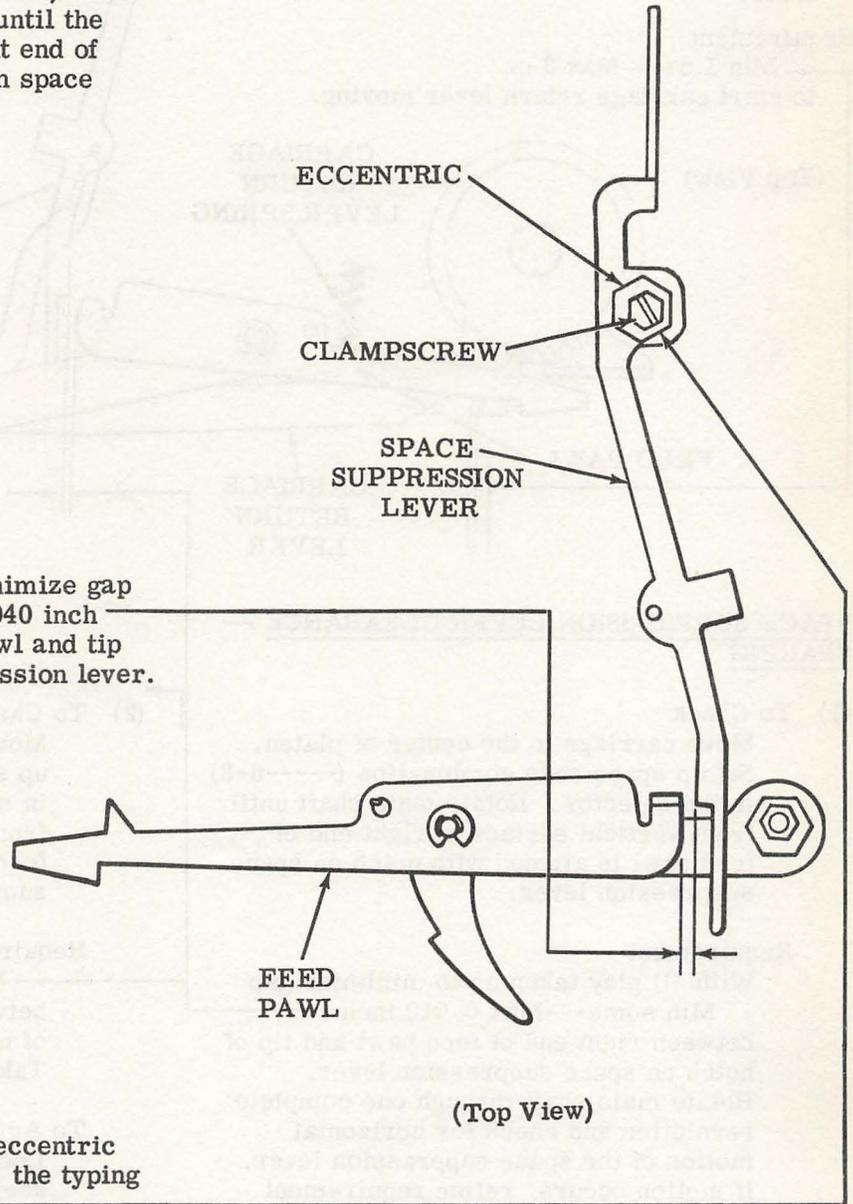

(2) Requirement

The position of high part of eccentric should be toward the rear of the typing unit.

To Adjust

Loosen eccentric clampscrew friction tight. Position eccentric. Tighten eccentric clampscrew.

Related Adjustment

Affected By

CODEBAR RESET LEVER POSITION
(Function Area) (2. 28)

2.66 Spacing Area (continued)


CARRIAGE RETURN LEVER SPRING

To Check

Place typing unit in stop condition and manually return carriage. Hold feed pawl and check pawl away from carriage return lever.

Requirement

Min 1 oz---Max 3 oz
to start carriage return lever moving.

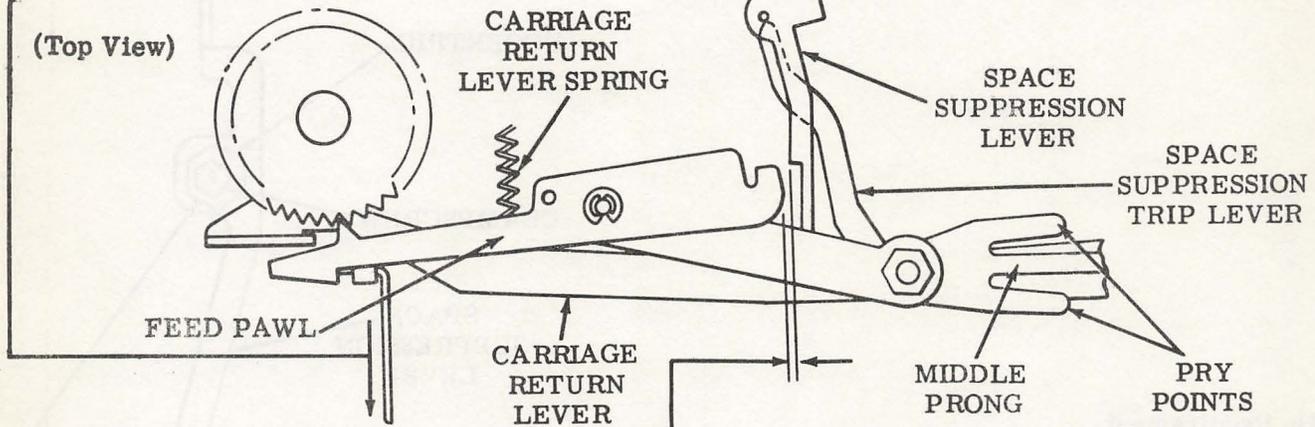

SPACE SUPPRESSION LEVER CLEARANCE — SPACING

→ (1) To Check

Move carriage to the center of platen. Set up space code combination (-----6-8) in the selector. Rotate main shaft until front vertical surface of right end of feed pawl is aligned with notch on space suppression lever.

Requirement

With all play taken up to minimize gap
Min some---Max 0.040 inch
between right end of feed pawl and tip of notch on space suppression lever. Rotate main shaft through one complete revolution and check for horizontal motion of the space suppression lever. If motion occurs, refine requirement to min side and recheck.

To Adjust

Position space suppression trip lever by bending middle prong. Use front pry point to increase clearance. Use rear pry point to decrease clearance.

(2) To Check (Typing units with eccentric)
Move carriage to center of platen. Set up space code combination (-----6-8) in selector. Rotate main shaft until front vertical surface of right end of feed pawl is aligned with notch on space suppression lever.

Requirement

Min 0.005 inch---Max 0.040 inch
between right end of feed pawl and tip of notch of space suppression lever. Take up all play to minimize clearance.


To Adjust

Loosen clamp nut and position eccentric keeping high part of eccentric toward bottom of unit. Rotate high part of eccentric to rear to increase gap and forward to decrease gap.

Related Adjustments

Affected By
LEFT ROCKER DRIVE (2.34)

2.67 Spacing Area

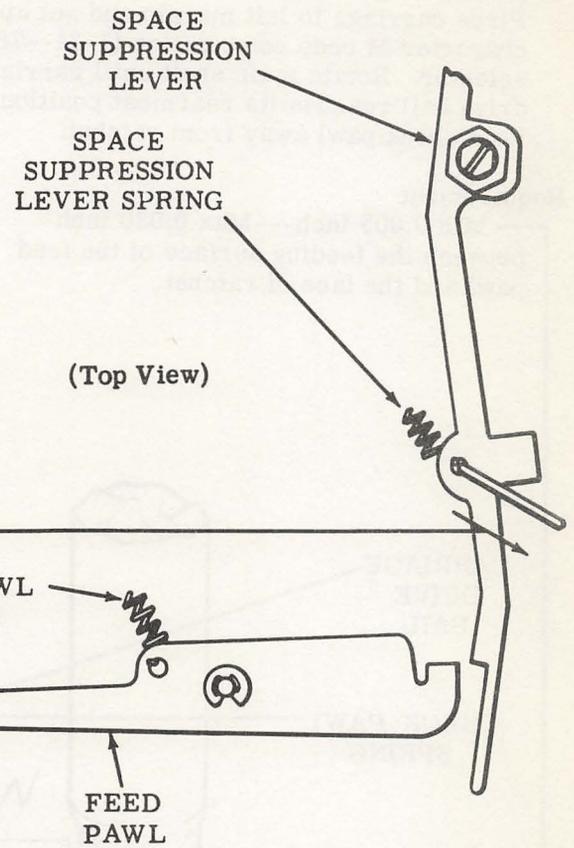

SPACE SUPPRESSION LEVER SPRING

Requirement

With typing unit in stop condition

Min 1-1/2 oz---Max 3 oz
to start space suppression lever moving.

FEED PAWL SPRING

Requirement

With typing unit in stop condition
and feed pawl disengaged from
spacing ratchet

Min 2 oz---Max 4 oz
to start feed pawl moving.

2.68 Spacing Area (continued)

FEED PAWL TRAVEL

To Check

Place carriage to left margin and set up the character M code combination (1-34--78) in selector. Rotate main shaft until carriage drive bail reaches its rearmost position. Hold check pawl away from ratchet.

To Adjust


Loosen clamp nut. Position spacing drive roller. Tighten clamp nut.

Related Adjustment Affected By

LEFT MARGIN POSITION - F (2.72)

Requirement

Min 0.005 inch---Max 0.030 inch between the feeding surface of the feed pawl and the face of ratchet.

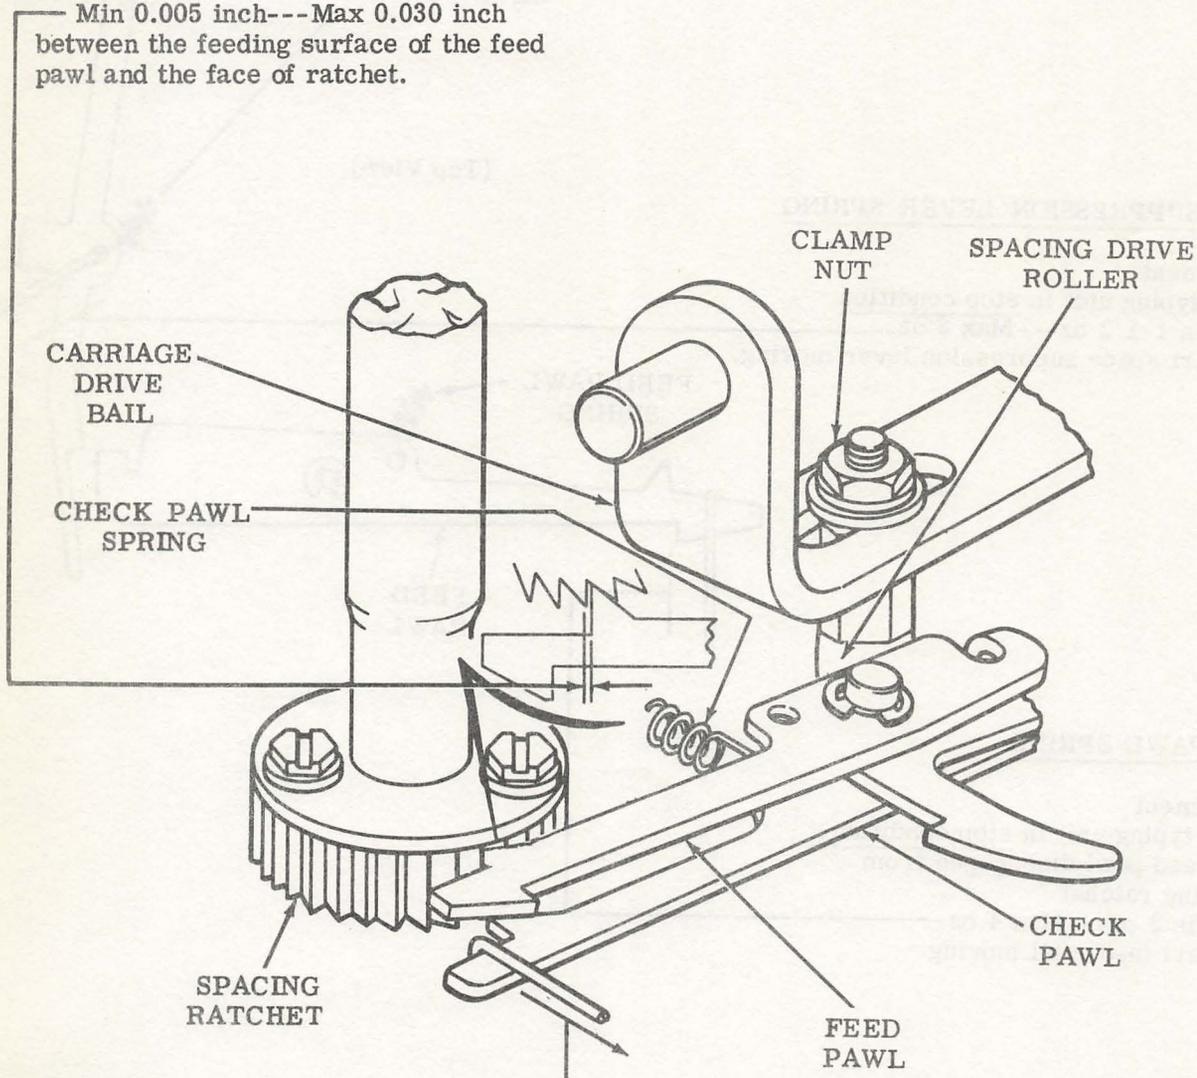

(Left Front View)

CHECK PAWL SPRING

Requirement

With typing unit in stop condition
Min 3/4 oz---Max 1-1/2 oz
to start check pawl moving.

2.69 Spacing Area (continued)

SPACING BELT TENSION

Requirement

With typing unit in stop condition, carriage at left margin, and from 8 to 11 ounces of pressure applied near center of belt

Min 9/16 inch---Max 11/16 inch between outer surfaces of belt.


To Adjust

Loosen mounting screws and position right pulley bracket. Tighten screws.

Related Adjustment

Affects

LEFT MARGIN PRINTING (2.120)

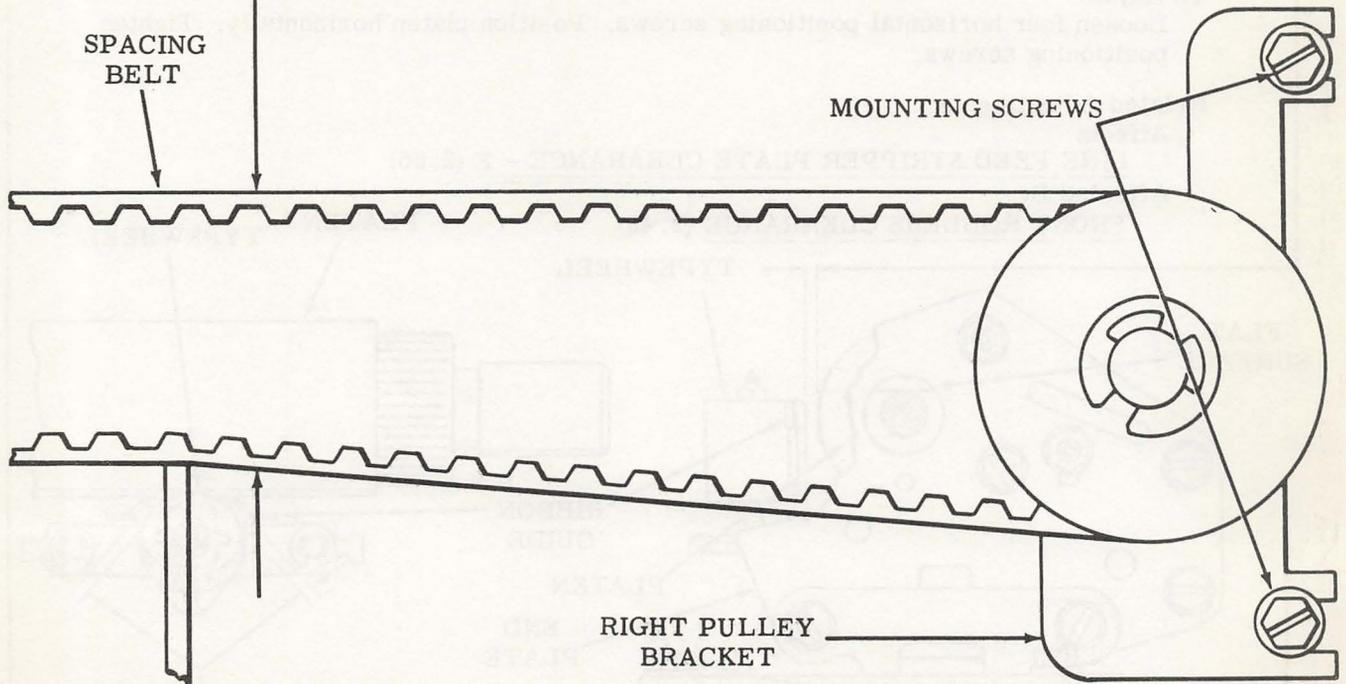

(Top View)

2.70 Platen Area

PLATEN — HORIZONTAL POSITION - F

(1) To Check

Place the flat surface on the left side of the platen up so that it is horizontal to the base casting. Place the carriage at the left margin and check requirement. Move the carriage to the right margin and again check requirement.

Requirement

Min 0.050 inch---Max 0.065 inch
between ribbon guide and platen at both left and right margins.

(2) To Check

Place carriage to center of platen and rotate platen until maximum clearance is obtained between platen and ribbon guide. Set up the E code combination (1-3---78) in the selector. Rotate main shaft until carriage drive bail is in its rearmost position. Push typewheel to the rear until it just touches the platen.

Note: The typing unit should not have paper or ribbon installed.

Requirement

Typewheel should not touch inside of either ribbon guide.

To Adjust

Loosen four horizontal positioning screws. Position platen horizontally. Tighten positioning screws.


Related Adjustments

Affects

LINE FEED STRIPPER PLATE CLEARANCE - F (2.85)

Affected By

FRONT ROLLERS CLEARANCE (2.43)

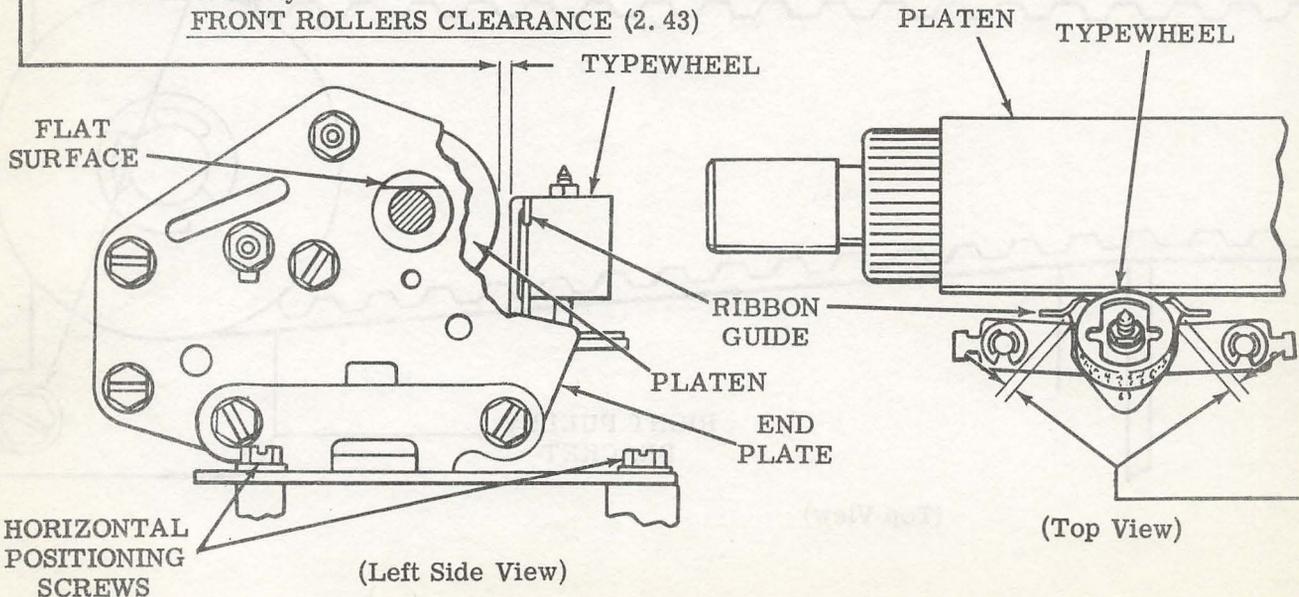

2.71 Platen Area (continued)

VERTICAL TYPE ALIGNMENT - F

For typing units equipped with adjustable vertical drive bail such as TP180606:

(1) To Check

Place paper and ribbon in unit. Place carriage to left margin. Set up the E code combination (1-3---78) in the selector and rotate the main shaft until the character is printed.

Requirement

When the printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

To Adjust

Loosen clampscrew on vertical drive bail and position the typewheel using pry point. Tighten adjusting screw.

(2) To Check


Place carriage to right margin. Set up the E code combination (1-3---78) in the selector and rotate main shaft until the character is printed.

Requirement

When the printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

To Adjust

Loosen vertical positioning screws on right side. Position the right end of the platen using pry point. Do not twist the platen. Tighten positioning screws.

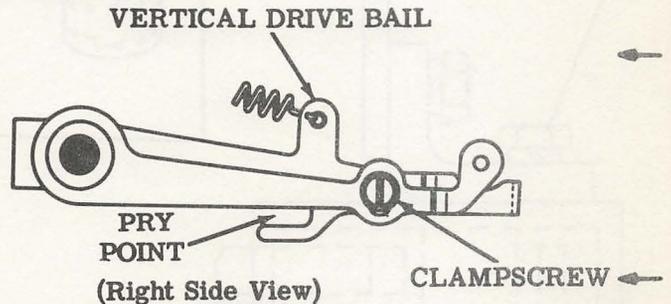

For typing units equipped with nonadjustable vertical drive bail such as TP180526:

To Check

Place paper in typing unit. Set up the E code combination (1-3---78) in the selector and rotate the main shaft until the character is printed. Repeat several times along the length of the platen.

Requirement

When each printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

To Adjust

Loosen four vertical positioning screws. Position the platen using pry points. Do not twist the platen. Tighten positioning screws.

Related Adjustments


Affects

- LINE FEED DRIVE ARM CLEARANCE - F
(2.80)
- LINE FEED PAWL DOWNSTOP POSITION - F
(2.83)
- LINE FEED UPSTOP BRACKET POSITION - F
(2.81)
- PRESSURE ROLLER CLEARANCE (2.84)
- LINE FEED DRIVE LINK POSITION - F
(2.82)


Affected By

- REAR RAIL POSITION (2.45)
- PRINT DRIVE LEVER POSITIONING (2.48)


VERTICAL POSITIONING SCREWS

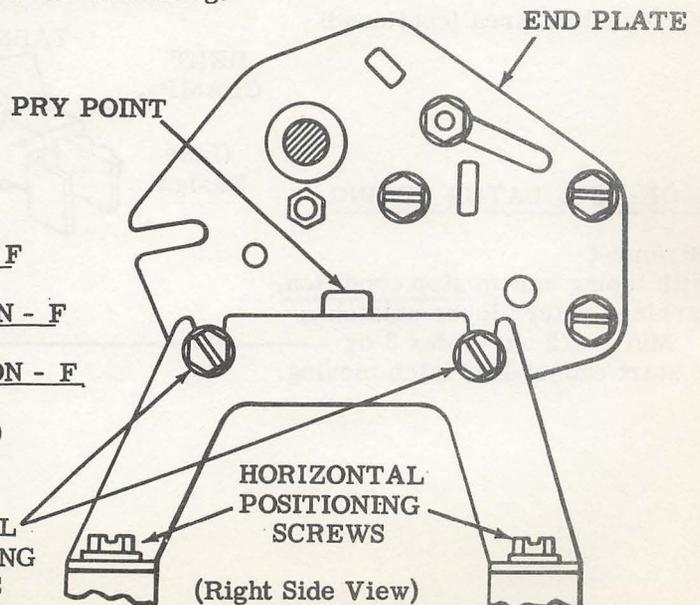

2.72 Platen Area (continued)

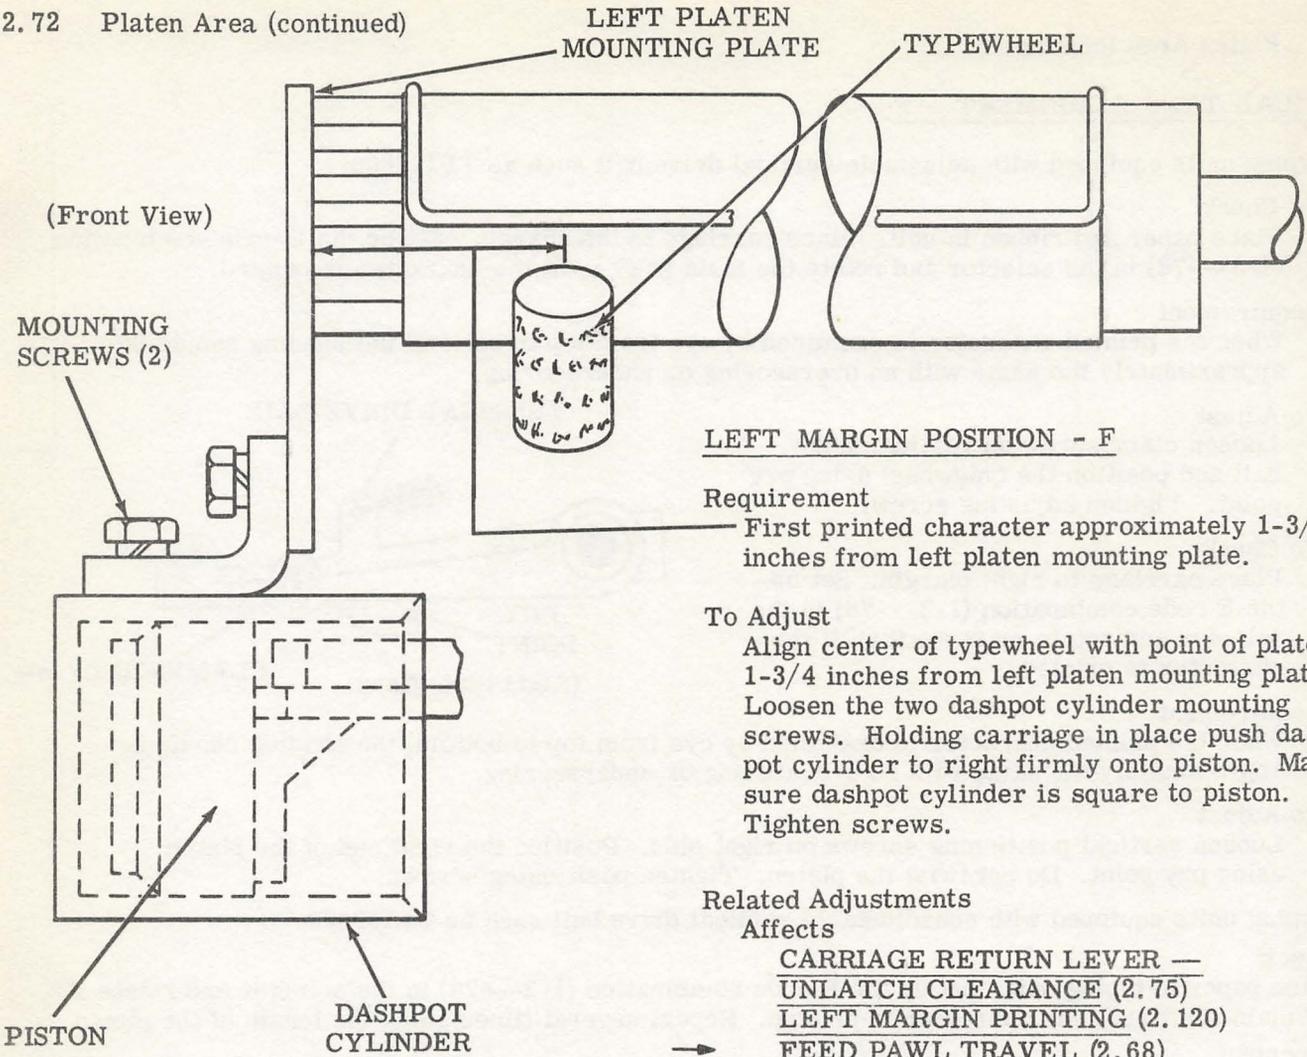

2.73 Function Area (continued)

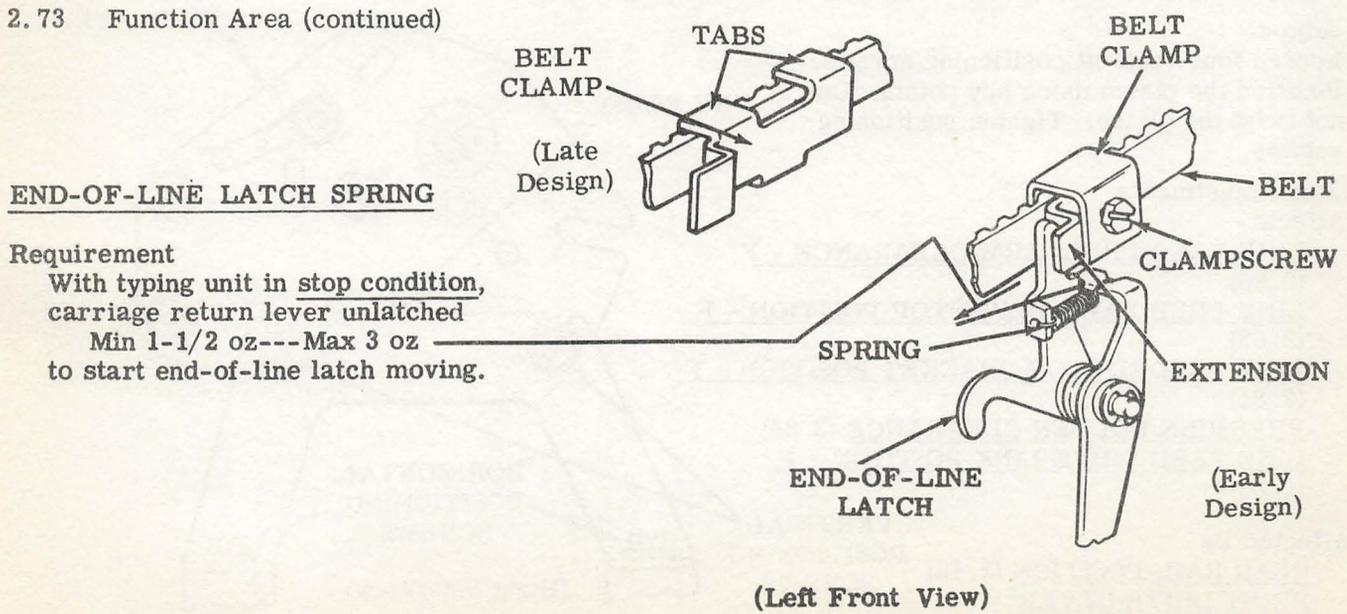


2.74 Platen Area (continued)

PAPER GUIDE SPRINGS - F

Requirement

With scale at either the left or right end of paper guide

Min 1-1/2 oz---Max 3-1/2 oz
to start paper guide moving.

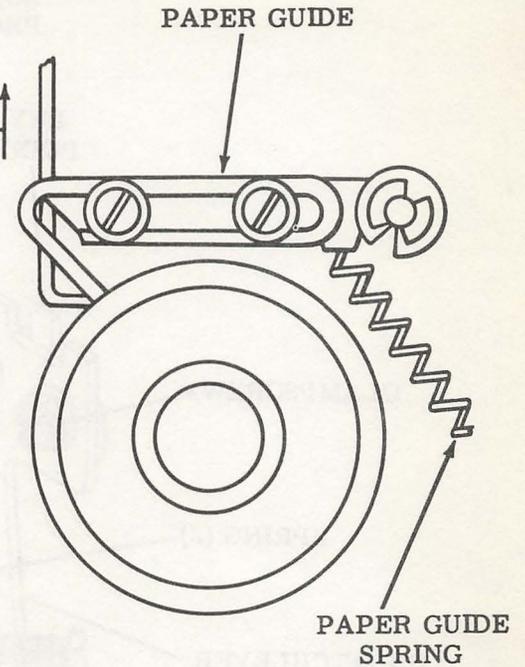


(Right Side View)

PAPER STRAIGHTENER BAIL SPRING - F

Requirement

With scale at center of paper straightener bail

Min 1 oz---Max 3 oz
to start paper straightener bail moving.

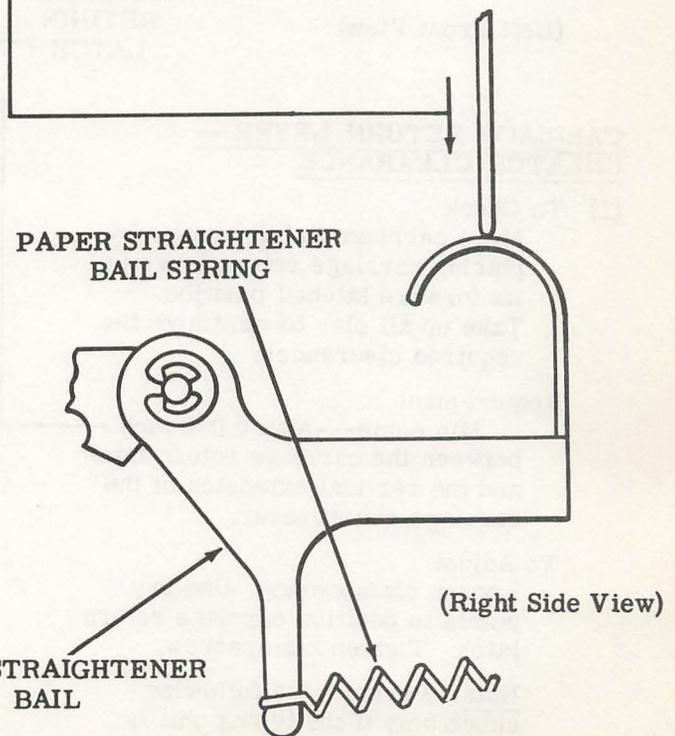


(Right Side View)

PAPER GUIDEPLATE SPRINGS - F

Requirement


With pressure lever released
Min 3/4 oz---Max 1-3/4 oz
to start paper guideplate moving.

Note: Check each of two springs.

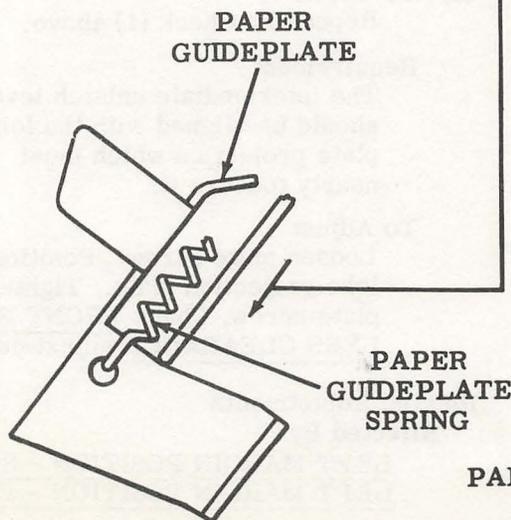

(Right Side View)

2.75 Spacing Area (continued)

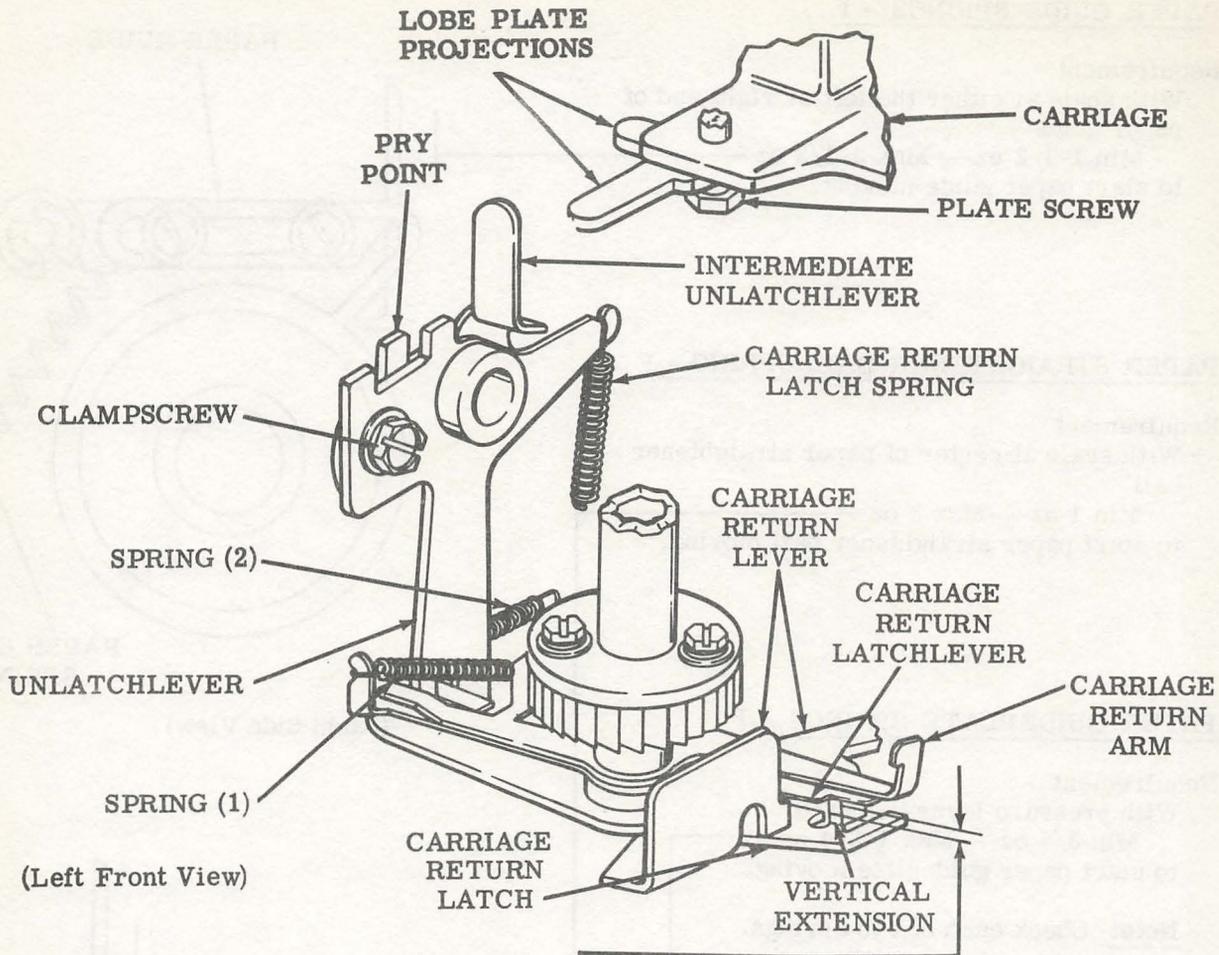

CARRIAGE RETURN LEVER - UNLATCH CLEARANCE

(1) To Check

Move carriage to left margin by placing carriage return lever in its forward latched position. Take up all play to minimize the required clearances.

Requirement

Min some---Max 0.050 inch between the carriage return latch and the vertical extension of the carriage return lever.

To Adjust

Loosen clampscrew. Use pry points to position carriage return latch. Tighten clampscrew.

Note: Perform the following check only if the typing unit is being completely readjusted.

(2) To Check

Repeat To Check (1) above.

Requirement

The intermediate unlatch lever should be aligned with the lobe plate projection which most nearly touches it.

To Adjust


Loosen plate screw. Position lobe projection plate. Tighten plate screw. Check FRONT ROLLERS CLEARANCE adjustment.

Related Adjustments

Affected By

- LEFT MARGIN POSITION - S (2.118)
- LEFT MARGIN POSITION - F (2.72)

2.76 Spacing Area (continued)

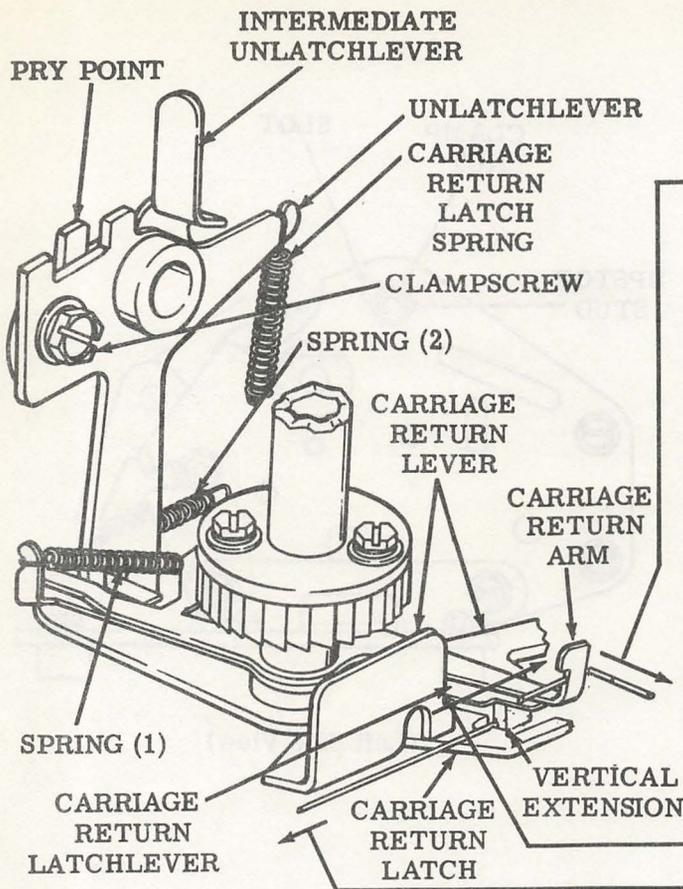

CARRIAGE RETURN ARM SPRINGS

To Check

Place typing unit in stop condition and engage feed pawl and check pawl with spacing ratchet.

(1) Requirement

Min 1 oz---Max 2 oz to start arm moving.

(2) Requirement

Min 1/2 oz---Max 1-1/2 oz to start arm moving.

CARRIAGE RETURN LATCH SPRING

To Check

With typing unit in stop condition and carriage return lever unlatched, place carriage away from left margin.

Requirement

Min 1-1/2 oz---Max 3 oz to start carriage return latch moving.

CARRIAGE BOUNCE

To Check

Place carriage at right margin, manually disengage the check pawl and feed pawl of the spacing mechanism.


Requirement

No pneumatic or mechanical bounce of carriage upon its return.

To Adjust

Loosen orifice adjusting plate clampscrew and close the orifice completely. Then gradually open until pneumatic bounce is eliminated while operating unit. Tighten clampscrew.

Note: The orifice should never become fully uncovered. If it does become fully uncovered, it is possible that the lobe plate projection may be broken.

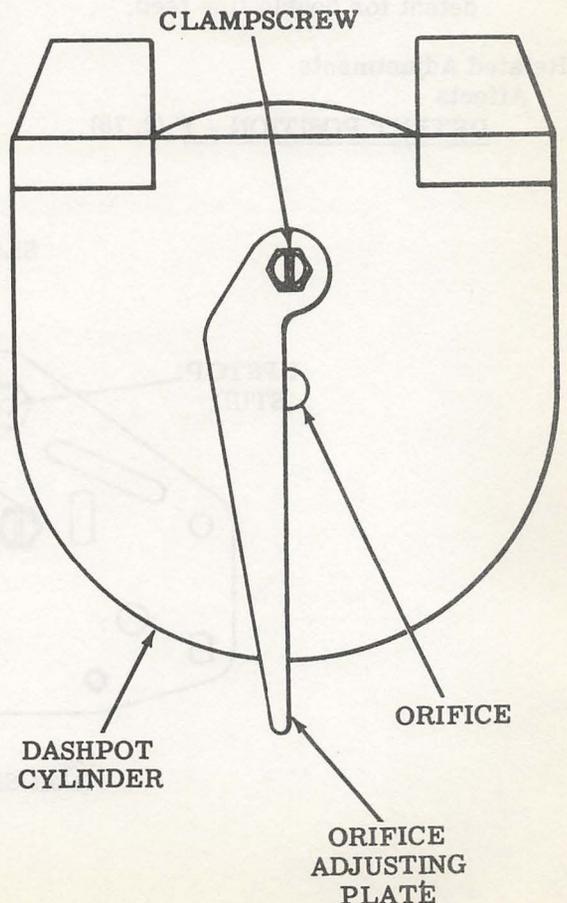

2.77 Platen Area (continued)

LINE FEED SELECTION - F

- (1) Requirement
Upstop stud should be at bottom of slot for single line feed or at top for double line feed.


To Adjust
Loosen clamp nut. Position upstop stud. Tighten clamp nut.

Note: The following requirement applies only to typing units equipped with operator-controlled line feed feature containing TP185788 shift lever.


- (2) Requirement
Same as Requirement (1) above.

To Adjust
Place TP185788 shift lever in upper detent for single line feed or in lower detent for double line feed.

Related Adjustments
Affects
DETENT POSITION - F (2.78)

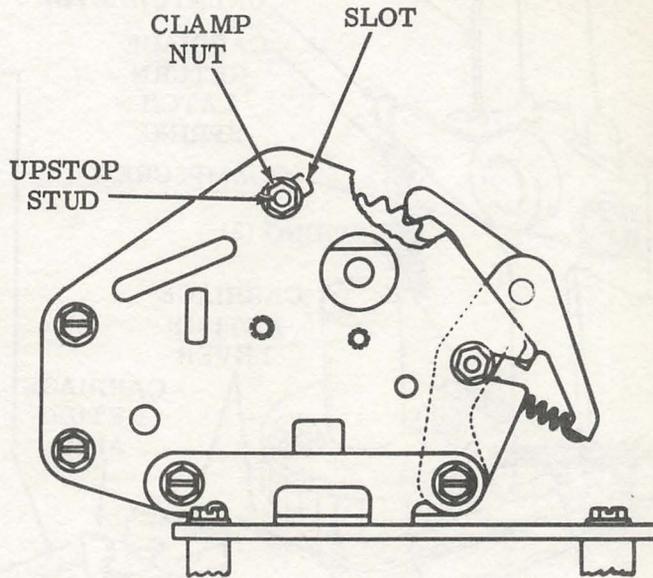

(Left Side View)

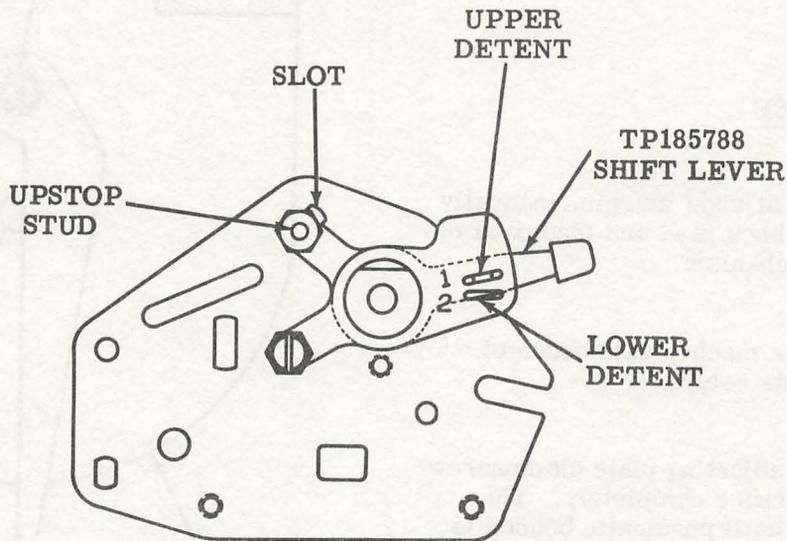

(Left Side View)

2.78 Platen Area (continued)

DETENT POSITION - F

To Check

Place typing unit in single line feed condition.

Requirement

When operated by finger pressure, line feed pawl should fully seat in platen ratchet without interference from teeth.

To Adjust

Early Design (typing units equipped with TP181030 bracket)

Loosen clamp nut (1). Position platen detent pawl pivot. Tighten clamp nut.

Late Design (typing units equipped with TP185796 bracket)

Loosen clamp nuts (2) and (3). Position platen detent pawl. Tighten clamp nuts.

Related Adjustments

Affects


LINE FEED DRIVE LINK POSITION - F
(2.82)

Affected By


VERTICAL TYPE ALIGNMENT - F
(2.71)

LINE FEED SELECTION - F (2.77)


Note: This adjustment is affected by VERTICAL TYPE ALIGNMENT - F (2.71) only when equipped with TP180526 nonadjustable vertical drive bail.

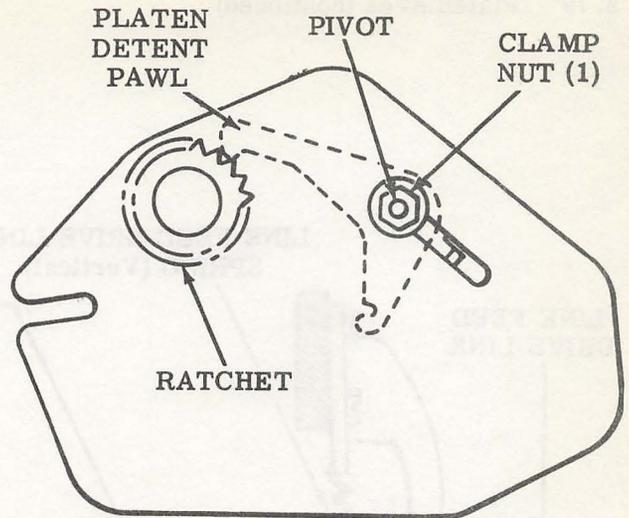

EARLY DESIGN
(Right Side View)

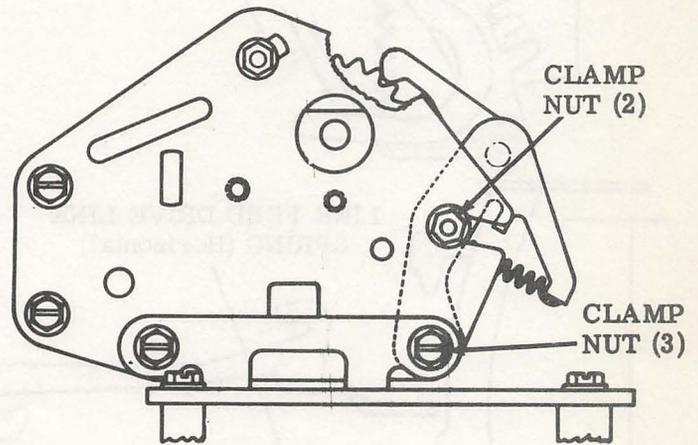

LATE DESIGN
(Left Side View)

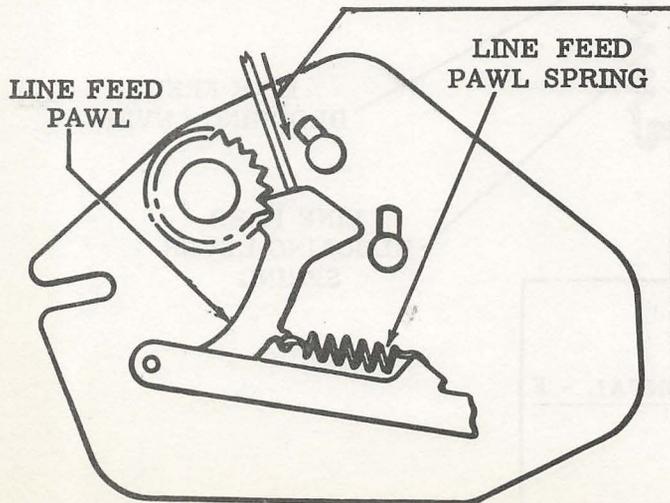


(Right Side View)

LINE FEED PAWL SPRING - F

Requirement

With typing unit in stop condition
— Min 3/4 oz---Max 1-3/4 oz
to start line feed pawl moving.

2.79 Platen Area (continued)

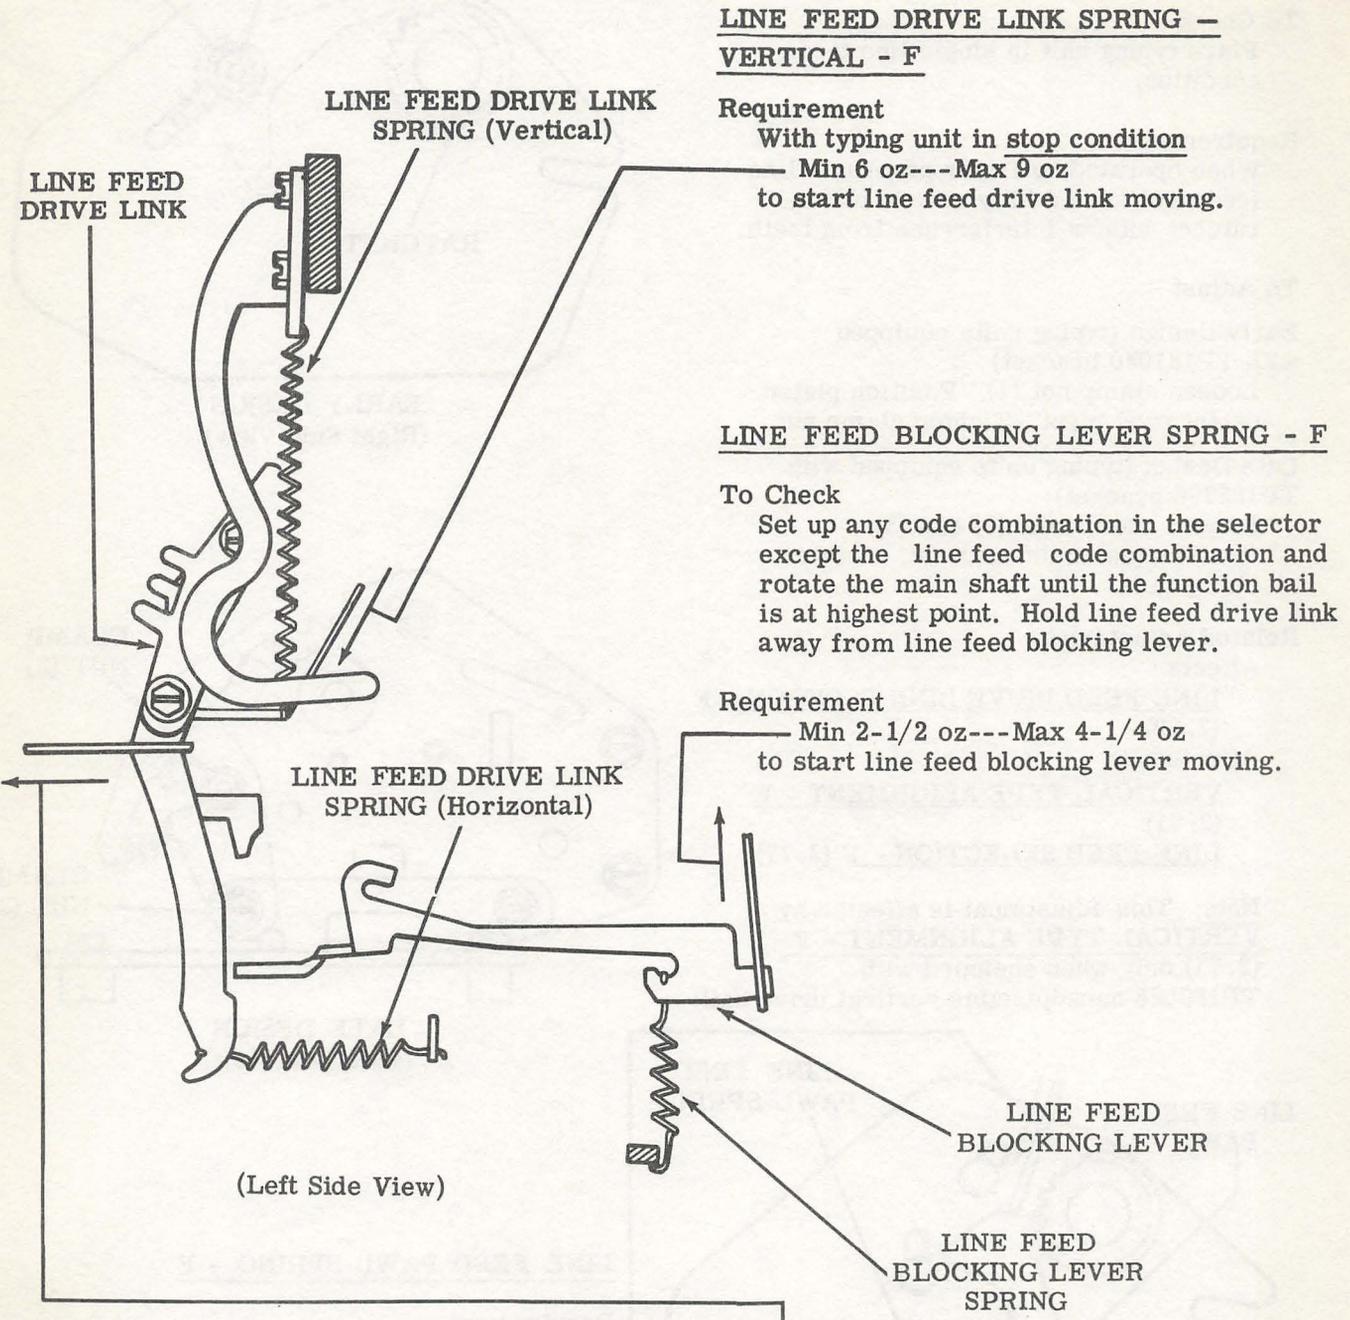

LINE FEED DRIVE LINK SPRING - VERTICAL - F

Requirement
With typing unit in stop condition
Min 6 oz---Max 9 oz
to start line feed drive link moving.

LINE FEED BLOCKING LEVER SPRING - F


To Check
Set up any code combination in the selector except the line feed code combination and rotate the main shaft until the function bail is at highest point. Hold line feed drive link away from line feed blocking lever.

Requirement
Min 2-1/2 oz---Max 4-1/4 oz
to start line feed blocking lever moving.

LINE FEED DRIVE LINK SPRING - HORIZONTAL - F

Requirement
With typing unit in stop condition
Min 5-1/2 oz---Max 8-1/2 oz
to start line feed drive link moving.

2.80 Platen Area (continued)

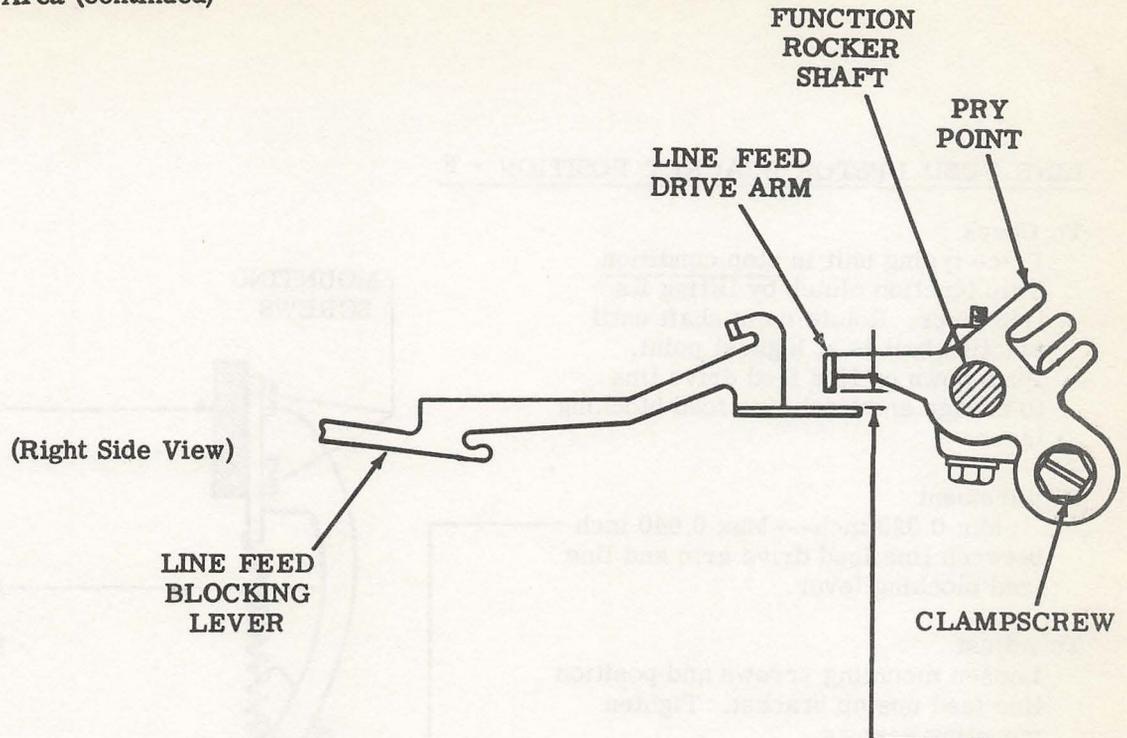LINE FEED DRIVE ARM CLEARANCE - F**To Check**

Place carriage to center of platen. Manually operate typing unit and set up line feed code combination (-2-4---8) in selector. Rotate main shaft until function bail is at highest point. Take up play to make clearance between line feed blocking lever and line feed drive arm a minimum.

Requirement

Min some---Max 0.010 inch
between line feed drive arm and line feed blocking lever.

Note: The minimum requirement (some) will be considered met if there is no clearance between the line feed function lever and the function drive bail.

To Adjust

Loosen clampscrew. Position line feed drive arm using pry point. Tighten clampscrew.

Related Adjustments**Affects**

LINE FEED UPSTOP BRACKET POSITION - F (2.81)
LINE FEED PAWL DOWNSTOP POSITION - F (2.83)

Affected By

LEFT ROCKER DRIVE (Function Area)(2.34)

2.81 Platen Area (continued)

LINE FEED UPSTOP BRACKET POSITION - F

To Check

Place typing unit in stop condition. Trip function clutch by lifting its trip lever. Rotate main shaft until function bail is at highest point. Push down on line feed drive link to engage and latch line feed blocking lever.

Requirement

Min 0.020 inch---Max 0.040 inch between line feed drive arm and line feed blocking lever.

To Adjust

Loosen mounting screws and position line feed upstop bracket. Tighten mounting screws.


Related Adjustments

Affected By

VERTICAL TYPE ALIGNMENT - F
(2.71)

LINE FEED DRIVE ARM CLEARANCE - F
(2.80)

Note: This adjustment is affected by VERTICAL TYPE ALIGNMENT - F (2.71) only when equipped with TP180526 nonadjustable vertical drive bail.

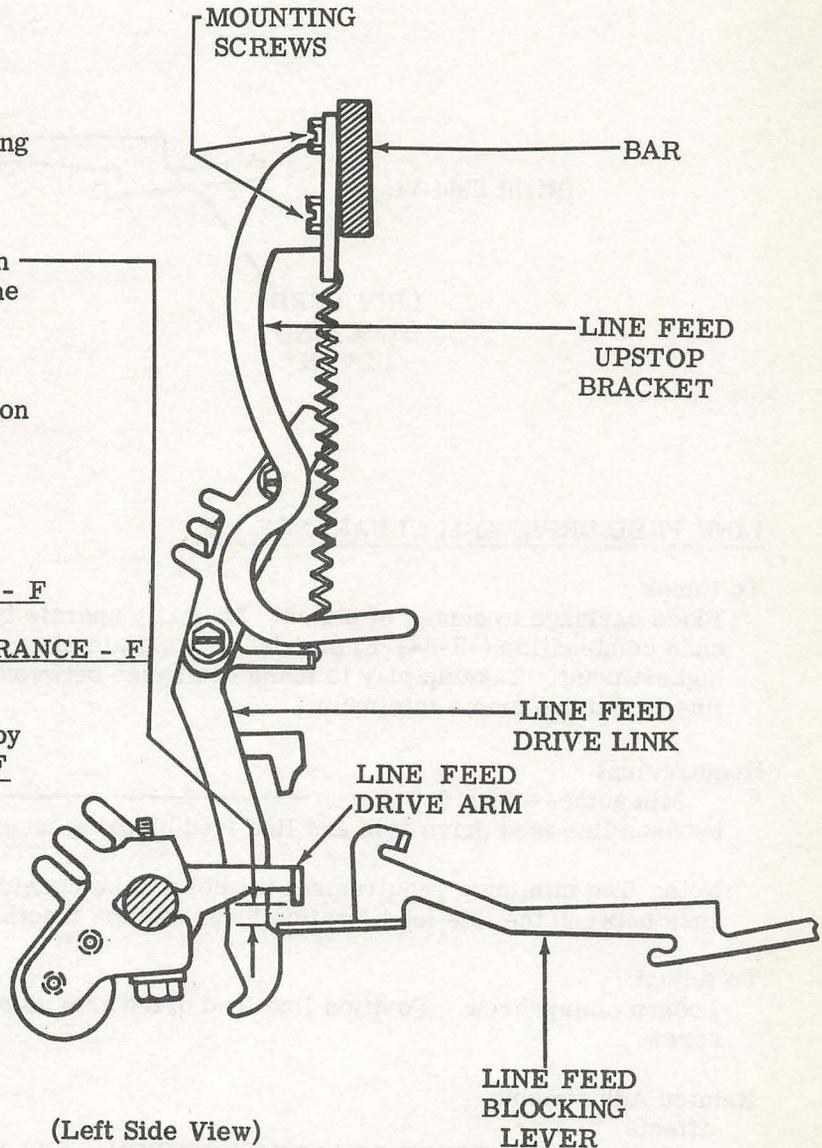

2.82 Platen Area (continued)

LINE FEED DRIVE LINK POSITION - F

To Check

Place the carriage to the center of the platen. Place the flat surface on left side of platen up and horizontally to base casting, and set up the line feed code combination (-2-4---8) in the selector. Rotate main shaft until function bail reaches its lowest point while noticing the motion supplied by the drive arm of the function rocker shaft to the line feed pawl.

(1) Requirement

The motion supplied by the drive arm of the function rocker shaft to the line feed pawl should be adequate to rotate the platen the required amount.

(2) Requirement

Hold platen detent pawl away from ratchet and rotate main shaft until function bail is in its lowest position. Lower platen detent pawl into its seat between two ratchet teeth. The platen should barely move.

To Adjust

Loosen line feed stripper plate clampscrew and back off line feed stripper plate (see LINE FEED STRIPPER PLATE CLEARANCE adjustment). Loosen downstop nut friction tight (2.83). Loosen two clampscrews and use pry points to position line feed drive link so that line feed pawl indexes platen one tooth and platen detent pawl seats fully in ratchet. Tighten clampscrews.

Related Adjustments

Affects

LINE FEED PAWL DOWNSTOP POSITION - F (2.83)

Affected By

DETENT POSITION - F (2.78)

VERTICAL TYPE ALIGNMENT - F (2.71)

PLATEN DETENT PAWL SPRING - F



Requirement

Early Design


Min 24 oz---Max 30 oz

Late Design

Min 31 oz---Max 37 oz
to start platen detent pawl moving.

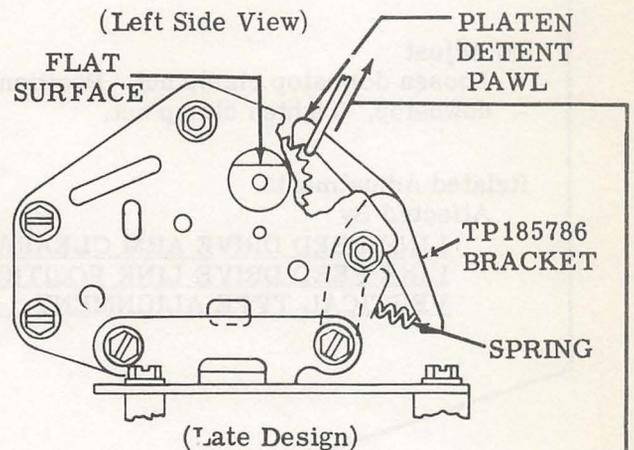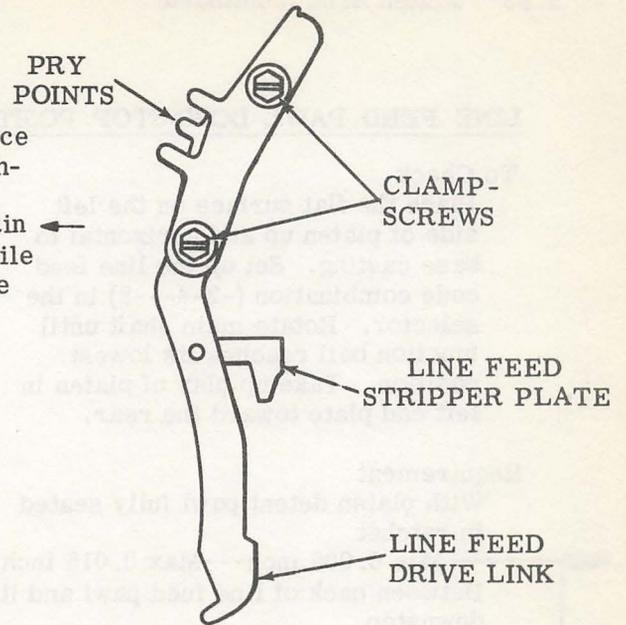

(Left Side View)

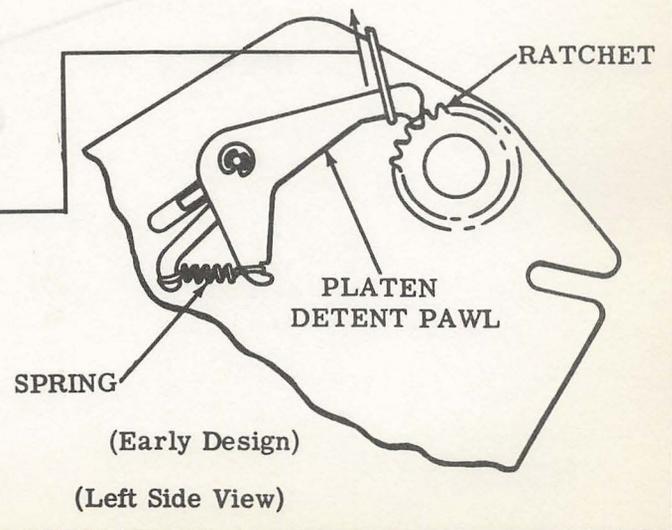

(Early Design)

(Left Side View)

2.83 Platen Area (continued)

LINE FEED PAWL DOWNSTOP POSITION - F

To Check

Place the flat surface on the left side of platen up and horizontal to base casting. Set up the line feed code combination (-2-4---8) in the selector. Rotate main shaft until function bail reaches its lowest position. Take up play of platen in left end plate toward the rear.

Requirement

With platen detent pawl fully seated in ratchet

— Min 0.005 inch---Max 0.015 inch
Between back of line feed pawl and its downstop.

To Adjust

Loosen downstop clamp nut. Position downstop. Tighten clamp nut.


Related Adjustments

Affected By

LINE FEED DRIVE ARM CLEARANCE - F (2.80)

LINE FEED DRIVE LINK POSITION - F (2.82)

VERTICAL TYPE ALIGNMENT - F (2.71)

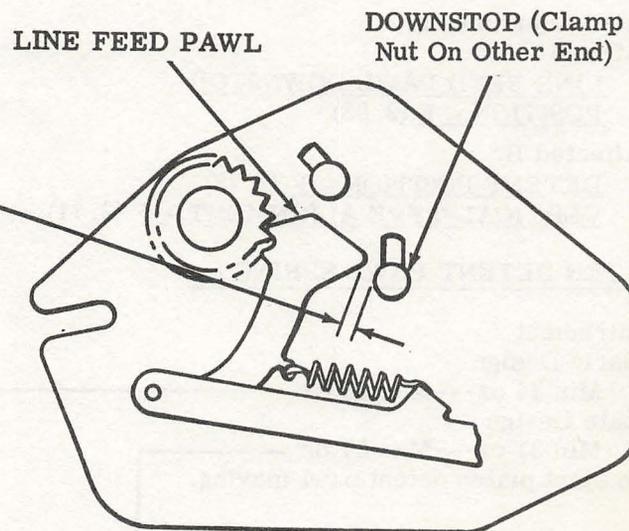

(Right Side View)

2.84 Platen Area (continued)

PRESSURE ROLLER CLEARANCE**To Check**

Position carriage with lock bracket left mounting screw directly under pressure roller. Release pressure roller (pressure lever placed in forward position).

Requirement

Min 0.010 inch
between pressure roller and left mounting screw.

Note: Clearance should not be so large that roller is not detented in released position.

To Adjust


Loosen clampscrew. Position pressure roller adjusting bracket. Tighten clampscrew.

Related Adjustment**Affected By**

REAR RAIL POSITION (Carriage Area)(2.45)



VERTICAL TYPE ALIGNMENT - F (2.71)

Note: This adjustment is affected by VERTICAL TYPE ALIGNMENT - F (2.71) only when equipped with TP180526 nonadjustable vertical drive bail.

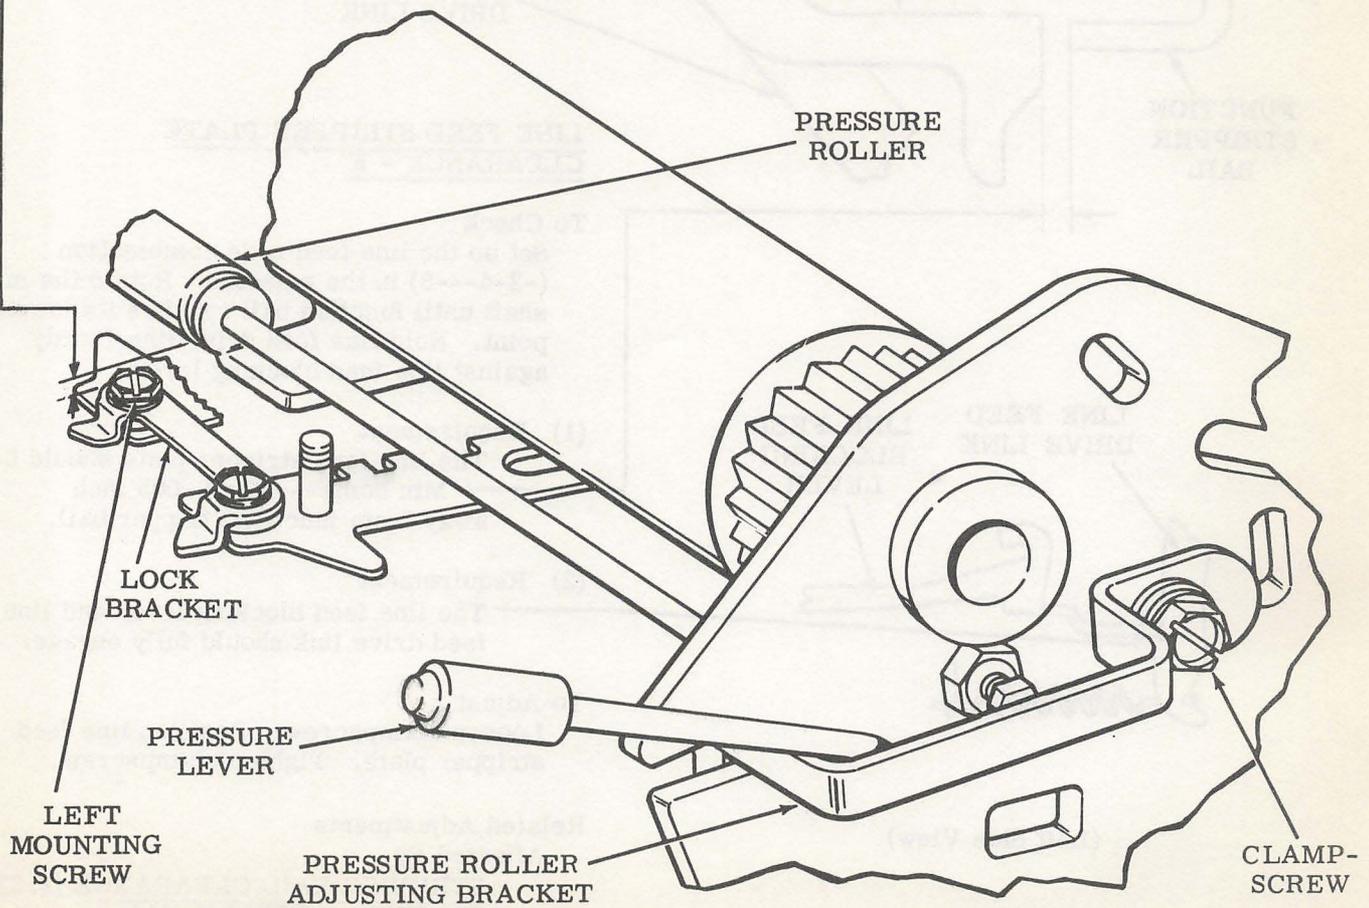

(Right Front View)

2.85 Platen Area (continued)

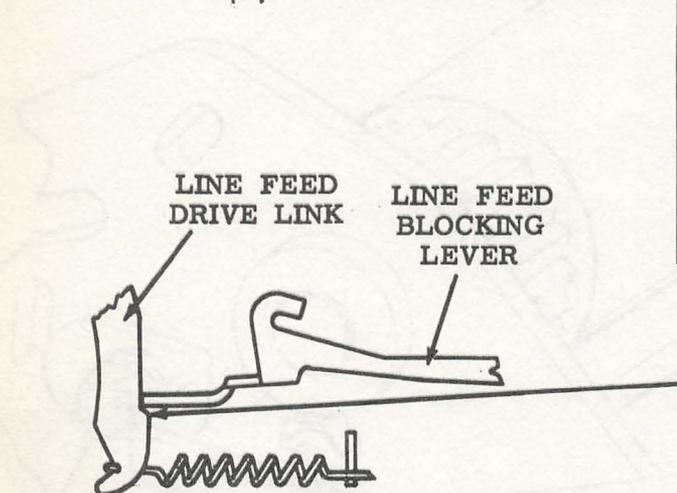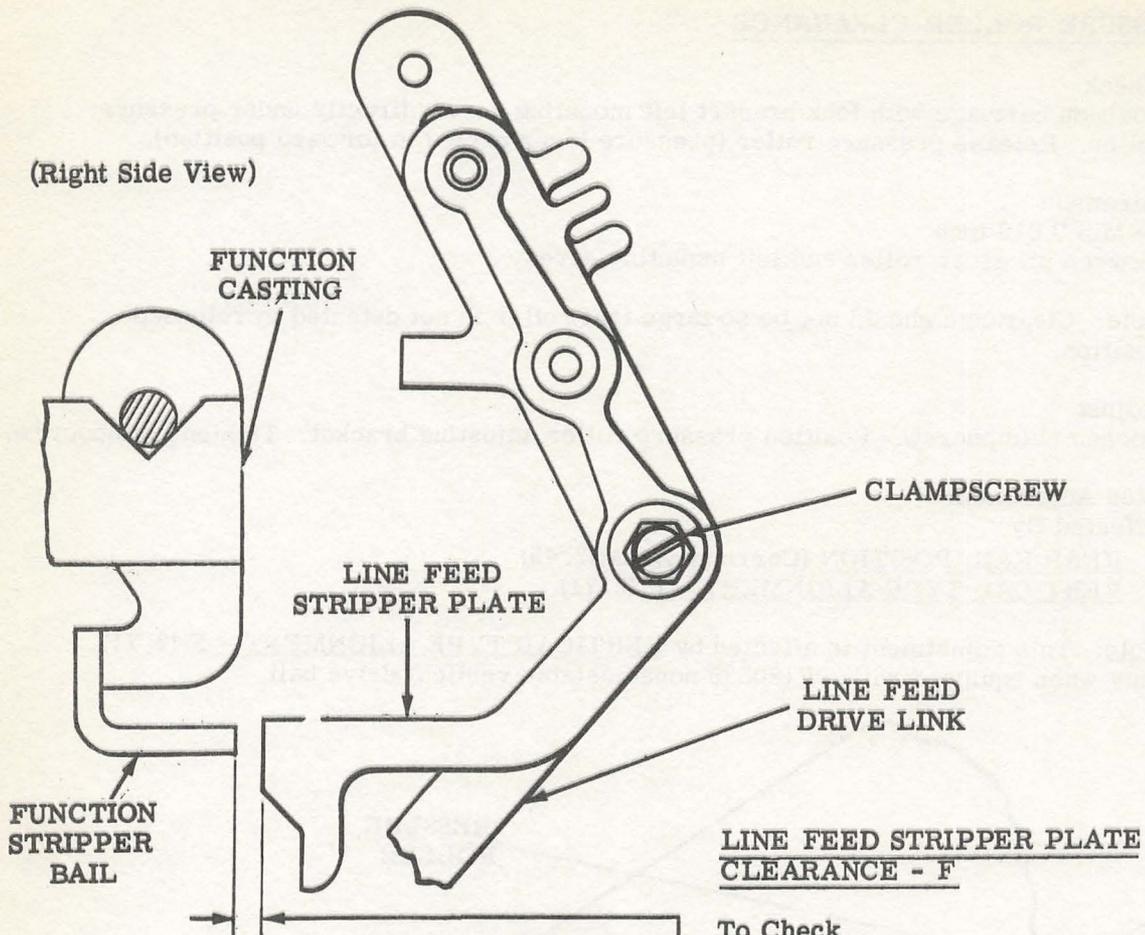

(Left Side View)

LINE FEED STRIPPER PLATE CLEARANCE - F

To Check

Set up the line feed code combination (-2-4---8) in the selector. Rotate the main shaft until function bail reaches its lowest point. Hold line feed drive link firmly against line feed blocking lever.

(1) Requirement
The line feed stripper plate should be Min some---Max 0.005 inch away from function stripper bail.

(2) Requirement
The line feed blocking lever and line feed drive link should fully engage.

To Adjust

Loosen clampscrew. Position line feed stripper plate. Tighten clampscrew.

Related Adjustments

Affected By

- STRIPPER BAIL CLEARANCE (2.38)
- PLATEN — HORIZONTAL POSITION - F (2.70)

2.86 Platen Area (continued)

COPYHOLDER WIRE POSITION - F

(1) Requirement

The copyholder wire should fall somewhere between two lines of printed copy, not obscuring more than 1/2 the height of either line.

To Adjust


Loosen four mounting screws. Position copyholder wire. Tighten screws.

(2) Requirement

After raising and releasing, the copyholder wire should return and rest against the platen at its center with a maximum of 0.020 inch between platen and copyholder wire at both the left and right ends.

To Adjust

Bend copyholder wire.

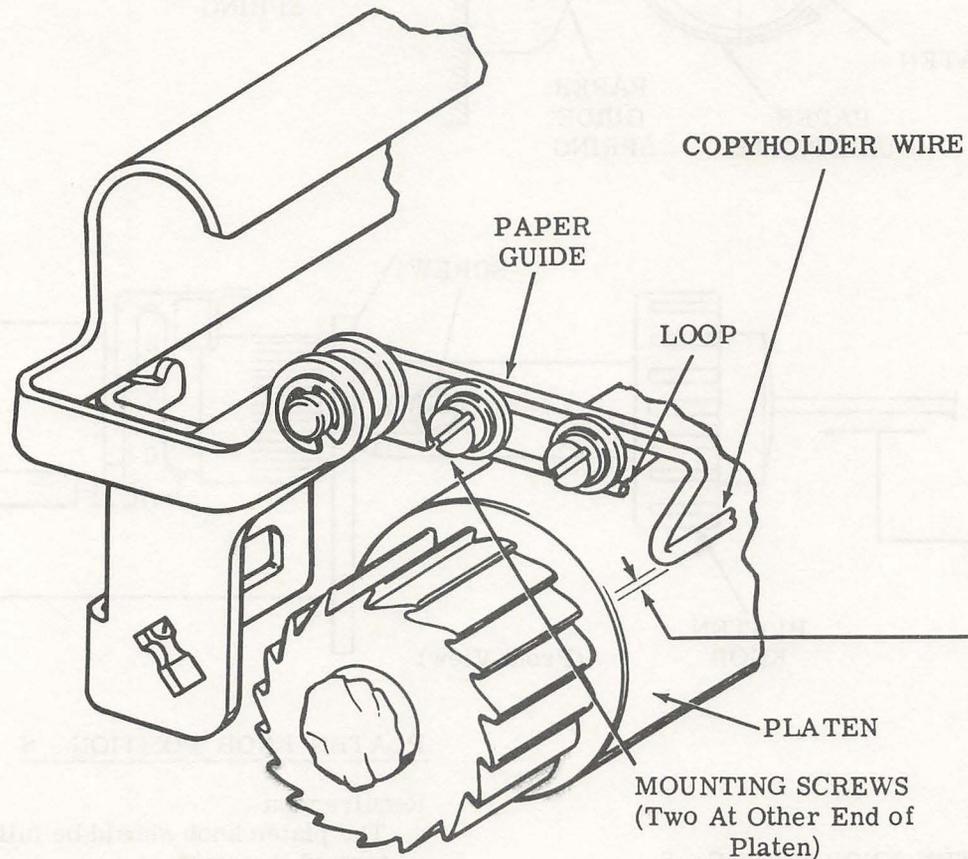

(Left Side View)

2.87 Platen Area (continued)

PAPER GUIDE SPRING - S

Requirement

With paper guides resting on platen



Min 16 oz---Max 18 oz to pull each paper guide spring to installed length.

PAPER GUIDEPLATE SPRING - S

Requirement

With a spring scale positioned at middle of paper guideplate

Min 3-1/2 oz---Max 7-1/2 oz to start paper guideplate moving.

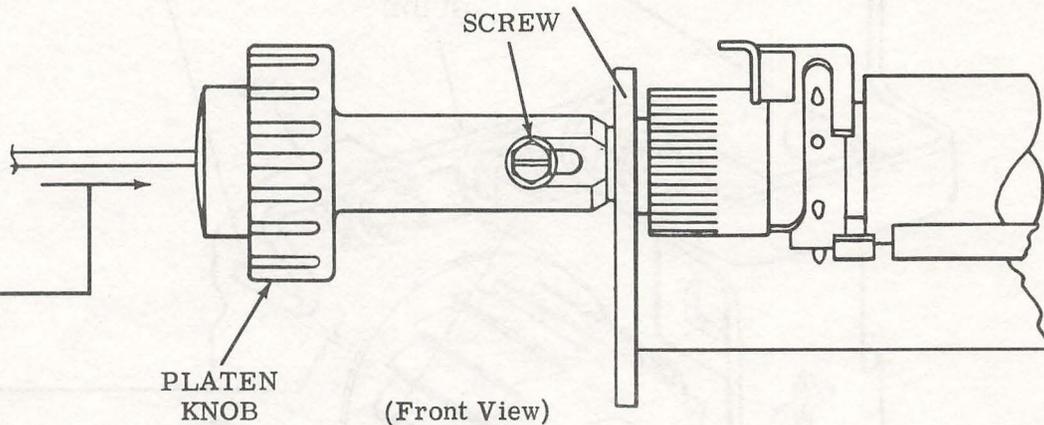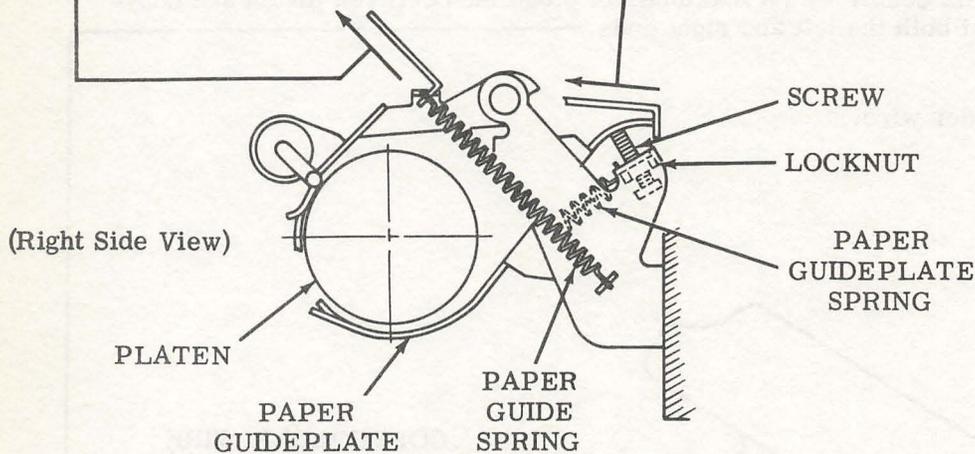

PLATEN KNOB SPRING - S

Requirement

With a spring scale positioned on platen knob

Min 15 oz---Max 23 oz to start platen knob moving.

PLATEN KNOB POSITION - S

Requirement

The platen knob should be fully seated toward the right.

To Adjust

When typing unit is on its subbase and cover is installed, loosen screw and position platen knob. Tighten screw.

2.88 Platen Area (continued)

PLATEN ENDPLAY - F

Note: This adjustment applies only to typing units equipped with TP185816 adjusting screw.

To Check


Position platen against the left end plate.

Requirement

Min 0.002 inch---Max 0.015 inch
between the TP185816 adjusting screw and the right end of the platen.

To Adjust

Loosen the locknut. Position platen against the left end plate. Position the TP185816 adjusting screw. Tighten locknut.

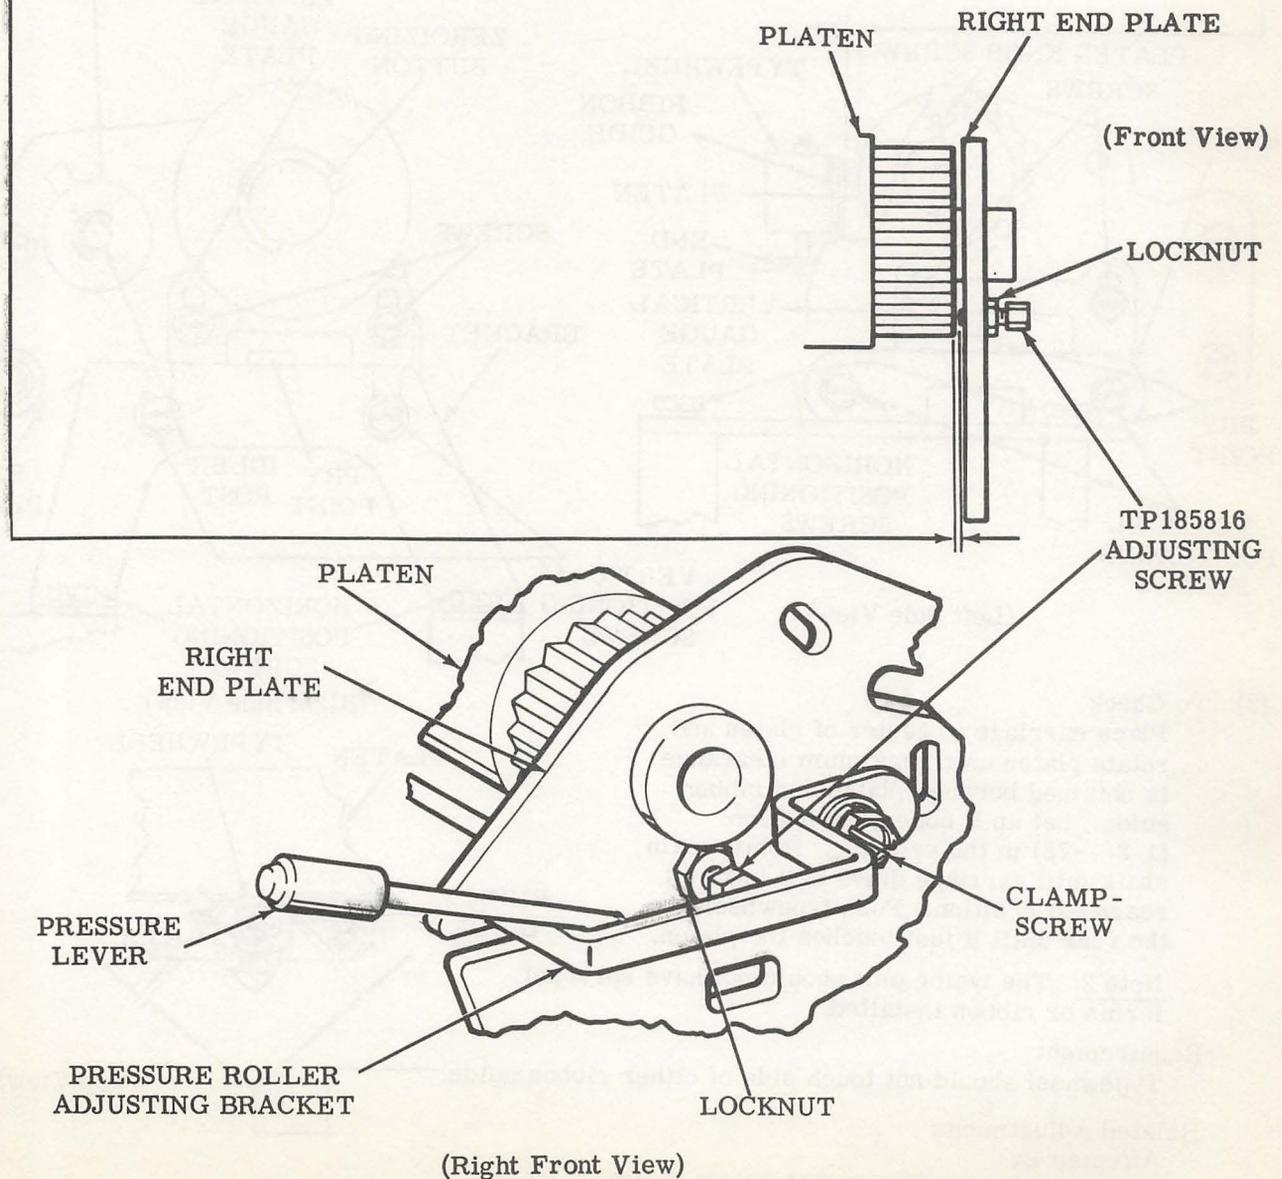

2.89 Platen Area (continued)

Note 1: If the idler has not previously been backed off, loosen the nut securing the idler post and position idler to low point in slot before making the following adjustment.


PLATEN - HORIZONTAL POSITION - S

(1) To Check


Place the platen knob screw up and permit the detent ratchet pawl to seat in a groove of the detent ratchet. Place the carriage at the left margin and check requirement. Move the carriage to the right margin and again check requirement.

Requirement

Min 0.050 inch---Max 0.065 inch
between ribbon guide and platen at both left and right margins.

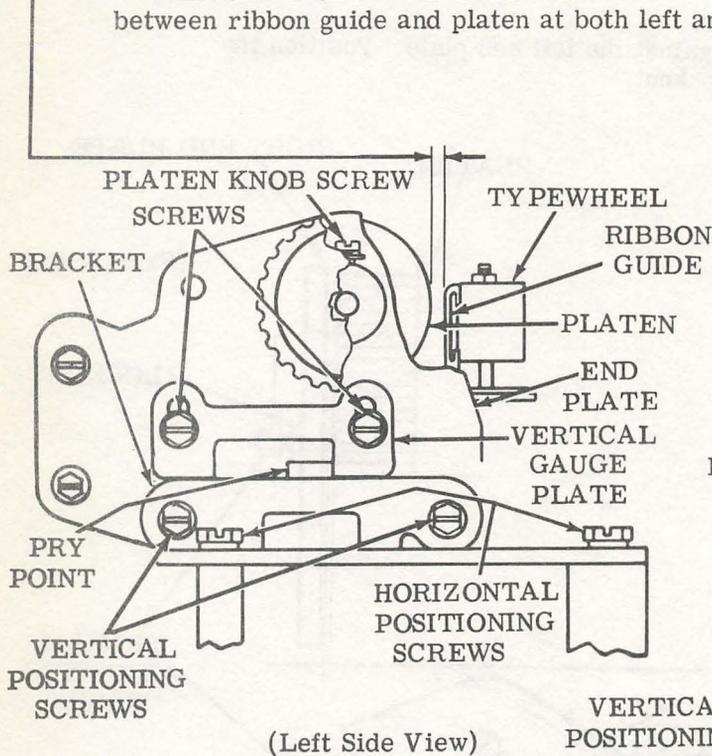

(Left Side View)

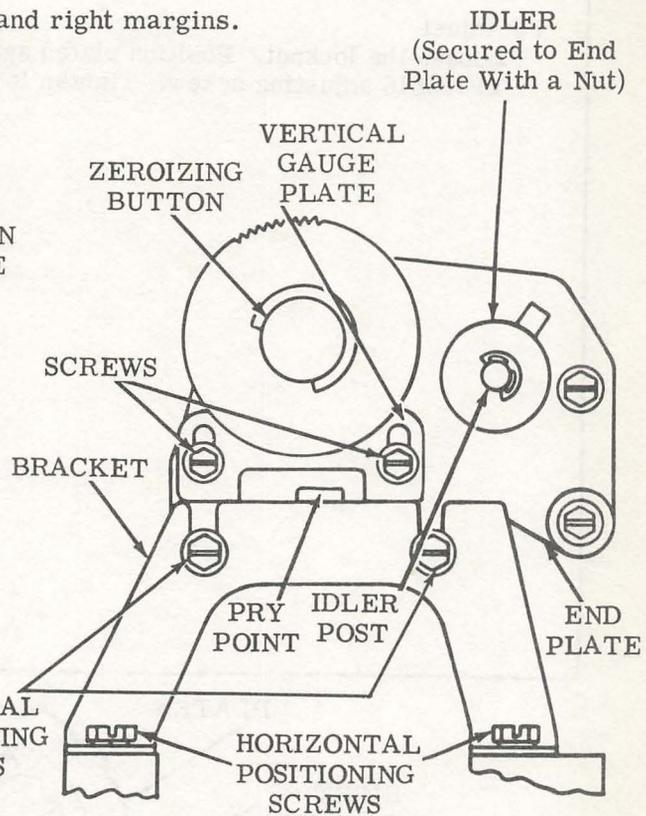

(Right Side View)

(2) To Check

Place carriage to center of platen and rotate platen until maximum clearance is obtained between platen and ribbon guide. Set up E code combination (1-3---78) in the selector. Rotate main shaft until carriage drive bail is in its rearmost position. Push typewheel to the rear until it just touches the platen.

Note 2: The typing unit should not have sprocket forms or ribbon installed.


Requirement

Typewheel should not touch side of either ribbon guide.

Related Adjustments

Affected By

FRONT ROLLERS CLEARANCE (2.43)

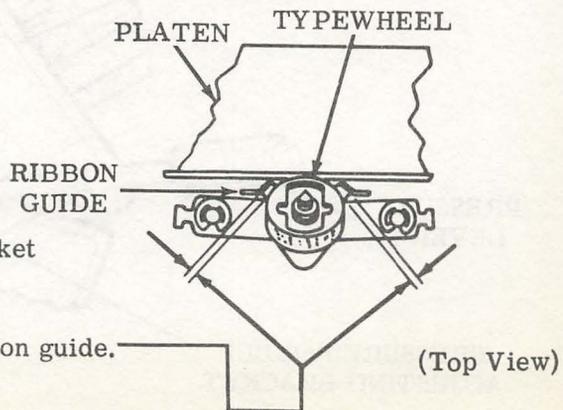

(Top View)

2.90 Platen Area (continued)

PLATEN — HORIZONTAL POSITION - S (continued)**To Adjust**

Loosen four horizontal positioning screws. Position platen horizontally. Tighten the four horizontal positioning screws.

Related Adjustments**Affects**VERTICAL TYPE ALIGNMENT - S (2.90)IDLER POSITION - S (2.100)DETENT POSITION - S (2.109)FORM FEED BELT TENSION - S (2.94)CAM ZERO POSITION (2.110)WIRE GUIDE POSITION - S (2.117)

Note: If the idler has not previously been backed off, loosen the nut securing the idler post and back off the idler before making the VERTICAL TYPE ALIGNMENT - S (2.90) adjustment.

VERTICAL TYPE ALIGNMENT - S

Typing units equipped with adjustable vertical drive bail such as TP180606:

(1) To Check

Place carriage to left margin. Set up the E code combination (1-3---78) in the selector and rotate the main shaft until the character is printed.

Requirement

When the printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

To Adjust

Loosen adjusting screw on vertical drive bail and position the typewheel using pry point.

(2) To Check


Place carriage to right margin. Set up the E code combination (1-3---78) in the selector and rotate main shaft until the character is printed.

Requirement

When the printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

To Adjust

Loosen the vertical gauge plate screws on the right side of the platen mechanism and back off the vertical gauge plate. Loosen vertical positioning screws on right side. Position the right end of the platen using pry point. Do not twist the platen. After adjusting, position the vertical gauge plate on the right side so that it is resting on its associated bracket. Tighten all screws.

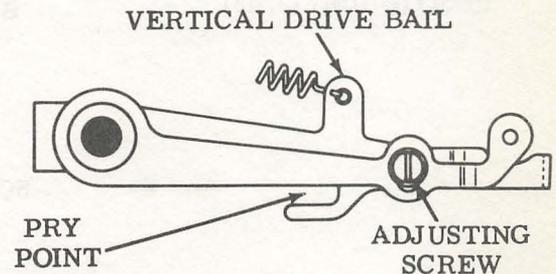

(Right Side View)

2.91 Platen Area (continued)

VERTICAL TYPE ALIGNMENT - S (continued)

Typing units equipped with nonadjustable vertical drive bail such as TP180526:

To Check

Place paper in typing unit. Set up the E code combination (1-3---78) in the selector and rotate the main shaft until the character is printed. Repeat several times along the length of the platen.

Requirement

When each printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

To Adjust

Loosen the vertical gauge plate screws and back off the vertical gauge plate on each side of the platen mechanism. Loosen four vertical positioning screws and position the platen using pry points. Do not twist the platen. After adjusting, position each vertical gauge plate so that it is resting on the top of its associated bracket. Tighten all screws.


Related Adjustments

Affects

- IDLER POSITION - S (2. 100)
- DETENT POSITION - S (2. 109)
- CAM ZERO POSITION (2. 110)
- WIRE GUIDE POSITION (2. 117)

Affected By

- PLATEN — HORIZONTAL POSITION - S (2. 89)
- REAR RAIL POSITION (2. 45)
- PRINT DRIVE LEVER POSITIONING (2. 48)

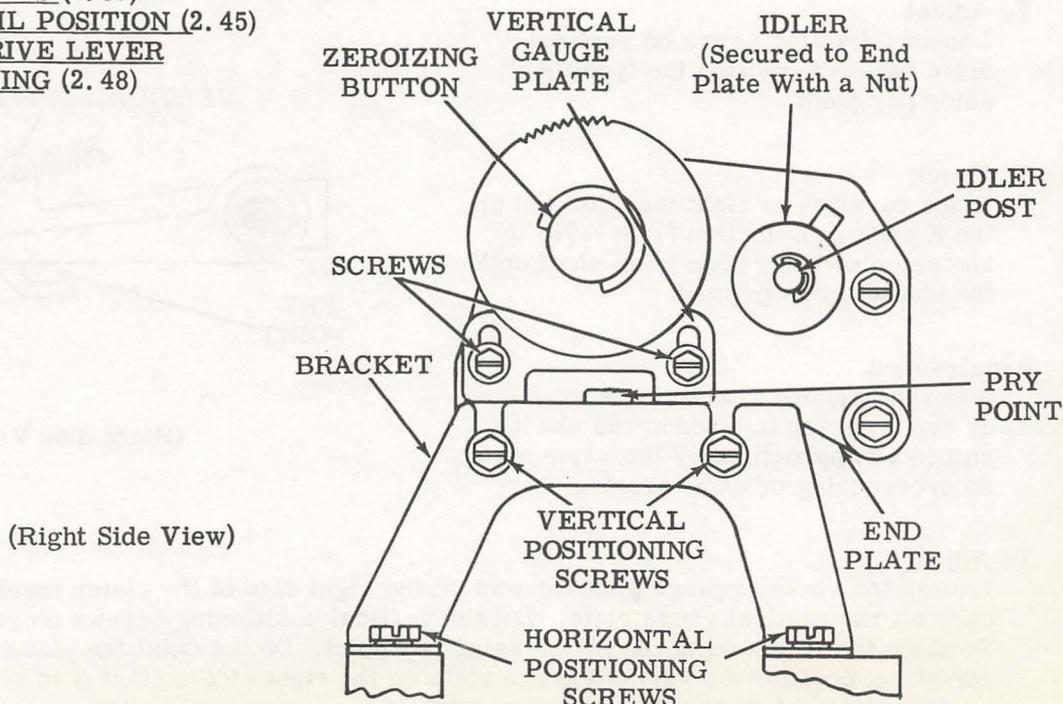

2.92 Platen Area (continued)

PAPER GUIDEPLATE CLEARANCE - S

Requirement

With no sprocket forms in the platen mechanism

Min 0.008 inch---Max 0.025 inch between the platen and the left and right ends of the paper guideplate adjacent to the fingers. Record the two clearances (see Note 2).

To Adjust

Loosen locknut and adjust screw. Tighten locknut.

Note 1: If the adjustment cannot be made as indicated above, remove the platen mechanism from the typing unit. For instructions, see appropriate disassembly and reassembly section. Then, preliminary adjust as follows:

Preliminary Requirement

With the screw backed off and no sprocket forms in the platen mechanism


Min zero---Max 0.012 inch between the platen and the left and right ends of the paper guideplate — adjacent to the fingers. Record the two clearances (see Note 2).

Preliminary Adjust

Loosen end plate screws friction tight and position end plates. Tighten screws.

Note 2: The fingers at both the left and right ends of the platen should be

Min some---Max 0.015 inch beyond the recorded gap between the platen and the left and right ends of the paper guideplate. Bend fingers to meet the requirement.

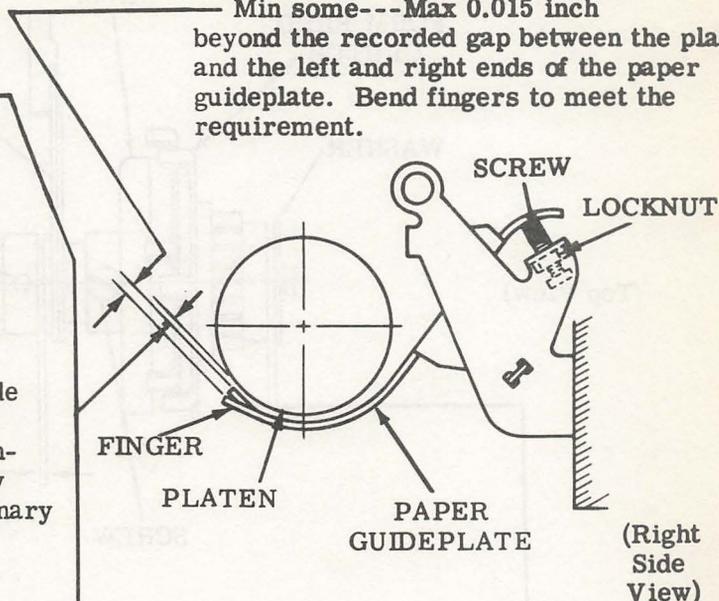


Note 3: Replace platen mechanism onto the typing unit. For instructions see appropriate disassembly and reassembly section. Check requirement.

Related Adjustments


Affects

PAPER ALARM CONTACT LEVER CLEARANCE - S (2.119)

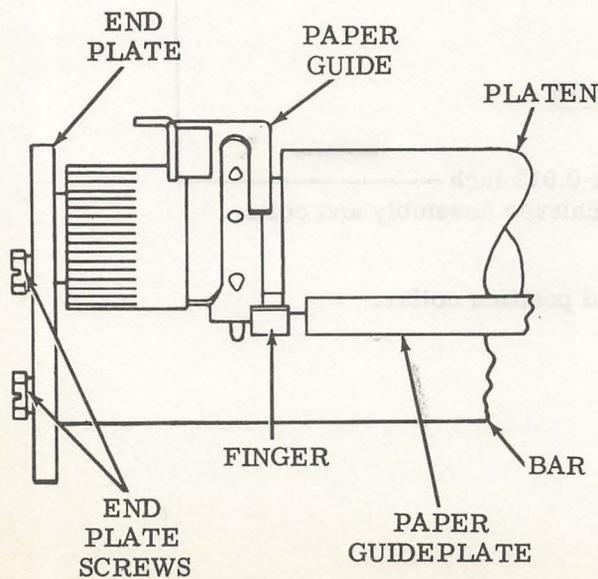

(Front View)

2.93 Main Shaft Area (continued)

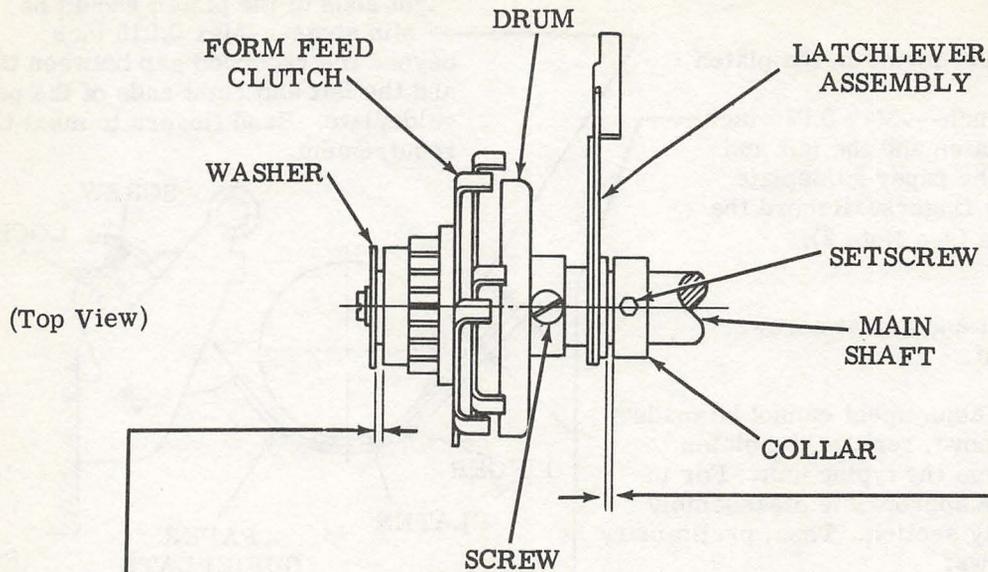

(A) FORM FEED CLUTCH ENDPLAY - S

Requirement

Min some---Max 0.012 inch
endplay between washer and form
feed clutch.

To Adjust

Loosen drum screw and position drum.

(B) LATCHLEVER ENDPLAY

Requirement

Min some---Max 0.012 inch
endplay between latchlever assembly and collar.

To Adjust

Loosen setscrew and position collar.
Tighten screw.

2.94 Form Feed Area

FORM FEED BELT TENSION - S

Note 1: Check tension only if the form feed belt is suspected of not meeting its requirement.

Requirement

The form feed belt tension should not be too tight or too loose.

To Adjust

Loosen three form feed assembly bracket mounting screws and hook a spring scale under the trip shaft at the latchlever. Position and pull up with a force of 7 pounds and hold. Tighten the three form feed assembly bracket mounting screws in the following order: first, the right front mounting screw; then, the right rear mounting screw, and finally, the left mounting screw.

Related Adjustments**Affects**

FORM-OUT LEVER OVERTRAVEL - S
(2.98)

FORM-OUT LEVER — RESET CLEARANCE - S (Late Design) (2.102) - and (Early Design) (2.101)

TRIP LEVER ENGAGEMENT — LINE FEED - S (Early Design) (2.104)

TRIP LEVER UPSTOP POSITION - S
(Early Design) (2.106)

LINE FEED SELECTION - S (2.108)

IDLER POSITION - S (2.100)

DETENT POSITION - S (2.109)

RESET FOLLOWER LEVER — RESET POSITION - S (2.110)


CAM ZERO POSITION - S (2.110)

CLUTCH SHOE LEVER GAP - S (2.95)

TRIP SHAFT ENDPLAY - S (2.97)

TRIP LEVER ENGAGEMENT — FORM-OUT - S (2.103)

FORM-OUT CONTACT PRESSURE AND GAP - S (2.113)

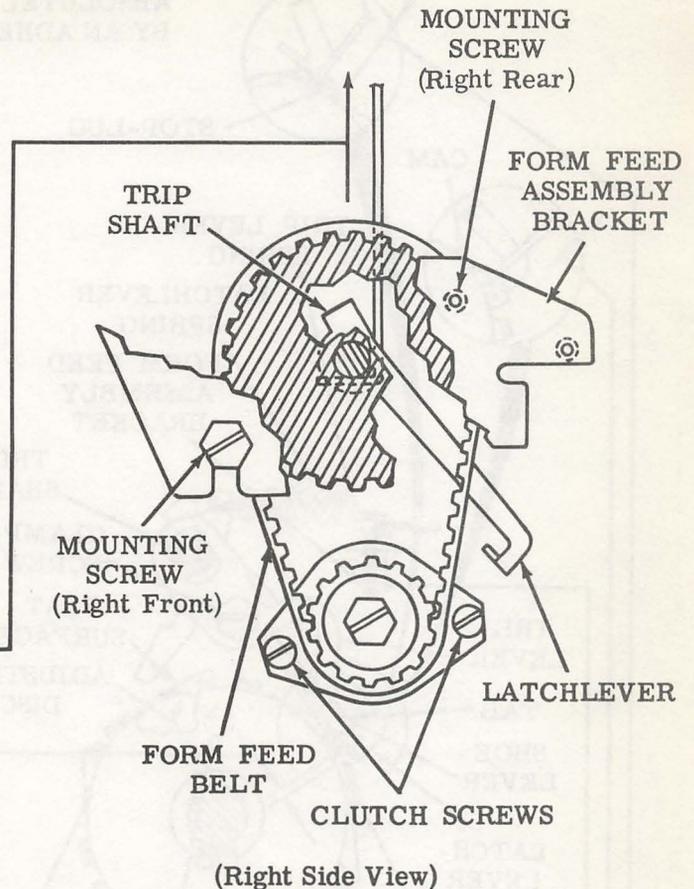


Note 2: Make certain that the shaft is free by rotating reset follower lever. If necessary, free trip shaft by repositioning the left mounting bracket of the form feed assembly bracket against the form feed assembly bracket.

Note 3: The left mounting screw is located on the left side of the form feed bracket.

2.95 Form Feed Area (continued)

CAUTION: DO NOT DISTURB THE CLUTCH SCREWS UNLESS ABSOLUTELY NECESSARY. CLUTCH SCREWS ARE SECURED BY AN ADHESIVE AT THE FACTORY.

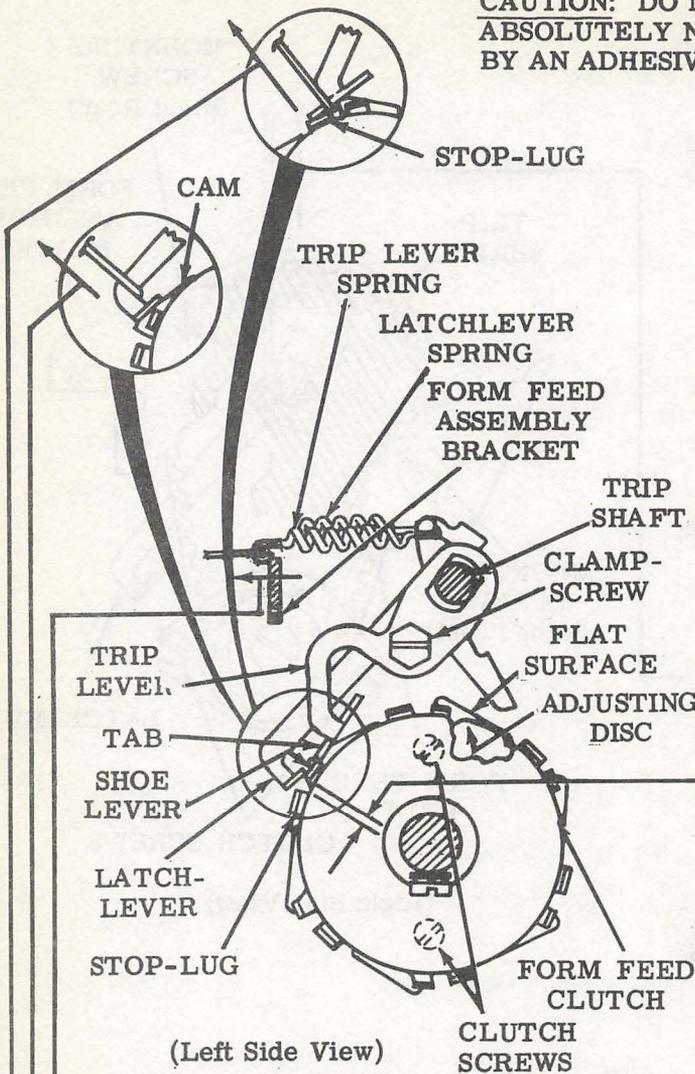

CLUTCH SHOE LEVER GAP - S

(1) To Check

Rotate the main shaft until the form feed clutch is in that stop position which brings the flat surface of the adjusting disc to the position illustrated. Disengage (latch) the form feed clutch.

Requirement

—Min 0.015 inch---Max 0.040 inch between the stop-lug and the shoe lever.

To Adjust

Loosen clampscrew and position trip lever. Tighten clampscrew.

Note: Do not make the following adjustment unless requirement (1) cannot be met. If the clutch screws are disturbed, they must be resealed with and application of TP186171 Glyptal adhesive.

(2) To Check

With form feed clutch conditioned as in (1) To Check, measure and record clearance between shoe lever and stop-lug. Raise trip lever to trip (engage) form feed clutch. Fully seat clutch shoes by applying slight pressure against shoe lever along its normal path of forward travel. Again measure and record shoe lever, stop-lug clearance.

Requirement

Clearance between stop-lug and shoe lever.

—Min 0.055 inch---Max 0.085 inch greater when form feed clutch is engaged than when disengaged.

To Adjust

Loosen the two clutch screws friction tight and position adjusting disc. Apply appropriate adhesive (Glyptal) to clutch screw threads. Tighten both screws before adhesive dries.

Related Adjustments

Affects

TRIP LEVER ENGAGEMENT — LINE

FEED - S (Early Design) (2.104)

TRIP LEVER ENGAGEMENT — FORM-

OUT - S (2.103)

TRIP LEVER ENGAGEMENT —

(Preliminary) - S (2.96)

Affected By

FORM FEED BELT TENSION - S (2.94)

LATCHLEVER SPRING - S

Requirement

With latchlever resting on the high part of the cam

—Min 3 oz---Max 7 oz to start latchlever moving.

TRIP LEVER SPRING - S

Requirement

With trip lever tab resting on top of a stop-lug

Early Design

—Min 3 oz---Max 4-1/2 oz to start lever moving.

Late Design

—Min 14 oz---Max 18 oz to pull trip lever spring to installed length.

2.96 Form Feed Area (continued)

TRIP LEVER ENGAGEMENT (Preliminary) - S

Note: This adjustment applies to late design typing units containing the TP185998 nickel plated plate.

To Check


Rotate form feed clutch until a shoe lever is just about to contact the trip lever.

Requirement

Top surface of trip lever should be flush to 0.010 inch below top surface of shoe lever.

To Adjust

Loosen the two adjusting plate screws and position adjusting plate. Tighten both screws.

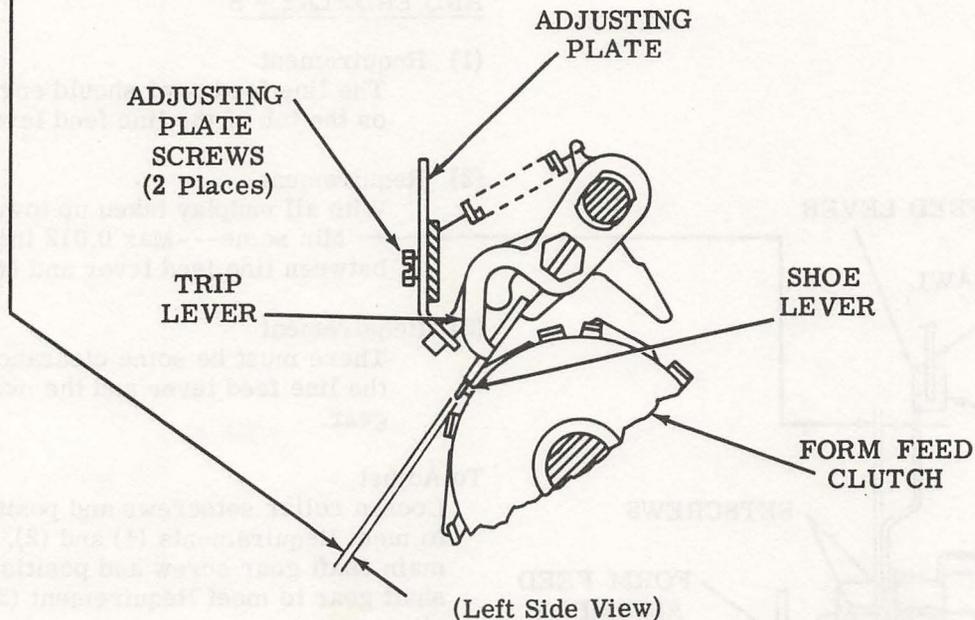**Related Adjustments****Affects**

TRIP LEVER ENGAGEMENT (Final) - S (Late Design) (2.104)

Affected By

CLUTCH SHOE LEVER GAP - S (2.95)

2.97 Form Feed Area (continued)

TRIP SHAFT ENDPLAY - S

Requirement

Min some---Max 0.012 inch endplay of the trip shaft.


To Adjust

Loosen clampscrew and position reset follower lever on trip shaft. Tighten clampscrew.

Related Adjustments

Affected By

FORM FEED BELT TENSION - S (2.94)

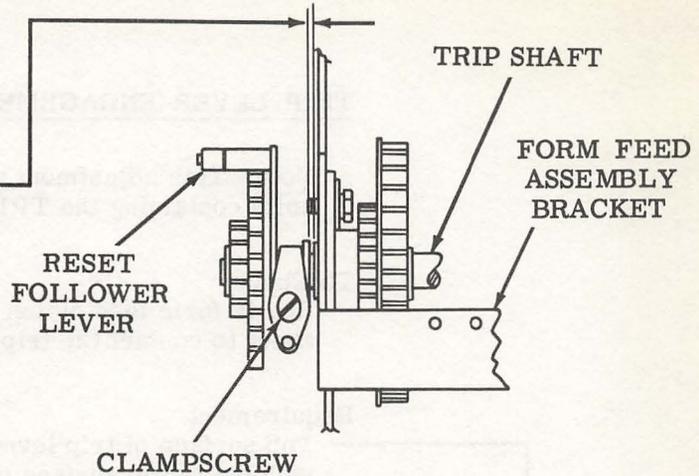

(Rear View)

LINE FEED LEVER LINE-UP AND ENDPLAY - S

(1) Requirement

The line feed pawl should engage the flat on the tab of the line feed lever.

(2) Requirement

With all endplay taken up toward the right Min some---Max 0.012 inch between line feed lever and collar.

(3) Requirement

There must be some clearance between the line feed lever and the main shaft gear.


To Adjust

Loosen collar setscrews and position collars to meet Requirements (1) and (2). Loosen main shaft gear screw and position main shaft gear to meet Requirement (3). Tighten all screws.

Related Adjustment

Affected By

FORM FEED BELT TENSION - S (2.94)

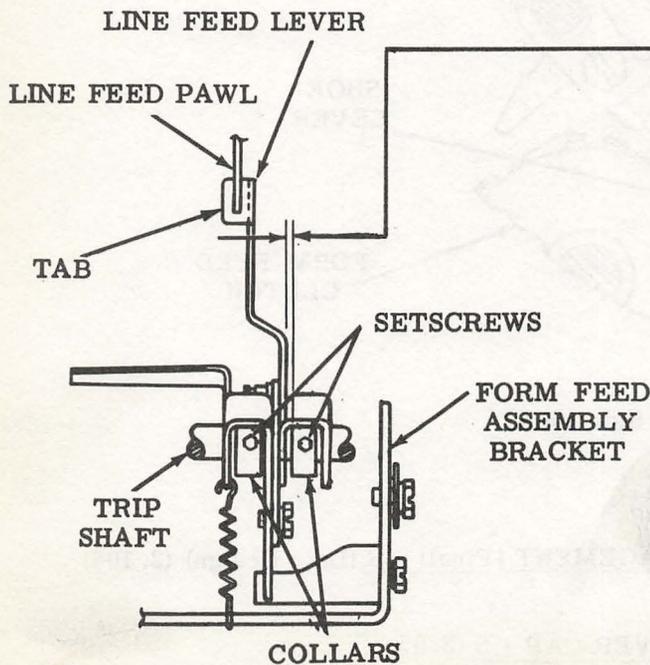

(Front View)

2.98 Form Feed Area (continued)

FORM-OUT LEVER OVERTRAVEL - S

To Check

With the form-out code combination (--34---8) set up in selector, rotate the main shaft until the form-out function lever is in its lowermost position.

Requirement

Min 0.010 inch---Max 0.020 inch clearance between form-out lever and notch of arm.

To Adjust

Loosen screw, hold form-out function lever against its pawl, and position arm using pry points. Tighten screw.

Related Adjustment

Affected By

RIGHT ROCKER DRIVE (Function Area)

(2.36)


FORM FEED BELT TENSION - S

(2.94)

FORM-OUT LEVER SPRING - S

Requirement

With the form-out lever latched
Min 34 oz---Max 44 oz
to pull form-out lever spring to installed length.

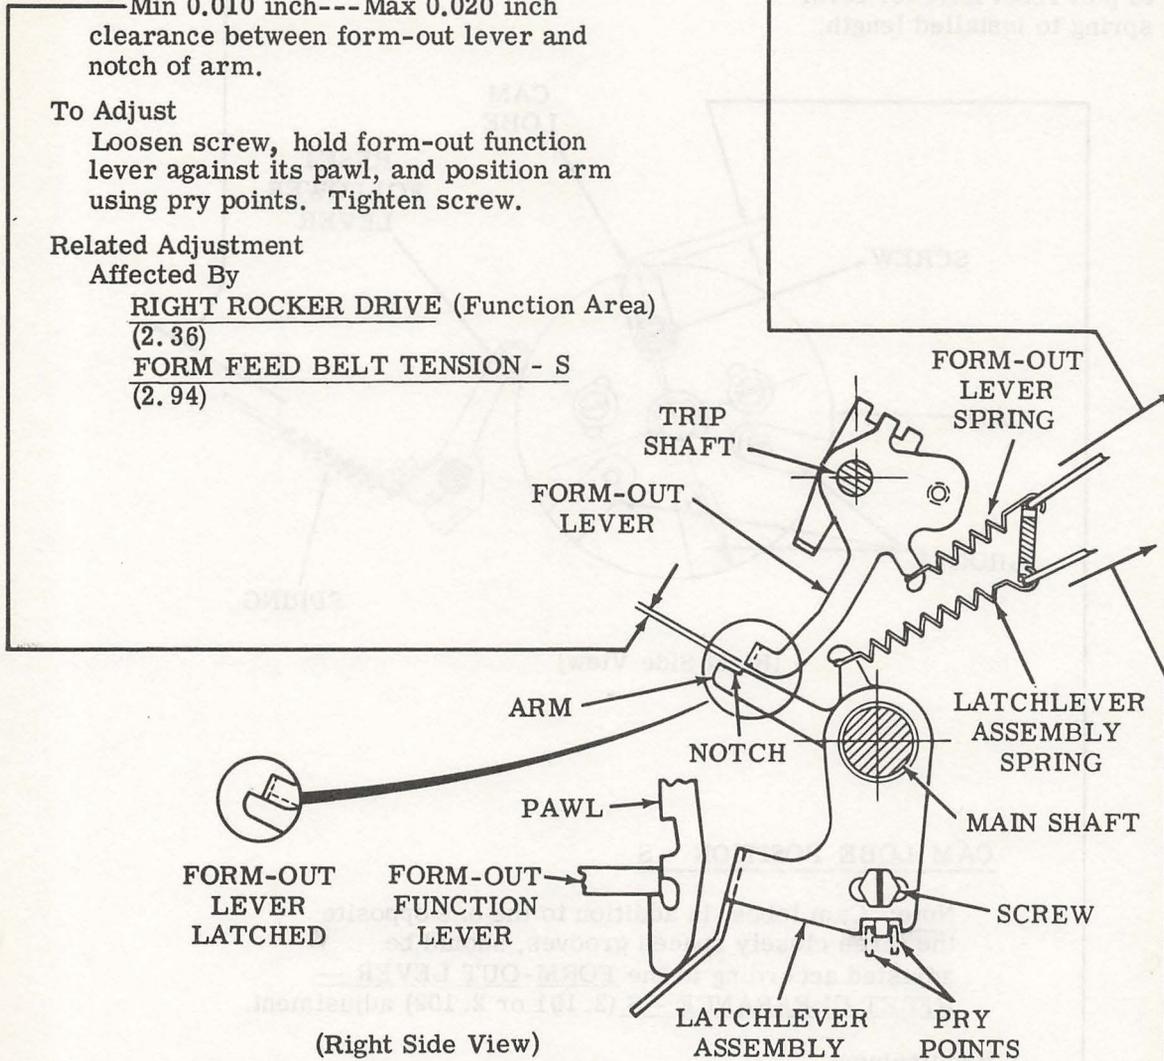

(Right Side View)

LATCHLEVER ASSEMBLY SPRING - S

Requirement

With the form-out lever latched
Min 9 oz---Max 11 oz
to pull latchlever assembly spring
to installed length.


2.99 Form Feed Area (continued)

RESET FOLLOWER LEVER SPRING - S

Requirement

With reset follower lever on low part of cam

Min 12 oz---Max 16 oz to pull reset follower lever spring to installed length.

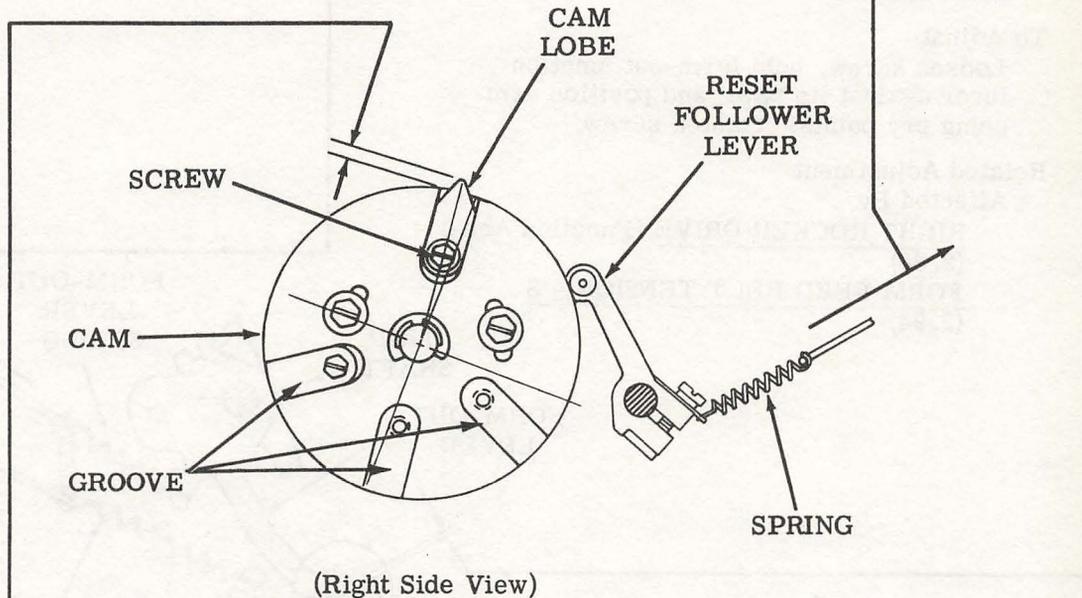

CAM LOBE POSITION - S

Note: Cam lobes, in addition to the one opposite the three closely spaced grooves, should be adjusted according to the FORM-OUT LEVER — RESET CLEARANCE - S (2.101 or 2.102) adjustment.

Requirement

The top of the cam lobe should be
Min 0.065 inch---Max 0.070 inch
above the low point of the cam.

To Adjust

Loosen screw and position the cam lobe.
Tighten screw.


Related Adjustment

Affects

FORM-OUT LEVER — RESET CLEARANCE - S (2.101 or 2.102)

2.100 Platen Area (continued)

ZEROIZING BUTTON - S

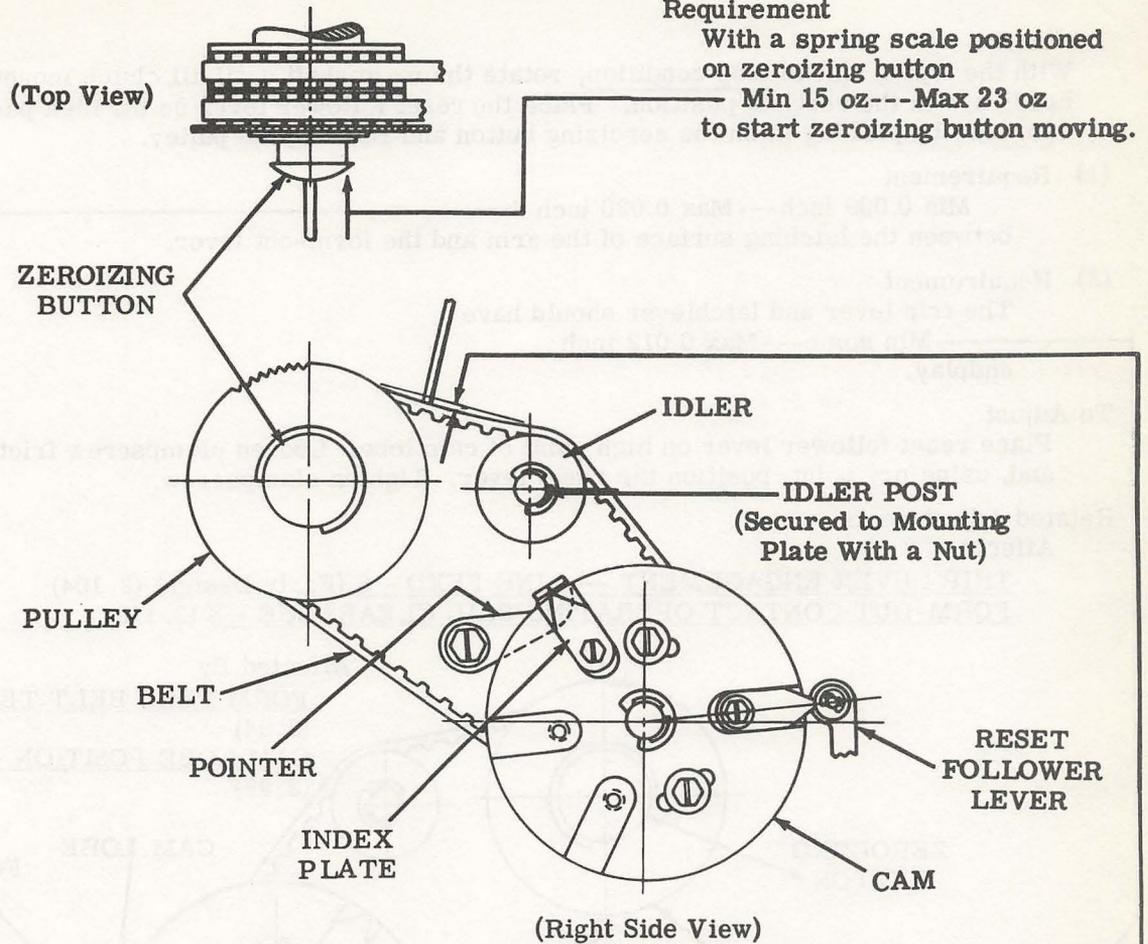

Requirement
 With a spring scale positioned on zeroizing button
 Min 15 oz---Max 23 oz
 to start zeroizing button moving.

Note: The following adjustment applies to the tighter of two belts. If there is little difference in tightness of the two belts, the adjustment applies to the outer belt.

IDLER POSITION - S

To Check

Place a 16 oz spring load to the belt between the idler and the pulley and note the amount of deflection.

Requirement

Min 0.062 inch---Max 0.125 inch deflection of belt.

To Adjust

Loosen idler post and position. Tighten idler post.

Related Adjustments

Affects

- DETENT POSITION - S (2.109)
- RESET FOLLOWER LEVER —
- RESET POSITION - S (2.110)
- CAM ZERO POSITION (2.110)
- PRINTING LINE POSITION FINAL - S (2.115)

Affected By

- PLATEN — HORIZONTAL POSITION - S (2.89)
- VERTICAL TYPE ALIGNMENT - S (2.90)

2.101 Form Feed Area (continued)

FORM-OUT LEVER — RESET CLEARANCE - S (Early Design)

To Check

With the typing unit in stop condition, rotate the main shaft until all clutch mounting screw-heads are in the vertical position. Place the reset follower lever on the high point of the cam lobe by pushing in on the zeroizing button and rotating the pulley.

(1) Requirement

Min 0.005 inch---Max 0.020 inch
between the latching surface of the arm and the form-out lever.

(2) Requirement

The trip lever and latchlever should have
Min some---Max 0.012 inch
endplay.

To Adjust

Place reset follower lever on high point of cam lobe. Loosen clampscrew friction tight and, using pry point, position the reset lever. Tighten clampscrew.


Related Adjustments

Affects

TRIP LEVER ENGAGEMENT — LINE FEED - S (Early Design) (2.104)
FORM-OUT CONTACT OPERATING BAIL CLEARANCE - S (2.113)

Affected By

FORM FEED BELT TENSION - S (2.94)
CAM LOBE POSITION - S (2.99)

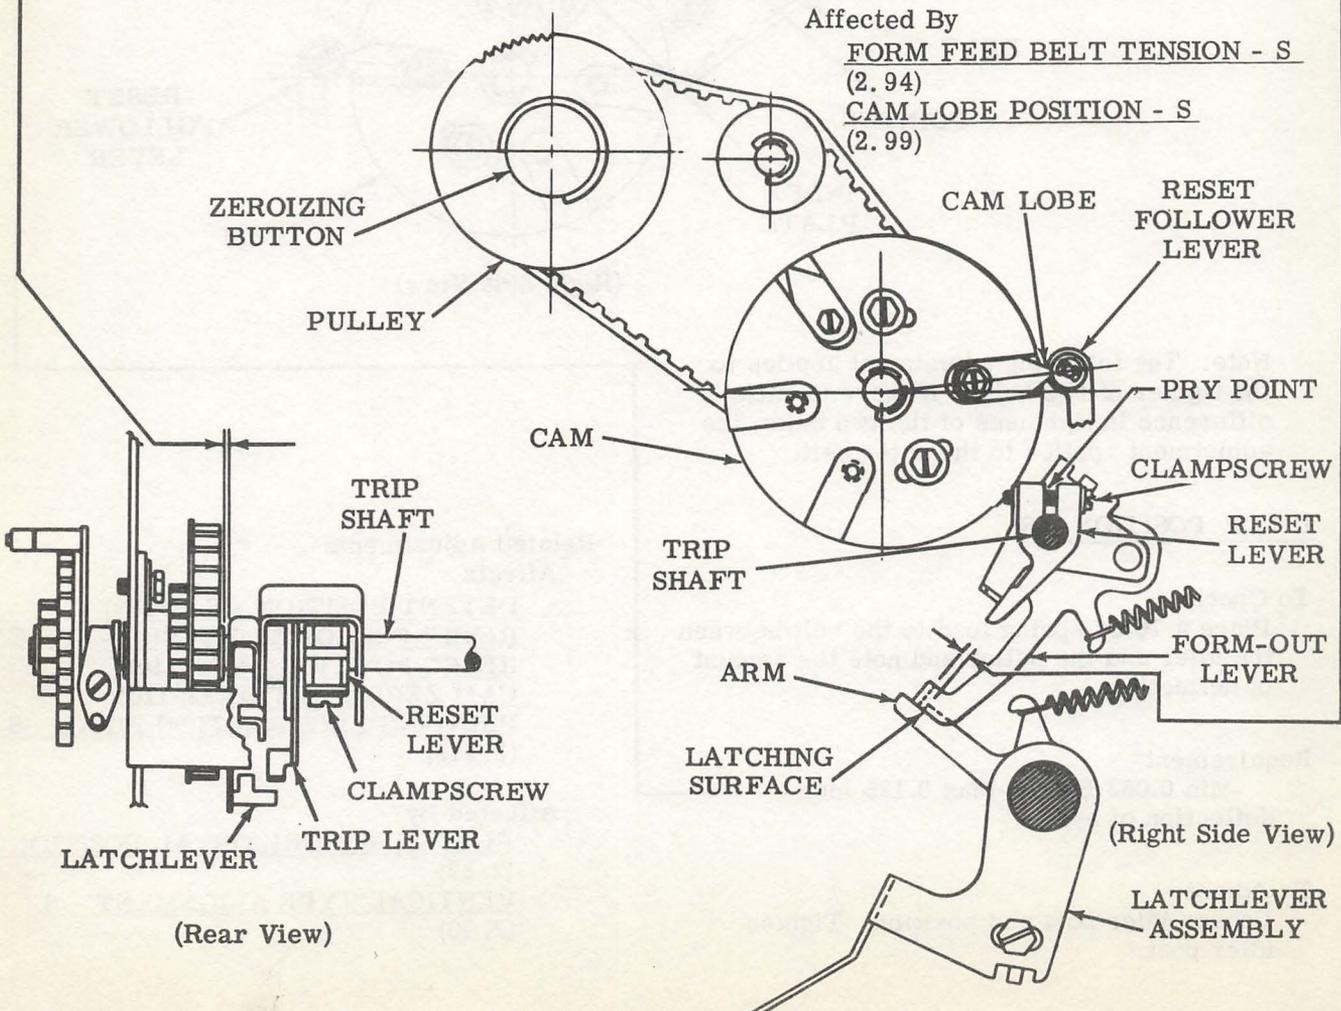

2.102 Form Feed Area (continued)

FORM-OUT LEVER — RESET CLEARANCE - S (Late Design)

Note: Check To Check (1) only when making a complete readjustment of typing unit.

(1) To Check


With typing unit in stop condition rotate main shaft until all clutch mounting screwheads are in vertical position. Place reset follower lever on low part of cam by pushing in on zeroizing button and rotating pulley. Push down on arm of latchlever assembly to unlatch form-out lever.

Requirement

- (a) Reset lever should just touch underside of form-out lever extension.
 (b) The trip lever and latchlever should have
 Min some---Max 0.012 inch
 endplay.

To Adjust

Loosen reset lever clampscrew and position reset lever using pry point.
 Tighten clampscrew.

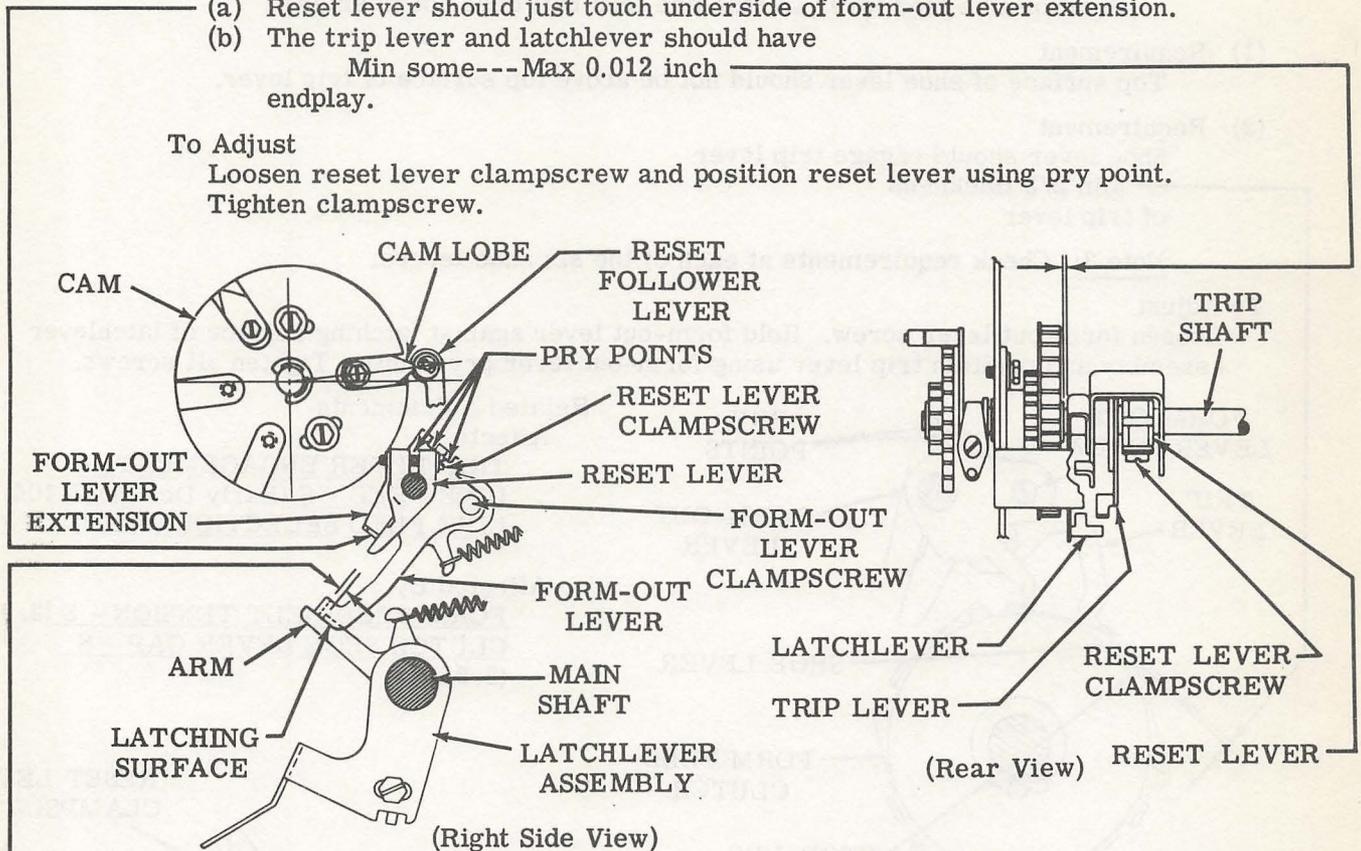

(2) To Check

With typing unit in stop condition rotate main shaft until all clutch mounting screwheads are in vertical position. Place reset follower lever on high point of cam lobe by pushing in on zeroizing button and rotating pulley.

Requirement

Min 0.005 inch---Max 0.020 inch
 between latching surface of arm and form-out lever.

To Adjust

With form-out lever clampscrew friction tight, position form-out lever using pry points. Tighten clampscrew.

Related Adjustments

Affected By

- FORM FEED BELT TENSION - S (2.94)
CAM LOBE POSITION - S (2.99)

2.103 Form Feed Area (continued)

TRIP LEVER ENGAGEMENT — FORM-OUT - S

Note 1: The following adjustment applies only to early design typing units.

To Check

Rotate form feed clutch until a shoe lever just about contacts the trip lever. Hold form-out lever against latching surface of latchlever assembly.

Note 2: If the reset lever and/or line feed bail interfere when checking this adjustment,

- (a) Loosen reset lever clampscrew and position reset lever so that it does not interfere.
- (b) Loosen line feed downstop screw and position downstop to lowermost position. Position line feed lever so that line feed bail does not interfere.

(1) Requirement

Top surface of shoe lever should not be above top surface of trip lever.

(2) Requirement

Shoe lever should engage trip lever
— Min 2/3 thickness
of trip lever.

Note 3: Check requirements at each of the six shoe levers.

To Adjust

Loosen form-out lever screw. Hold form-out lever against latching surface of latchlever assembly and position trip lever using form-out lever pry points. Tighten all screws.


Related Adjustments

Affects


TRIP LEVER ENGAGEMENT —
LINE FEED - S (Early Design) (2.104)
LINE FEED SELECTION (2.108)

Affected By


FORM FEED BELT TENSION - S (2.94)
CLUTCH SHOE LEVER GAP - S
(2.95)

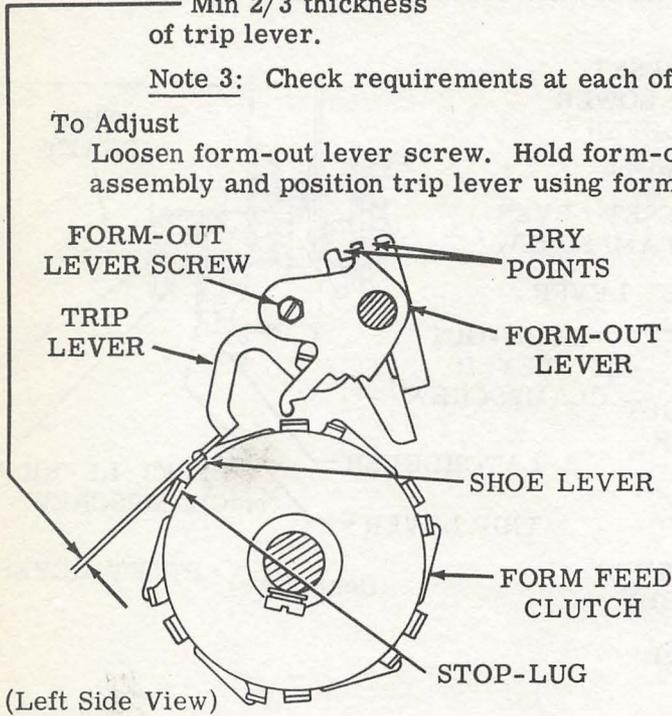

(Left Side View)

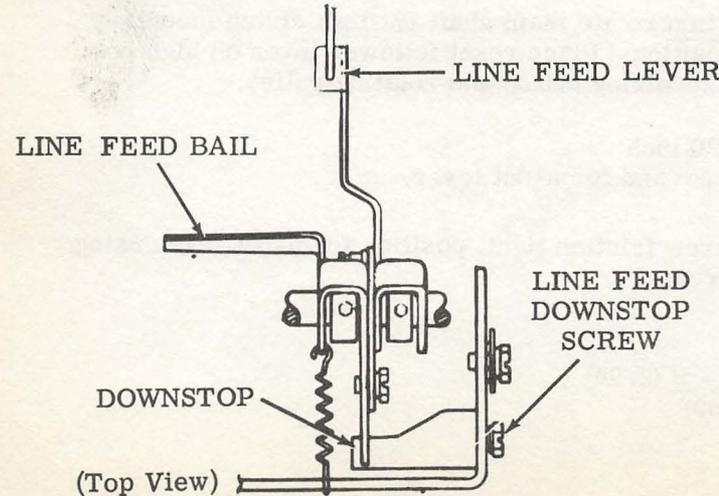

(Top View)

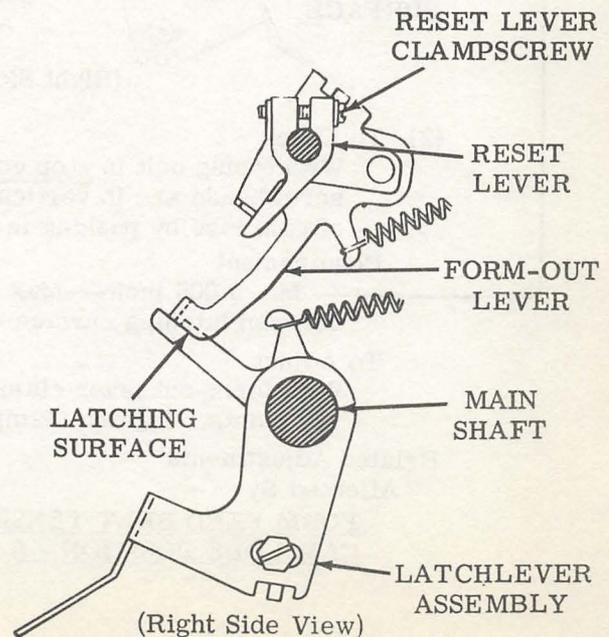

(Right Side View)

2.104 Form Feed Area (continued)

Note 1: The following adjustment applies only to early design typing units.

TRIP LEVER ENGAGEMENT — LINE FEED - S (Early Design)

To Check

Rotate form feed clutch until a shoe lever just about contacts the trip lever. Place the reset follower lever on the high point of the cam lobe by pushing in on the zeroizing button and rotating the pulley.

(1) Requirement

Top surface of shoe lever should never be above top surface of trip lever.

(2) Requirement

Shoe lever should engage trip lever
Min 2/3 thickness of trip lever.

Note 2: Check Requirement (1) and (2) at each of six shoe levers.

To Adjust

Loosen downstop screw and position downstop so that line feed bail positions trip lever to meet Requirements (1) and (2). Tighten screw.

Related Adjustments


Affects

LINE FEED SELECTION - S (2.108)

Affected By

CLUTCH SHOE LEVER GAP - S (2.95)

TRIP LEVER ENGAGEMENT — FORM-OUT - S (2.103)

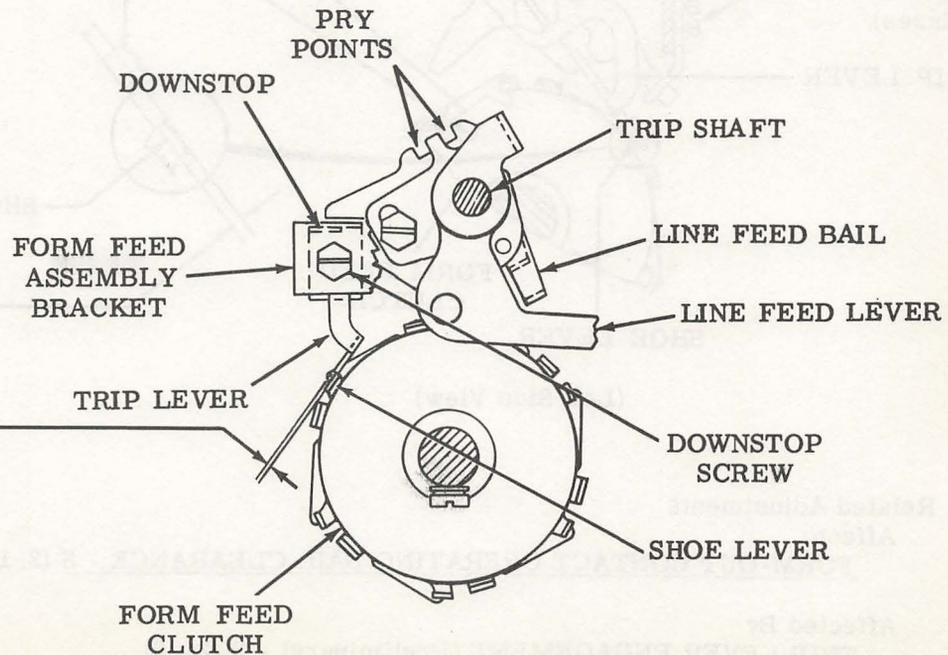

(Left Side View)

2.105 Form Feed Area (continued)

TRIP LEVER ENGAGEMENT (Final) - S (Late Design)

Note: This adjustment applies to late design typing units containing the TP185998 nickel plated plate.

To Check


Rotate main shaft until the flat surface of the form feed clutch adjusting disc is positioned as illustrated. Disengage (latch) form feed clutch. Continue rotating main shaft until all clutch mounting screwheads are in a vertical position. Trip form feed clutch and rotate main shaft until the advancing shoe lever is just about to contact the trip lever.

Requirement

Shoe lever should be aligned with trip lever.

To Adjust

Loosen two adjusting plate screws and position adjusting plate. Tighten both screws.

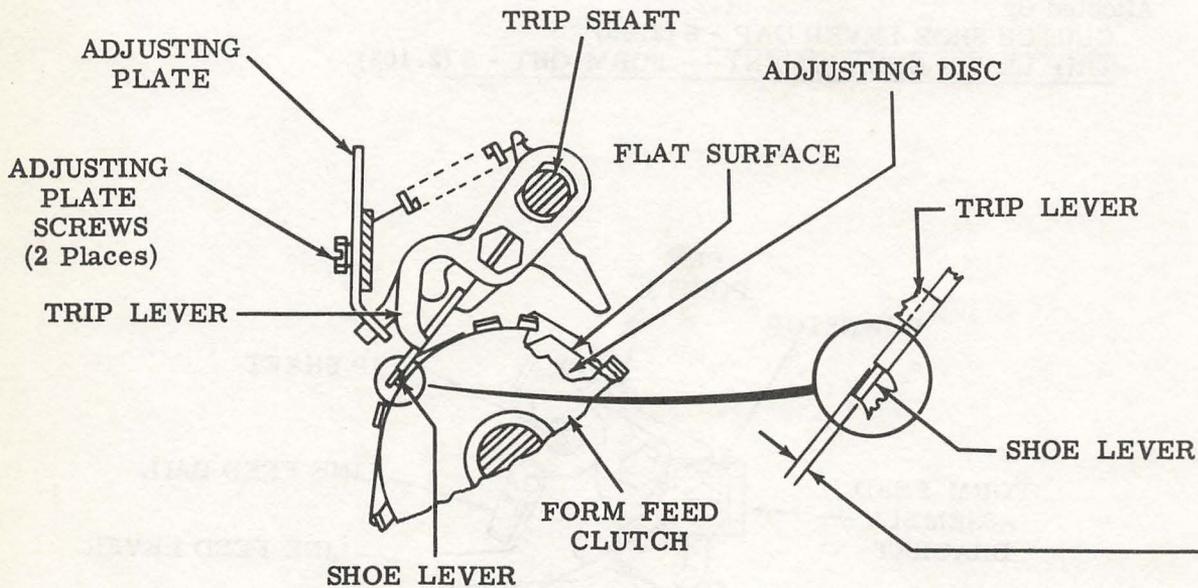

(Left Side View)

Related Adjustments

Affects

FORM-OUT CONTACT OPERATING BAIL CLEARANCE - S (2.113)

Affected By

TRIP LEVER ENGAGEMENT (Preliminary) - S (2.96)

2.106 Form Feed Area (continued)

TRIP LEVER UPSTOP POSITION - S (Early Design)

Note: The following adjustment applies only to early design typing units.

To Check

Rotate main shaft until the flat surface of the form feed clutch adjusting disc is positioned as illustrated. Disengage (latch) the form feed clutch. Resume rotating the main shaft until all the clutch mounting screwheads are in a vertical position. Press down the line feed bail to trip clutch and rotate main shaft until stop-lug is directly under the trip lever.

Requirement

Min 0.020 inch---Max 0.035 inch
between trip lever and stop-lug.

To Adjust


Loosen upstop screws and position upstop. Tighten screws.

Related Adjustments**Affects**

FORM-OUT CONTACT PRESSURE AND GAP - S (2.113)

Affected By

FORM FEED BELT TENSION - S (2.94)

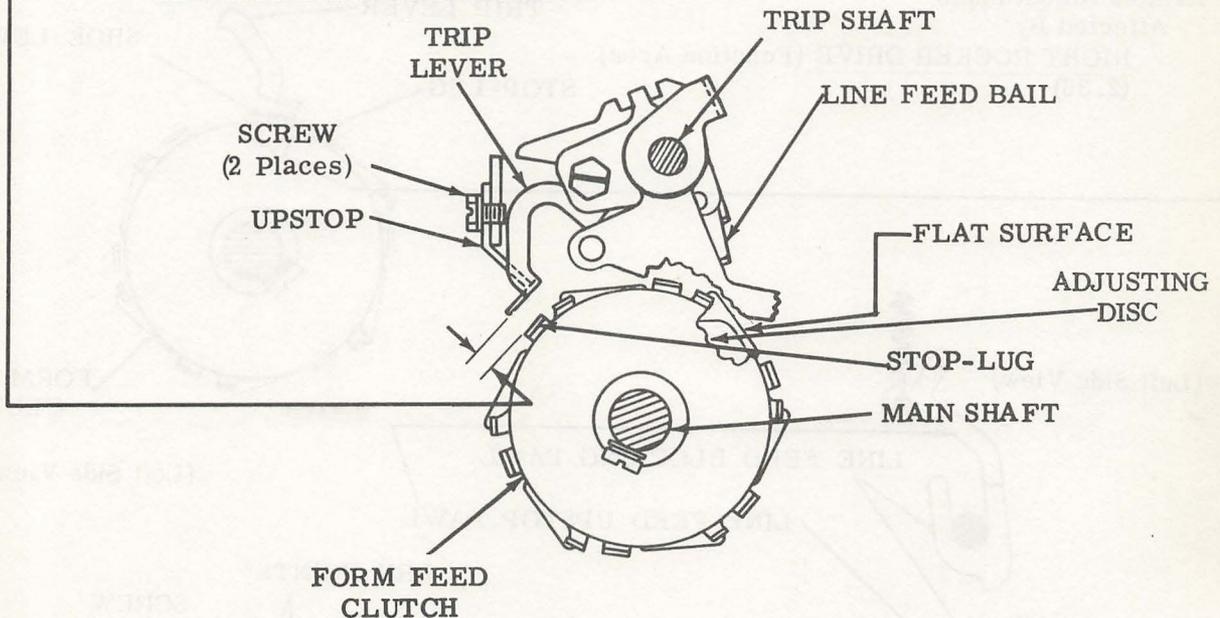

(Left Side View)

2.107 Form Feed Area (continued)

LINE FEED PAWL STRIPPING - S

To Check

Set up the typing unit for single line feed (LINE FEED SELECTION - S (2.105) adjustment). Push the line feed strip lever down and allow the line feed upstop pawl to assume its normal position against the line feed strip lever. Manually set up the line feed code combination (-2-4---8) in the selector and rotate the main shaft until the line feed pawl just strips off the line feed function lever.

Requirement



The trip lever should fall
 — Min on---Max 0.035 inch
 before stop-lug.

To Adjust

- (a) Loosen screw friction tight. Using pry points position line feed strip lever rearward three-fourths of its full adjusting range.
- (b) Check LINE FEED SELECTION - S (2.108) adjustment for single line feed.
- (c) Set up line feed code combination (-2-4---8) in selector and rotate main shaft until line feed pawl just strips off line feed function lever.
- (d) Check requirement and tighten screw if requirement is met.
- (e) If requirement is not met, move line feed strip lever slightly toward front of typing unit. Repeat steps (b), (c), and (d). Continue this procedure until requirement is met.

Related Adjustments

Affected By
RIGHT ROCKER DRIVE (Function Area)
 (2.36)

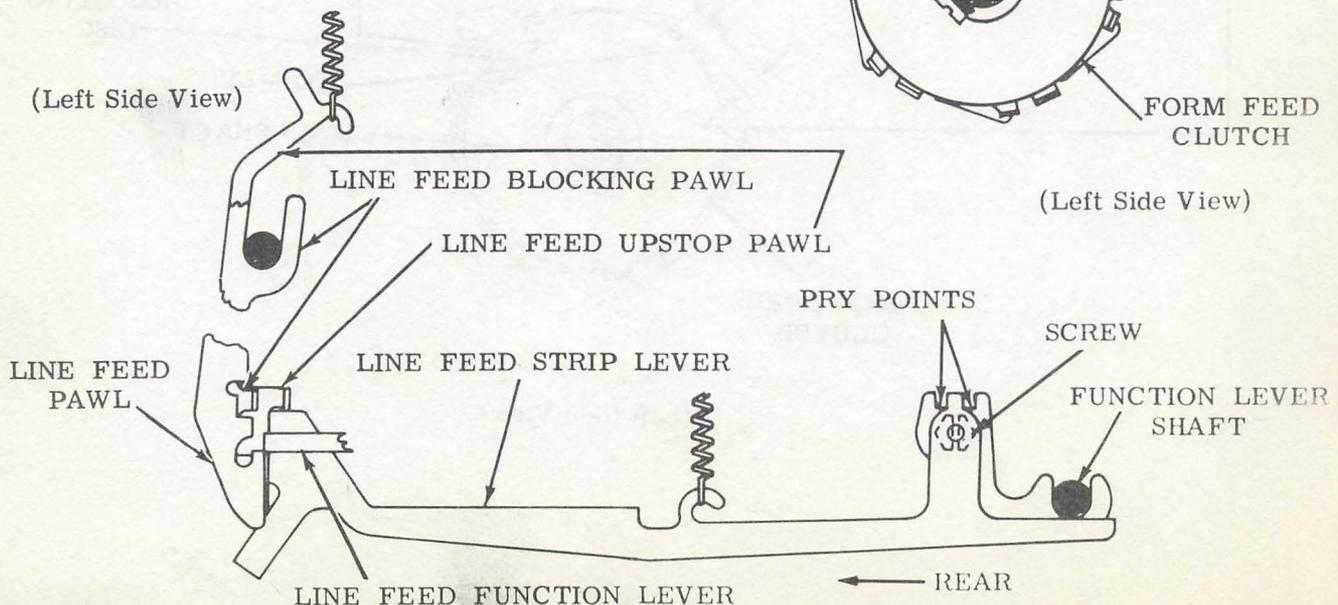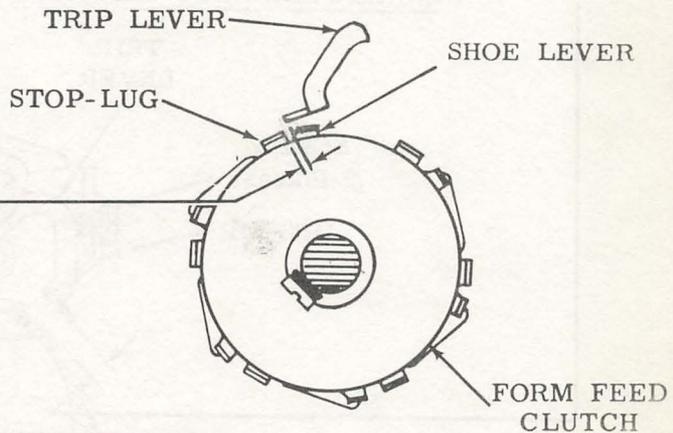

2.108 Form Feed Area (continued)


LINE FEED BAIL SPRING - S

Requirement
Early Design

Min 4 oz---Max 8 oz

Late Design

Min 2 oz---Max 4 oz
to pull line feed bail spring to installed length.

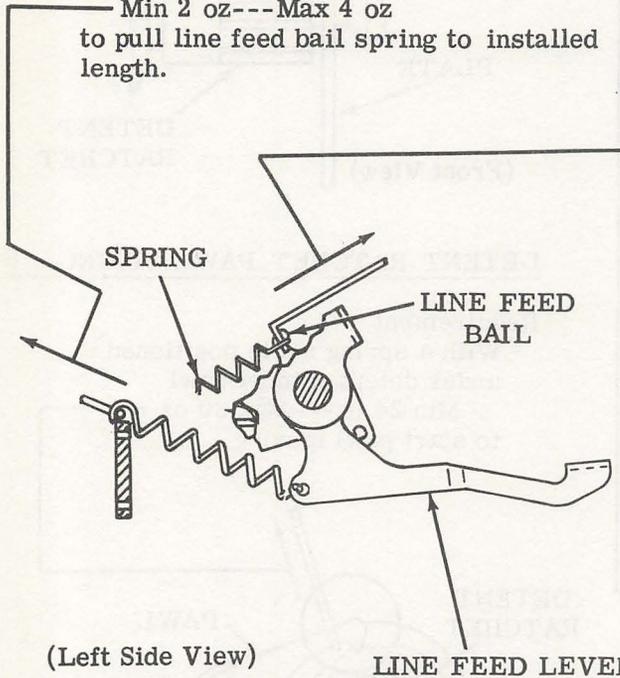

(Left Side View)

LINE FEED SELECTION

To Check

Place typing unit in stop condition.

Requirement

Single line feed

Min 0.110---Max 0.130 inch
between pawl and line feed lever.

Double line feed

Min zero---Max 0.010 inch
between pawl and line feed lever.

To Adjust

Early Design

While holding rear part of line feed lever against downstop, loosen screw friction tight. Position line feed lever using pry points. Tighten screw.

Late Design

With screw friction tight, position line feed lever using pry points. Tighten screw.

Related Adjustments

Affected By

FORM FEED BELT TENSION - S
(2.94)

TRIP LEVER ENGAGEMENT —
LINE FEED - S (Early Design) (2.104)

TRIP LEVER ENGAGEMENT —
FORM-OUT - S (2.103)

LINE FEED LEVER SPRING - S

Requirement


Early Design

With arm held against downstop
Min 21 oz---Max 35 oz
to start line feed lever moving.

Late Design

Min 27 oz---Max 40 oz
to push arm down until line feed lever contacts pawl.

Note: Late design typing units are not equipped with a downstop.

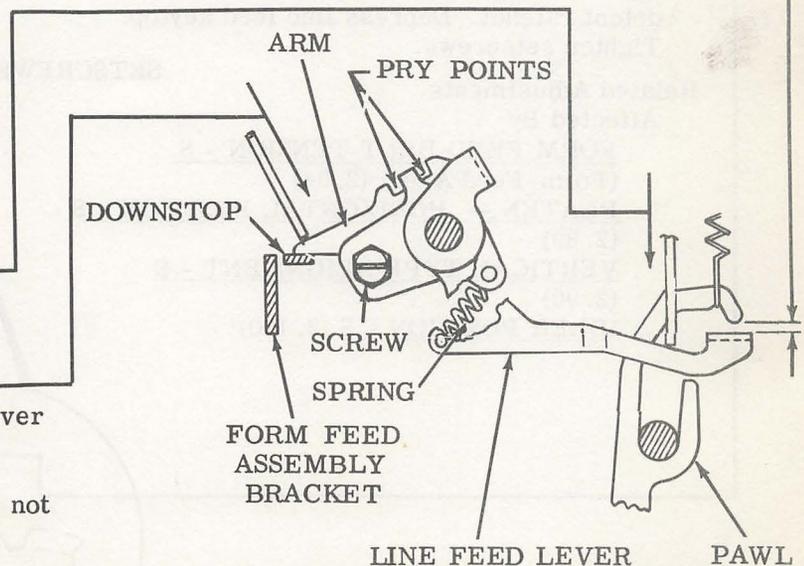

(Left Side View)

2.109 Platen Area (continued)

DETENT POSITION - S

CAUTION: TO PREVENT ELECTRICAL SHOCK EXERCISE CARE WHEN WORKING WITH TYPING UNIT UNDER POWER.

To Check

Set up line feed code combination (-2-4---8) in selector. Place TP185832 armature clip so as to hold armature attracted. Plug in typing unit plugs into proper call control receptacles and apply power to typing unit. Engage code-bar clutch to permit a line feed cycle to complete itself under power. Check requirement. Remove all power connections.

(1) Requirement

The pawl should be fully seated with a
 Max 0.007 inch
 between pawl and detent ratchet tooth.

(2) Requirement

Min some---Max 0.030 inch
 between the plate and detent ratchet.

To Adjust

Loosen both setscrews. Use finger pressure to engage and hold pawl firmly in detent ratchet. Depress line feed keytop. Tighten setscrews.

Related Adjustments

Affected By

FORM FEED BELT TENSION - S

(Form Feed Area) (2.94)


PLATEN --- HORIZONTAL POSITION - S

(2.89)

VERTICAL TYPE ALIGNMENT - S

(2.90)



IDLER POSITION - S (2.100)

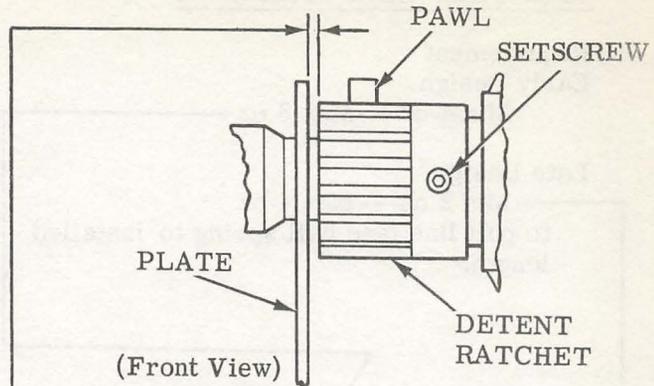


DETENT RATCHET PAWL SPRING - S

Requirement

With a spring scale positioned under detent ratchet pawl
 Min 24 oz---Max 30 oz
 to start pawl moving.

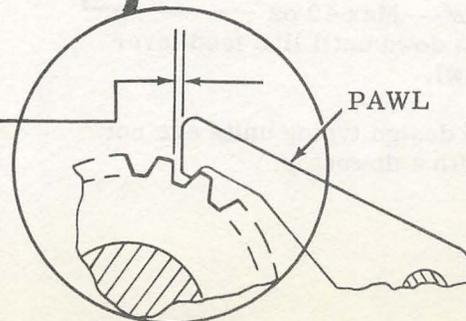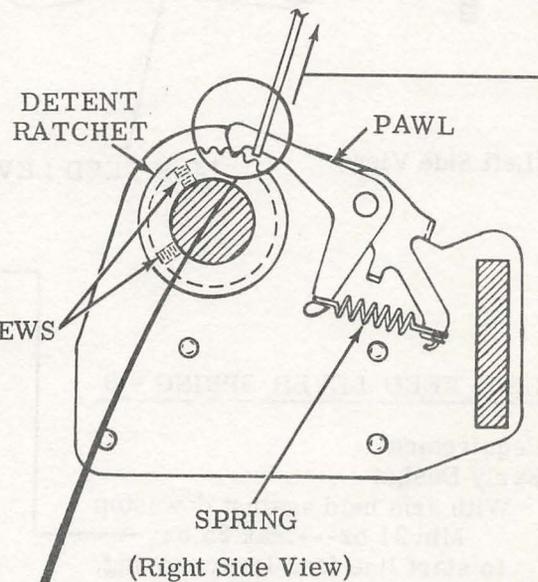

2.110 Platen Area (continued)

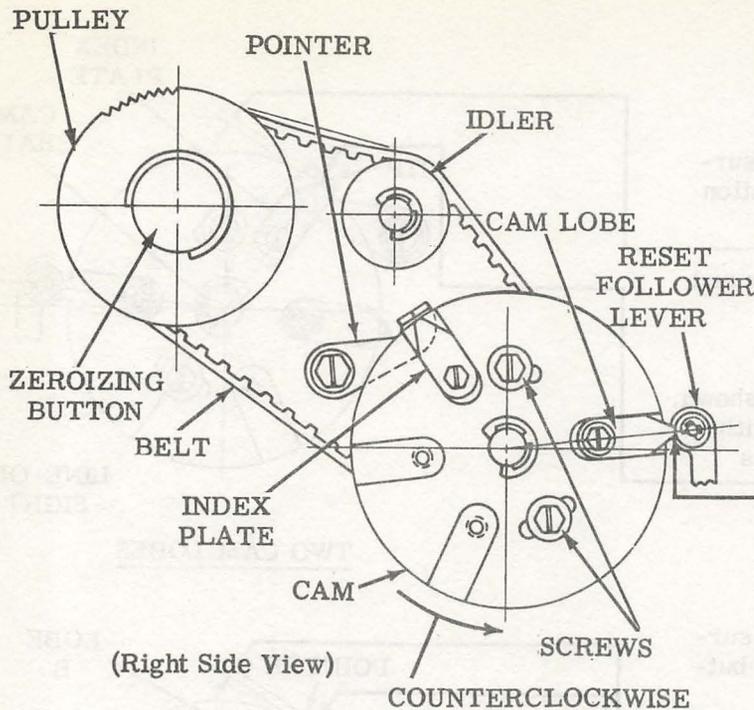

(A) RESET FOLLOWER LEVER — RESET POSITION - S

CAUTION: TO PREVENT ELECTRICAL SHOCK EXERCISE CARE WHEN WORKING WITH TYPING UNIT UNDER POWER.

To Check

Set up form-out code combination (---34---8) in selector. Place TP185832 armature clip so as to hold armature attracted. Plug typing unit plugs into proper call control unit receptacles and apply power to typing unit. Engage codebar clutch to permit a form-out cycle to complete itself under power. Check requirement. Remove all power connections.

Requirement

At the end of form-out cycle, reset follower lever should come to rest on flat surface of cam lobe.

To Adjust

Loosen screws and adjust cam. Tighten screws.

Related Adjustments

Affects

CAM ZERO POSITION (2.110)

Affected By

FORM FEED BELT TENSION - S (2.94)

IDLER POSITION - S (2.100)

PLATEN — HORIZONTAL POSITION - S (2.89)

VERTICAL TYPE ALIGNMENT - S (2.90)

(B) CAM ZERO POSITION

To Check

With cam lobes and index plates located on cam as shown on associated line drawings, place typing unit in stop condition.

Note: Reset follower lever must rest on proper cam lobe to zero a sprocket form. Place it in such position by depressing zeroizing button and rotating pulley until reset follower lever rests on cam lobe opposite three closely spaced grooves (on cam) facing toward the front of typing unit.

One cam lobe:


(1) Requirement

With reset follower lever on flat surface of cam lobe and zeroizing button in its right most position

Min some---Max 0.035 inch between bottom surface of pointer and low part of cam.

(2) Requirement

When viewed along line-of-sight shown, tip of pointer should be aligned with index plate aluminized surface, as gauged by eye.

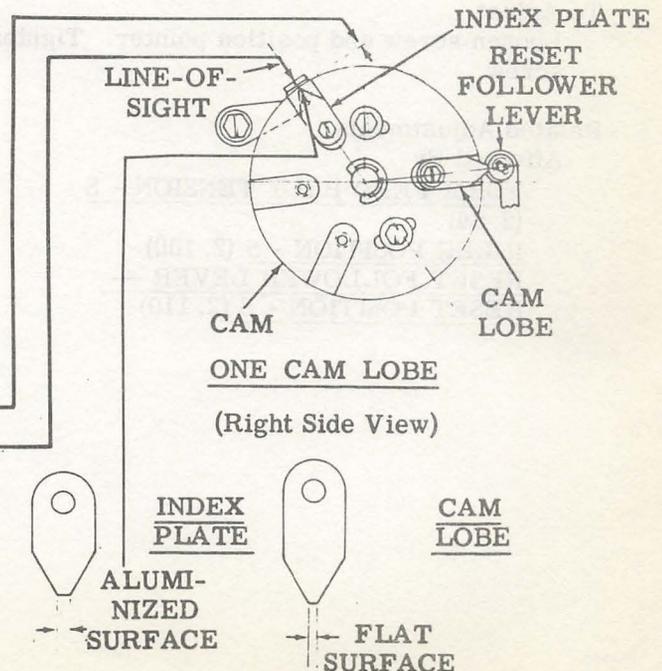


2.111 Platen Area (continued)

CAM ZERO POSITION (continued)

Two cam lobes:

- (1) Requirement
 With reset follower lever on flat surface of cam lobe and zeroizing button in its rightmost position
 Min some---Max 0.035 inch
 between bottom surface of pointer and low part of cam.

- (2) Requirement
 When viewed along line-of-sight shown, tip of pointer should be aligned with index plate aluminized surface, as gauged by eye.

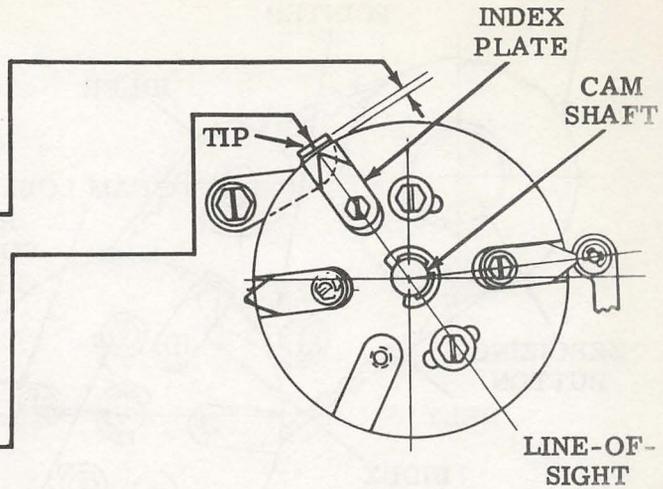


TWO CAM LOBES

Three cam lobes:

- (1) Requirement
 With reset follower lever on flat surface of cam lobe A and zeroizing button in its rightmost position
 Min some---Max 0.035 inch
 between bottom surface of pointer and low part of cam.

- (2) Requirement
 When viewed along line-of-sight shown, tip of pointer should be aligned with flat surface of lobe B, as gauged by eye.

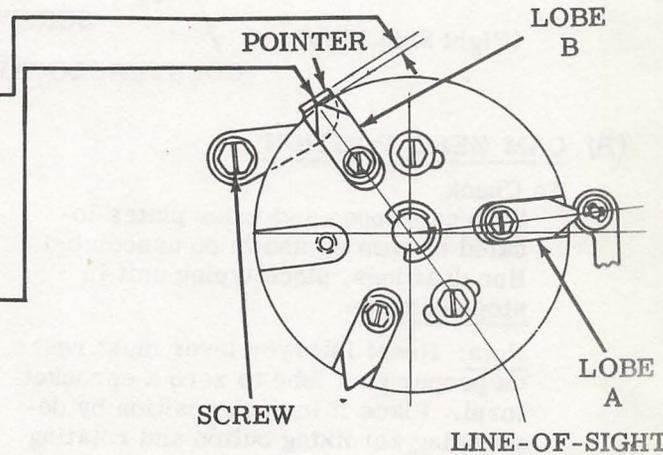

THREE CAM LOBES

(Right Side Views)

To Adjust

Loosen screw and position pointer. Tighten screw.

Related Adjustments

Affected By

- FORM FEED BELT TENSION - S (2.94)
- IDLER POSITION - S (2.100)
- RESET FOLLOWER LEVER —
- RESET POSITION - S (2.110)

2.112 Platen Area (continued)

FORM LENGTH SELECTION - S**To Check**

The control cam of the platen drive mechanism normally will come with two cam lobes. This causes sprocket forms to feed out one-half the basic form length.


Requirement

A longer form length.

To Adjust

Line up the pointer with the aluminized surface of the index plate. Remove and discard the cam lobe which is located in the other side of the control cam opposite the reset follower lever.

Note: A listing of gears which provide various form feed lengths can be found in the appropriate parts section.

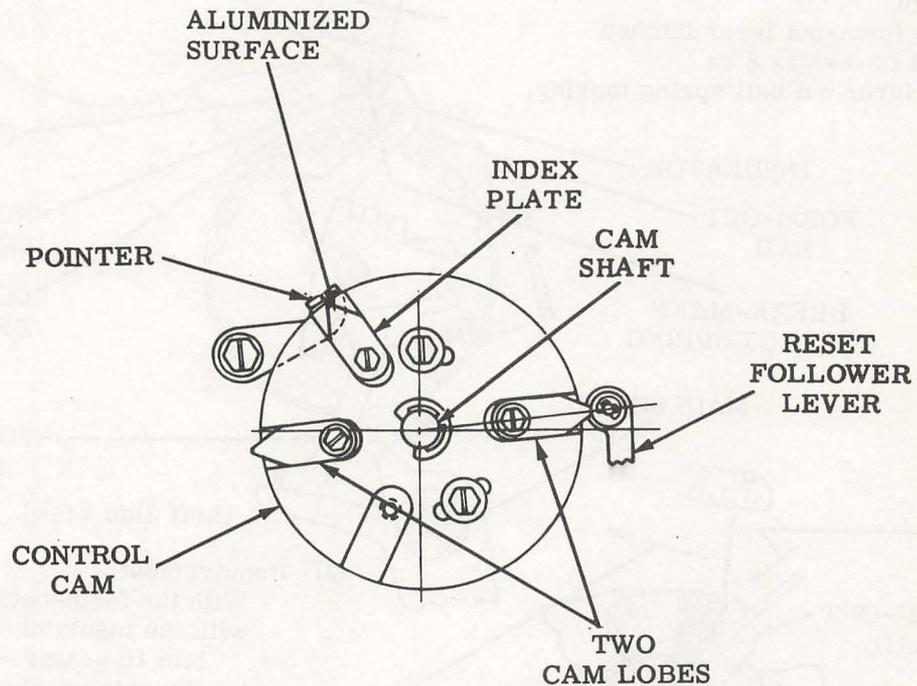

(Right Side View)

2.113 Form Feed Area (continued)

FORM-OUT CONTACT OPERATING BAIL CLEARANCE - S

To Check

With the typing unit in stop condition, place the reset follower lever on the low part of the cam by pushing in on the zeroizing button and rotating the pulley until the required situation is obtained.

Requirement

Min 0.005 inch---Max 0.015 inch between form-out bail and insulator.

To Adjust

Loosen clampscrew and position contact bracket. Tighten clampscrew.


Related Adjustments

Affected By
TRIP LEVER ENGAGEMENT -- FORM-OUT - S (2.103)

FORM-OUT BAIL SPRING - S

Requirement

With the form-out lever latched
 Min 4 oz---Max 8 oz to start form-out bail spring moving.

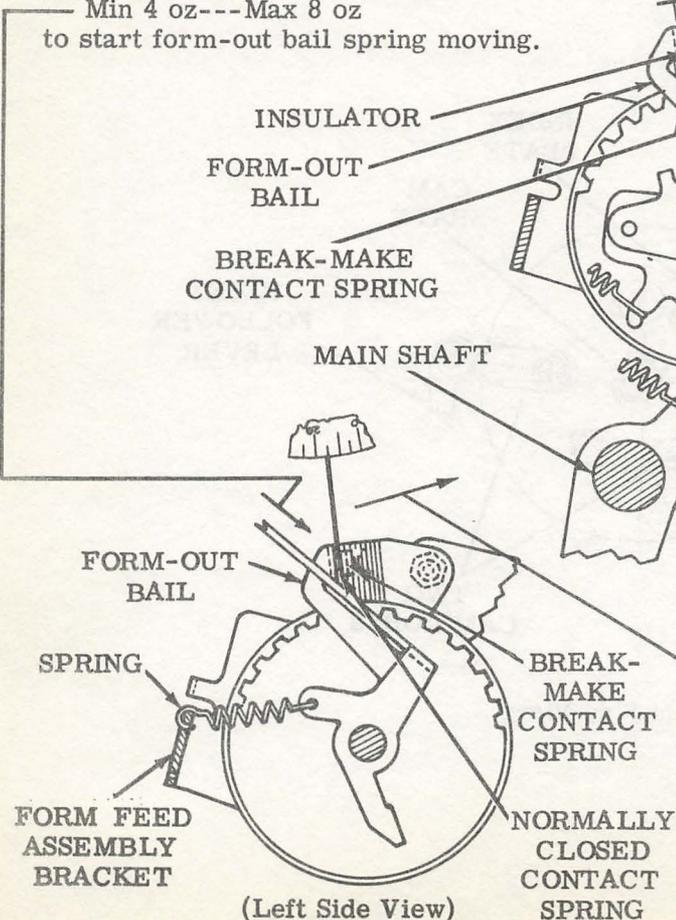

FORM-OUT CONTACT PRESSURE AND GAP - S


(1) Requirement

With the form-out bail not in contact with the insulator

Min 0.008 inch---Max 0.018 inch between a contact of the break-make contact spring and the contact of the normally open contact spring.

To Adjust

Bend the normally open contact spring.

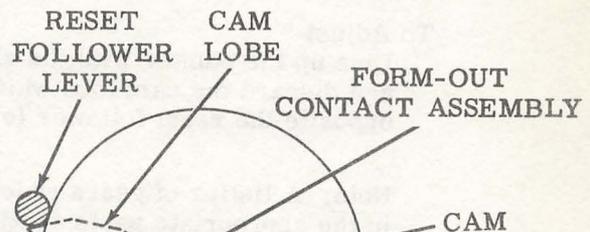

(2) Requirement

With the form-out bail not in contact with the insulator

Min 15 grams---Max 20 grams to separate break-make contact spring and the normally closed contact spring.

To Adjust

Bend the normally closed contact spring.

Related Adjustments

Affected By
FORM FEED BELT TENSION - S (2.94)
TRIP LEVER UPSTOP POSITION - S (Early Design) (2.106)

2.114 Platen Area (continued)

PRINTING LINE POSITION (Preliminary) - S

(1) Requirement

The left sprocket ring pins should be centrally located within the paper guide slot.

To Adjust

Loosen setscrews and position the left sprocket ring.

Note: Do not tighten setscrews until adjustment has been completed.

(2) Requirement

With the setscrews of the left and right sprocket rings in line, place a single sprocket form on the platen with the sprocket form feed holes over the left and right sprocket ring pins. The left and right sprocket ring pins should be in line and centrally located in the sprocket form feed holes.


To Adjust

Loosen setscrews and position the left and/or right sprocket rings as required. Tighten all setscrews.

Related Adjustments

Affects

RIGHT PAPER GUIDE POSITION - S
(2.116)

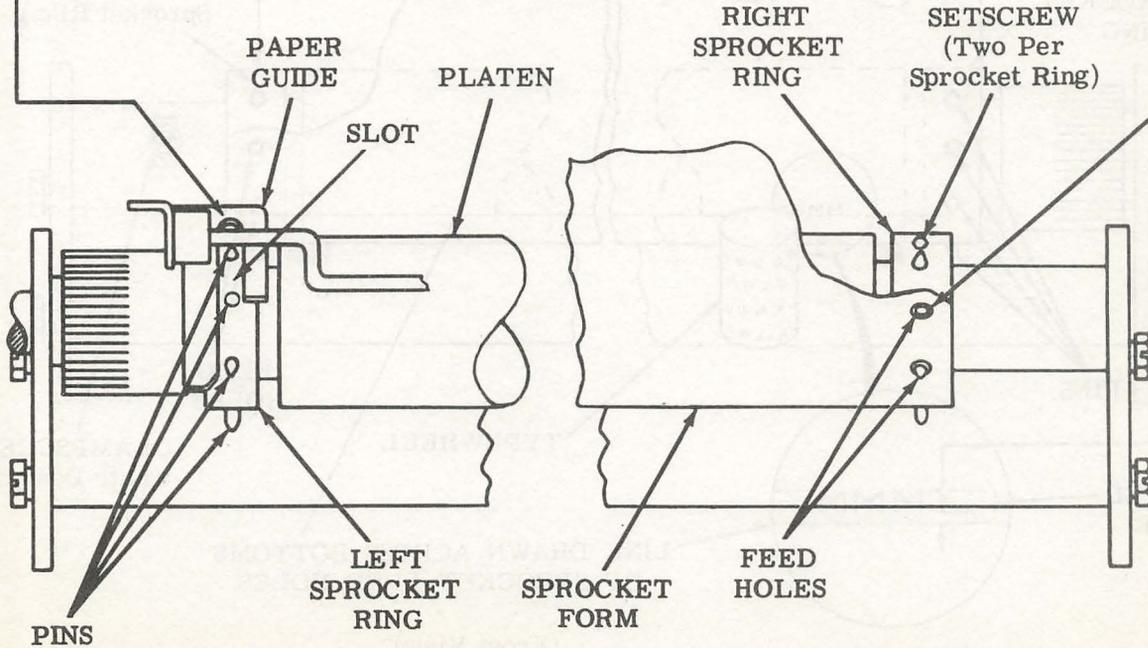

(Front View)

2.115 Platen Area (continued)

PRINTING LINE POSITION (Final) - S

To Check

Place a single sheet of sprocket form in platen mechanism. Print the character M several times to establish a printed line.

Note: On nonprinted forms, draw a horizontal line across form connecting bottom of sprocket feed holes.

Requirement

Printed Form

Printed line should be aligned with sprocket form lines.

Nonprinted Form

- (a) Printed line should be aligned with drawn line.
- (b) Printed line should not touch drawn line.
- (c) Printed line should not be more than 1/16 inch above drawn line with no more than 1/32 inch variation along its entire length.

To Adjust

Early Design

Modify Requirement (2) of PRINTING LINE POSITION (Preliminary) - S (2.114)

Late Design (containing adjusting clampscrew)

Loosen clampscrew and position platen. Tighten clampscrew.


Related Adjustments

Affects

RIGHT PAPER GUIDE POSITION - S (2.116)

Affected By

PRINTING LINE POSITION (Preliminary) - S (2.114)

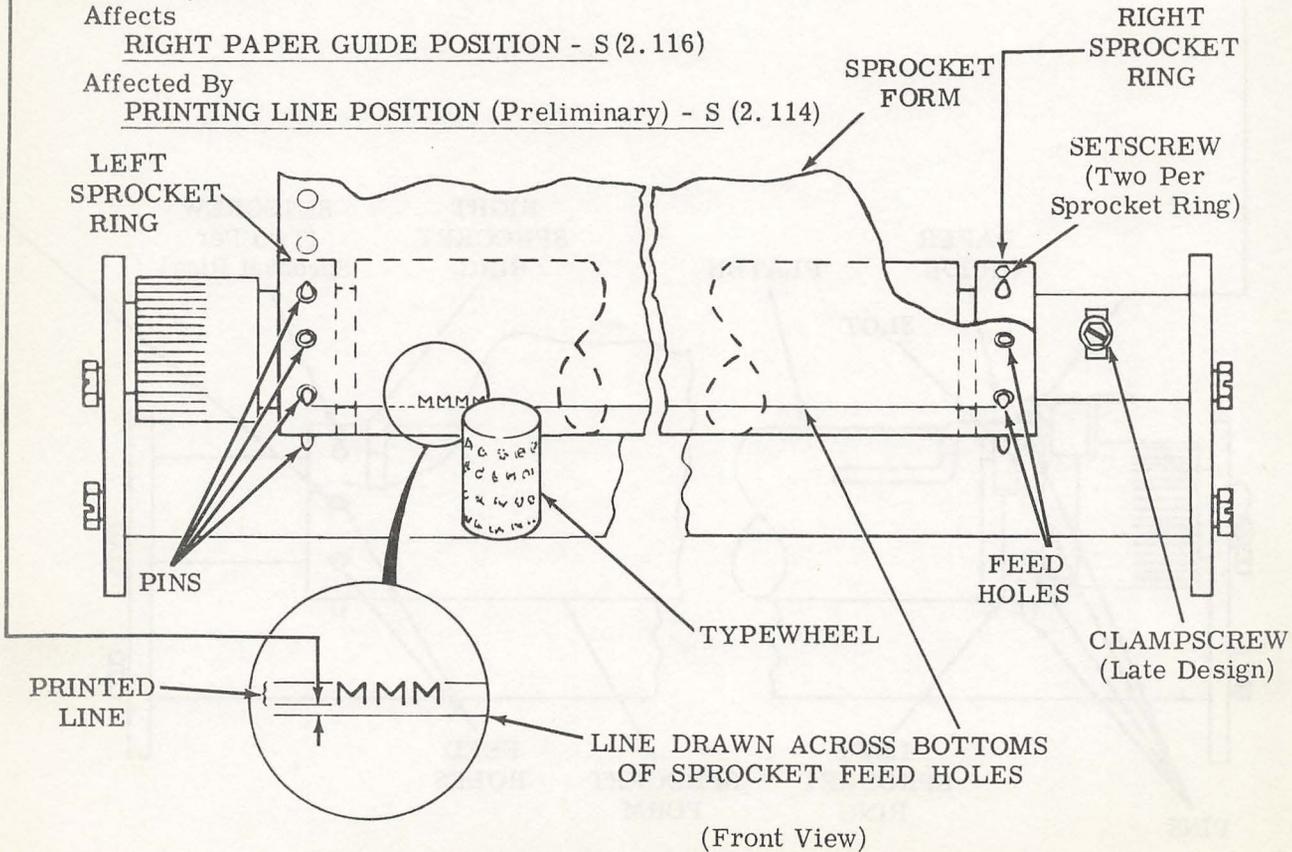


2. 116 Platen Area (continued)

RIGHT PAPER GUIDE POSITION - S**Requirement**

The right sprocket ring pins should be centrally located within the paper guide slot.

To Adjust

Loosen screws and position right paper guide.
Tighten screws.

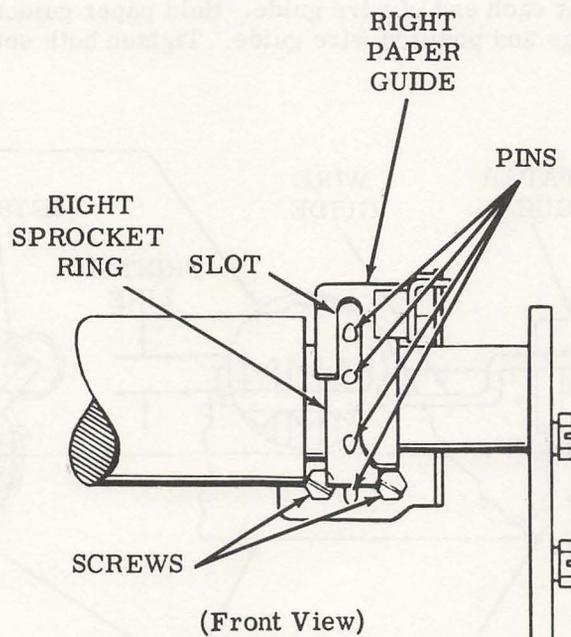**Related Adjustments****Affected By**

PRINTING LINE POSITION (Final) - S (2. 115)

2.117 Platen Area (continued)

WIRE GUIDE POSITION - S

To Check


Put a sprocket form containing several lines of printed copy in the unit. Place platen in its detented position with top edge of form feed holes engaging top edge of sprocket ring pins. Place left and right paper guides in contact with their associated sprocket rings.

Requirement

The wire guide should fully contact the sprocket form and should be centrally located between the lines of printed copy with a maximum of 1/2 line overlap.

To Adjust

Loosen setscrew at each end of wire guide. Hold paper guides against their sprocket rings and position wire guide. Tighten both setscrews.

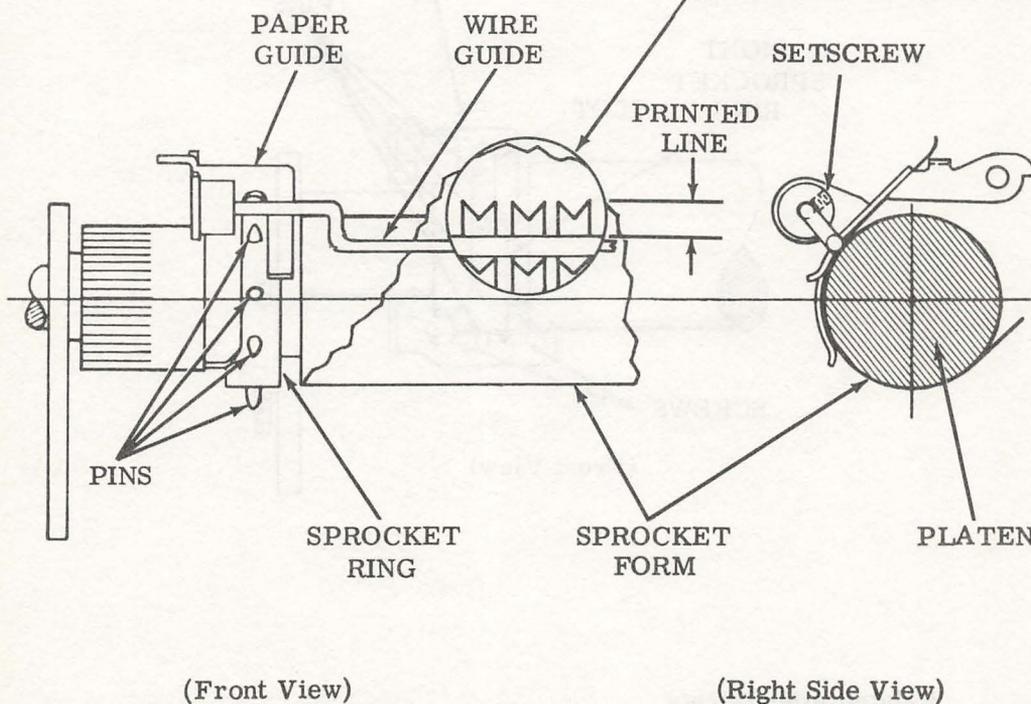

Related Adjustments

Affected By

PLATEN — HORIZONTAL POSITION - S (2.89)

VERTICAL TYPE ALIGNMENT - S (2.90)

2.118 Platen Area (continued)

LEFT MARGIN POSITION - S

To Check

Place platen knob screw in a vertical position and carriage to the left hand margin. Fully seat piston in dashpot cylinder.

(1) Requirement

Approximately 3/8 inch between edge of sprocket ring pin and V-projection.

(2) Requirement

Min 0.030 inch between the closest sprocket ring pin and ribbon guide.

To Adjust

Loosen two dashpot cylinder mounting screws and position dashpot cylinder. Tighten screws.

Related Adjustments

Affects

- RIGHT MARGIN POSITION - S (2.118)
- CARRIAGE RETURN LEVER —
- UNLATCH CLEARANCE (2.75)
- LEFT MARGIN PRINTING (2.120)

RIGHT MARGIN POSITION - S

To Check

Place carriage to the right to the 72nd character position. Hold feed pawl out of engagement with spacing ratchet, so that only check pawl is engaged.

Requirement

Min 0.030 inch between right sprocket ring pin and ribbon guide.


To Adjust

Refine LEFT MARGIN POSITION - S (2.118) adjustment.

Related Adjustments

Affected By

LEFT MARGIN POSITION - S (2.118)

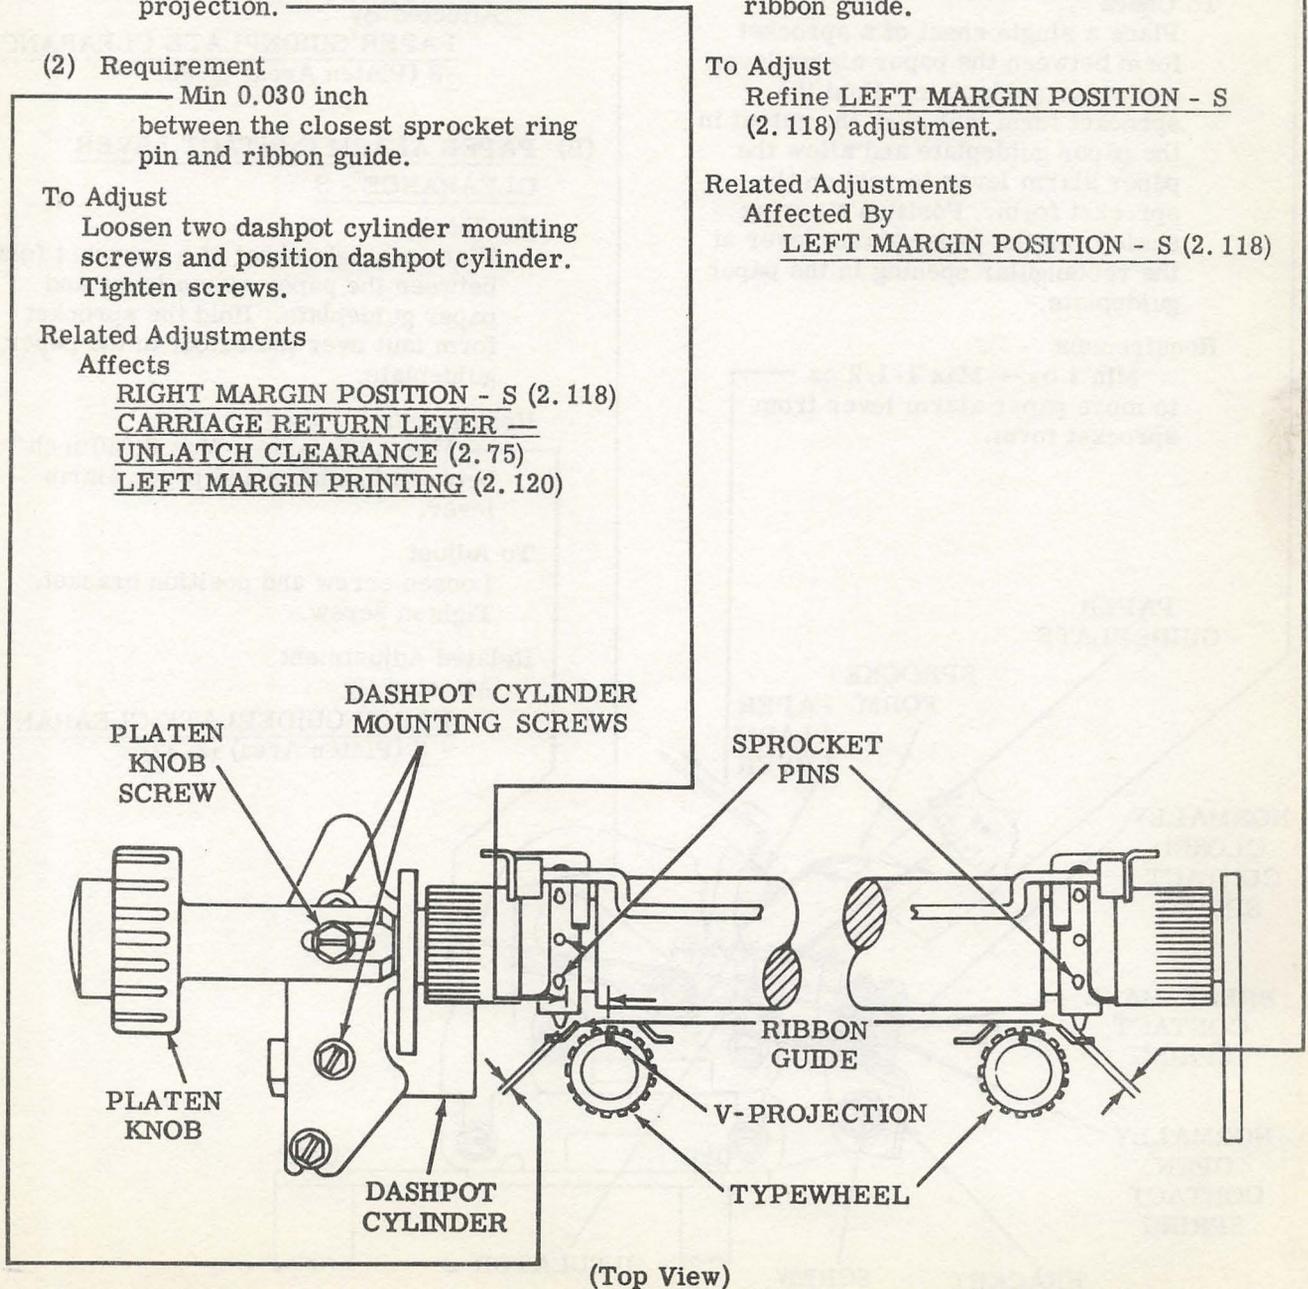

(Top View)

2.119 Paper Controls (Paper Alarm Control Area)

(A) PAPER ALARM CONTACT PRESSURE AND GAP - S

(1) Requirement

With the paper alarm lever not in contact with insulator
 --- Min 15 grams---Max 20 grams to separate the contacts of the break-make contact spring and normally closed contact spring.

(C) PAPER LEVER SPRING - S

To Check

Place a single sheet of a sprocket form between the paper alarm lever and paper guideplate. Hold the sprocket form taut over the cutout in the paper guideplate and allow the paper alarm lever to rest on the sprocket form. Position a spring scale over the paper alarm lever at the rectangular opening in the paper guideplate.

Requirement

Min 1 oz---Max 1-1/2 oz to move paper alarm lever from sprocket form.

(2) Requirement

With the paper alarm lever not in contact with insulator
 --- Min 0.010 inch---Max 0.020 inch between the contacts of the break-make contact spring and the normally open contact spring.

To Adjust

Bend normally closed contact spring.

Related Adjustment

Affected By

PAPER GUIDEPLATE CLEARANCE -S (Platen Area) (2.92)

(B) PAPER ALARM CONTACT LEVER CLEARANCE - S

To Check

Place a single sheet of a sprocket form between the paper alarm lever and paper guideplate. Hold the sprocket form taut over the cutout in the paper guideplate.

Requirement

Min 0.005 inch---Max 0.030 inch between insulator and paper alarm lever.


To Adjust

Loosen screw and position bracket. Tighten screw.

Related Adjustment


Affected By

PAPER GUIDEPLATE CLEARANCE - S (Platen Area) (2.92)

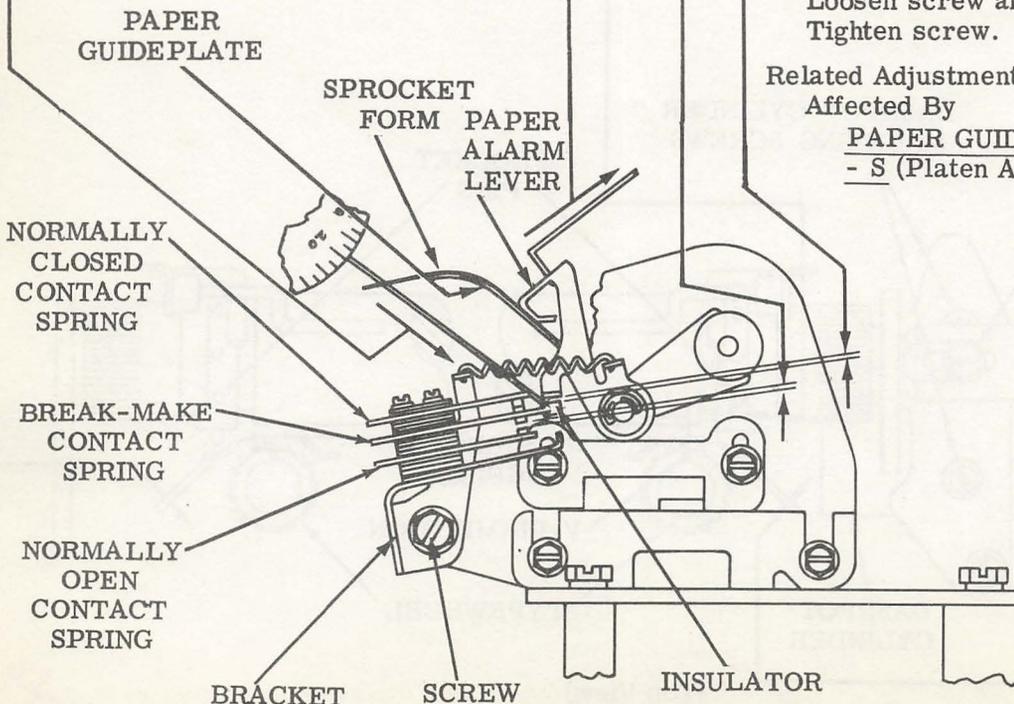

(Left Side View)

2.120 Spacing Area (continued)

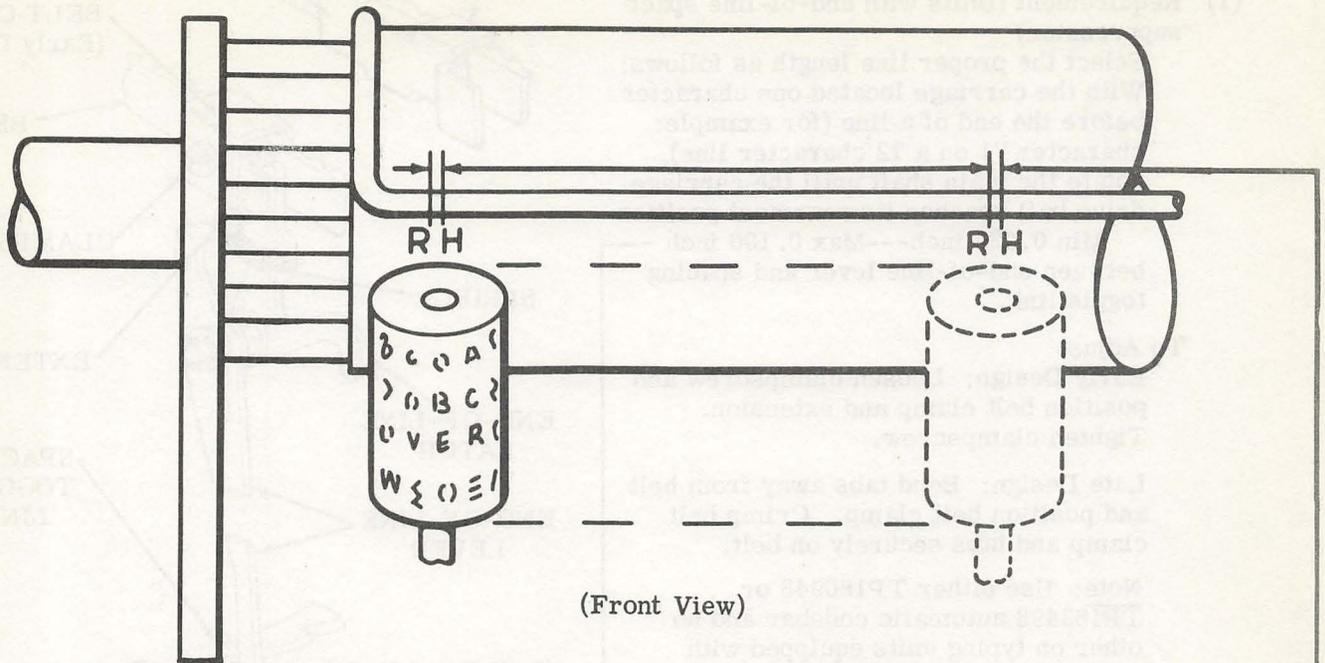LEFT MARGIN PRINTING**To Check**

Print two or more characters such as RH at left margin and at center of line.

Requirement

Character to character spacing approximately same as center of line as at left margin.

To Adjust

With spacing ratchet clampscrews friction tight, seat piston firmly in the dashpot. Rotate the carriage return arm counter-clockwise to permit the feed pawl and check pawl to move toward the spacing ratchet. Position the spacing ratchet so that the check pawl rests on top of a spacing ratchet tooth. Tighten spacing ratchet clampscrews. Recheck Requirement and refine adjustment if necessary.

Related Adjustments**Affected By**

SPACING BELT TENSION (2.69)


LEFT MARGIN POSITION - S

(Platen Area) (2.118)

LEFT MARGIN POSITION - F

(Platen Area) (2.72)

RIGHT MARGIN POSITION (2.118)

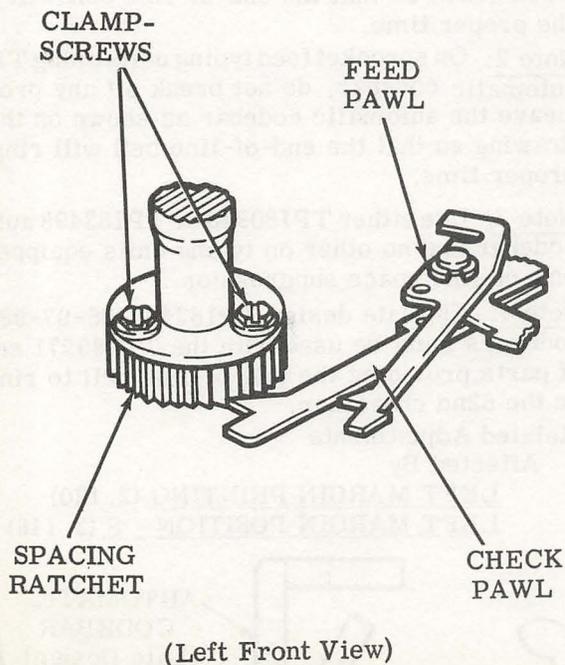

2.121 Function Area (continued)

LINE LENGTH SELECTION

- (1) Requirement (Units with end-of-line space suppression)

Select the proper line length as follows:
With the carriage located one character before the end of a line (for example: character 71 on a 72 character line), rotate the main shaft until the carriage drive bail reaches its rearmost position

Min 0.025 inch---Max 0.100 inch
between end-of-line lever and spacing toggle link.

To Adjust

Early Design: Loosen clampscrew and position belt clamp and extension. Tighten clampscrew.

Late Design: Bend tabs away from belt and position belt clamp. Crimp belt clamp and tabs securely on belt.

Note: Use either TP180948 or TP183498 automatic codebar and no other on typing units equipped with end-of-line space suppression.

- (2) Requirement (Units with automatic carriage return-line feed)

Select either a 69, 72, or 74 character line length.


To Adjust

TP180948 Automatic Codebar: Break off projection(s) as follows:

Line Length (Characters)	End-of-Line Bell (Characters)	Projection Removed
69	65	None
72	68	1
74	70	1 and 2

TP183495, TP183496, TP183497 automatic codebars: Use the proper automatic codebar as follows:

Line Length (Characters)	End-of-Line Bell (Characters)	Automatic Codebar
69	69	TP183495
72	71	TP183496
74	73	TP183497

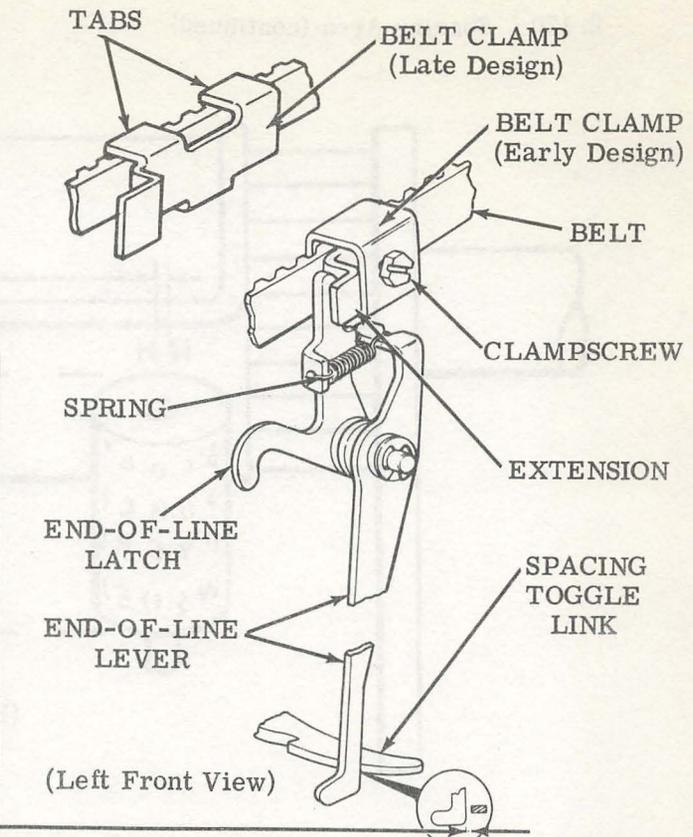

Note 1: On friction feed typing units using TP180948 automatic codebar, break off projection(s) as instructed in Automatic Carriage Return — Line Feed above so that the end-of-line bell will ring at the proper time.

Note 2: On sprocket feed typing units using TP180948 automatic codebar, do not break off any projections. Leave the automatic codebar as shown on the line drawing so that the end-of-line bell will ring at the proper time.

Note 3: Use either TP180948 or TP183498 automatic codebar and no other on typing units equipped with end-of-line space suppression.



Note 4: The late design TP183495-96-97-98 codebars must be used with the TP185971 set of parts providing the end-of-line bell to ring on the 62nd character.

Related Adjustments

Affected By

LEFT MARGIN PRINTING (2.120)

LEFT MARGIN POSITION - S (2.118)

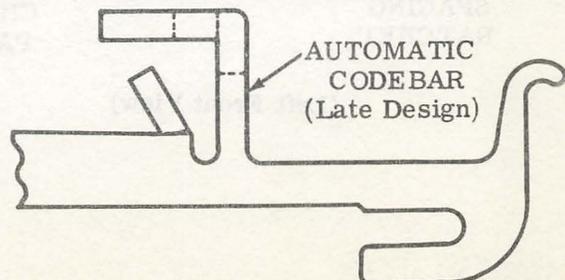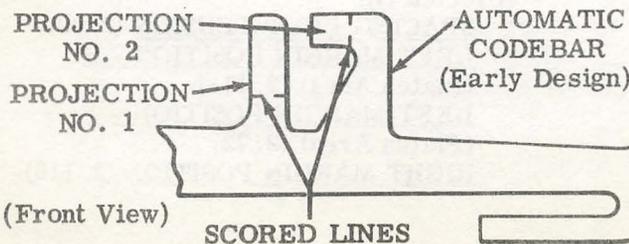

2.122 Function Area (continued)

MARGIN BELL BELLCRANK CLEARANCE

Note: This adjustment applies only to typing units equipped with the end-of-line bell to ring on approximately the 62nd character.

(A) To Check


Place carriage at left margin. Function bail at high point of its travel and the end-of-line bell function lever unselected.

(1) Requirement

Min 0.005 inch---Max 0.020 inch between the bellcrank extension and the automatic codebar.

(2) Requirement

The end-of-line bell function lever extension and the automatic codebar should fully engage.

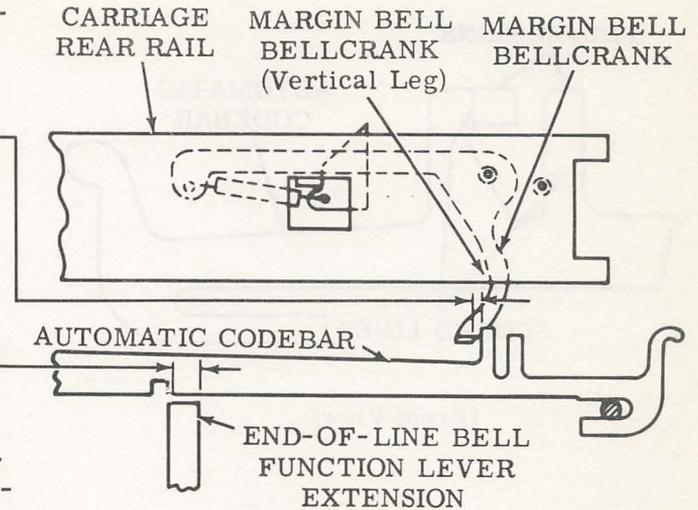

(Front View)

To Adjust

Using the TP180993 bending tool, bend vertical leg of bellcrank to meet Requirement (1) and bend the end of line bell function lever extension to meet Requirement (2).


Note: This adjustment applies only to typing units equipped with combination of automatic carriage return and margin bell features.

(B) To Check

By positioning carriage to approximately the 61st character, upper rear carriage roller will fully depress latch on margin bell bellcrank.

Requirement


Automatic carriage return function lever extension and automatic codebar should fully engage.

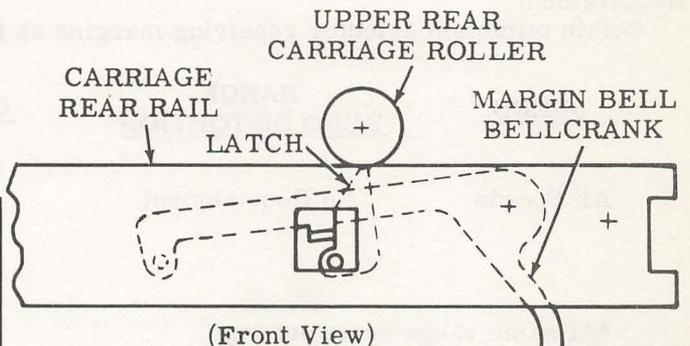

(Front View)

To Adjust

Using TP180993 bending tool, bend automatic carriage return function lever extension to meet requirement.

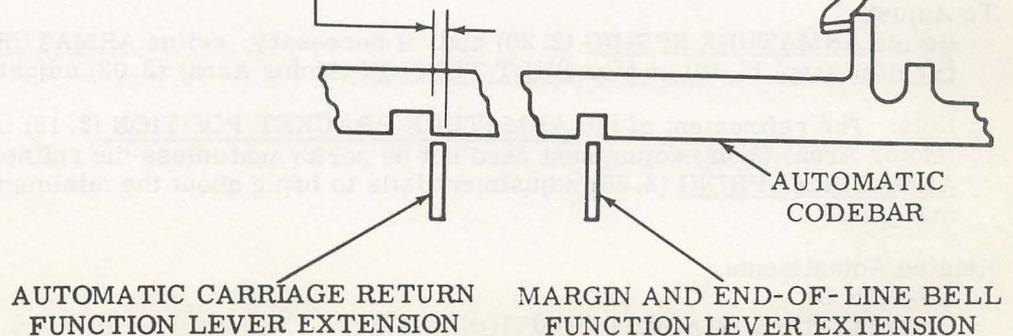


2.123 Function Area (continued)

END-OF-LINE BELL SIGNAL - S

Note: This requirement applies only to sprocket feed typing units equipped with TP180948 automatic codebar.

Requirement
The automatic codebar projections must not be removed.

To Adjust
Replace codebar.

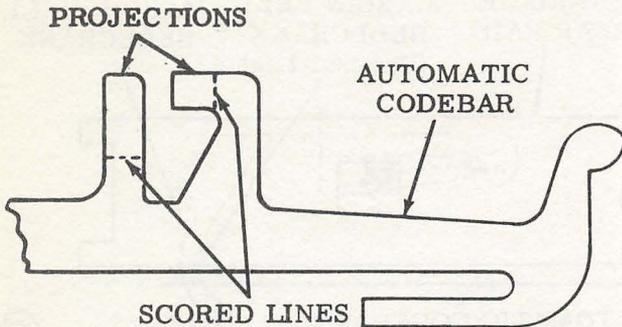

(Front View)

2.124 Selector Area (continued)

RECEIVING MARGINS

To Check

Set up test situation using typing unit and Signal Distortion Test Set to check selector receiving margins.

Requirement

Obtain minimum selector receiving margins as follows:

<u>SPEED</u>	<u>RANGE ZERO DISTORTION</u>	<u>OVERALL BIAS</u>	<u>END DISTORTION</u>
All Speeds	No Requirement	35 Percent*	33 Percent*

*At same range scale setting.

To Adjust

Refine ARMATURE SPRING (2.20) and, if necessary, refine ARMATURE BRACKET POSITION (Preliminary) (2.18) and/or BELT TENSION (Motor Area) (2.02) adjustments.

Note: The refinement of the ARMATURE BRACKET POSITION (2.18) or BELT TENSION (Motor Area) (2.02) adjustment need not be performed unless the refinement of the ARMATURE SPRING (2.20) adjustment fails to bring about the minimum selector receiving margins.

Related Adjustments

Affected By

- ARMATURE BRACKET POSITION (2.18)
- ARMATURE SPRING (2.20)
- SHOE LEVER GAP AND TRIP LEVER ENGAGEMENT (2.19)

2.125 Carriage Area (continued)

FINAL PRINTING ALIGNMENT

Note: When typing unit is adjusted as instructed on previous pages, quality of printed copy should be good. However, minor readjustments may be necessary.

To Check

Print TH at various points along length of printing line.

Requirement

Quality of printed characters should be good.

To Adjust

Use the following guide in making readjustments.

Shading of top and bottom of characters not equal and/or underscoring or overscoring of characters ---

---refine VERTICAL TYPE ALIGNMENT - FS (Platen Area) (2. 71 - F and 2. 90 - S) adjustment by either moving typewheel vertically (late design) or moving platen toward portion of light shading (early design).

Note: The following punctuation marks comma (,), apostrophe ('), dash (-), underline (_), and period (.), may exhibit underscoring or overscoring. The overscoring or underscoring is acceptable on these characters provided the nature of another character is not changed and the mark is not interpreted as a character.

Left character T or poor quality ---

---using left pry points, refine TYPEWHEEL POSITIONING (2. 51) adjustment.

Right character H of poor quality ---

---using right pry points, refine TYPEWHEEL POSITIONING (2. 51) adjustment.

Characters spread out ---

---refine TYPEWHEEL POSITIONING (2. 51) adjustment by moving plate frontward.

Characters run together ---

---refine TYPEWHEEL POSITIONING (2. 51) adjustment by moving plate rearward.

Both characters of light shading on left side ---

---refine TYPEWHEEL "HOME" POSITION (2. 58) adjustment by rotating wheel clockwise as viewed from top.

Both characters of light shading on right side ---

---refine TYPEWHEEL "HOME" POSITION (2. 58) adjustment by rotating wheel counterclockwise as viewed from top.

Related Adjustments

Affected By

TYPEWHEEL "HOME" POSITION (2. 58)

3. VARIATIONS TO BASIC ADJUSTMENTS

3.01 Answer-Back Area

Note: The answer-back trip lever adjusting tap should clear the control lever before proceeding with the following adjustments.

BLOCKING LINK CLEARANCE

To Check


Disengage (latch) distributor and function clutches, engage the answer-back blocking lever fully in indent of answer-back blocking pawl. Take up play in the answer-back blocking pawl toward the front of the typing unit.

Requirement

Min some---Max 0.020 inch between the blocking link and tab on answer-back blocking pawl.


To Adjust

Bend adjusting tab on blocking follower lever with TP180993 bending tool.

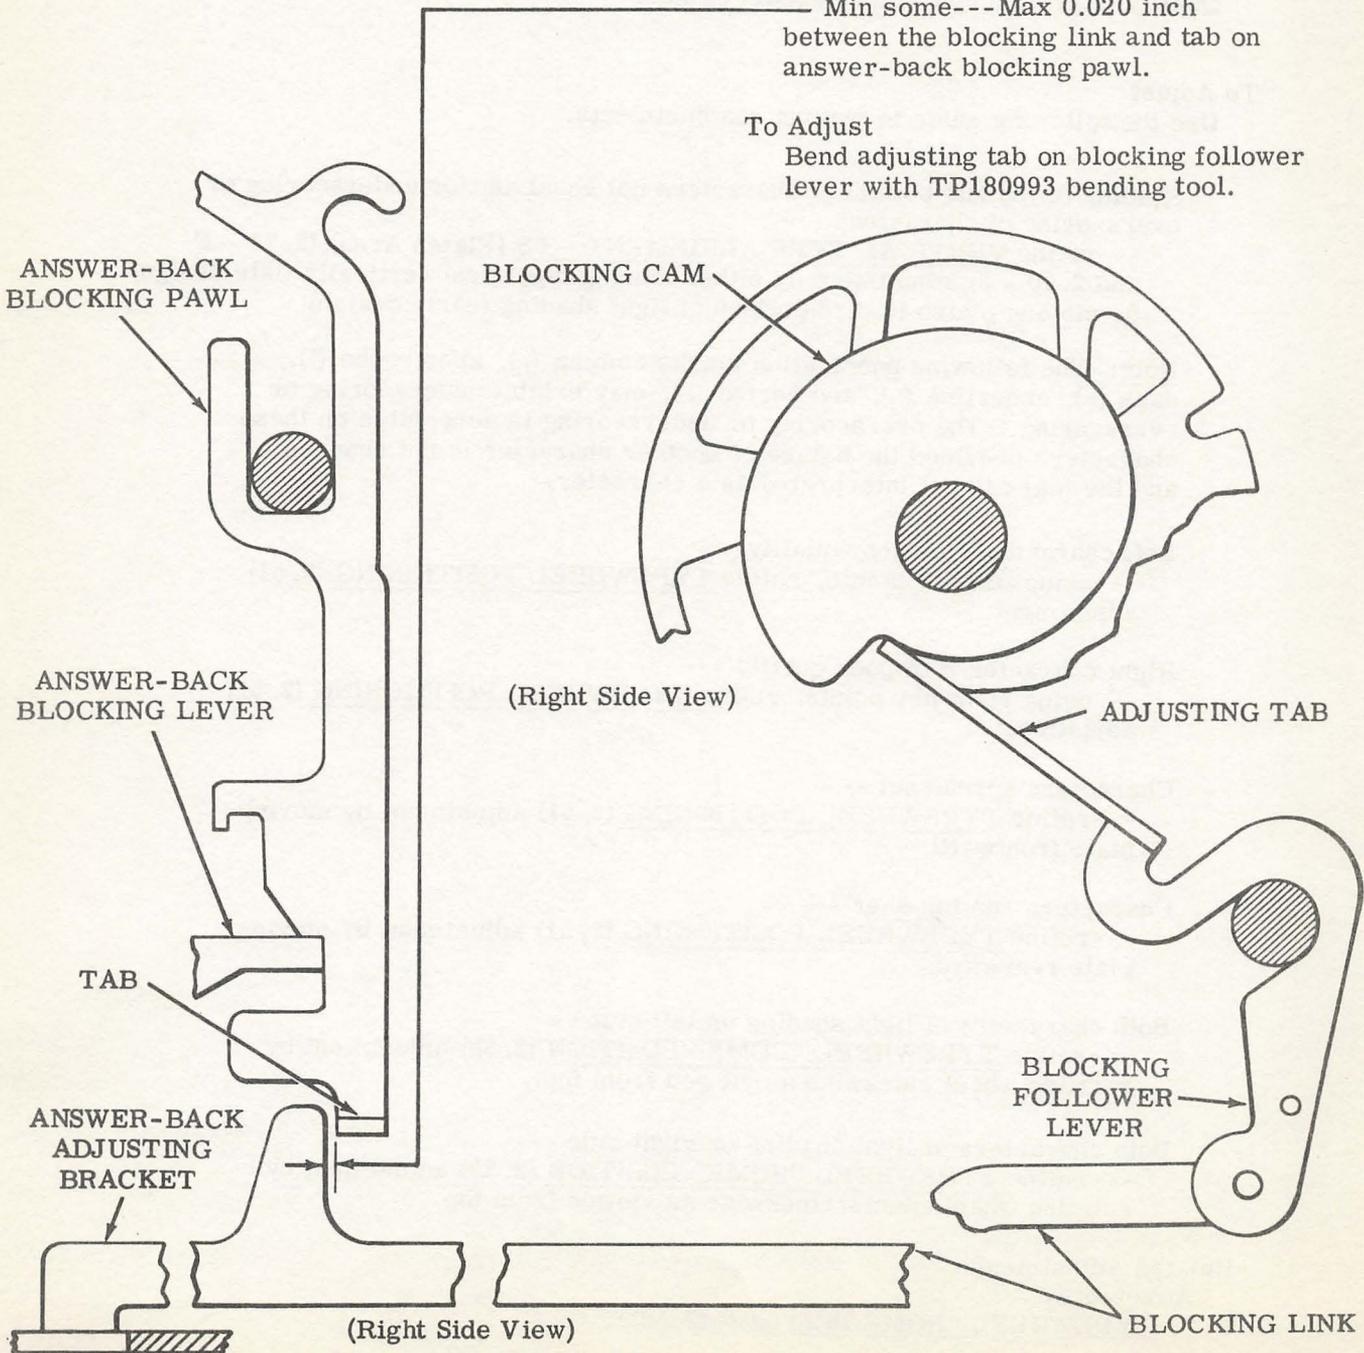

3.02 Answer-Back Area (continued)

CONTROL LEVER SPRING — HORIZONTAL

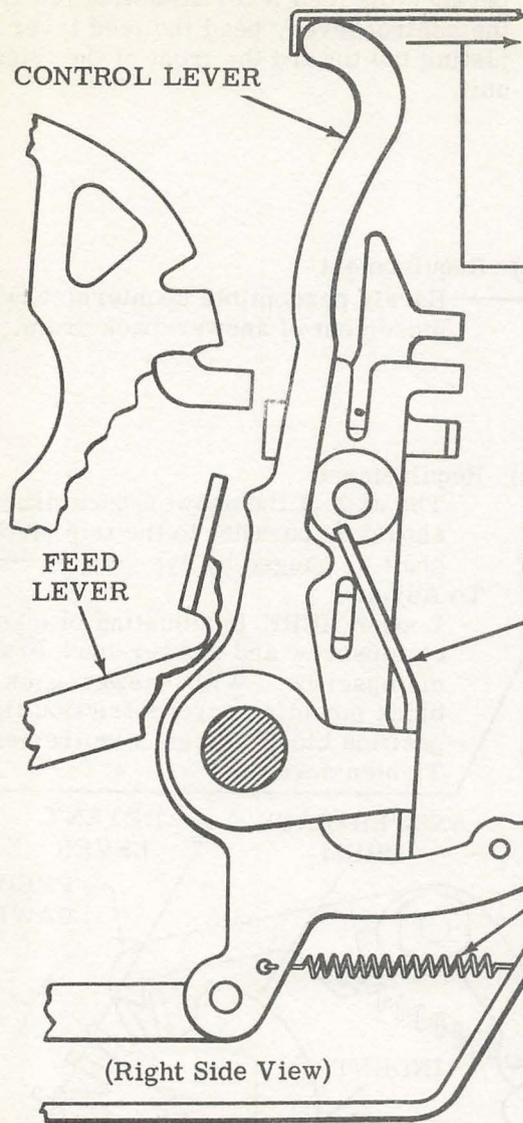


To Check

Place control lever out of indent and on high part of answer-back drum. Rotate main shaft until feed lever is moved by cam roller to its lowest point. Hold stop bail away from control lever.

Requirement

Min 6 oz---Max 8 oz
to start control lever moving.

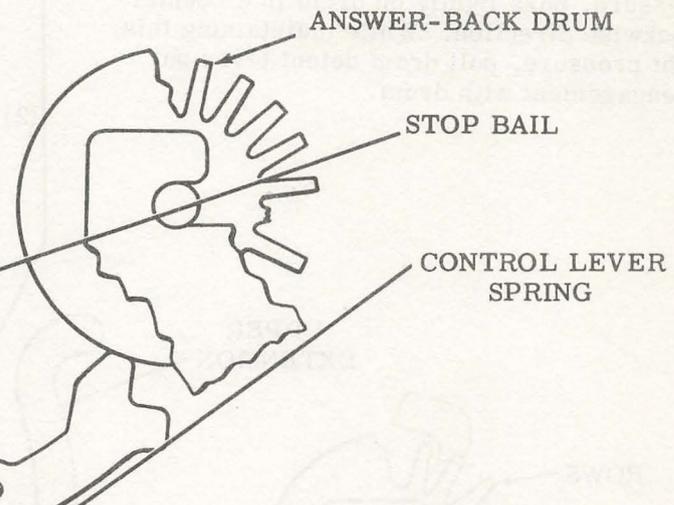


(Right Side View)

BLOCKING FOLLOWER LEVER SPRING

Requirement

With distributor clutch disengaged (latched)
Min 1 oz---Max 2-1/4 oz
to start blocking follower lever moving.

BLOCKING FOLLOWER LEVER SPRING

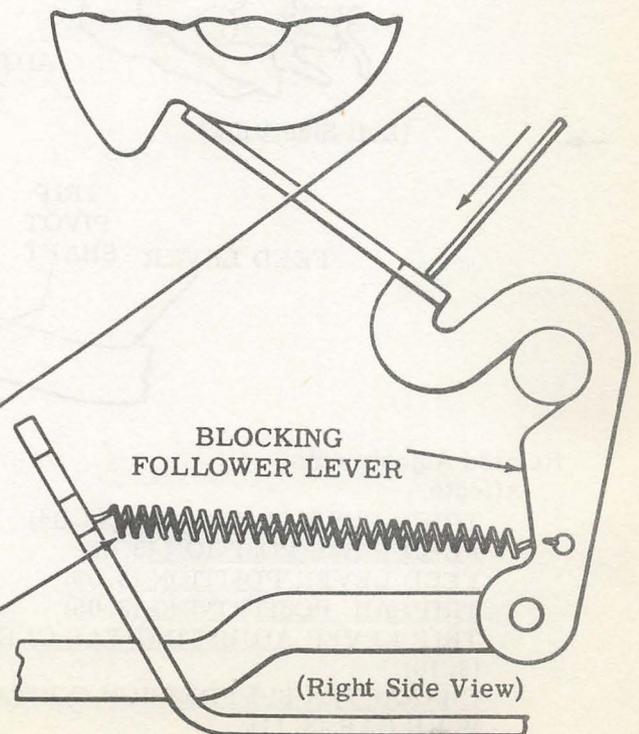

(Right Side View)

3.03 Answer-Back Area (continued)

DRUM POSITION

To Check

Engage lower extension of control lever in indent of answer-back drum and locate detent lever between ST and 20 rows on answer-back drum. Disengage (latch) distributor clutch. Hold the feed pawl out of engagement with the answer-back drum and manually move the upper extension of the control lever toward the rear of the typing unit while checking to see that the answer-back drum is fully detented. With finger pressure, push lightly on drum in a counterclockwise direction. While maintaining this light pressure, pull drum detent lever out of engagement with drum.

Note: If necessary to insure clearance between the feed lever adjusting tab and the control lever, bend the feed lever adjusting tab toward the front of the typing unit.

(1) Requirement


Barely perceptible counterclockwise movement of answer-back drum.

(2) Requirement

The axis of the answer-back drum should be parallel to the trip pivot shaft as gauged by eye.

To Adjust

Loosen HERE IS adjusting bracket clampscrew and answer-back bracket clampscrew. With answer-back block mounting screws friction tight, position block to meet requirements. Tighten screws.

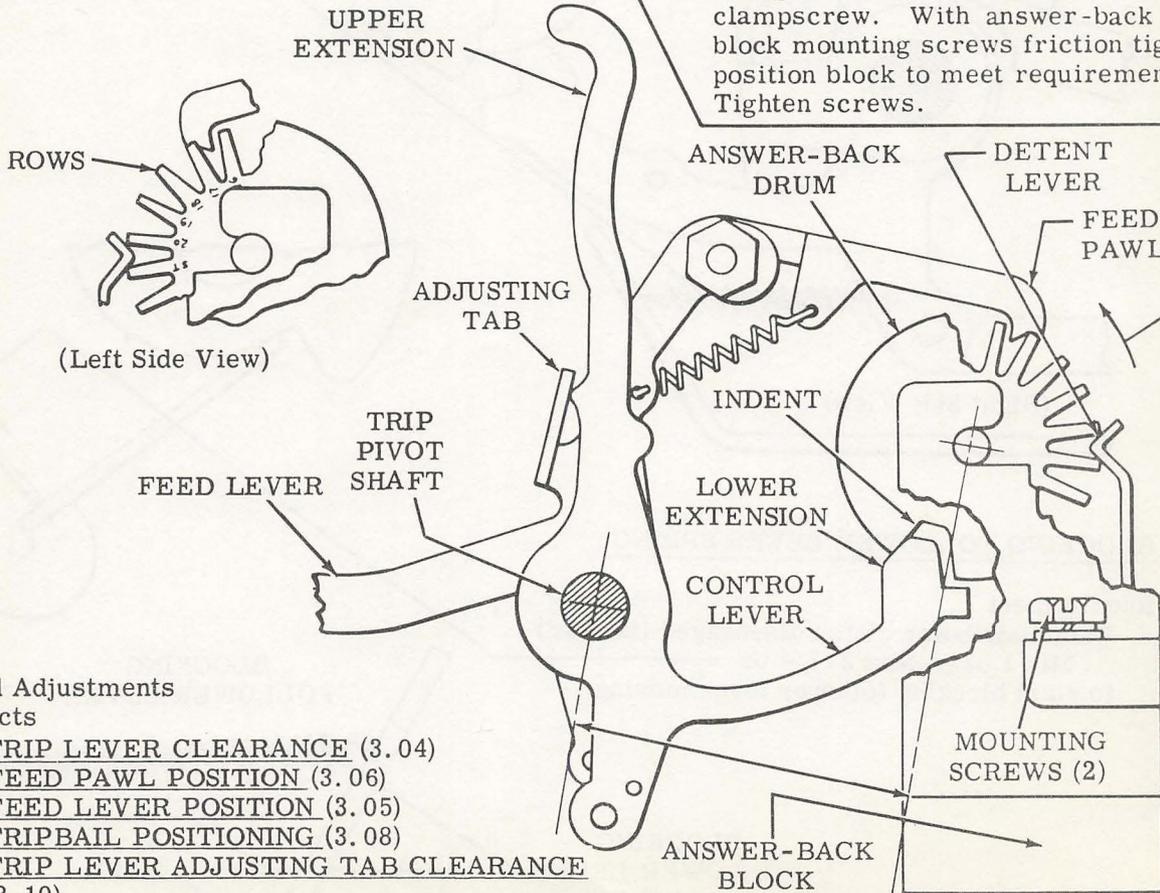

Related Adjustments Affects

- TRIP LEVER CLEARANCE (3.04)
- FEED PAWL POSITION (3.06)
- FEED LEVER POSITION (3.05)
- TRIPBAIL POSITIONING (3.08)
- TRIP LEVER ADJUSTING TAB CLEARANCE (3.10)
- CHARACTER SUPPRESSION CONTACT WIRE GAP (3.11)

3.04 Answer-Back Area (continued)

TRIP LEVER CLEARANCE

To Check

Trip distributor clutch and manually rotate main shaft to place upper edge of clutch shoe lever in line with upper edge of trip lever. Lift feed pawl and manually rotate answer-back drum counterclockwise until detent lever is located between row 1 and 2 on answer-back drum. Take up play in clutch shoe lever toward trip lever.

Requirement

Min 0.015 inch---Max 0.035 inch
between clutch shoe lever and trip lever.


To Adjust

Bend right adjusting tab using TP180993 bending tool.

Note: The plane of right adjusting tab should be parallel to the axis of trip pivot shaft, as gauged by eye.

Related Adjustments

Affected By
DRUM POSITION (3.03)

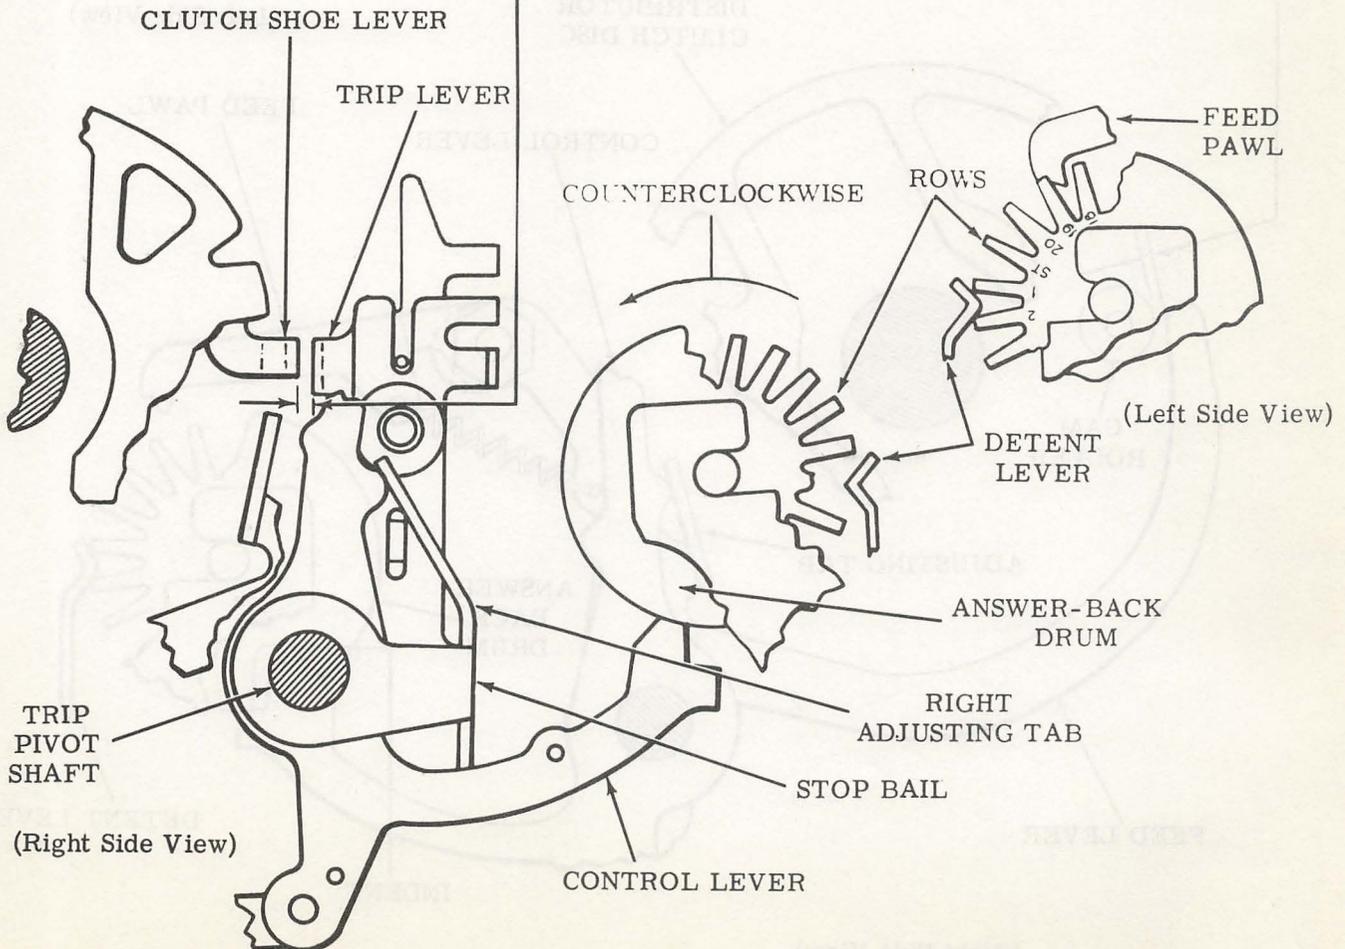

3.05 Answer-Back Area (continued)

FEED LEVER POSITION

To Check

With answer-back drum fully detented in its home position, trip distributor clutch and manually rotate main shaft until cam roller is adjacent to high part of feed lever. Rotate cam roller to minimize clearance. Hold feed pawl clear of answer-back drum.

Requirement

Min some---Max 0.010 inch between feed lever and cam roller.

To Adjust

Bend feed lever adjusting tab with TP180993 bending tool.

Related Adjustments


Affects

- TRIPBAIL POSITIONING (3.08)
- FEED PAWL POSITION (3.06)

Affected By

- DRUM POSITION (3.03)

Note: The minimum requirement is met if there is no perceptible movement of the answer-back feed pawl when rotating the distributor shaft to its stop position.

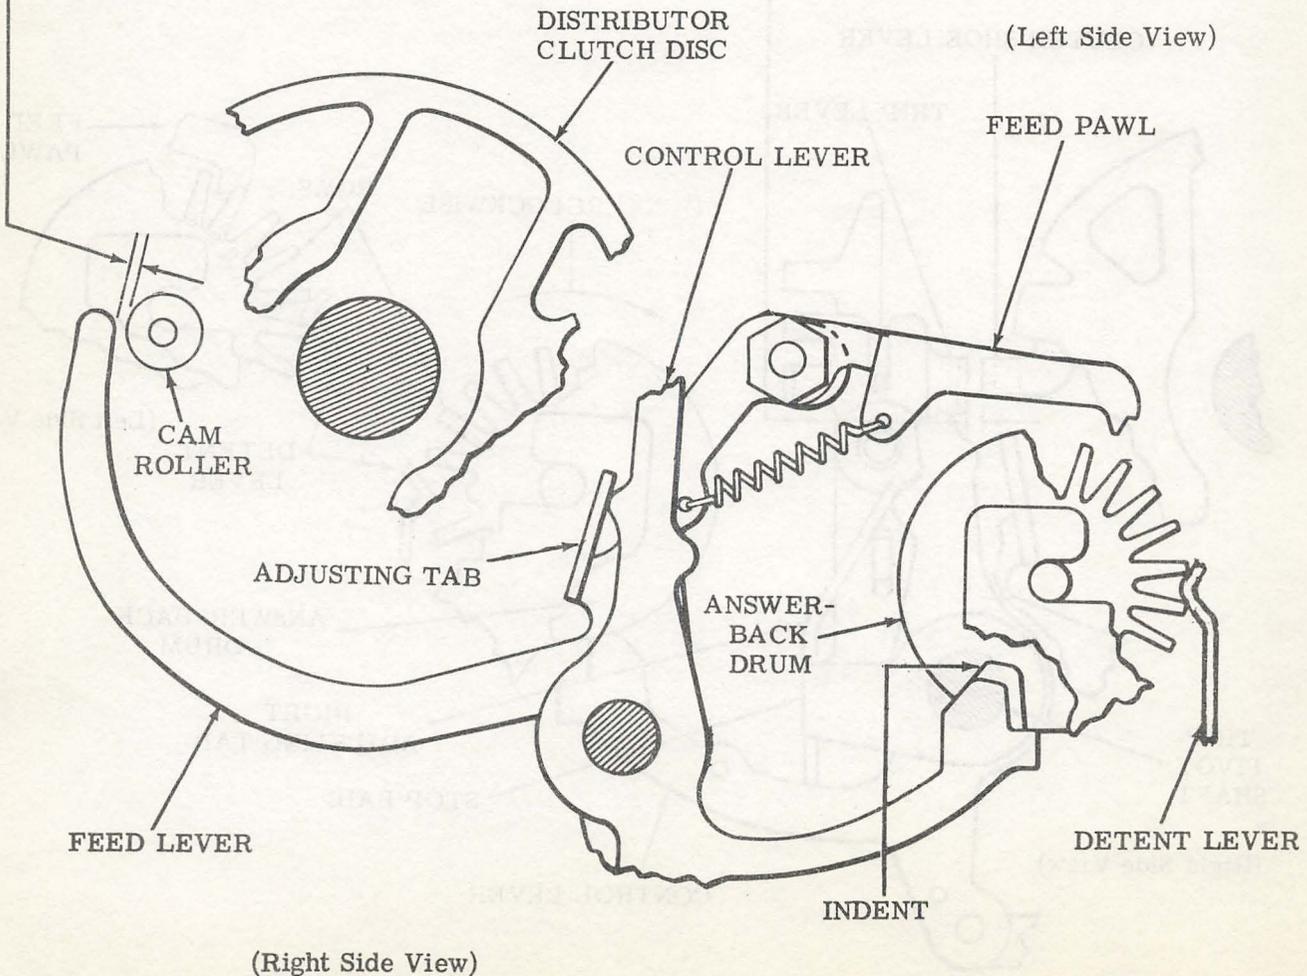

3.06 Answer-Back Area (continued)

FEED PAWL POSITION

(1) To Check

With answer-back drum fully detented in its home position, disengage (latch) distributor clutch. Manually trip distributor clutch and rotate main shaft until the cam roller is adjacent to high part of feed lever. Manually rotate drum two notches (detent between no. 1 and no. 2 teeth). Again, manually rotate drum until a 0.020 inch gauge can be placed between detent lever and the no. 1 tooth. Position feed pawl fully within answer-back ratchet. Take up all play to maximize clearance.

Requirement

Min some---Max 0.005 inch between feed pawl and rear face of no. 18 drum tooth.

Note: With the 0.020 inch gauge between detent and no. 1 tooth, "some" requirement is met if when feed pawl is raised above no. 18 tooth it returns behind it under its own spring force.

To Adjust

With adjusting nut and screw friction tight, position feed pawl against rear surface of no. 18 tooth. Tighten nut and screw.

(2) To Check

Push the top of the control lever toward the rear of typing unit and simultaneously rotate the main shaft. Observe the operation of the feed pawl.

Requirement

While operating, the feed pawl should be centrally located on feed ratchet teeth.

To Adjust

Bend feed lever just below feed pawl.

Related Adjustments


Affects

TRIPBAIL POSITIONING (3.08)

Affected By

DRUM POSITION (3.03)

FEED LEVER POSITION (3.05)

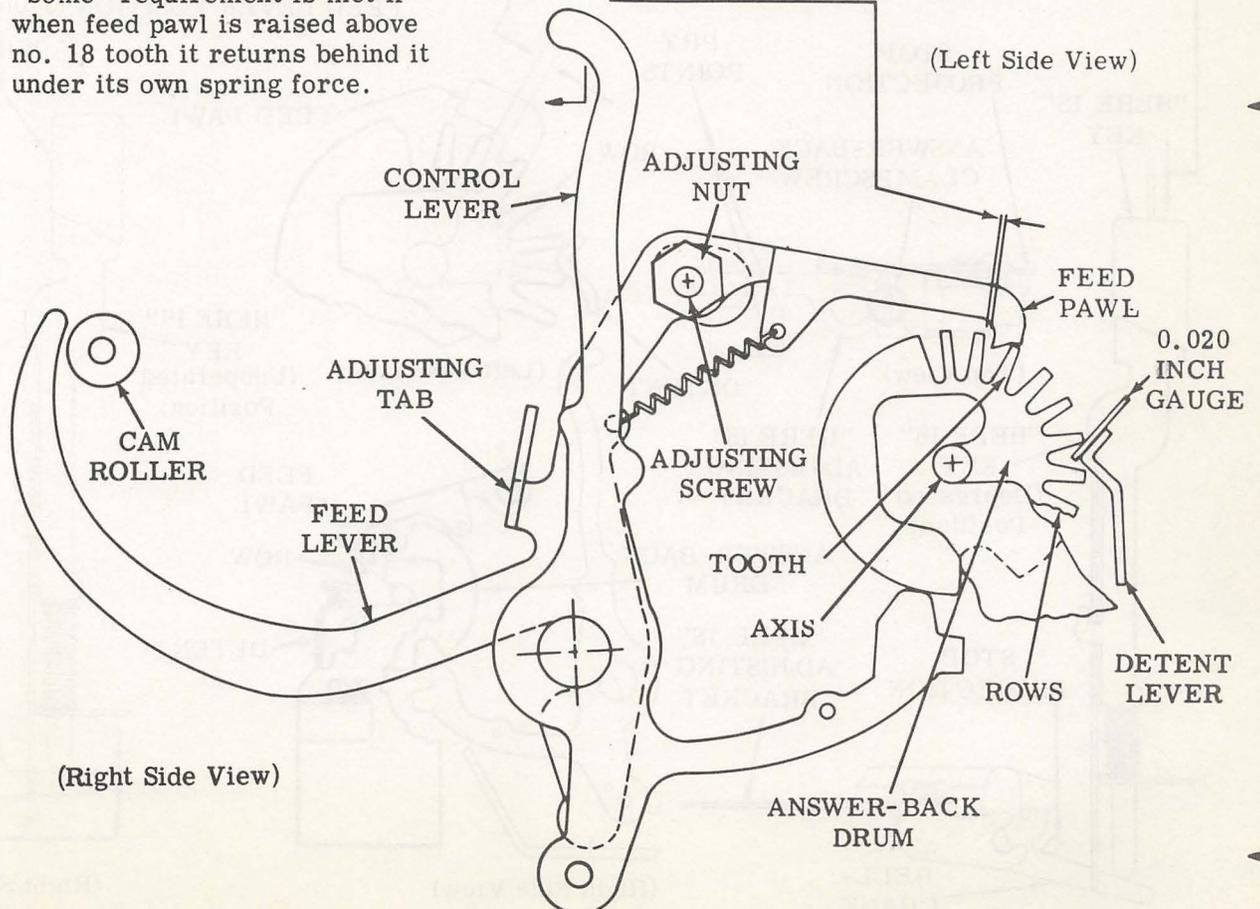

3.07 Answer-Back Area (continued)

"HERE IS" BELLCRANK POSITIONING

Note: This adjustment cannot be checked unless the typing unit is replaced on the subbase with the keyboard.

(1) To Check
 With the keyboard positioned fully forward (keyboard side brackets touching the bosses on the front of the subbase) and answer-back drum fully detented in its home position, trip distributor clutch and manually rotate main shaft until cam roller is positioned above the top edge of feed lever. Depress HERE IS key with a force of from 20 oz to 24 oz.

Requirement

Early design typing units — HERE IS adjusting bracket does not have a stop projection:
 Min 0.015 inch---Max 0.030 inch
 overtravel between feed pawl and face of answer-back drum feed ratchet tooth of row 17.

Late design typing units — HERE IS adjusting bracket has a stop projection:
 Min 0.010 inch---Max 0.040 inch

(2) To Check
 With the answer-back drum fully detented in its home position and HERE IS key in its unoperated position, disengage (latch) distributor clutch.

Requirement

Some clearance between tip of HERE IS key and bell-crank.

To Adjust

With clampscrew friction tight, position HERE IS adjusting bracket using pry points. Tighten clampscrew.


Related Adjustments

Affects

TRIPBAIL POSITIONING (3.05)
CHARACTER SUPPRESSION CONTACT WIRE GAP (3.11)

Affected By

DRUM POSITION (3.03)
FEED PAWL POSITION (3.06)
FEED LEVER POSITION (3.05)

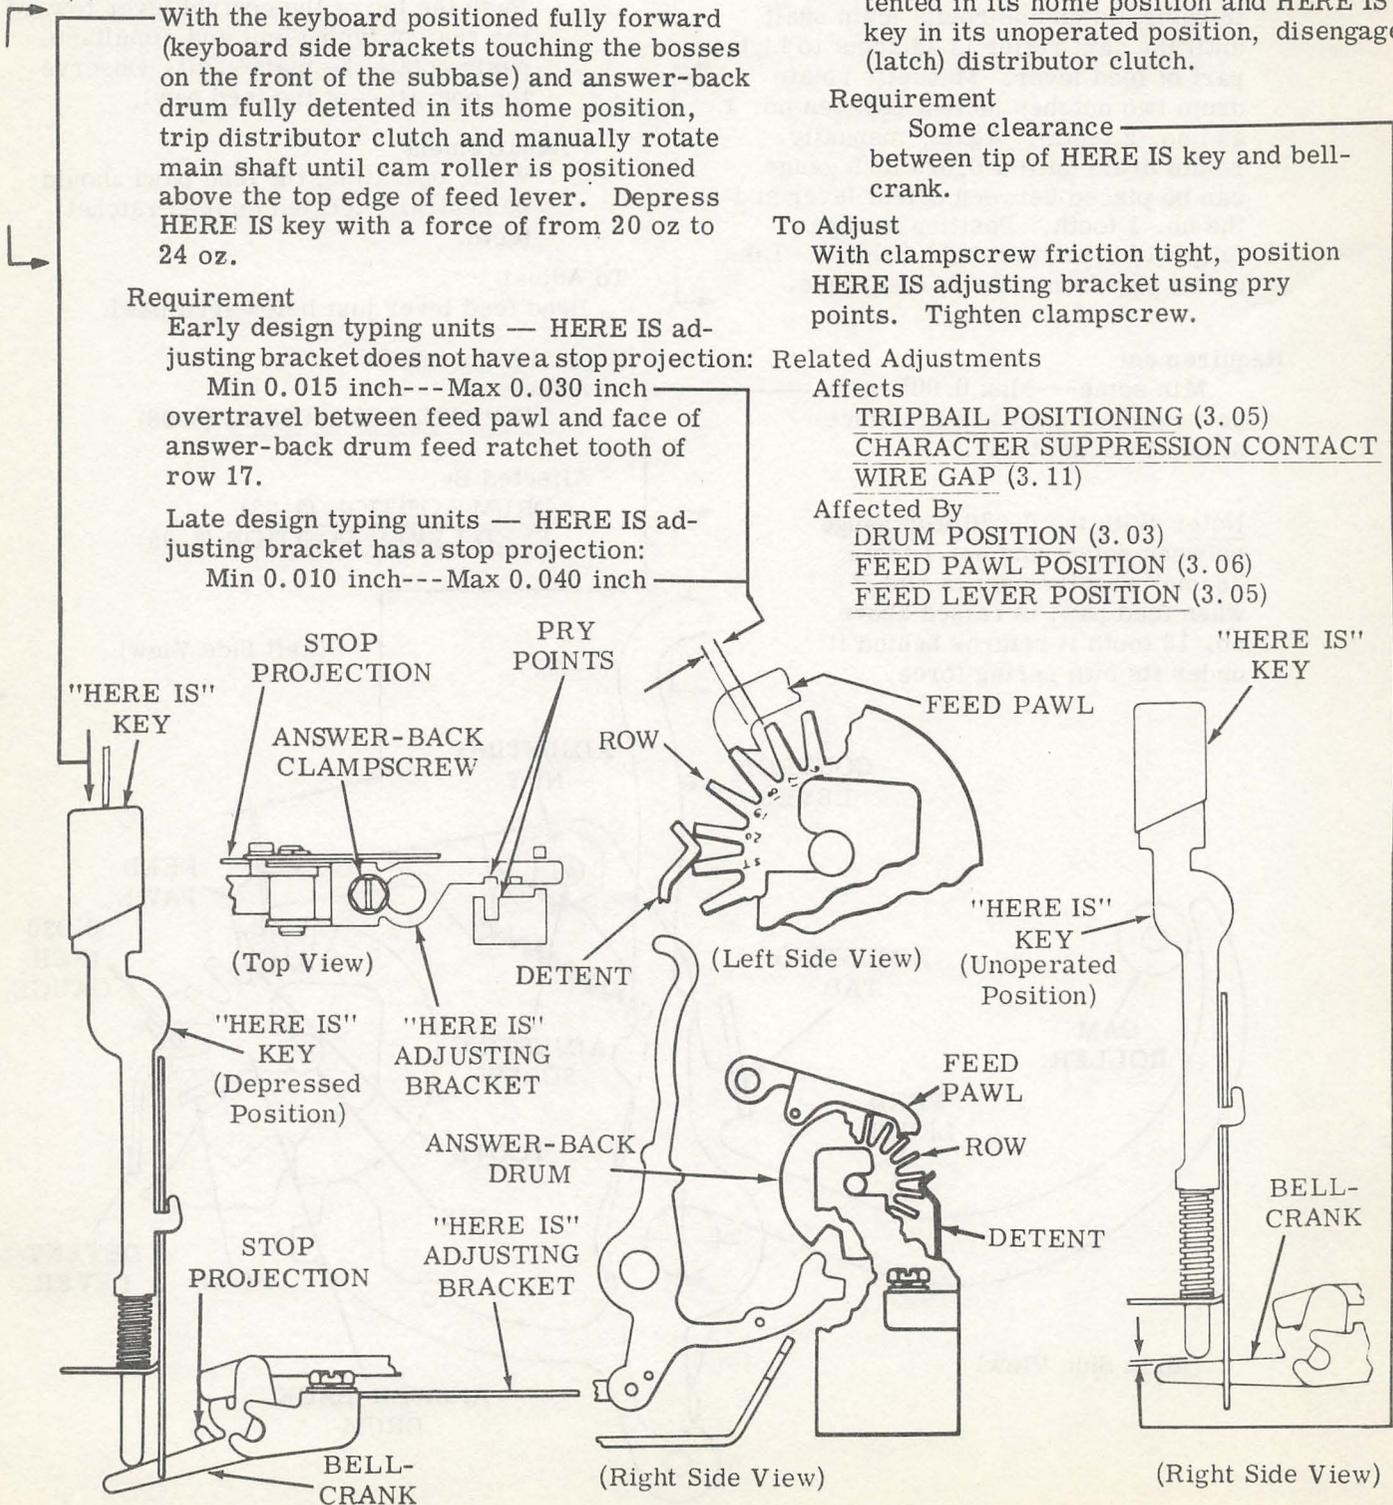

3.08 Answer-Back Area (continued)


TRIPBAIL POSITIONING

(1) To Check

Place the typing unit in stop condition. Trip function clutch and rotate main shaft until the function bail is in its highest position. Push the answer-back function pawl down until its notch is engaged by its function lever. Trip the distributor clutch and continue to rotate the main shaft until the answer-back function pawl reaches its lowest point of travel.


Note: The feed pawl will move back to pick up the next tooth on the answer-back drum feed ratchet.

With the feed pawl centered on the answer-back drum feed ratchet, take up play in feed pawl toward the rear.

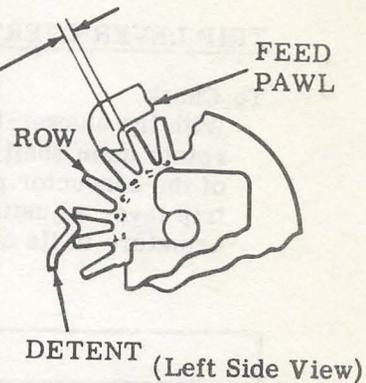

Requirement

Min 0.010 inch---Max 0.040 inch
overtravel between feed pawl and face of answer-back drum feed ratchet of row 17.

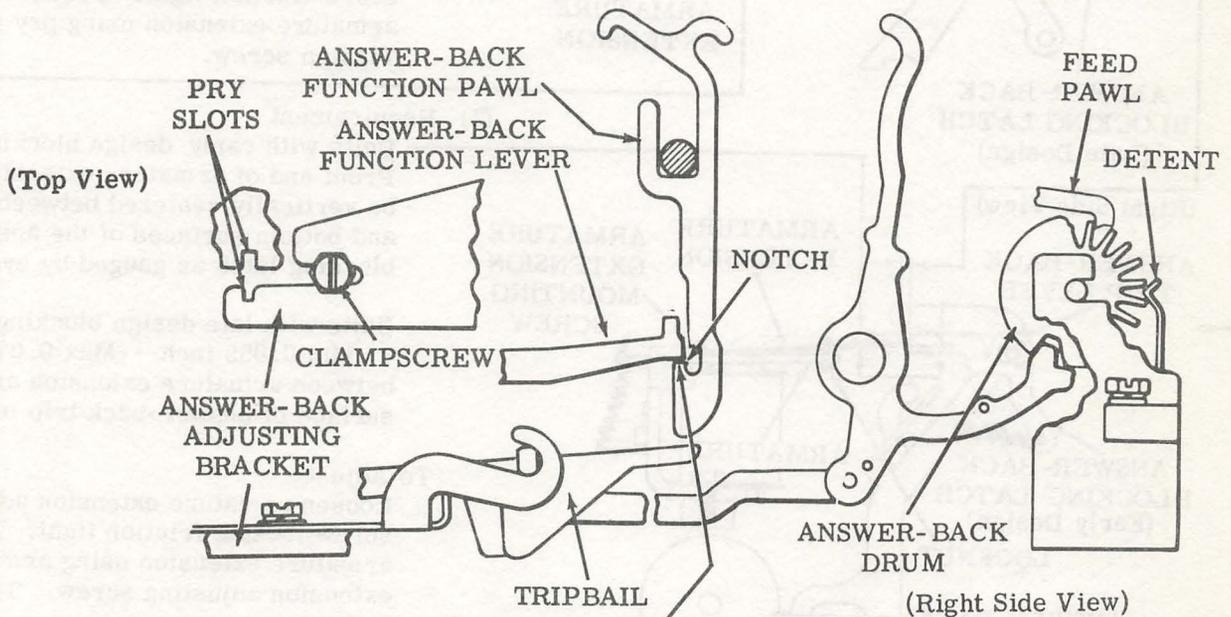

(2) To Check

With typing unit in stop condition, set up the code combination for the answer-back call character in the selector. Rotate the main shaft until the answer-back function pawl moves forward to its selected position. Observe the forward movement of the answer-back function pawl.

Requirement

Answer-back function pawl must move forward freely to its selected position without hesitation.

To Adjust

Loosen clampscrew friction tight. Position answer-back adjusting bracket using pry slots. Tighten clampscrew.

Related Adjustments

Affected By

- DRUM POSITION (3.03)
- FEED PAWL POSITION (3.06)
- RIGHT ROCKER DRIVE (2.36)

3.09 Answer-Back Area (continued)


Note: The adjustment on this page applies only to typing units equipped with an answer-back trip magnet mechanism.

TRIP LEVER OVERTRAVEL AND ARMATURE GAP

To Check

With the answer-back drum fully detented in its home position, trip distributor clutch and rotate main shaft until the pointer of the distributor brush holder is in line with the intersection of the conductor path and the stop segment. Control lever must be clear of answer-back to trip lever adjusting tab — if necessary, bend tab forward to provide clearance. Place armature in its attracted position, and take up play toward rear of typing unit.

(1) Requirement

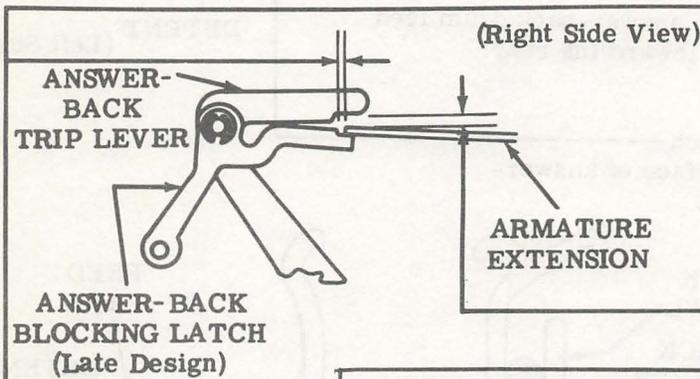


Min 0.006 inch--Max 0.015 inch between the end of armature extension and the blocking surface of the answer-back blocking latch.

To Adjust

Loosen armature extension mounting screw friction tight. Position the armature extension using pry points. Tighten screw.

(2) Requirement

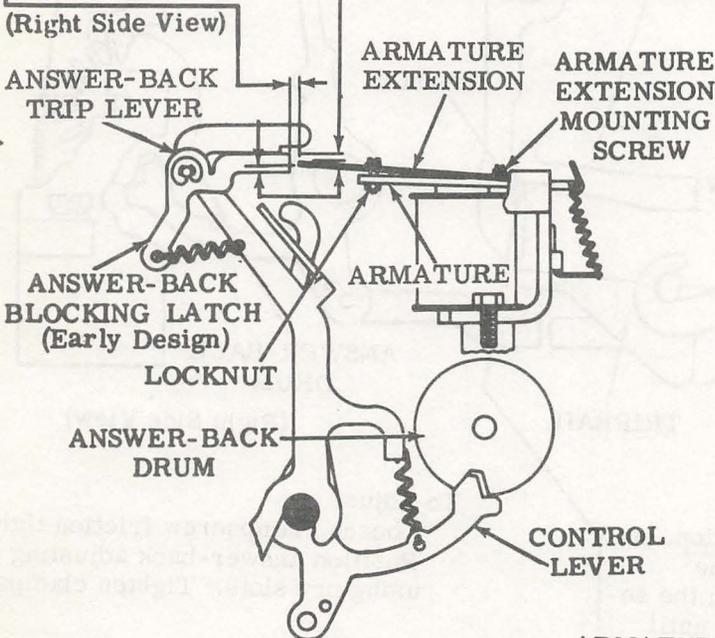

Units with early design blocking latch. Front end of armature extension should be vertically centered between the top and bottom surfaces of the answer-back blocking latch as gauged by eye.

Units with late design blocking latch

Min 0.055 inch---Max 0.075 inch between armature extension and lower surface of answer-back trip lever.

To Adjust

Loosen armature extension adjusting screw locknut friction tight. Position armature extension using armature extension adjusting screw. Tighten locknut.



Related Adjustments

Affects

- TRIP LEVER ADJUSTING TAB CLEARANCE (3.10)
- CHARACTER SUPPRESSION CONTACT WIRE GAP (3.11)

Affected By

- TRIP MAGNET POSITION (3.10)

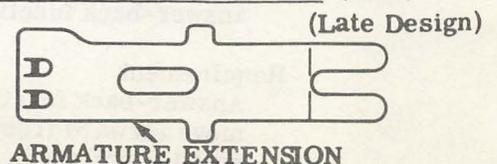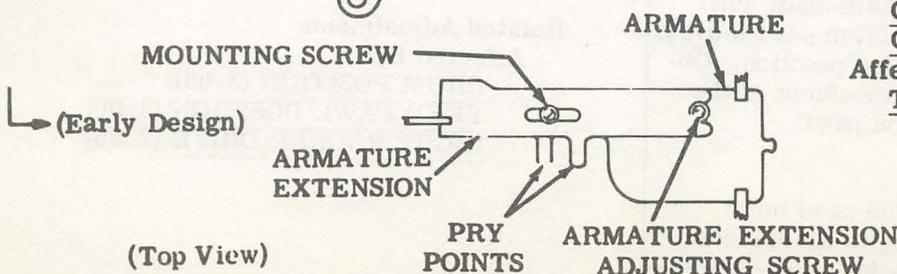

3.10 Answer-Back Area (continued)

Note: The following adjustment applies only to typing units equipped with an answer-back trip magnet mechanism.

TRIP LEVER ADJUSTING TAB CLEARANCE

To Check

With the answer-back drum fully detented in its home position, place the typing unit in its stop position. With the armature in its unattracted position, take up the play in the trip lever toward the right and the play in the control lever toward the left. Take up play in the armature toward the rear.

Requirement

Min some---Max 0.020 inch between adjusting tab and tip of control lever.

To Adjust

Bend adjusting tab with TP180993 bending tool.

Related Adjustments

Affects

CHARACTER SUPPRESSION CONTACT WIRE GAP (3.11)

Affected By

TRIP MAGNET POSITION (3.10)
TRIP LEVER OVERTRAVEL AND ARMATURE GAP (3.09)
DRUM POSITION (3.03)

TRIP MAGNET POSITION

Requirement

Magnet bracket to be positioned as far forward and to the left on base casting post as possible.


To Adjust

Loosen three mounting screws. Position magnet bracket. Tighten screws.

Related Adjustments

Affects

TRIP LEVER OVERTRAVEL AND ARMATURE GAP (3.09)
TRIP LEVER ADJUSTING TAB CLEARANCE (3.10)
TRIP MAGNET (Appropriate tape reader section)
CHARACTER SUPPRESSION CONTACT WIRE GAP (3.11)

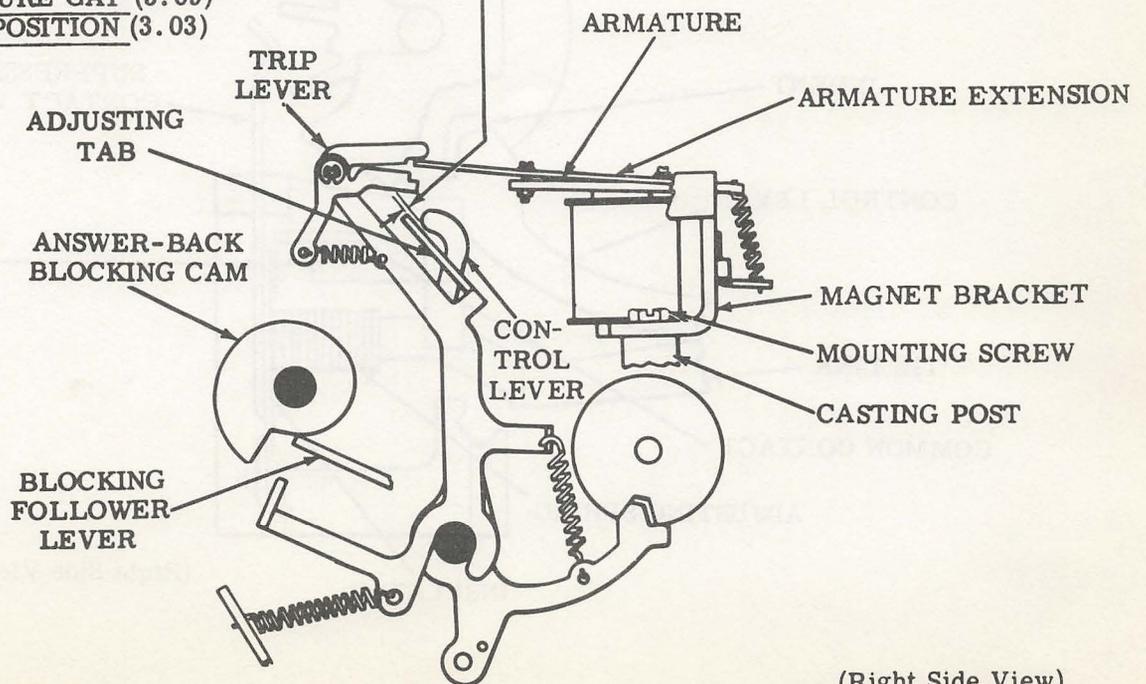

(Right Side View)

3.11 Answer-Back Area (continued)

CHARACTER SUPPRESSION CONTACT WIRE GAP

To Check

With answer-back drum fully detented in its home position, disengage (latch) distributor clutch.

Requirement

Min 0.030 inch---Max 0.055 inch
between suppression contact wire and
common contact.

To Adjust

Position adjusting spring on the tie link.

Related Adjustments


Affected By

TRIP LEVER OVERTRAVEL AND ARMATURE GAP (3.09)

DRUM POSITION (3.03)

TRIP LEVER ADJUSTING TAB CLEARANCE (3.10)

TRIP MAGNET POSITION (3.10)

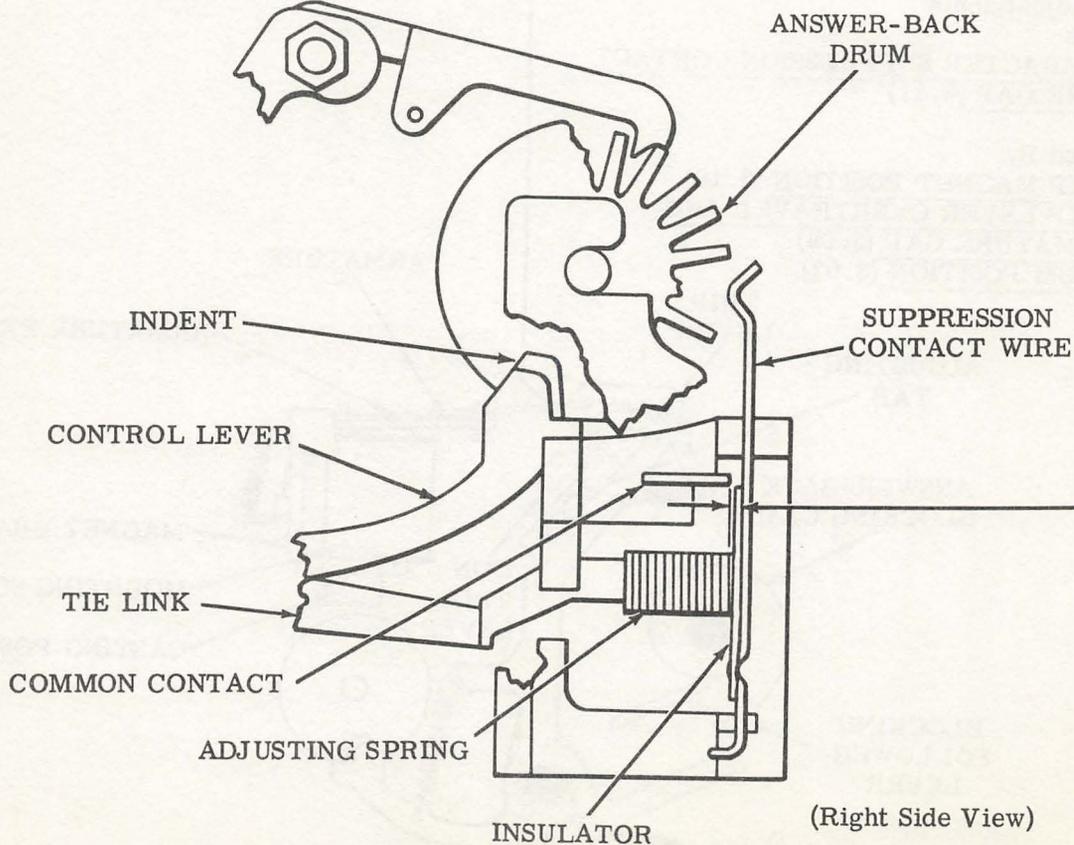

3.12 Answer-Back Area (continued)

CONTROL LEVER SPRING — VERTICAL (Early Design)

Note: This adjustment applies to early design typing units with TP180843 trip lever.

Requirement

With distributor clutch tripped and blocking follower lever on high part of blocking cam
 Min 7-1/2 oz---Max 10-1/2 oz
 to start control lever moving.

BLOCKING LATCH SPRING

Requirement

With distributor clutch disengaged (latched)
 Min some*---Max 3/4 oz
 to start blocking latch moving.

* By feel


ARMATURE SPRING

To Check

Trip distributor clutch. Rotate main shaft until blocking follower lever is on high part of blocking cam and armature is in its un-attracted position.

Requirement

Min 2-1/2 oz---Max 3-1/2 oz
 to start armature moving.

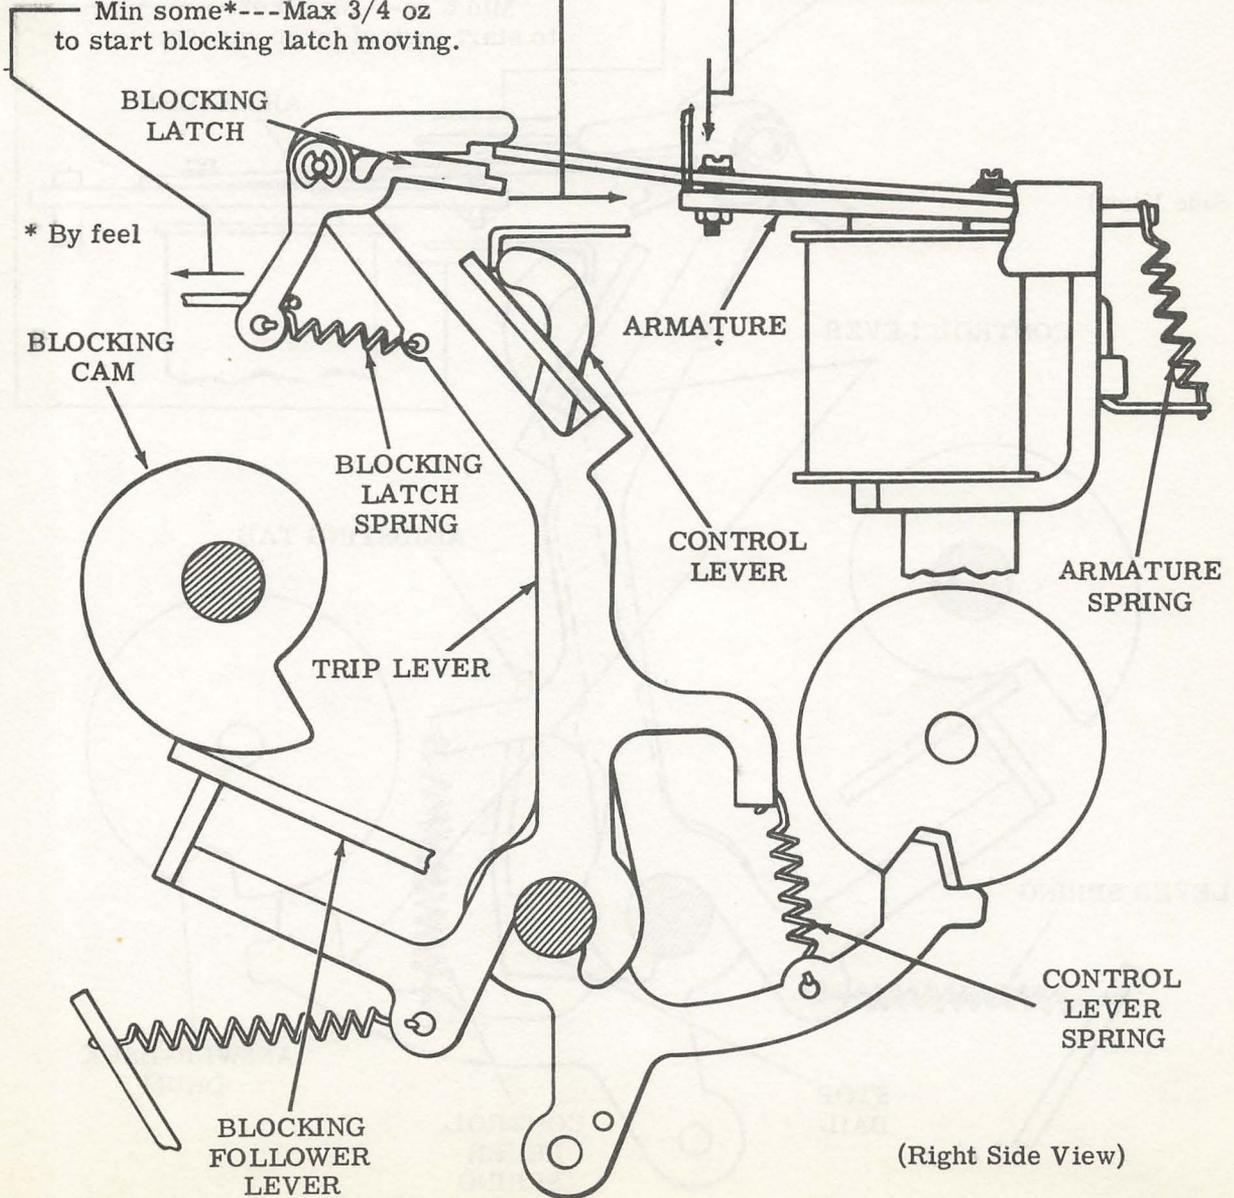

3.13 Answer-Back Area (continued)

TRIP LEVER SPRING

To Check

Disengage (latch) distributor clutch. Manually trip armature. Position stop bail so that its adjusting tab does not interfere with control lever. Hold armature in its attracted position.

Requirement

Min 3 oz---Max 4-1/2 oz
to start trip lever moving.

CONTROL LEVER SPRING — VERTICAL
(Late Design)


Note: This adjustment applies to late design typing units with TP182276 trip lever.

To Check


Disengage (latch) distributor clutch. Manually rotate the answer-back drum until control lever is on high part of answer-back drum. Position stop bail so that its adjusting tab does not interfere with control lever.

Requirement

Min 6 oz---Max 8 oz
to start control lever moving.

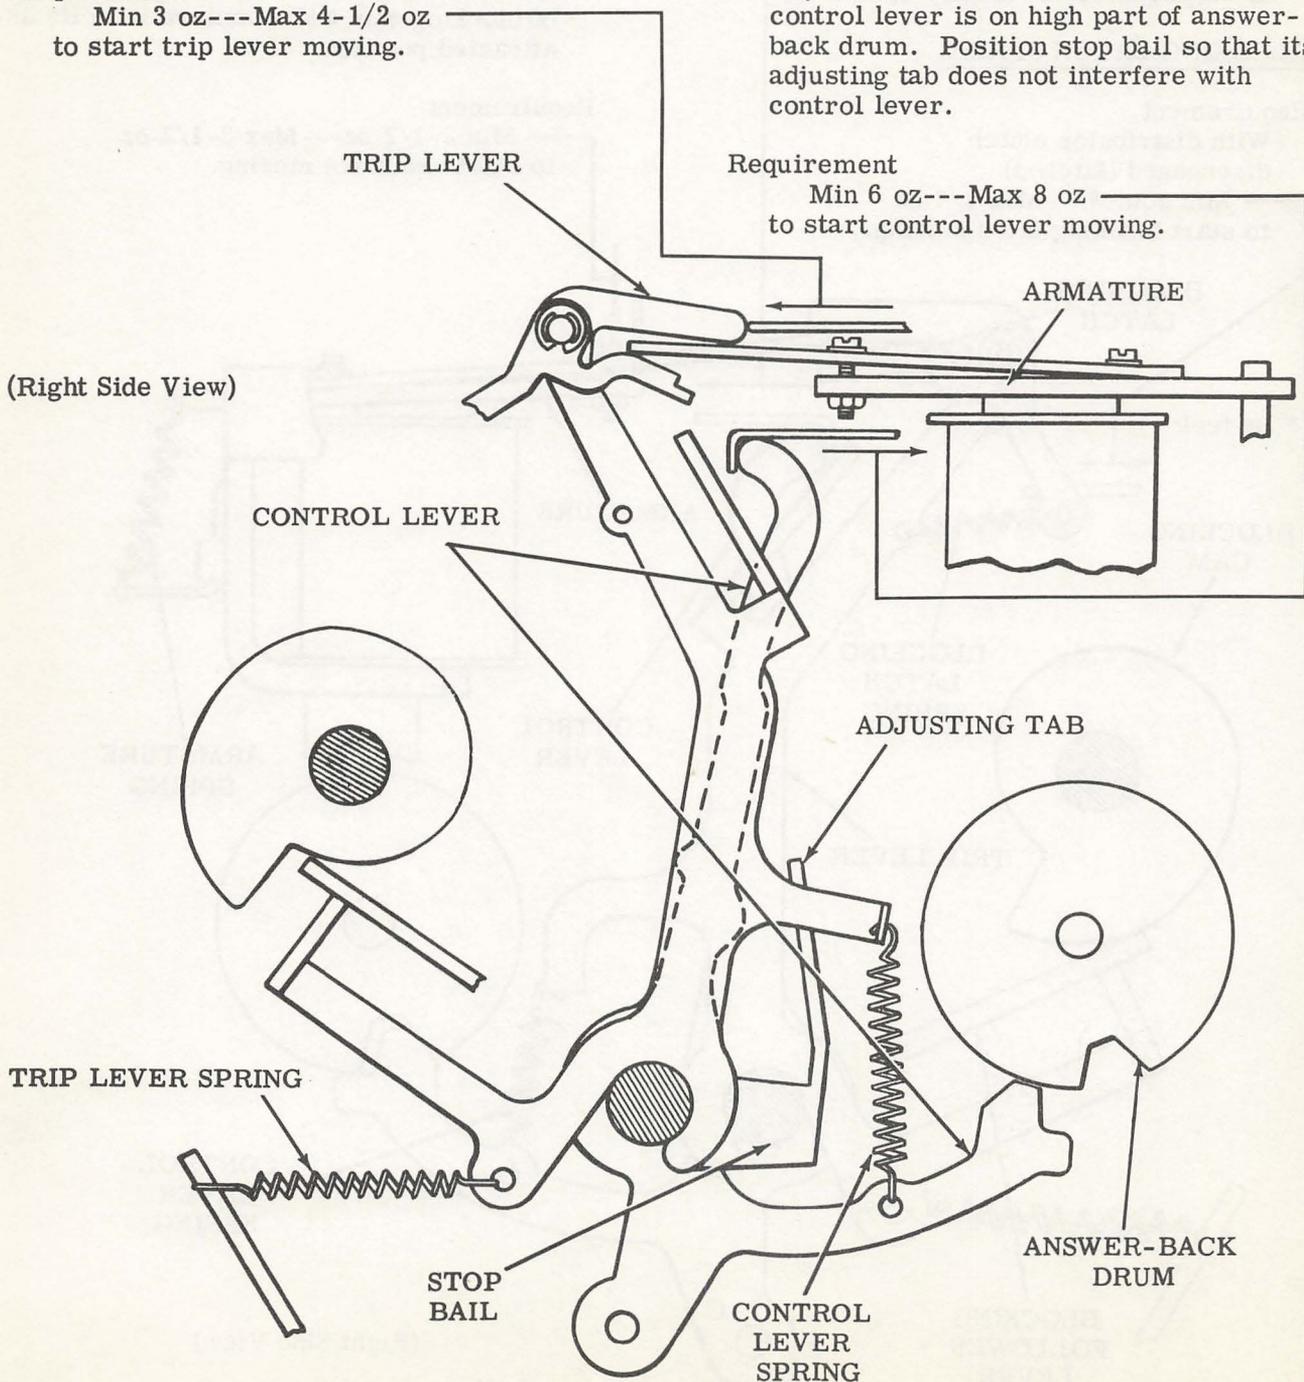


3.14 Answer-Back Area (continued)

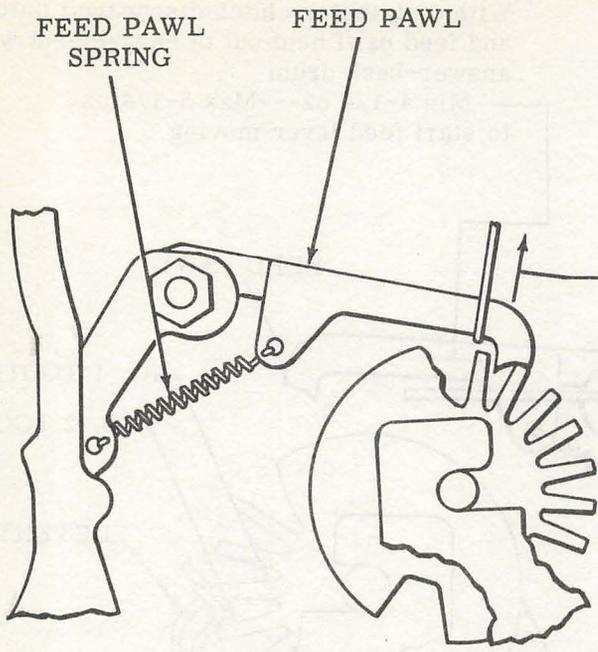

(Right Side View)

FEED PAWL SPRING

Requirement
With distributor clutch disengaged
(latched)
Min 1/2 oz---Max 1-1/4 oz
to start feed pawl moving.

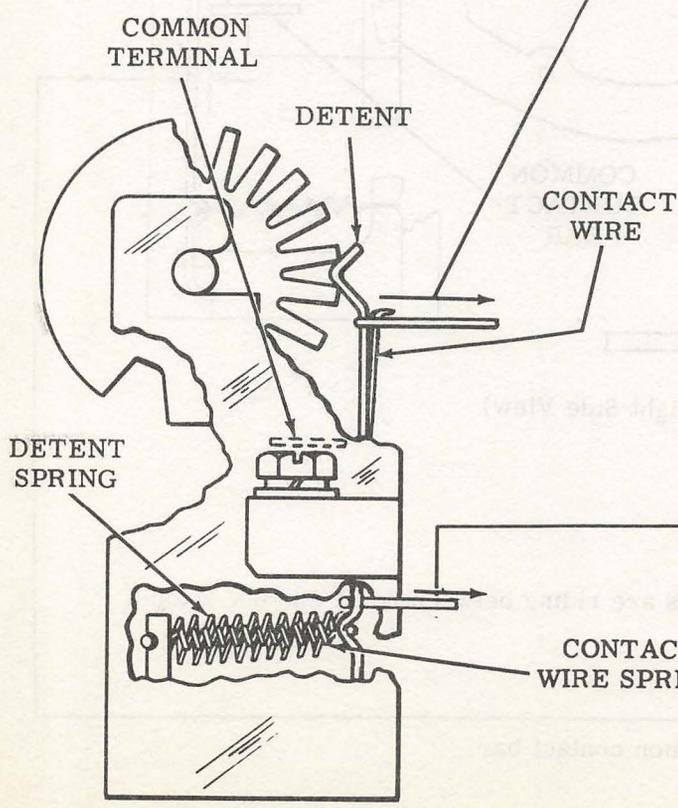

(Right Side View)

DETENT SPRING

Requirement
Min 8 oz---Max 12 oz
to start detent moving.

CONTACT WIRE SPRING

Requirement
Min 1 oz---Max 2 oz
to start contact wire moving away from
common terminal.


3.15 Answer-Back Area (continued)

FEED LEVER SPRING

Requirement

With distributor clutch disengaged (latched) and feed pawl held out of engagement with answer-back drum

Min 4-1/4 oz---Max 5-1/4 oz to start feed lever moving.

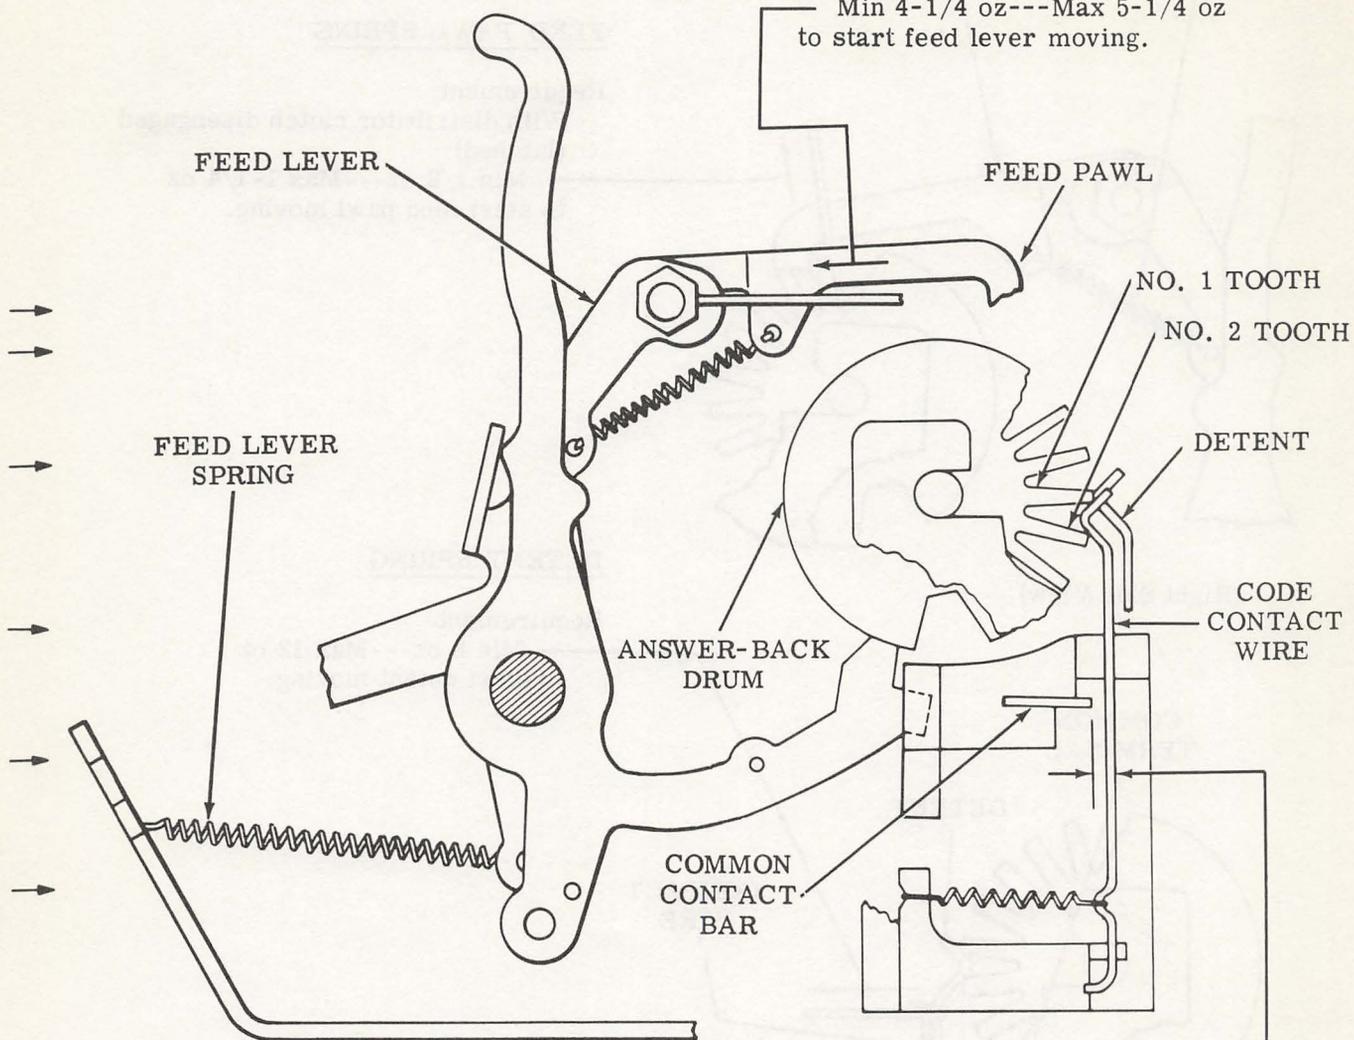

(Right Side View)

CODE CONTACT WIRE GAP

To Check

Manually rotate drum until contact wires are riding between no. 1 and no. 2 tooth (detent riding on top of no. 1 tooth).

Requirement

Min 0.010 inch---Max 0.035 inch between code contact wires and common contact bar.

To Adjust

Bend contact wires.

3.16 Function Box Switches (Function Area)

CONTACT ASSEMBLY POSITION

(1) To Check

Set up code combination in selector that is to operate the function pawl associated with a contact arm and rotate the main shaft until the function bail is in its highest position.

Requirement

Min 0.010 inch---Max 0.020 inch
between the contact arm and the contact at the closest point as illustrated.

(2) To Check

Place typing unit in stop condition.


Requirement

Min some
clearance between the function pawl and the tip of the contact arm.

To Adjust


With two clampscrews friction tight, position the contact assembly on the function casting. If necessary, bend the upper contact. Tighten clampscrews.

Note: For (1) To Check, be sure that the contact arm lines up with and is in contact with the function pawl.

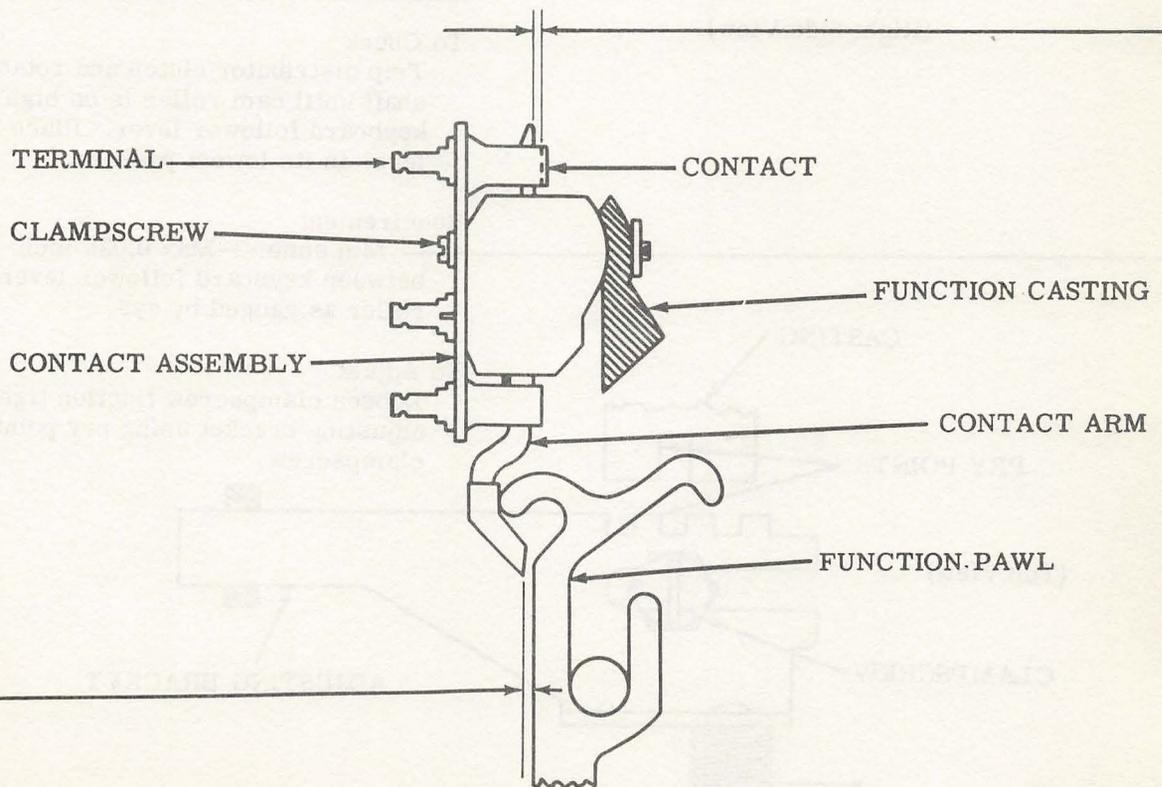

(Left Side View)

3.17 Receive-Only Sets (Distributor Area)

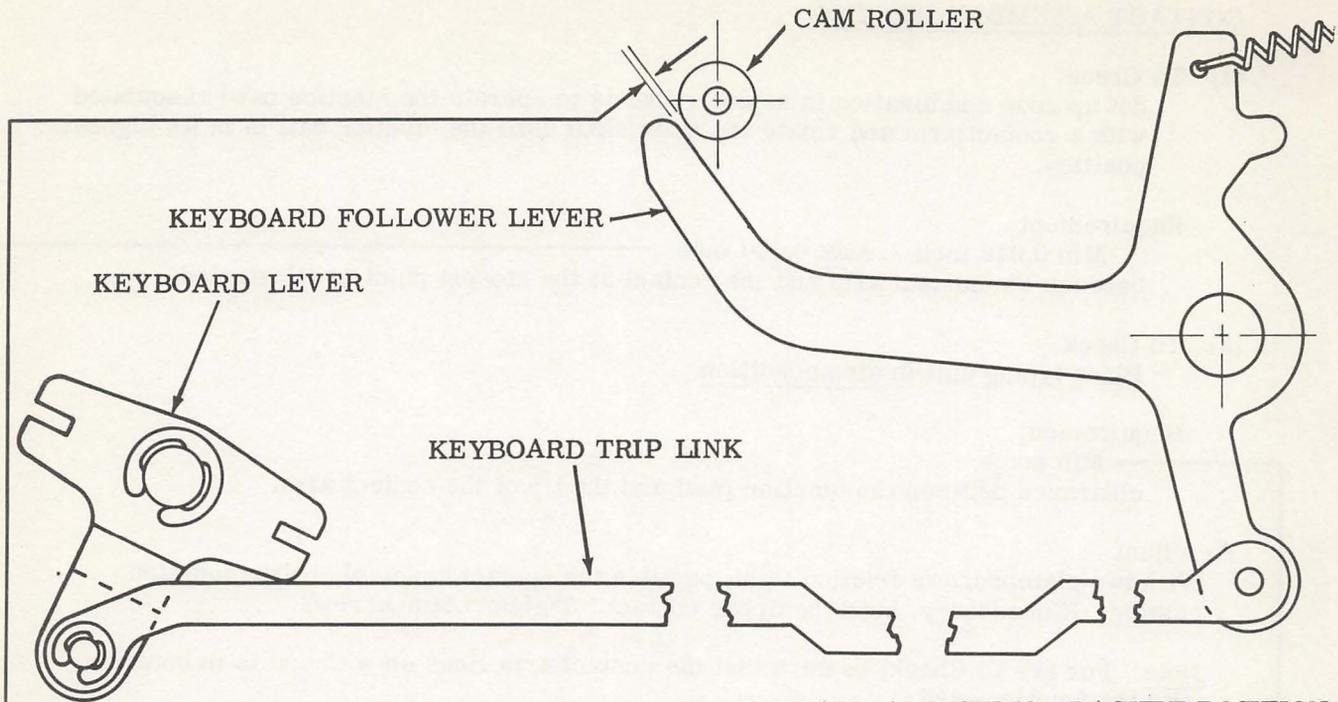

(Right Side View)

KEYBOARD ADJUSTING BRACKET POSITION

To Check


Trip distributor clutch and rotate main shaft until cam roller is on high part of keyboard follower lever. Place keyboard lever in its lowest position.

Requirement

Min some---Max 0.025 inch between keyboard follower lever and cam roller as gauged by eye.

To Adjust

Loosen clampscrew friction tight. Move adjusting bracket using pry points. Tighten clampscrew.

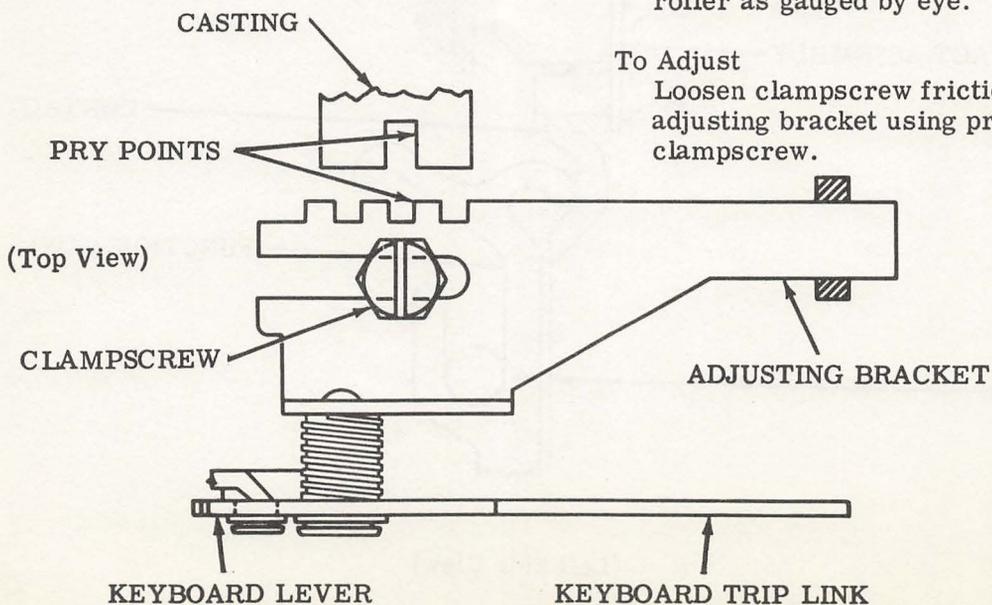

(Top View)

3.18 Auxiliary Contact Assembly (TP183594) (Main Shaft Area)

TIME DELAY CONTACT BRACKET POSITION

To Check

Place the typing unit in the stop condition. Engage the function clutch and rotate the main shaft until the cam follower is on high part of its cam.

Requirement

Max 0.010 inch separation of front contact spring from stiffener.


To Adjust

Loosen mounting screw and position bracket. Tighten screw.

FRONT CONTACT SPRING

Requirement

With typing unit in stop condition
Min 4-1/2 oz---Max 6 oz
to just separate the front contact spring from the stiffener.

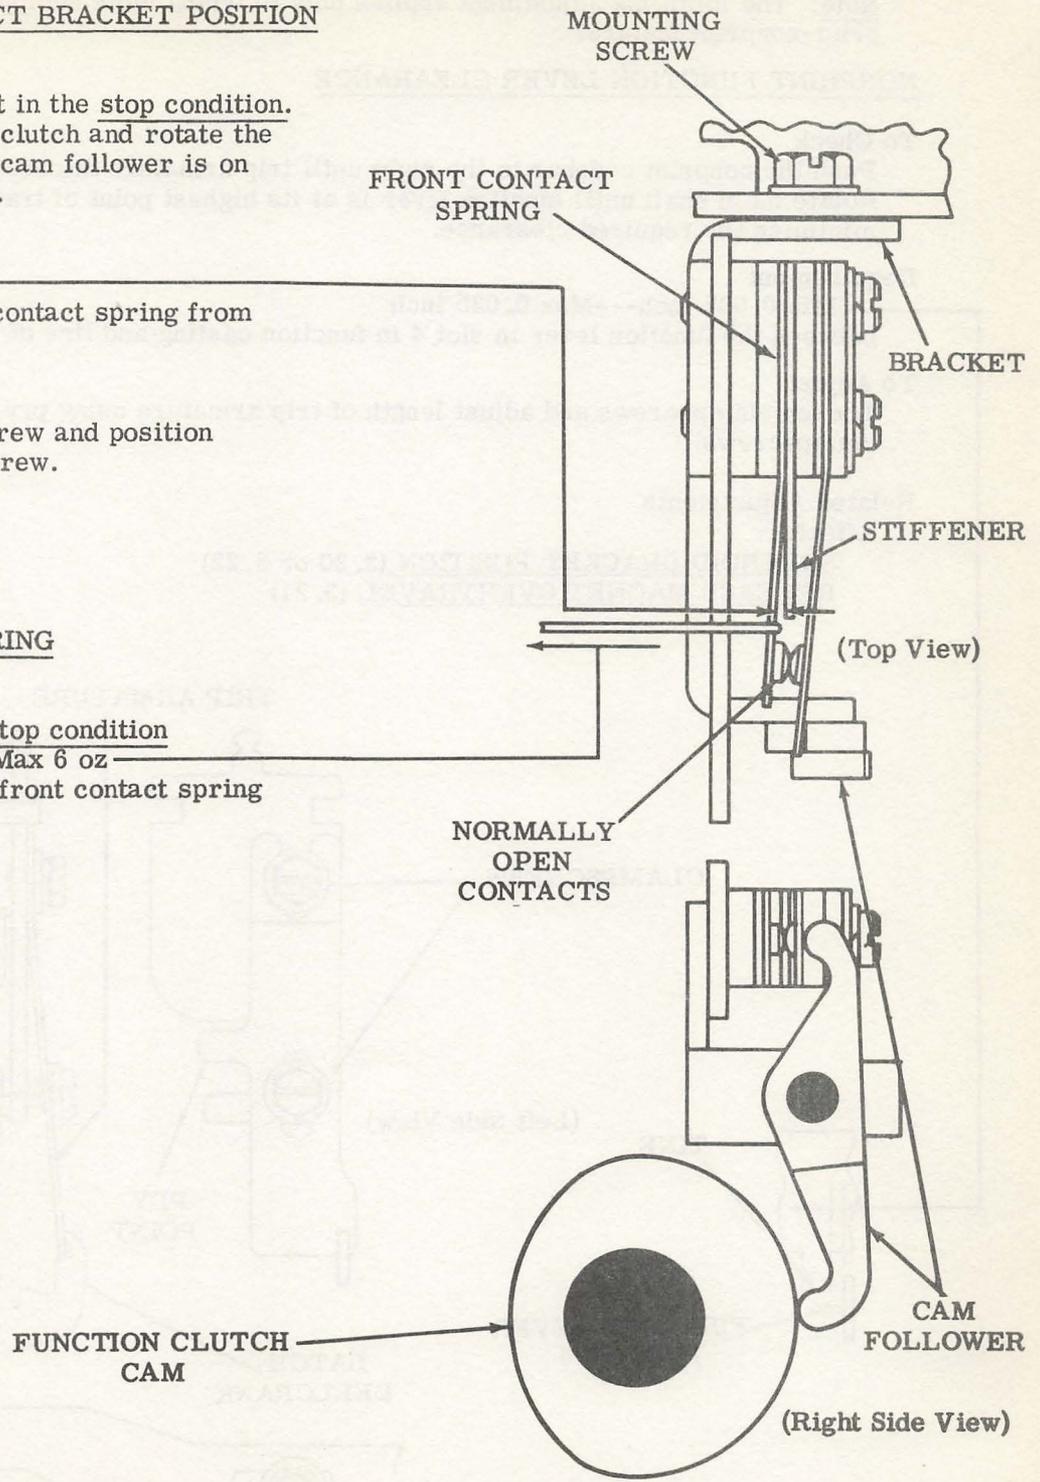

3.19 Print-Nonprint (Function Area)

Note: The following adjustment applies only to typing units equipped with automatic print-nonprint feature.

NONPRINT FUNCTION LEVER CLEARANCE

To Check

Push the nonprint codebar to the right until trip armature latches the latch bellcrank. Rotate main shaft until function lever is at its highest point of travel. Take up all play to minimize the required clearance.

Requirement

Min 0.005 inch---Max 0.025 inch
between the function lever in slot 4 in function casting and tine of nonprint codebar.

To Adjust


Loosen clampscrews and adjust length of trip armature using pry point. Tighten clampscrews.

Related Adjustments

Affects

SOLENOID BRACKET POSITION (3.20 or 3.22)

RELEASE MAGNET OVERTRAVEL (3.21)

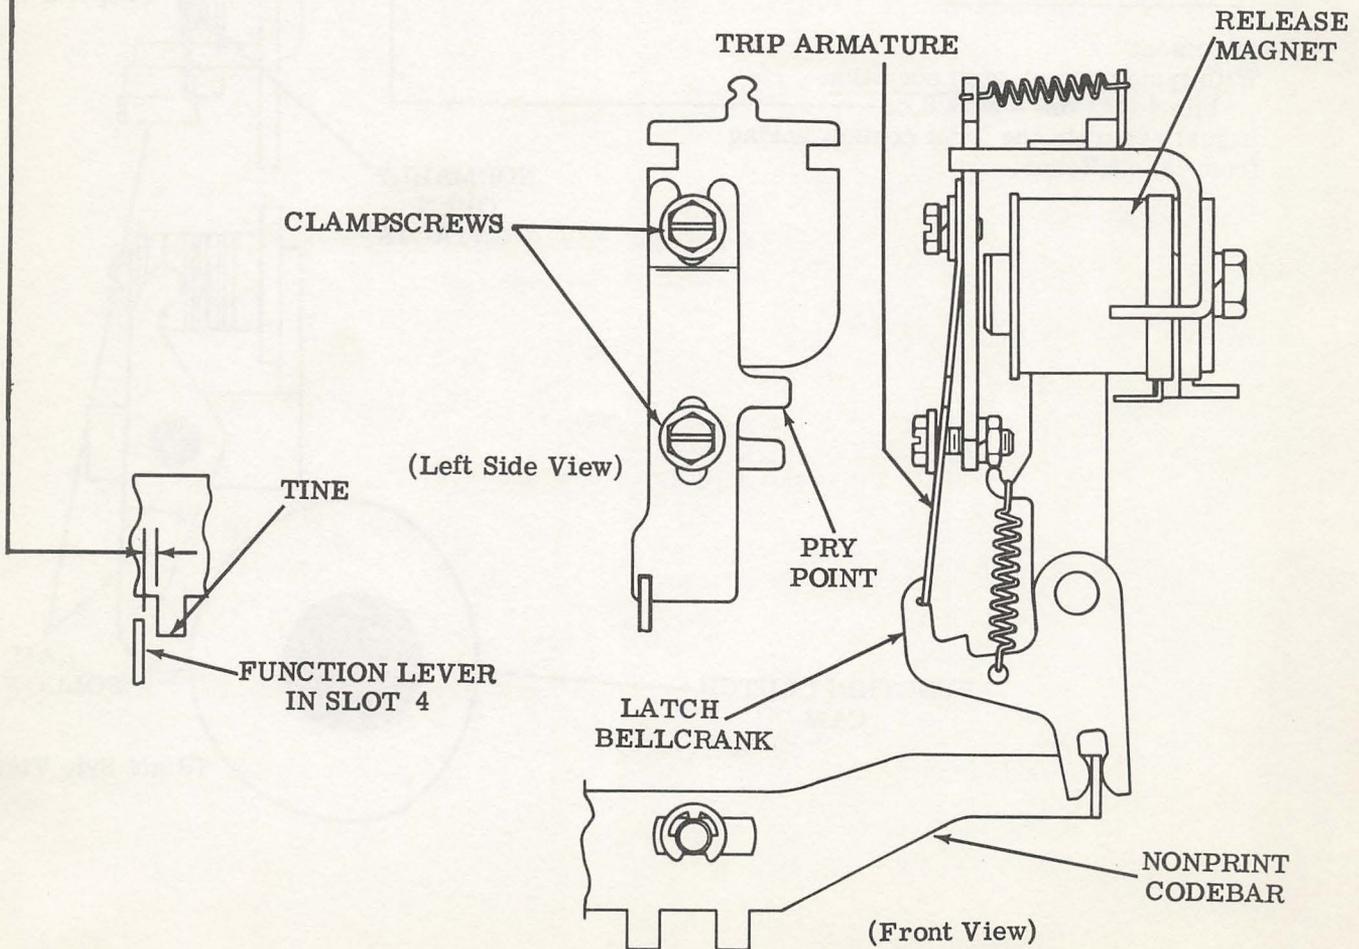

3.20 Print-Nonprint (Function Area)(continued)

Note: The following adjustments apply only to typing units equipped with the automatic print-nonprint feature — for units containing the manual print-nonprint feature, refer to 3.22.

ARMATURE SPRING

To Check

With release magnet de-energized, place plunger to position it assumes when solenoid is energized. Hold plunger seated in that position.

Requirement

Min 2-1/2 oz---Max 3-1/2 oz
to start armature moving.

SOLENOID BRACKET POSITION

To Check

Energize solenoid.

Requirement


Min 0.015 inch---Max 0.030 inch
between trip armature and latch bellcrank.

To Adjust

Loosen mounting screws and position solenoid using pry points. Tighten mounting screws.

Related Adjustment Affected By

NONPRINT FUNCTION LEVER CLEARANCE (3.19)

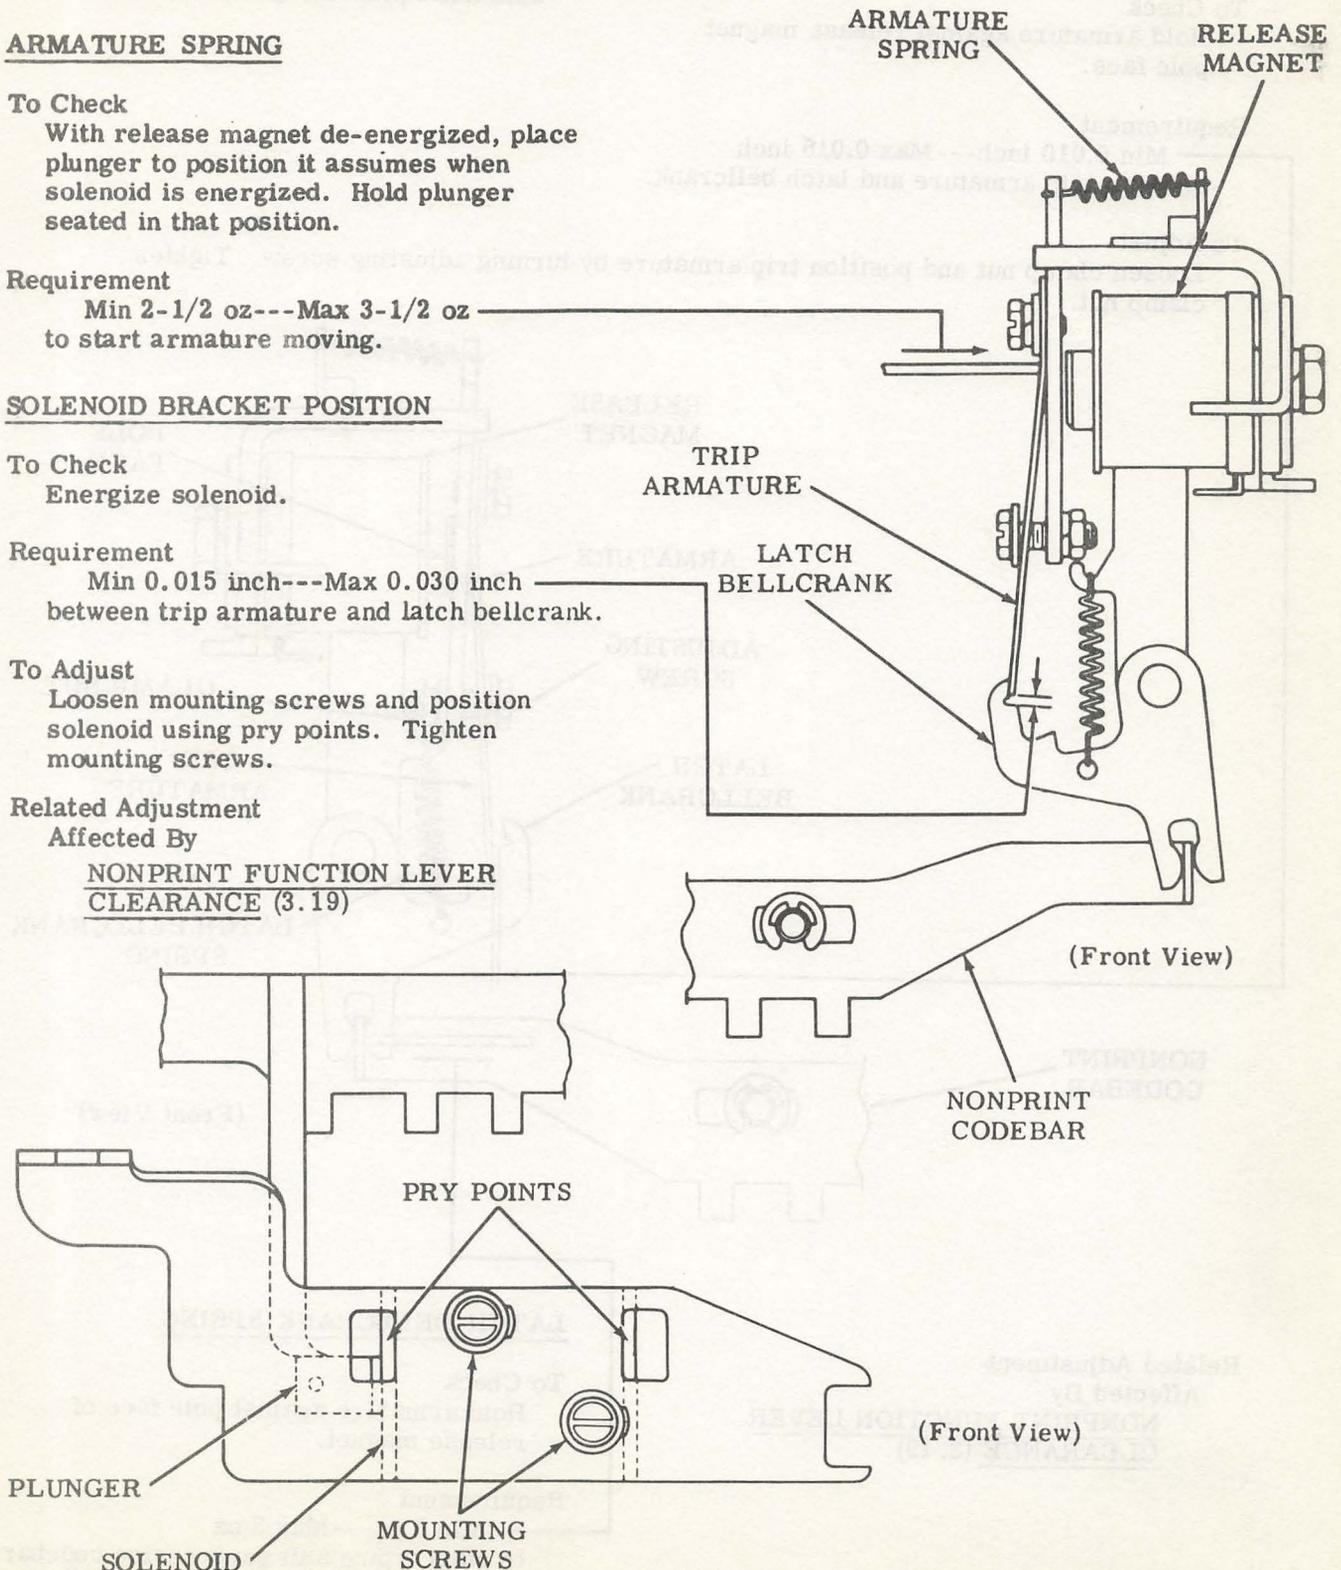

3.21 Print-Nonprint (Function Area) (continued)

RELEASE MAGNET OVERTRAVEL

To Check
Hold armature against release magnet pole face.


Requirement

Min 0.010 inch---Max 0.015 inch
between trip armature and latch bellcrank.

To Adjust

Loosen clamp nut and position trip armature by turning adjusting screw. Tighten clamp nut.

Note: The following adjustments apply only to typing units equipped with the automatic print-nonprint feature.

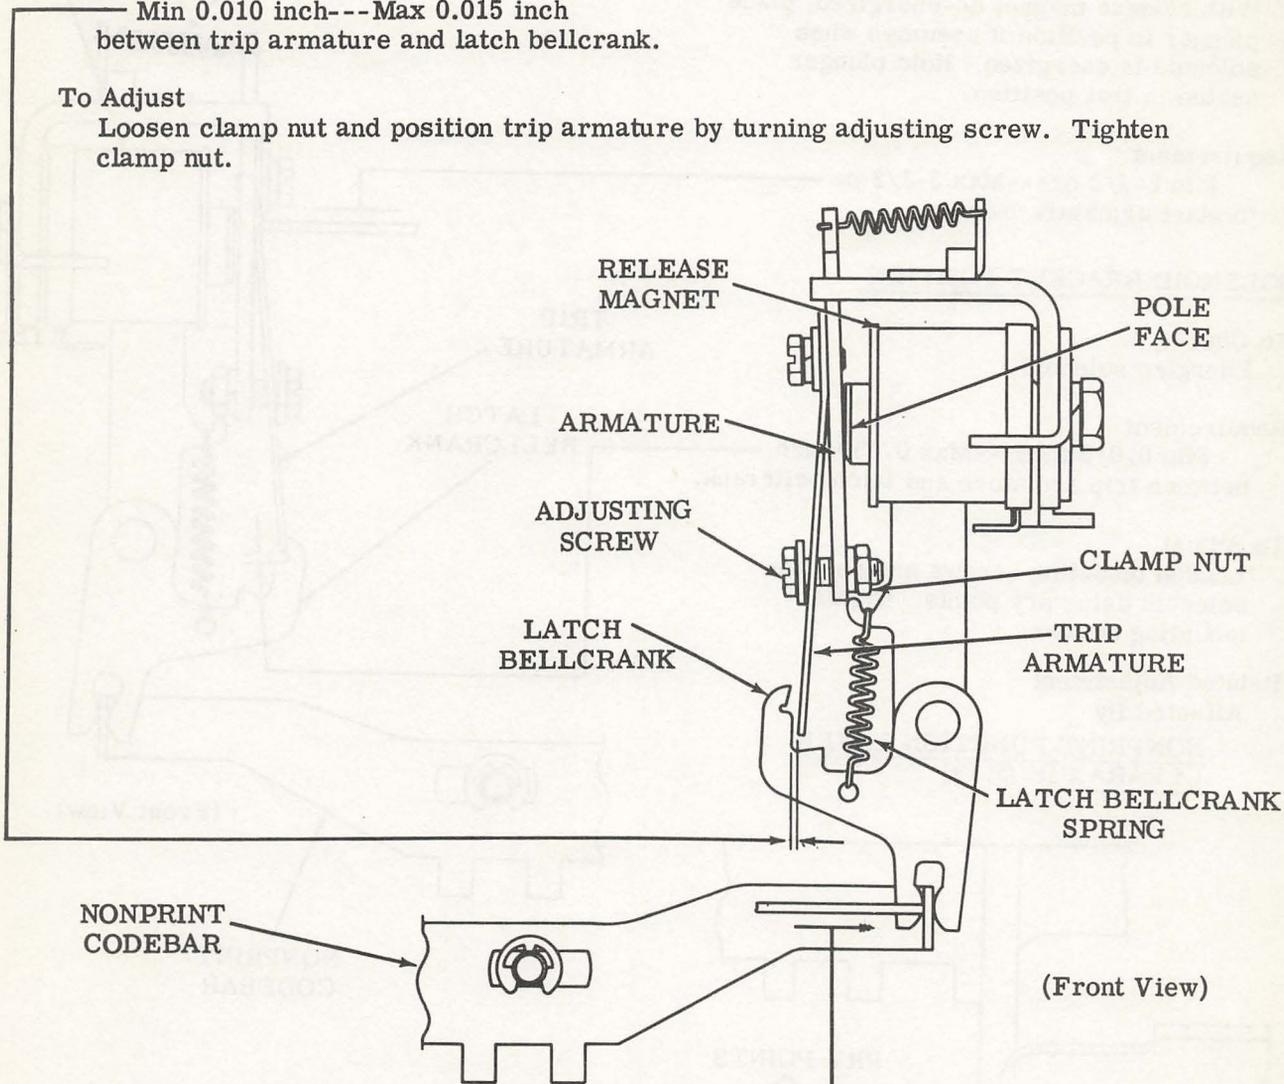

Related Adjustment

Affected By
NONPRINT FUNCTION LEVER CLEARANCE (3.19)

LATCH BELLCRANK SPRING

To Check
Hold armature against pole face of release magnet.

Requirement

Min 2 oz---Max 3 oz
to start typing unit suppression codebar moving.

3.22 Print-Nonprint (Function Area) (continued)

Note: The following adjustment applies only to typing units equipped with the manual print-nonprint feature — for units containing the automatic print-nonprint feature, refer to 3.21.

SOLENOID BRACKET POSITION**To Check**


Place plunger to position it assumes when solenoid is energized. Hold plunger seated in that position.

Requirement

Min 0.005 inch---Max 0.025 inch
between the function lever in slot 4 in function casting and tine of nonprint codebar.


To Adjust

Loosen mounting screws and position solenoid using pry points.

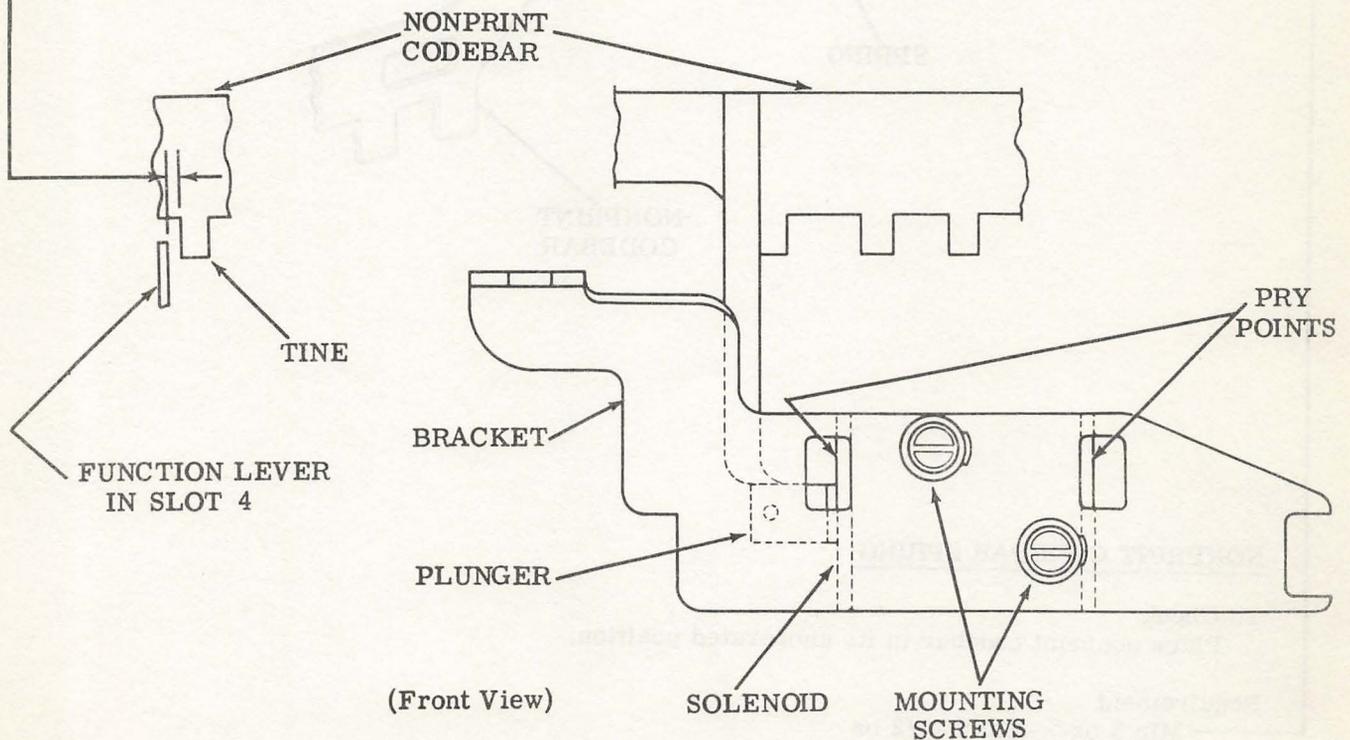

3.23 Print-Nonprint (Function Area) (continued)

Note: The following adjustment applies only to typing units equipped with the manual print-nonprint feature.

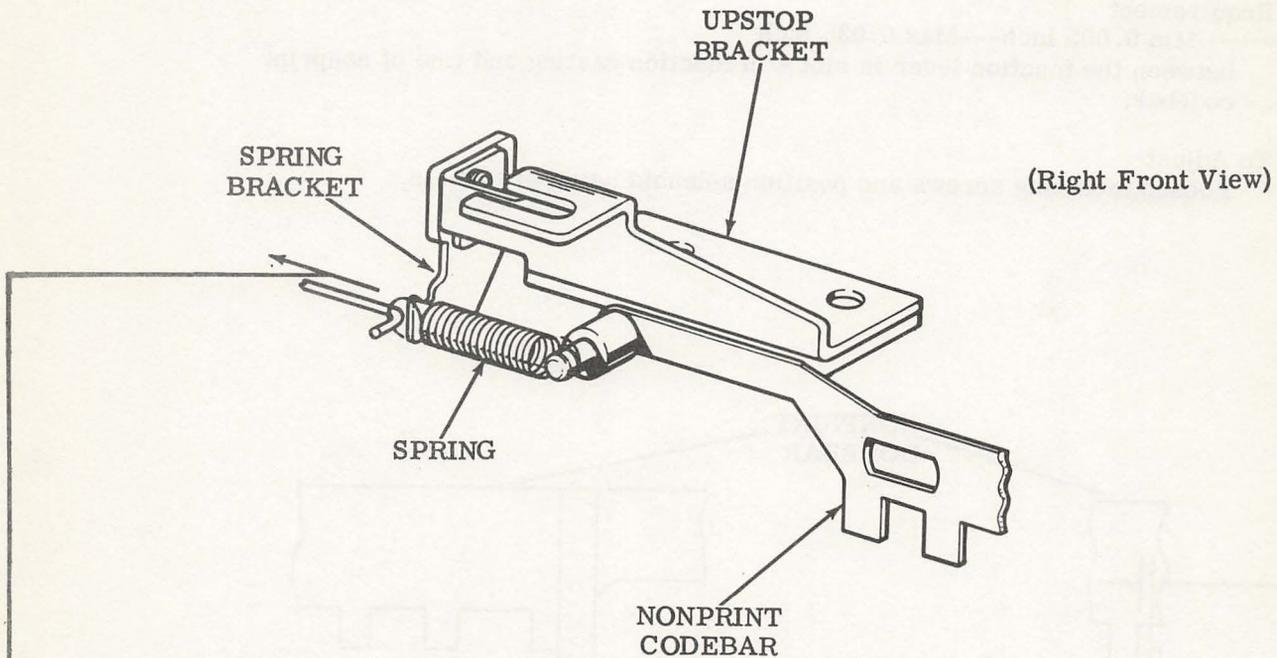

NONPRINT CODEBAR SPRING

To Check

Place nonprint codebar in its unoperated position.

Requirement

Min 3 oz---Max 3-1/2 oz
to pull spring to installed length.

3.24 Function Area

CODING AND INSTALLATION OF TP180801 UNIVERSAL FUNCTION LEVER

Note: The following instructions do not apply to the answer-back function lever and the carriage return drive function lever.

- (a) The tines on the universal function lever are numbered from right to left in the illustration as follows: PS, 1, 2, 3, 4, 5, 7, 6, 8.
- (b) There are two rows of tines on the universal function lever. The straight row of tines corresponds to the marking pulses of a given code combination. The bent row of tines corresponds to the spacing pulses of a given code combination.
- (c) Break both the marking and spacing no. 8 tines on units without parity. On units with parity do not break off the marking and spacing no. 8 tines.
- (d) The tines on the universal function lever are easily broken off with long nose pliers.
- (e) The TP180801 universal function lever is to be installed only in the numbered slots of the function casting.
- (f) If the typing unit is equipped with a function lever retainer, lower the retainer sufficiently to allow the universal function lever to be installed under the codebar basket. Readjust the function lever retainer.
- (g) Place the universal function lever under the codebar basket with the open end of the pivot slot on the pivot shaft.
- (h) Holding the lever vertically, squeeze it onto the pivot shaft with a pair of pliers. This is a "snap" fit and sufficient pressure should be applied with the pliers to get the lever fully on the shaft. The lever should pivot freely once on the shaft.
- (i) Locate the proper numerical slot on the function casting, place the lever in the slot, and install a TP91120 spring.

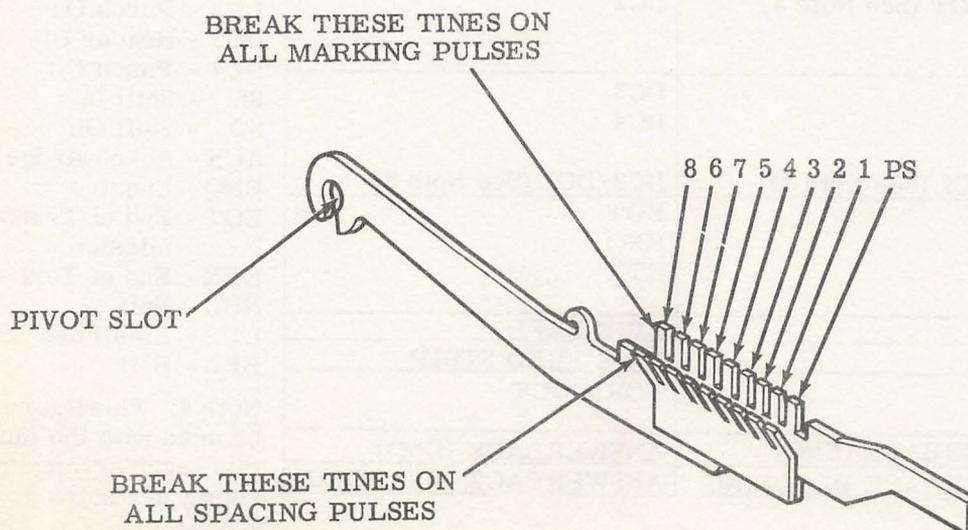


CHART
FUNCTION LEVER CODE ARRANGEMENT

SLOTS	FRICTION FEED	SPROCKET FEED
* SEE NOTE 2	LINE FEED BLOCKING	
1 SEE NOTE 2	LINE FEED NEW LINE	NEW LINE
A	AUTOMATIC CARRIAGE RETURN NEW LINE	NEW LINE
2	CARRIAGE RETURN NEW LINE	CARRIAGE RETURN NEW LINE
B	CARRIAGE RETURN ACTUATING	CARRIAGE RETURN ACTUATING
3	SPACE	SPACE
4	PRINT SUPPRESSION ON DELETE, DCI, AND NUL	PRINT SUPPRESSION ON DELETE, DCI, AND NUL
5	PRINT SUPPRESSION ON DELETE	PRINT SUPPRESSION ON DELETE
6	PRINT SUPPRESSION ON ALL CONTROL CHARAC- TERS	PRINT SUPPRESSION ON ALL CONTROL CHARAC- TERS
7	BELL	BELL
F	MARGIN BELL	MARGIN BELL
8	SO ENQ	SO ENQ
9	SI ACK DC1	SI ACK DC1
10	ACK ENQ EOT ENQ/EOT (See Note 3) DC1 DC2	ACK ENQ/EOT (See Note 3) DC1 DC2
11	DC3 DC4 ACK DC3/DC1 (See Note 3)	DC3 DC4 DC3/DC1 (See Note 3)
12	BELL EOT ETX ENQ	EOT ENQ ETX
13	EOT	LINE FEED
M		LINE FEED STRIP
14	ACK ETX	FORM OUT
15	ANSWERBACK (ENQ)	ANSWERBACK (ENQ)
0	ANSWERBACK BLOCKING	ANSWERBACK BLOCKING

Note 1: Some slots have more than one function lever designation. The particular function lever for these slots depends on the set. Some sets have no function lever in these slots.

Note 2: The function levers in the * and 1 positions do not occupy slots in the function casting. They are guided by slots in brackets. The brackets are illustrated in the appropriate parts sections.


Note 3: The function lever will respond to either code combination and momentarily open a normally closed contact on the function casting.

Abbreviations:

DC1 - Reader On
DC2 - Punch On
DC3 - Reader Off
DC4 - Punch Off
SI - Shift In
SO - Shift Off
ACK - Acknowledge
ENQ - Enquire
EOT - End of Trans-
mission
ETX - End of Text
NUL - Null
LF - Line Feed
BEL - Bell

Note 4: This figure is to be used with the function lever arrangement shown in Figure 6.

Note 5: The following slots have no function levers at present: C, D, E, G, H, J, K, L, N.

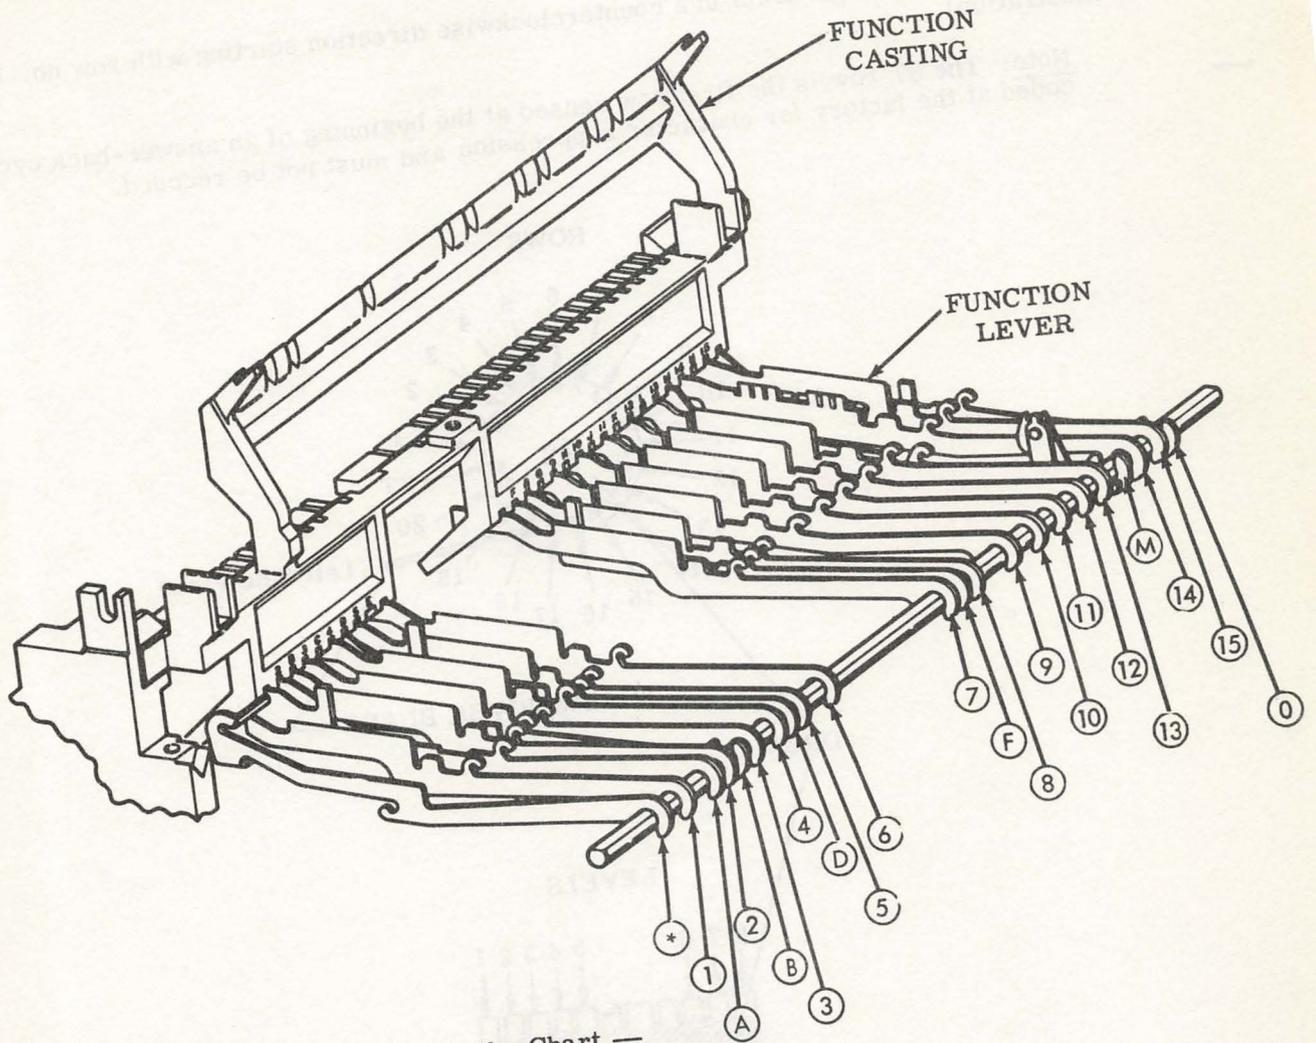

Note: This figure is to be used with the Chart —
Function Lever Code Arrangement.

Figure 5 - Function Lever Code Arrangement

3.25 Answer-Back Area (continued)

CODING THE ANSWER-BACK DRUM

- (a) To remove the answer-back drum for coding, press back and down on the tab portion of the TP180854 brace until it becomes detented in its open position. Lift feed pawl slightly (do not overextend its spring) and remove drum.
- (b) Code the answer-back drum in a counterclockwise direction starting with row no. 1 (see illustration).

Note: The ST row is the first row sensed at the beginning of an answer-back cycle. It is coded at the factory for character suppression and must not be recoded.

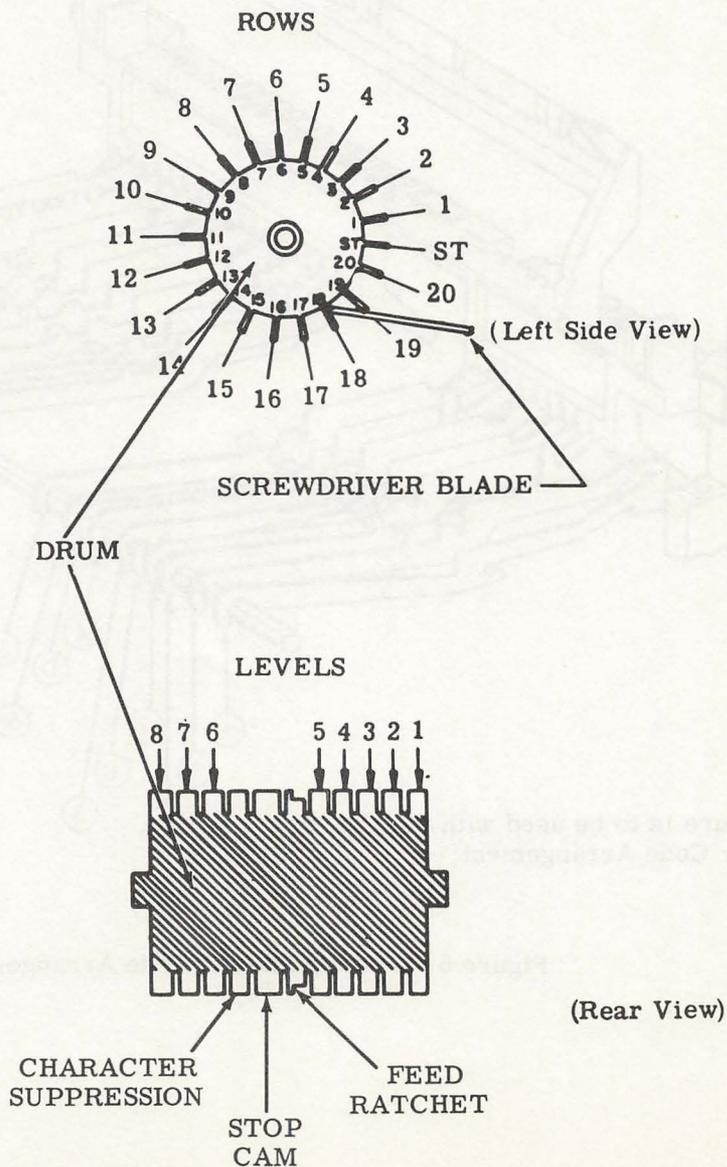


Figure 6 - Answer-Back Drum

3.26 Answer-Back Area (continued)

- (c) A particular character is coded by either retaining or removing tines within a row, as illustrated in Figure 6. A tine may be removed by either of the two following methods:

Method 1: Place the end of a screwdriver blade at the base of a tine in the row previously coded. Press the side of the blade against the top of the unwanted tine until the tine breaks off. Figure 6 illustrates this method — pressure applied to base of row no. 18 and against top of adjacent tine being removed from row no. 19.

Method 2: Place the unwanted tine in the slot of a TP161686 tine tool, or grasp the tine firmly with long-nose pliers. With the tool or pliers held stationary, rotate the answer-back drum back and forth until the tine breaks off near its base. Do not damage adjacent tines.

Note: If a coding error is made, or for some other reason it is necessary to suppress (erase) characters from the answer-back drum, remove the character suppression tine from the row(s) affected.

- (d) The length of an answer-back sequence can be varied either by removing the stop cam tine(s) and/or the character suppression tine(s).
- (e) For short sequences, code the drum for either 2- or 3-cycle operation by removing the appropriate tine(s) as indicated in Figure 7.
- (f) Removal of the character suppression tine from any row prevents transmission from the answer-back mechanism. To shorten the answer-back sequence, remove the suppression tine from any unused row(s) after the end of a message. ←

Note: On sets used in systems where a response to each answer-back activation signal must be obtained, do not remove the character suppression tine from the last row of each segment of the answer-back drum. For answer-back drums coded for 1-cycle operation this is row no. 20. The last row can be coded with any other character that is compatible with the particular system.

- (g) The number of rows available for message coding is shown below for 1-, 2-, or 3-cycle operation.

CYCLE OPERATION	TOTAL ROWS	AVAILABLE ROWS
1	21	20
2	10(11)*	9(10)*
3	7	6

*Alternately one, then the other.

- (h) The number of rows available for actual station identification is less than shown above because each coded message should begin and end with CARRIAGE RETURN and LINE FEED (this may be altered in specific applications). This assures that the transmitted message will appear at the beginning of a line of the receiving teletypewriter set and eliminates overprinting.

3.27 Answer-Back Area (continued)

- (i) In switched network service, the station identification for 1-cycle operation may not exceed 14 characters, including spaces. The answer-back drum should be coded as follows:

<u>ABBREVIATION</u>	<u>KEY TO ABBREVIATION</u>
ACK	Acknowledge
CR	Carriage Return
LF	Line Feed
RO	Rub Out
SP	Space
SUP	Character Suppression

(a) Example 1:

SUP CR LF RO
 TELETYPE SP NILES CR LF ACK
 Company City

Station Identification
 (Maximum - 14 characters)

Note: In this system, the ACK character code combination must be the final significant character code combination in the coded answer-back message.

(b) Example 2:

SUP CR LF RO
 ERIE SP BOST CR LF ACK SUP SUP SUP SUP SUP
 Company City

Station Identification
 (Less than maximum number of characters)

Note: If the station identification is less than the maximum of 14 characters in length, then the remaining rows on the answer-back drum must be coded with the character suppression code according to Example 2 above.

- (j) To replace the answer-back drum, place the TP180854 brace in its detented open position, and lift feed pawl (do not overextend its spring). Replace drum with its shaft firmly seated in the contact block slots. Release feed pawl and TP180854 brace. Rotate answer-back drum to assure proper seating of its associated parts. Check that the contact wires are located in their proper slots.

ASCII CODE				ASCII CODE			
1967 Edition	1965 Edition	1963 Edition	MARKING REMOVE TINES	1967 Edition	1965 Edition	1963 Edition	MARKING REMOVE TINES
NUL		NULL	NONE	2			2-5-6-8
SOH		SOM	1-8	3			1-2-5-6
STX		EOA	2-8	4			3-5-6-8
ETX		EOM	1-2	5			1-3-5-6
EOT			3-8	6			2-3-5-6
ENQ		WRU	1-3	7			1-2-3-5-6-8
ACK		RU	2-3	8			4-5-6-8
BEL		BELL	1-2-3-8	9			1-4-5-6
BS		FE _o	4-8	:			2-4-5-6
HT		HT/SK	1-4	;			1-2-4-5-6-8
LF			2-4	<			3-4-5-6
VT		VTAB	1-2-4-8	=			1-3-4-5-6-8
FF			3-4	>			2-3-4-5-6-8
CR			1-3-4-8	?			1-2-3-4-5-6
SO			2-3-4-8	@		@	7-8
SI			1-2-3-4	A			1-7
DLE		DC _o	5-8	B			2-7
DC1			1-5	C			1-2-7-8
DC2			2-5	D			3-7
DC3			1-2-5-8	E			1-3-7-8
DC4		DC4 (STOP)	3-5	F			2-3-7-8
NAK		ERR	1-3-5-8	G			1-2-3-7
SYN		SYNC	2-3-5-8	H			4-7
ETB		LEM	1-2-3-5	I			1-4-7-8
CAN		S _o	4-5	J			2-4-7-8
EM		S ₁	1-4-5-8	K			1-2-4-7
SUB	SS	S ₂	2-4-5-8	L			3-4-7-8
ESC		S ₃	1-2-4-5	M			1-3-4-7
FS		S ₄	3-4-5-8	N			2-3-4-7
GS		S ₅	1-3-4-5	O			1-2-3-4-7-8
RS		S ₆	2-3-4-5	P			5-7
US		S ₇	1-2-3-4-5-8	Q			1-5-7-8
SP		b	6-8	R			2-5-7-8
!			1-6	S			1-2-5-7
"			2-6	T			3-5-7-8
#			1-2-6-8	U			1-3-5-7
\$			3-6	V			2-3-5-7
%			1-3-6-8	W			1-2-3-5-7-8
&			2-3-6-8	X			4-5-7-8
'		'	1-2-3-6	Y			1-4-5-7
(4-6	Z			2-4-5-7
)			1-4-6-8	[1-2-4-5-7-8
*			2-4-6-8	\			3-4-5-7
+			1-2-4-6]	~		1-3-4-5-7-8
,			3-4-6-8	^		†	2-3-4-5-7-8
-			1-3-4-6	—		←	1-2-3-4-5-7
.			2-3-4-6	↑		ACK	3-4-5-6-7-8
/			1-2-3-4-6-8	}		ALT. MODE	1-3-4-5-6-7
0			5-6	~		ESC	2-3-4-5-6-7
1			1-5-6-8	DEL			1-2-3-4-5-6-7-8
				{			1-2-4-5-6-7

REMOVE TINES IN THE FOLLOWING ROWS TO GET THE PROPER CYCLE		
CYCLES	CHARACTER SUPPRESSION	STOP CAM
1 Cycle	Row ST	Row 6
2 Cycle	Row ST Row 11	Row 6 Row 17
3 Cycle	Row ST Row 7 Row 14	Row 6 Row 13 Row 20

Note 1: Blank spaces in the ASCII (American National Standard Code for Information Interchange) columns indicate no change from the latest edition of the code.

Note 2: Codes shown are for even parity operation. For nonparity operation, remove the eighth level tine.

Note 3: Tines present on the drum represent spacing bits. Tines removed from the drum represent marking bits.

Figure 7 - Answer-Back Drum Code Arrangement