

35 TRANSMITTER DISTRIBUTOR BASE ASSEMBLY

LUBRICATION

	CONTENTS	PAR. NO.
1.	GENERAL	1.01-1.05
2.	LUBRICATION	2.01-2.02
	Transmitter distributor gear and motor pinion	2.02
	Transmitter distributor base	2.01

1. GENERAL

1.01 This section is reissued to convert it from a preliminary publication to a standard publication.

1.02 The Transmitter Distributor Base Assembly should be lubricated in accordance with Paragraph 2. The figures indicate points to be lubricated and the kind and quantity of lubricant to be used. Lubricate the reperfocator just prior to placing it in service. After a few weeks in service, re-lubricate to make certain that all

points receive lubrication. Thereafter, lubricate every 500 hours of operation or every six months, whichever occurs first.

1.03 Use KS7470 oil at all locations where the use of oil is indicated. Use KS7471 grease on all surfaces where grease is indicated.

1.04 The photographs show the paragraph number referring to particular line drawings of mechanisms and where these mechanisms are located on the unit. Parts in the line drawings are shown in an upright position unless otherwise specified.

1.05 The illustration symbols indicate the following lubrication directions.

- 0 Apply 1 drop of oil.
- 02 Apply 2 drops of oil.
- 04 Apply 4 drops of oil.
- SAT Saturate with oil.
- G Apply thin film of grease.


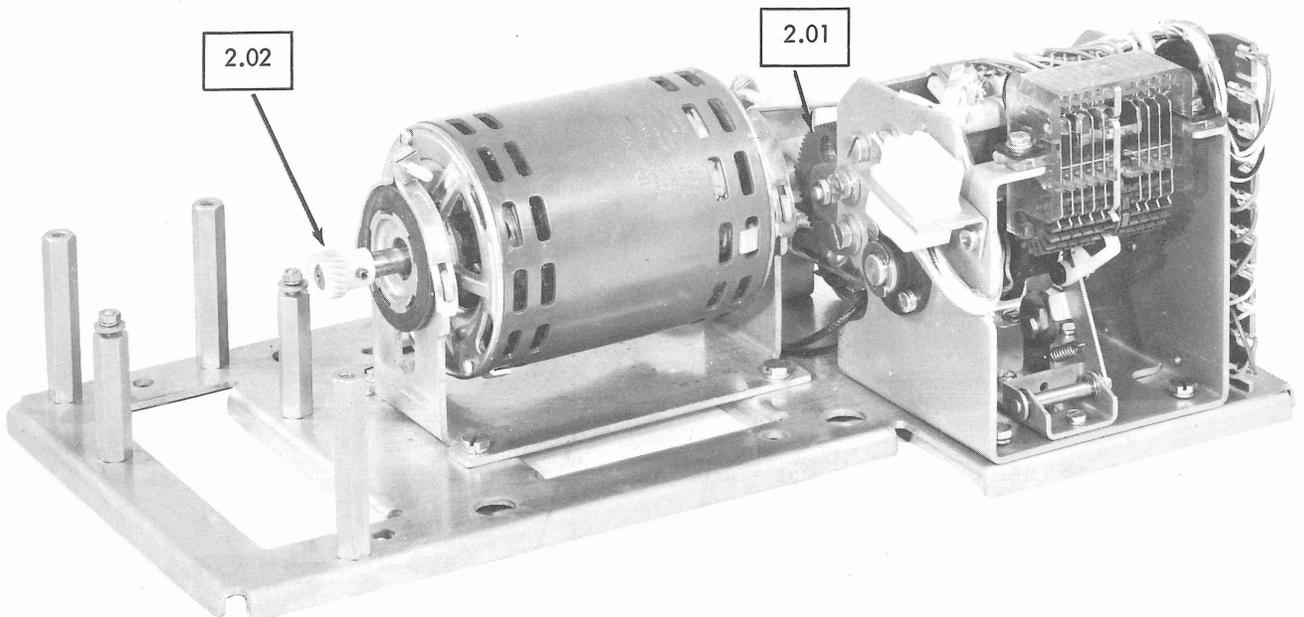


Figure 1 - 35 Transmitter Distributor Base Assembly

2. LUBRICATION

2.01 Answer Back Gears

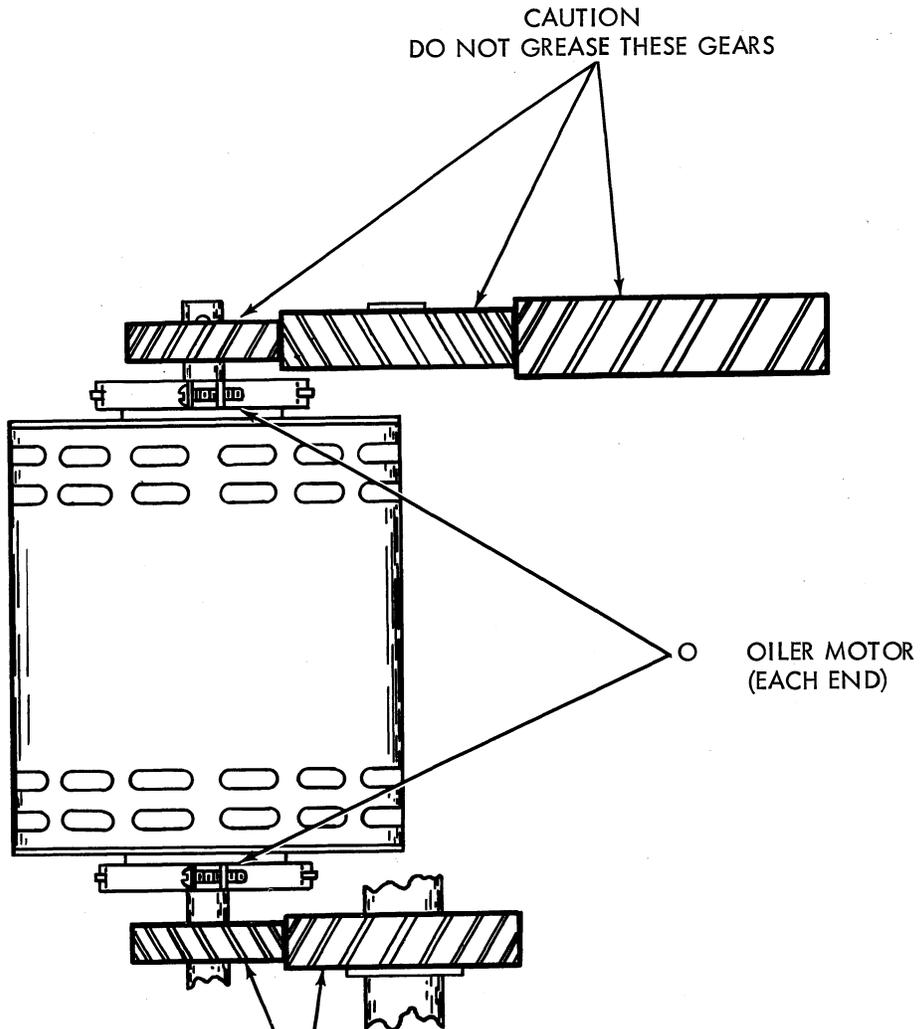

2.02 Transmitter Distributor Gear and Motor Pinion

G GEARS
TRANSMITTER DISTRIBUTOR
AND MOTOR PINION