


35 CABINETS FOR KEYBOARD SEND-RECEIVE AND
RECEIVE-ONLY SETS
LUBRICATION

CONTENTS	PAGE	
1. GENERAL.	1	1.04 Use KS7470 oil at all points requiring oil and KS7471 grease at all points requiring grease.
2. LUBRICATION.	2-4	1.05 The unit should be thoroughly lubricated, but over-lubrication, which might allow oil or grease to be thrown to other parts, should be avoided. The following general instructions supplement the specific lubrication points indicated:
Lower cover hinge and latch - (later design only)	3	(a) Apply one drop of oil to all spring hooks.
Upper and lower cover hinge and latch, wall mounted cabinet	4	(b) Apply oil to all pivot points.
Upper cover hinge and latch.	2	(c) Apply oil to all sliding surfaces.
1. GENERAL		1.06 Specific lubrication requirements and the amount of lubricant are indicated at each lubrication point in accordance with the following code:
1.01 This section is reissued to include recent engineering changes and to add the wall mounted cabinet. Since this is a general revision, marginal arrows have been omitted.		O1 Apply 1 drop of oil.
1.02 The 35 Cabinet should be lubricated as directed in this section. The figures indicate the points to be lubricated and the quantity of lubricant to be used. Lubricate the assembly just prior to placing it in service.		O2 Apply 2 drops of oil.
1.03 The cabinet should be lubricated after each six months period of time or after each 1500 hours of service when the operating components of the set are serviced.		O3 Apply 3 drops of oil.
		G Apply thin film of grease.
		1.07 Remove any oil from finished surfaces with a soft clean cloth.




SECTION 574-229-701

2. LUBRICATION

2.01 Upper Cover Hinge and Latch

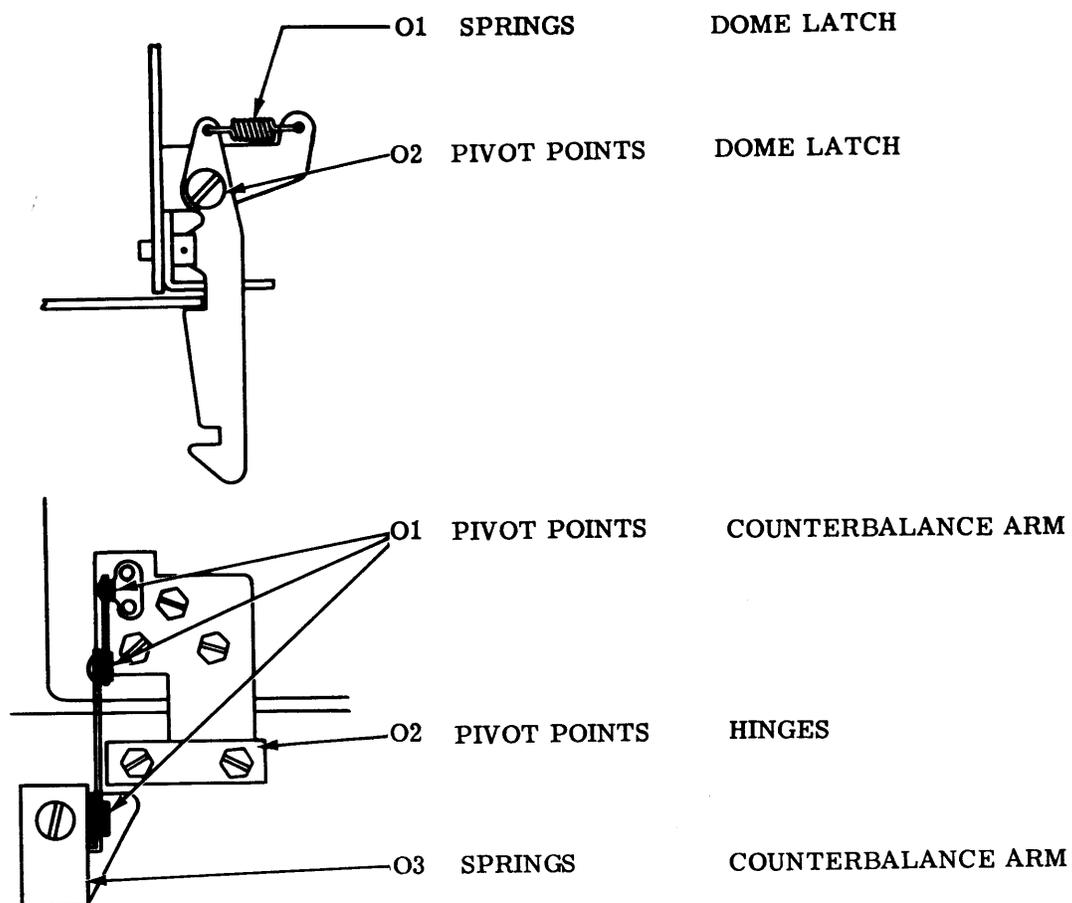

2.02 Lower Cover Hinge and Latch (Later Design Only)

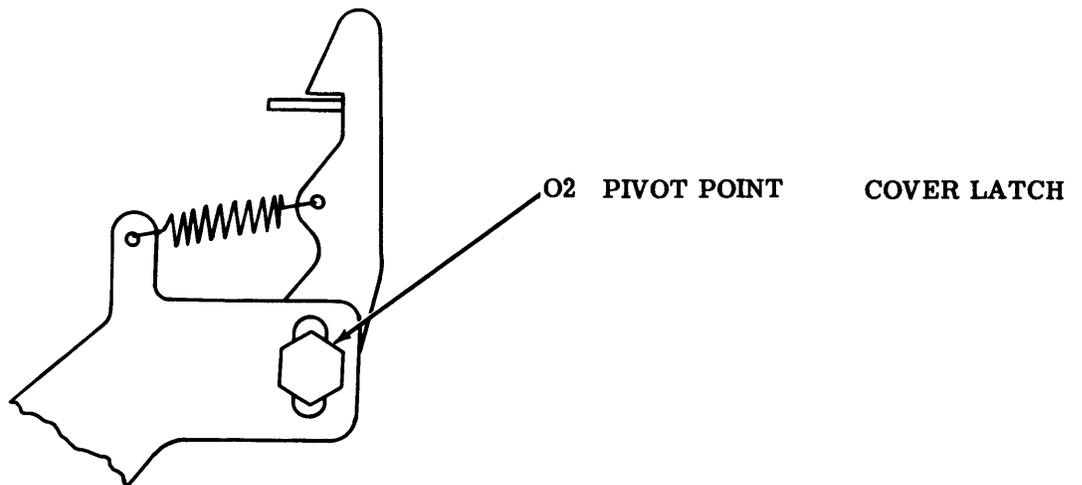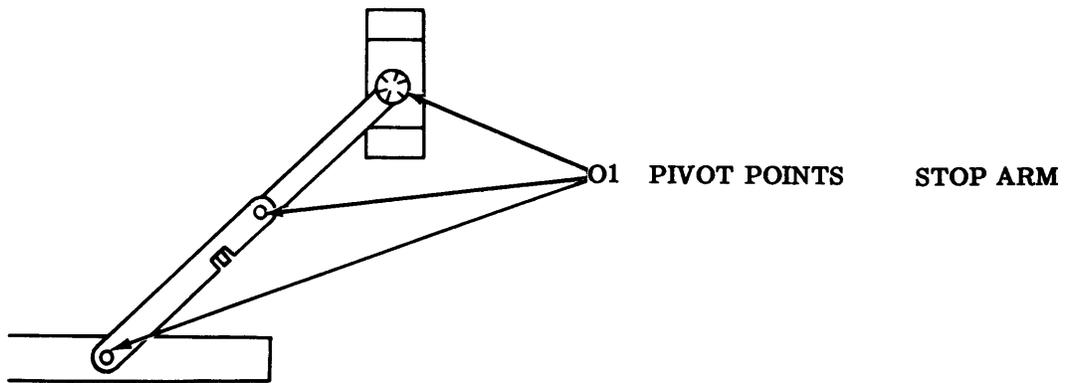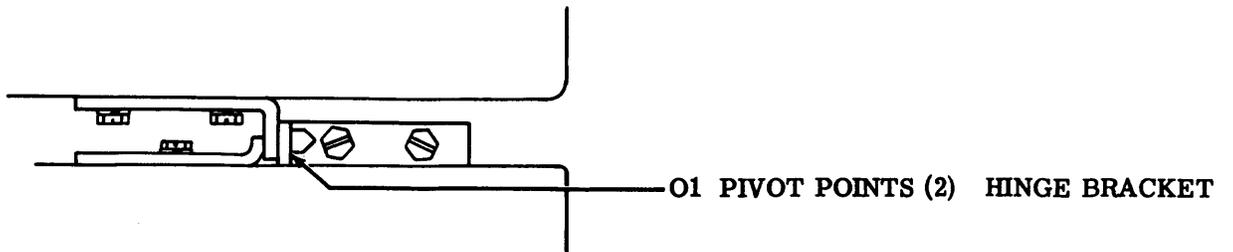

2.03 Upper and Lower Cover Hinge and Latch, Wall Mounted Cabinet

