


35 RECEIVE-ONLY TYPING REPERFORATOR COVER


DESCRIPTION AND ADJUSTMENTS

CONTENTS	PAGE	
1. GENERAL	1	2.02 The cover rests on the subbase portion of the base without touching the upper base at any point. An opening at the left side of the cover, near the base mounting edge, accommodates an external tape winder when used.
2. DESCRIPTION	1	2.03 A tape emission slot at the left side of the cover permits discharge of the tape.
3. ADJUSTMENTS	1	2.04 Openings at the rear of the cover are for admission of cables from the electrical service unit or other external circuitry. An opening is also provided for the power switch.
1. GENERAL		2.05 Access to the reperforator to load tape or change ribbons can be done by opening the lid on the cover. The lid pivots on a hinge at the rear of the cover. The left side of the lid is clear to provide visual access to the tape as it is printed.
1.01 This section is issued to incorporate the description and adjustments of the 35 receive-only typing reperforator cover (Figures 1 and 2) into one section. This information was contained in Sections 574-230-100, 574-230-700, 574-230-701, and 574-230-702.		2.06 A means of indicating a low tape condition on the reperforator is provided at the right side of the lid. A rectangular translucent area bears the words REPLACE TAPE, which becomes visible when the tape-out lamp on the base is illuminated.
1.02 The cover serves to enclose and protect the tape perforating and printing mechanism while providing a visual access to the output tape. A hinged lid permits tape or ribbon servicing without removal of the cover.		2.07 The maximum permissible average ambient temperature rise within the cover is 40°F during normal operation of the set.
2. DESCRIPTION		3. ADJUSTMENTS
2.01 The cover totally encloses the 35 receive-only reperforator with its associated motor unit and base. It is approximately 13-7/16 inches wide by 13-13/16 inches deep by 8-3/8 inches high and weights approximately 8-3/4 pounds.		3.01 The cover requires only one adjustment as shown in 3.02. No lubrication is required on the cover.

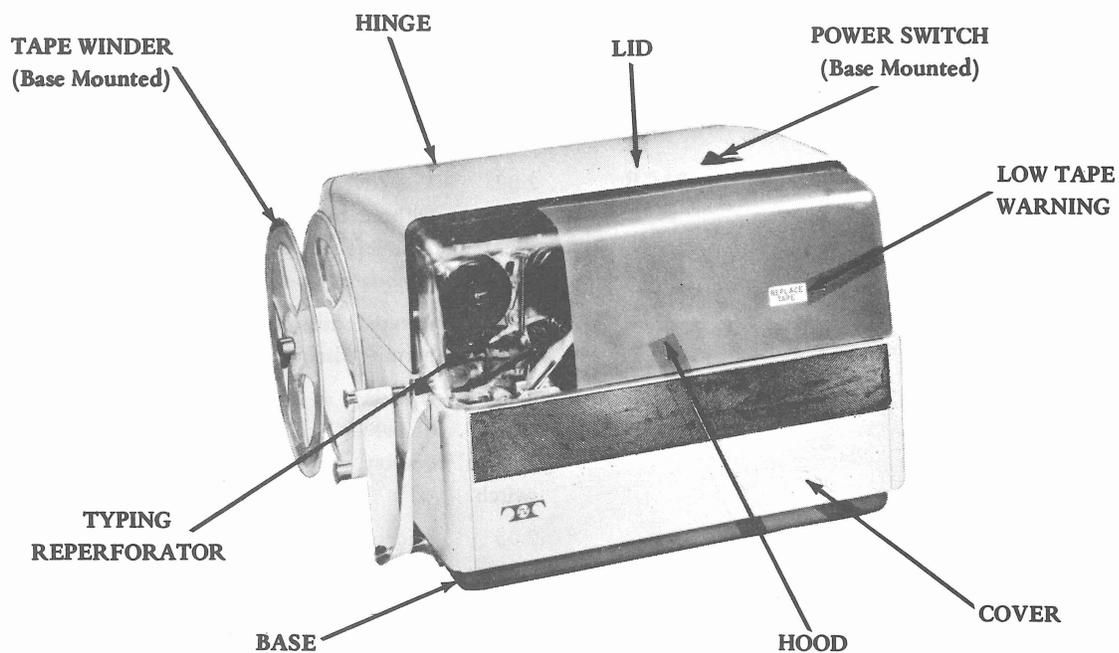

(Front View)


Figure 1 - Receive-Only Typing Reperforator Set

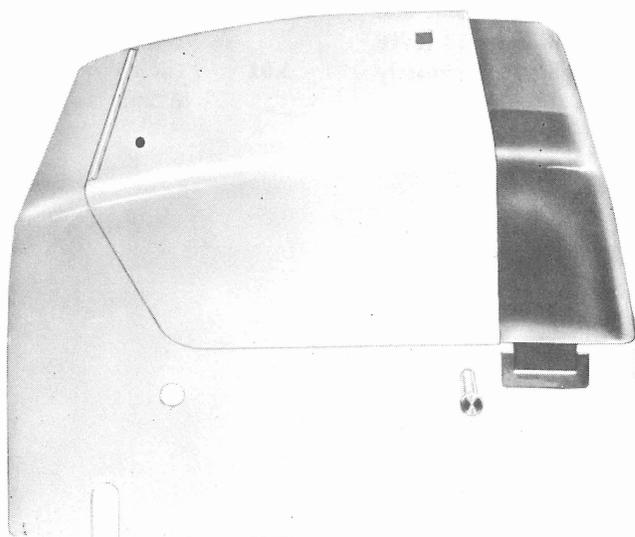

(Left Side View)

Figure 2 - Receive-Only Typing Reperforator Cover

3.02 Hood

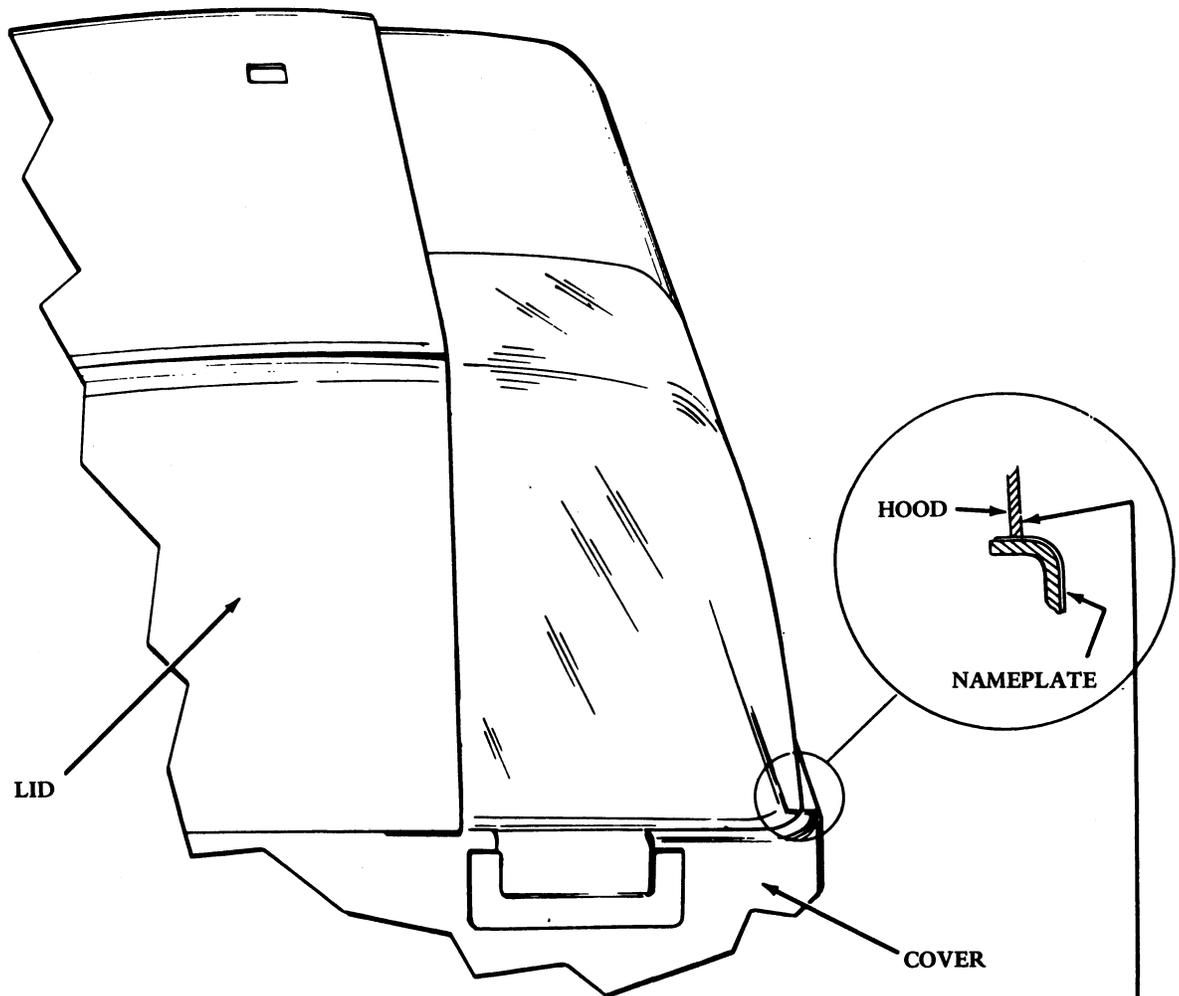

(Left Side View)

HOOD

Requirement

Front edge of plastic hood approximately centered on cover and nameplate.

To Adjust

Position hood with nuts holding it to lid loosened.

CAUTION: DO NOT OVER TIGHTEN NUTS SO AS TO CRACK OR DAMAGE HOOD.