

35 RECEIVING ONLY REPERFORATOR TABLE
(35A AND 35B TABLE)
ADJUSTMENTS

CONTENTS	PAGE
1. GENERAL	1
2. LUBRICATION	2
Hinge	2
Knife	2
Receiving only reperforator table . . .	2

1. GENERAL

1.01 This section covers the complete lubrication procedures for the 35 Receiving Only Reperforator Table (35A and 35B Table). The section has been reissued to include recent engineering changes and additions to rearrange the text. Since this is a general revision, marginal arrows ordinarily used to indicate changes and additions are omitted.


1.02 The 35 Receiving Only Reperforator Table consists mainly of passive parts and requires only two points of lubrication. These points are shown by a photograph. Specific lubrication information is indicated by line drawings and descriptive text. The symbol, O1, in the text indicates one drop of KS7470 oil.

1.03 The equipment should be thoroughly lubricated, but overlubrication which might allow oil to drop or grease to be thrown on other parts should be avoided. Special care should be exercised to prevent lubricant from getting between electrical contact points.

1.04 All equipment should be lubricated before being placed in service or prior to storage. After a few weeks of service, relubricate to make certain that all specified points have received lubricant.


2. LUBRICATION

2.01 Receiving Only Reperforator Table

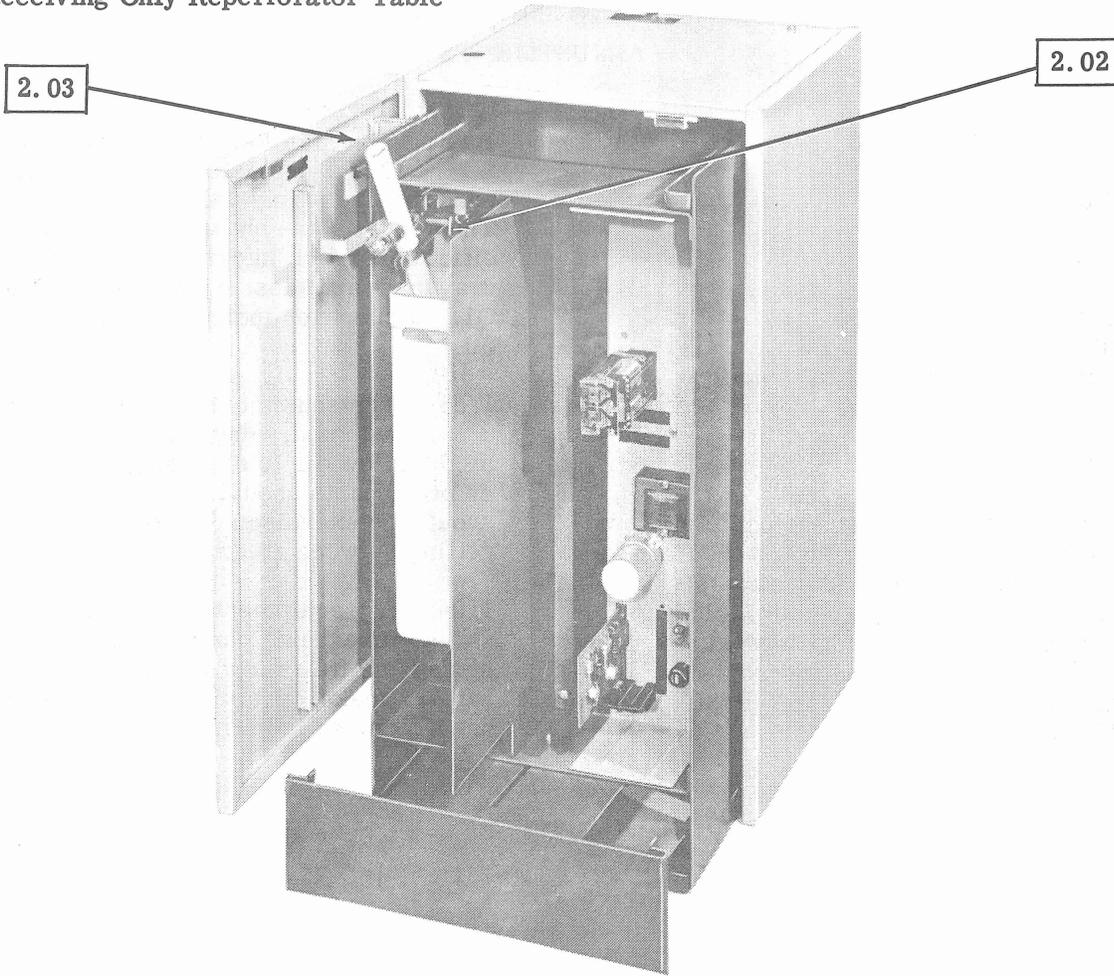

(Front and Right Side View)

2.02 Knife

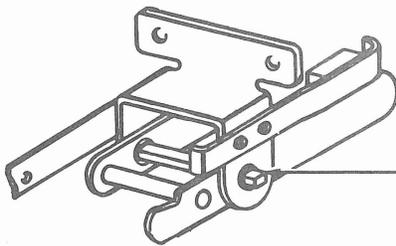

O1

Pivot Points (2)

Knife

2.03 Hinge



O1

Pivot Point

Hinges (2)