


35 TRANSMITTER (LX)


PARTS

FIGURE	CONTENTS	PAGE
1	Front Plate Mechanism	2
2	Front Plate Mechanism (Continued)	3
3	Front Plate Mechanism (Continued)	4
4	Center Plate Mechanism	5
5	Rear Plate Mechanism	6
6	Clutch Trip Magnet Mechanism	7
7	Main Shaft Mechanism - 1 Cycle	8
8	Main Shaft Mechanism - 2 Cycle	8
9	Tape Guide Plate Mechanism	9
10	Cover and Top Plates	10
11	Cable Components	10
	Numerical Index	11

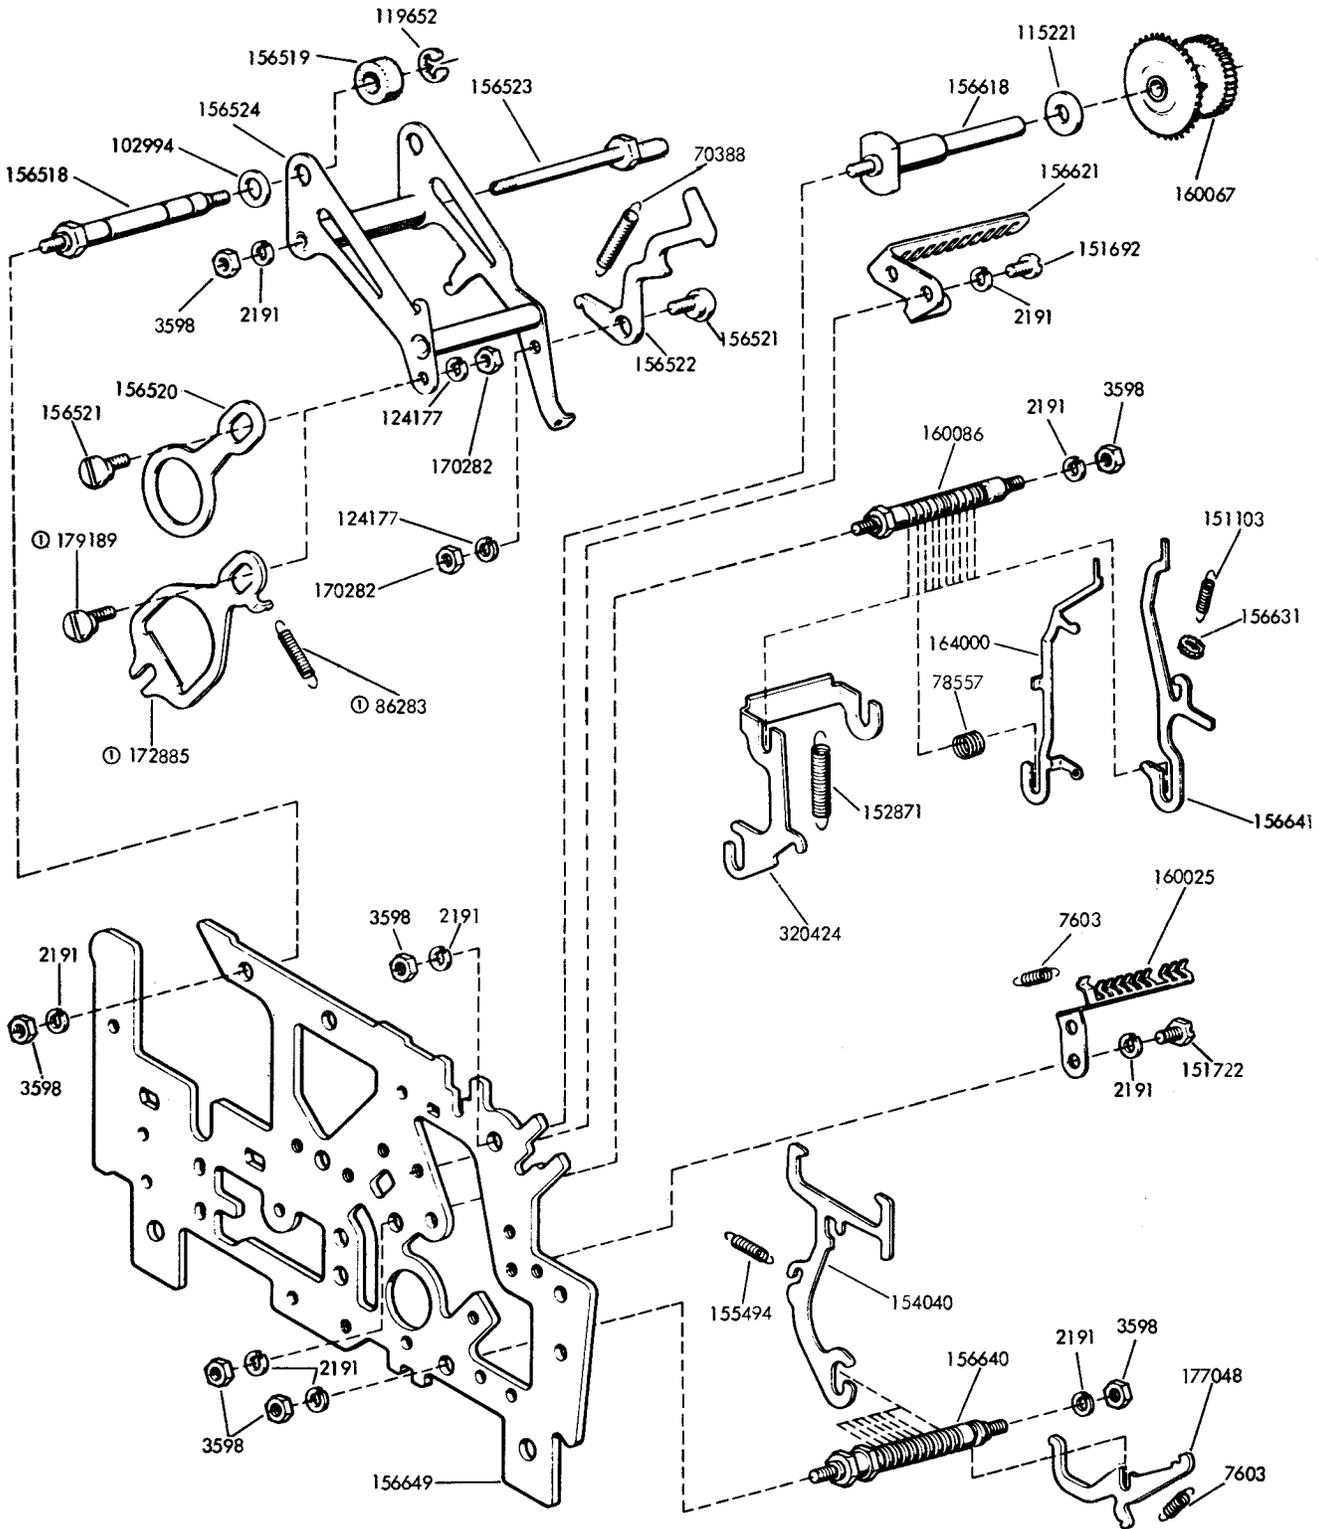

Ⓞ Peculiar to units equipped with a two cycle clutch

FIGURE 1. FRONT PLATE MECHANISM

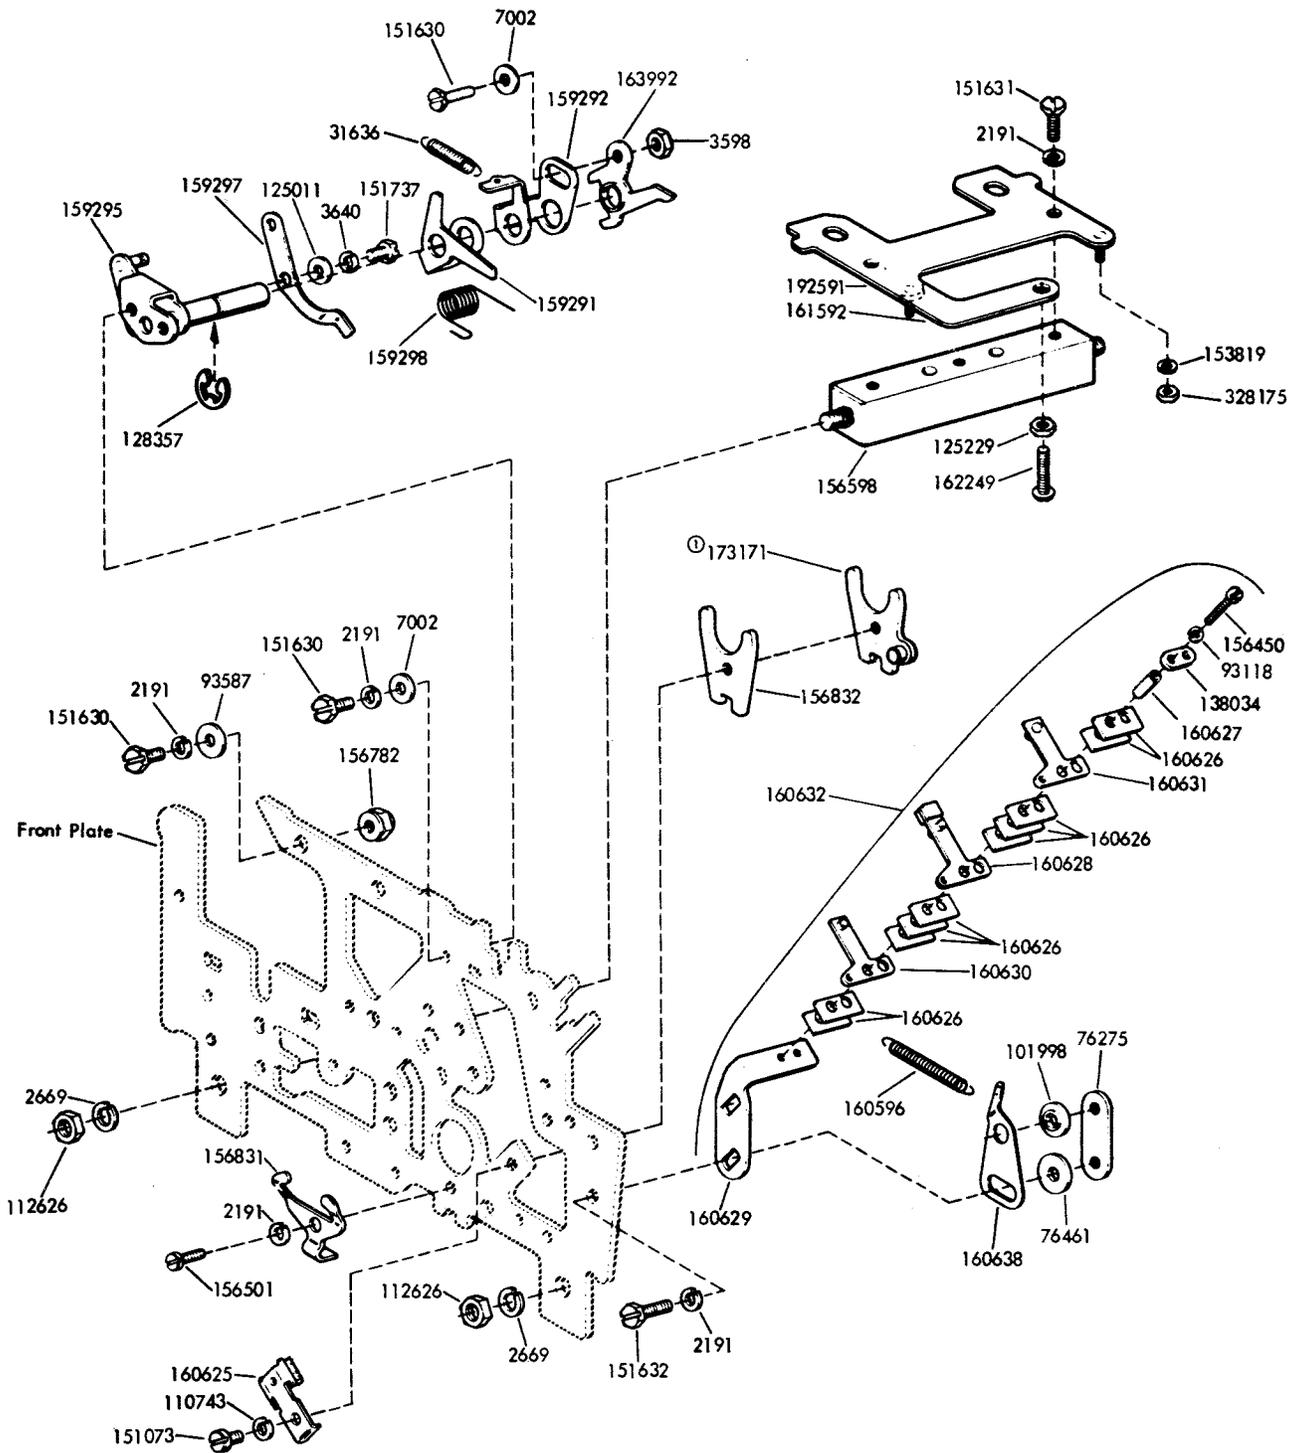

Ⓞ Peculiar to units equipped with a two cycle clutch

FIGURE 2. FRONT PLATE MECHANISM (Continued)


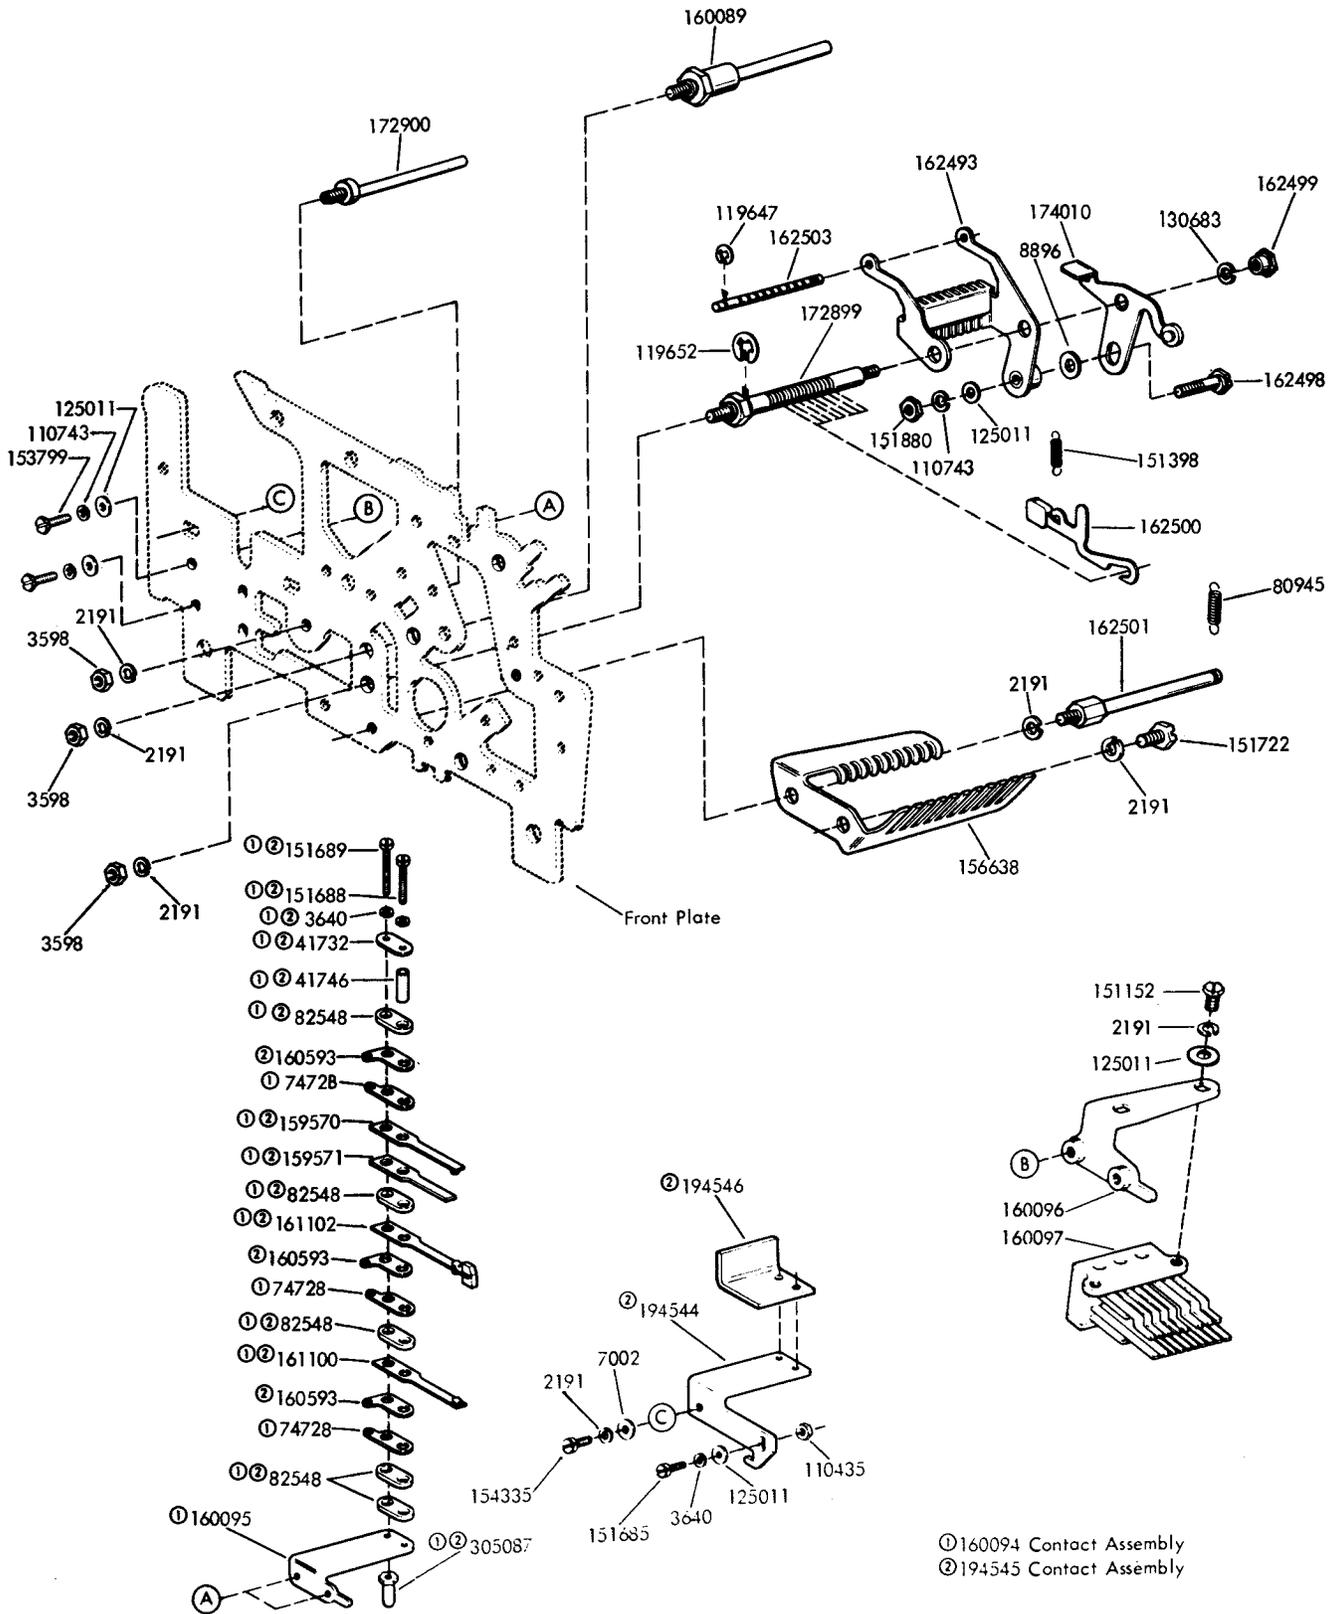


FIGURE 3. FRONT PLATE MECHANISM (Continued)

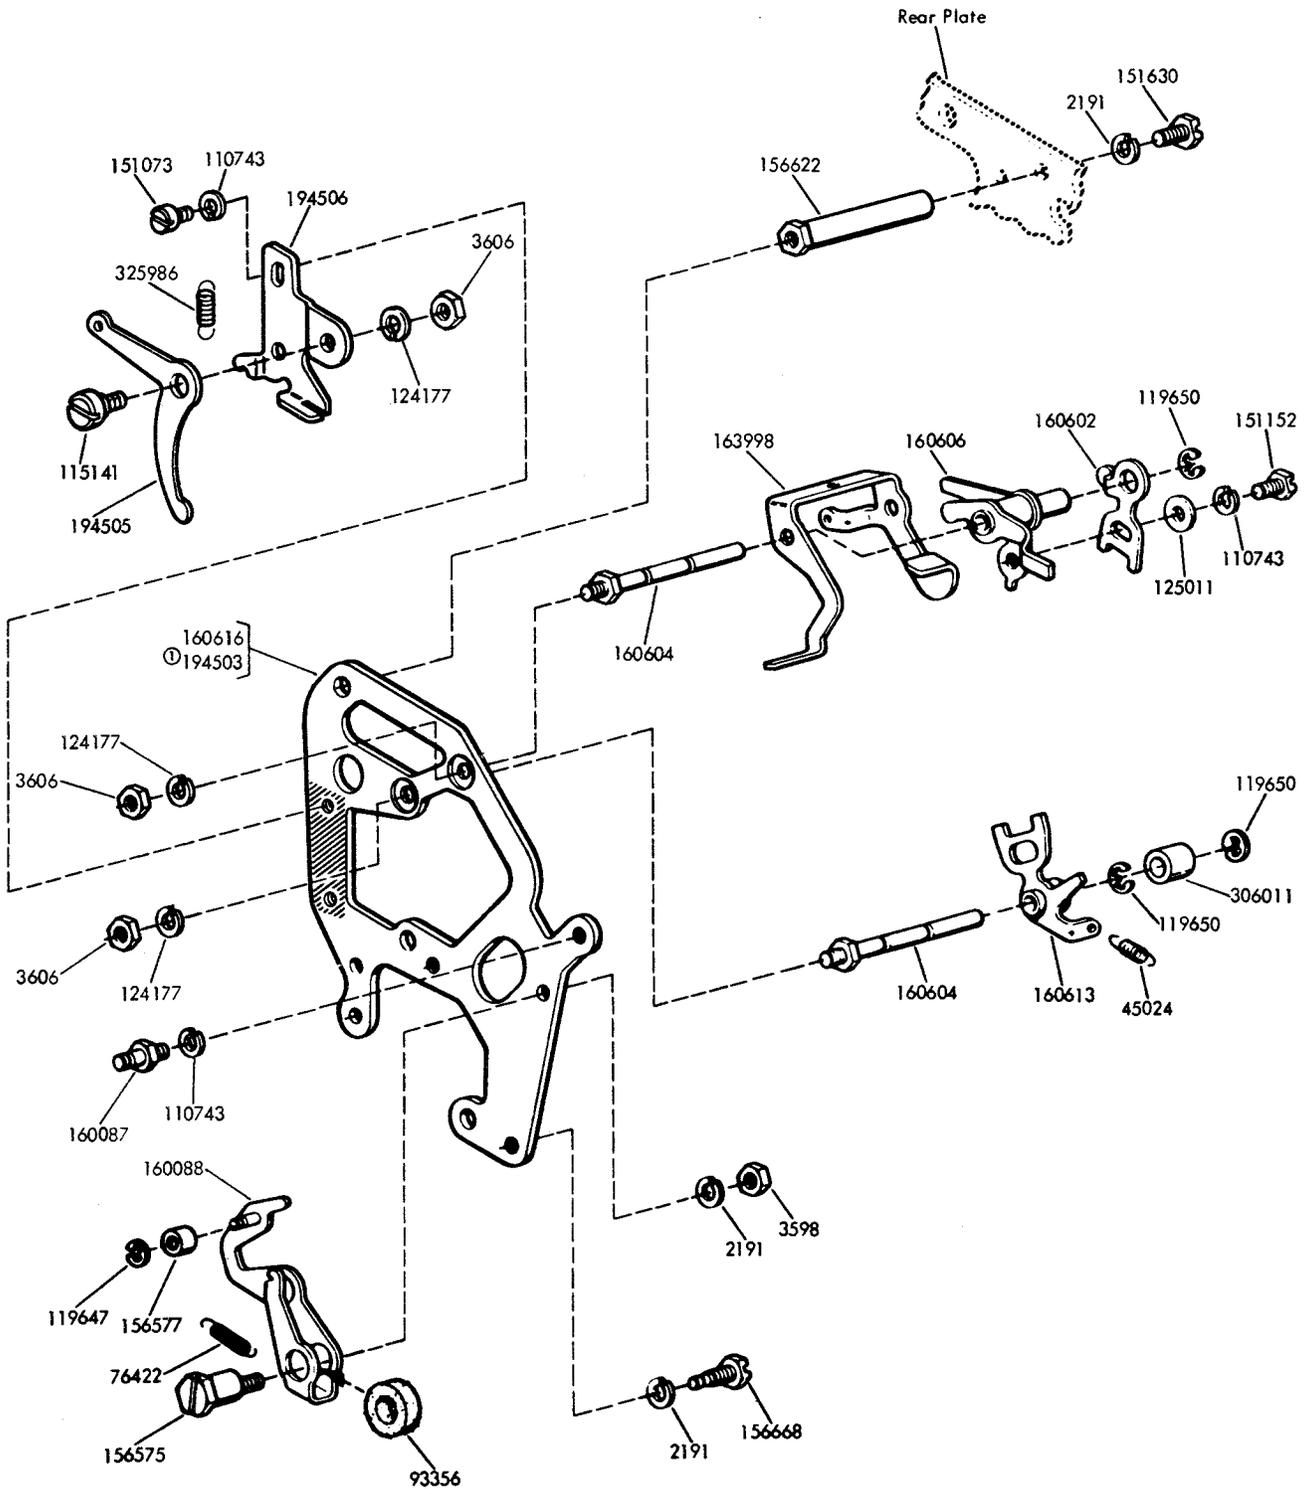

① Holes in Crosshatched Area Are Peculiar to 194503

FIGURE 4. CENTER PLATE MECHANISM

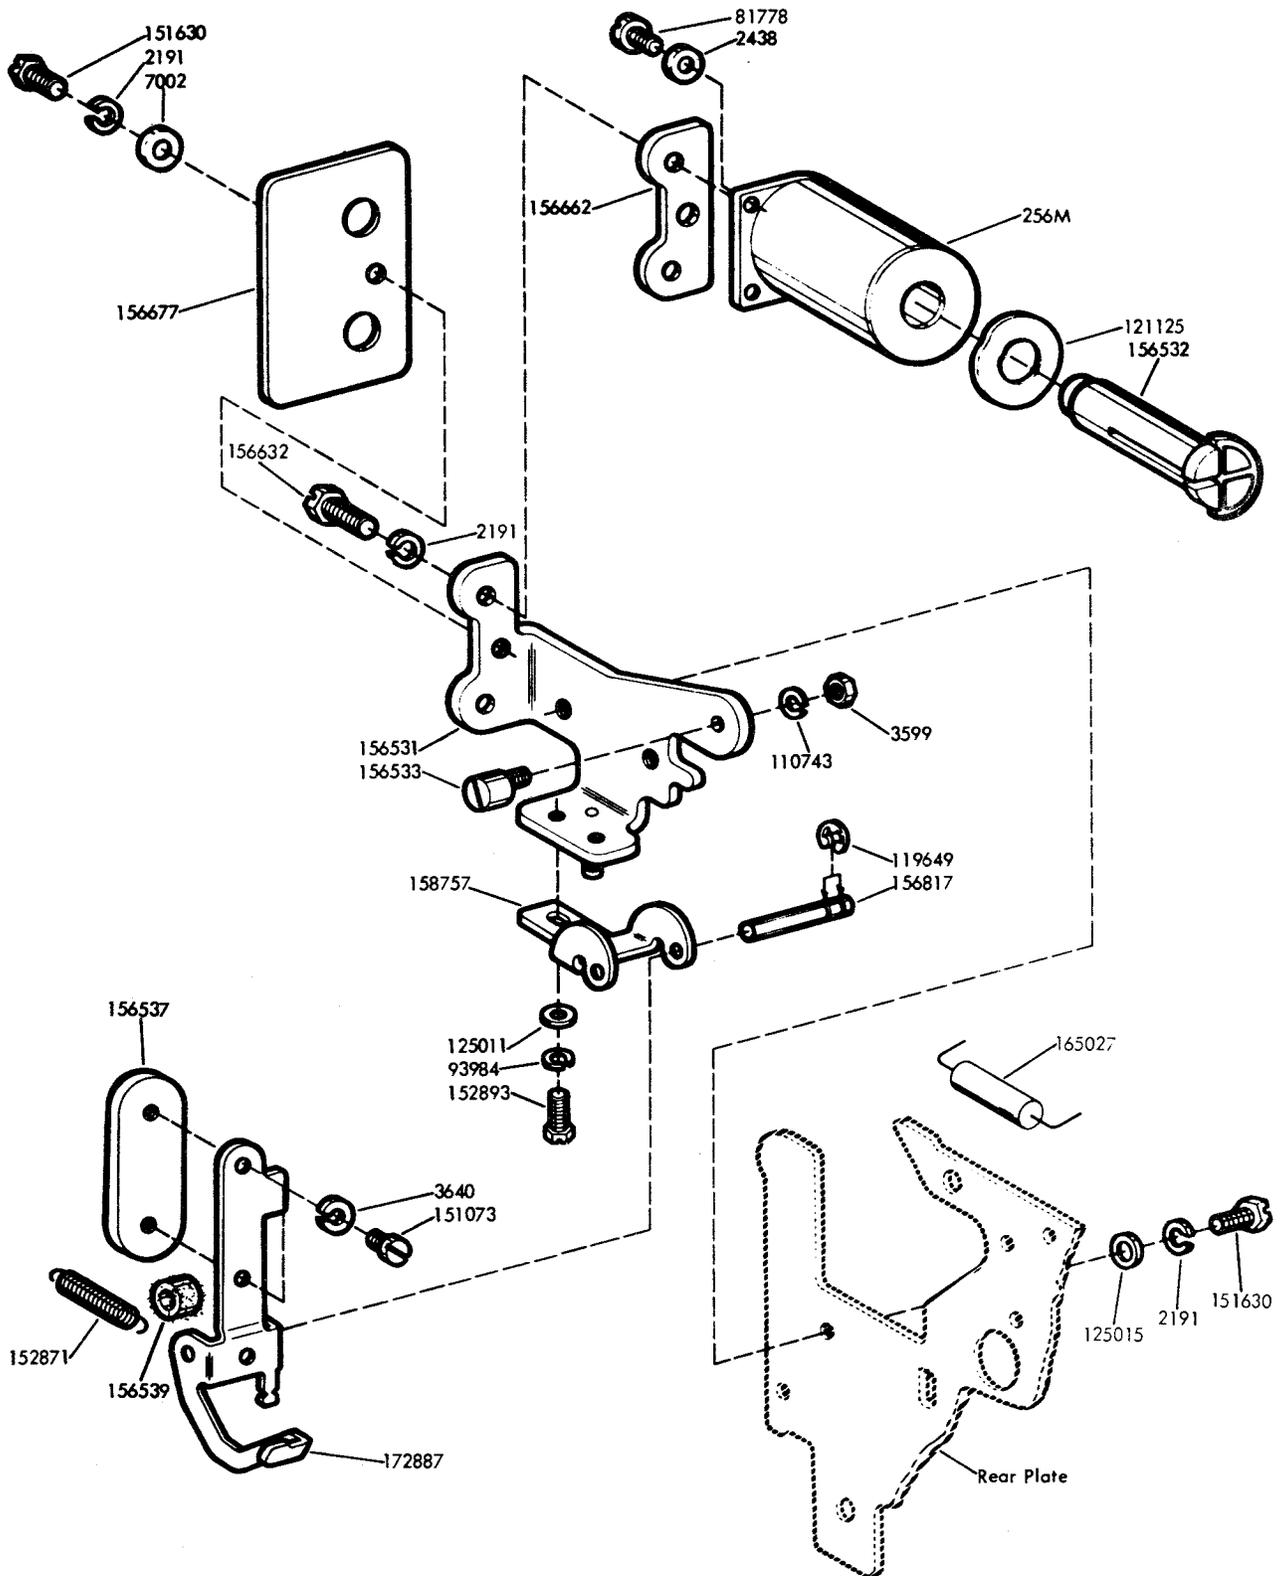


FIGURE 6. CLUTCH TRIP MAGNET MECHANISM

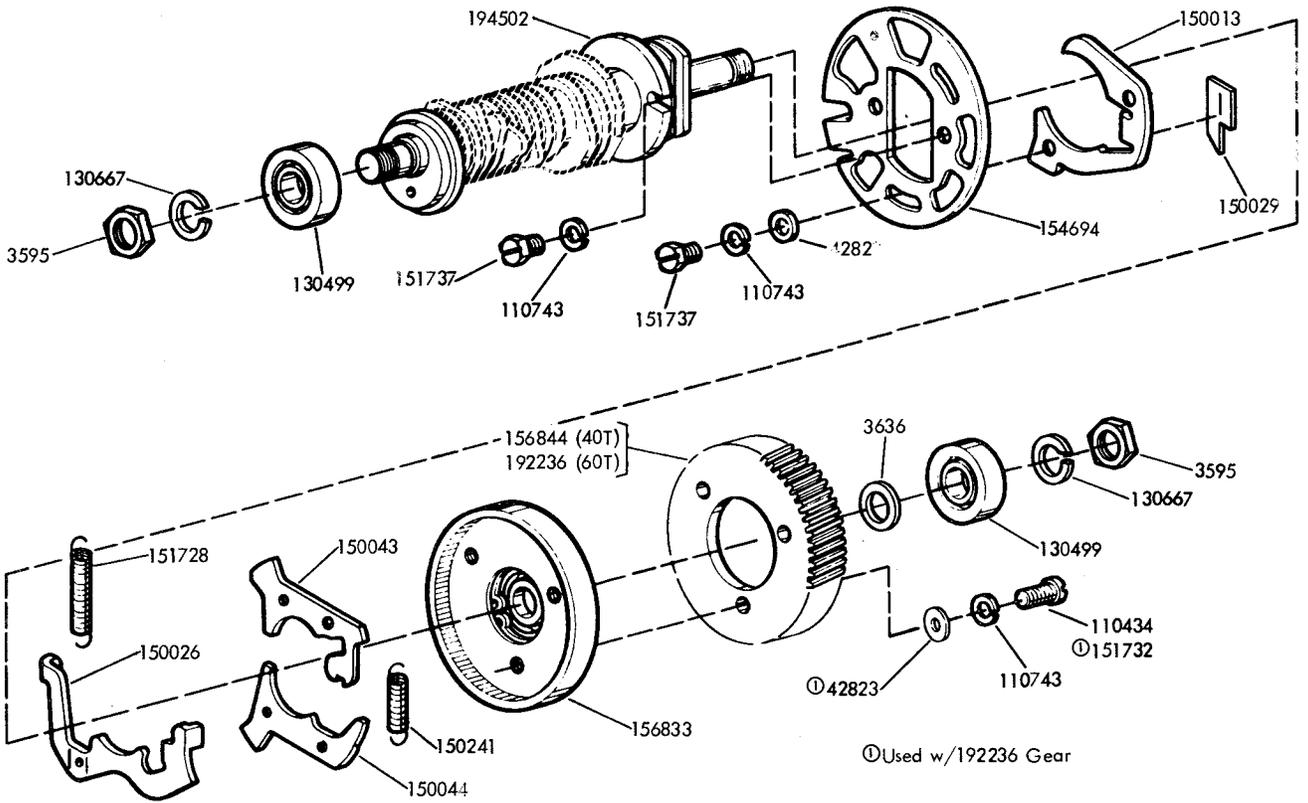


FIGURE 7. MAIN SHAFT MECHANISM - 1 CYCLE

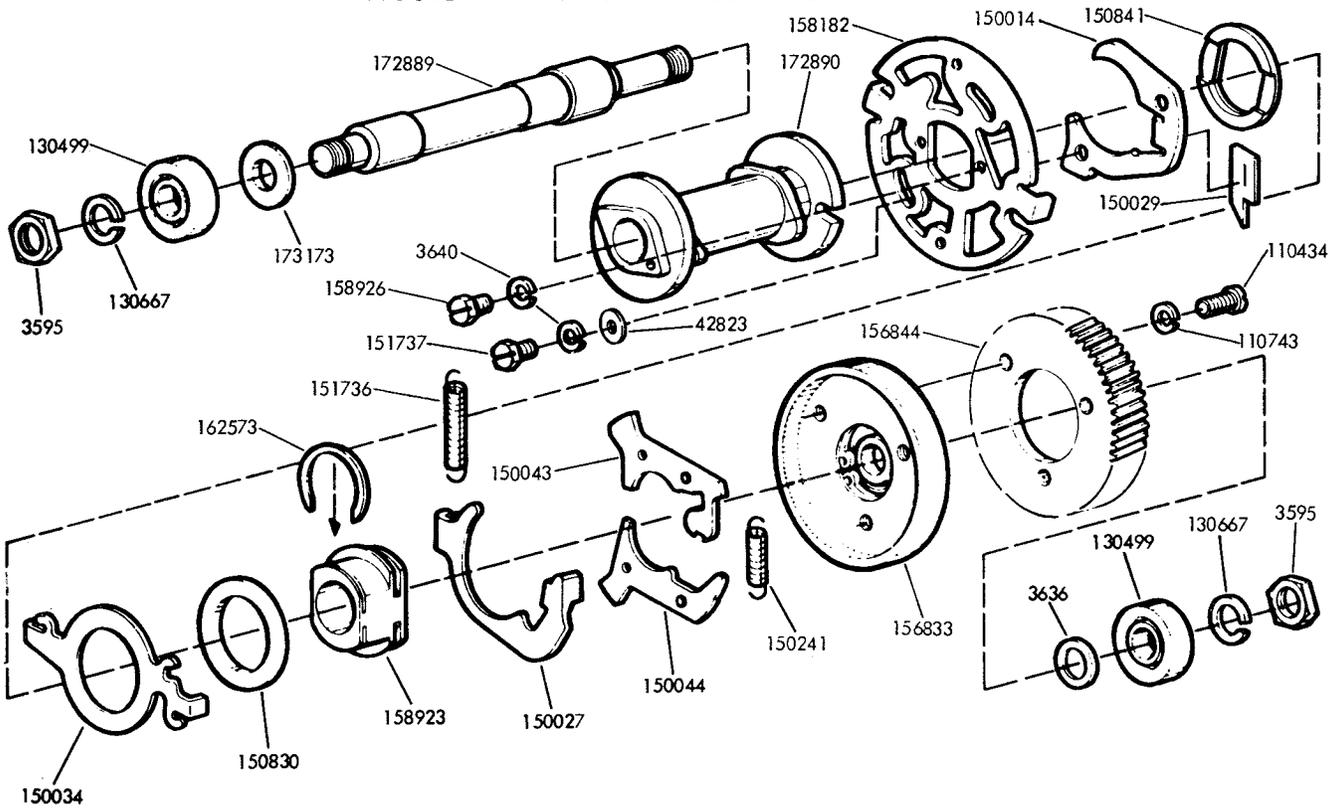


FIGURE 8. MAIN SHAFT MECHANISM - 2 CYCLE

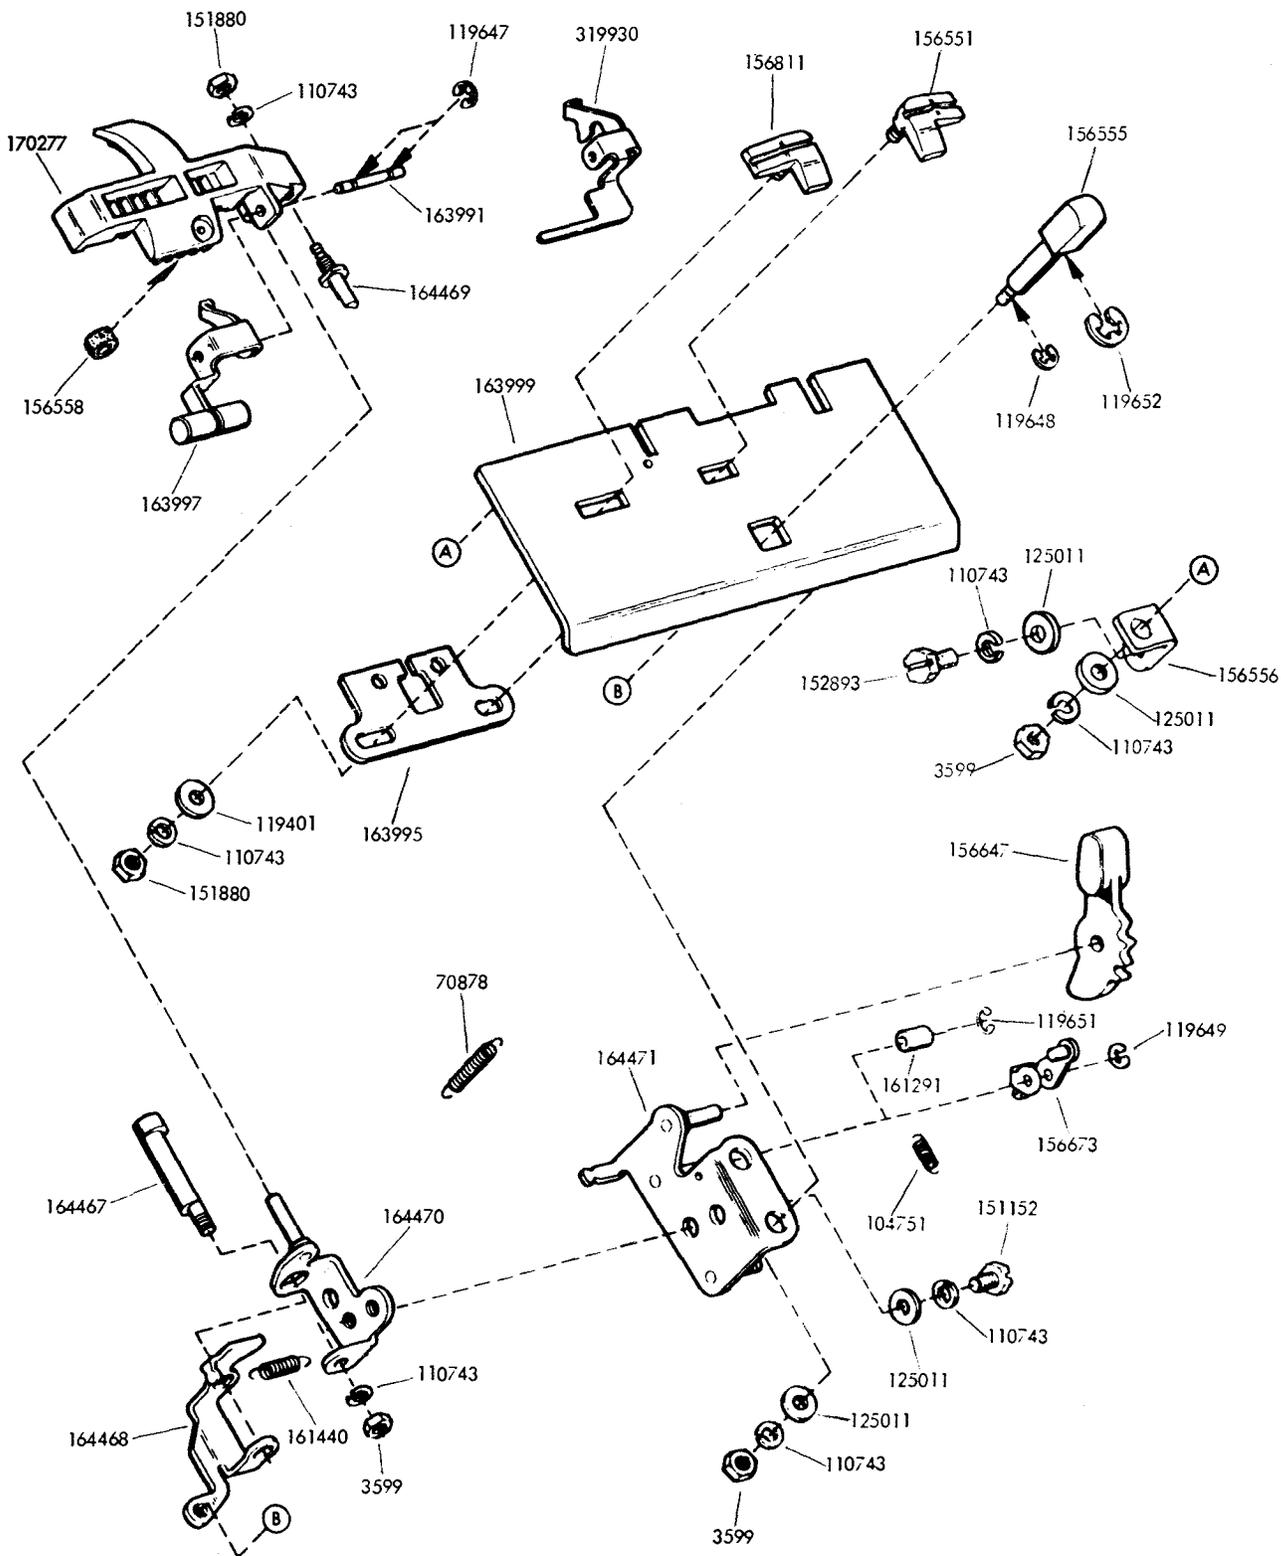


FIGURE 9. TAPE GUIDE PLATE MECHANISM

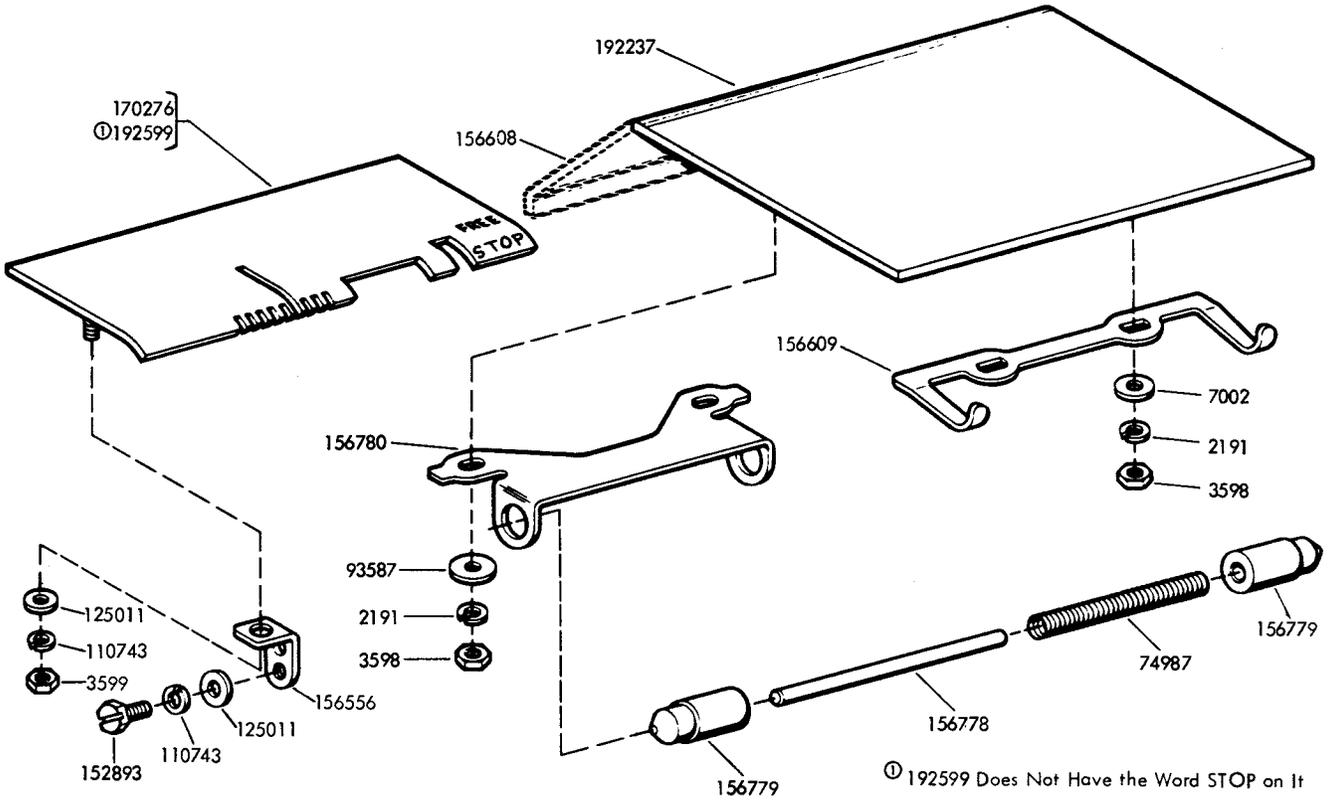


FIGURE 10. COVER AND TOP PLATES

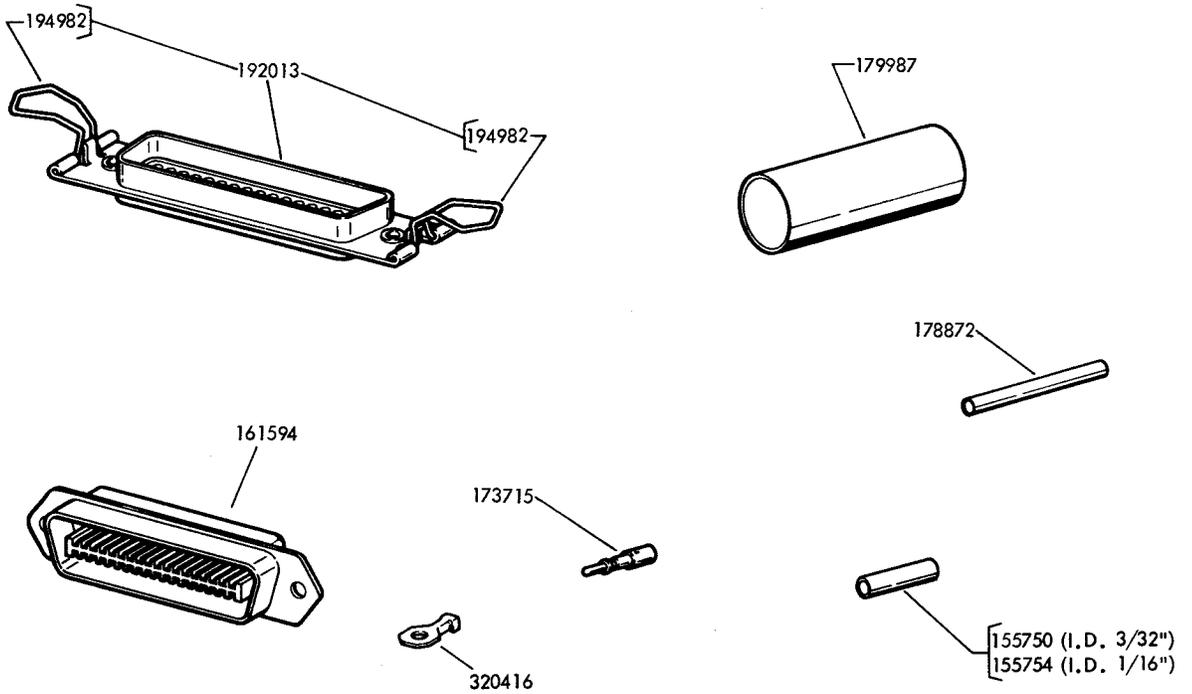


FIGURE 11. CABLE COMPONENTS

NUMERICAL INDEX

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
256M	Coil, Magnet 7	150026	Lever, Shoe Release 8	156597	Plate, Rear 6
2191	Washer, Lock 2 to 7, 10	150027	Lever, Shoe Release 8	156598	Post 3,6
2438	Washer, Flat 7	150029	Wick, Felt 8	156599	Plate 6
2669	Washer, Lock 3,6	150034	Disk, 2 Stop Clutch 8	156608	Plate, Cover 10
2836	Spring 6	150043	Shoe, Secondary Clutch 8	156609	Plate, Spring 10
3595	Nut, 1/4-32 Hex 8	150044	Shoe, Primary Clutch 8	156618	Post 2
3598	Nut, 1/4-32 Hex 2 to 6, 10	150241	Spring 8	156621	Guide, Transfer Lever 2
3599	Nut, 4-40 Hex 6,7,9,10	150830	Bushing, Shoulder 8	156622	Post 5
3606	Nut, 6-40 Hex 5	150841	Bearing 8	156631	Washer, Felt 2
3636	Washer, Flat 8	151073	Screw, 4-40 x 5/32 Fil 3,5,7	156632	Screw, 6-40 x 13/32 Hex 7
3640	Washer, Lock 3,4,7,8	151103	Spring 2	156633	Washer, Felt 6
3649	Washer, Flat 6	151152	Screw, 4-40 x 3/16 Hex 4,5,9	156638	Guide, Transfer Lever 4
7002	Washer, Flat 3,4,6,7,10	151395	Spring 6	156640	Post 2
7603	Spring 2	151398	Spring 4	156641	Pin, Sensing 2
8896	Shim, .004" Thk 4	151630	Screw, 6-40 x 1/4 Hex 3,5,6,7	156647	Lever, Start-Stop 9
31636	Spring 3	151631	Screw, 6-40 x 5/16 Hex 3,6	156649	Plate, Front 2
41732	Plate, Clamp 4,6	151632	Screw, 6-40 x 3/8 Hex 3,6	156662	Plate 7
41746	Bushing, Insulating 4	151685	Screw, 4-40 x 5/16 Fil 4	156668	Screw, 6-40 Spl 5
42823	Washer, Flat 8	151688	Screw, 4-40 x 5/8 Fil 4	156673	Bail w Stud 9
45024	Spring 5	151689	Screw, 4-40 x 3/4 Fil 4	156677	Plate, Insulator 7
70388	Spring 2	151692	Screw, 6-40 x 3/16 Fil 2,6	156778	Rod 10
70878	Spring 9	151722	Screw, 6-40 x 3/16 Hex 2,4,6	156779	Plunger 10
74728	Terminal, Contact 4	151728	Spring 8	156780	Bracket, Detent 10
74987	Spring, Compression 10	151732	Screw, 4-40 x 11/32 Fil 8	156782	Nut, 6-40 Spl 3,6
76275	Plate, Nut 3	151733	Screw, 4-40 x 9/16 Fil 6	156811	Guide, Left 9
76422	Spring 5	151736	Spring 8	156817	Shaft 7
76461	Washer, Flat 3	151737	Screw, 4-40 x 11/64 Hex 3,8	156831	Clamp 3
78557	Spring 2	151880	Nut, 4-40 Hex 4,9	156832	Plate 3
80945	Spring 4	152871	Spring 2,7	156833	Drum Assembly, Clutch 8
81778	Screw, 4-40 x 3/16 Fil 7	152893	Screw, 4-40 x 1/4 Hex 6,7,9,10	156844	Gear, 40T 8
82547	Insulator, .094" Thk 6	153799	Screw, 4-40 x 21/64 Hex 4	158182	Disk, Clutch Cam 8
82548	Insulator, .062" Thk 4,6	153819	Washer, Lock 3	158757	Hinge, Mounting 7
85318	Washer, Leather 6	154040	Lever, Transfer 2	158923	Bearing, Sleeve 8
86283	Spring 2	154335	Screw, 6-40 x 9/32 Fil 4	158926	Screw, 4-40 x 7/32 Hex 8
86959	Bushing, Insulating 6	154694	Disk, Clutch Cam 8	159291	Bail 3
93118	Washer, Lock 3	155494	Spring 2	159292	Bail 3
93356	Washer, Felt 5	155750	Sleeve, 3/32 ID x 1/2" Lg Insulating 10	159295	Bracket w/Posts 3
93587	Washer, Flat 3,6,10	155754	Sleeve, 1/16 ID x 1/2" Lg Insulating 10	159297	Arm, Stop 3
93984	Washer, Lock 7	156450	Screw, 2-56 x 1/2 Fil 3	159298	Spring, Torsion 3
101998	Bushing, Shoulder 3	156501	Screw, 6-40 x 7/32 Fil 3	159570	Spring, Contact 4
102994	Washer, Flat 2	156518	Post 2	159571	Stiffener 4
104751	Spring 9	156519	Washer, Felt 2	160025	Bracket 2
110434	Screw, 4-40 x 3/16 Fil 8	156520	Arm 2	160067	Wheel, Feed 2
110435	Nut, 4-40 Hex 4	156521	Screw, 6-40 Eccentric Shoulder 2	160086	Post, Guide 2
110743	Washer, Lock 3 to 10	156522	Pawl 2	160087	Post, Spring 5
112626	Nut, 10-32 Hex 3,6	156523	Stud, Eccentric 2	160088	Bail w/Stud 5
115141	Screw, 6-40 Shoulder 5	156524	Bail 2	160089	Past, Stap 4
115221	Washer, Felt 2	156531	Bracket w/Post 7	160094	Contact Assembly, Auxiliary 4
119401	Washer, Flat 9	156532	Core 7	160095	Bracket 4
119647	Ring, Retaining 4,5,9	156533	Screw, 4-40 Eccentric 7	160096	Bracket w/Bushing 4
119648	Ring, Retaining 9	156537	Armature 7	160097	Contact Assembly 4
119649	Ring, Retaining 7,9	156539	Washer, Felt 7	160398	Spring, Contact 6
119650	Ring, Retaining 5	156551	Guide, Right 9	160399	Spring, Contact 6
119651	Ring, Retaining 9	156555	Plunger, Tape Lid 9	160593	Terminal 4,6
119652	Ring, Retaining 2,4,6,9	156556	Bracket 9,10	160596	Spring 3
121125	Washer, Spring 7	156558	Washer, Felt 9	160597	Plate 6
124177	Washer, Lock 2,5	156575	Screw, 6-40 Eccentric Shoulder 5	160598	Stiffener 6
125011	Washer, Flat 3,4,5,7,9,10	156576	Washer, Felt 6	160600	Reservoir, Oil 6
125015	Washer, Flat 7	156577	Roller, Detent Lever 5	160601	Guard 6
125229	Nut, 6-32 Hex 3	156581	Stud 6	160602	Arm 5
125802	Washer, Flat 6	156588	Ring, Retaining 6	160604	Post 5
128357	Ring, Retaining 3	156589	Post, Spring 6	160606	Arm w/Spring Past 5
130499	Bearing, Ball 8	156594	Lever, Trip 6	160608	Bracket, Contact 6
130667	Washer, Lock 8	156595	Lever, Latch 6	160613	Arm w/Hub 5
130683	Washer, Lock 4	156596	Bail 6	160616	Plate 5
138034	Plate, Clamp 3			160625	Clip w/Wick 3
150013	Disk, Adjusting 8			160626	Insulator, .031" Thk 3
150014	Disk, Adjusting 8				

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
160627	Bushing, Insulating 3	163995	Plate 9	174010	Plate 4
160628	Spring, Contact 3	163997	Bail 9	177048	Latch 2
160629	Bracket, Contact 3	163998	Bail 5	178872	Sleeve, 1/16 ID x 1-1/4" Lg Insulating 10
160630	Spring, Contact 3	163999	Plate, Tape Guide 9	179189	Screw, 6-40 Eccentric Shoulder 2
160631	Spring, Contact 3	164000	Pin, Tape Out 2	179987	Sleeve, 9/16 ID x 1-5/8" Lg Insulating 10
160632	Contact Assembly 3	164467	Post, Eccentric 9	192013	Connector, 50 Pt Plug Type 10
160638	Bracket, Spring 3	164468	Bail 9	192236	Gear, 60T 8
160639	Contact Assembly 6	164469	Past 9	192237	Plate, Cover 10
161100	Spring, Contact 4	164470	Bracket w/Stud 9	192591	Plate w/Studs 3
161102	Spring, Contact 4	164471	Bracket w/Studs 9	192599	Plate w/Studs 10
161291	Bushing 9	165027	Network, Spark Suppression 7	194502	Camshaft 8
161439	Wick, Felt 6	170276	Plate, Cover 10	194503	Plate, Center 5
161440	Spring 9	170277	Lid, Tape 9	194505	Follower, Cam 5
161592	Plate w/Studs 3	170282	Nut, 6-40 Hex 2	194506	Bracket, Cam Follower Guide 4
161594	Connector, 36 Pt Plug 10	172881	Reservoir Assembly, Oil 6	194544	Bracket, Contact Assembly 4
162249	Screw, 6-32 Insulating 3	172885	Arm, Cam Follower 2	194545	Contact Assembly, Auxiliary 4
162493	Bail 4	172887	Bail 7	194546	Insulator 4
162498	Screw, 4-40 Eccentric 4	172889	Shaft, Main 8	194982	Clip, Connector 10
162499	Nut, 4-40 Shoulder 4	172890	Camsleeve 8	305087	Post 4
162500	Arm, Sensing 4	172899	Post, Guide 4	306011	Sleeve, Stop 5
162501	Post, Spring 4	172900	Post, Stop 4	319930	Bail 9
162503	Shaft, Spring 4	173171	Plate w/Stud 3	320416	Terminal, Ring Type 10
162573	Retainer 8	173173	Disk 8	320424	Bail 2
163991	Shaft 9	173208	Wick, Leather 6	325986	Spring 5
163992	Arm, Extension 3	173715	Terminal, Plug Type 10	328175	Nut, 3-48 Hex 3