

MECHANICAL CODE CONVERTER (LXCC) - 8 TO 5 LEVEL
AND
TABLE (LT)
PARTS

Figure	Contents	Page
1	Table (LT)	2
2	Code Converter Cover	3
3	Cover Pads	4
4	Pan and Mounting Channels	5
5	Mounting Brackets	6
6	Reader and Signal Generator Code Bar Extension Mechanisms	7
7	Upper and Lower Function Bar Guides	8
8	Reader and Signal Generator Code Bars	9
9	Function Bar Trip Bails and Function Bar Blocking Mechanism	10
10	Function Bar Slides, Latch and Blocking Levers	11
11	Cam Shaft and Cam Follower Mechanism	12
12	Left Plate Mechanism	13
13	Right Plate Mechanism	14
14	Extension Shaft Mechanism	15
15	302064 Intermediate Gear Assembly	16
16	Reader Tape Guide Plate Mechanism	17
17	Reader Cover Plate and Top Plates	18
18	Reader Front Plate Mechanism	19
19	Reader Front Plate Mechanism (Continued)	20
20	Reader Center Plate Mechanism	21
21	Reader Main Shaft	22
22	Reader Rear Plate Mechanism	23
23	Reader Clutch Trip Magnet Mechanism	24
24	Signal Generator Front Plate Mechanism	25
25	Signal Generator Clutch Cam Shaft	26
26	Signal Generator Rear Plate Mechanism	27
27	199070 Contact Box Assembly	28
28	Signal Generator Rear Bracket Mechanism	29
29	Cam Follower Link Mechanism and Power Switch	29
30	302052 Motor Mounting Assembly	30
31	302052 Motor Mounting Assembly (Continued)	31
	Numerical Index	32

NOTE:

When ordering parts from this section,
prefix each number with the letters TP.

Finish Suffix "EW" (Light Olive Gray)

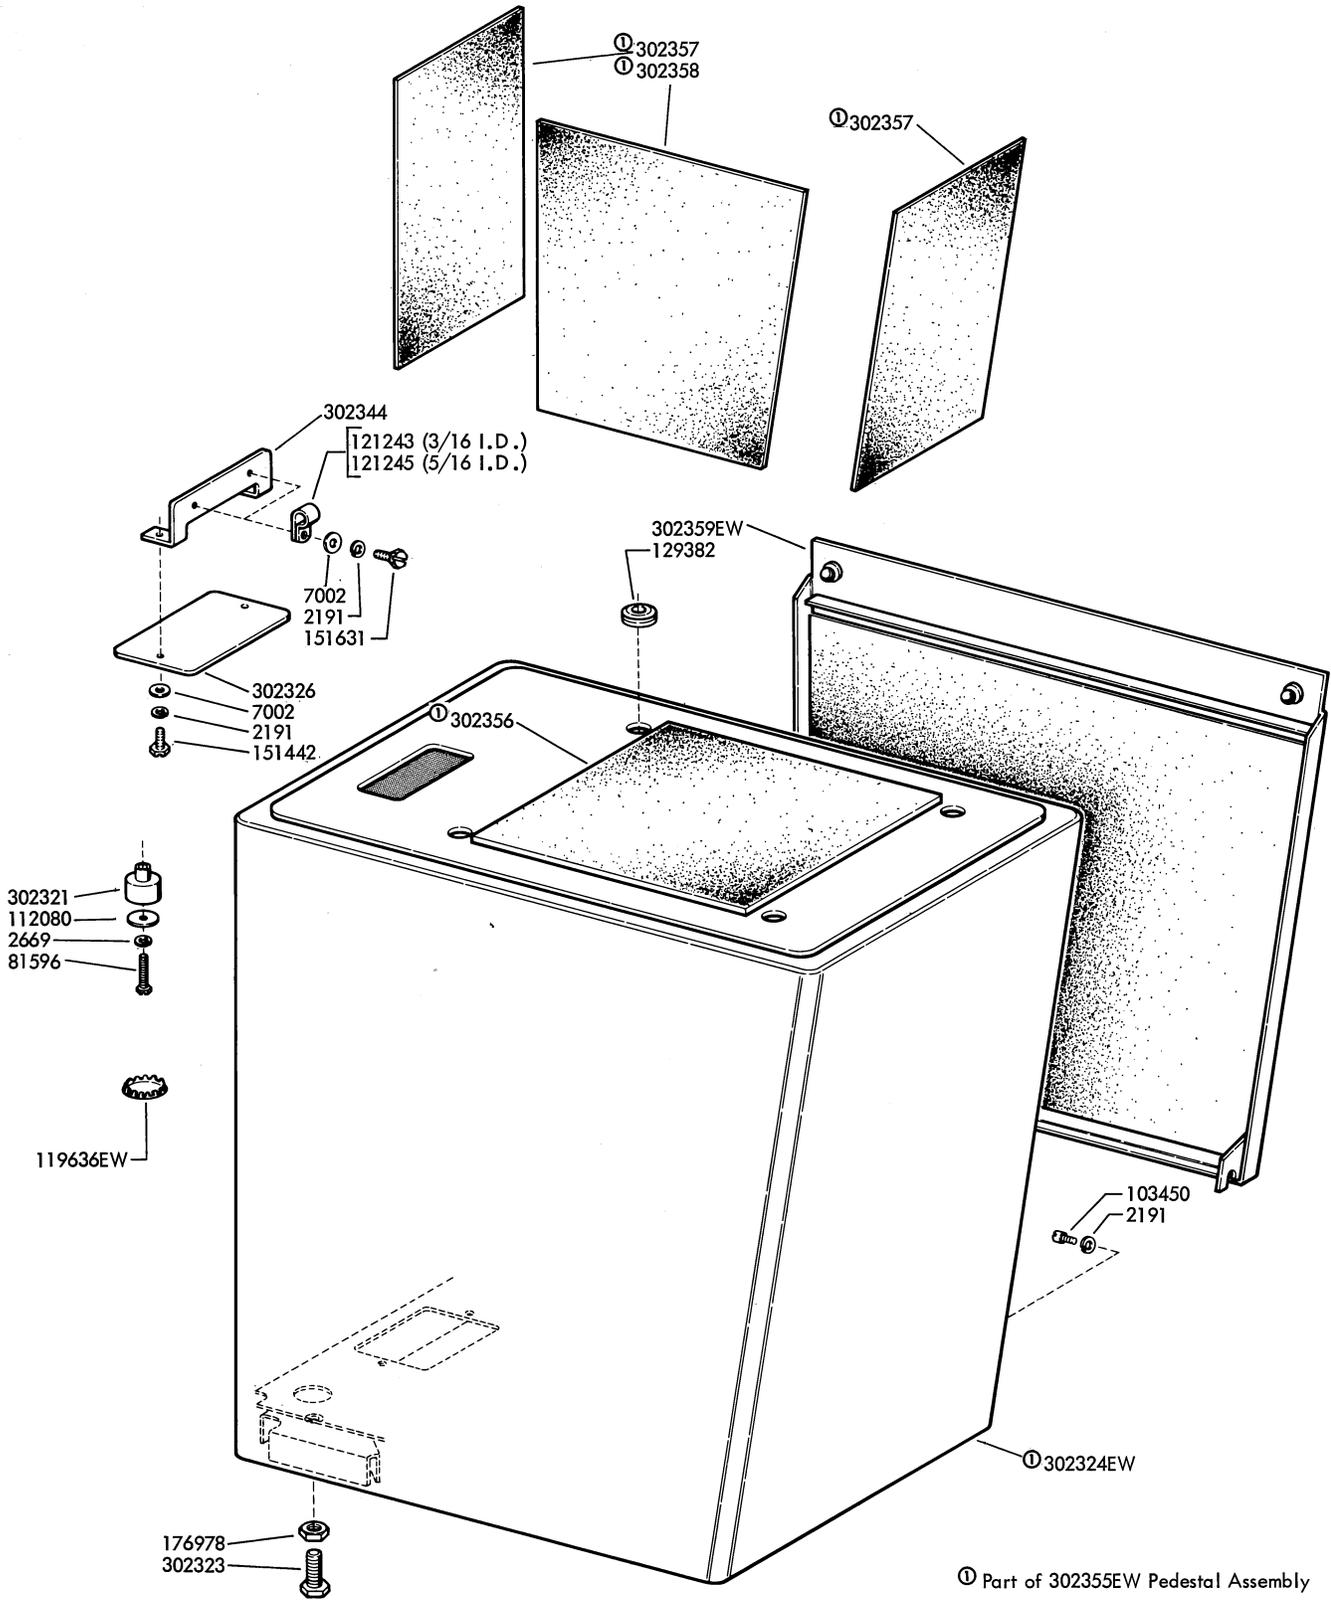


FIGURE 1. TABLE (LT)


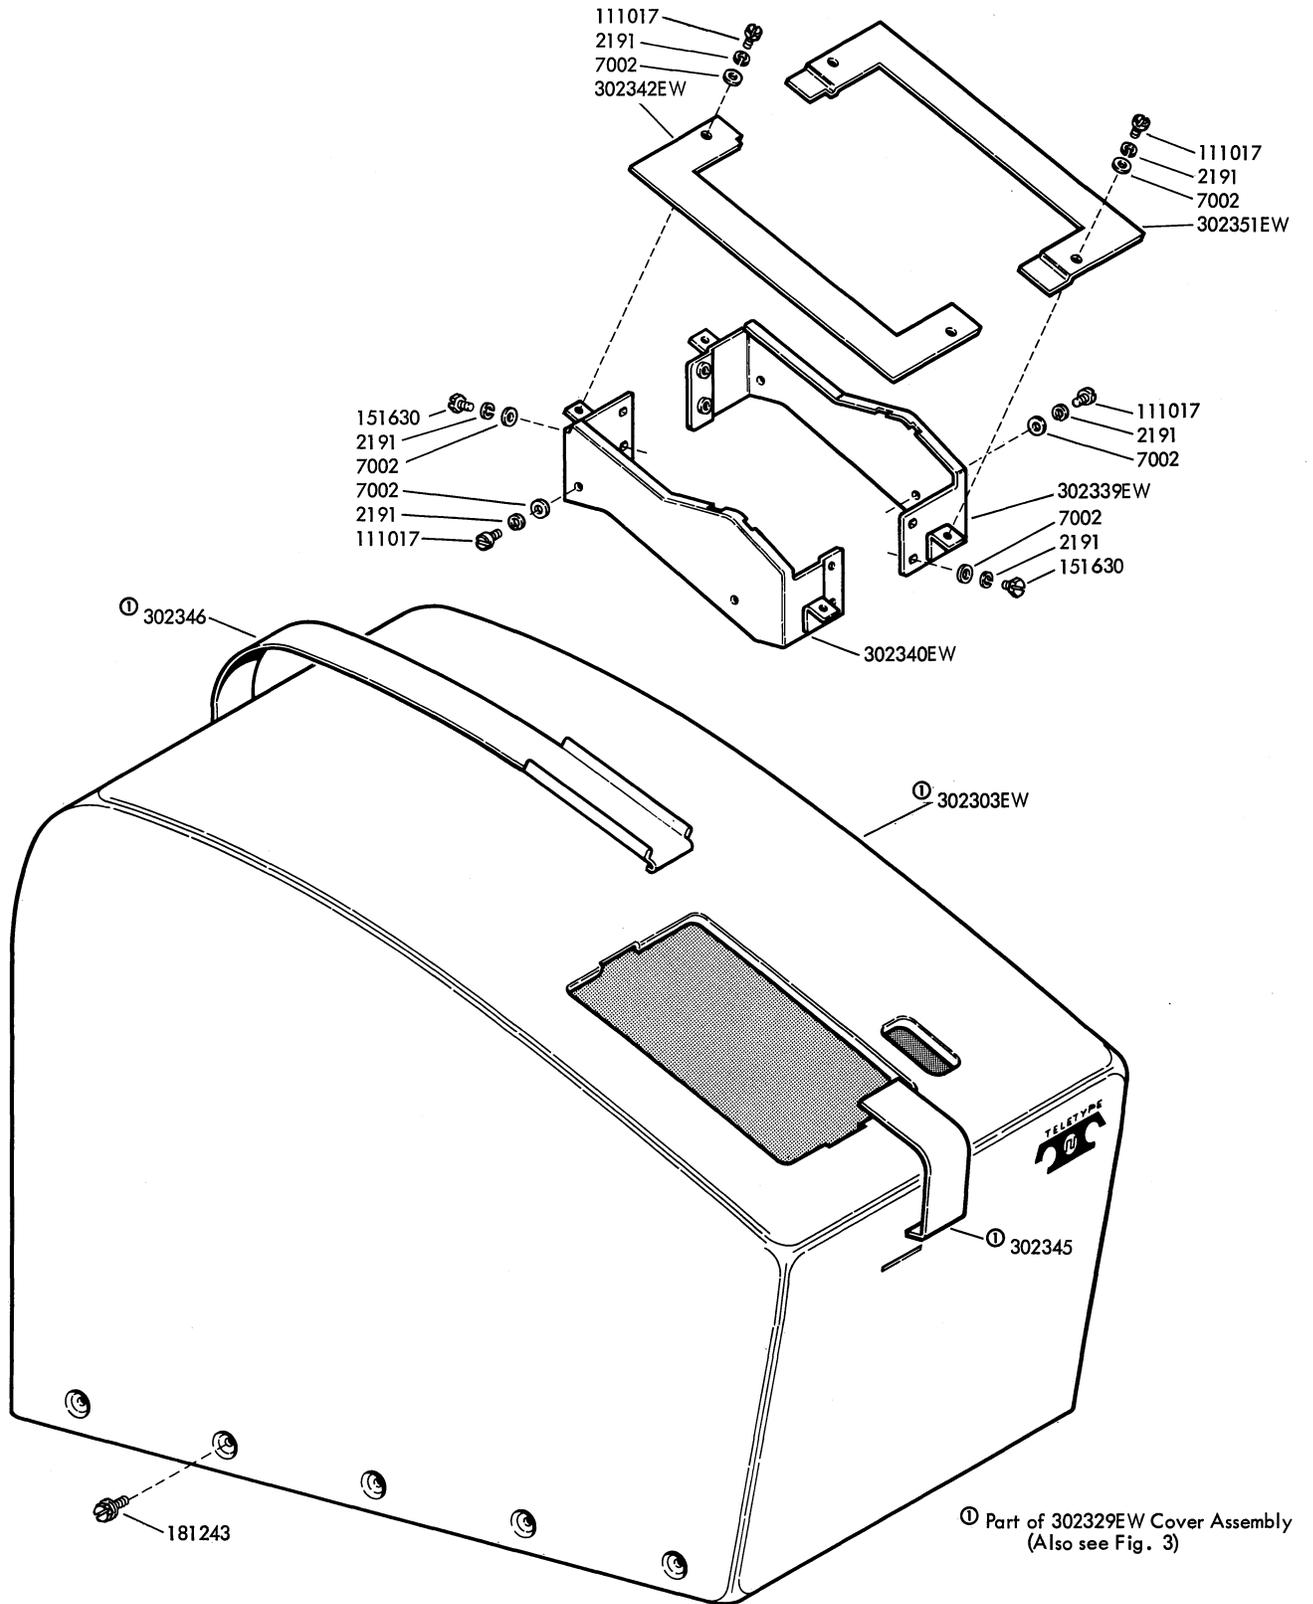


FIGURE 2. CODE CONVERTER COVER

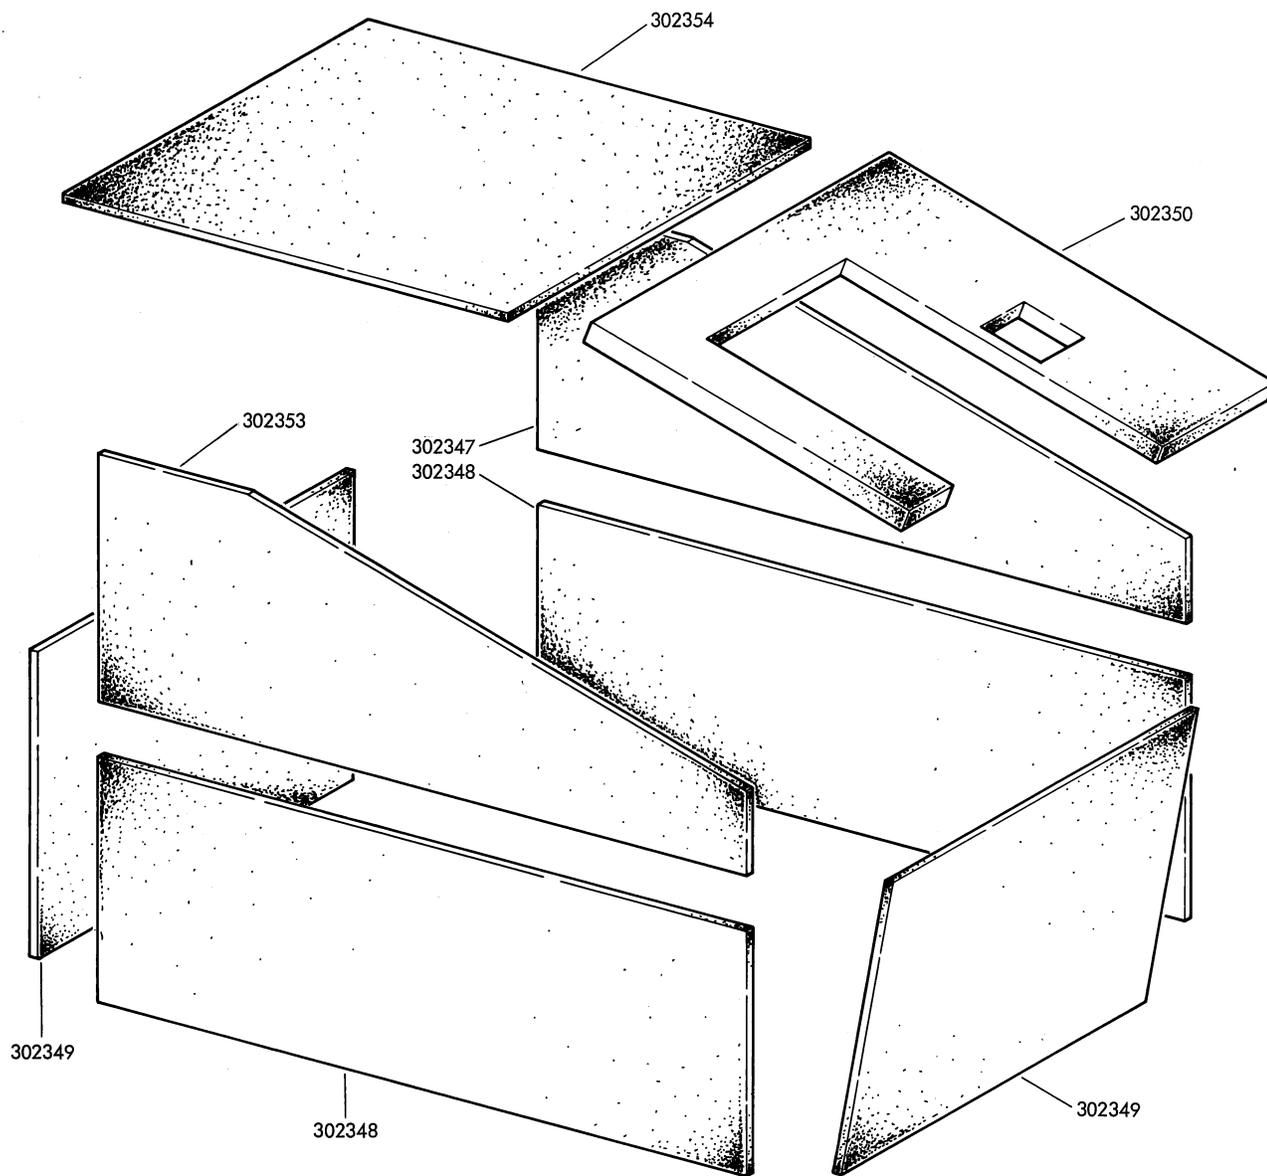

Note:
Part of 302329EW Cover Assembly
(Also see Fig. 2)

FIGURE 3. COVER PADS

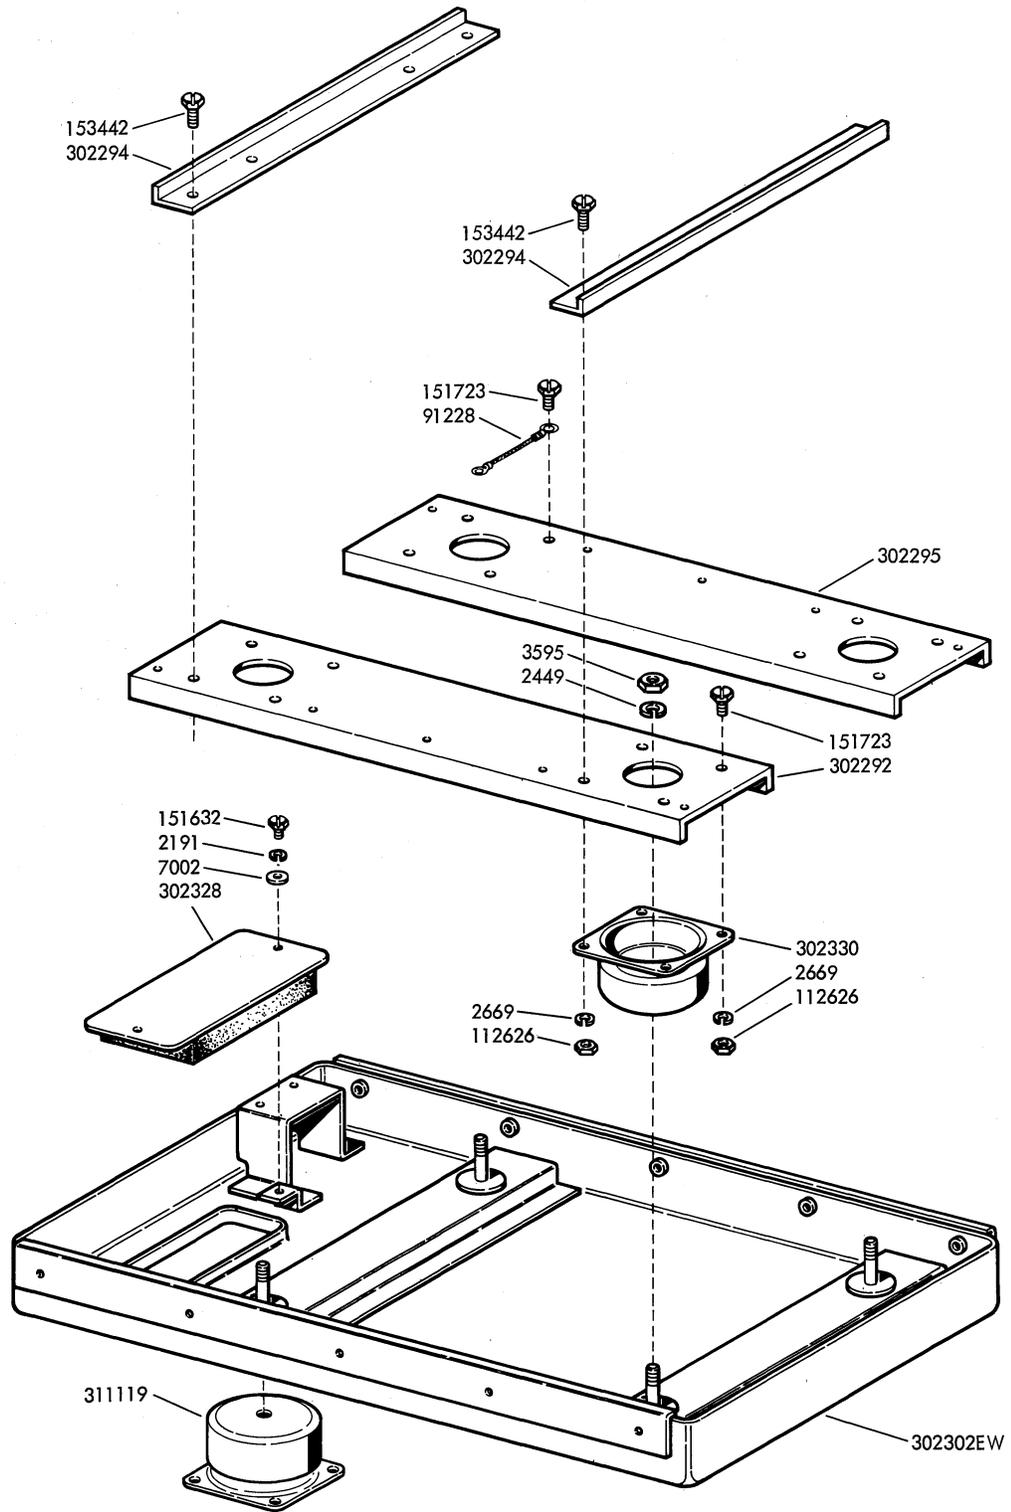


FIGURE 4. PAN AND MOUNTING CHANNELS

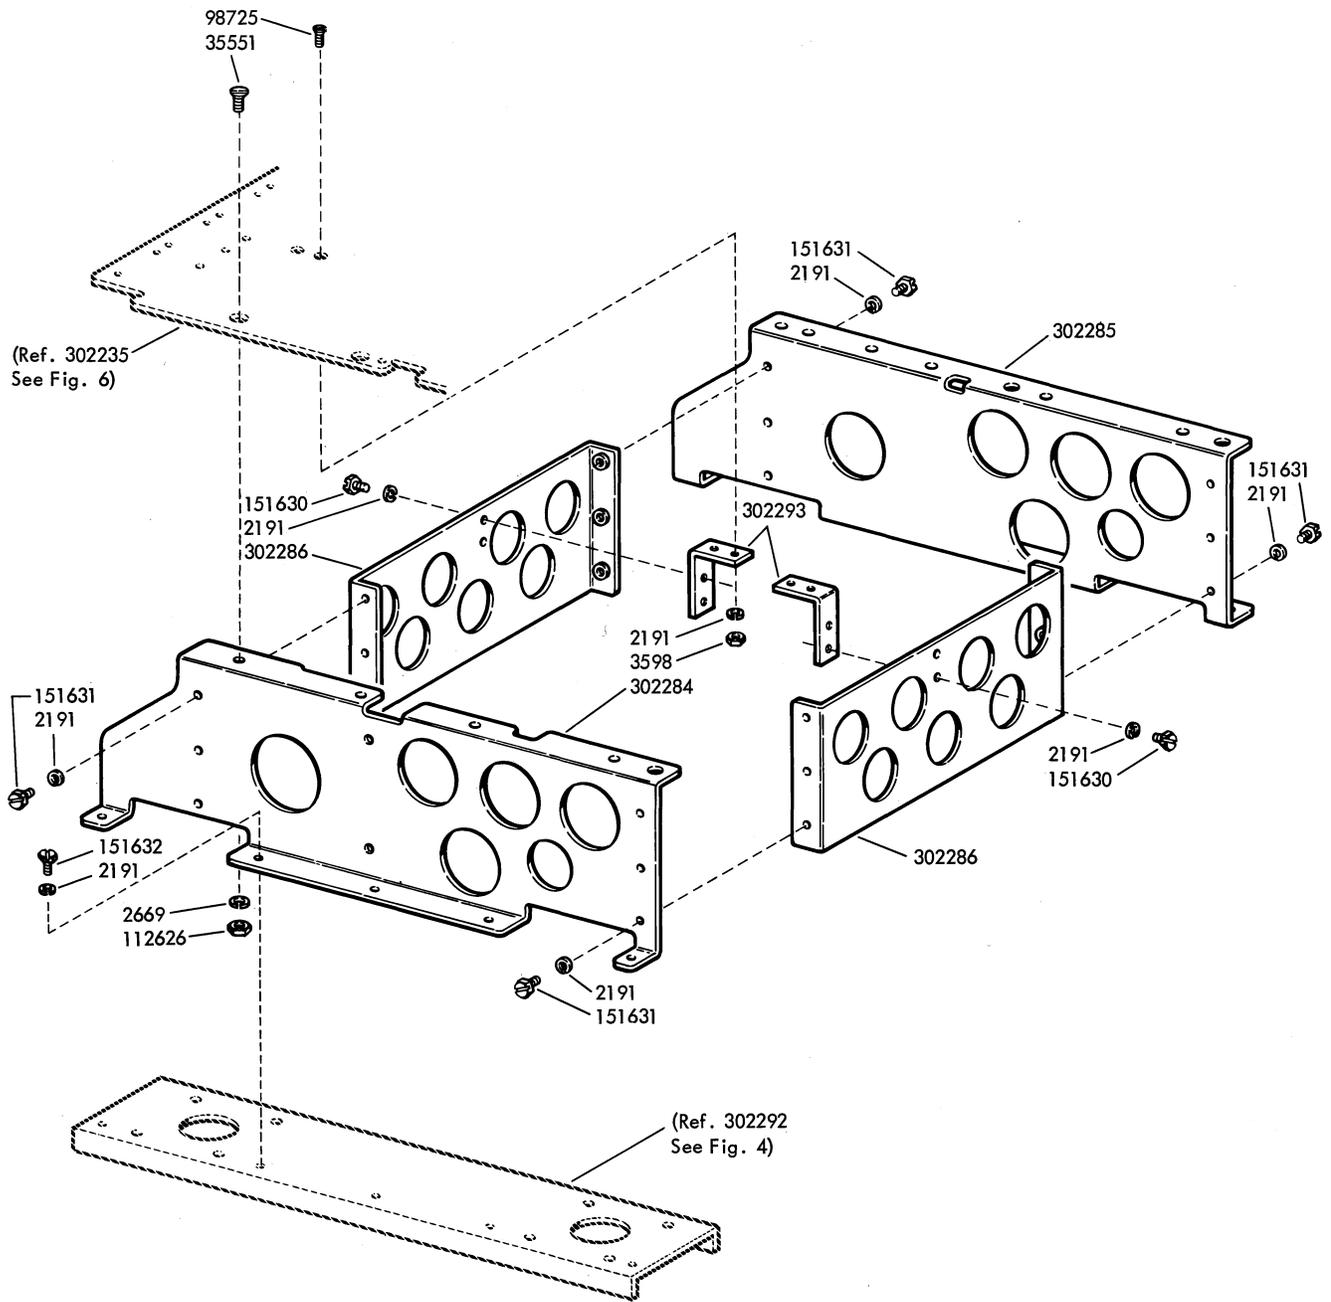


FIGURE 5. MOUNTING BRACKETS

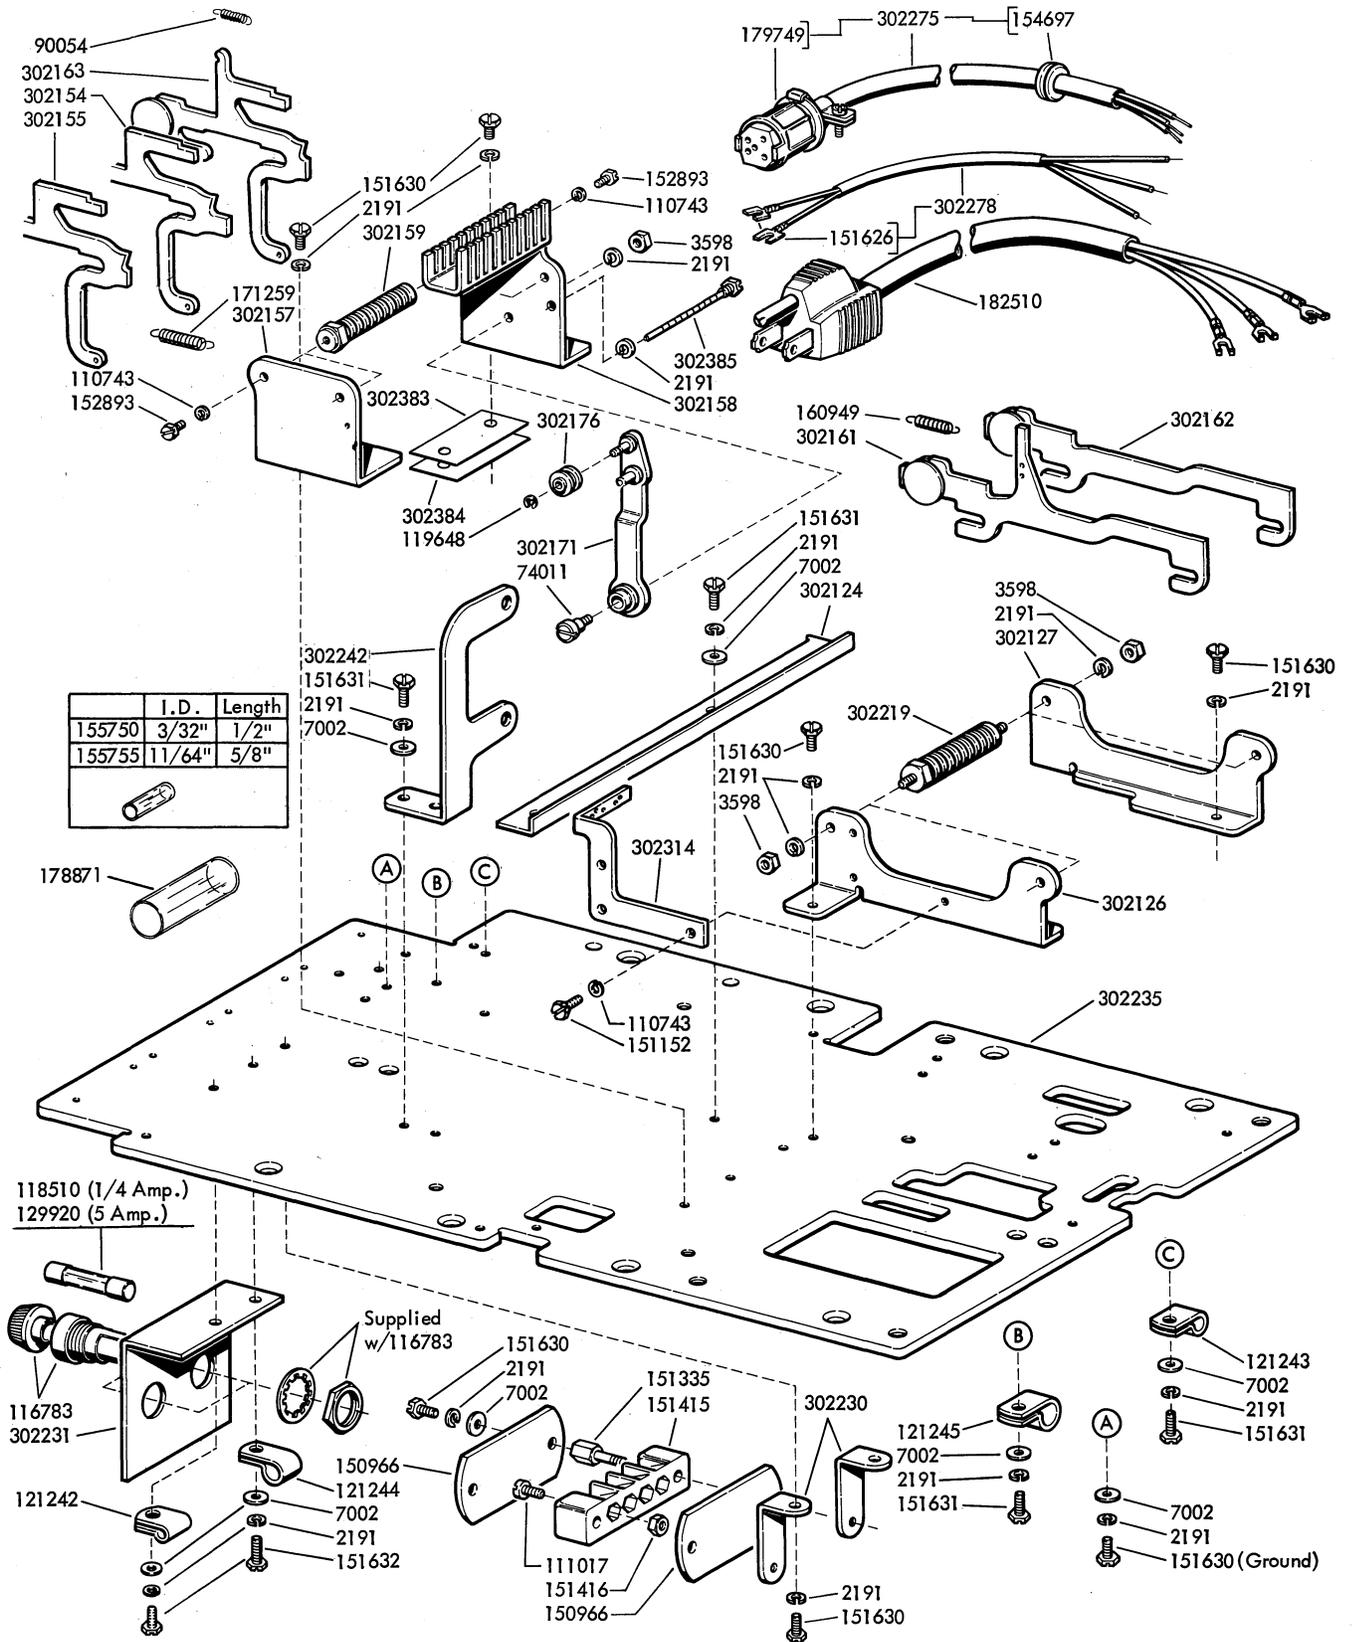
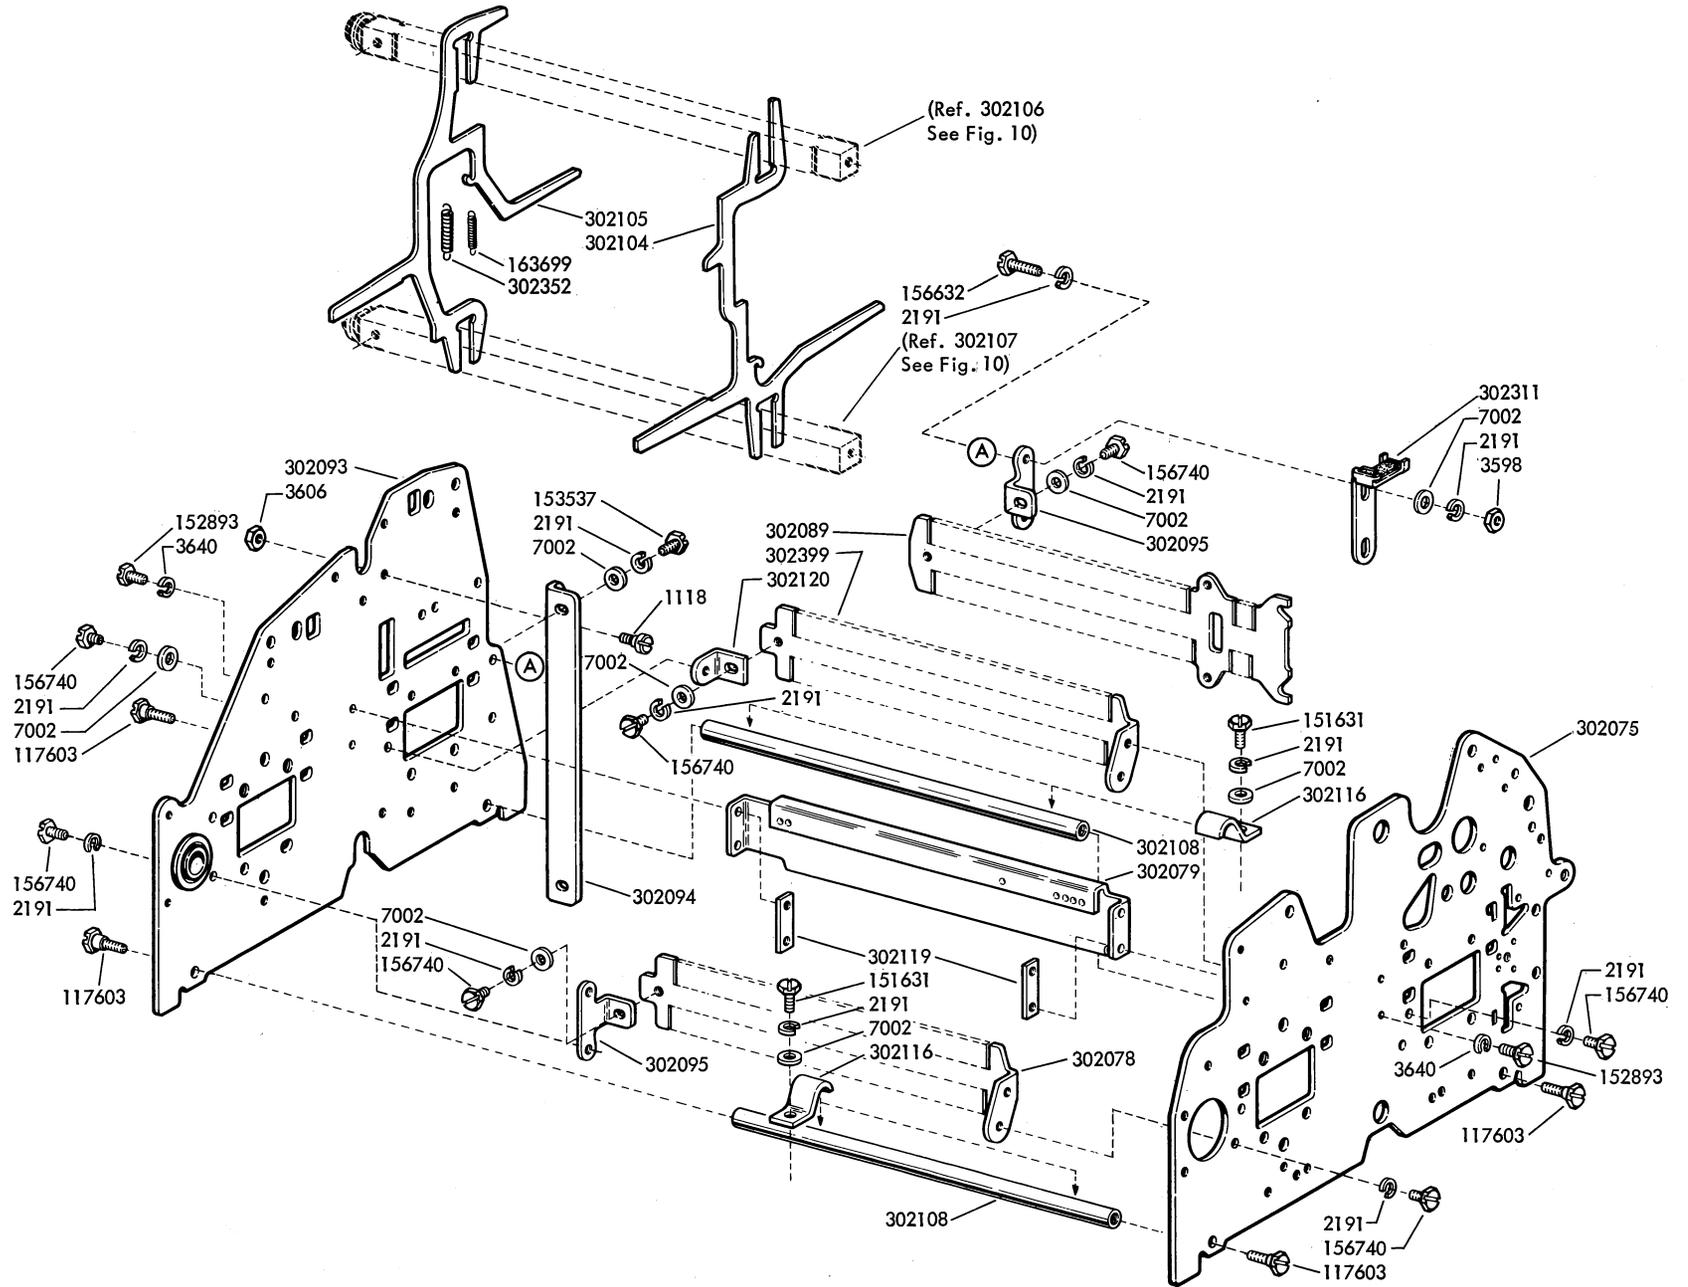


FIGURE 6. READER AND SIGNAL GENERATOR CODE BAR EXTENSION MECHANISMS

FIGURE 7. UPPER AND LOWER FUNCTION BAR GUIDES



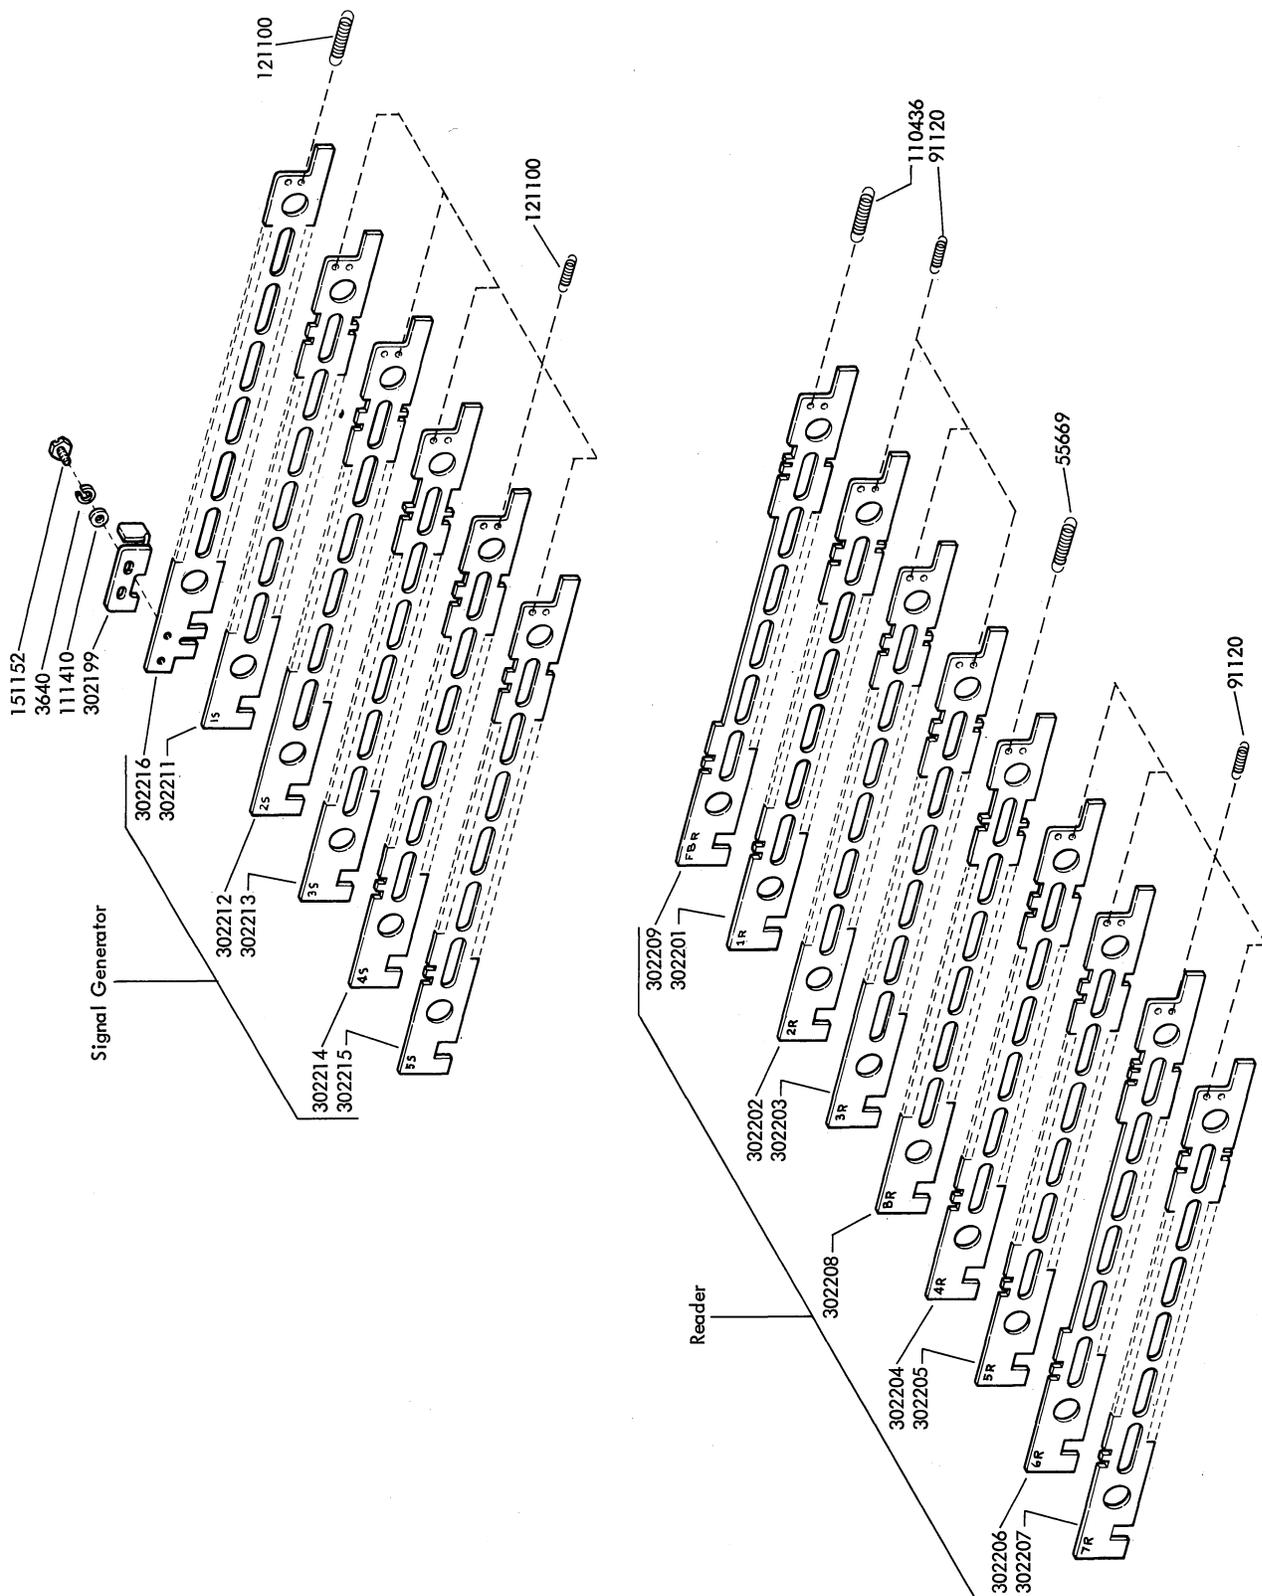


FIGURE 8. READER AND SIGNAL GENERATOR CODE BARS

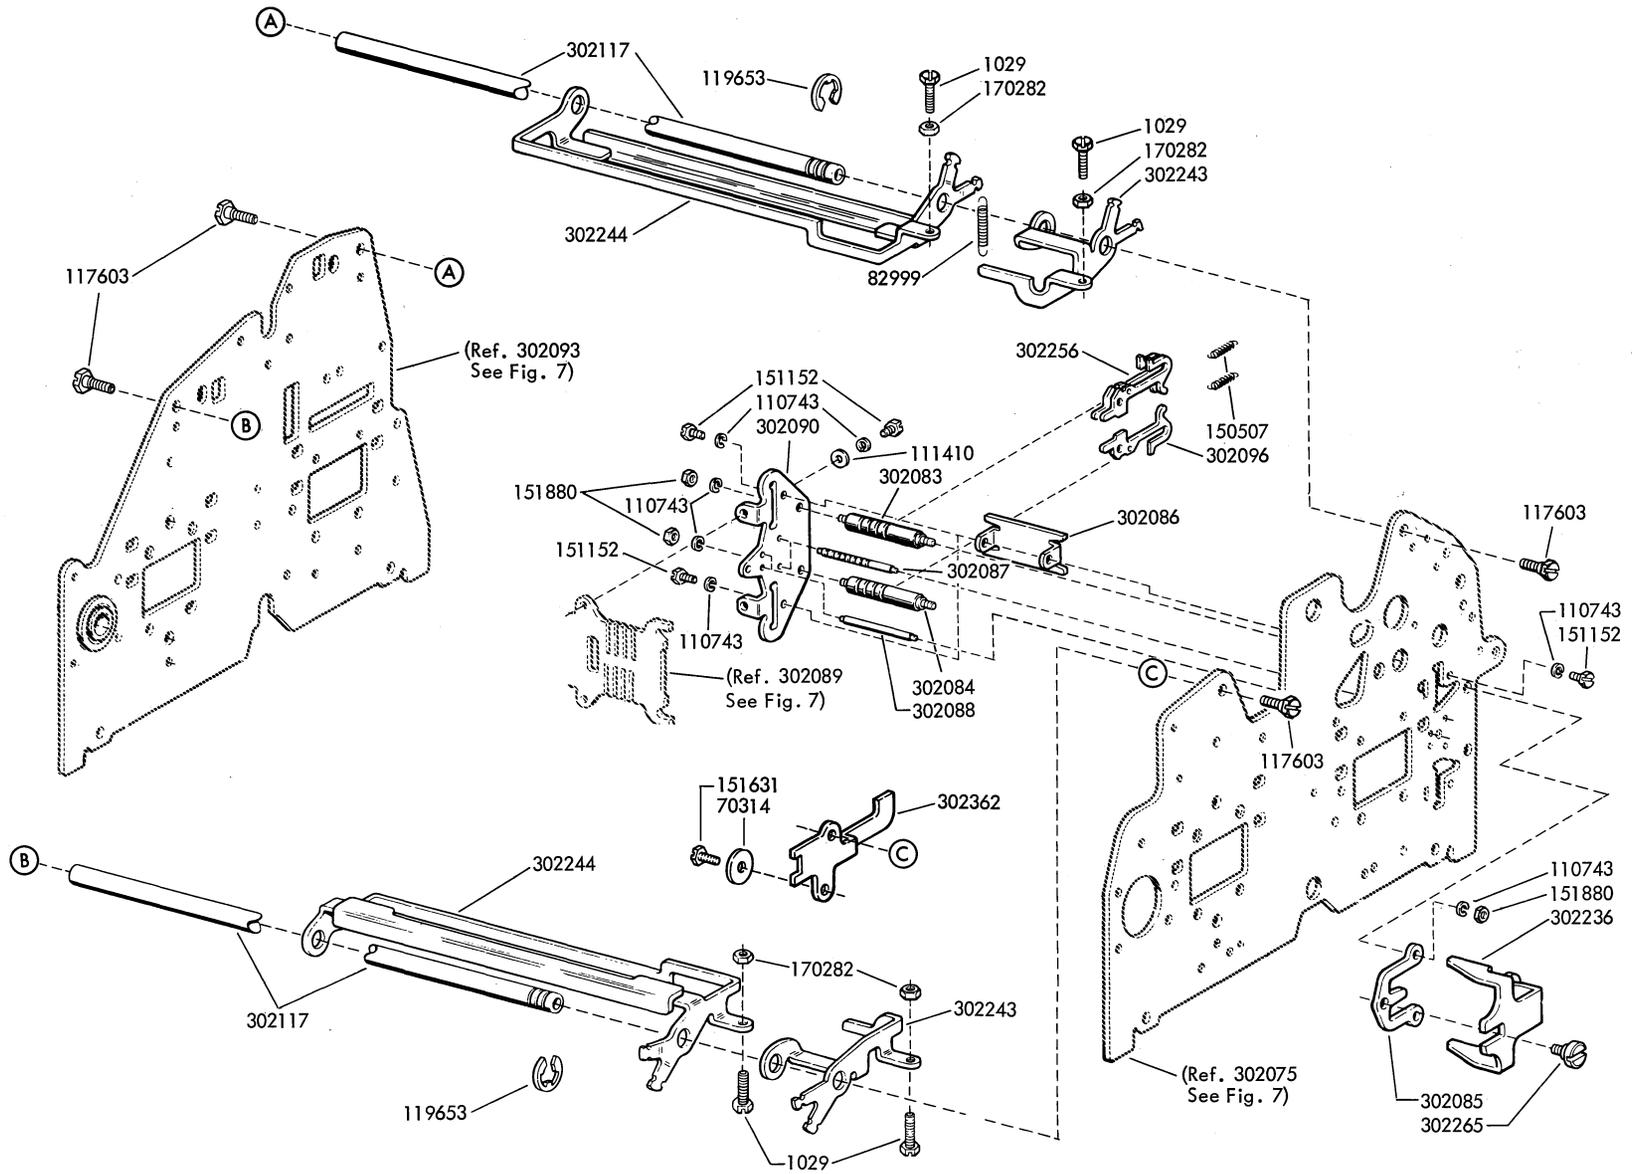


FIGURE 9. FUNCTION BAR TRIP BALLS AND FUNCTION BAR BLOCKING MECHANISM

FIGURE 10. FUNCTION BAR SLIDES, LATCH AND BLOCKING LEVERS

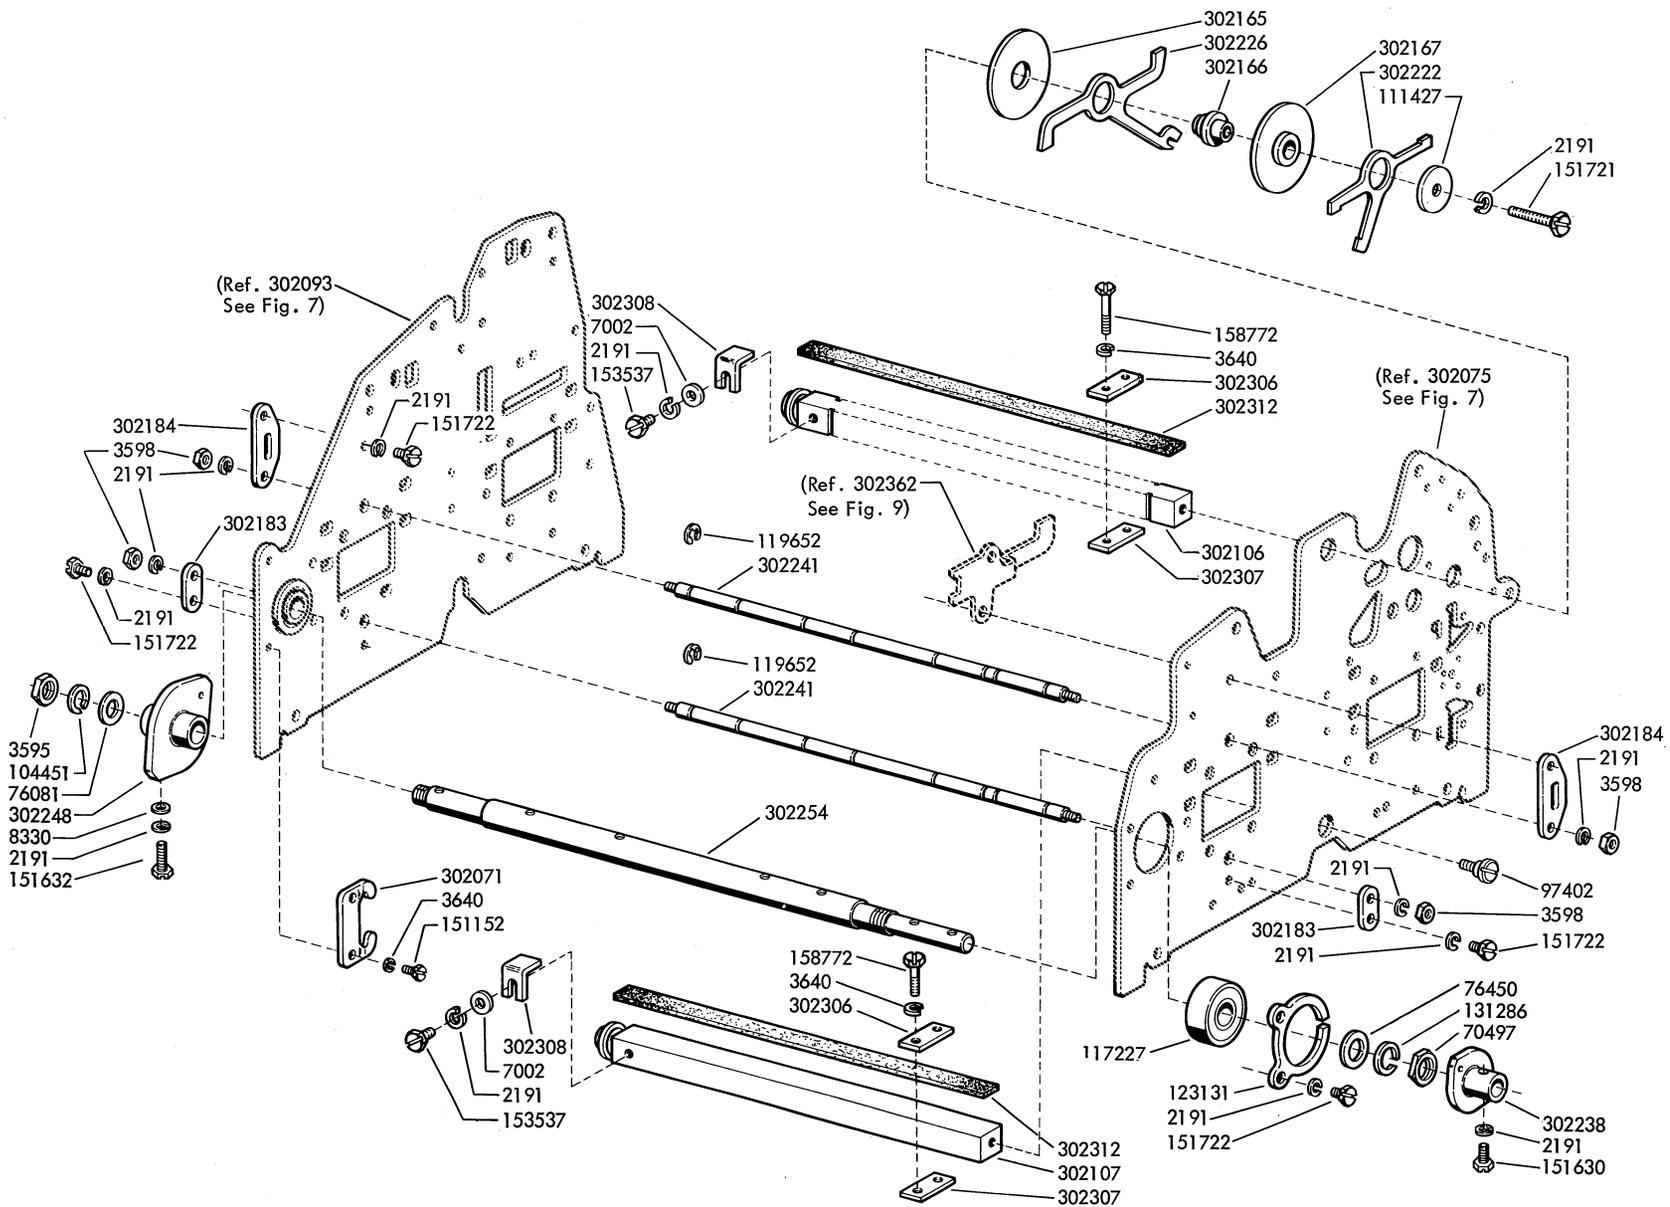


FIGURE 11. CAM SHAFT AND CAM FOLLOWER MECHANISM

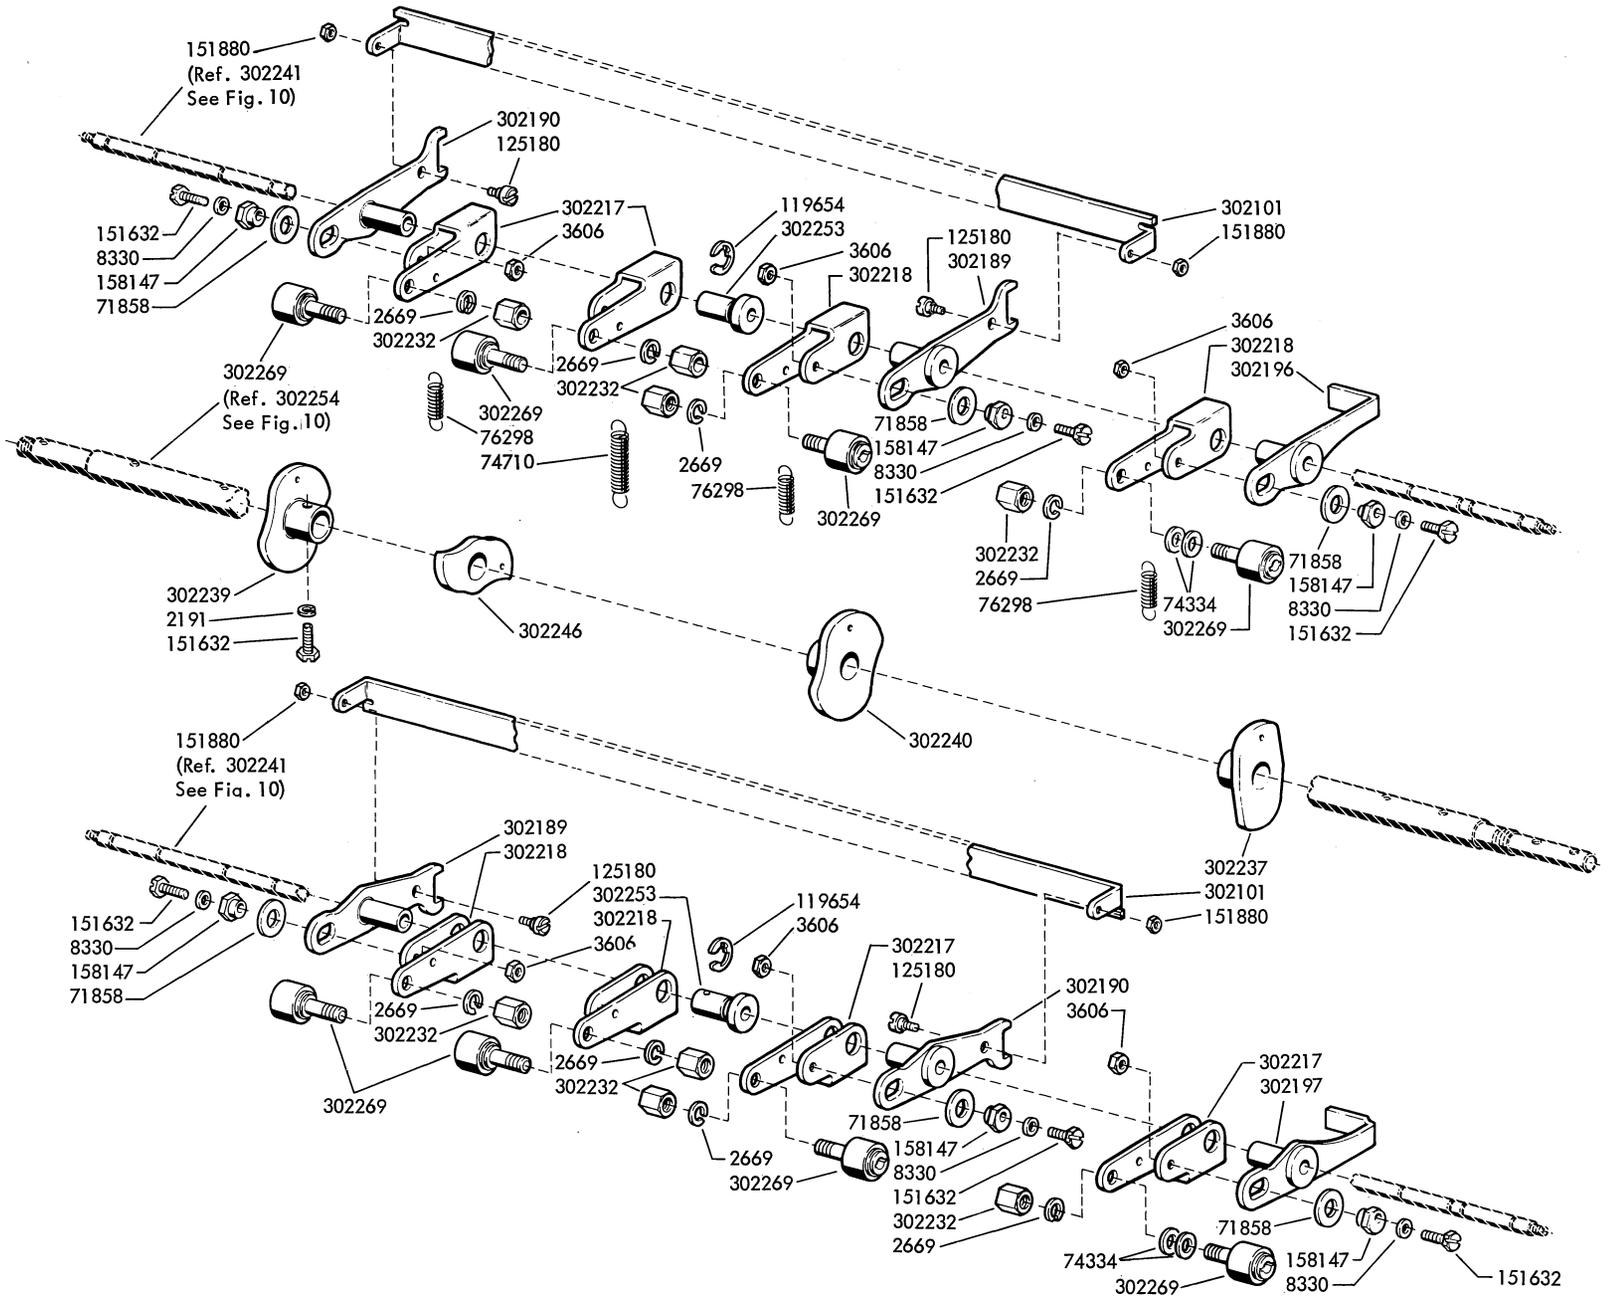


FIGURE 13. RIGHT PLATE MECHANISM



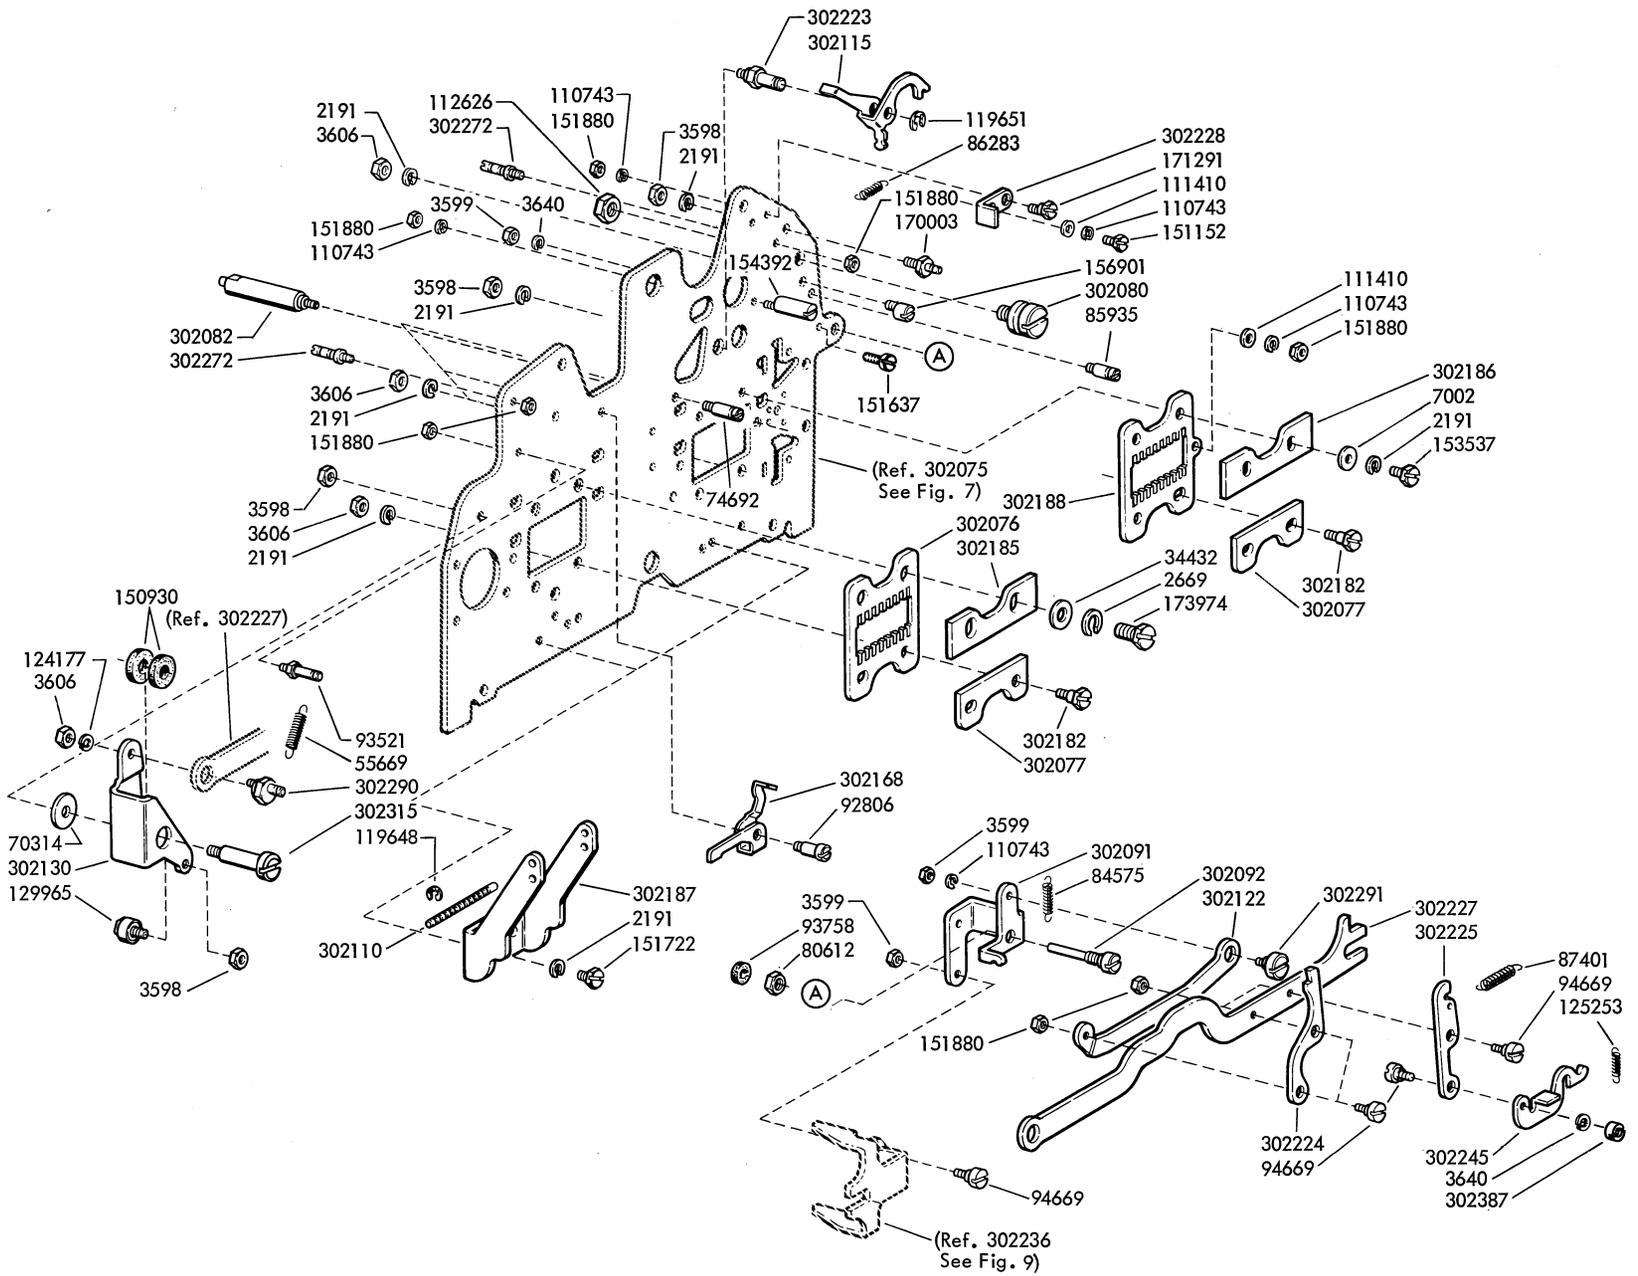


FIGURE 14. EXTENSION SHAFT MECHANISM

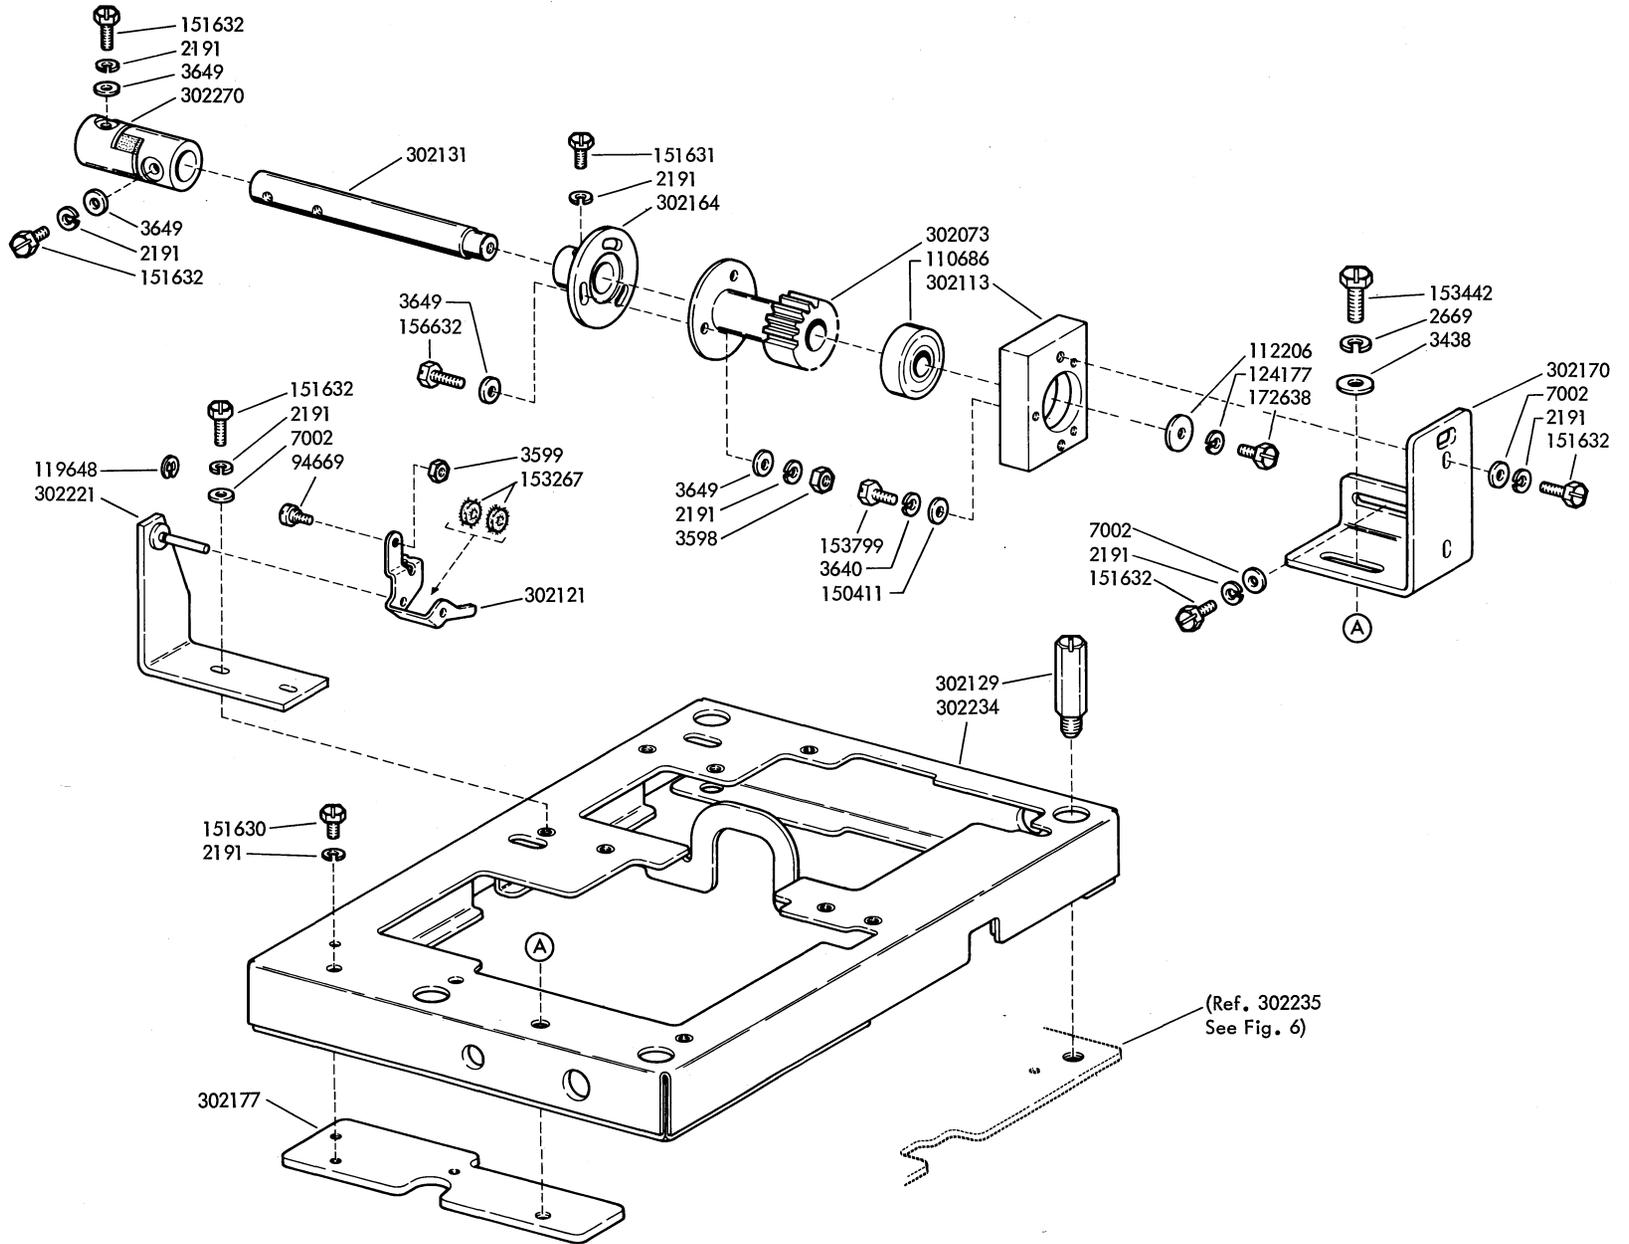

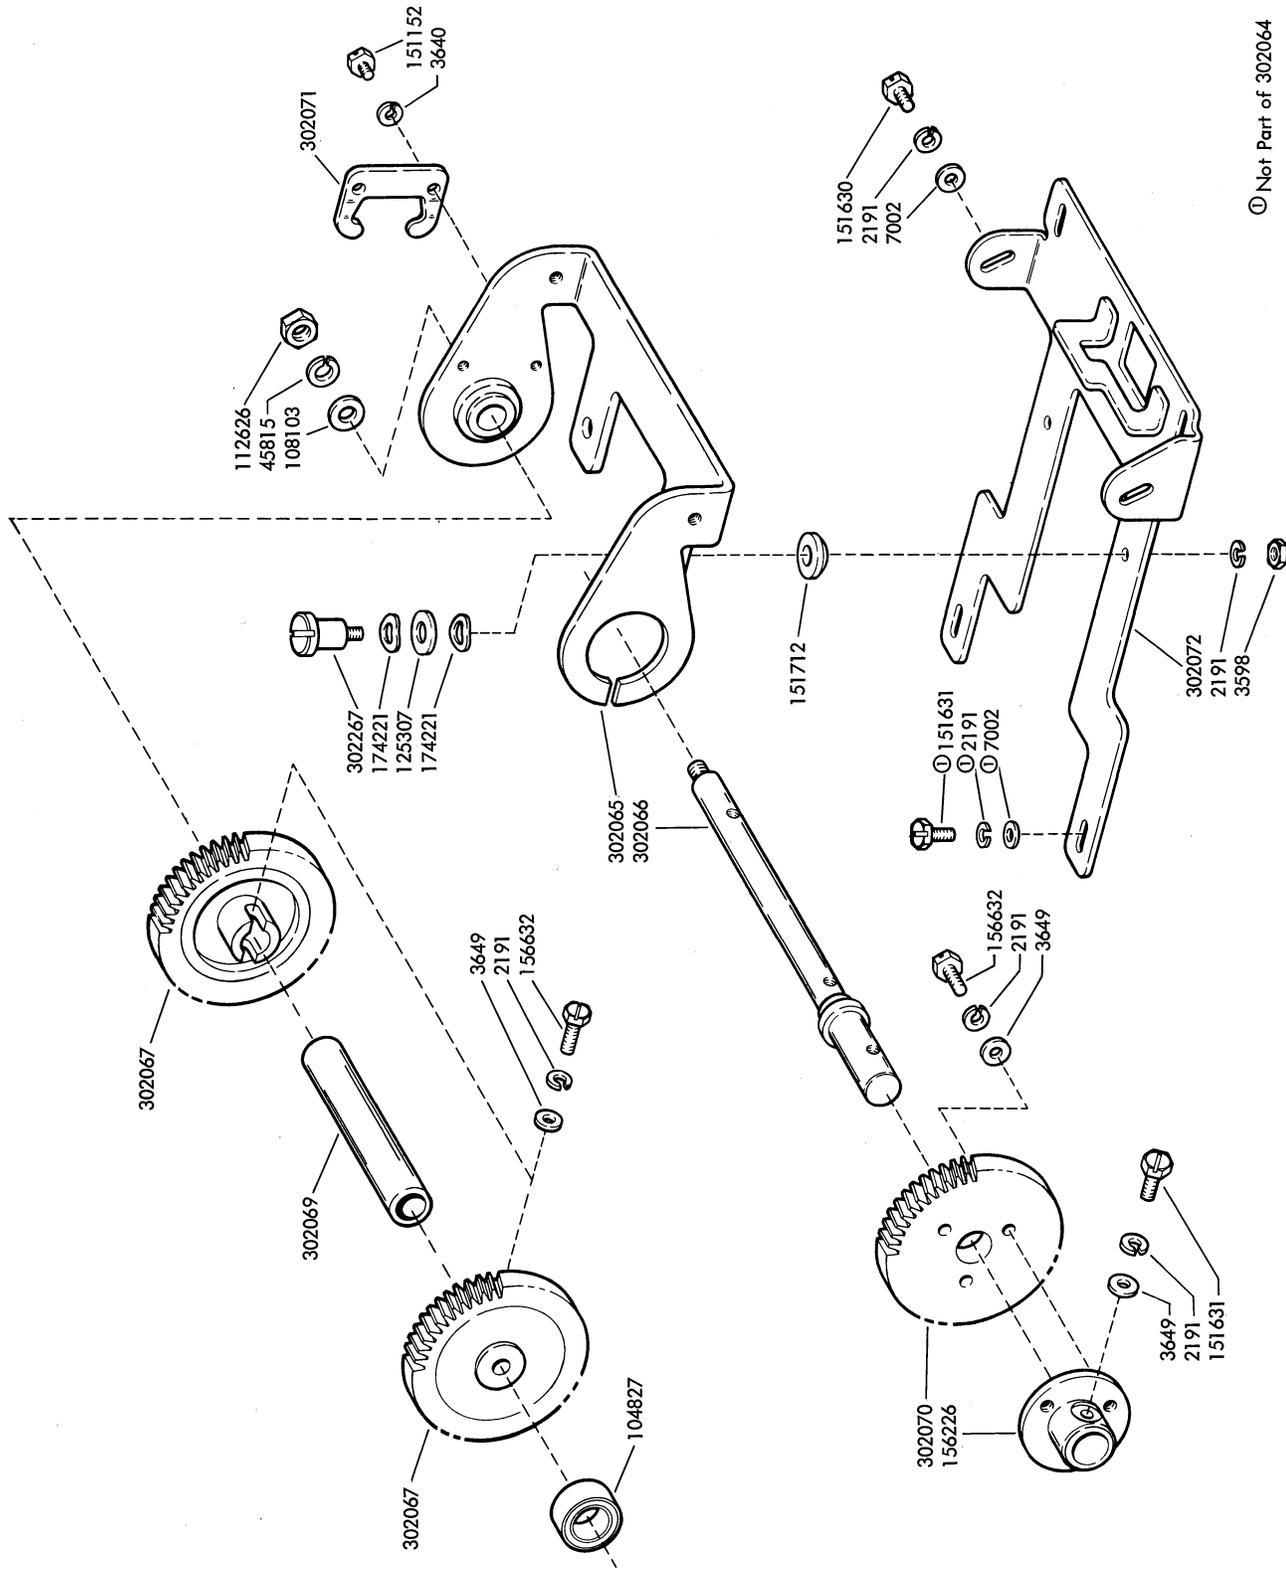

Ⓞ Not Part of 302064

FIGURE 15. 302064 INTERMEDIATE GEAR ASSEMBLY

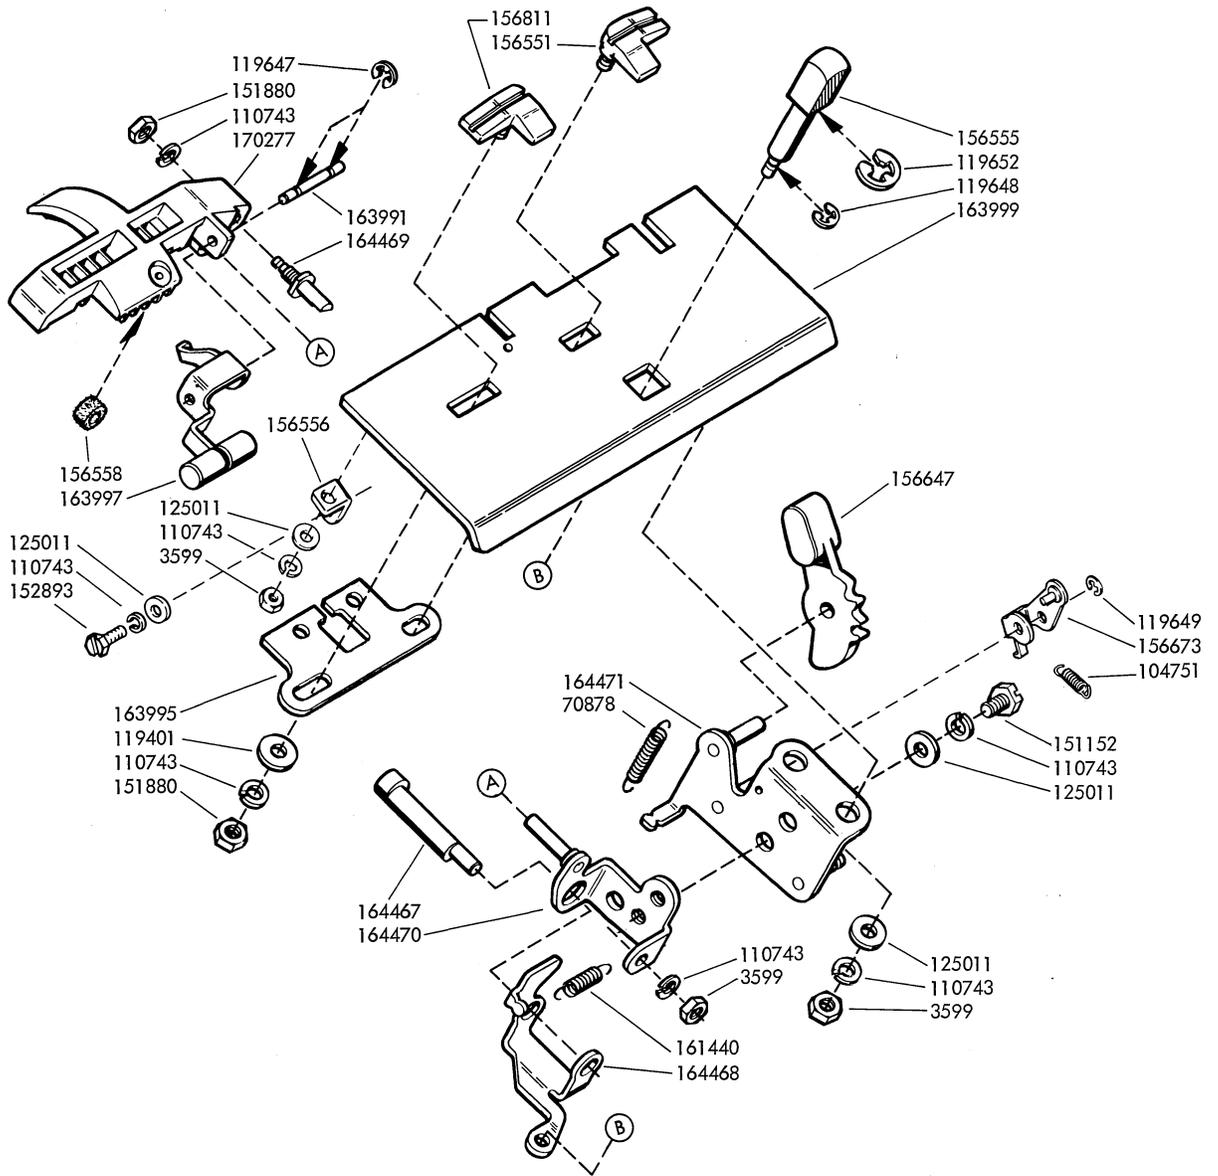


FIGURE 16. READER TAPE GUIDE PLATE MECHANISM

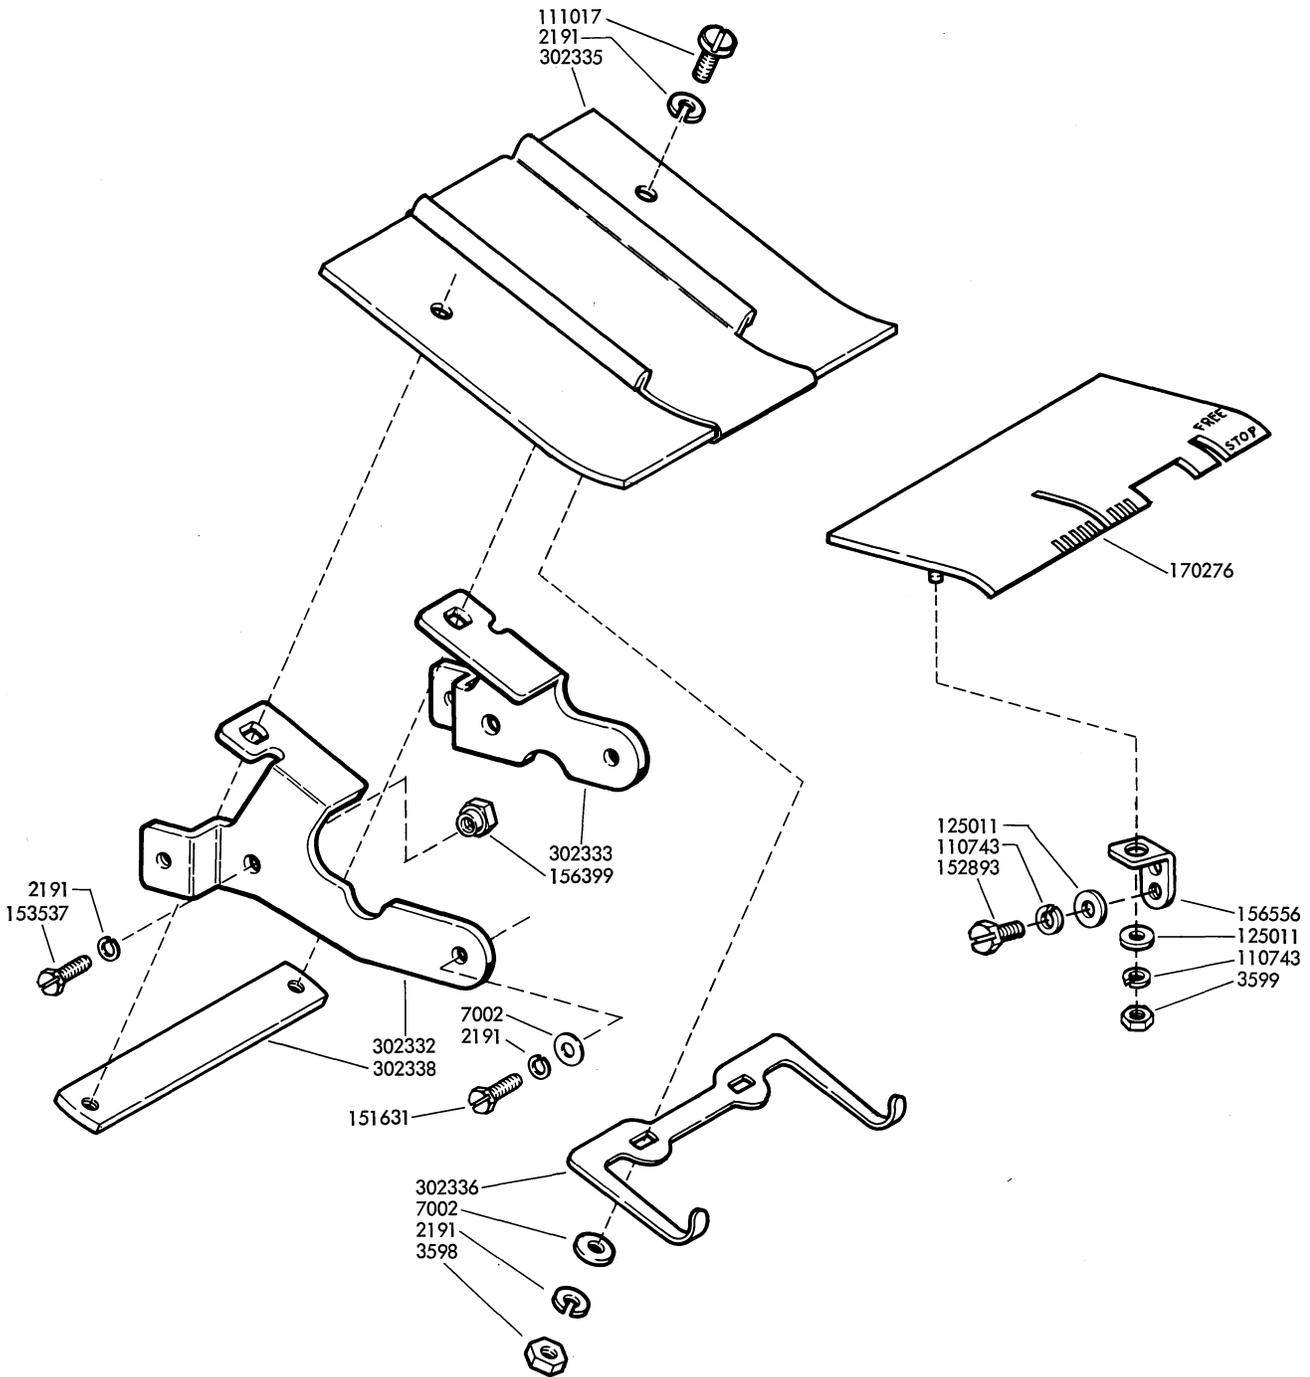


FIGURE 17. READER COVER PLATE AND TOP PLATES

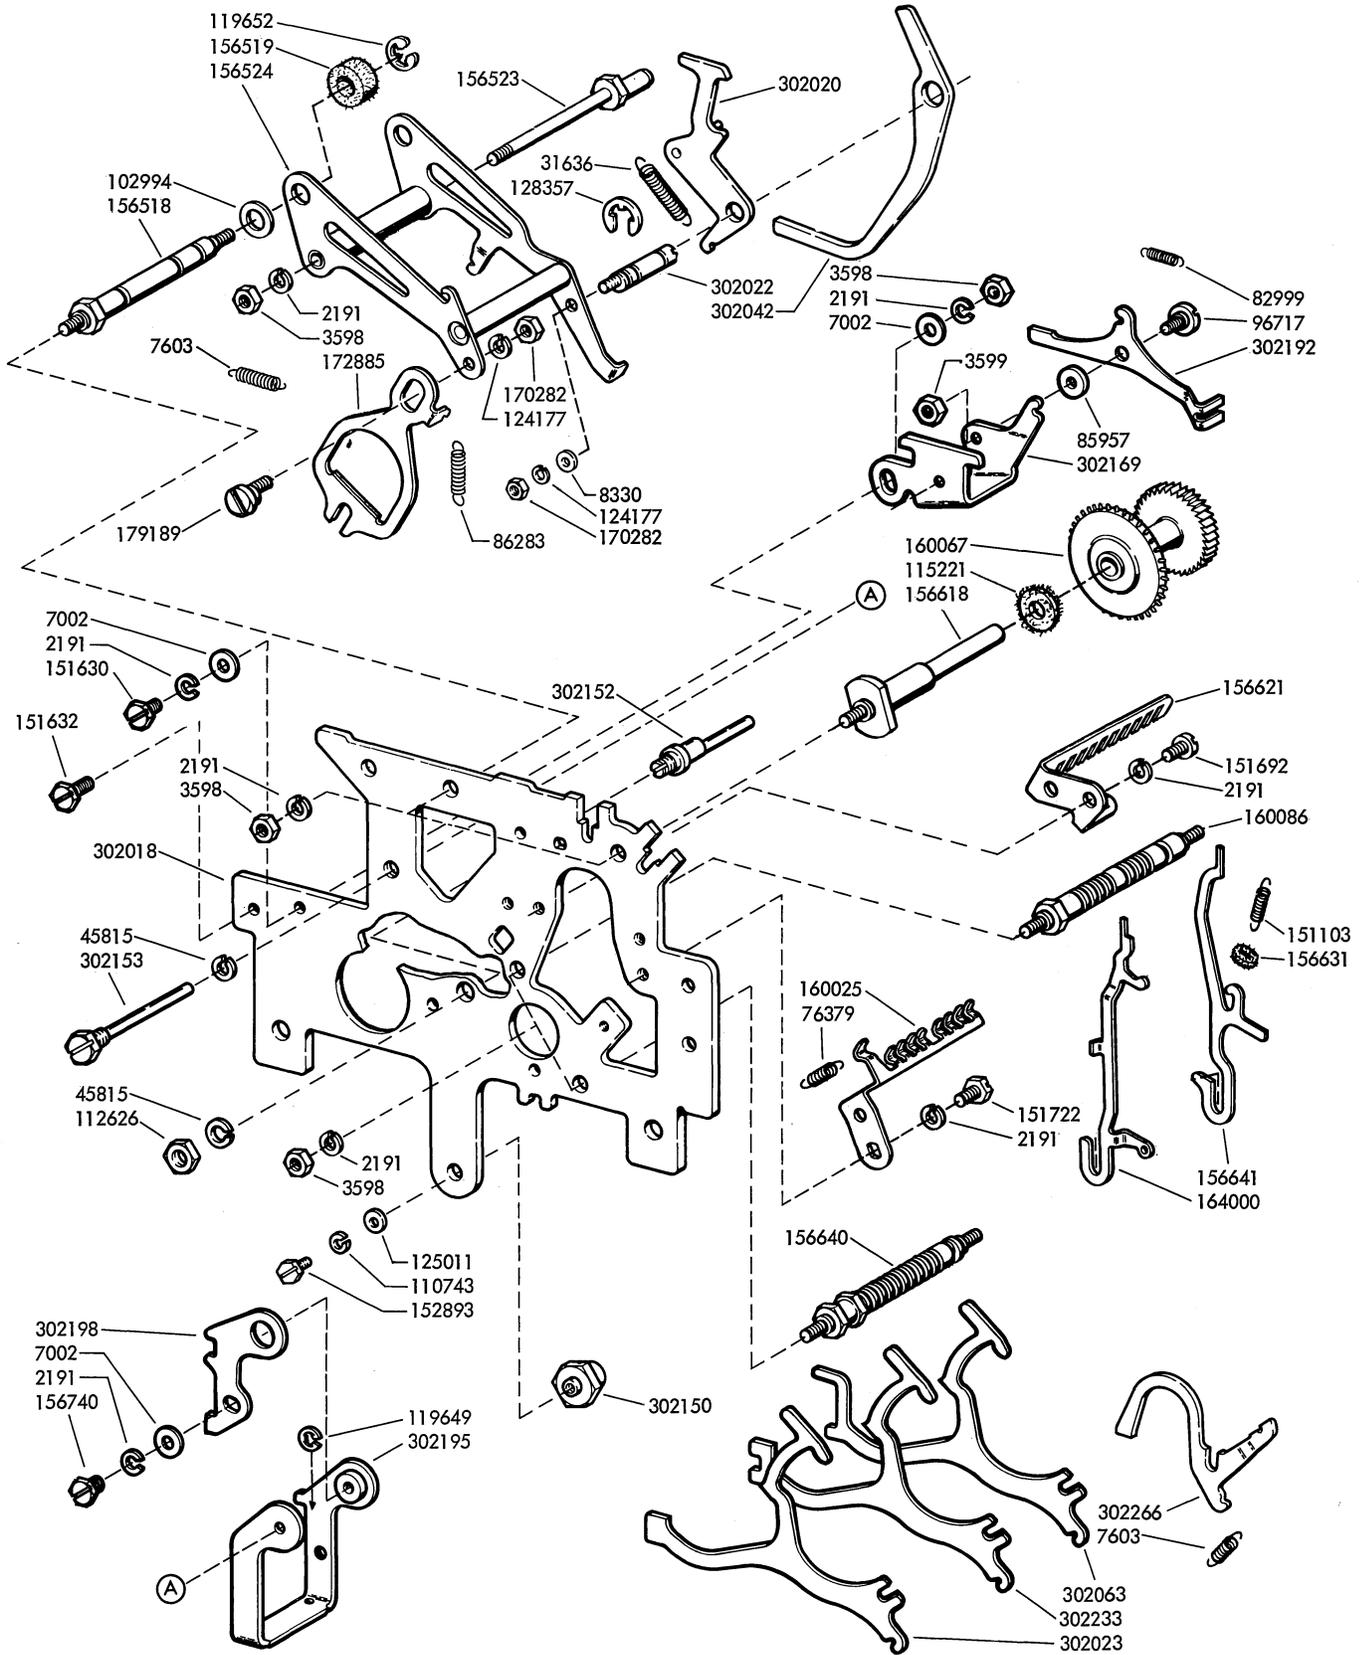


FIGURE 18. READER FRONT PLATE MECHANISM

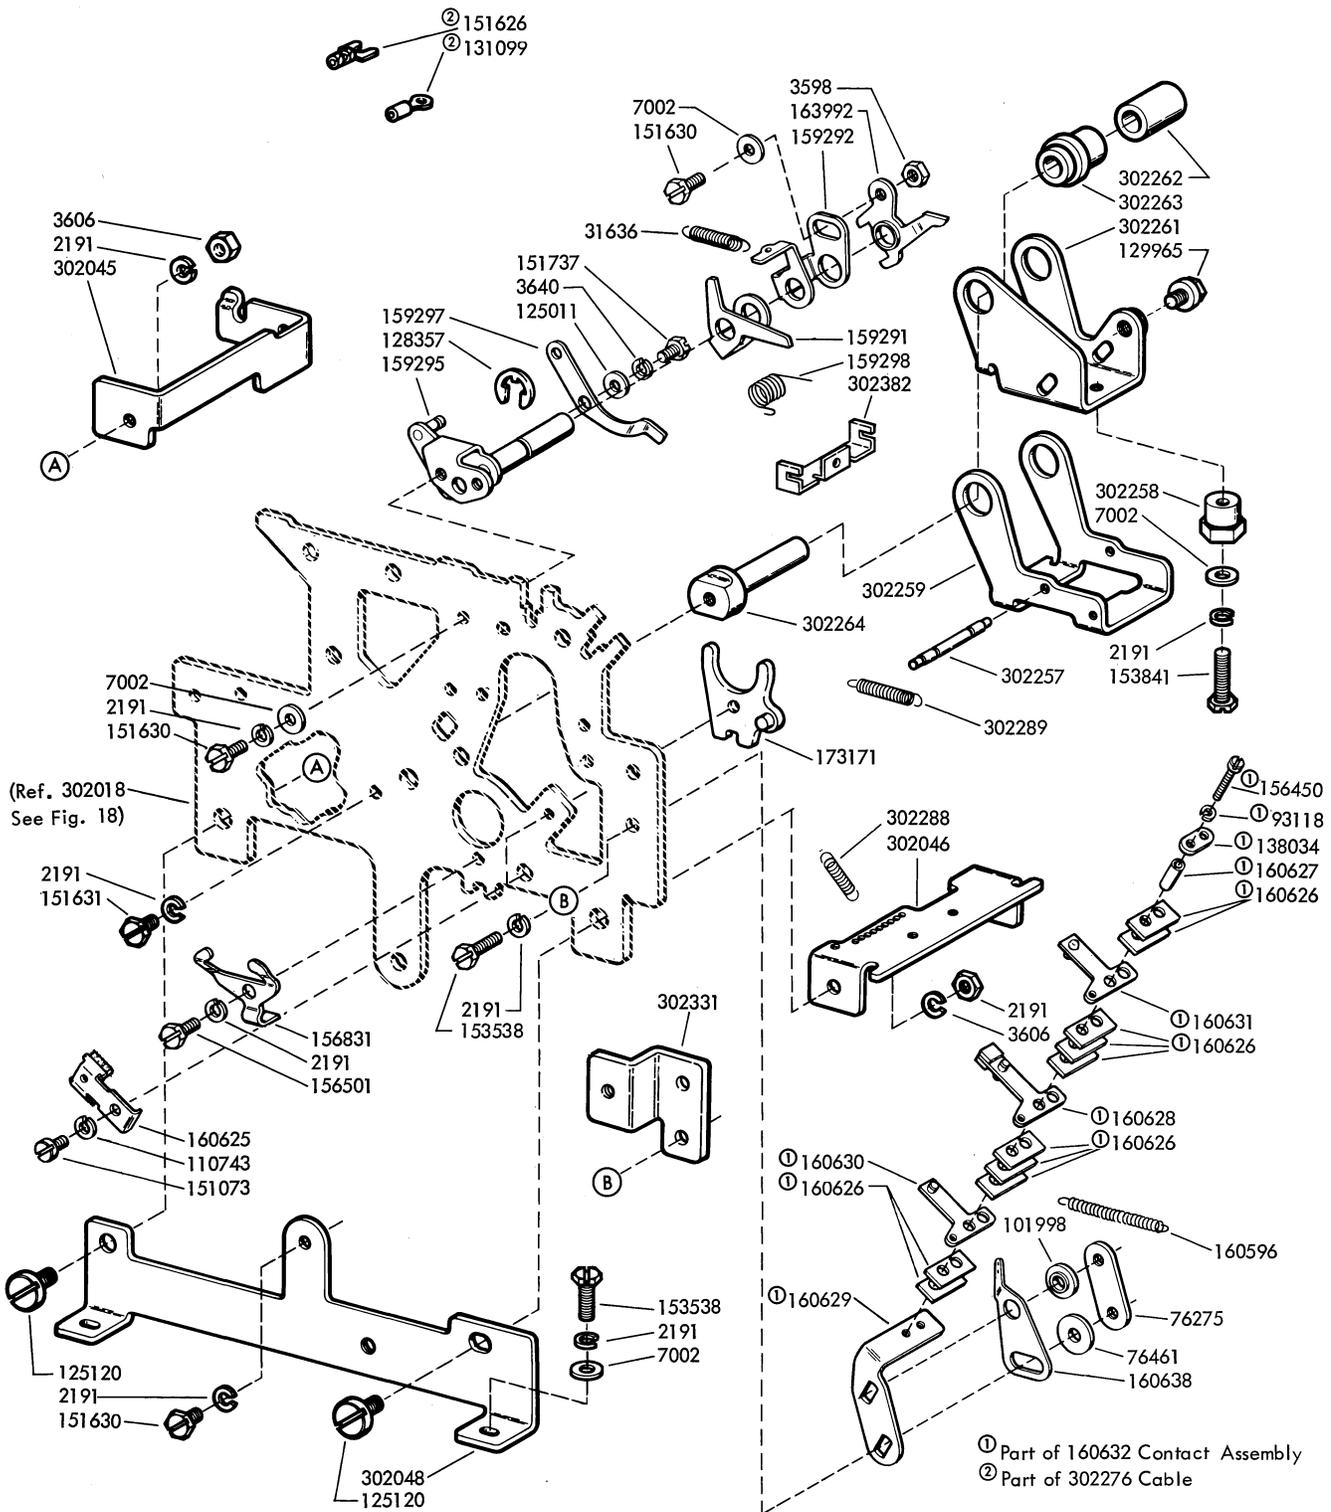


FIGURE 19. READER FRONT PLATE MECHANISM (Continued)

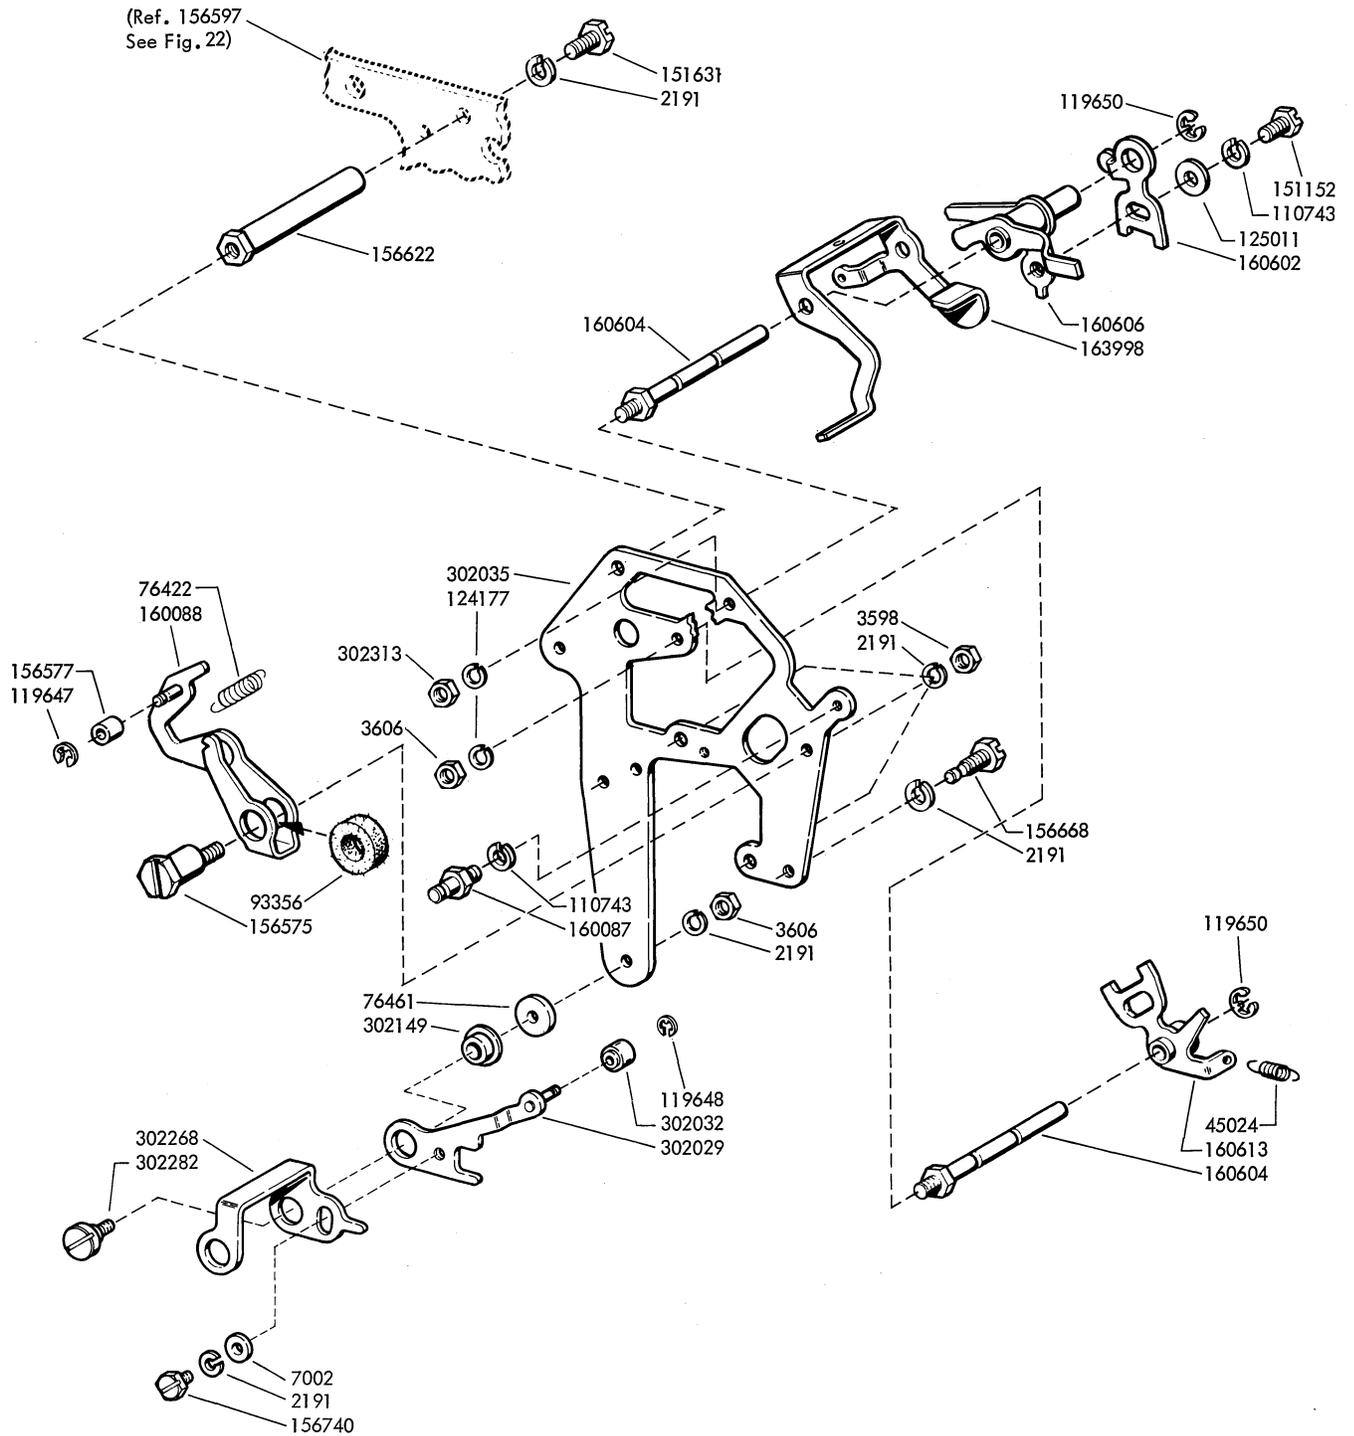
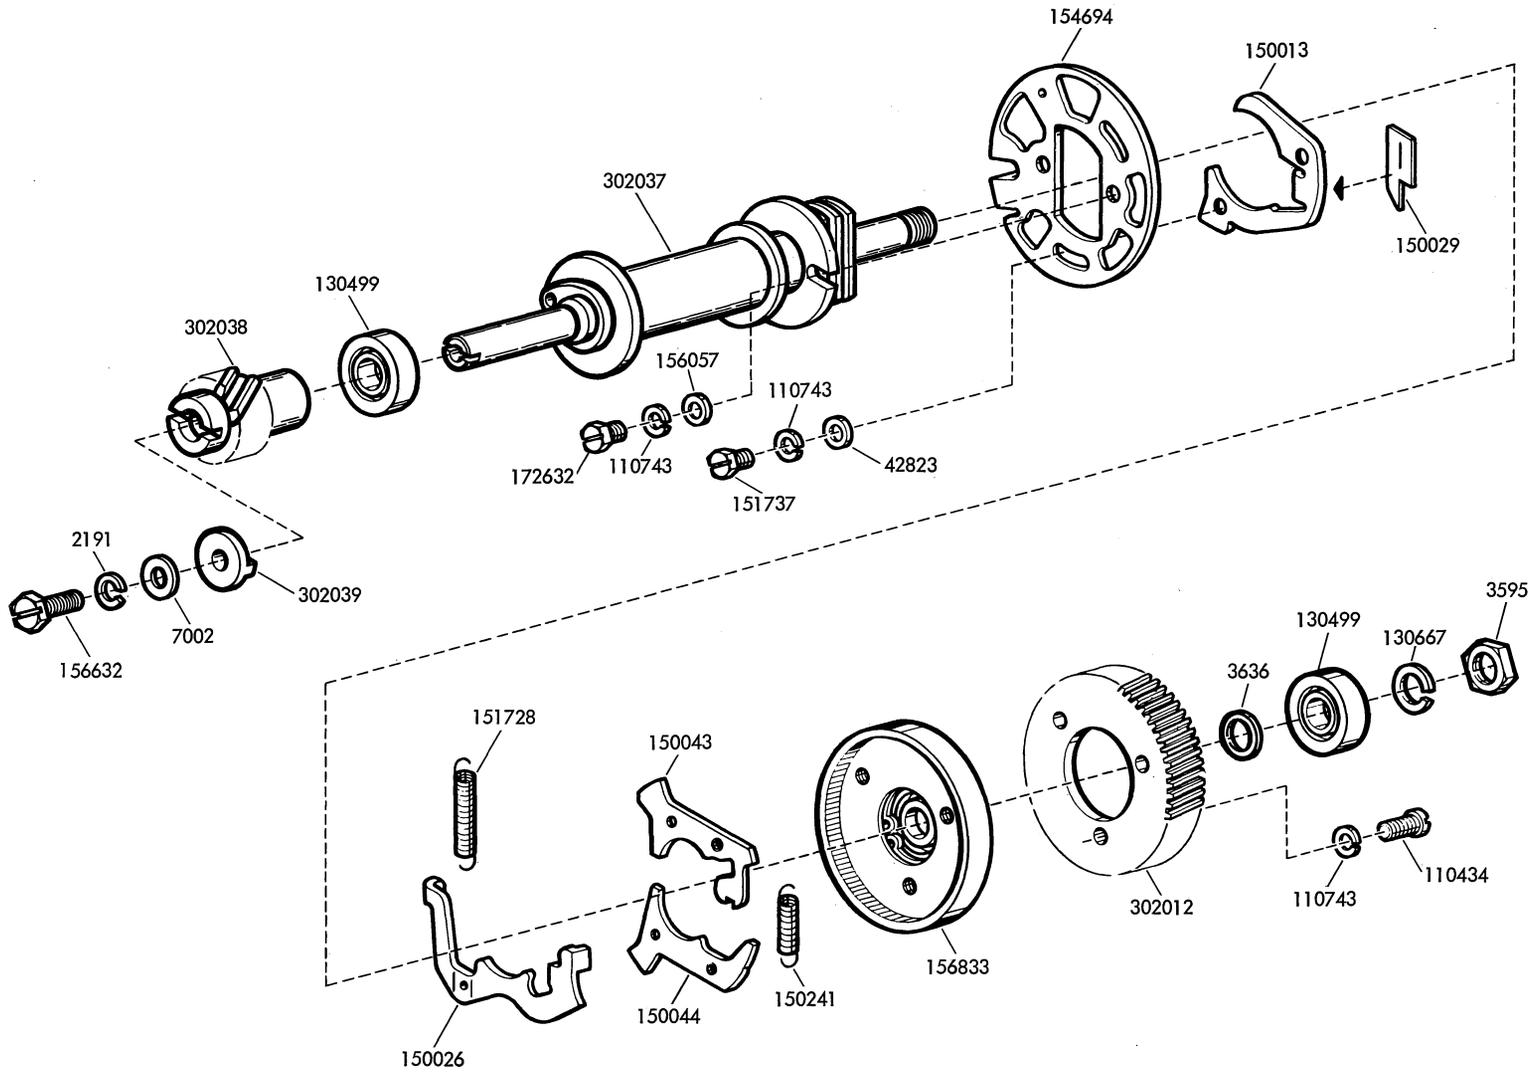


FIGURE 20. READER CENTER PLATE MECHANISM

FIGURE 21. READER MAIN SHAFT



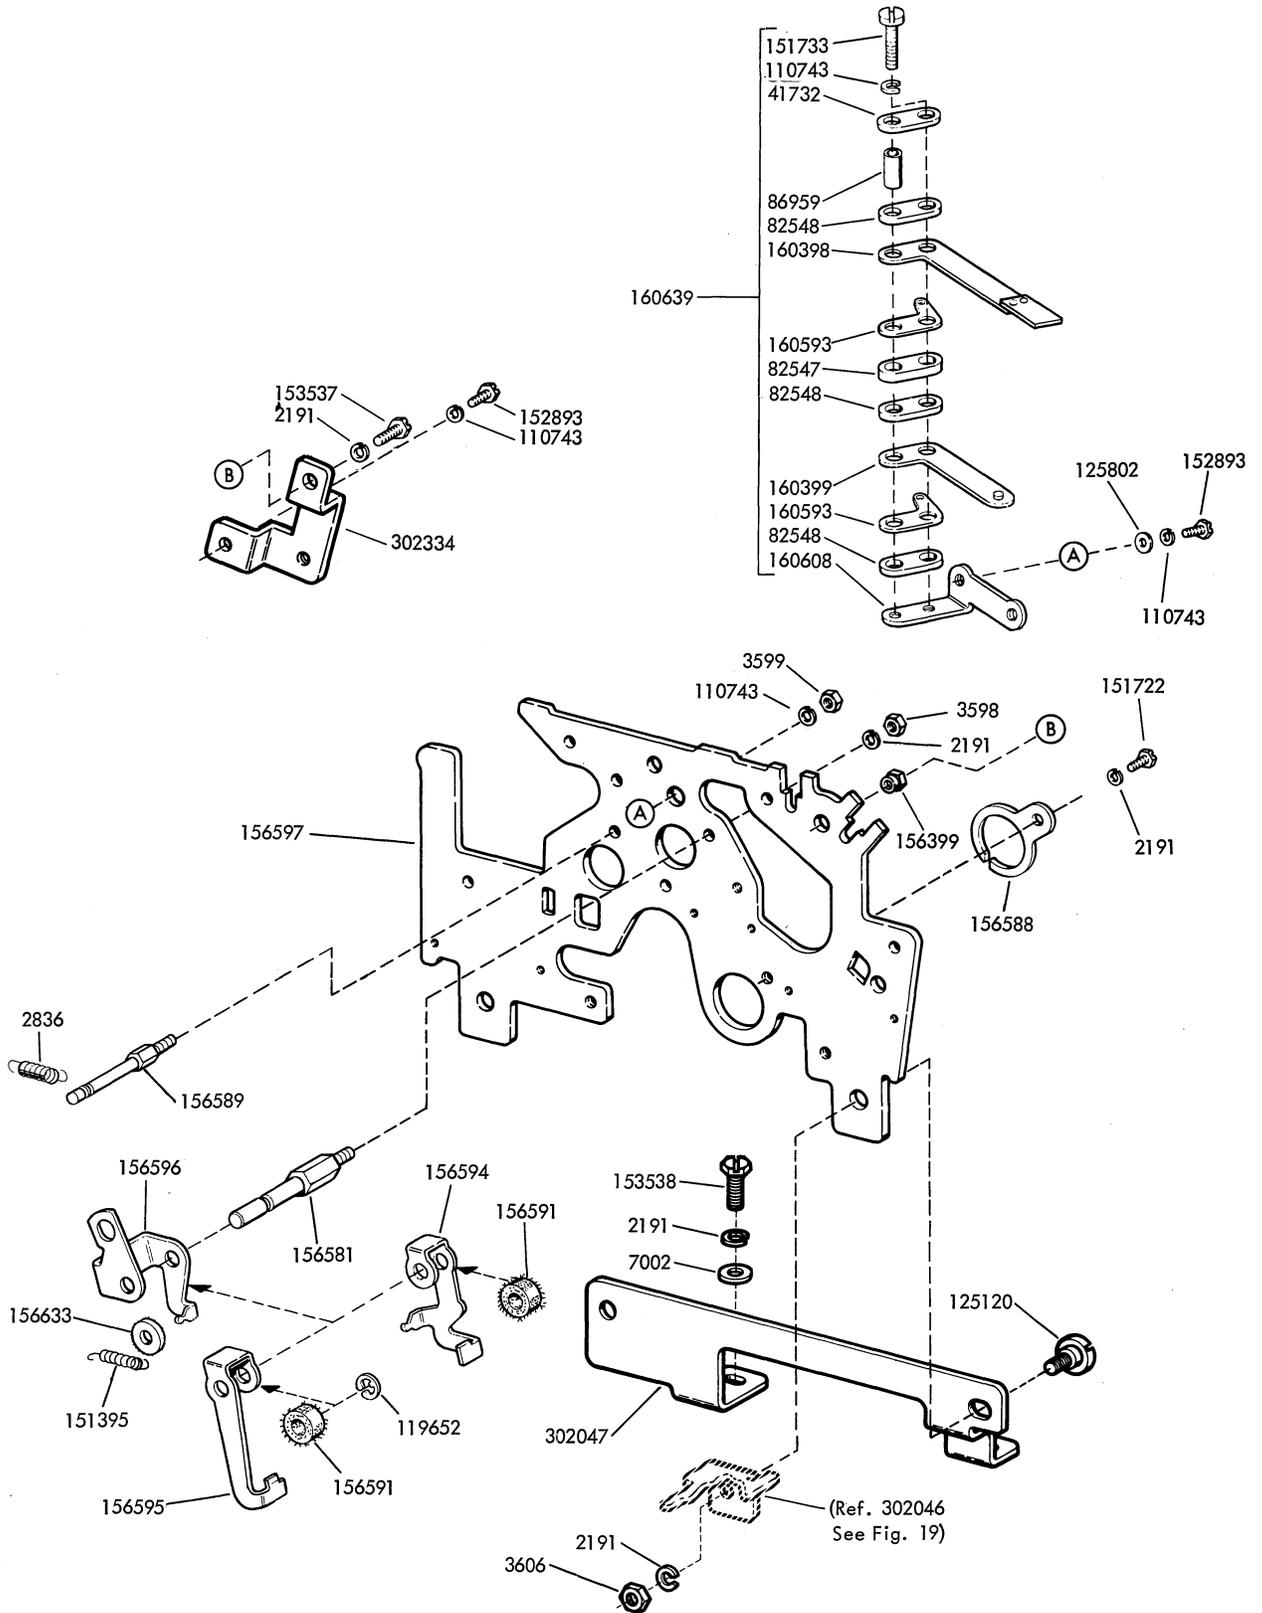


FIGURE 22. READER REAR PLATE MECHANISM

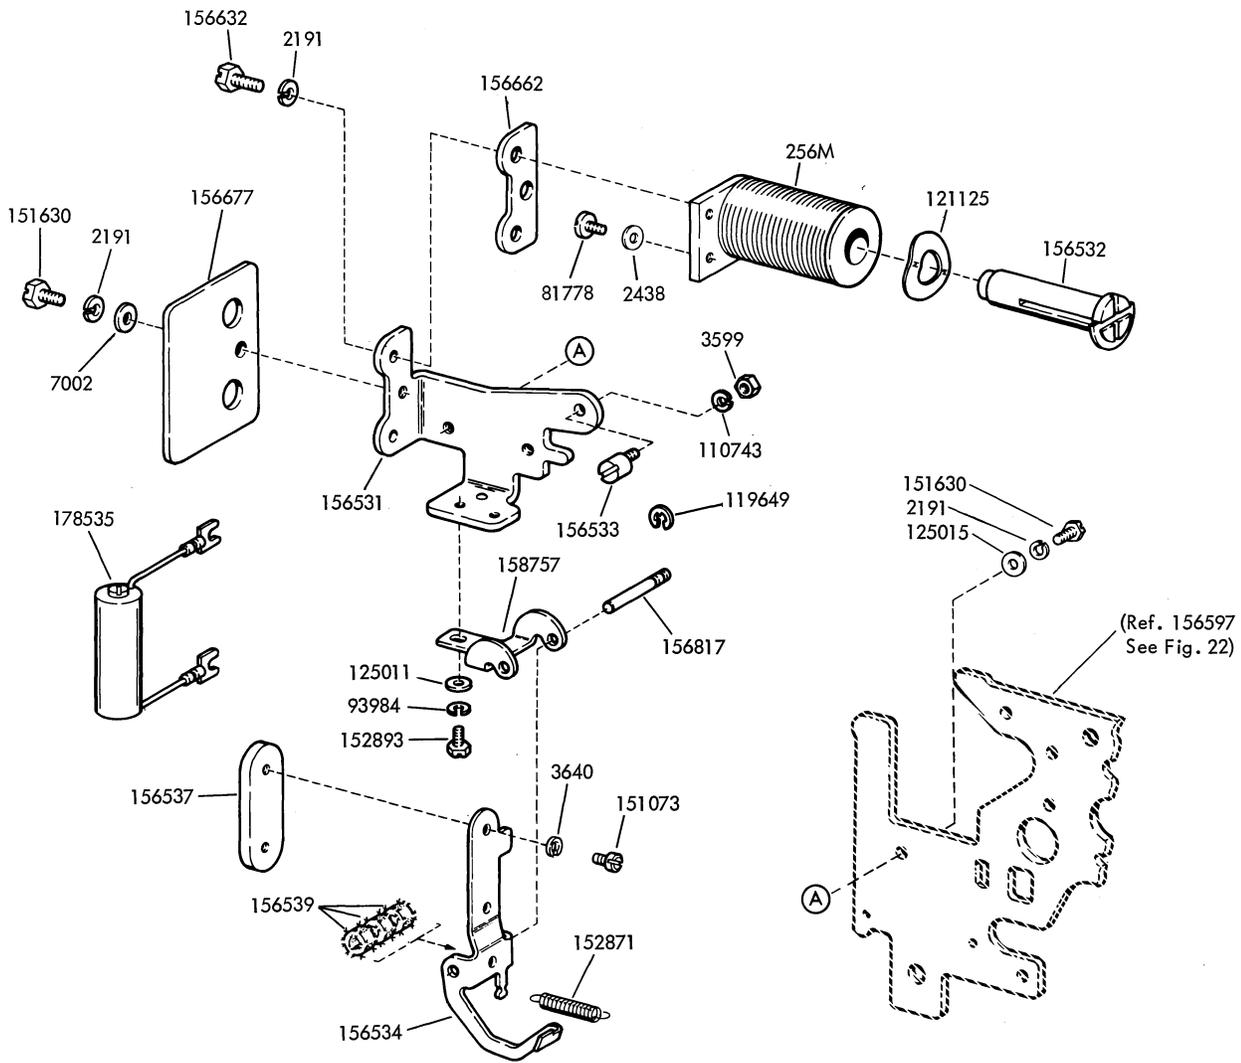


FIGURE 23. READER CLUTCH TRIP MAGNET MECHANISM

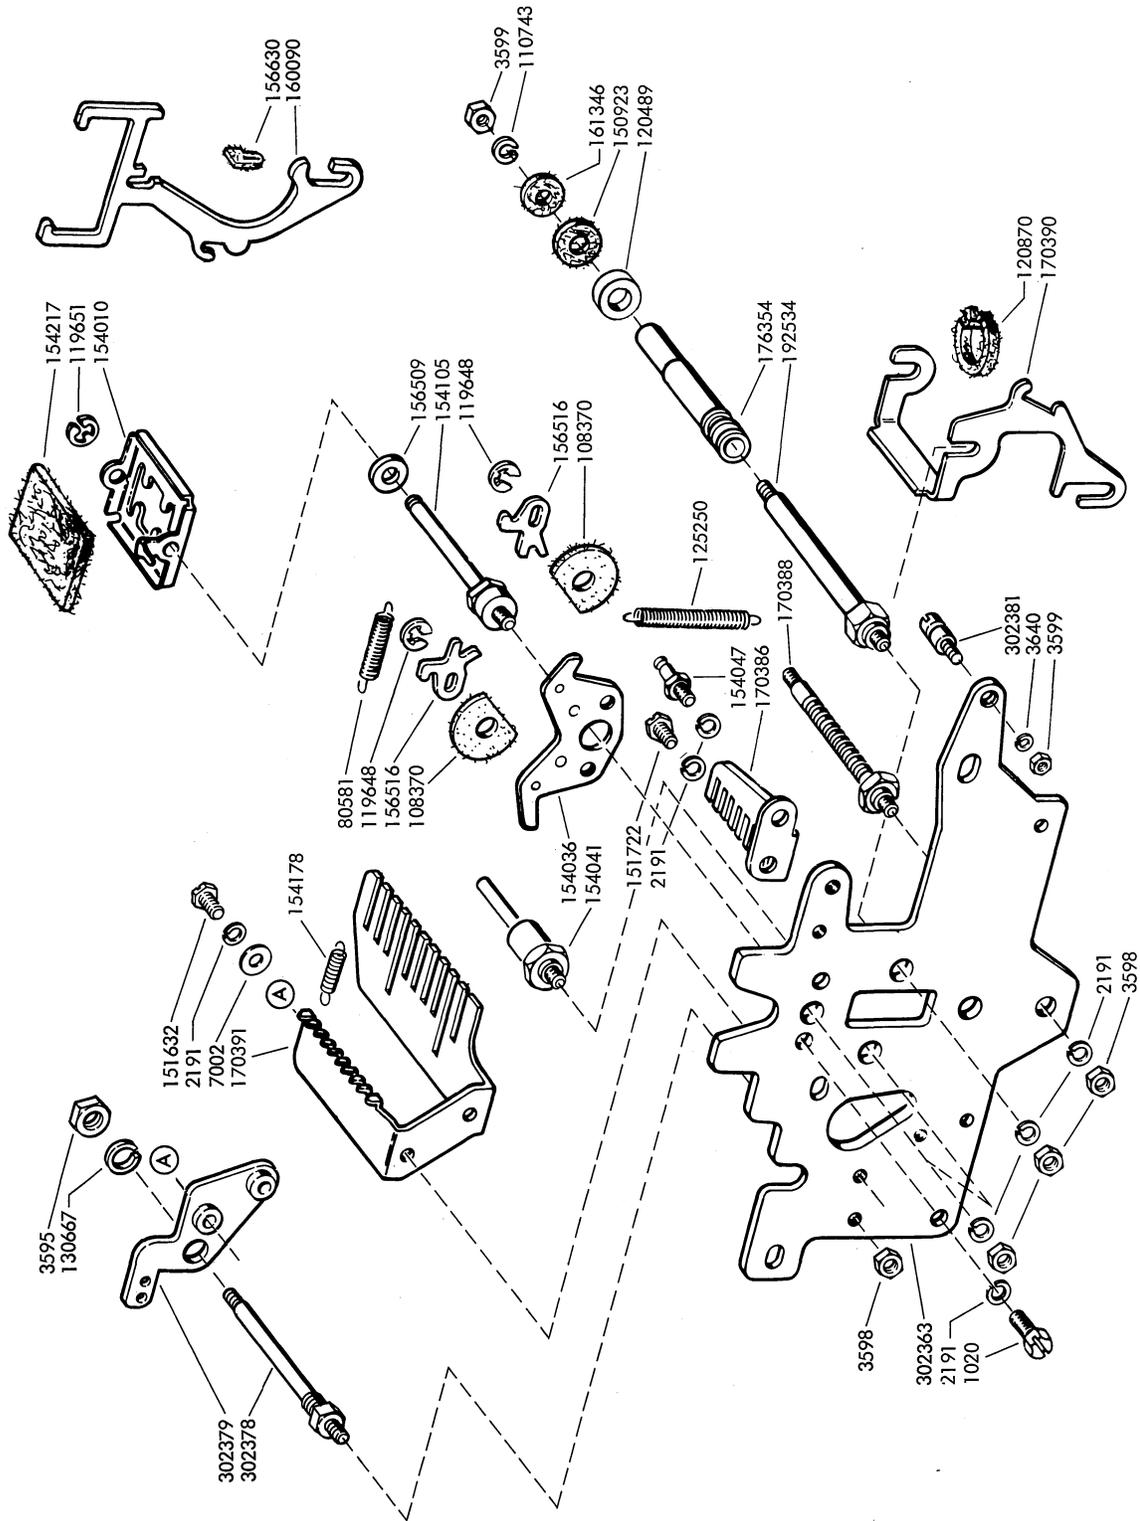


FIGURE 24. SIGNAL GENERATOR FRONT PLATE MECHANISM

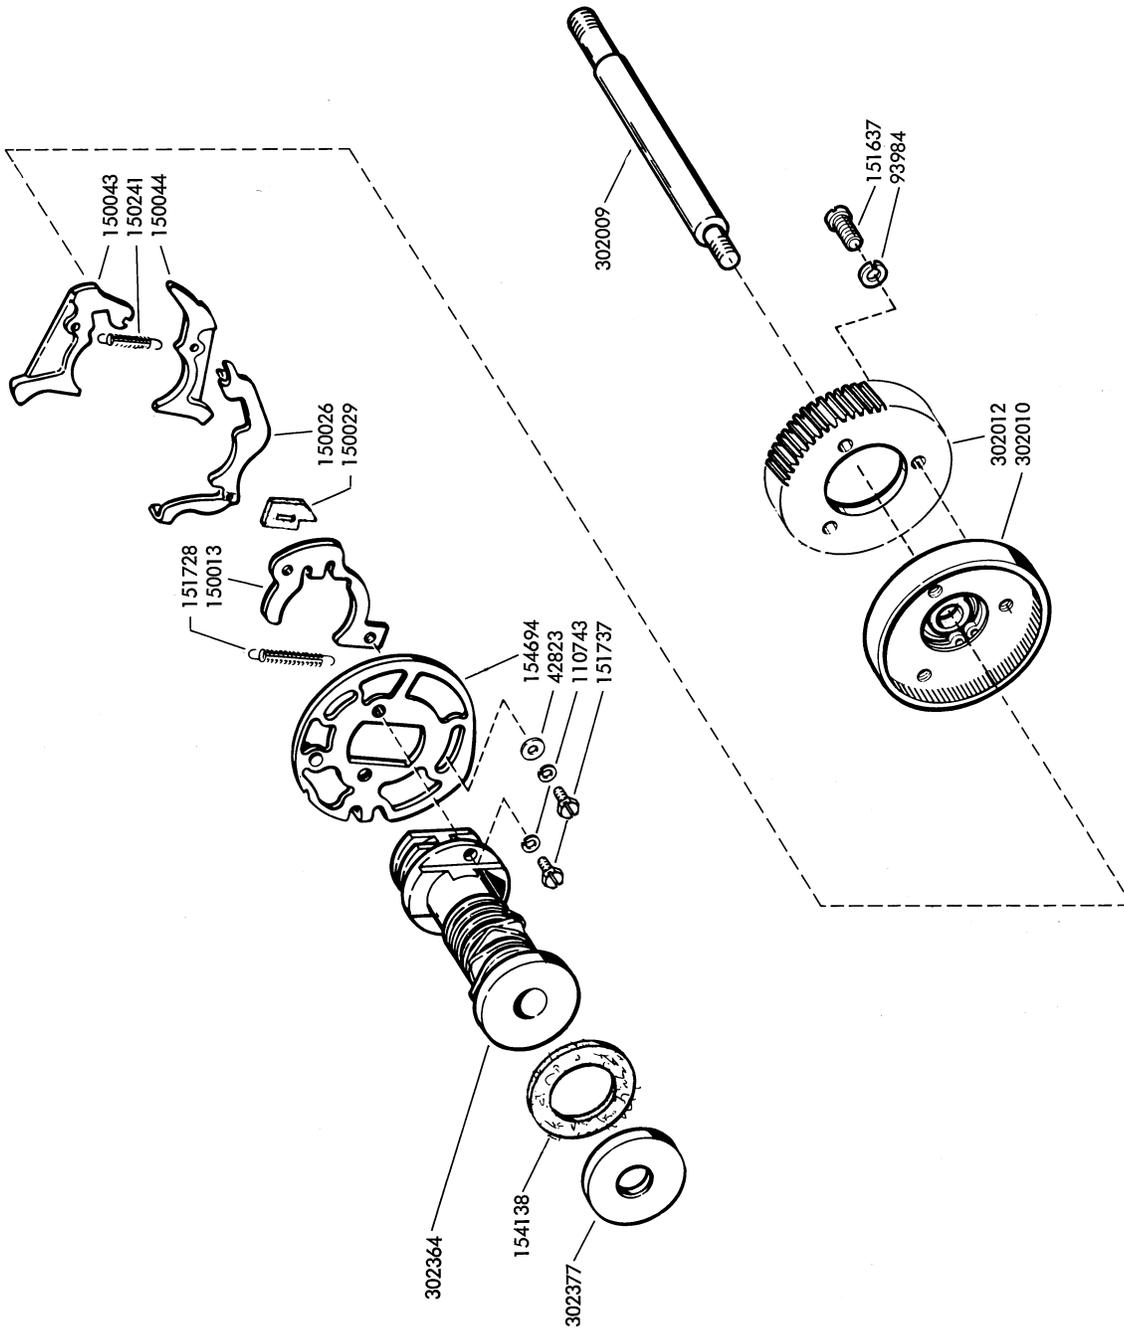
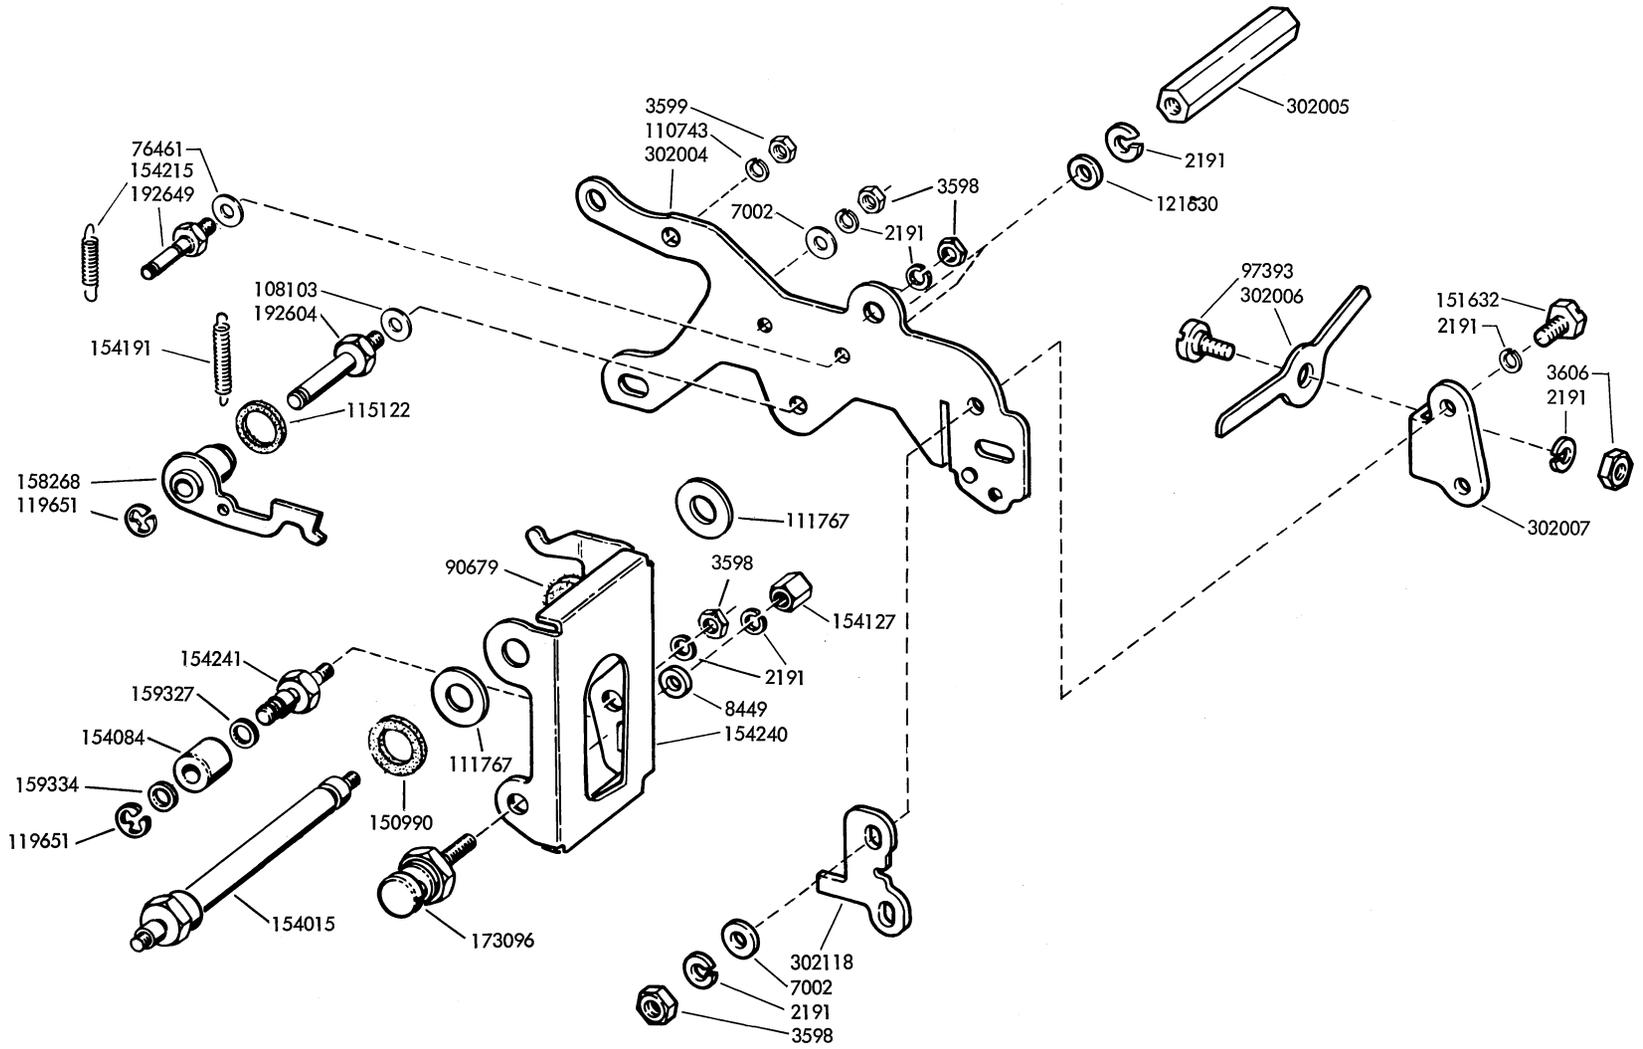


FIGURE 25. SIGNAL GENERATOR CLUTCH CAM SHAFT

FIGURE 26. SIGNAL GENERATOR REAR PLATE MECHANISM



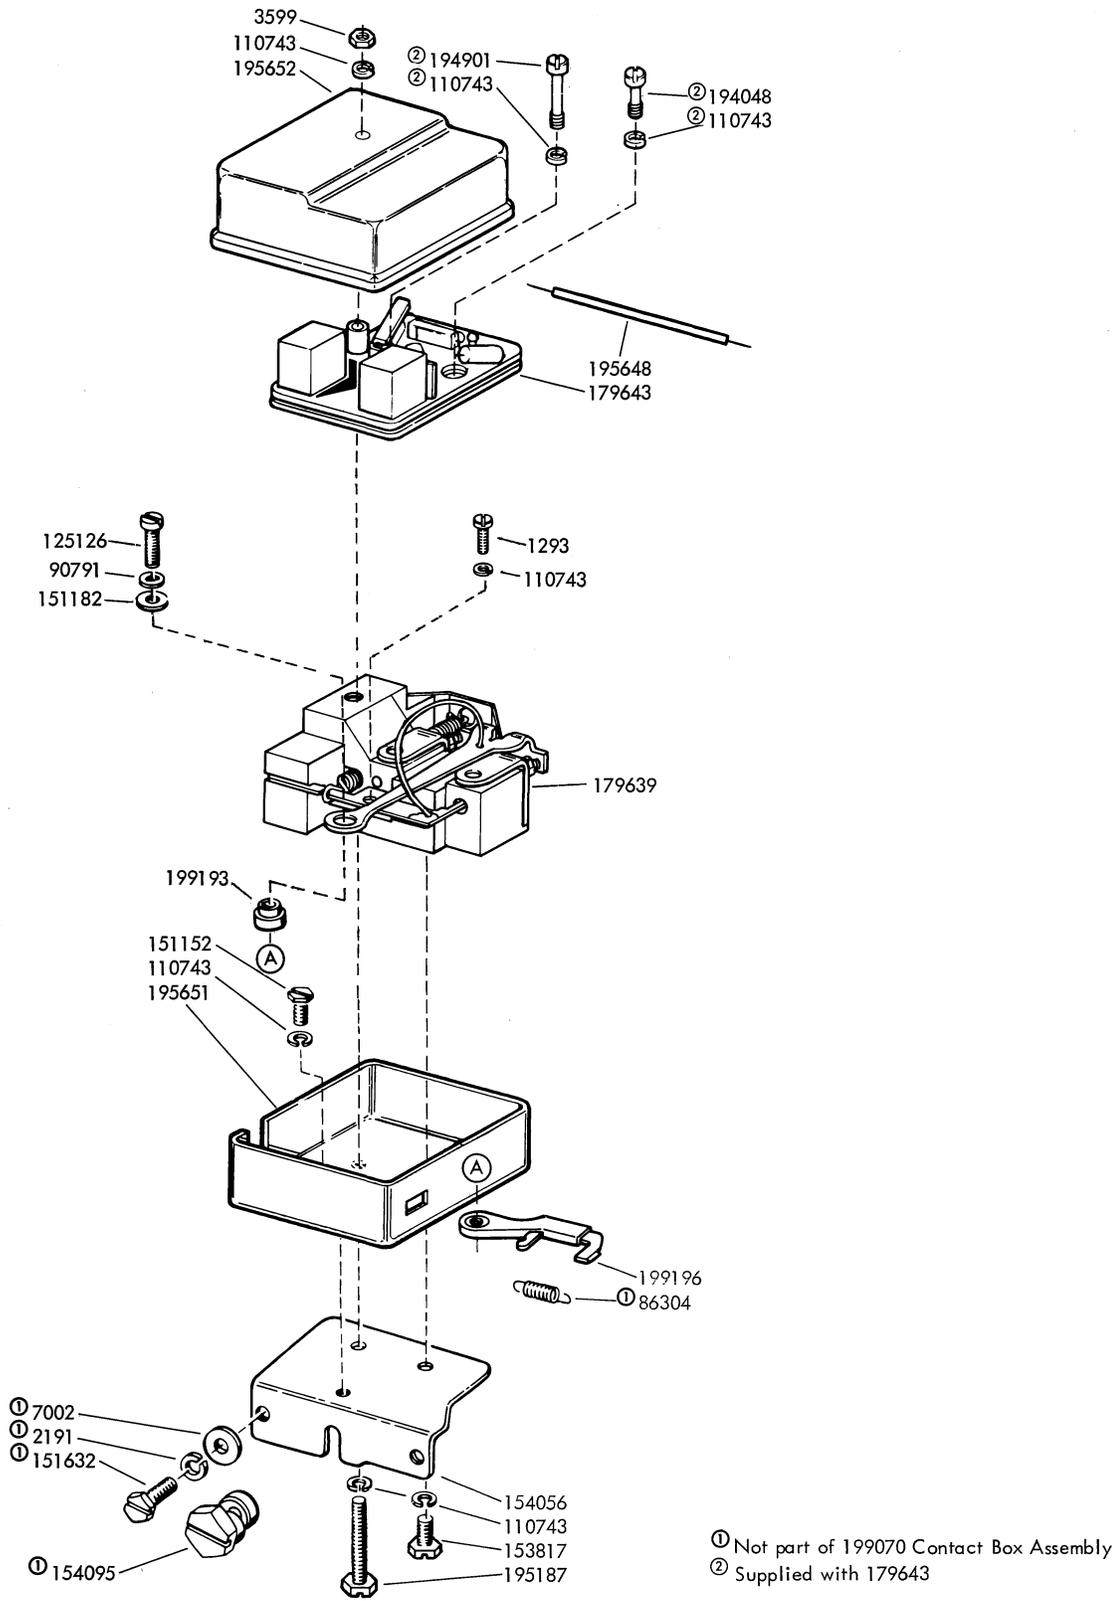


FIGURE 27. 199070 CONTACT BOX ASSEMBLY

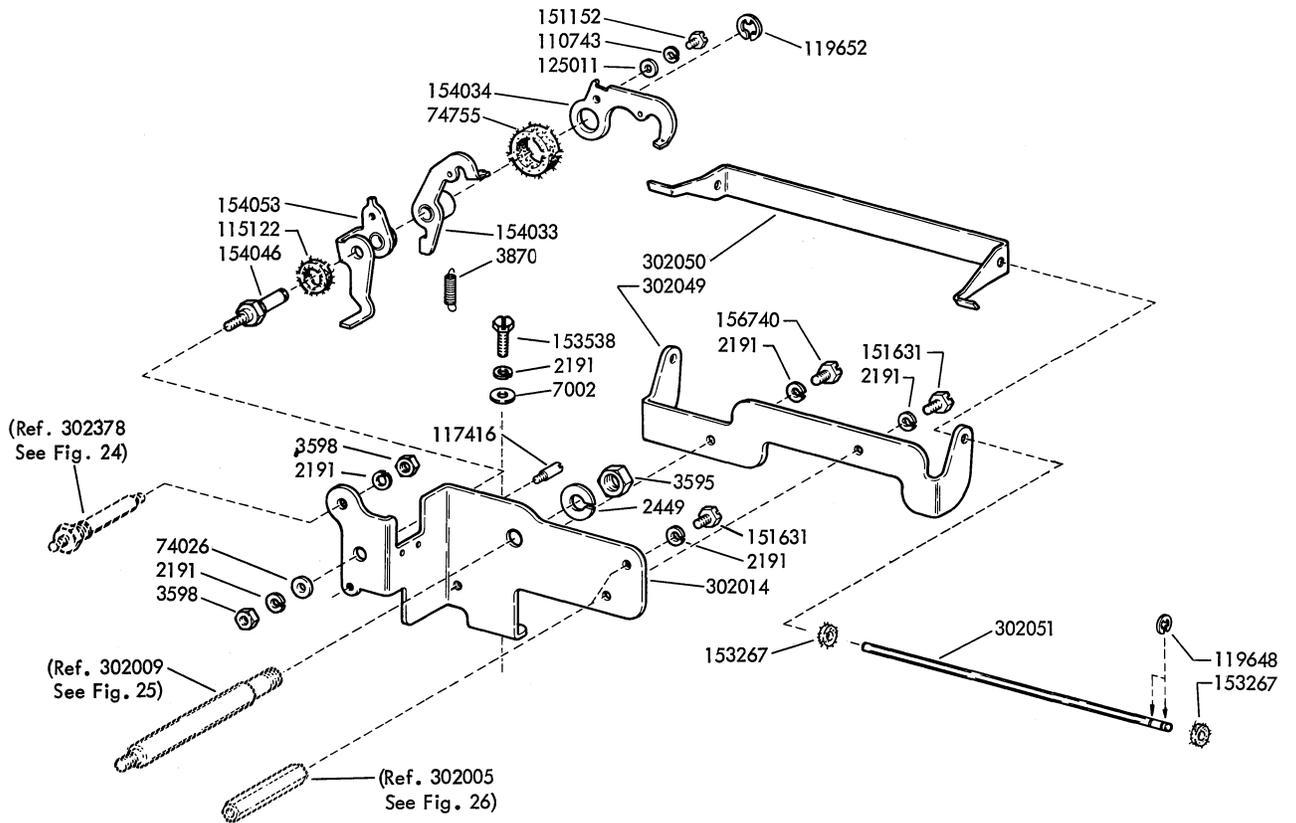


FIGURE 28. SIGNAL GENERATOR REAR BRACKET MECHANISM


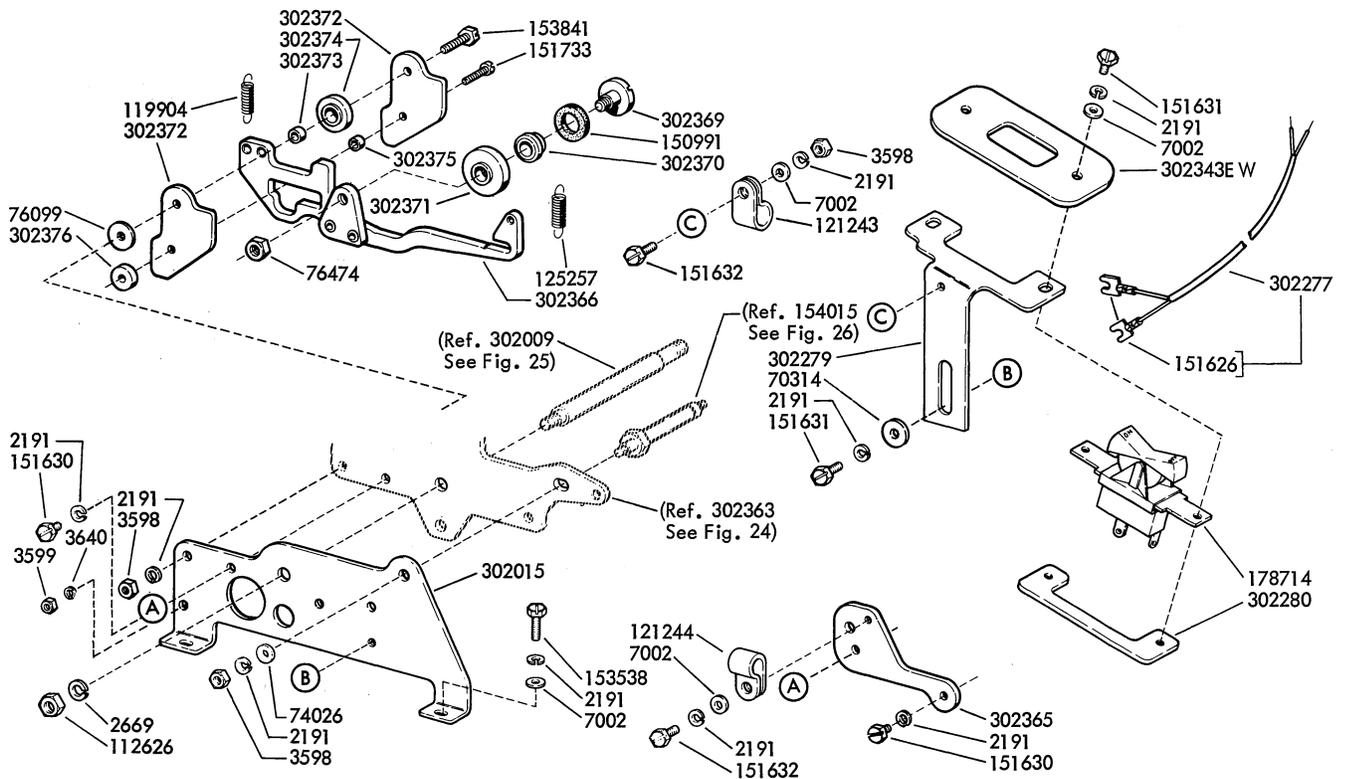


FIGURE 29. CAM FOLLOWER LINK MECHANISM AND POWER SWITCH

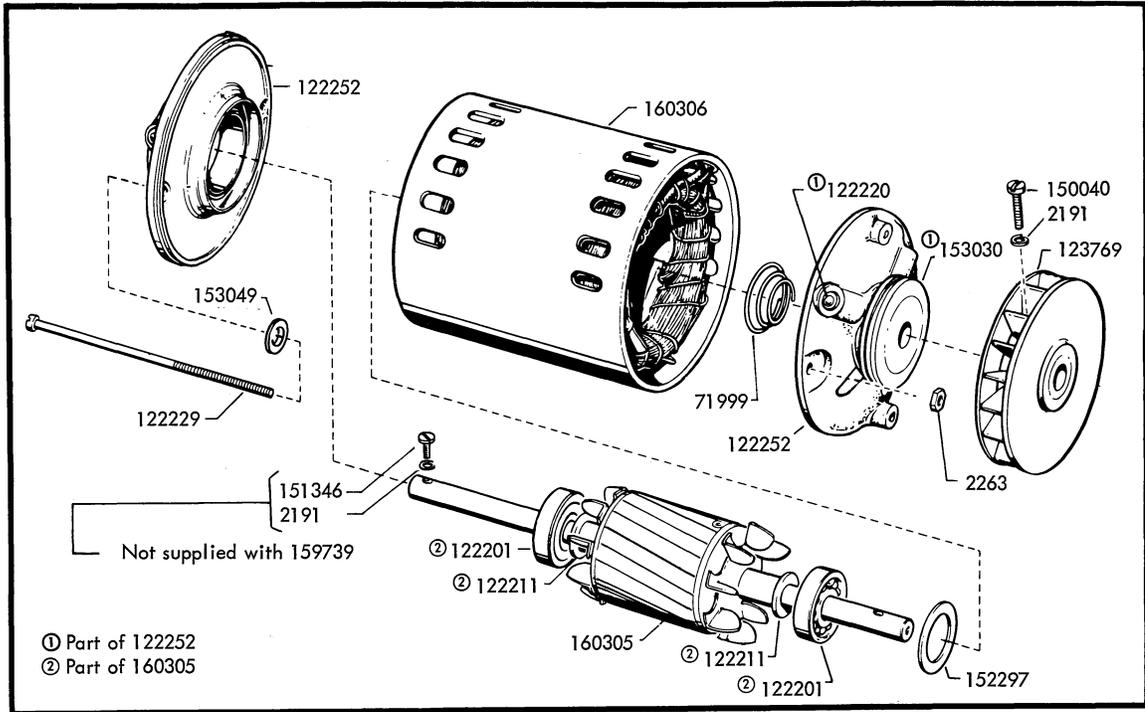

159739 1/2 hp. 115 v/1/60 cycle,
AC Synchronous motor

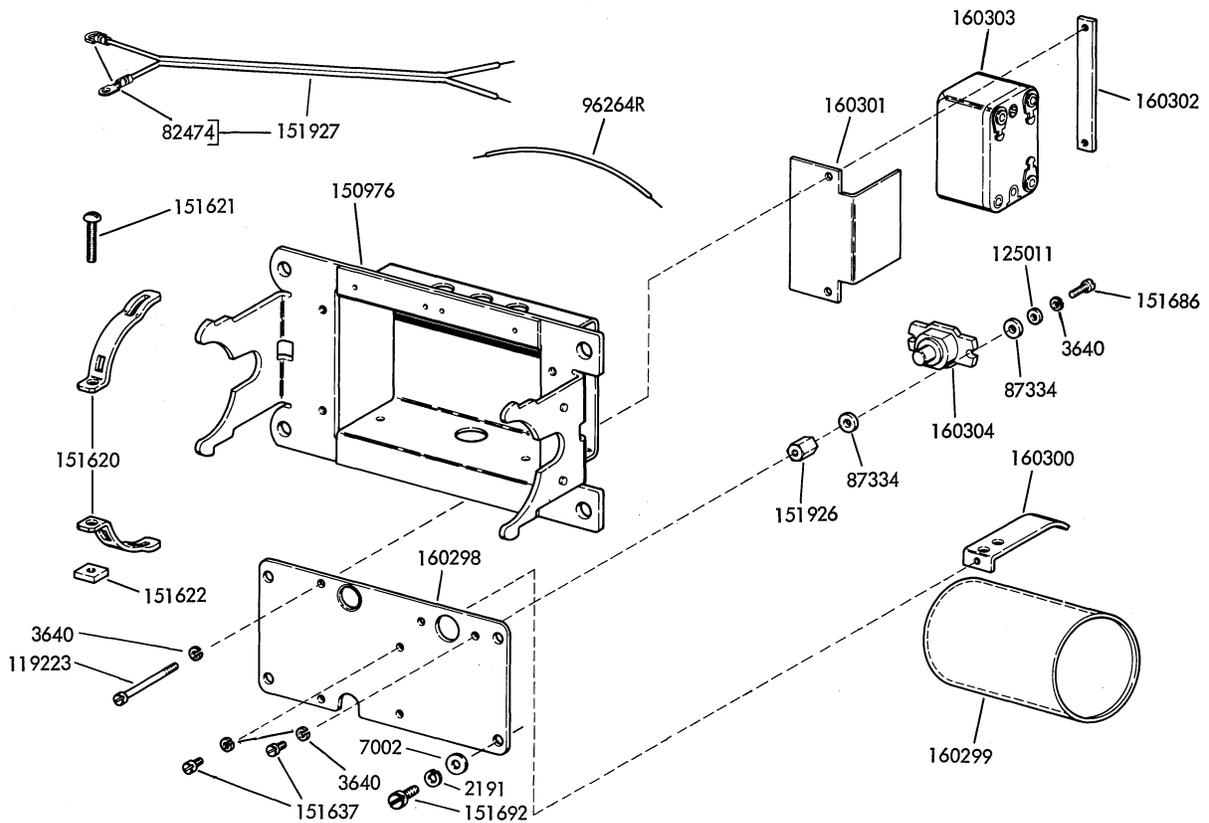


FIGURE 31. 302052 MOTOR MOUNTING ASSEMBLY (Continued)

NUMERICAL INDEX

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
256M	Coil, Magnet 24	81596	Screw (10-32 x 1-3/8" Hex) 2	119650	Ring, Retaining 21
1020	Screw (6-40 x 1/4 Hex) 25	81778	Screw (4-40 x 3/16 Fil) 24	119651	Ring, Retaining 14, 25, 27
1029	Screw (6-40 x 27/64 Hex) 10	82474	Terminal 31	119652	Ring, Retaining 11, 17, 19, 23, 29
1118	Screw, Shoulder (6-40) 8	82547	Insulator (.094" Thk) 23	119653	Ring, Retaining 10, 13
1293	Screw (4-40 x 1/8 Fil) 28	82548	Insulator (.062" Thk) 23	119654	Ring, Retaining 12
2191	Washer, Lock 2, 3, 5 to 8, 11 to 16, 18 to 25, 27 to 31	82999	Spring 10, 19	119904	Spring 29
2263	Nut (8-32 Hex) 31	84575	Spring 14	120489	Spacer (.052" Thk) 25
2438	Washer, Flat 24	85935	Post, Spring 14	120870	Wick, Felt 25
2449	Washer, Lock 5, 29, 30	85957	Washer, Flat 19	121100	Spring 9
2669	Washer, Lock 2, 5, 6, 12, 13, 14, 15, 29	86283	Spring 14, 19	121125	Washer, Spring 24
2836	Spring 23	86304	Spring 28	121242	Clamp, Cable (1/8" ID) 7
3438	Washer, Flat 15, 30	86959	Bushing, Insulating 23	121243	Clamp, Cable (3/16" ID) 2, 7, 29
3595	Nut (1/4-32 Hex) 5, 11, 22, 25, 29	87334	Washer, Insulating 31	121244	Clamp, Cable (1/4" ID) 7, 29
3598	Nut (6-40 Hex) 6, 7, 8, 11, 13, 14, 15, 16, 18, 19, 20, 21, 23, 25, 27, 29	87401	Spring 14	121245	Clamp, Cable (5/16" ID) 2, 7
3599	Nut (4-40 Hex) 14, 15, 17, 18, 19, 23, 24, 25, 27, 28, 29	90054	Spring 7	121630	Washer, Flat 27
3606	Nut (6-40 Hex) 8, 12, 13, 14, 20, 21, 23, 27	90679	Washer, Felt 27	122201	Bearing, Ball 31
3636	Washer, Flat 22	90791	Washer, Lock 28	122211	Washer, Pull 31
3639	Washer, Lock 30	91120	Spring 9	122220	Oiler, Ball 31
3640	Washer, Lock 8, 9, 11, 14, 15, 16, 20, 24, 25, 29, 31	91228	Strap (2-1/2" Braided) 5	122229	Bolt (8-32 x 4-11/16 Fil) 31
3646	Washer, Lock 30	92806	Screw, Shoulder (6-40) 14	122252	Shield Assembly, End 31
3649	Washer, Flat 15, 16	93118	Washer, Lock 20	123131	Clamp 11
3870	Spring 29	93356	Washer, Felt 21	123769	Fan, Motor 31
7002	Washer, Flat 2, 3, 5, 7, 8, 11, 13 to 16, 18 to 25, 27 to 31	93521	Post, Spring 14	124177	Washer, Lock 13, 14, 15, 19, 21
7603	Spring 19	93758	Washer, Felt 13, 14	125011	Washer, Flat 17 to 21, 24, 29, 31
8330	Washer, Flat 11, 12, 13, 19	93984	Washer, Lock 24, 26	125015	Washer, Flat 24
8449	Spacer (.094" Thk) 27	94669	Screw, Shoulder (4-40) 14, 15	125120	Screw, Shoulder (6-40) 20, 23
31636	Spring 19, 20	96264R	Jumper (5" Red) 31	125126	Screw, (2-56 x 9/32 Fil) 28
34432	Washer, Flat 13, 14	96717	Screw, Shoulder (4-40) 19	125180	Screw, Shoulder (4-40) 12
35551	Screw (10-32 x 3/8 Flat) 6	97393	Screw, Shoulder (6-40) 27	125231	Nut (10-32 Hex) 30
41732	Plate, Clamp 23	97402	Screw, Shoulder (6-40) 11	125239	Spring, Compression 13
42823	Washer, Flat 22, 26	98725	Screw (6-40 x 3/8 Flat) 6	125250	Spring 25
45024	Spring 13, 21	101998	Bushing, Shoulder 20	125253	Spring 14
45815	Washer, Lock 13, 16, 19, 30	102994	Washer, Flat 19	125257	Spring 29
55219	Screw (8-32 x 3/8 Fil) 30	103450	Stud 2	125307	Washer, Flat 16
55669	Spring 9, 14	104451	Washer, Lock 11	125802	Washer, Flat 23
70314	Washer, Flat 10, 14, 29	104751	Spring 17	128357	Ring, Retaining 19, 20
70466	Spring 13	104827	Bearing, Ball 16	129382	Grommet, Rubber 2
70497	Nut (5/16-32 Hex) 11	108103	Washer, Flat 16, 27, 30	129920	Fuse (5 Amp) 7
70878	Spring 17	108370	Washer, Felt 25	129965	Follower, Cam 14, 20
71858	Washer, Flat 12	110434	Screw (4-40 x 3/16 Fil) 22	130499	Bearing, Ball 22
71999	Spring, Motor Thrust 31	110436	Spring 9	130667	Washer, Lock 22, 25
74011	Screw, Shoulder (6-40) 7	110686	Bearing, Ball 15	131099	Terminal (5/8" Lg) 20
74026	Collar 29	110743	Washer, Lock 7, 10, 14, 17 to 29	131286	Washer, Lock 11
74334	Washer, Flat 12	111017	Screw (6-40 x 5/16 Fil) 3, 7, 18	138034	Plate, Clamp 20
74692	Post, Spring 14	111410	Washer, Flat 9, 10, 14	142839	Bearing, Ball 30
74710	Spring 12	111427	Washer, Flat 11	150013	Disk, Adjusting 22, 26
74755	Washer, Felt 29	111516	Washer, Flat 30	150026	Lever, Shoe Release 22, 26
76081	Washer, Flat 11	111767	Washer, Flat 27, 30	150029	Wick, Felt 22, 26
76099	Washer, Flat 29	112080	Washer, Flat 2	150040	Screw (6-40 x 5/8 Fil) 31
76275	Plate, Nut 20	112206	Washer, Flat 15	150043	Shoe, Secondary Clutch 22, 26
76298	Spring 12	112626	Nut (10-32 Hex) 5, 6, 13, 14, 16, 19, 29	150044	Shoe, Primary Clutch 22, 26
76379	Spring 19	115122	Washer, Felt 27, 29	150241	Spring 22, 26
76422	Spring 21	115221	Washer, Felt 19	150411	Washer, Flat 15
76450	Shim (.028" Thk) 11	116783	Holder, Fuse 7	150507	Spring 10
76461	Washer, Flat 20, 21, 27	117227	Bearing, Ball 11	150923	Washer, Felt 25
76474	Nut (10-32 Hex) 29	117366	Jumper (8-1/2 Green) 30	150930	Washer, Felt 14
80581	Spring 25	117416	Post 29	150966	Insulator (1-4) 7
80612	Nut (8-32 Hex) 14	117603	Screw, Shoulder (6-40) 8, 10	150976	Bracket, Motor 30, 31
		118510	Fuse (.250 Amp) 7	150990	Washer, Felt 27
		119223	Screw (4-40 x 1-15/32 Fil) 31	150991	Washer, Felt 29
		119401	Washer, Flat 17	151073	Screw (4-40 x 5/32 Fil) 20, 24
		119636EW	Button, Plug 2	151103	Spring 19
		119647	Ring, Retaining 17, 21		
		119648	Ring, Retaining 7, 13, 14, 15, 17, 21, 25, 29		
		119649	Ring, Retaining 13, 17, 19, 24		

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
151152	Screw (4-40 x 3/16 Hex) 7, 9, 10, 11, 14, 16, 17, 21, 28, 29	154138	Washer, Felt 26	156833	Drum Assembly, Clutch 22
151182	Washer, Insulating 28	154178	Spring 25	156901	Post, Eccentric 14
151335	Stud 7	154191	Spring 27	158147	Bushing, Eccentric 12
151346	Screw (6-40 x 3/8 Fil) 31	154215	Spring 27	158268	Latch w/Hub 27
151395	Spring 23	154217	Wick, Leather 25	158757	Hinge, Mounting 24
151415	Block, Terminal 7	154240	Bail, Code Bar 27	158772	Screw (4-40 x 5/8 Hex) 11
151416	Nut (6-40 Hex) 7	154241	Stud 27	159291	Bail 20
151442	Screw (6-40 x 1/2 Hex) 2, 13	154349	Spring 13	159292	Bail 20
151620	Strap, Motor Mounting 31	154392	Post, Eccentric 14	159295	Bracket w/Posts 20
151621	Screw (6-32 x 3/4 Rd) 31	154694	Disk, Clutch Cam 22, 26	159297	Arm, Stop 20
151622	Nut (6-32 Sq) 31	154697	Grommet, Rubber 7	159298	Spring, Torsion 20
151626	Terminal 7, 20, 29	155750	Sleeve, Insulating (3/32 ID x 1/2" Lg) 7	159327	Washer, Flat 27
151629	Nut (6-40 Lug) 13	155755	Sleeve, Insulating (11/64 ID x 5/8 " Lg) 7	159334	Washer, Insulating 27
151630	Screw (6-40 x 1/4 Hex) 3, 6, 7, 11, 15, 16, 19, 20, 24, 29, 30	156057	Washer, Flat 13, 22	159739	Motor, 115V Synchronous 31
151631	Screw (6-40 x 5/16 Hex) 2, 6, 7, 8, 10, 15, 16, 18, 20, 21, 29	156226	Hub 16, 30	159805	Washer, Flat 13
151632	Screw (6-40 x 3/8 Hex) 5, 6, 7, 11, 12, 15, 19, 25, 27, 28, 29	156399	Nut, Shoulder (6-40 Hex) 18, 23	160025	Bracket 19
151637	Screw (4-40 x 1/4 Fil) 14, 26, 31	156450	Screw (2-56 x 1/2 Fil) 20	160067	Wheel, Feed 19
151658	Screw (6-40 x 5/16 Fil) 13	156501	Screw (6-40 x 7/32 Fil) 20	160086	Post, Guide 19
151686	Screw (4-40 x 3/8 Fil) 31	156509	Washer, Flat 25	160087	Post, Spring 21
151692	Screw (6-40 x 3/16 Fil) 19, 31	156516	Latch 25	160088	Bail w/Stud 21
151712	Button, Pivot 16	156518	Post 19	160090	Lever, Transfer 25
151721	Screw (6-40 x 3/4 Hex) 11	156519	Washer, Felt 19	160298	Plate, Mounting 31
151722	Screw (6-40 x 3/16 Hex) 11, 14, 19, 23, 25	156523	Stud, Eccentric 19	160299	Capacitor (226 MFD) 31
151723	Screw (10-32 x 3/8 Hex) 5, 30	156524	Bail 19	160300	Clamp 31
151728	Spring 22, 26	156531	Bracket w/Post 24	160301	Plate, Insulating 31
151733	Screw (4-40 x 9/16 Fil) 23, 29	156532	Core 24	160302	Plate, Nut 31
151737	Screw (4-40 x 11/64 Hex) 20, 22, 26	156533	Screw, Eccentric (4-40) 24	160303	Relay 31
151880	Nut (4-40 Hex) 10, 12, 14, 17	156534	Bail 24	160304	Switch, Thermostatic 31
151926	Nut (4-40 Spl) 31	156537	Armature 24	160305	Rotor, Motor 31
151927	Cable w/Terminals 31	156539	Washer, Felt 24	160306	Stator, Motor 31
152297	Washer, Bearing 31	156551	Guide, Right 17	160398	Spring, Contact 23
152871	Spring 24	156555	Plunger, Tape Lid 17	160399	Spring, Contact 23
152893	Screw (4-40 x 1/4 Hex) 7, 8, 17, 18, 19, 23, 24	156556	Bracket 17, 18	160593	Terminal 23
153030	Mount, Vibration 31	156558	Washer, Felt 17	160596	Spring 20
153049	Washer, Insulating 31	156575	Screw, Eccentric Shoulder (6-40) 21	160602	Arm 21
153267	Washer, Felt 15, 29	156577	Roller, Detent Lever 21	160604	Post 21
153442	Screw (10-32 x 1/2 Hex) 5, 15, 30	156581	Stud 23	160606	Arm w/Spring Post 21
153537	Screw (6-40 x 9/32 Hex) 8, 11, 13, 14, 18, 23	156588	Ring, Retaining 23	160608	Bracket, Contact 23
153538	Screw (6-40 x 7/16 Hex) 20, 23, 29, 30	156589	Post, Spring 23	160613	Arm w/Hub 21
153799	Screw (4-40 x 21/64 Hex) 15	156591	Washer, Felt 23	160625	Clip w/Wick 20
153817	Screw (4-40 x 3/8 Hex) 28	156594	Lever, Trip 23	160626	Insulator (.031" Thk) 20
153841	Screw (6-40 x 9/16 Hex) 20, 29	156595	Lever, Latch 23	160627	Bushing, Insulating 20
154010	Bail, Transfer 25	156596	Bail 23	160628	Spring, Contact 20
154015	Post 27, 29	156597	Plate, Rear 21, 23, 24	160629	Bracket, Contact 20
154033	Lever, Clutch Latch 29	156618	Post 19	160630	Spring, Contact 20
154034	Lever, Clutch Stop 29	156621	Guide, Transfer Lever 19	160631	Spring, Contact 20
154036	Plate, Detent 25	156622	Post 21	160632	Contact Assembly 20
154041	Post, Stop 25	156630	Washer, Felt 25	160638	Bracket, Spring 20
154046	Stud 29	156631	Washer, Felt 19	160639	Contact Assembly 23
154047	Post, Spring 25	156632	Screw (6-40 x 13/32 Hex) 8, 15, 16, 22, 24	160949	Spring 7
154053	Bail, Clutch Trip 29	156633	Washer, Felt 23	161346	Washer, Felt 25
154056	Bracket, Contact Box 28	156640	Post 19	161440	Spring 17
154084	Bearing, Needle 27	156641	Pin, Sensing 19	163699	Spring 8
154095	Eccentric, Contact Box 28	156647	Lever, Start-Stop 17	163991	Shaft 17
154105	Post, Transfer Bail 25	156662	Plate 24	163992	Arm Extension 20
154127	Nut (6-40 Hex) 27	156668	Screw (6-40 Spl) 21	163995	Plate 17
		156673	Bail w/Stud 17	163997	Bail 17
		156677	Plate, Insulator 24	163998	Bail 21
		156740	Screw (6-40 x 7/32 Hex) 8, 13, 19, 21, 29	163999	Plate, Tape Guide 17
		156811	Guide, Left 17	164000	Pin, Tape Out 19
		156817	Shaft 24	164467	Post, Eccentric 17
		156831	Clamp 20	164468	Bail 17
				164469	Post 17
				164470	Bracket w/Stud 17
				164471	Bracket w/Studs 17
				170003	Post, Anchor 14
				170276	Plate, Cover 18

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
170277	Lid, Tape 17	302049	Bracket 29	302131	Shaft 15
170282	Nut (6-40 Hex) 10, 19	302050	Lever 29	302134	Shim (.005 Thk) 13
170386	Guide, Transfer Lever 25	302051	Shaft 29	302136	Bracket 13
170388	Post, Guide 25	302052	Mounting Assembly, Motor 1, 30, 31	302137	Post, Spring 13
170390	Bail, Locking 25	302053	Bracket, Motor Mounting 30	302138	Pawl 13
170391	Guide, Transfer Lever 25	302054	Plate, Nut 30	302139	Latch 13
171259	Spring 7, 13	302055	Screw, Shoulder (10-32) 30	302140	Shaft 13
171291	Screw, Eccentric (4-40) 14	302056	Screw, Eccentric Shoulder (10-32) 30	302141	Roller 13
172632	Screw (4-40 x 3/16 Hex) 22			302142	Screw (6-40 Spl) 13
172638	Screw (6-40 x 9/32 Hex) 15	302057	Bracket, Gear Mounting 30	302143	Latch 13
172885	Arm, Cam Follower 19	302058	Gear (50T) 30	302144	Hub 13
173096	Stud, Eccentric 27	302059	Gear (48T) 30	302145	Shaft 13
173171	Plate w/Stud 20	302060	Shaft 30	302146	Bushing 13
173974	Screw (10-32 x 5/16 Hex) 13, 14	302061	Pinion (8T) 30	302147	Spacer (.065 Thk) 13
		302063	Lever, Transfer 19	302149	Bushing 21
174221	Washer, Spring 16	302064	Gear Assembly, Intermediate 1, 16	302150	Bushing 19
176354	Sleeve 25	302065	Bracket w/Bearing 16	302152	Post, Stop 19
176978	Nut (3/8-24 Hex) 2	302066	Shaft 16	302153	Post, Pivot 19
177366	Cable Assembly 30	302067	Gear (50T) 16	302154	Extension, Blocking Code Bar 7
178535	Network, Spark Suppression 24	302069	Spacer 16	302155	Extension, Code Bar 7
178714	Switch, Rocker Type 29	302070	Gear (50T) 16	302157	Bracket, Mounting 7
178871	Sleeve, Insulating (7/16 x 1-1/8" Lg) 7	302071	Clamp, Bearing 11, 16	302158	Bracket, Guide 7
		302072	Plate, Adjusting 16	302159	Post, Guide 7
179189	Screw, Eccentric Shoulder (6-40) 19	302073	Gear (16T) 15	302161	Extension, Code Bar 7
179639	Contact Assembly 28	302075	Plate 8, 10, 11, 14	302162	Extension, Clutch Trip Code Bar 7
179643	Network, Filter 28	302076	Guide, Code Bar 13, 14		
179749	Connector, Receptacle (5 Pt) 7	302077	Plate, Guide 13, 14	302163	Extension, Figures Blocking Code Bar 7
180922	Spring 13	302078	Comb 8		
181243	Screw w/Lockwasher (6-40 x 3/16) 3	302079	Bracket, Spring 8	302164	Hub 15
		302080	Post, Guide 14	302165	Spacer (.020" Thk) 11
182510	Cable Assembly 7	302082	Post 14	302166	Bushing 11
192534	Post, Locking Bail 25	302083	Post, Guide 10	302167	Bushing 11
192604	Stud 27	302084	Post, Guide 10	302168	Lever 14
192649	Post, Spring 27	302085	Spacer 10	302169	Bracket 19
194048	Screw (4-40 Spl) 28	302086	Plate, Latch 10	302170	Bracket, Bearing 15
194901	Screw (4-40 Spl) 28	302087	Pin, Spring 10	302171	Arm w/Posts 7
195187	Screw (4-40 x 1-1/2 Hex) 28	302088	Pin, Reaction 10	302176	Roller 7
195648	Jumper (1-3/4" Green) 28	302089	Comb 8, 10	302177	Plate, Nut 15
195651	Box, Contact 28	302090	Plate, Mounting 10	302179	Bracket 13
195652	Cover, Contact Box 28	302091	Bail 14	302180	Shaft 13
199070	Box Assembly, Contact 1, 28	302092	Post, Pivot 14	302182	Screw, Shoulder (6-40) 13, 14
199193	Bushing 28	302093	Plate 8, 10, 11, 13	302183	Plate, Clamp 11
199196	Link 28	302094	Bar, Tie 8	302184	Plate, Clamp 11
302004	Plate, Rear 27	302095	Bracket 8	302185	Plate, Guide 13, 14
302005	Post 27, 29	302096	Bar, Blocking 10	302186	Plate, Guide 13, 14
302006	Lever 27	302101	Bail 12	302187	Bracket 14
302007	Bracket 27	302104	Bar, Lower Function 8	302188	Guide, Code Bar 14
302009	Shaft 26, 29	302105	Bar, Upper Function 8	302189	Arm, Left 12
302010	Drum, Clutch 26	302106	Bar, Slide 8, 11	302190	Arm, Right 12
302012	Gear (50T) 22, 26	302107	Bar, Slide 8, 11	302192	Lever 19
302014	Bracket, Rear 29	302108	Rod, Tie 8	302195	Bail w/Bushing 19
302015	Bracket, Front 29	302110	Post, Spring 14	302196	Lever w/Bushing, Upper 12
302018	Plate, Front 19, 20	302113	Block, Bearing Clamp 15	302197	Lever w/Bushing, Lower 12
302020	Pawl w/Post 19	302115	Latch 14	302198	Plate 19
302022	Stud, Eccentric 19	302116	Cleat 8	302199	Plate, Stop 9
302023	Lever, Transfer 19	302117	Rod, Tie 10	302201	Bar, Code (#1) 9
302029	Arm w/Post 21	302118	Plate, Stop 27	302202	Bar, Code (#2) 9
302032	Bearing 21	302119	Plate, Nut 8	302203	Bar, Code (#3) 9
302035	Plate, Center 21	302120	Bracket 8	302204	Bar, Code (#4) 9
302037	Camshaft 22	302121	Lever 15	302205	Bar, Code (#5) 9
302038	Gear (8T) 22	302122	Link 14	302206	Bar, Code (#6) 9
302039	Key 22	302123	Screw, Shoulder (10-32) 30	302207	Bar, Code (#7) 9
302042	Lever w/Bushing 19	302124	Cleat, Front 7	302208	Bar, Blocking 9
302045	Bracket 20	302126	Bracket 7	302209	Bar, Figures Blocking 9
302046	Bracket, Spring 20, 23	302127	Bracket 7	302211	Bar, Code (#1) 9
302047	Bracket, Right 23	302129	Post 15	302212	Bar, Code (#2) 9
302048	Bracket, w/Fastener 20	302130	Arm, Follower 14	302213	Bar, Code (#3) 9

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
302214	Bar, Code (#4) 9	302268	Bail, Adjusting 21	302344	Bracket, Cable 2
302215	Bar, Code (#5) 9	302269	Follower, Cam 12	302345	Strip, Cover 3
302216	Bar, Code (Universal) 9	302270	Coupling, Flexible 15	302346	Strip, Cover 3
302217	Lever 12	302272	Post, Spring 14	302347	Pad, Cover 4
302218	Lever 12	302273	Bracket, Stop 13	302348	Pad, Cover 4
302219	Post, Guide 7	302275	Cable Assembly 7	302349	Pad, Cover 4
302221	Bracket w/Post 15	302276	Cable w/Terminals 20	302350	Pad, Cover 4
302222	Lever, Blocking 11	302277	Cable w/Terminals 29	302351EW	Plate, Right Dust 3
302223	Post, Latch 14	302278	Cable w/Terminals 7	302352	Spring 8
302224	Lever, Restoring 14	302279	Bracket, Switch 29	302353	Pad, Cover 4
302225	Lever, Trip 14	302280	Plate, Nut 29	302354	Pad, Top Cover 4
302226	Lever, Latch 11	302282	Screw, Shoulder (6-40) 21	302355EW	Pedestal Assembly 2
302227	Bar, Power 14	302284	Bracket, Left 6	302356	Pad, Pedestal 2
302228	Stop 14	302285	Bracket, Right 6	302357	Pad, Pedestal 2
302229	Post, Eccentric 13	302286	Bracket 6	302358	Pad, Pedestal 2
302230	Bracket, Terminal Block 7	302288	Spring 20	302359EW	Panel w/Pad 2
302231	Bracket, Fuse Mounting 7	302289	Spring 20	302362	Bracket, Bail Stop 10, 11
302232	Nut (10-32 Hex) 12	302290	Screw, Eccentric (6-40) 14	302363	Plate, Front 25, 29
302233	Lever, Transfer (Marking) 19	302291	Screw, Shoulder (6-40) 14	302364	Camsleeve 26
302234	Base 15	302292	Channel, Left Mounting 5, 6	302365	Bracket, Mounting 29
302235	Plate, Main 6, 7, 15	302293	Bracket 6	302366	Link, Cam 29
302236	Bail, Restoring 10, 14	302294	Angle, Mounting 5	302369	Screw, Shoulder (10-32) 29
302237	Cam, Function Bar 12	302295	Channel, Right Mounting 5	302370	Spacer 29
302238	Cam, Control Lever 11	302302EW	Pan w/Brackets 5	302371	Follower, Cam 29
302239	Cam, Left 12	302303EW	Cover 3	302372	Plate, Guide 29
302240	Cam, Right 12	302306	Plate, Clamp 11	302373	Bushing, Roller 29
302241	Shaft 11, 12	302307	Plate, Nut 11	302374	Roller 29
302242	Brace 7	302308	Clamp, Wick 11	302375	Spacer (.115" Thk) 29
302243	Bail, Function 10	302311	Bracket w/Wick 8	302376	Spacer (.118" Thk) 29
302244	Bail 10	302312	Wick, Felt 11	302377	Spacer 26
302245	Link 14	302313	Nut (6-40 Hex) 21	302378	Post 25, 29
302246	Cam, Reaction 12	302314	Bracket, Spring 7	302379	Bracket, Spring 25
302247	Roller w/Bushing 13	302315	Screw, Shoulder (6-40) 14	302381	Post, Spring 25
302248	Cam, Retractor Reset 11	302321	Insert 2	302382	Bracket, Spring 20
302249	Lever, Reset 13	302323	Foot, Leveling 2	302383	Shim (.010" Thk) 7
302250	Stud 13	302324EW	Pedestal 2	302384	Shim (.006" Thk) 7
302252	Bracket, Spring 13	302326	Plate, Cover 2	302385	Post, Spring 7
302253	Bushing 12	302328	Cover w/Pad 5	302387	Nut (4-40 Spl) 14
302254	Shaft, Cam Mounting 11, 12	302329	Cover Assembly 3, 4	302389	Roller 13
302255	Lever 13	302330	Mount, Vibration 5	302390	Spacer 13
302256	Bar, Blocking 10	302331	Bracket, Mounting 20	302391	Post, Guide 13
302257	Shaft, Spring 20	302332	Bracket, Mounting 18	302392	Post, Stop 13
302258	Bushing, Eccentric 20	302333	Bracket, Mounting 18	302393	Post, Roller 13
302259	Bail 20	302334	Bracket, Mounting 23	302394	Finger, Retarding 13
302261	Bail 20	302335	Plate w/Studs 18	302395	Plate, Mounting (Right) 13
302262	Bushing 20	302336	Plate 18	302396	Plate, Mounting (Left) 13
302263	Bushing 20	302338	Strip, Cover 18	302397	Shim 13
302264	Post, Pivot 20	302339EW	Cover, Right 3	302398	Plate, Spring 13
302265	Screw, Shoulder (6-40) 10	302340EW	Cover, Left 3	302399	Comb 8
302266	Latch 19	302342EW	Plate, Left Dust 3	311119	Mount, Vibration 5
302267	Screw, Shoulder (6-40) 16	302343EW	Plate, Dust 29		