

35 MULTIMAGNET NONTYPING REPERFORATOR

For information on the 35 multimagnet nontyping reperforator, refer to the following sections:

573-108-100	28 and 35 Multimagnet Nontyping Reperforator Set Description
573-120-100	28 and 35 Multimagnet Nontyping Reperforator Description and Principles of Operation
573-120-400	28 Multimagnet Nontyping Reperforator Wiring Diagrams
573-120-700	28 and 35 Multimagnet Nontyping Reperforator Adjustments
573-120-701	28 and 35 Multimagnet Nontyping Reperforator Lubrication
573-120-702	28 and 35 Multimagnet Nontyping Reperforator Disassembly and Reassembly
573-120-800	28 and 35 Multimagnet Nontyping Reperforator (LARP) - Parts
573-144-100	28 and 35 Multimagnet Nontyping Reperforator Base Description and Principles of Operation
573-144-700	28 and 35 Multimagnet Nontyping Reperforator Base Adjustments
573-144-701	28 and 35 Multimagnet Nontyping Reperforator Base Lubrication
573-144-800	28 and 35 Multimagnet Nontyping Reperforator Base (LARB) - Parts
573-144-801	28 and 35 Multimagnet Nontyping Reperforator Cover (LARC) - Parts