

35 EDGE-PUNCHED CARD REPERFORATOR (LEPR)

PARTS

FIGURE	CONTENTS	PAGE	FIGURE	CONTENTS	PAGE
1	Left and Right Top Plates	2	15	Rotary Positioning Mechanism	16
2	Front Plate	3	16	Rotary Positioning Mechanism (Continued)	17
3	Center Plate	4	17	Axial Positioning Mechanism	18
4	Center Plate (Continued)	5	18	Function Box Mechanism	19
5	Frame	6	19	Burster Magnet and Rapid Feed Shaft	20
6	Punch Block and Chad Chute	7	20	Burster Clutch Trip Mechanism	21
7	Punch Bail Mechanism	8	21	332960 Contact Assembly	22
8	Range Finder Mechanism	9	22	Ribbon Feed Mechanism	23
9	Selecting Mechanism	10	23	Transfer Mechanism	24
10	Selecting Magnet Mechanism	11	24	Typing Mechanism	25
11	Rear Plate	12	25	Print Suppression Mechanism	26
12	Rocker Bail Mechanism	13	26	Multiple Mounted Function Blade Operated Contacts	27
13	Function and Burster Clutches	14		Numerical Index	28
14	Selector Clutch	15			

Teletype Code	Bell System Code
LEPR800	IA CARD REPERFORATOR
7835	61418 BLACK RIBBON W/SPOOL

The part identification information contained in the following change notices have been incorporated in this issue:	
TCN,s	#1065,#1094,#1209,#1397

NOTE: When ordering parts from this section prefix each number with the letters TP

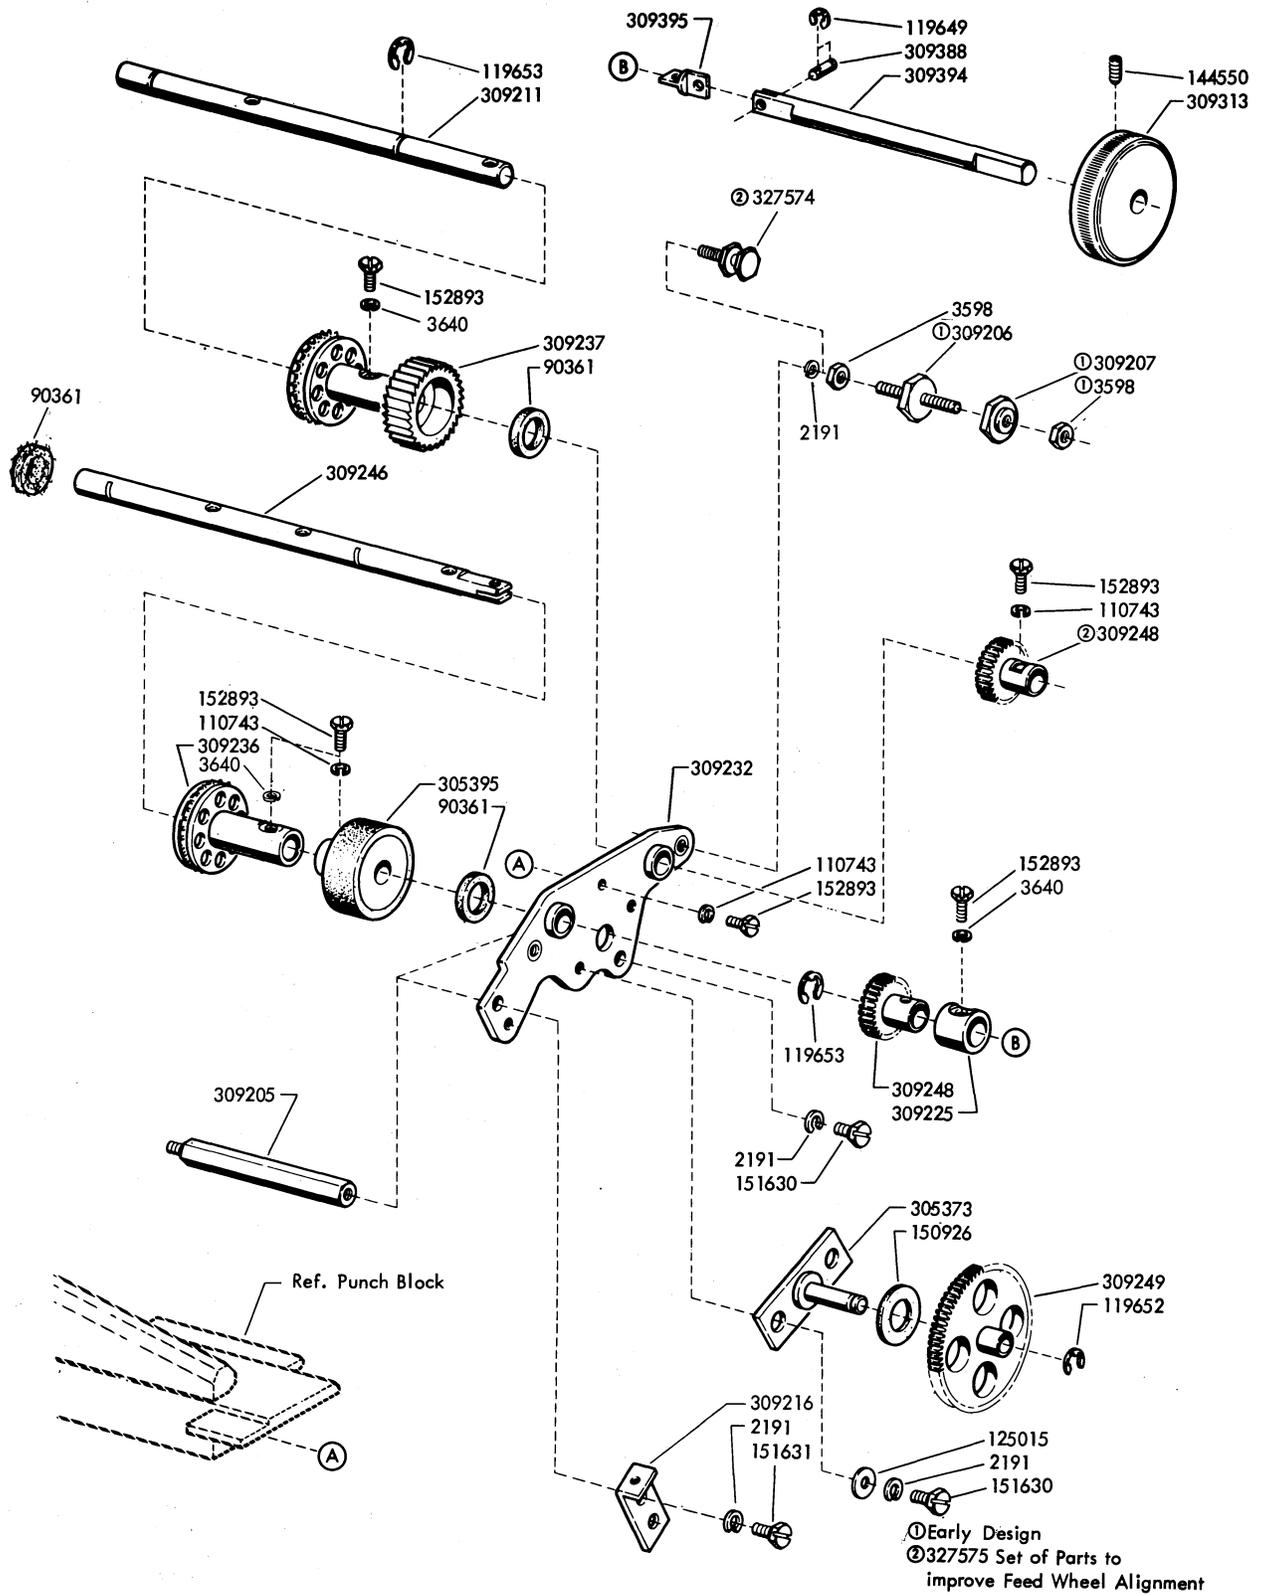


FIGURE 2. FRONT PLATE

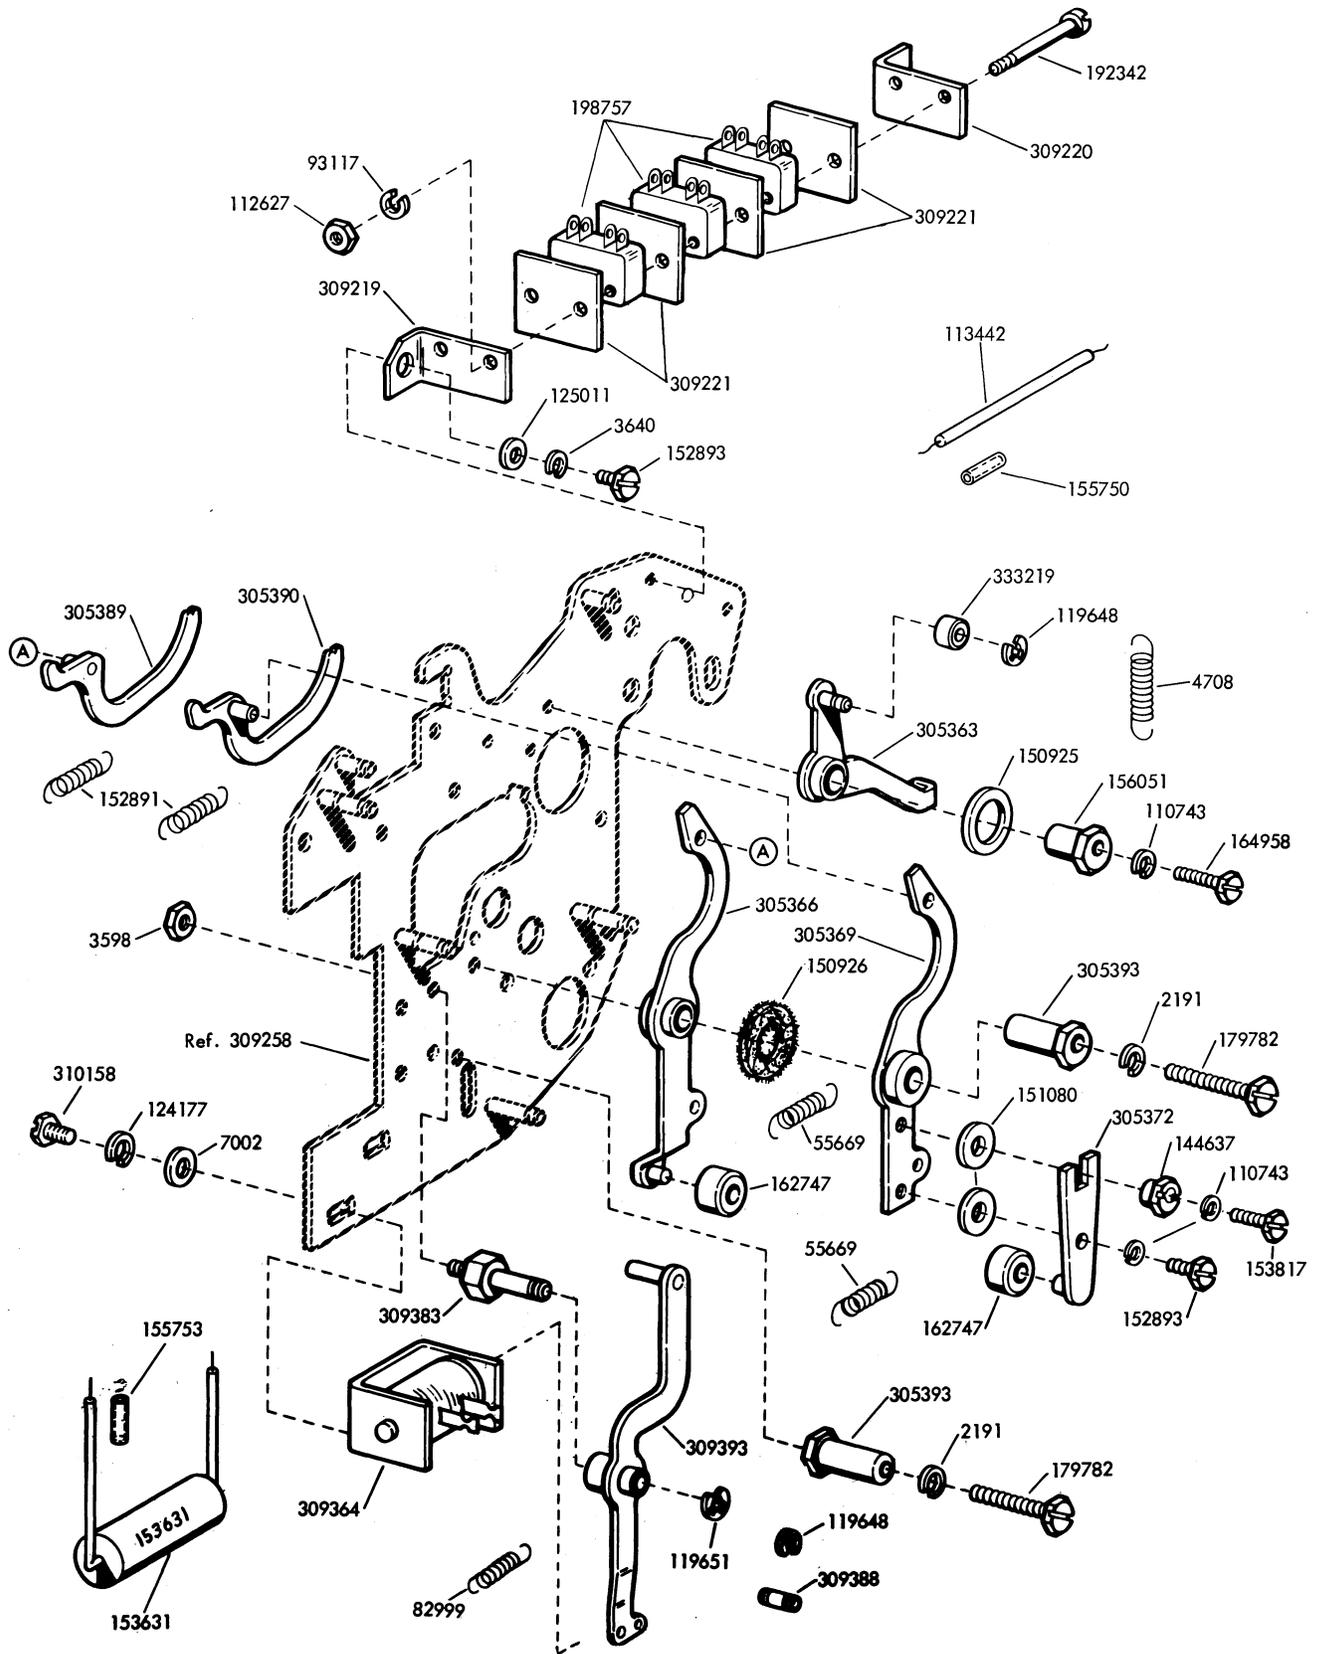


FIGURE 4. CENTER PLATE (Continued)

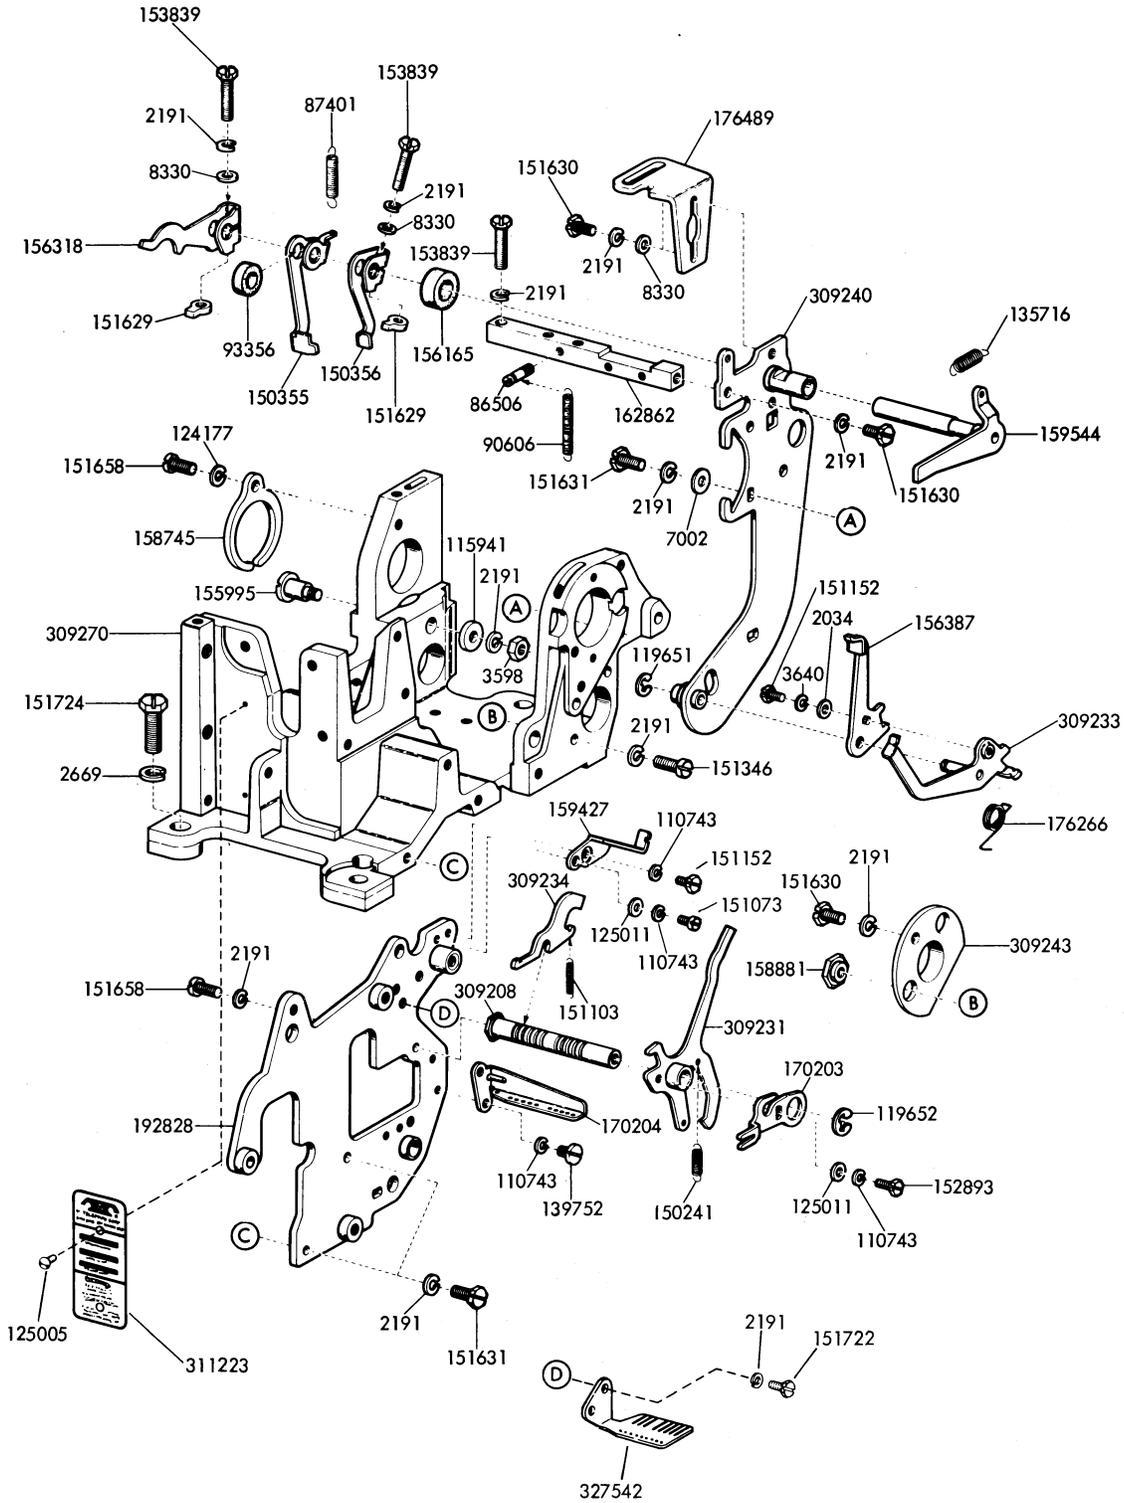


FIGURE 5. FRAME

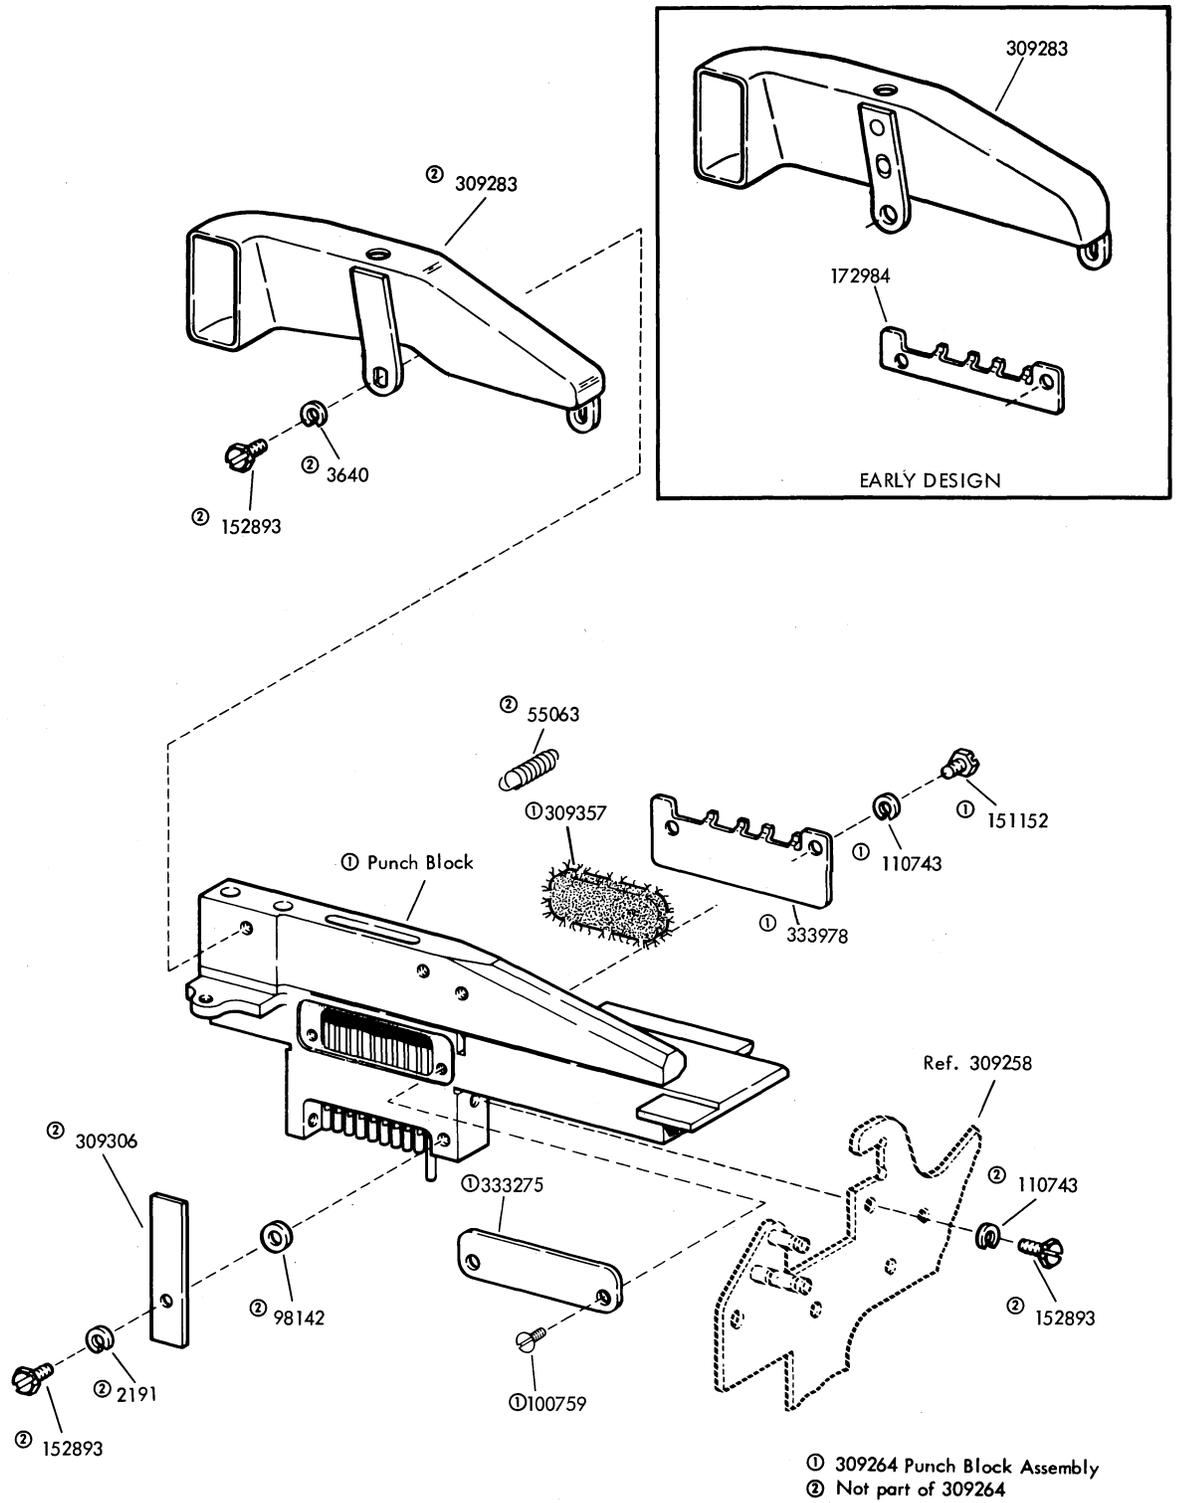


FIGURE 6. PUNCH BLOCK AND CHAD CHUTE

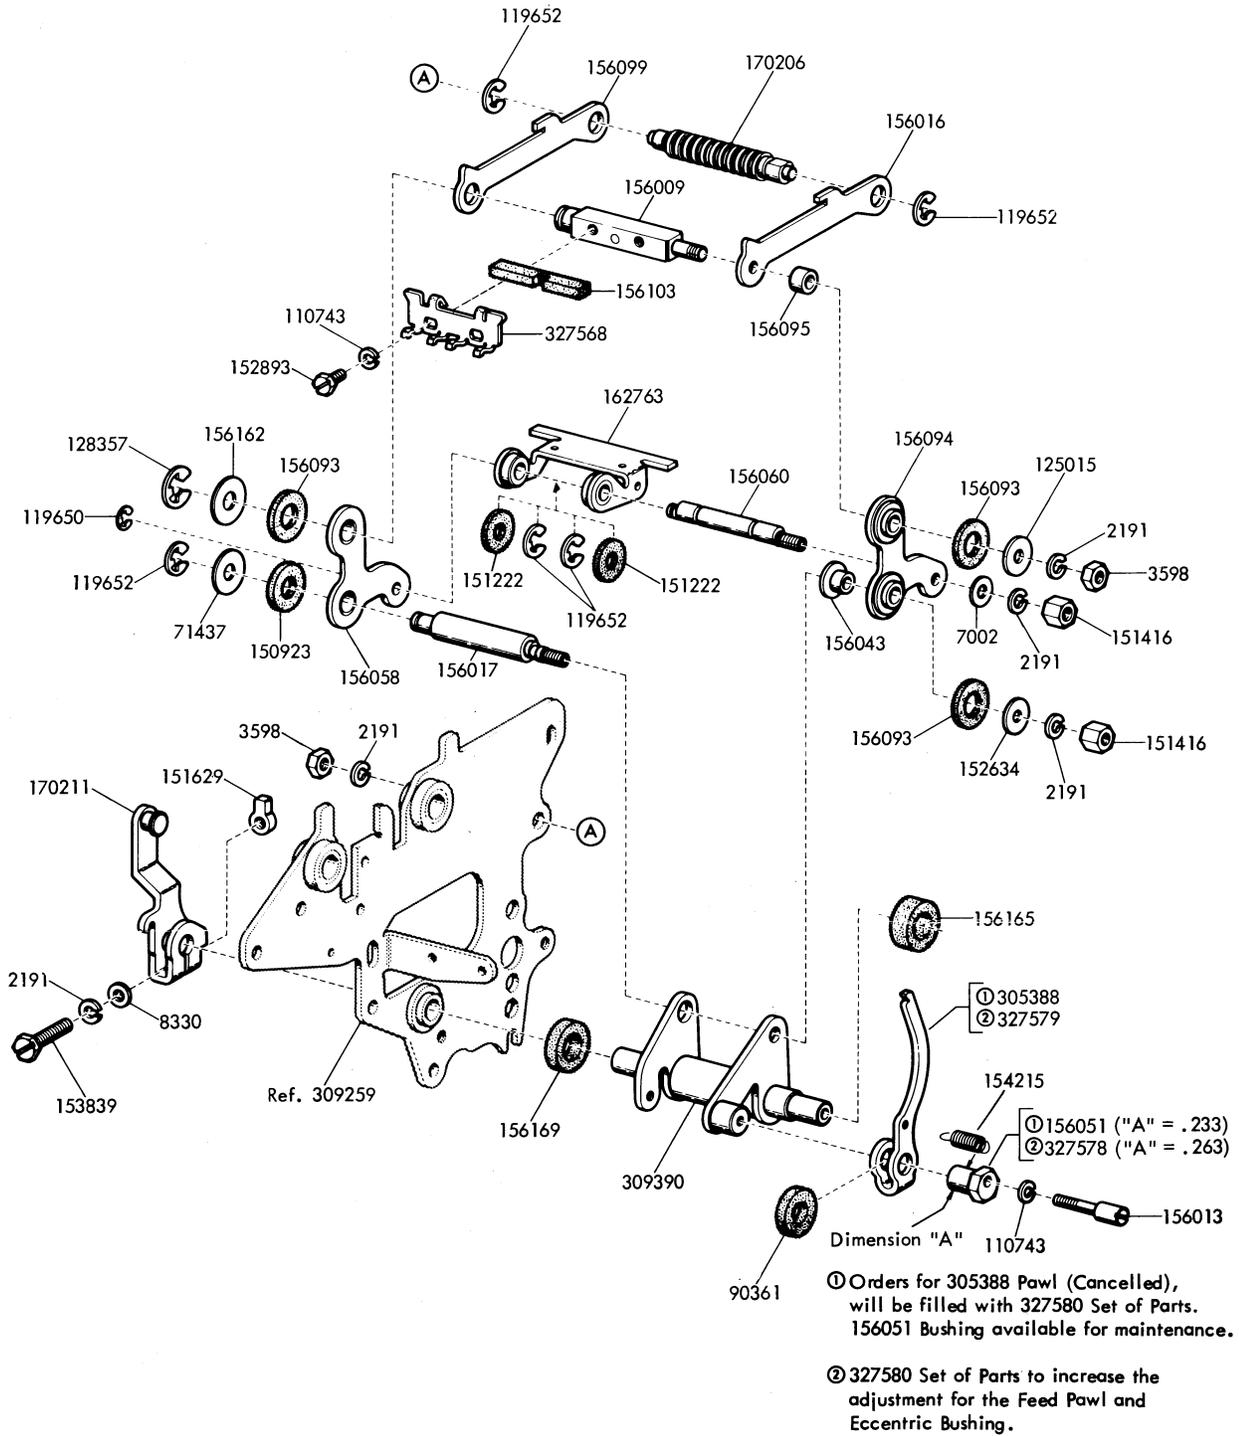


FIGURE 7. PUNCH BAIL MECHANISM

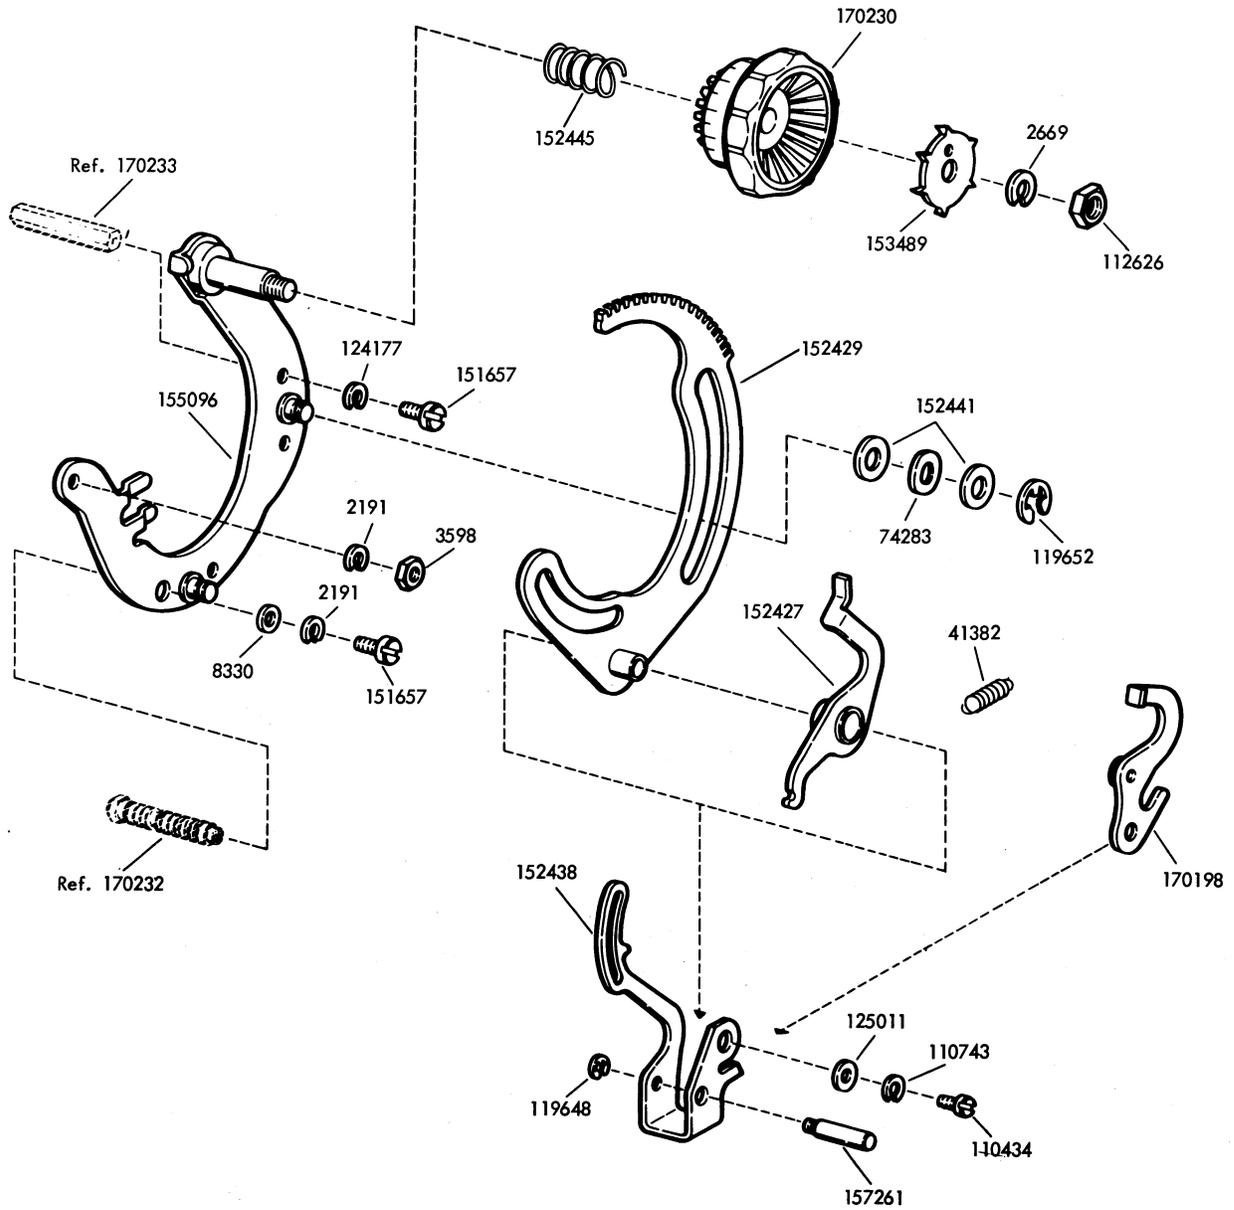


FIGURE 8. RANGE FINDER MECHANISM

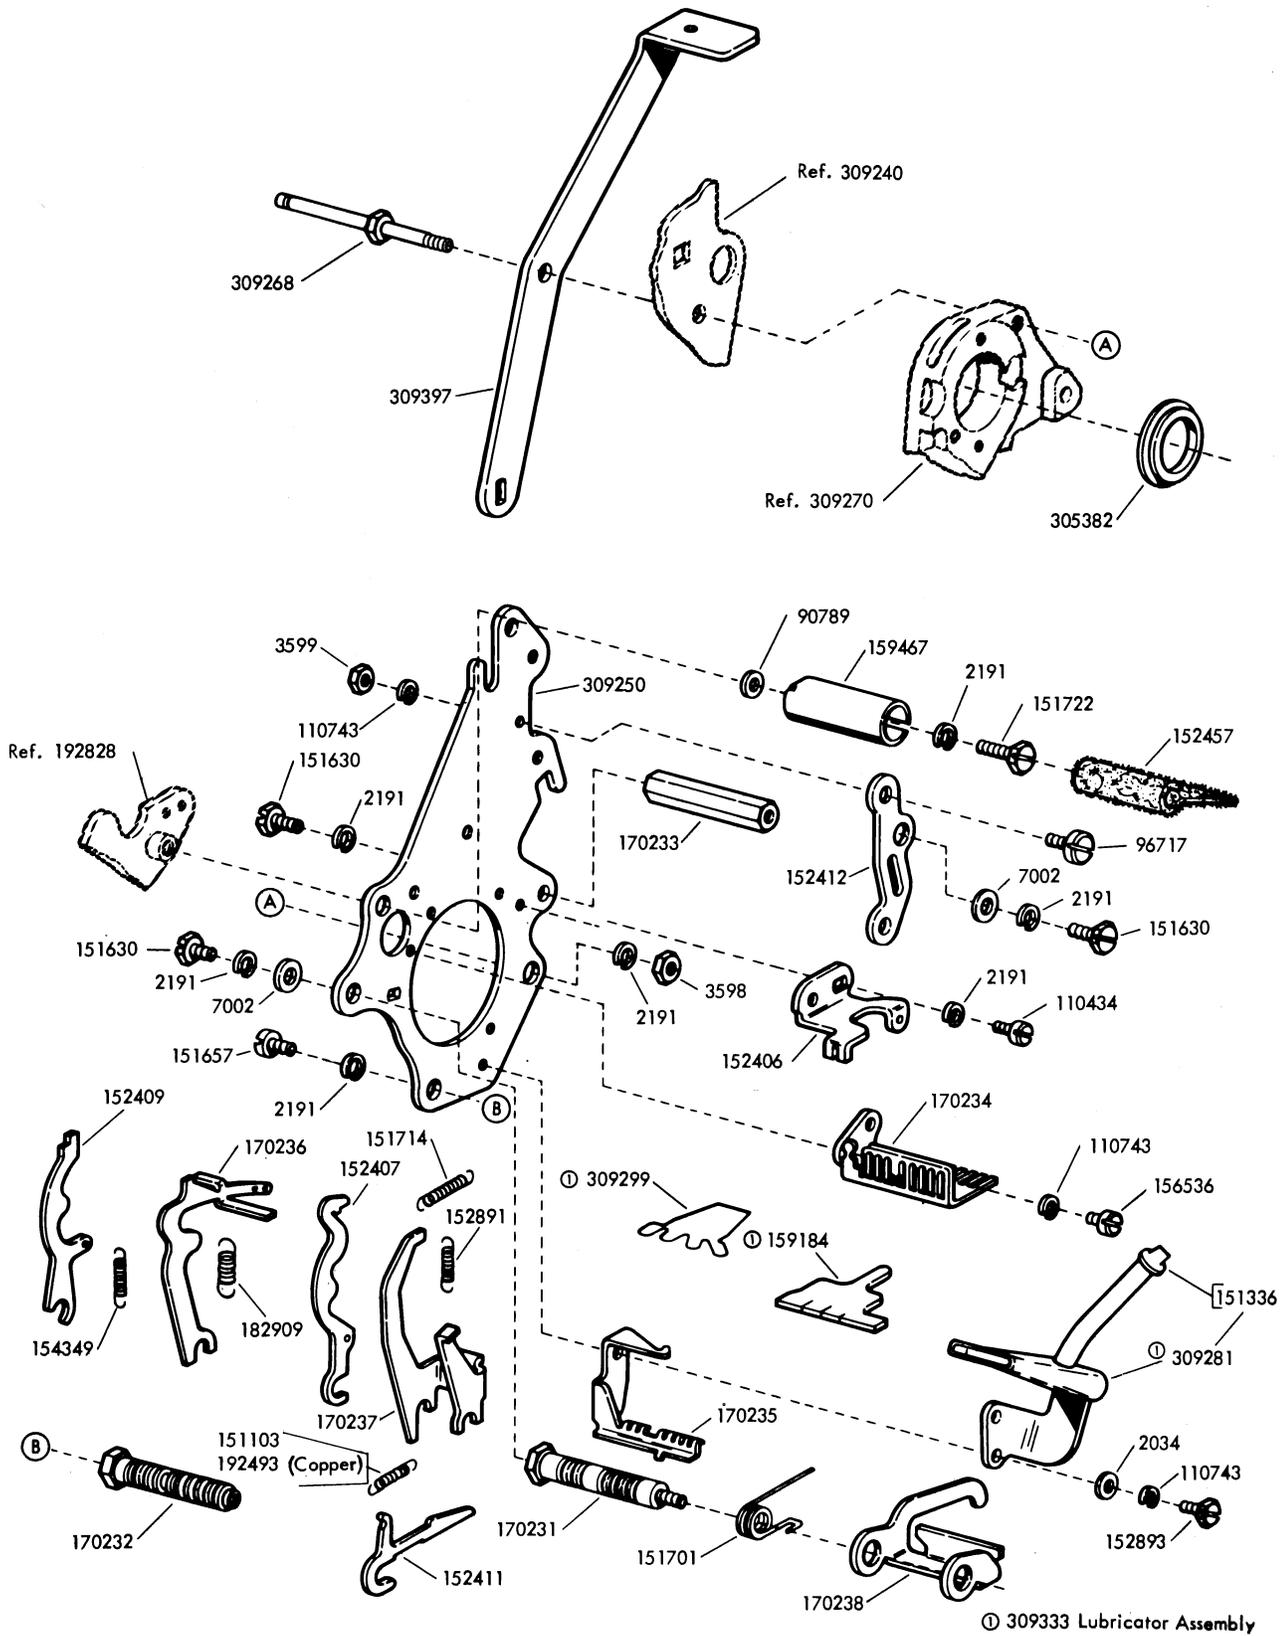


FIGURE 9. SELECTING MECHANISM

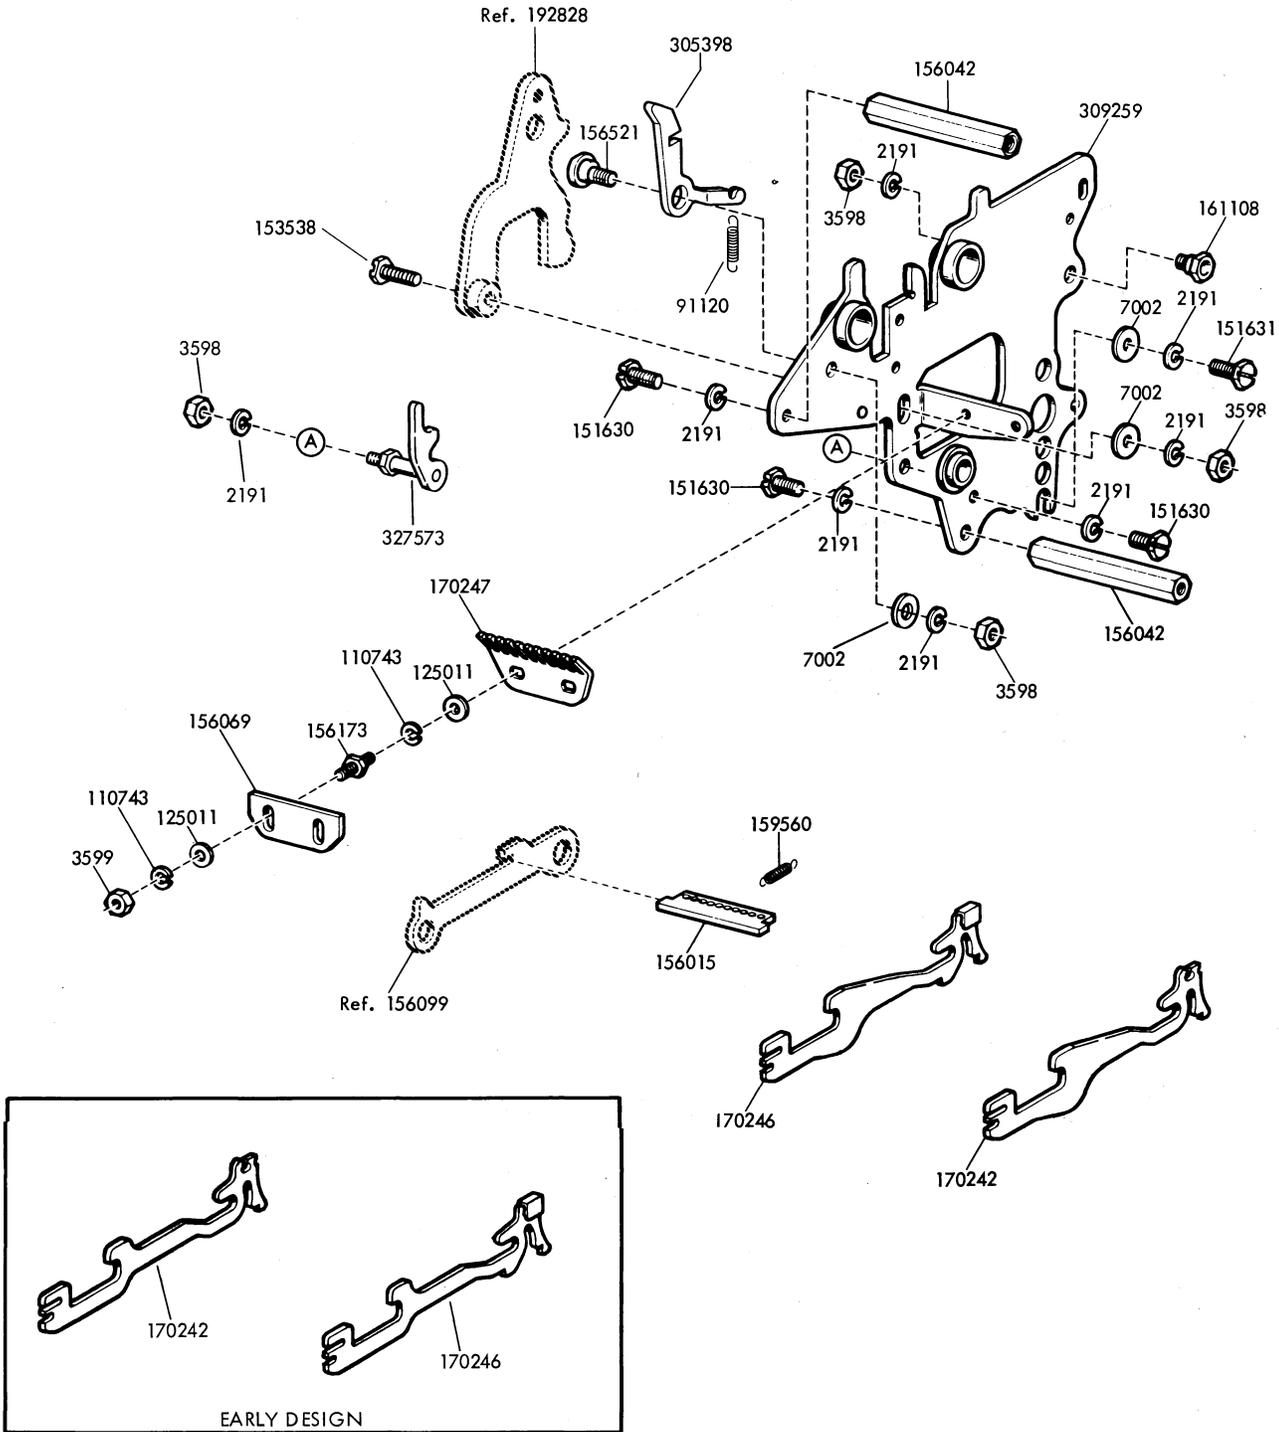


FIGURE 11. REAR PLATE

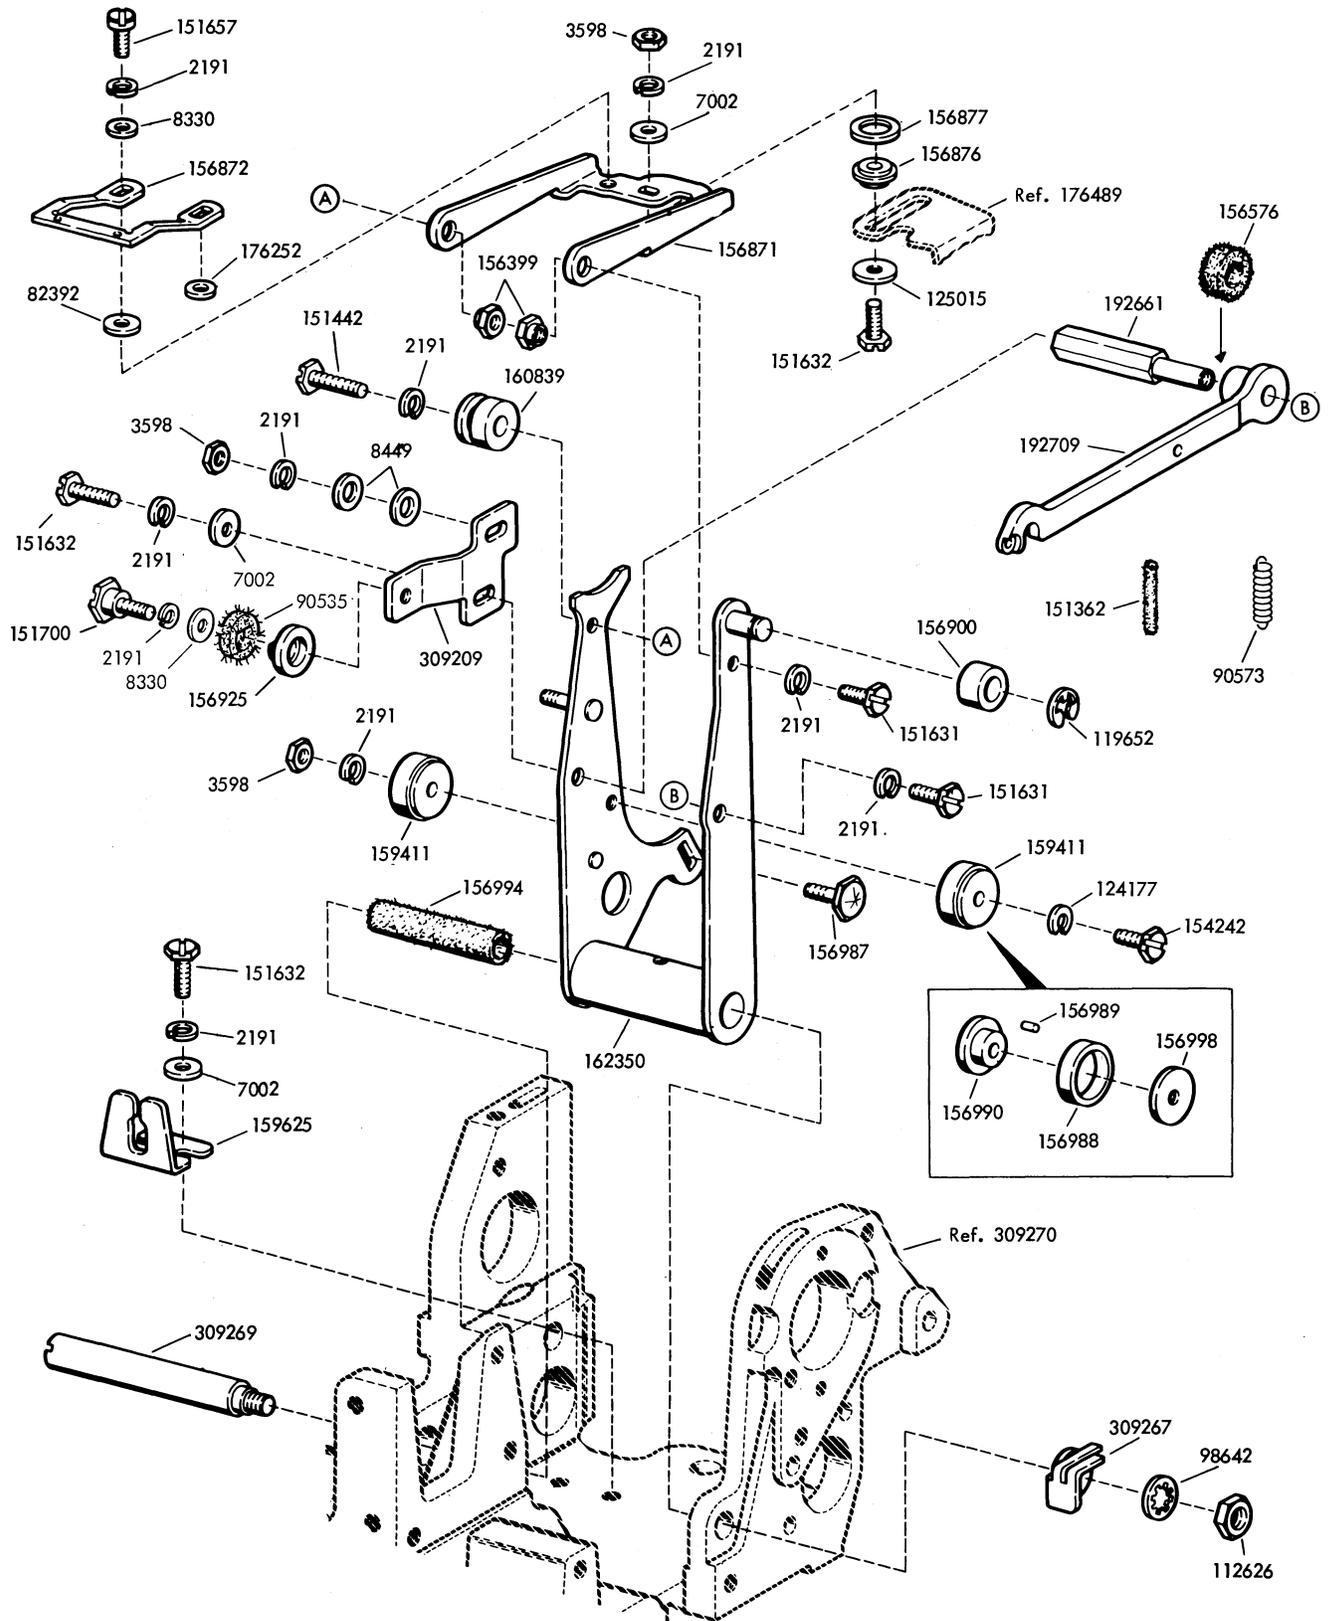


FIGURE 12. ROCKER BAIL MECHANISM.

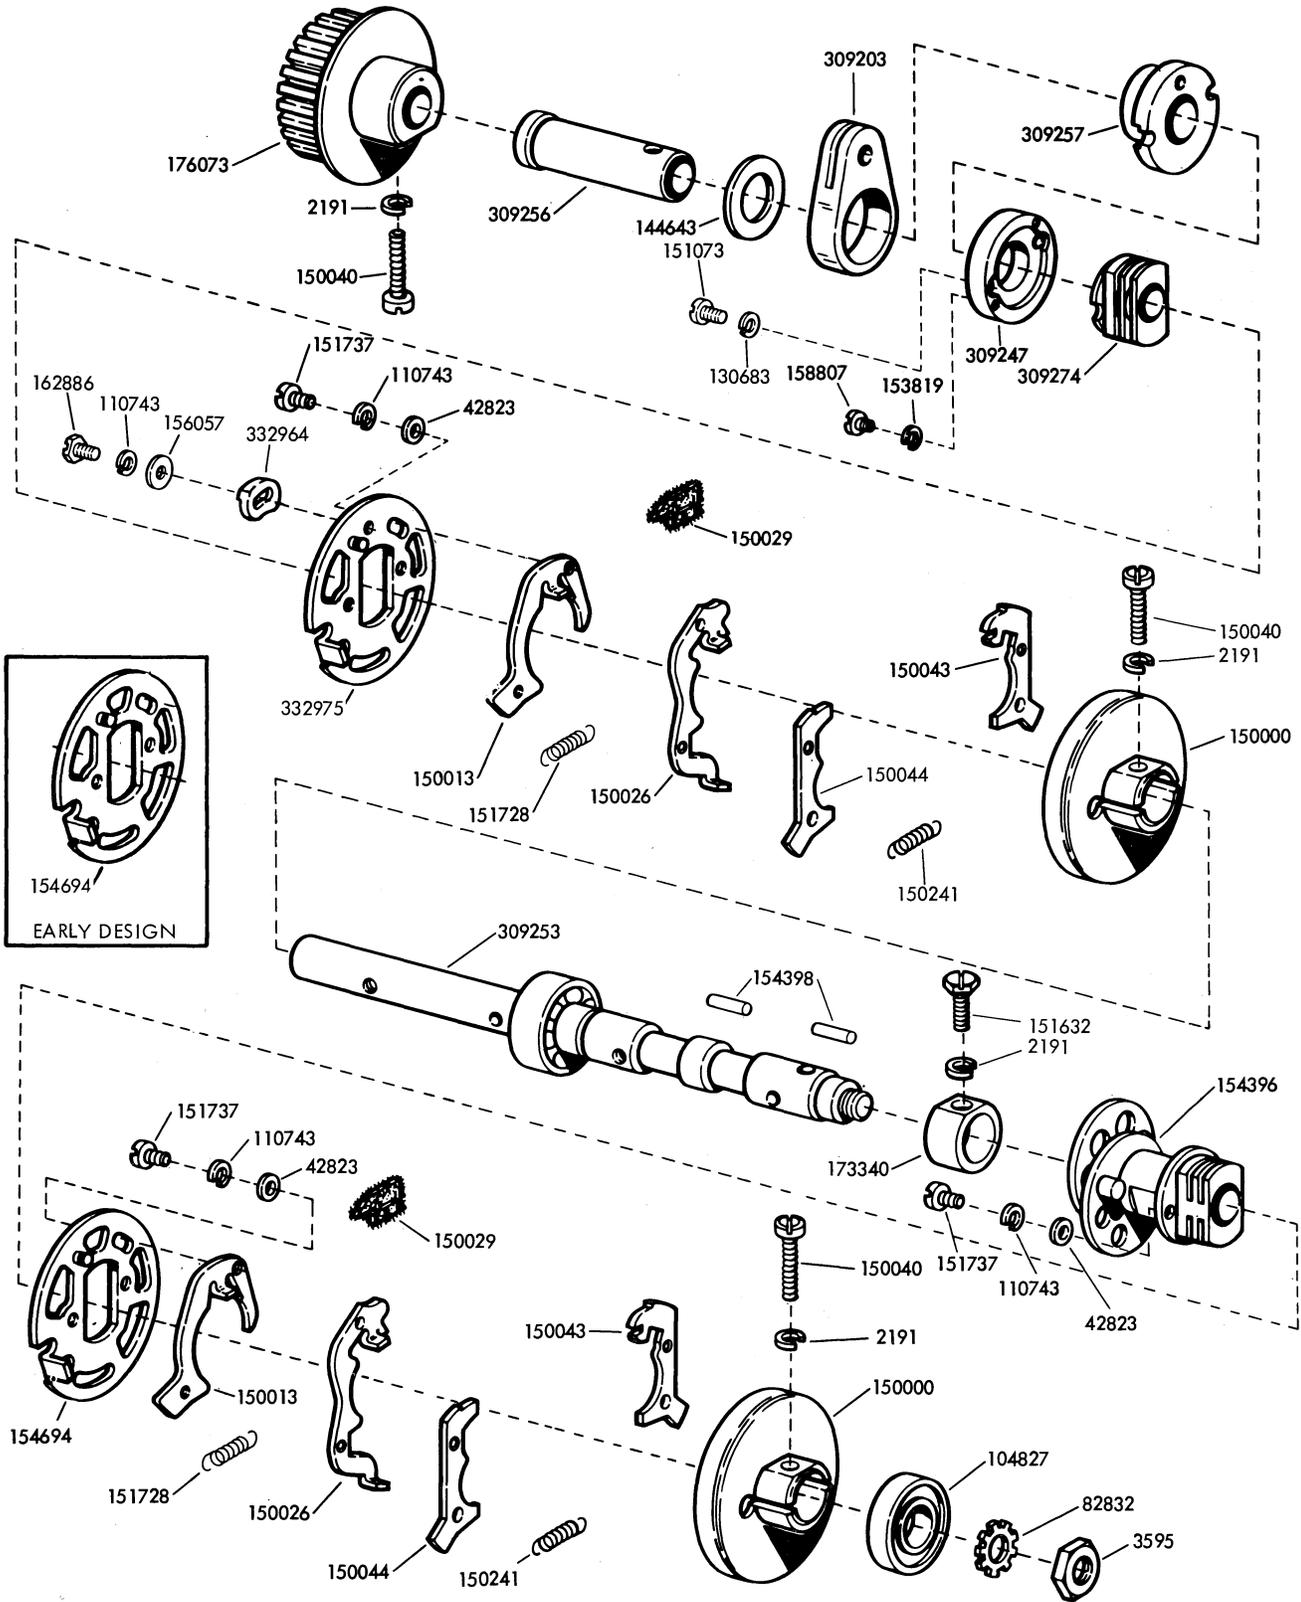


FIGURE 13. FUNCTION AND BURSTER CLUTCHES

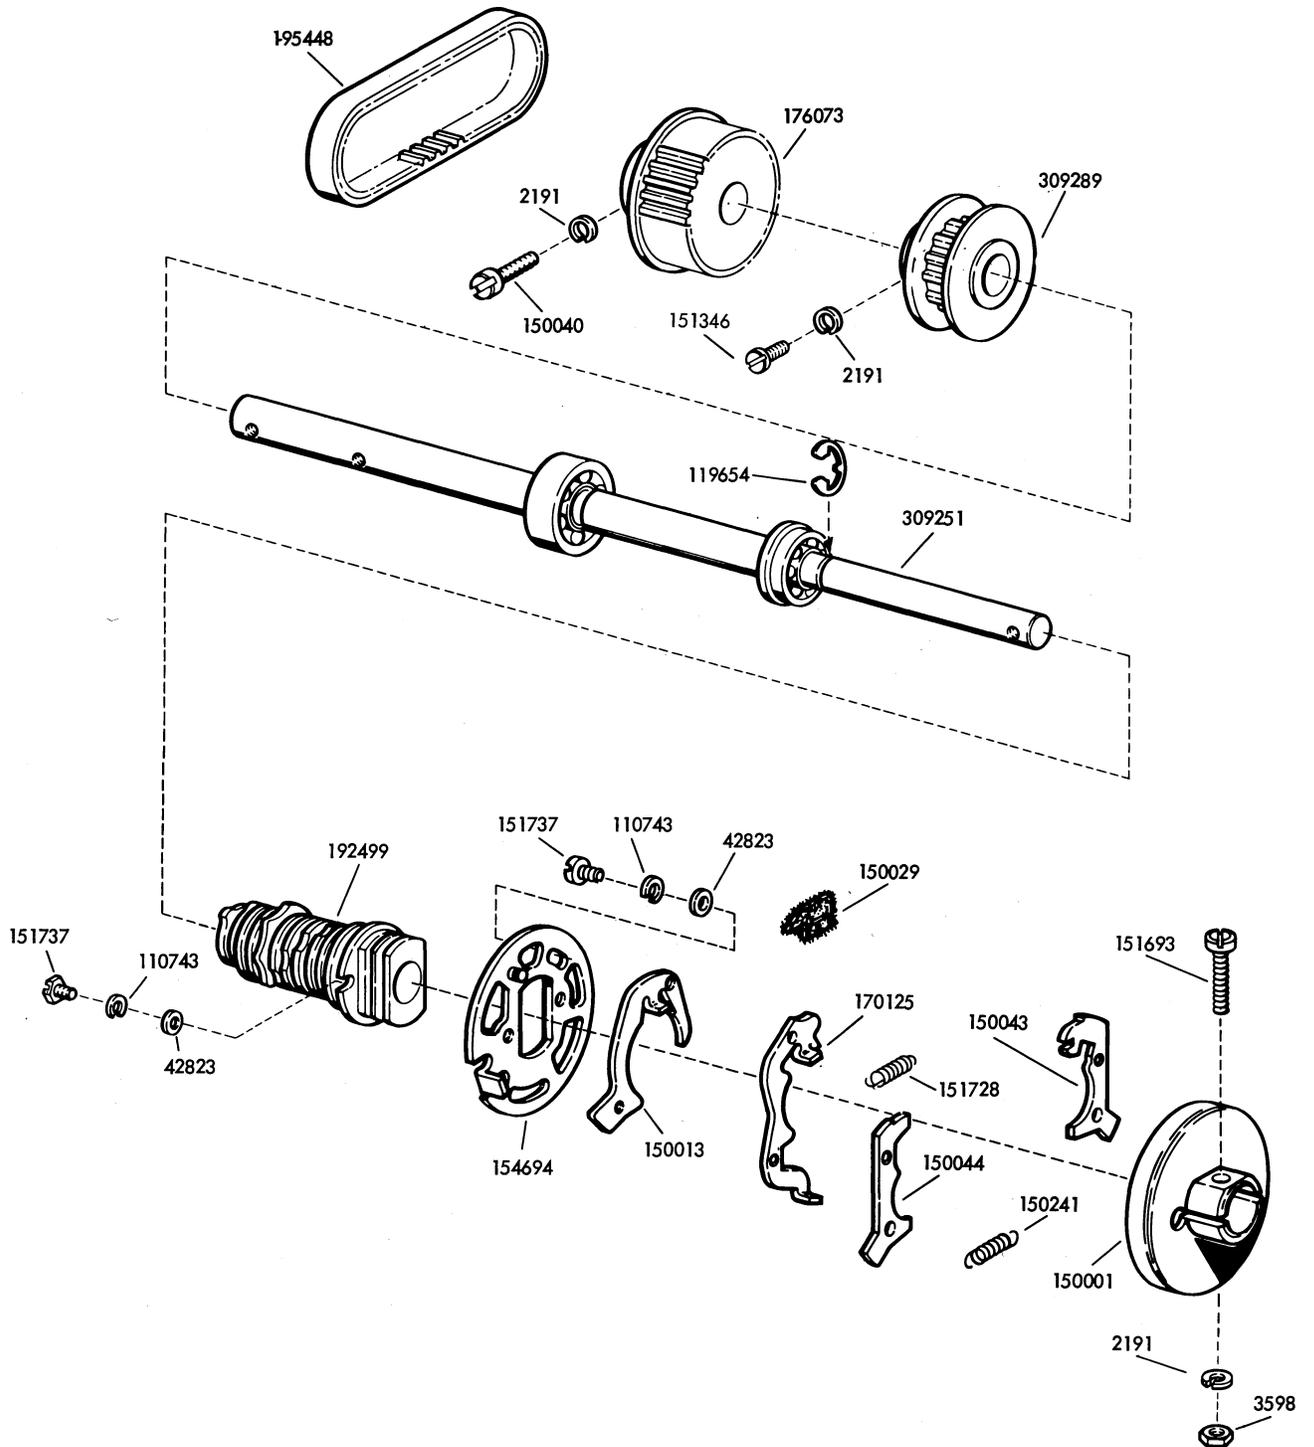


FIGURE 14. SELECTOR CLUTCH

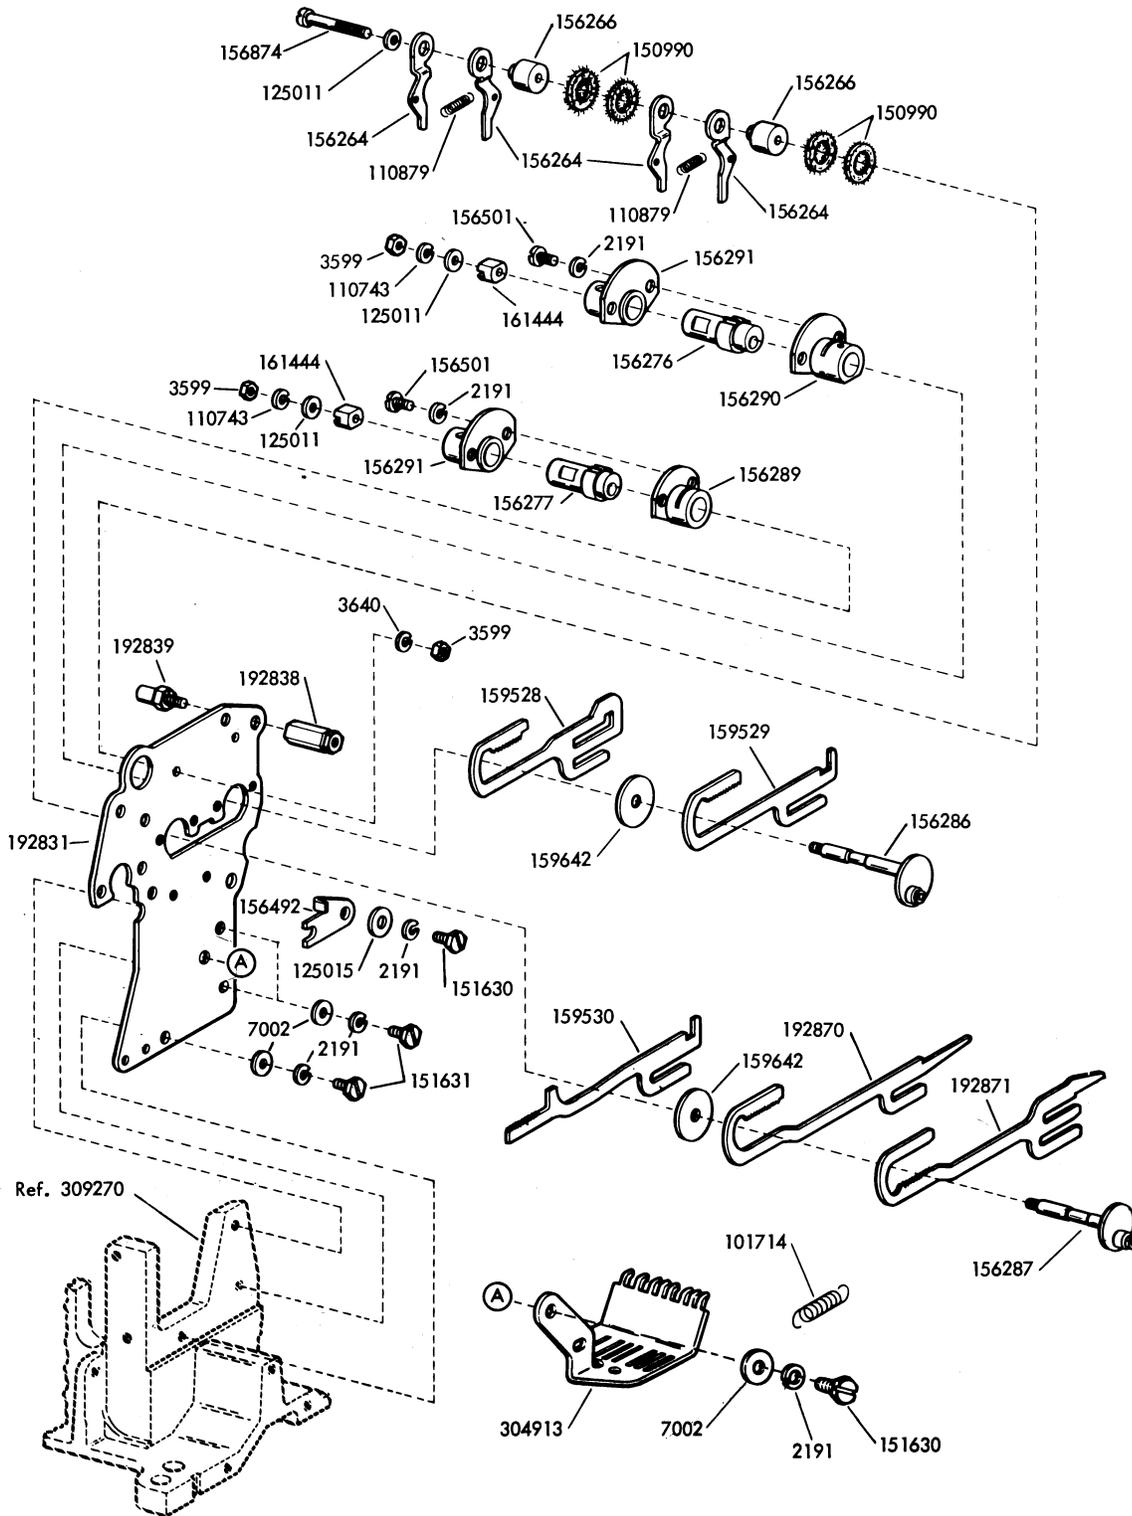


FIGURE 15. ROTARY POSITIONING MECHANISM


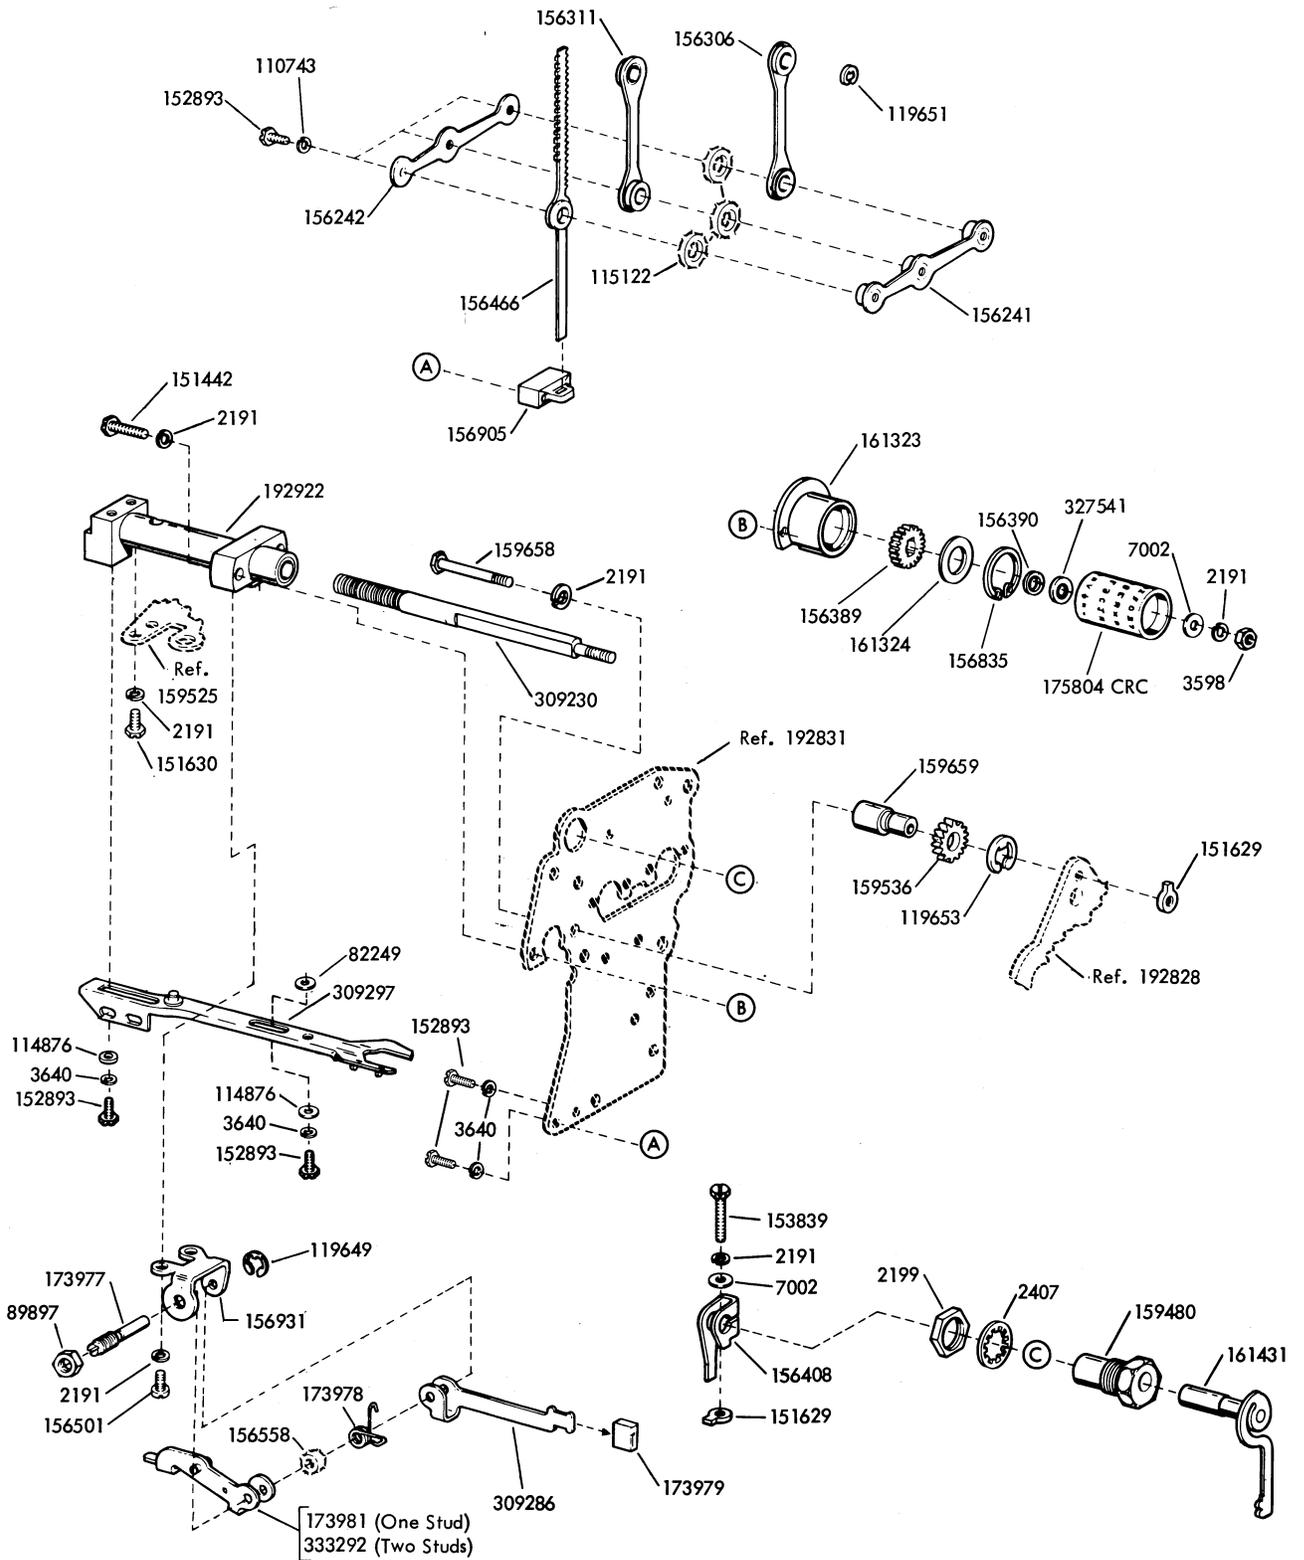


FIGURE 16. ROTARY POSITIONING MECHANISM (Continued)

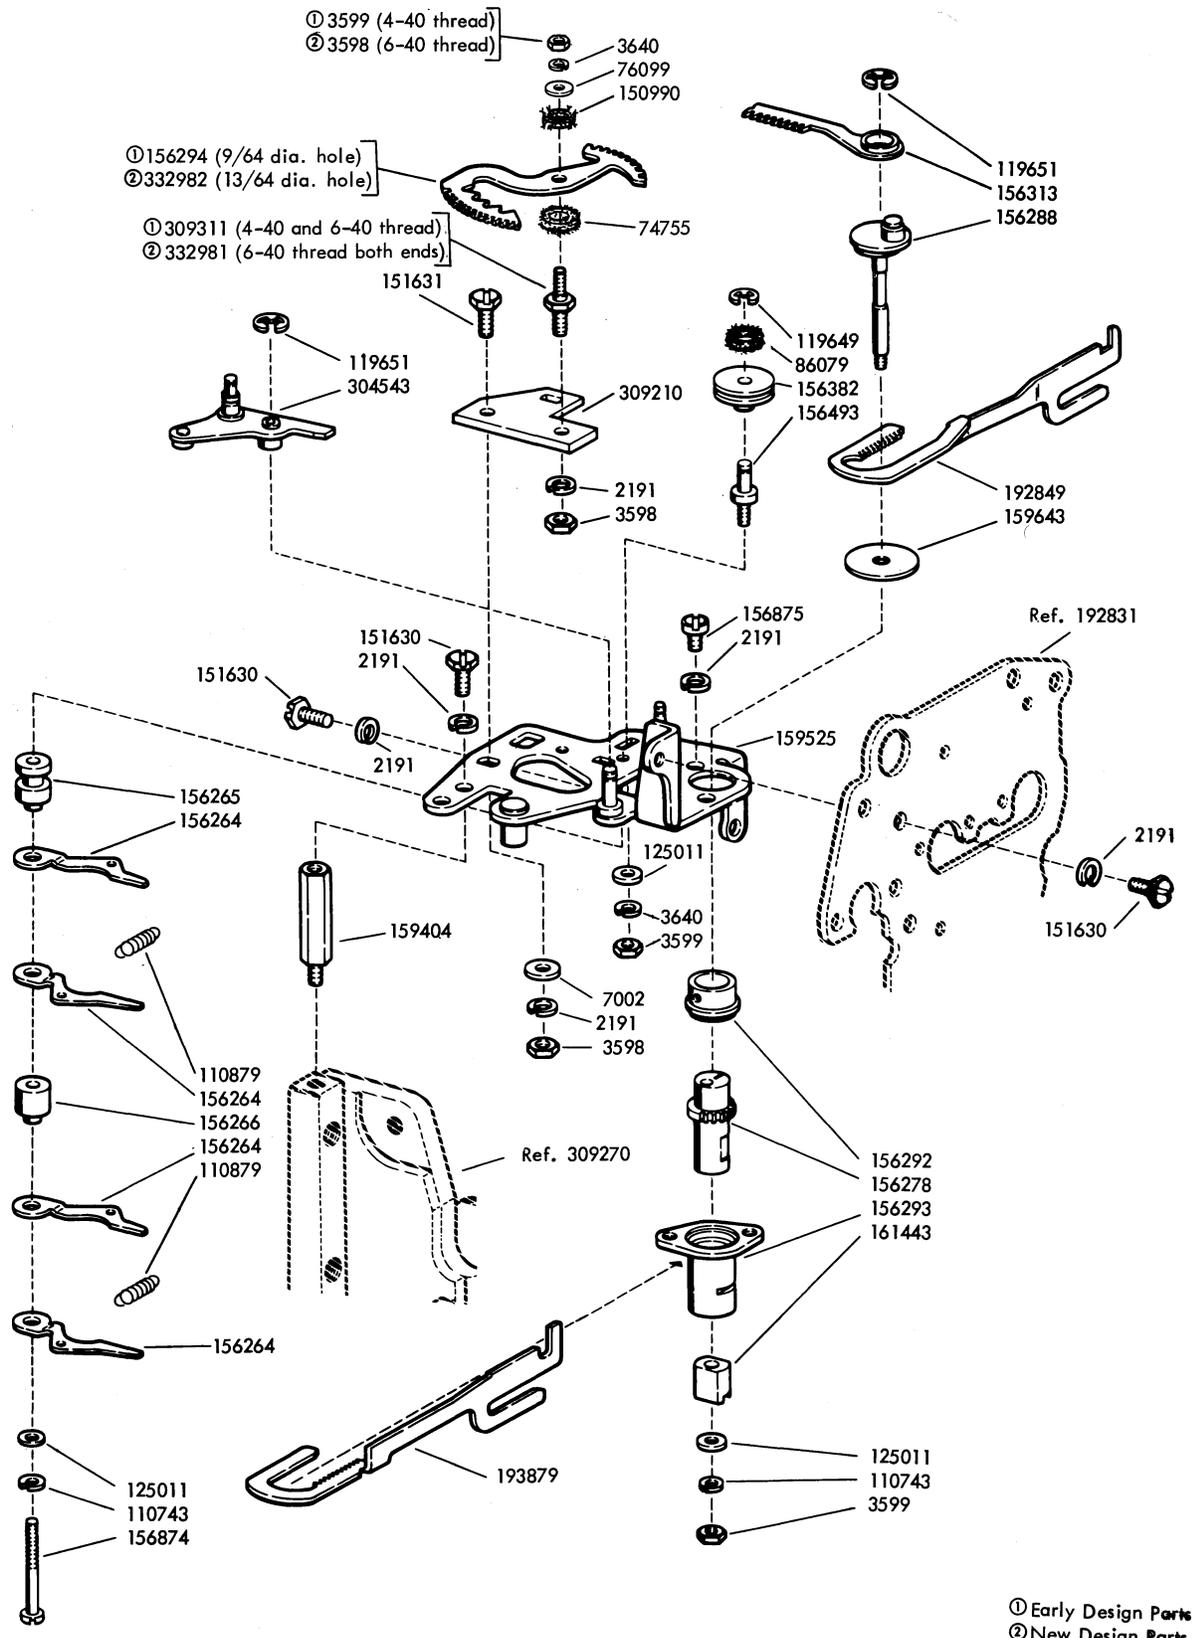

① Early Design Parts
 ② New Design Parts

FIGURE 17. AXIAL POSITIONING MECHANISM

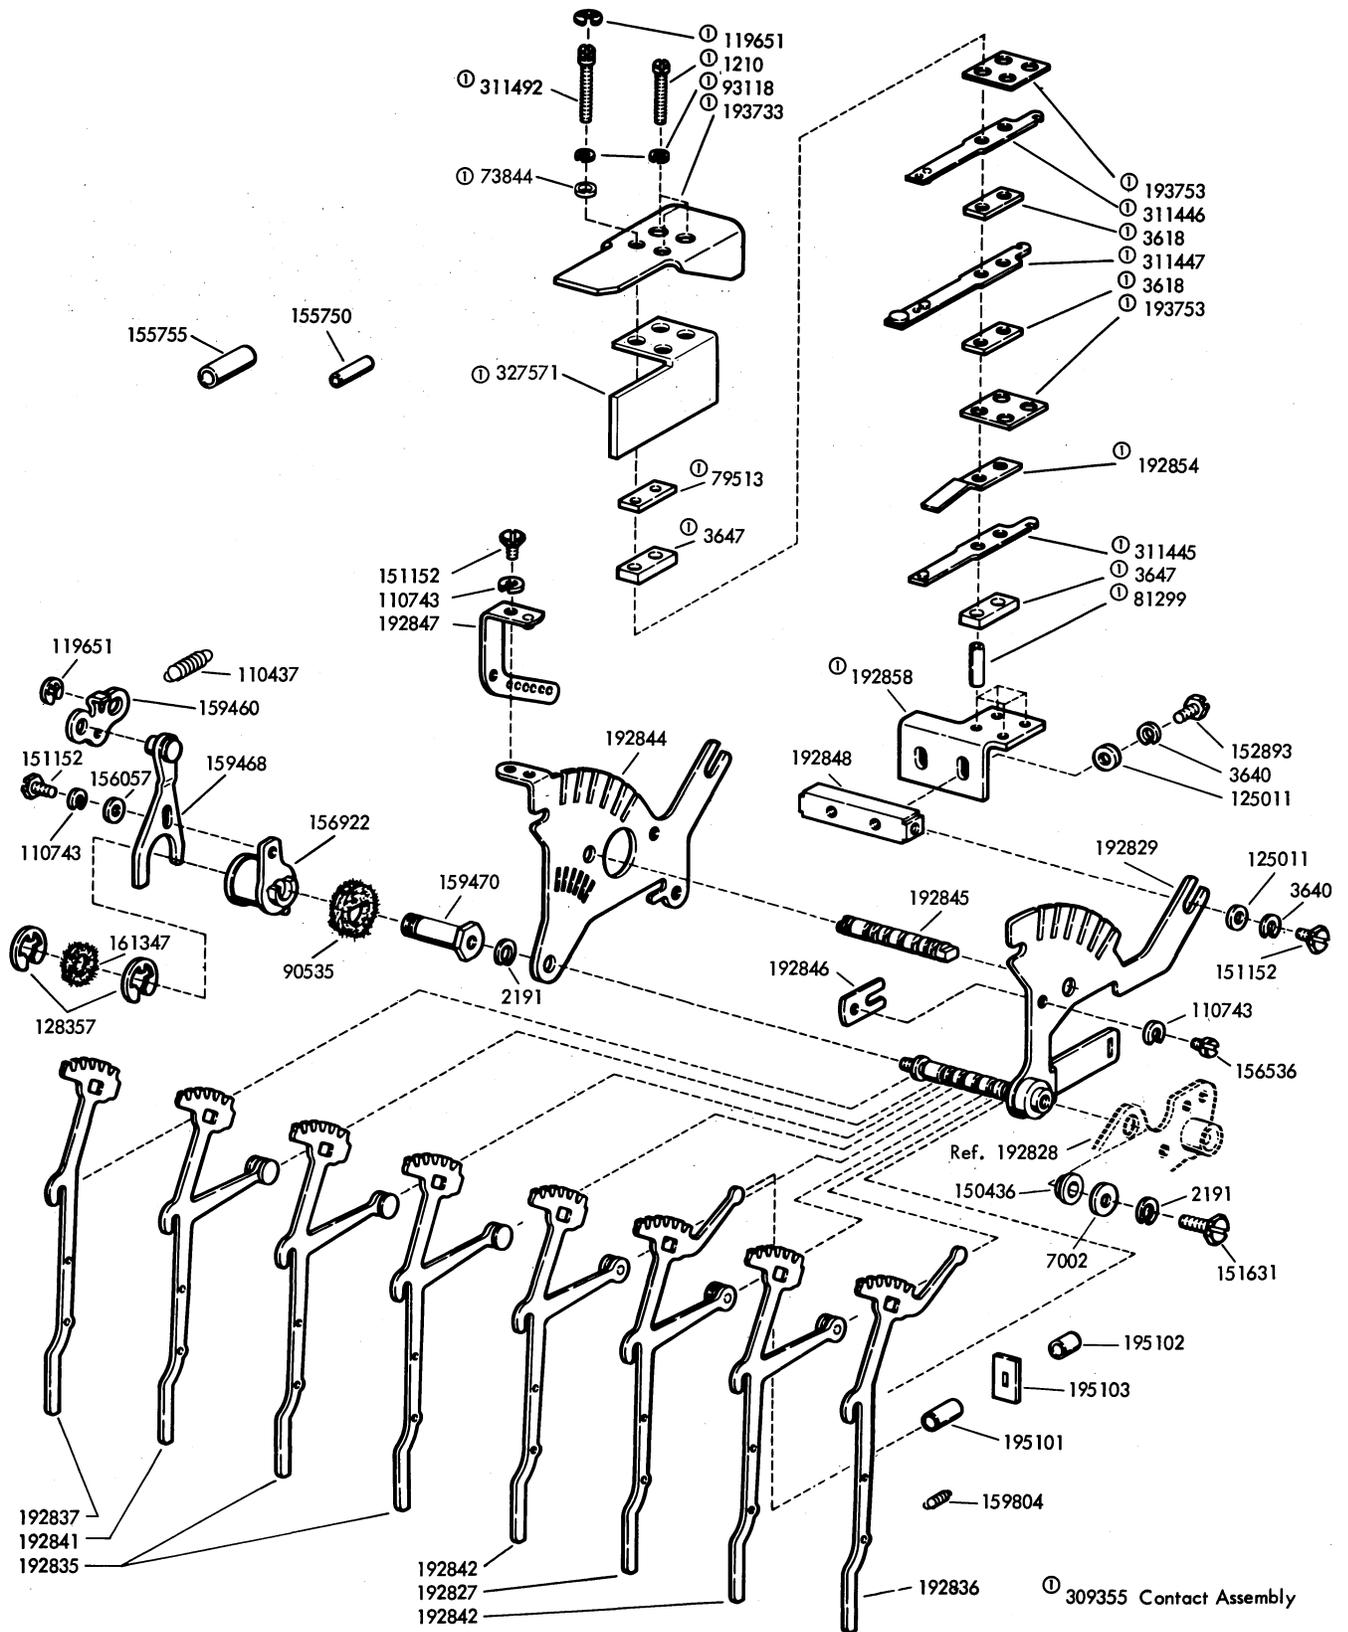


FIGURE 18. FUNCTION BOX MECHANISM

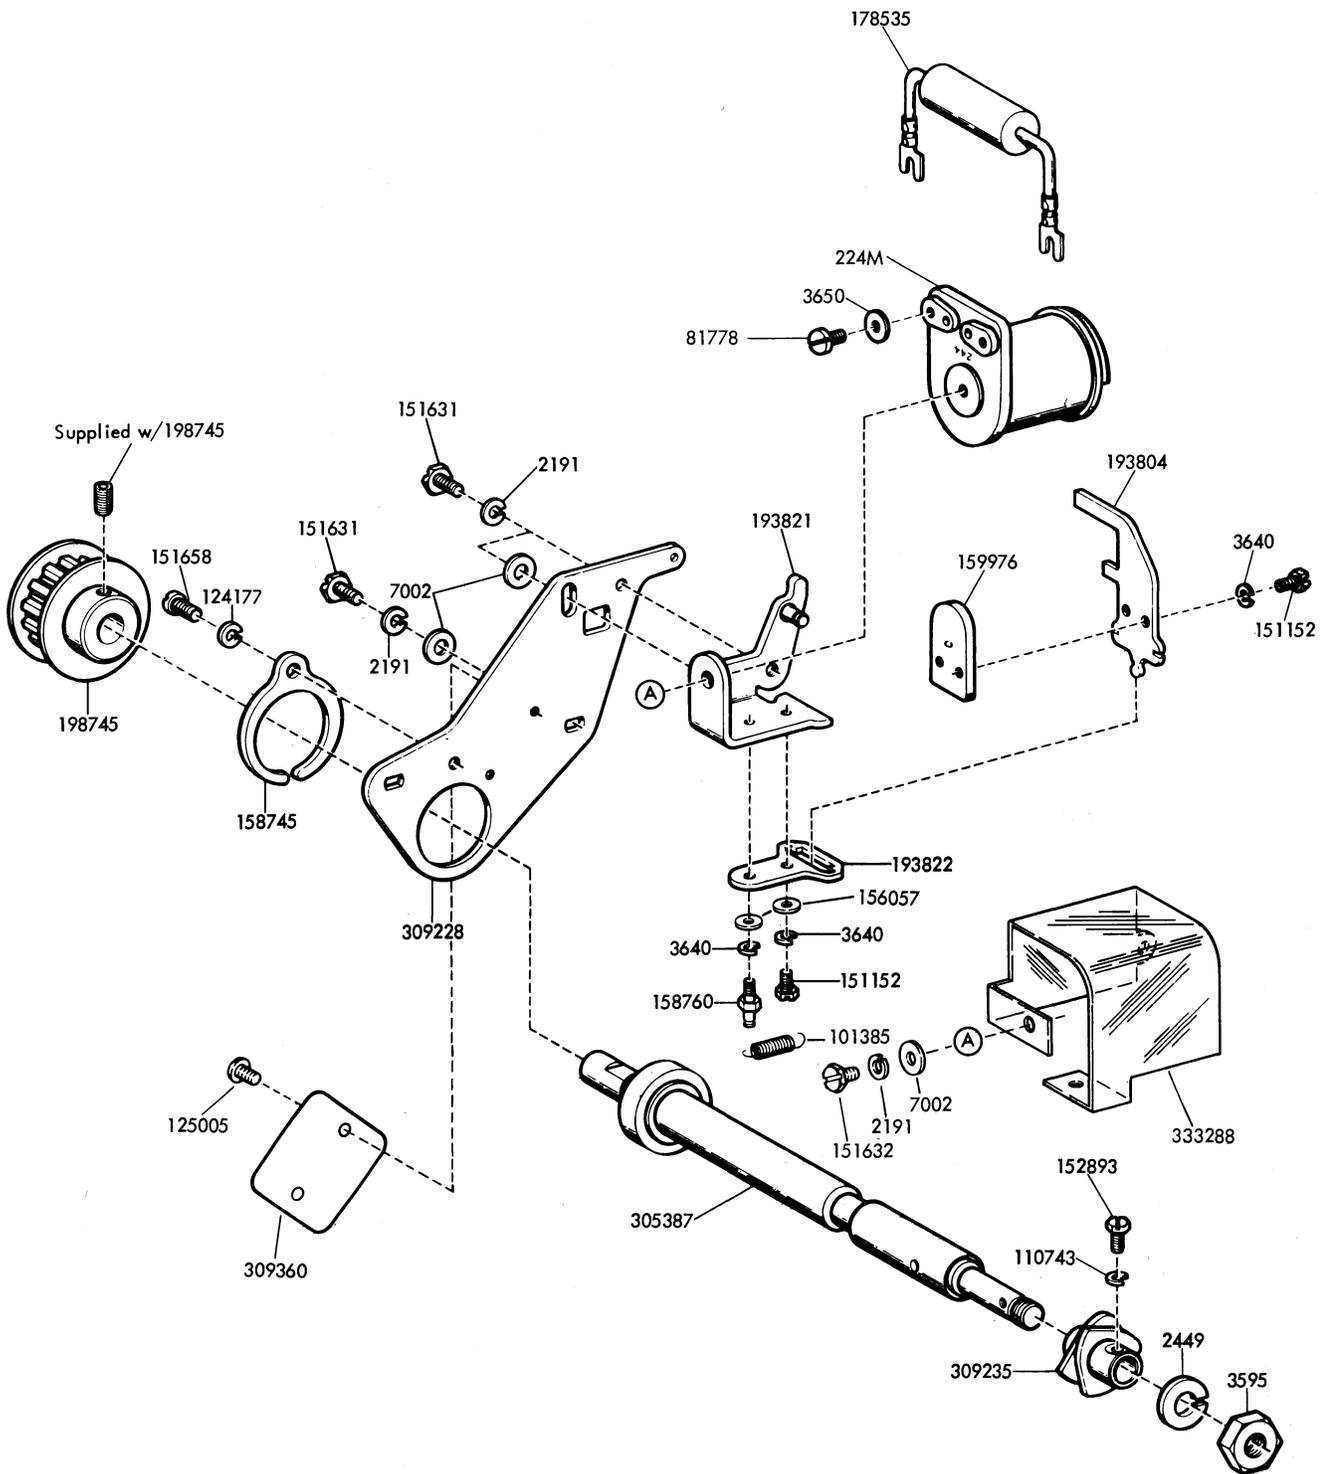


FIGURE 19. BURSTER MAGNET AND RAPID FEED SHAFT


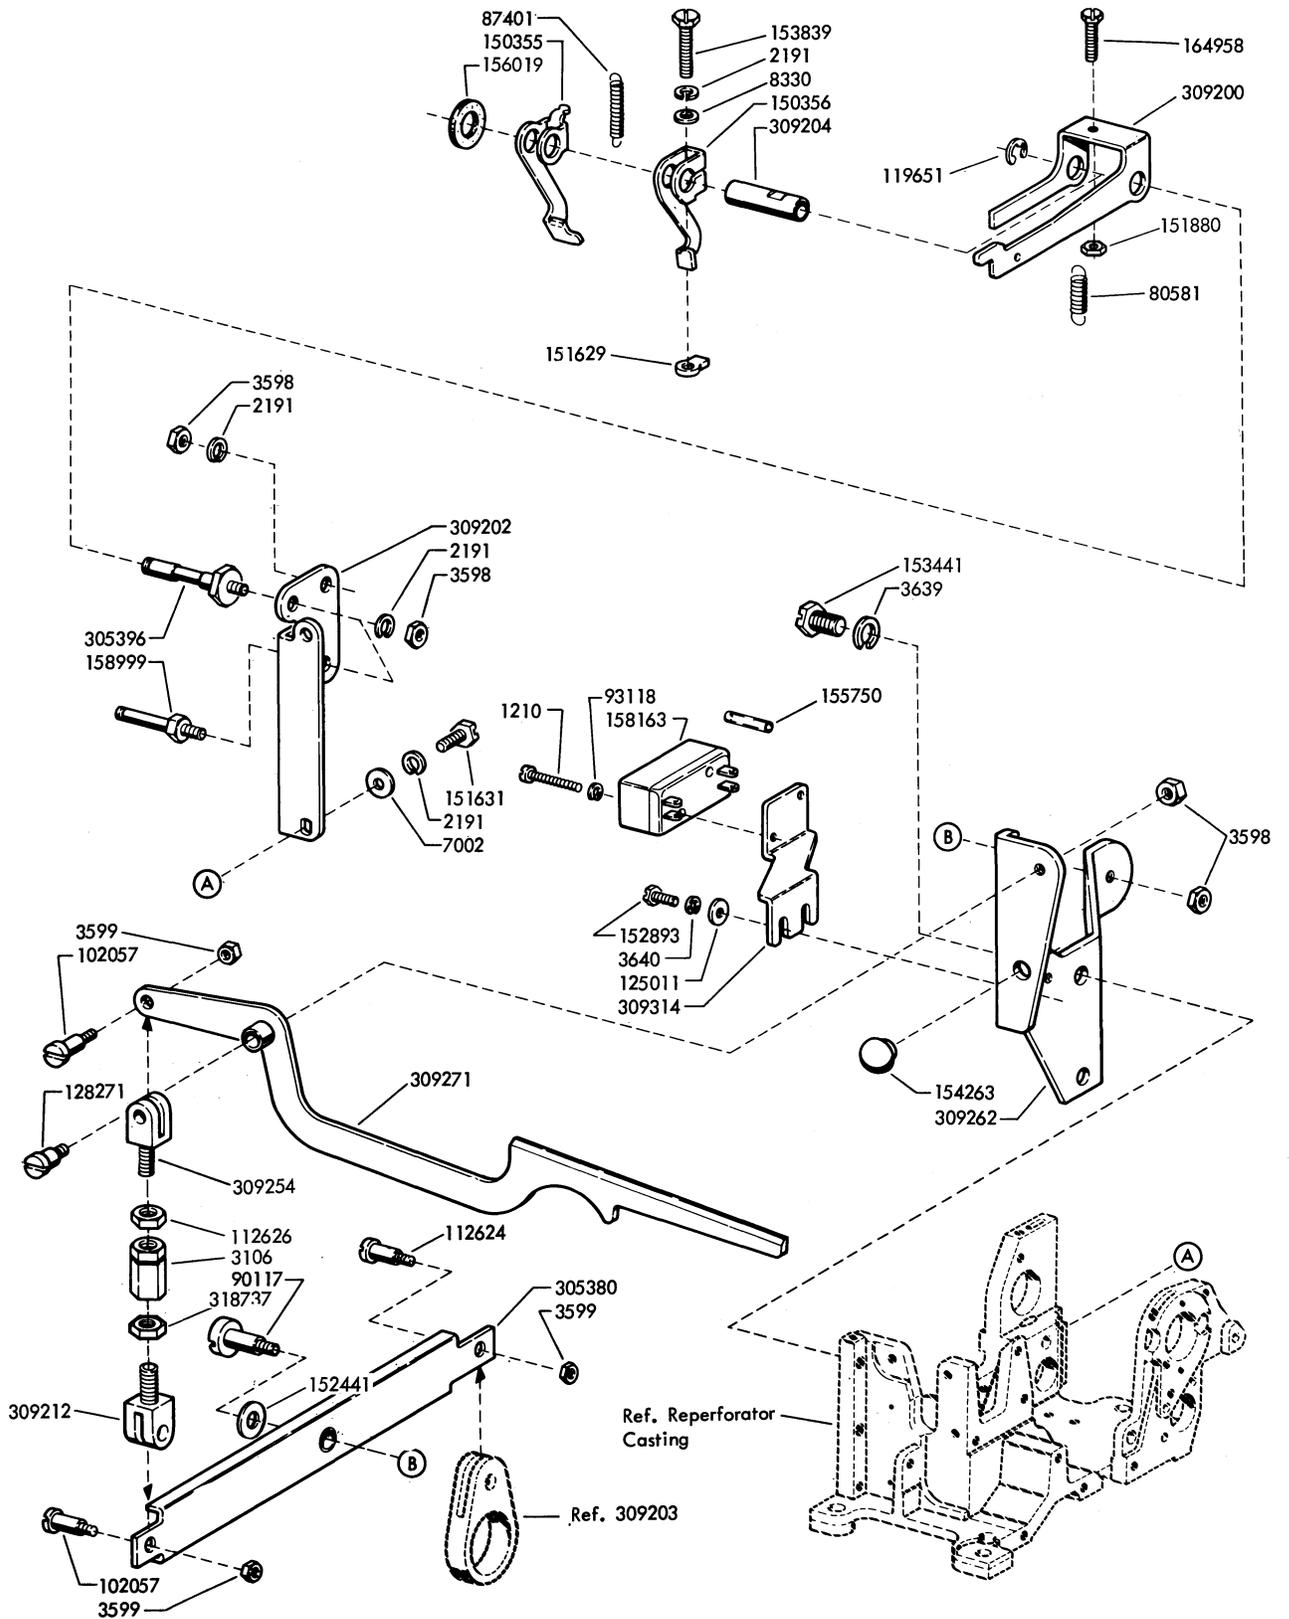


FIGURE 20. BURSTER CLUTCH TRIP MECHANISM

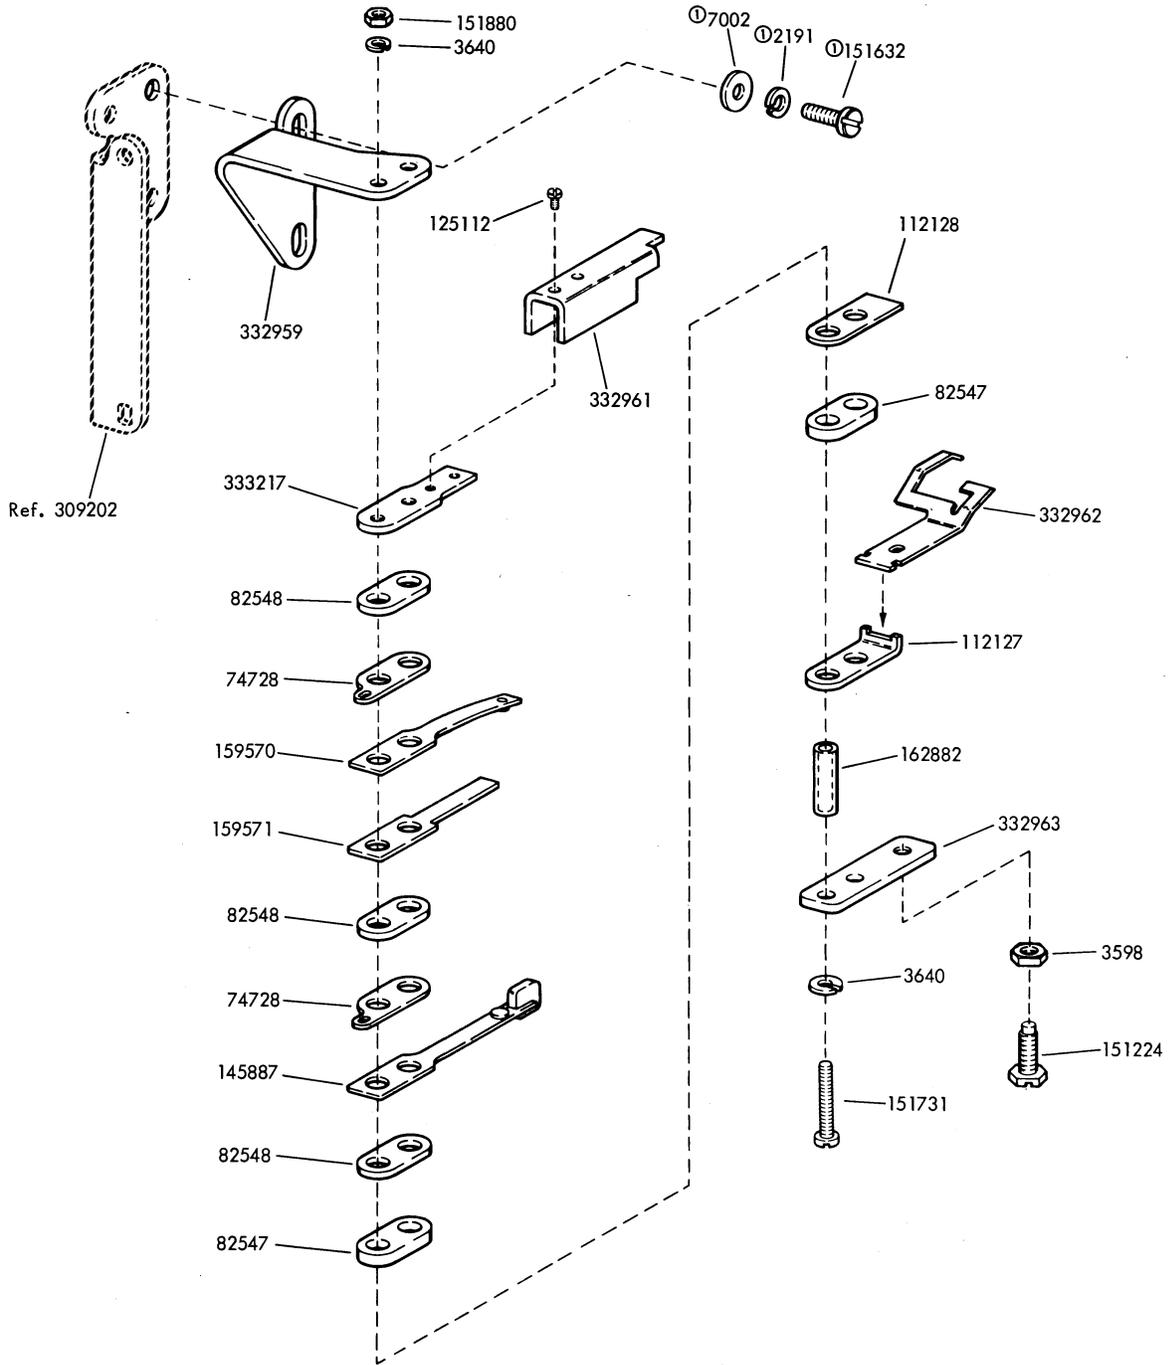

Ⓢ Not Part of 332960

FIGURE 21. 332960 CONTACT ASSEMBLY

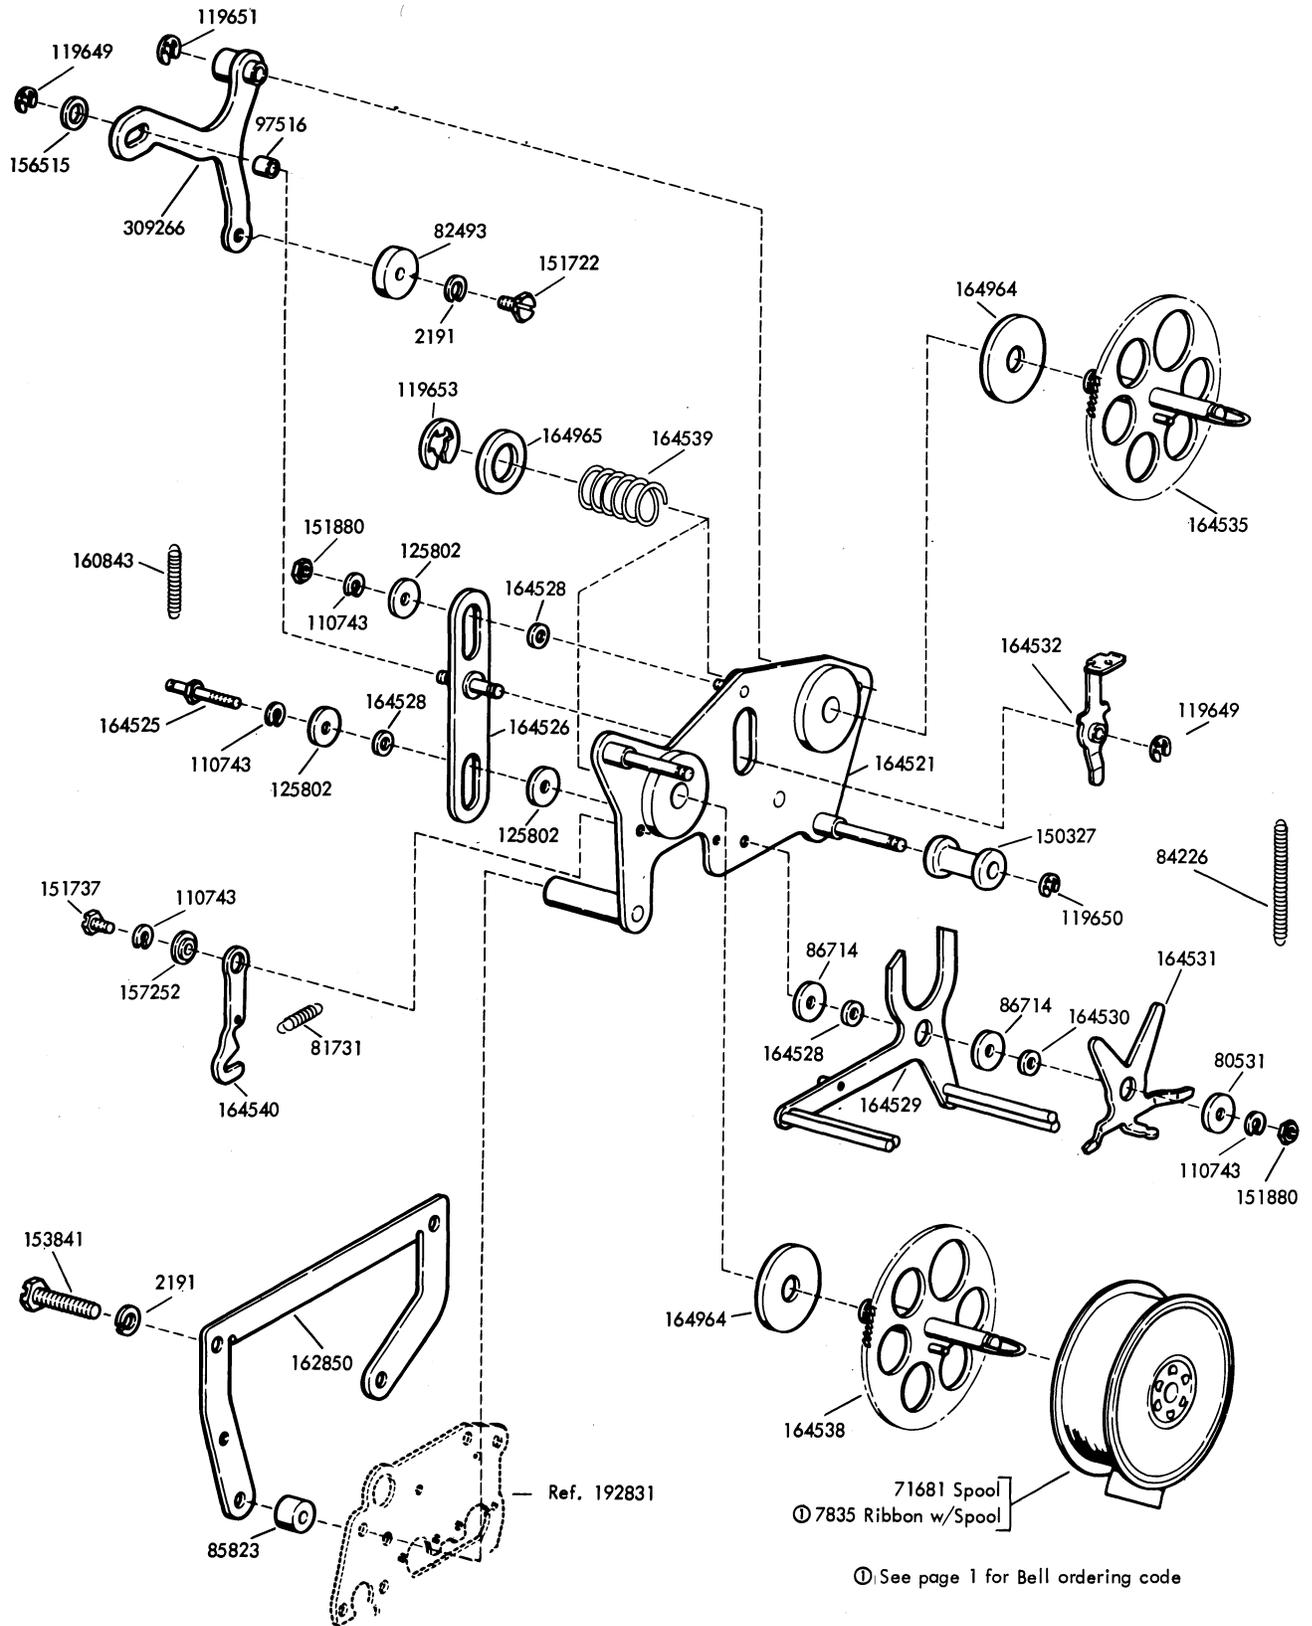


FIGURE 22. RIBBON FEED MECHANISM

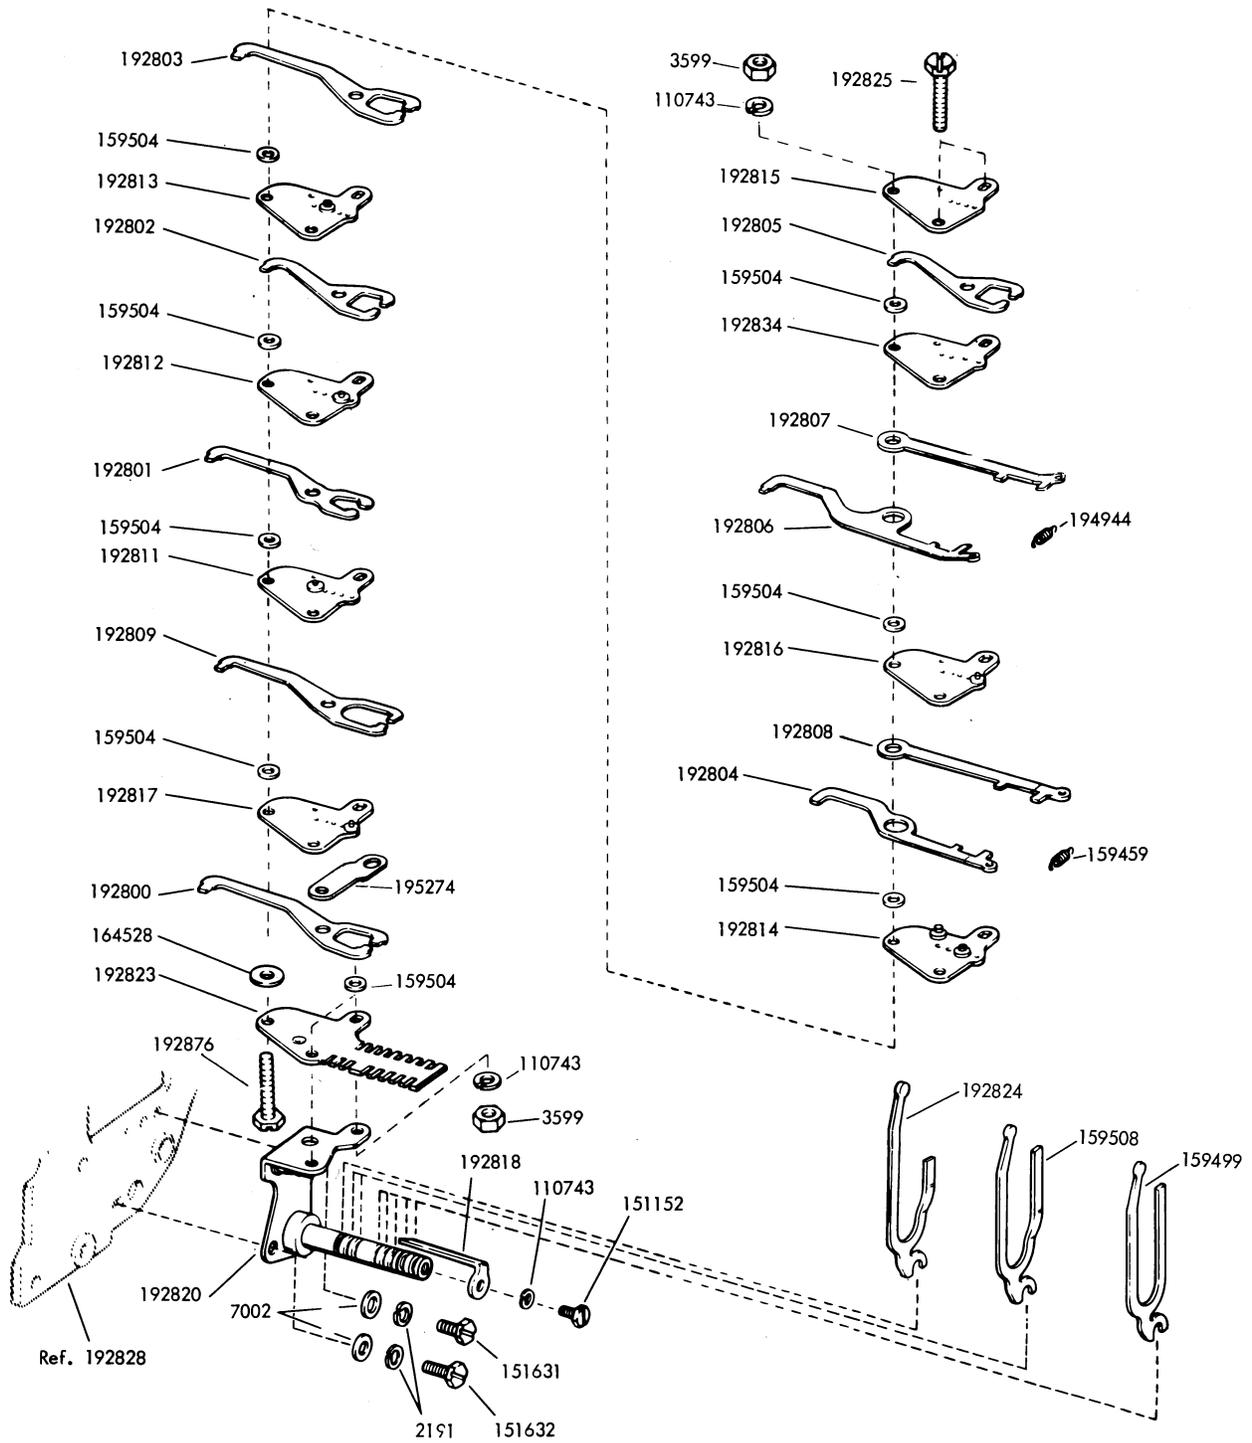


FIGURE 23. TRANSFER MECHANISM

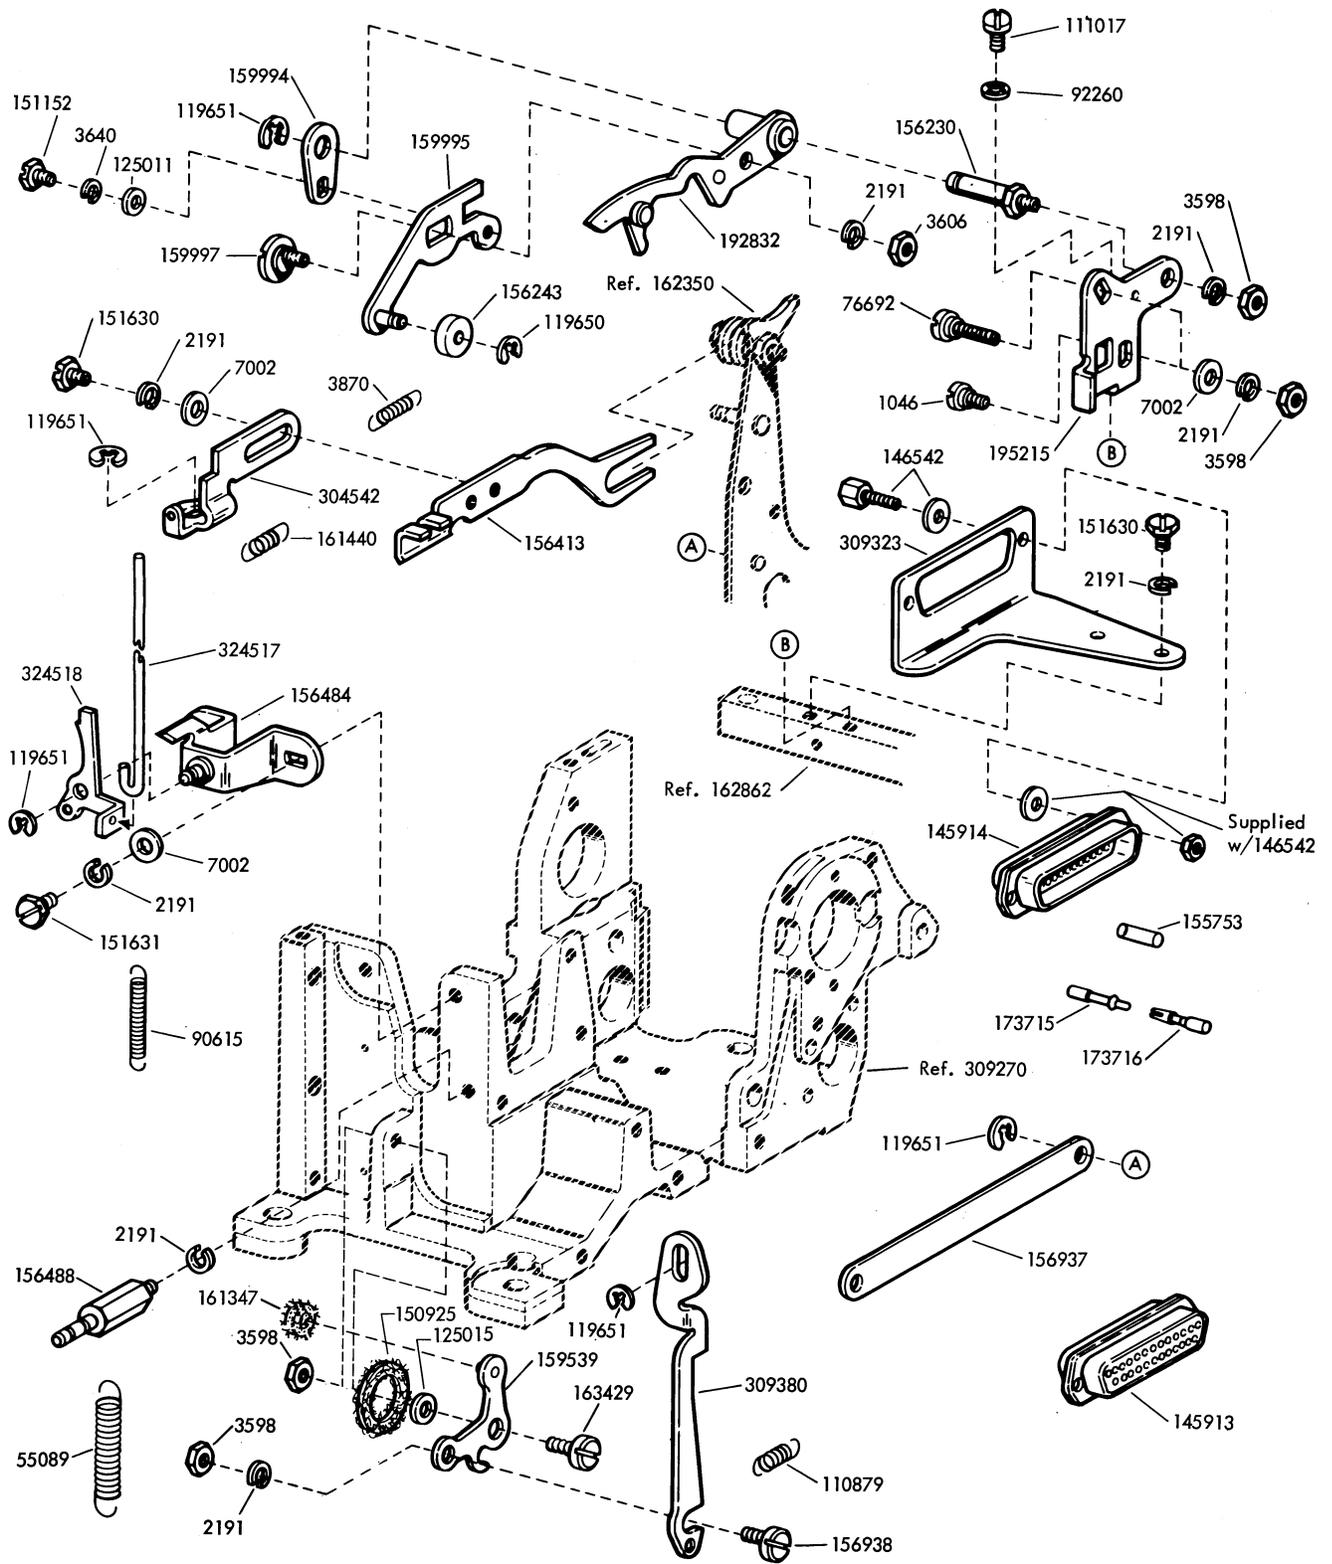


FIGURE 24. TYPING MECHANISM

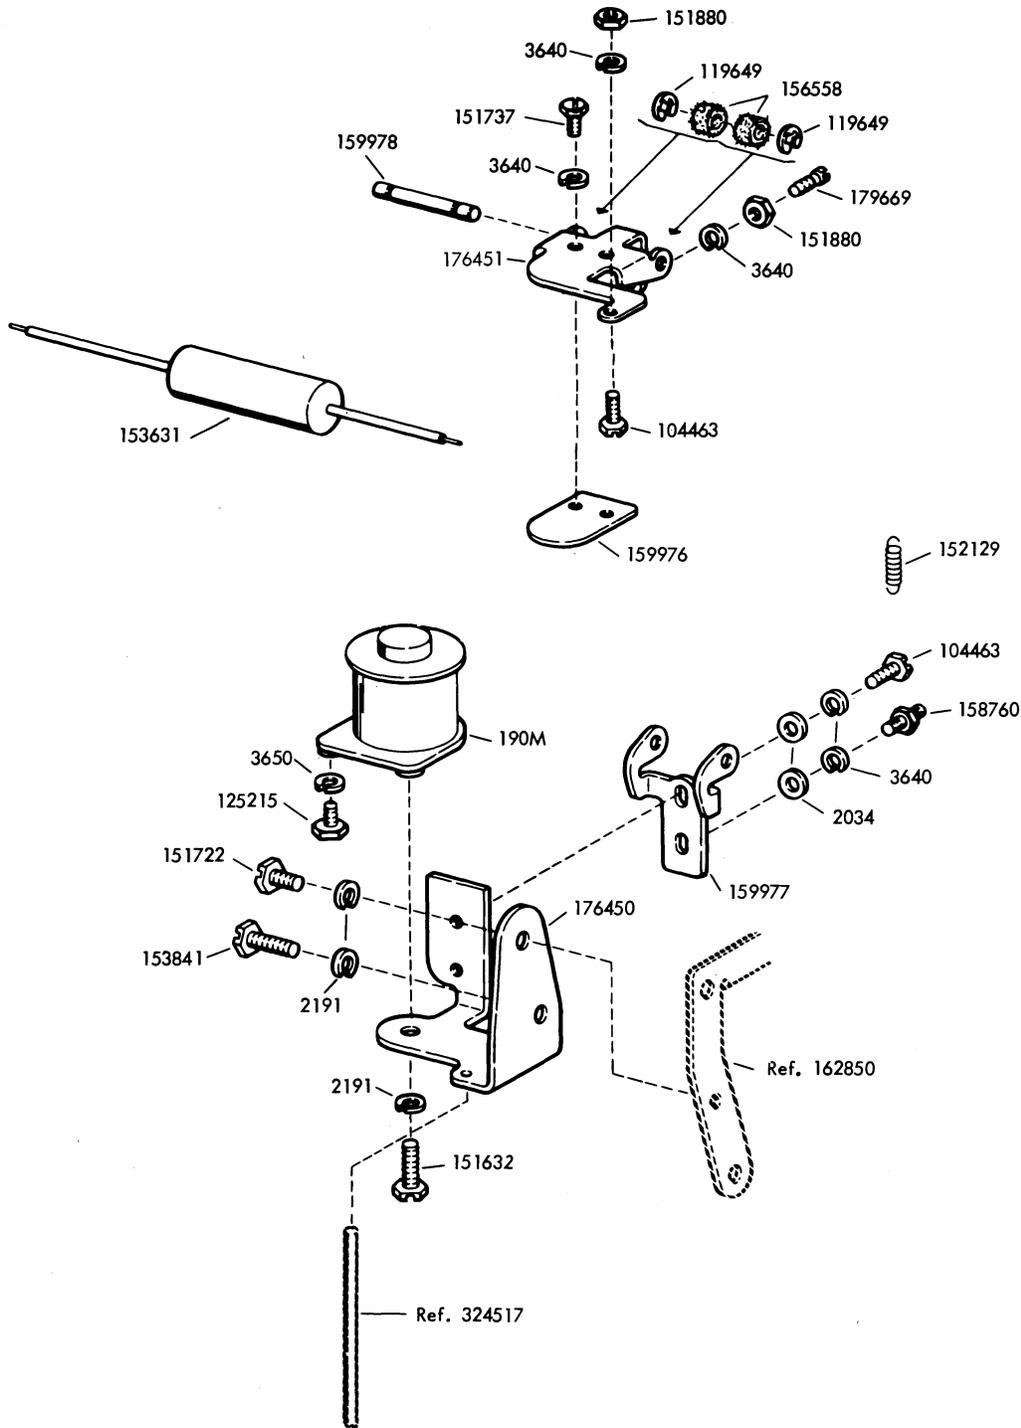


FIGURE 25. PRINT SUPPRESSION MECHANISM

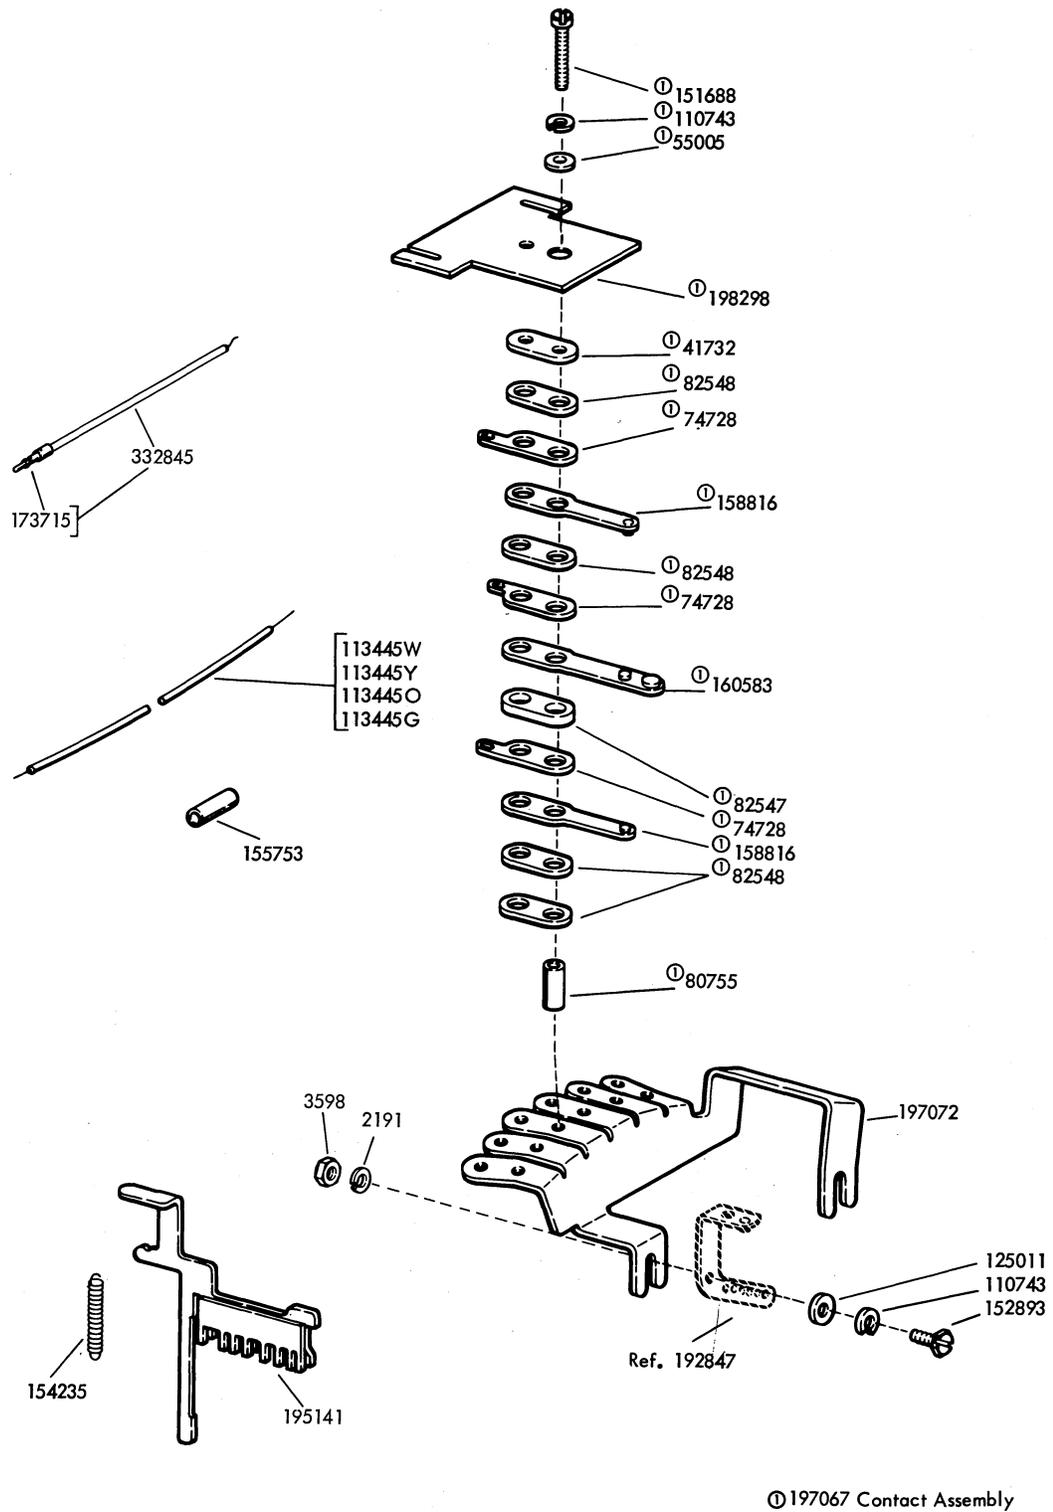


FIGURE 26. MULTIPLE MOUNTED FUNCTION BLADE OPERATED CONTACTS

NUMERICAL INDEX

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
190M	Coil, Magnet 26	55669	Spring 5	97516	Bushing 23
224M	Coil, Magnet 20	71073	Washer, Flat 2,4	98142	Washer, Flat 7
271M	Coil, Magnet 11	71437	Washer, Flat 8	98642	Lockwasher 13
1020	Screw, 6-40 x 1/4 Hex 4	71681	Spool, Ribbon 23	100759	Screw, 4-40 x 3/16 Flat 2,7
1046	Screw, 6-40 Shoulder 25	73844	Washer, Flat 19	101385	Spring 20
1210	Screw, 2-56 x 5/8 Fil 19,21	74283	Washer, Spring 9	101714	Spring 16
2034	Washer, Flat 6,10,26	74728	Terminal, Contact 22,27	102057	Screw, 4-40 Shoulder 21
2191	Lockwasher 3,4,5,6,7,8, 9,10,11,12,13,14,15,16, 17,18,19,20,21,22,23,24, 25,26,27	74755	Washer, Felt 18	104463	Screw, 4-40 x 1/4 Hex 26
2199	Nut, 7/16 - 32 Hex 17	76081	Washer, Flat 11	104807	Washer, Flat 4
2407	Lockwasher 17	76099	Washer, Flat 11,18	104824	Spring 11
2438	Washer, Flat 11	76692	Screw, 6-40 Shoulder 25	104827	Bearing, Ball 14
2449	Lockwasher 20	79012	Insulator 11	110434	Screw, 4-40 x 3/16 Fil 9,10
2669	Lockwasher 6,9	79513	Plate, Contact Top 19	110437	Spring 19
3106	Nut, Adjusting Link 21	80531	Washer, Flat 23	110743	Lockwasher 2,3,4,5,6,7, 8,9,10,11,12,14,15,16, 17,18,19,20,23,24,27
3595	Nut, 1/4 - 32 Hex 14,20	80581	Spring 21	110879	Spring 16,18,25
3598	Nut, 6-40 Hex 3,4,5,6,8, 9,10,12,13,15,17,18,21, 22,25,27	80755	Bushing, Insulating 27	111017	Screw, 6-40 x 5/16 Fil 25
3599	Nut, 4-40 Hex 10,11,12, 16,18,21,24	81299	Bushing, Insulating 19	112127	Hinge 22
3606	Nut, 6-40 Hex 25	81731	Spring 23	112128	Retainer 22
3618	Insulator, .062" Thk 19	81778	Screw, 4-40 x 3/16 Fil 11,20	112624	Screw, 4-40 Shoulder 21
3639	Lockwasher 21	82249	Washer, Flat 17	112626	Nut, 10-32 Hex 9,13,21
3640	Lockwasher 2,3,4,5,6,7, 16,17,18,19,20,21,22,25, 26	82392	Shim, .004" Thk 13	112627	Nut, 2-56 Hex 5
3646	Lockwasher 4	82493	Washer, Flat 23	113442G	Jumper, 2-1/2" Green 5
3647	Insulator, .094" Thk 19	82547	Insulator, .094" Thk 22,27	113445G	Jumper, 6-1/2" Green 27
3650	Washer, Flat 20,26	82548	Insulator, .062" Thk 22,27	113445O	Jumper, 6-1/2" Orange 27
3870	Spring 25	82832	Lockwasher 14	113445W	Jumper, 6-1/2" White 27
4708	Spring 5	82999	Spring 5	113445Y	Jumper, 6-1/2" Yellow 27
7002	Washer, Flat 4,5,6,8, 10,12,13,16,17,18,19,20, 21,22,24,25	84226	Spring 23	114876	Washer, Flat 17
7835	Ribbon w/Spool, Black 23	85823	Spacer, .188" Thk 23	115122	Washer, Felt 17
8330	Washer, Flat 6,8,9,13,21	86079	Washer, Felt 18	115941	Washer, Flat 6
8449	Spacer, .094" Thk 13	86506	Post, Spring 6	119648	Ring, Retaining 4,5,9
27425	Screw, 2-56 x 5/32 Fil 4	86714	Washer, Flat 23	119649	Ring, Retaining 2,3,17, 18,23,26
41382	Spring 9	87401	Spring 6,21	119650	Ring, Retaining 8,23,25
41548	Screw, 2-56 x 3/32 Fil 2	89897	Nut, 10-32 Hex 17	119651	Ring, Retaining 5,6,17, 18,19,21,23,25
41732	Plate, Clamp 27	90117	Screw, 6-40 Shoulder 21	119652	Ring, Retaining 3,6,8, 9,13
42823	Washer, Flat 14,15	90361	Washer, Felt 3,8	119653	Ring, Retaining 3,17,23
55005	Washer, Flat 27	90535	Washer, Felt 13,19	119654	Ring, Retaining 15
55063	Spring 7	90573	Spring 13	121071	Spring 4
55089	Spring 25	90606	Spring 6	121244	Clamp, 1/4 ID Cable 4
		90615	Spring 25	121551	Screw, 8-32 x 1/4 Hex 4
		90789	Washer, Flat 10		
		91120	Spring 4,12		
		92260	Lockwasher 25		
		93117	Lockwasher 4,5		
		93118	Lockwasher 2,19,21		
		93356	Washer, Felt 6		
		96717	Screw, 4-40 Shoulder 10		

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
124177	Lockwasher 5,6,9,13,20	150978	Screw, 6-40 x 1-1/8 Fil 11	151880	Nut, 4-40 Hex 4,21,22, 23,26
125005	Washer, 2-56 x 3/16 RD 6,20	150990	Washer, Felt 16,18	152129	Spring 26
125011	Washer, Flat 2,5,6,9,12, 16,18,19,21,25,27	150991	Washer, Felt 4	152406	Bracket, Spring 10
125015	Washer, Flat 3,8,11,13, 16,25	151080	Washer, Flat 4,5	152407	Locklever, Spacing 10
125112	Screw, 2-56 x 1/8 Fil 22	151073	Screw, 4-40 x 5/32 Fil 6,14	152409	Lever, Selecting 10
125215	Screw, 4-40 x 3/16 Hex 26	151103	Spring 6,10	152411	Lever, Push 10
125802	Washer, Flat 4,23	151152	Screw, 4-40 x 3/16 Hex 2,4,6,7,19,20,24,25	152412	Link 10
128271	Screw, 6-40 Shoulder 21	151222	Washer, Felt 8	152415	Stud, Adjusting 11
128357	Ring, Retaining 8,19	151224	Screw, 6-40 Pilot 22	152420	Lamination, Magnet 11
130499	Bearing, Ball 4	151336	Oiler 10	152421	Bracket, Shield Mounting 11
130683	Lockwasher 14	151346	Screw, 6-40 x 3/8 Fil 6,15	152423	Bracket, Armature Stop Mounting 11
135716	Spring 6	151362	Wick, Felt 13	152425	Post, Spring 11
139752	Screw, 4-40 x 11/64 Fil 6	151413	Washer, Flat 4	152426	Nut, 6-40 Self-Locking 11
144550	Setscrew, 6-40 3	151416	Nut, 6-40 Hex 8	152427	Latch w/Hub 9
144637	Bushing, Eccentric 5	151442	Screw, 6-40 x 1/2 Hex 13,17	152429	Rack, Sector 9
144643	Washer, Flat 14	151603	Spacer 11	152438	Bail, Stop Arm 9
144871	Shaft, Solenoid Plunger 4	151629	Nut, 6-40 Lug 6,8,17,21	152441	Washer, Flat 9,21
145887	Spring, Contact 22	151630	Screw, 6-40 x 1/4 Hex 3, 4,6,10,12,16,17,18,25	152445	Spring, Compression 9
145913	Connector, 25 Pt Receptacle Type 25	151631	Screw, 6-40 x 5/16 Hex 3,4,6,11,12,13,16,18,19, 20,21,24,25	152457	Wick, Felt 10
145914	Connector, 25 PT Plug Type 25	151632	Screw, 6-40 x 3/8 Hex 4, 13,14,20,22,24,26	152458	Shield, Terminal 11
146542	Post Assembly 25	151657	Screw, 6-40 x 1/4 Fil 4, 9,10,13	152634	Washer, Flat 8
150000	Drum, Clutch 14	151658	Screw, 6-40 x 5/16 Fil 6,20	152891	Spring 5,10
150001	Drum, Clutch 15	151686	Screw, 4-40 x 3/8 Fil 11	152893	Screw, 4-40 x 1/4 Hex 2, 3,5,6,7,8,10,17,19,20, 21,27
150013	Disc, Adjusting 14,15	151688	Screw, 4-40 x 5/8 Fil 11,27	153441	Screw, 10-32 x 7/16 Hex 21
150026	Lever, Shoe Release 14	151693	Screw, 6-40 x 9/16 Fil 15	153489	Detent 9
150029	Wick, Felt 14,15	151700	Screw, 6-40 Shoulder 13	153538	Screw, 6-40 x 7/16 Hex 12
150040	Screw, 6-40 x 5/8 Fil 14,15	151701	Spring, Torsion 10	153631	Network, Spark Suppression 5,26
150043	Shoe, Secondary Clutch 14,15	151714	Spring 10	153817	Screw, 4-40 x 3/8 Hex 5
150044	Shoe, Primary Clutch 14, 15	151722	Screw, 6-40 x 3/16 Hex 6,10,23,26	153819	Lockwasher 14
150089	Screw, 4-40 x 1/2 Fil 11	151724	Screw, 10-32 x 5/8 Hex 6	153839	Screw, 6-40 x 5/8 Hex 6,8,17,21
150241	Spring 6,14,15	151728	Spring 14,15	153841	Screw, 6-40 x 9/16 Hex 23,26
150327	Roller, Ribbon 23	151731	Screw, 4-40 x 7/8 Fil 22	154215	Spring 8
150355	Latchlever 6,21	151737	Screw, 4-40 x 11/64 Hex 14,15,23,26	154235	Spring 27
150356	Lever, Trip 6,21			154242	Screw, 6-40 x 5/16 Hex 13
150436	Bushing 19			154263	Bumper, Rubber 21
150923	Washer, Felt 8			154349	Spring 10
150925	Washer, Felt 5,25			154396	Cam w/Pin 14
150926	Washer, Felt 3,5				

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
154398	Bearing, Needle 14	156289	Bearing, Left Front 16	156937	Link, Printing Drive 25
154694	Disc, Clutch Cam 14,15	156290	Bearing, Right Front 16	156938	Screw, 6-40 Eccentric Shoulder 25
155096	Plate, Range Finder Mounting 9	156291	Bearing, Rear 16	156987	Screw, 6-40 Spl 13
155750	Sleeve, 3/32 x 1/2" Lg Insulating 5,19,21	156292	Housing, Upper Axial 18	156988	Race, Outer 13
155753	Sleeve, 1/8 ID x 1/2" Lg Insulating 5,25,27	156293	Housing, Lower Axial 18	156989	Bearing 13
155755	Sleeve, 11/64 ID x 5/8" Lg Insulating 19	156294	Sector, Axial 18	156990	Race, Inner 13
155995	Screw, 6-40 Shoulder 6	156306	Rod, Right Connecting 17	156994	Strip, Felt 13
156009	Post, Slide 8	156311	Rod, Left Connecting 17	156998	Retainer, Roller 13
156013	Screw, 4-40 Spl 8	156313	Rack, Axial Output 18	157194	Retainer, Spring 11
156015	Plate, Spring 12	156318	Lever, Reset 6	157237	Shield, Terminal 11
156016	Link, Front Drag 8	156382	Roller, Guide 18	157252	Bushing 23
156017	Shaft, Eccentric 8	156387	Lever, Trip 6	157261	Shaft, Stop Arm 9
156019	Washer, Felt 21	156389	Gear, 16T 17	158163	Switch, Sensitive 21
156042	Post, Spacing 12	156390	Washer, Flat 17	158745	Clamp, Bearing 6,20
156043	Bushing 8	156399	Nut, 6-40 Shoulder 13	158760	Post, Spring 20,26
156051	Bushing, Eccentric 5,8	156408	Arm, Clamp 17	158807	Screw, 3-48 x 11/64 Fil 14
156057	Washer, Flat 14,19,20	156413	Link, Drive 25	158816	Spring, Contact 27
156058	Link, Rear 8	156466	Rack, Typewheel 17	158881	Nut, 6-40 Shoulder 6
156060	Shaft, Eccentric 8	156484	Bracket 25	158999	Post, Spring 21
156069	Plate 12	156488	Post, Spring 25	159184	Wick, Lubricating 10
156093	Washer, Felt 8	156492	Bracket, Guide 16	159404	Post 18
156094	Link, Front 8	156493	Stud 18	159411	Bearing Assembly 13
156095	Bushing 8	156501	Screw, 6-40 x 7/32 Fil 16,17	159427	Bracket, Stop 6
156099	Link, Rear Drag 8,12	156515	Washer, Felt 23	159459	Spring 24
156103	Strip, Felt 8	156521	Screw, 6-40 Eccentric Shoulder 12	159460	Link, Toggle 19
156162	Washer, Flat 8	156536	Screw, 4-40 x 1/8 Fil 10,19	159467	Holder, Wick 10
156165	Washer, Felt 6,8	156558	Washer, Felt 17,26	159468	Arm, Lock 19
156169	Washer, Felt 8	156576	Washer, Felt 13	159470	Shaft, Lock Arm 19
156173	Stud 12	156831	Clamp 4	159480	Bushing, Eccentric 17
156230	Stud, Lifter Pivot 25	156832	Plate 4	159499	Lever, no.3,no.4 and no.5 Transfer 24
156241	Link, Front 17	156835	Ring, Retaining 17	159504	Spacer, .037" Thk 24
156242	Link, Rear 17	156871	Bail, Operating Blade 13	159508	Lever, no.1 and no.2 Transfer 24
156243	Roller, Lifter Arm 25	156872	Blade, Operating 13	159525	Bracket, Axial Mounting 17,18
156264	Lever, Detent 16,18	156874	Screw, 4-40 x 15/16 Fil 16,18	159528	Pushbar, no.5 16
156265	Bushing, Shoulder 18	156875	Screw, 6-40 x 5/32 Fil 18	159529	Pushbar, no.3 16
156266	Bushing, Shoulder 16,18	156876	Bushing 13	159530	Pushbar, no.4 16
156276	Eccentric, Right Rotary 16	156877	Washer, Felt 13	159536	Gear, 15T 17
156277	Eccentric, Left Rotary 16	156880	Jumper, 2-3/8" Black 11	159539	Arm, Printing Pivot 25
156278	Eccentric 18	156881	Jumper, 1-1/2" Black 11	159544	Release, Clutch 6
156286	Shaft, Right Eccentric 16	156900	Roller 13	159560	Spring 12
156287	Shaft, Left Eccentric 16	156905	Block, Rack Guide 17	159570	Spring, Contact 22
156288	Shaft, Axial Eccentric 18	156922	Arm, Lock Release 19	159571	Stiffener 22
		156925	Roller, Drive Link 13	159625	Bracket, Bail Guide 13
		156931	Bracket, Hammer Mounting 17	159642	Shim, .008" Thk 16
				159643	Shim, .008" Thk 18

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
159658	Screw, 6-40 x 1-3/32 Hex 17	164538	Shaft, Left Ribbon Ratchet 23	176672	Solenoid 4
159659	Shaft, Eccentric 17	164539	Spring, Compression 23	178535	Suppressor, Spark 20
159804	Spring 19	164540	Detent 23	179669	Screw, 4-40 Spl 26
159913	Screw, 6-40 Eccentric 4	164958	Screw, 4-40 x 1/2 Hex 5, 21	179782	Screw, 6-40 x 7/8 Hex 4, 5
159976	Armature 20,26			182909	Spring 10
159977	Hinge 26	164964	Washer, Felt 23	192342	Screw, 2-56 x 1-1/16 Fil 5
159978	Shaft 26	164965	Washer, Flat 23		
159994	Plate, Lifter Arm Lock 25	170125	Lever, Shoe Release 15	192493	Spring 10
		170198	Arm, Stop 9	192499	Cam, Selector 15
159995	Arm, Lifter 25	170199	Bracket, Anchor 4	192661	Post 13
159997	Screw, 6-40 Eccentric 25	170203	Lever, Slide Trip 6	192709	Link w/Hub 13
160182	Bracket w/Button 11	170204	Bracket, Spring 6	192800	Beam, no.1 Pulse 24
160184	Plate, Stop 11	170206	Guidepost 8	192801	Beam, no.2 Pulse 24
160186	Bushing, Shoulder 11	170211	Arm, Rocker 8	192802	Beam, no.3 Pulse 24
160583	Spring, Contact 27	170217	Post 4	192803	Beam, no.4 Pulse 24
160839	Spacer, Shoulder 13	170230	Knob 9	192804	Beam, no.5 Pulse 24
160843	Spring 23	170231	Guide, Upper 10	192805	Beam, no.6 Pulse 24
161107	Stud 4	170232	Guide, Lower 9,10	192806	Beam, no.7 Pulse 24
161108	Stud 12	170233	Stud 9,10	192807	Lever, no.7 Pulse 24
161323	Housing, Gear 17	170234	Bracket, Guide 10	192808	Lever, no.5 Pulse 24
161324	Washer, Flat 17	170235	Bracket, Spring 10	192809	Beam, no.8 Pulse 24
161347	Washer, Felt 19,25	170236	Lever 10	192811	Plate, no.2 Level 24
161431	Lever, Rotary Correcting 17	170237	Lever, Start 10	192812	Plate, no.3 Level 24
		170238	Bail, Reset 10	192813	Plate, no.4 Level 24
161440	Spring 25	170242	Slide, Feed Whole Punch 12	192814	Plate, no.5 Level 24
161443	Detent, Axial Shaft 18			192815	Plate, Top Level 24
161444	Detent, Rotary Shaft 16	170246	Slide w/Insulator 12	192816	Plate, no.6 Level 24
162350	Bail, Rocker 13,25	170247	Guide 12	192817	Plate, no.1 Level 24
162747	Roller 5	172984	Bracket, Spring 7	192818	Lock 24
162763	Bail, Reset 8	173340	Collar 14	192820	Bracket, Separator 24
162850	Handle 23,26	173715	Terminal, Plug Type 25, 27	192823	Guide w/Pivot 24
162862	Bar, Mounting 6,25			192824	Lever 24
162882	Bushing, Insulating 22	173716	Terminal, Receptacle Type 25	192825	Screw, 4-40 x 3/4 Hex 24
162886	Screw, 4-40 x 7/32 Hex 14	173977	Shaft, Print Hammer 17	192827	Bellcrank, Ltrs - Figs 19
163429	Screw, 6-40 Shoulder 25	173978	Spring, Torsion 17		
164386	Bracket, Magnet Mounting 11	173979	Head, Hammer 17	192828	Plate w/Bushing 6,10,12, 17,19,24
		173981	Accelerator, Hammer 17	192829	Plate, Front 19
164521	Plate w/Studs 23	174034	Screw, 4-40 x 13/16 Hex 4	192831	Plate w/Stud 16,17,18,23
164525	Post, Spring 23			192832	Lifter w/Hub 25
164526	Slide w/Post 23	174796	Screw, 2-56 x 5/64 Spl 2	192834	Plate, no.7 Level 24
164528	Bushing 23,24	175804	Typewheel, CRC 17	192835	Bellcrank, no.1 and no.4 19
164529	Lever, Ribbon Reverse 23	176073	Pulley, 21T 14,15		
164530	Bushing 23	176252	Washer, Flat 13	192836	Bellcrank, no.6 19
164531	Pawl, Check 23	176266	Spring, Torsion 6	192837	Bellcrank, no.8 19
164532	Pawl, Feed 23	176450	Bracket 26	192838	Spacer, Front Function Plate 16
164535	Shaft, Right Ribbon Ratchet 23	176451	Bail 26		
		176489	Guide 6,13		

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
192839	Spacer, Rear Function Plate 16	305369	Lever, w/Bushing 5	309232	Plate w/Bushings, Front 3
192841	Bellcrank, no.2 19	305370	Lever, w/Bushing, Rear 4	309233	Lever 6
192842	Bellcrank, no.3 and no.5 19	305371	Lever w/Bushing, Front 4	309234	Latch 6
192844	Plate, Rear 19	305372	Plate w/Pin 5	309235	Cam, Rapid Feed 20
192845	Guide, Bellcrank 19	305373	Plate w/Stud 3	309236	Wheel, Front Feed 3
192846	Retainer, Bellcrank Guide 19	305378	Lever w/Hub 4	309237	Wheel, Rear Feed 3
192847	Bracket, Spring 19,27	305379	Lever w/Hub 4	309238	Plate, Front 2
192848	Bar, Contact Mounting 19	305380	Lever, Actuating 21	309240	Bracket w/Hubs 6,10
192849	Pushbar, no.2 18	305382	Spacer 10	309242	Plate, Pressure 2
192854	Stiffener 19	305387	Shaft w/Bearing 20	309243	Disc 6
192858	Bracket, Mounting 19	305388	Pawl, Feed 8	309246	Shaft 3
192870	Pushbar, Ltrs 16	305389	Pawl, Rear Feed 5	309247	Adapter 14
192871	Pushbar, Figs 16	305390	Pawl, Front Feed 5	309248	Gear, 30T 3
192876	Screw, 4-40 x 21/32 Hex 24	305392	Bracket 4	309249	Gear, 72T 3
192922	Housing, Typewheel Shaft 17	305393	Bushing, Eccentric 4,5	309250	Plate 10,11
193733	Cover, Contact 19	305394	Link w/Pin 4	309251	Shaft w/Bearings 15
193753	Strap, Contact 19	305395	Roller, w/Hub 3	309252	Clamp, Spring 2
193804	Armature 20	305396	Post 21	309253	Shaft w/Bearing 14
193821	Bracket w/Post 20	305397	Guide 2	309254	Clevis, Lower 21
193822	Clamp 20	305398	Latch 12	309255	Spring, Torsion 2
193879	Pushbar, no.1 18	305399	Bracket 2	309256	Bushing 14
194944	Spring 24	309200	Bail, Clutch Reset 21	309257	Eccentric 14
195101	Sleeve, 5/32 ID x 3/8" Lg Insulating 19	309202	Bracket 21,22	309258	Plate w/Bearing, Center 4,5,7
195102	Sleeve, 5/32 ID 7/32" Lg Insulating 19	309203	Arm, Cut-Off Actuating 14,21	309259	Plate w/Bearing, Rear 8, 12
195103	Damper 19	309204	Sleeve 21	309261	Plate w/Guides 2
195141	Blade, Function 27	309205	Post 3	309262	Bracket 21
195215	Plate, Lifter Mounting 25	309206	Stud, Adjusting 3	309264	Block Assembly, Punch 7
195240	Post 11	309207	Disc, Adjusting 3	309266	Arm, Ribbon Drive 23
195251	Armature, Selector 11	309208	Guidepost 6	309267	Guide, Lever 13
195274	Spacer, .014" Thk 24	309209	Plate, Reset 13	309268	Post, Spring 10
195448	Belt, 55T 15	309210	Plate 18	309269	Shaft 13
197067	Contact Assembly 27	309211	Shaft 3	309270	Frame 6,10,13,16,18,25
197072	Bracket, Contact 27	309212	Clevis, Upper 21	309271	Blade, Cut-Off 21
198298	Cover, Contact 27	309214	Lid, Front 2	309273	Plate, Right 2
198745	Sprocket, 16T 20	309216	Lid, Front 2	309274	Bearing 14
198757	Switch 5	309217	Bracket 2,3	309281	Lubricator 10
304542	Extension, Drive Link 25	309218	Lever 4	309283	Chute, Chad 7
304543	Plate, Corrector 18	309219	Lever 4	309286	Lever, Print Hammer 17
304913	Bracket, Guide 16	309220	Bracket, Right 5	309287	Guide 2
305363	Lever w/Bushing 5	309221	Bracket, Left 5	309289	Pulley, 14T 15
305366	Lever, w/Bushing 5	309222	Insulator 5	309297	Guide, Ribbon 17
		309223	Bushing, Eccentric 4	309299	Retainer, Wick 10
		309224	Bracket 4	309306	Guide 7
		309225	Clamp, Spring 2	309311	Post 18
		309228	Sleeve 3	309313	Knob 3
		309230	Plate, Bearing 20		
		309231	Shaft 17		
			Lever, Trip 6		

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number	Part Number	Description and Page Number
309314	Bracket, Switch 21	311446	Spring, Contact 19	332841	Screw, 4-40 x 5/16 Spl 4
309323	Bracket, Connector 25	311447	Spring, Contact 19	332845	Cable w/Terminal 27
309333	Lubricator Assembly 10	311492	Screw, 2-56 Spl 19	332959	Bracket 22
309355	Contact Assembly 19	318737	Nut, 10-32 Hex 21	332960	Contact Assembly 1,22
309357	Wick, Felt 7	320408	Terminal, Spade Type 11	332961	Cover, Insulating 22
309358	Spring, Pressure 2	324517	Rod 25,26	332962	Follower, Cam 22
309360	Plate 20	324518	Latch 25	332963	Plate 22
309364	Solenoid 5	327541	Shim, 0.006 Thk 17	332964	Cam 14
309380	Link, Trip 25	327542	Guide, Latch 6	332975	Disc 14
309382	Panel, Left Lower 2	327568	Bracket, Guide 8	332980	Solenoid 4
309383	Stud 5	327571	Guard, Contact 19	332981	Post 18
309388	Pin 3,5	327573	Pawl, Blocking 12	332982	Sector 18
309390	Bail 8	327574	Stud 3	333217	Plate, Nut 22
309393	Lever 5	327575	Set of Parts 3	333218	Post, Eccentric 2
309394	Shaft, Extension 3	327578	Bushing, Eccentric 8	333219	Roller, Detent 5
309395	Coupling 3	327579	Pawl, Feed 8	333230	Plate 2
309396	Screw, 4-40 Thumb 2	327580	Set of Parts 8	333275	Plate 7
309397	Bracket 10	327586	Lever w/Hub 4	333288	Shield, Oil 20
310158	Screw, 6-32 x 7/32 Hex 5	327587	Lever w/Hub 4	333292	Accelerator, Hammer 17
311223	Plate, Identification 6	327588	Set of Parts 4	333978	Label, Scale 7
311445	Spring, Contact 19				