

38 COVER

LUBRICATION

CONTENTS	PAGE
1. GENERAL	1
2. COVER	1
ASR cover	1
Rear cover hinges	2
Lids	2

relubricate cover. Thereafter, lubricate every 500 operating hours or six months, whichever occurs first.

1.04 The following symbols and their meaning apply to the lubrication points in the line drawing:

<u>SYMBOL</u>	<u>MEANING</u>
O	Oil — Apply KS7470 oil as instructed.
D	Dry — No lubricant permitted.

1. GENERAL

1.01 This section provides lubrication procedures for the Model 38 Cover. To remove the cover as a unit from the teletypewriter, refer to Section 574-400-702TC.

1.02 Lubrication of the cover is straight forward. A line drawing contains specific points of the cover to be lubricated. Apply oil as directed and to points where it will adhere and not run off.


1.03 Lubricate the cover before placing in service, and just before placing it in storage. After about 100 to 200 operating hours,

1.05 References to front, rear, left, right, etc, are made viewing the teletypewriter from its normal operating position.


CAUTION: DISCONNECT POWER BEFORE APPLYING ANY LUBRICANT. DO NOT USE SOLVENTS TO CLEAN PLASTIC PARTS OR DECORATIVE FINISHES. USE A SOFT DRY CLOTH. IF NECESSARY, USE A SOFT DAMP CLOTH WITH MILD DETERGENT, THEN RINSE AND BUFF WITH A SOFT DRY CLOTH.

2. COVER

2.01 ASR Cover

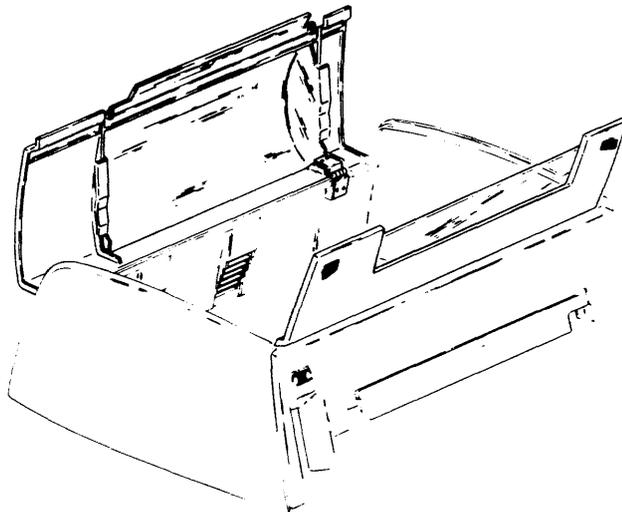

2.02 Rear Cover Hinges

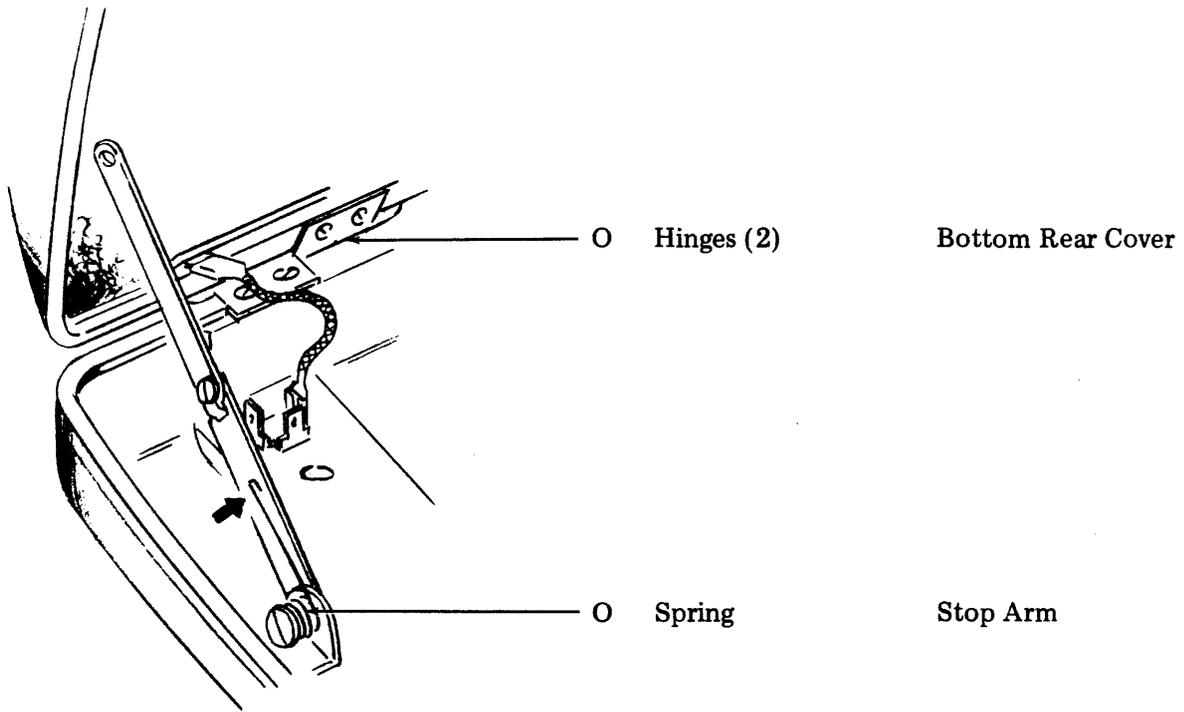

2.03 Lids

