



43 OPERATOR CONSOLE

WIRING

CONTENTS	PAGE	
1. GENERAL	1	1.02 Whenever this section is reissued, the reason for reissue will be listed in this paragraph.
2. WIRING	2	1.03 For additional wiring information, plug or cable locations, refer to Station Wiring, Section 574-500-400.
1. GENERAL		1.04 Where possible, small notes indicating voltage levels have been added to aid in troubleshooting.
1.01 This section provides wiring information for the 43 operator console.		

2. OPERATOR CONSOLE WIRING

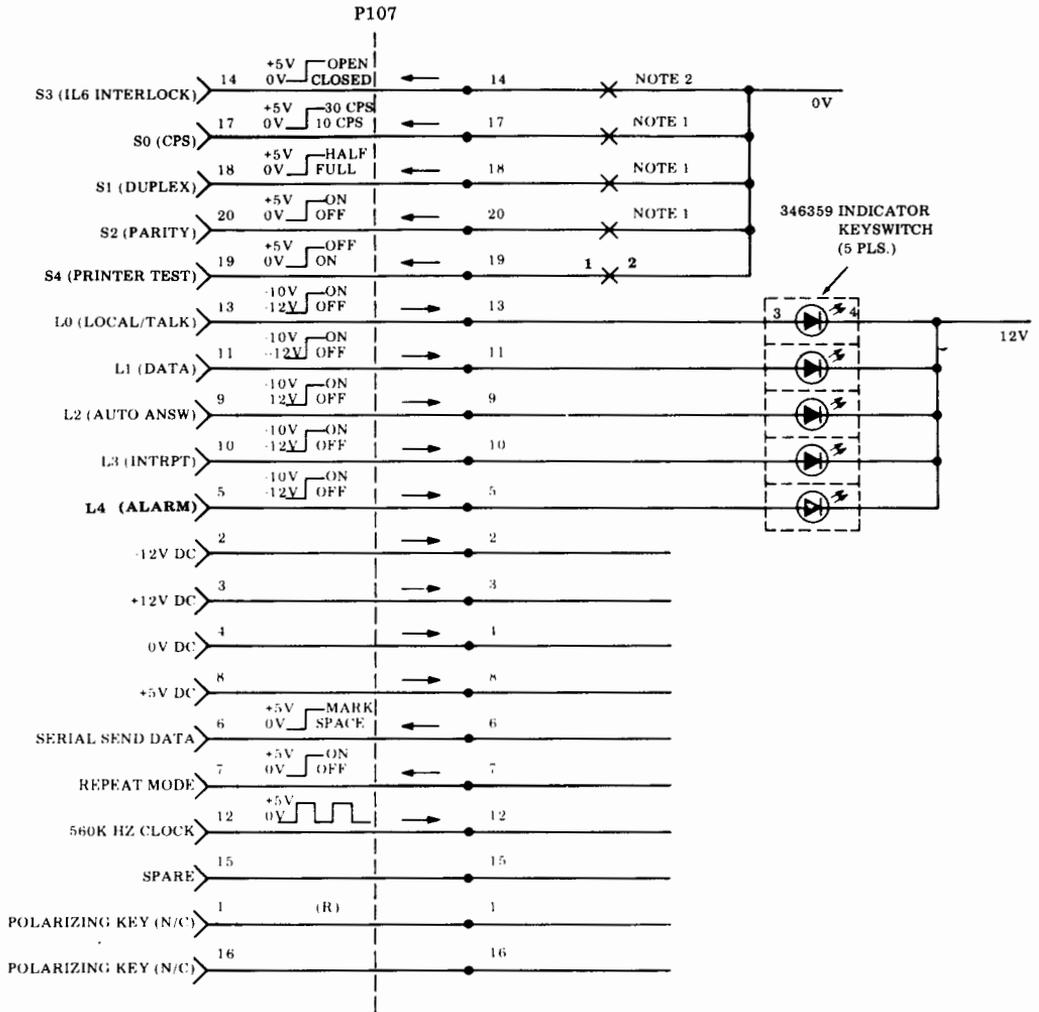


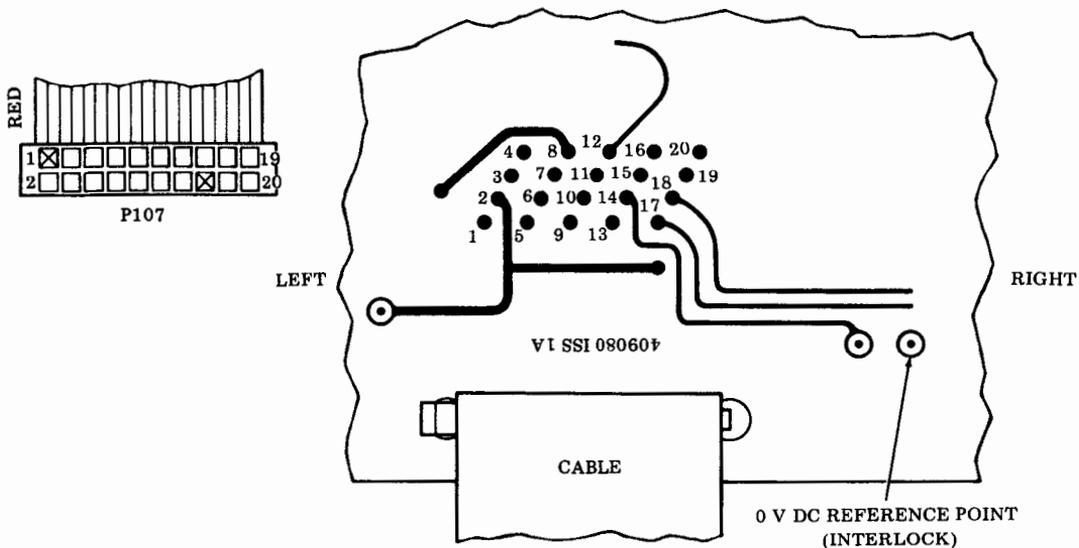


KEYSWITCH TYPES

Note 1:



SWITCH KEYPAD	OPEN (UP)	CLOSED (DOWN)
CPS (S0)	30	10
DUPLEX (S1)	HALF	FULL
PARITY (S2)	ON	OFF

 

(Bottom View)

 

(Bottom View)

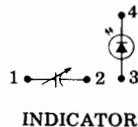 

Note 2: When the cover is open, S3 switch is up (open). This signal will inhibit the printer from receiving data. Closing the cover will depress (close) the switch enabling the printer.

Note 3: All voltages are measured in respect to 0 V dc.

Note 4: The input voltage from pin 12 swings between 0 V dc and +5 V dc. The input voltages for pins 13, 11, 10, 9 and 5 swing between -12 V dc and -10 V dc. The output voltages for pins 6, 7, 14, 17, 18, 19, and 20 swing between 0 V dc and +5 V dc.