

43 ENCLOSURES AND PAPER HANDLING

ADJUSTMENTS

CONTENTS	PAGE	
1. GENERAL	1	1.03 After an adjustment is completed, tighten any screws or nuts loosened to make the adjustment.
2. TOOLS REQUIRED	1	1.04 Reference in the procedure to left or right, up or down, and top or bottom, etc, refer to the teleprinter in its normal operating position.
3. CABINET ADJUSTMENTS	2	1.05 Adjustments should be checked and performed when a trouble indicates a specific adjustment may be out of tolerance, or when an adjustment is disturbed to enable a part to be removed or replaced.
KEYBOARD TO COVER ALIGNMENT	2	
COLUMN INDICATOR POSITIONING	2	
1. GENERAL		2. TOOLS REQUIRED
1.01 This section provides adjustment information for the 43 cabinet.		2.01 The only tool required to perform the cabinet adjustments is a 100982 screwdriver (1/4 inch, 6 inch blade).
1.02 This section is reissued to remove manual number from first page.		

3. CABINET ADJUSTMENTS

KEYBOARD TO COVER ALIGNMENT

The following two requirements must be met:

(1) Requirement

Left to Right Positioning — When the free play movement of the cover (left to right) is taken up lightly in each direction, the cover shall not touch any opcon keytops.

To Adjust

Loosen two screws and position the printer and rear frame assembly to meet the requirement.


(2) Requirement

Forward Positioning — The two front bushing clamps shall firmly engage the opcon bushings and hold the printer and rear frame assembly fully forward into the housing. There should be no front to rear play between the bushing and clamp (left and right sides).

To Adjust

Insert a screwdriver into the square hole in the nut plate and gently twist (or pry) the screwdriver with enough force to meet the requirement.

Warning: Do not overtwist the screwdriver.

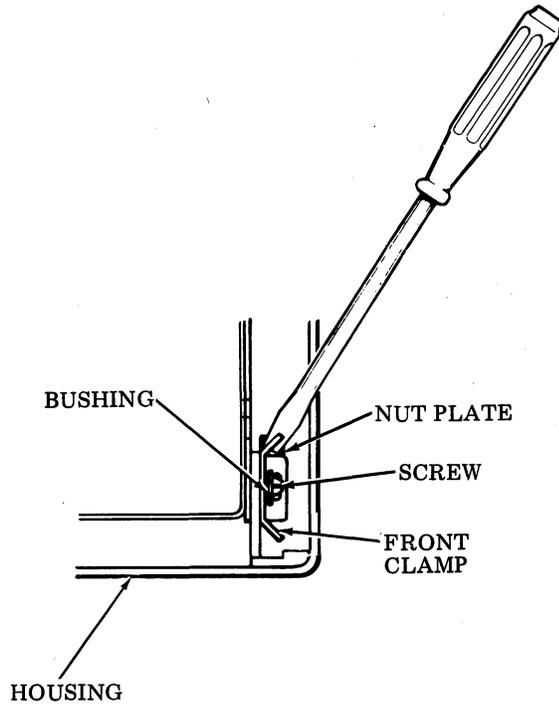

(Top View — Right Corner)

COLUMN INDICATOR POSITIONING

Requirement

With power applied, the cover closed, and the print head positioned to column one (1), the print head marker should point to the first mark on the indicator scale.

To Adjust

Reposition scale to meet the requirement.

Note 1: Various means are used to hold the indicator scale in position. If glue is present, gently remove, perform adjustment and reglue indicator scale using household cement or equivalent.

Note 2: This adjustment to be refined when making the KEYBOARD TO COVER ALIGNMENT adjustment.

