

35A LINE CONTROLLER FOR
8A1 DATA SELECTIVE CALLING SYSTEM



LUBRICATION

CONTENTS	PAGE	
1. GENERAL	1	quantity of lubricant to be used. Lubricate the assembly before placing it in service.
2. BASIC UNITS	2	1.03 The cabinet should be lubricated after each six month period or when the operating components of the set are serviced.
CABINET	2	1.04 Use KS7470 oil at all points requiring oil, and KS7471 grease at all points requiring grease.
Lower cover hinge and latch	3	1.05 The unit should be thoroughly lubricated, but overlubrication, which might allow oil or grease to be thrown to other parts, should be avoided. Specific lubrication requirements and the amount of lubricant are indicated at each lubrication point in accordance with the following code:
Upper cover hinge and latch	2	O1 Apply 1 drop of oil.
1. GENERAL		O2 Apply 2 drops of oil.
1.01 This section covers the lubrication instructions for the 35A Line Controller cabinet. Refer to Sections 574-237-701, 574-233-701, and 570-220-701 for lubrication of the distributor, reperforator, and motor units. This section is being reissued to change the designation 35A-1 Line Controller to 35A Line Controller.		O3 Apply 3 drops of oil.
1.02 The cabinet should be lubricated as directed in this section. The figures indicate the points to be lubricated and the		G Apply thin film of grease.
		1.06 Remove any oil from finished surfaces with a soft clean cloth.

2. BASIC UNITS

CABINET

2.01 Upper Cover Hinge and Latch

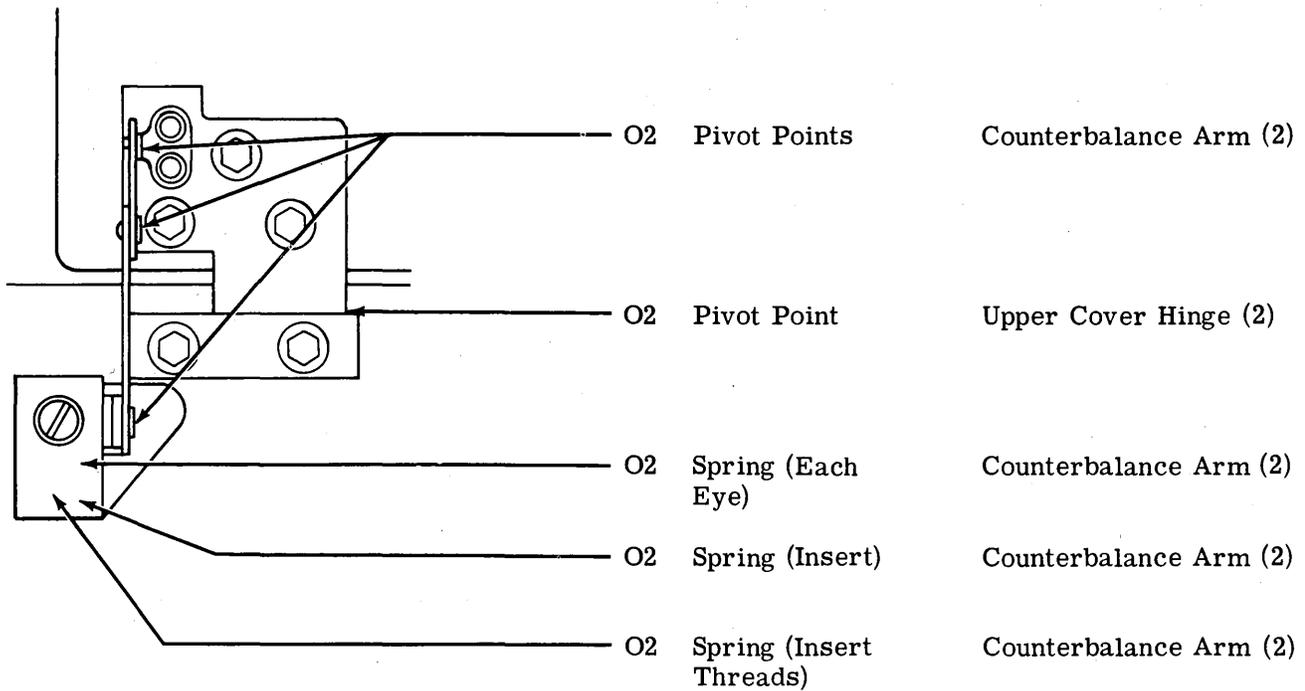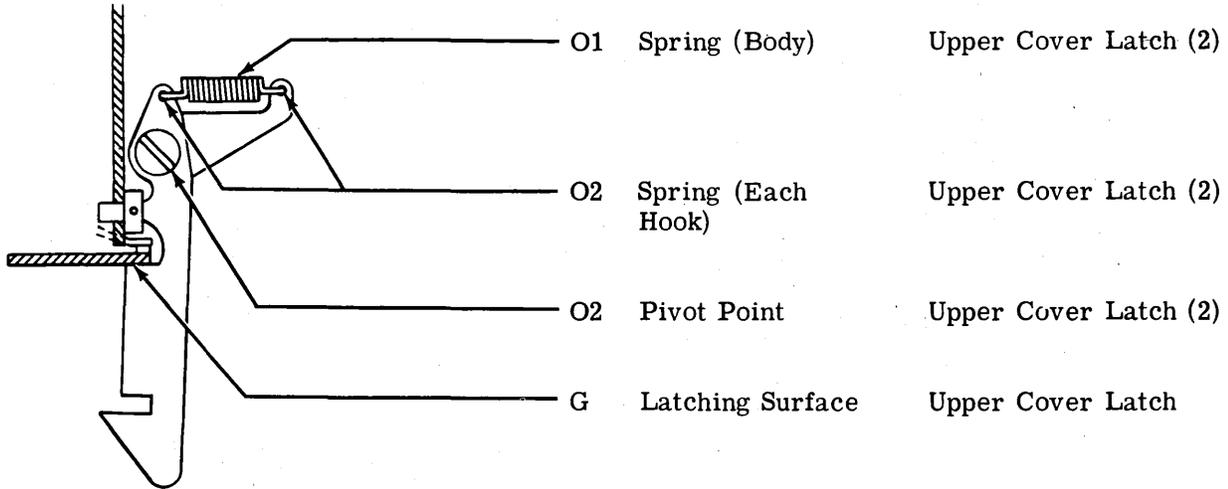

2.02 Lower Cover Hinge and Latch

