

“DATASPEED*” 40/0 AND 40/1 SETS AND STATIONS

WIRING

CONTENTS	PAGE	
1. GENERAL	1	1.02 Whenever this section is reissued, the reason for reissue will be listed in this paragraph.
2. WIRING DIAGRAMS	3	1.03 The information in this section when used in conjunction with Test and Troubleshooting, Section 582-200-500 will aid in locating cabling faults.
KD Set for PTI (Parallel Terminal Interface) Application (40/0)	3	1.04 When ordering replaceable components, unless otherwise specified, prefix each part number with the letters “TP” (ie, TP341893).
KDP Set for Switched-Network Application (40/1)	4	1.05 If a more comprehensive presentation of the wiring information is required, the following wiring diagram packages are available from Teletype Corporation.
ROP Cabinet w/40C103 Controller ...	5	
Printer Cabinets.	6	
341893 Monitor Extension Cable Assembly.	7	
341895 Printer Extension Cable Assembly.	7	
341896 Data Set Interface Cable Assembly.	8	
401640 ROP Extension Cable Assembly.	8	
401641 Opcon Extension Cable Assembly.	9	
3. SET AND STATION CABLE ARRANGEMENTS	10	WDP0391 40C102 Controller
ROP Set or Station	10	WDP0392 40C201 Controller
KD Station	11	WDP0393 40C202 Controller
KDP Set — Adjacent Logic	11	WDP0395 KD/KDP With 40C102
KDP Station — Adjacent Printer	12	WDP0396 KD/KDP With 40C202
KDP Set — Adjacent Printer on Pedestal.	12	WDP0397 KD With 40C201
KDP Set — Printer Under Monitor, Logic in Pedestal	13	WDP0400 40MN101 Display Monitor
		WDP0401 ROP Set
		WDP0402 40C103 ROP Controller
		WDP0403 40K101 Operator Console
		WDP0404 40K001 ROP Opcon
		WDP0405 40PSU101 Power Supply
		WDP0423 40DL291 Display Logic
		WDP0434 40AB101 Answer-Back
		WDP0435 40 Printers
		WDP0441 40 Printer Cabinets
1. GENERAL		
1.01 This section provides the wiring information for DATASPEED 40/0 Parallel Terminal Interface (PTI) and DATASPEED 40/1 Asynchronous Switched-Network station applications.		1.06 Some notes indicating voltage levels have been provided on the wiring diagrams to aid in troubleshooting. The physical location of plugs, cables, or connectors can be found in Section 582-200-700.

*Registered Trademark of AT&TCo.

SECTION 582-200-400

1.07 The following dangers and warning are to be used as safety measures for the apparatus and the craftsperson.

Danger 1: Turn off all power and signal sources before removing or replacing any component.

Danger 2: Wear approved safety glasses when the housing of the monitor is removed, as the display tube is fragile in the neck area and is subject to implosion if broken. Be careful not to strike the glass of the tube with tools or components when working in its vicinity.

Warning: To avoid possible internal damage to circuitry, wear a 346392 static discharge strap connected to ground to allow static discharge before handling circuit cards for removal or replacement. Avoid touching circuit lands or components as much as possible.




Attach static ground strap tightly to wrist.




Attach clip end of static discharge strap to frame ground.

2. WIRING DIAGRAMS

2.01 KD Set for PTI (Parallel Terminal Interface) Application (40/0)

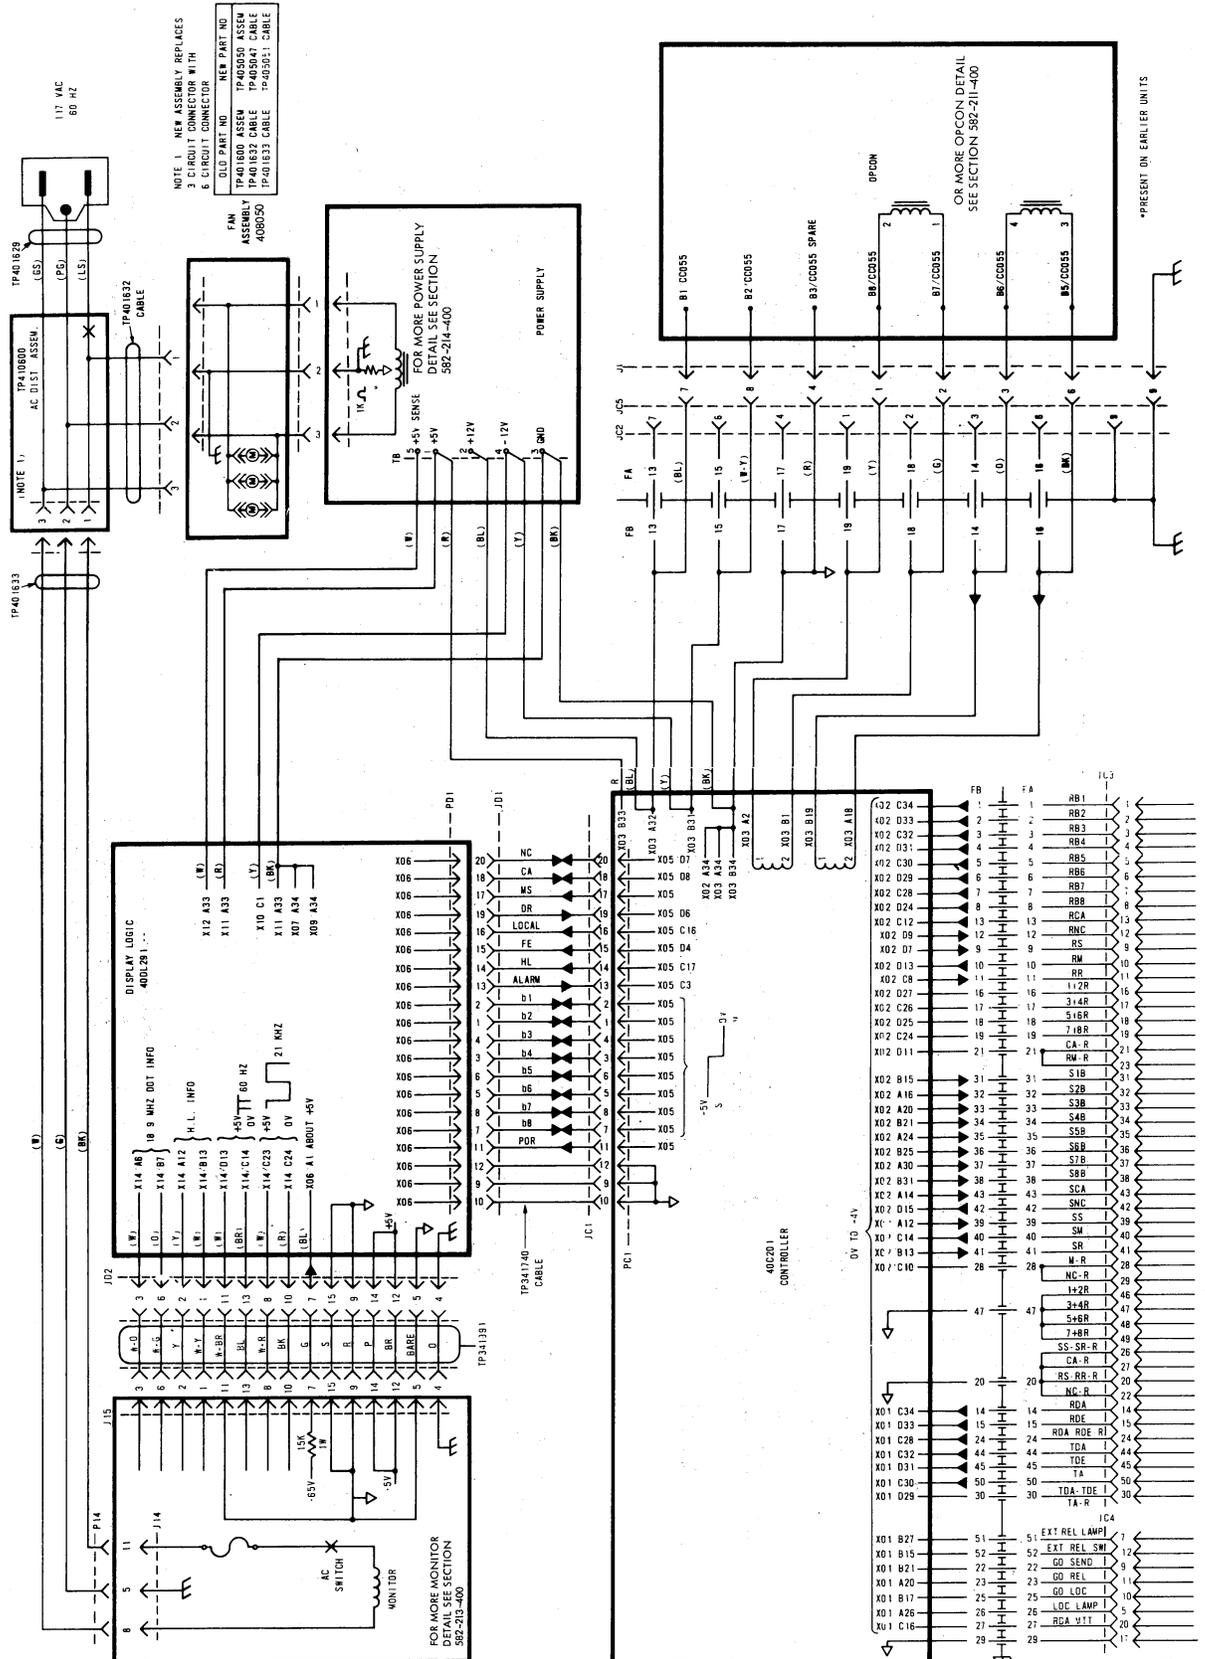

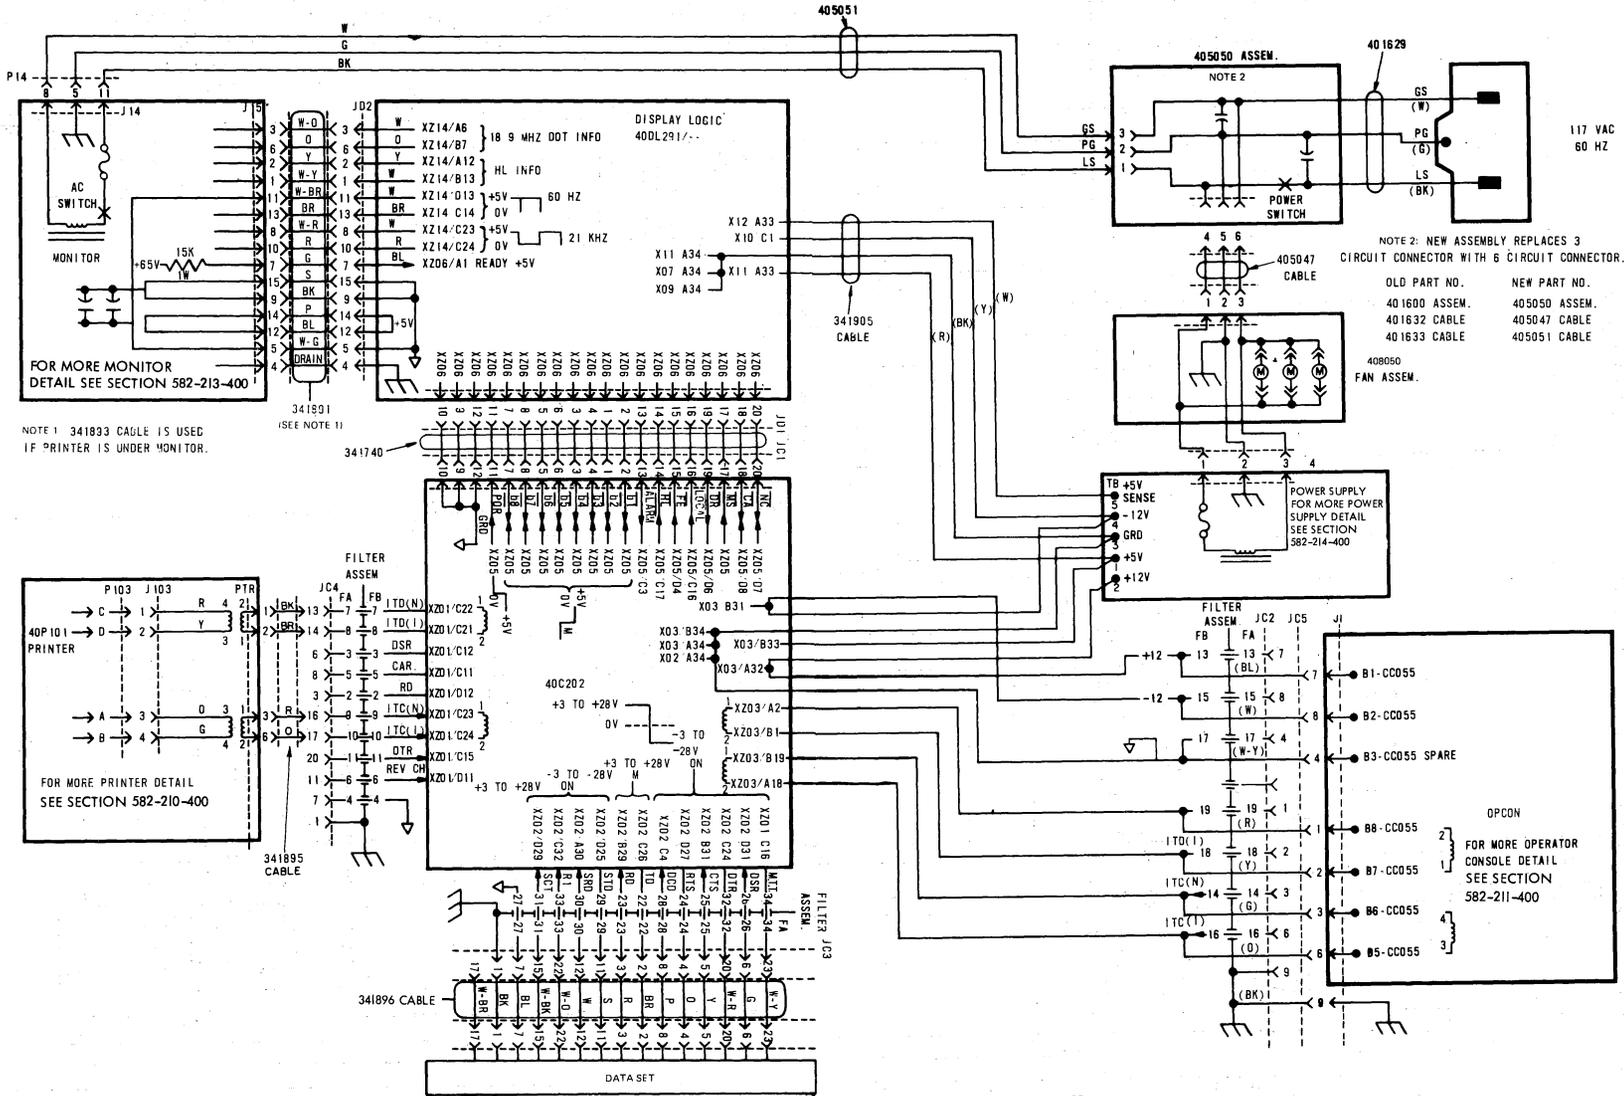

NOTE 1: 341893 CABLE IS USED IF PRINTER IS UNDER MONITOR.

FOR MORE MONITOR DETAIL SEE SECTION 582-213-400


FOR MORE PRINTER DETAIL SEE SECTION 582-210-400

NOTE 2: NEW ASSEMBLY REPLACES 3 CIRCUIT CONNECTOR WITH 6 CIRCUIT CONNECTOR.
OLD PART NO. 401600 ASSEM.
NEW PART NO. 405050 ASSEM.
401632 CABLE 405047 CABLE
401633 CABLE 405051 CABLE




POWER SUPPLY FOR MORE POWER SUPPLY DETAIL SEE SECTION 582-214-400

OPCON
FOR MORE OPERATOR CONSOLE DETAIL SEE SECTION 582-211-400

2.03 ROP Cabinet w/40C103 Controller

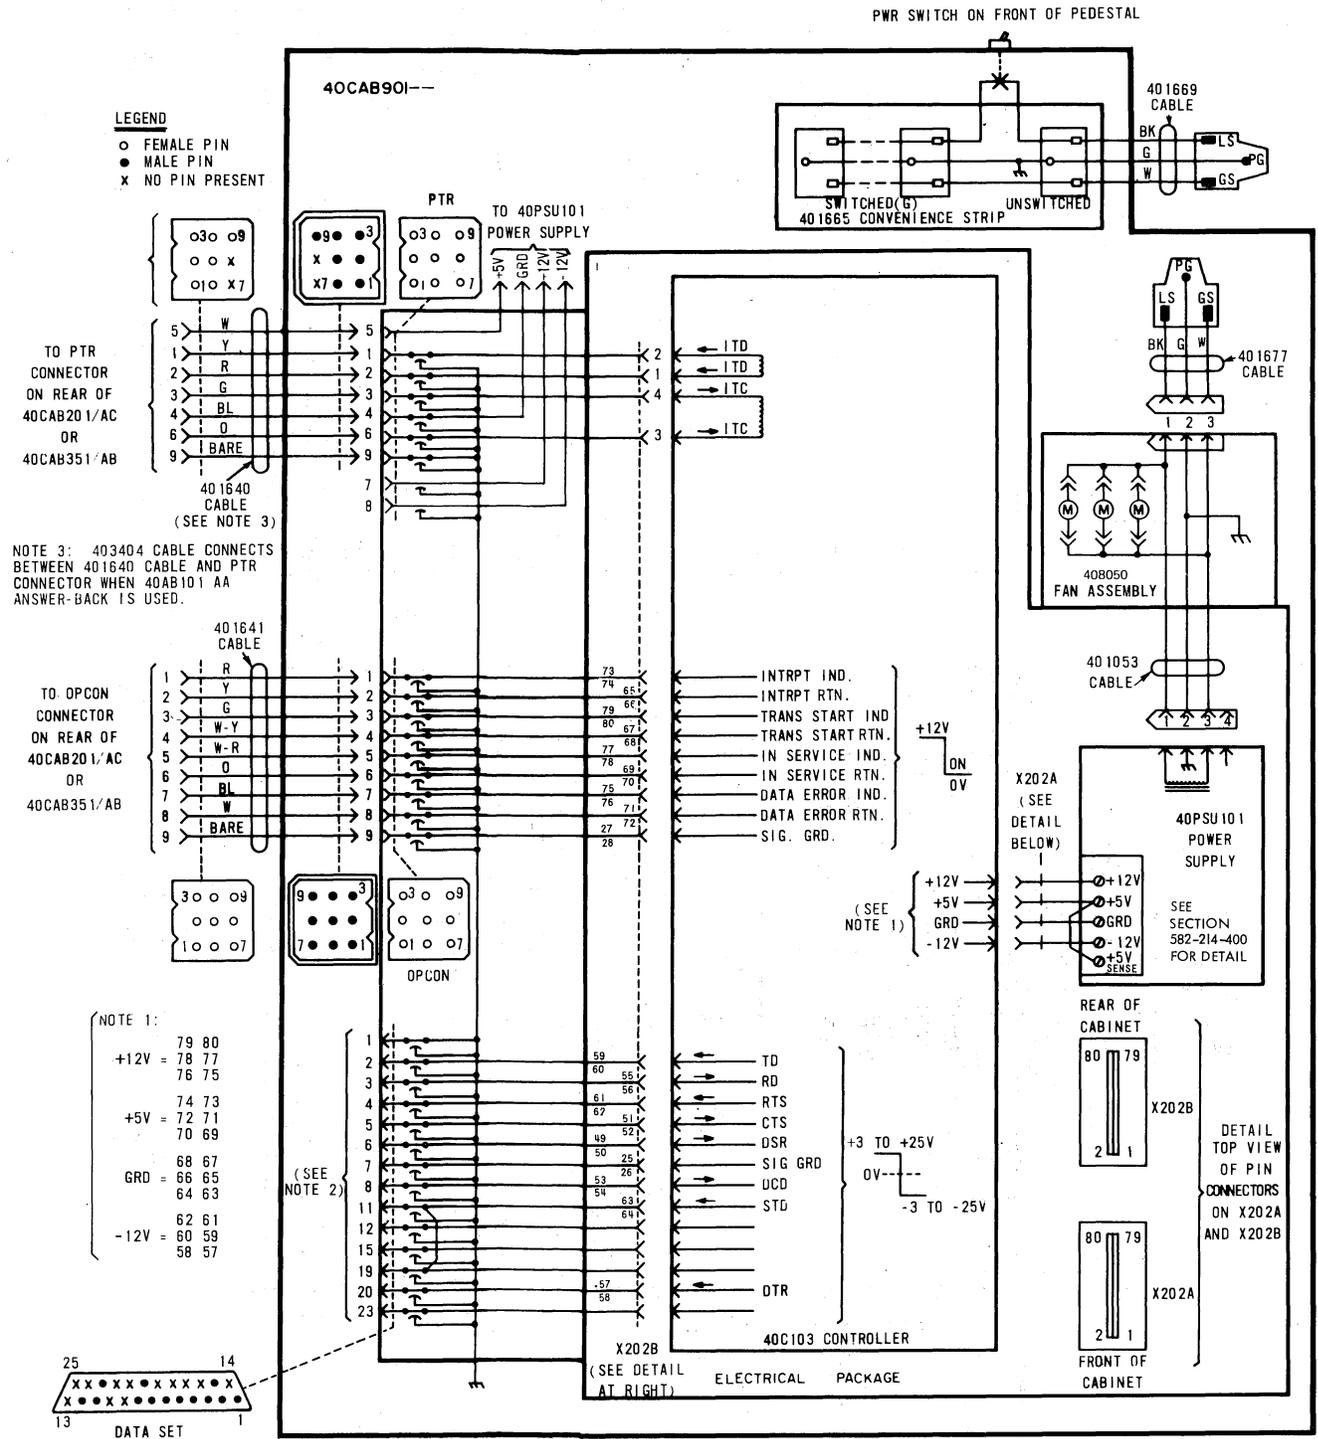

2.04 Printer Cabinets

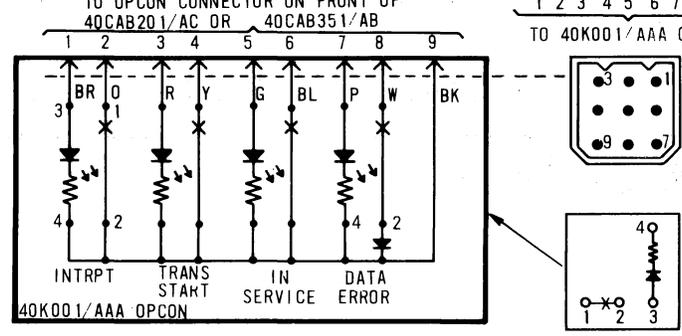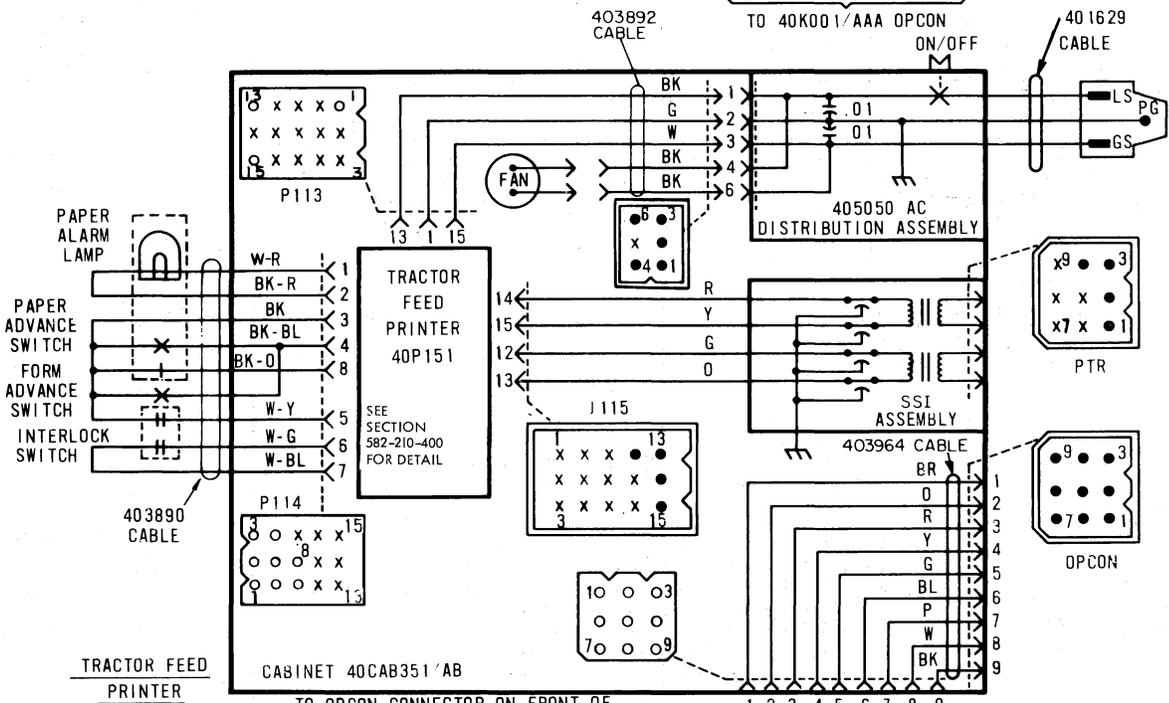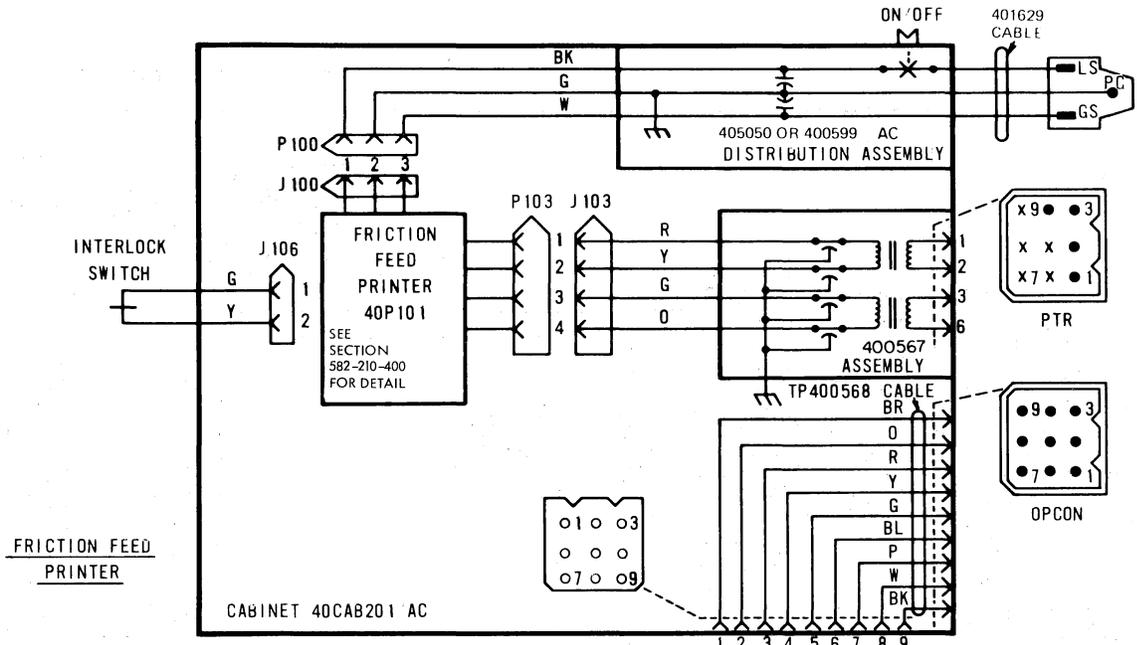


BOTTOM VIEW OF SWITCHES

2.05 341893 Monitor Extension Cable Assembly

341691 CONNECTOR		341729 CONNECTOR	
1	W-Y	1	} TWISTED
2	Y	2	
3	W-O	3	} TWISTED
6	O	6	
4	DRAIN WIRE	4	} TWISTED
5	W-G	5	
7	G	7	} TWISTED
8	W-R	8	
10	R	10	} TWISTED
9	BK	9	
11	W-BK	11	} TWISTED
13	BR	13	
12	BL	12	
14	P	14	
15	S	15	


ACTUAL WIRING

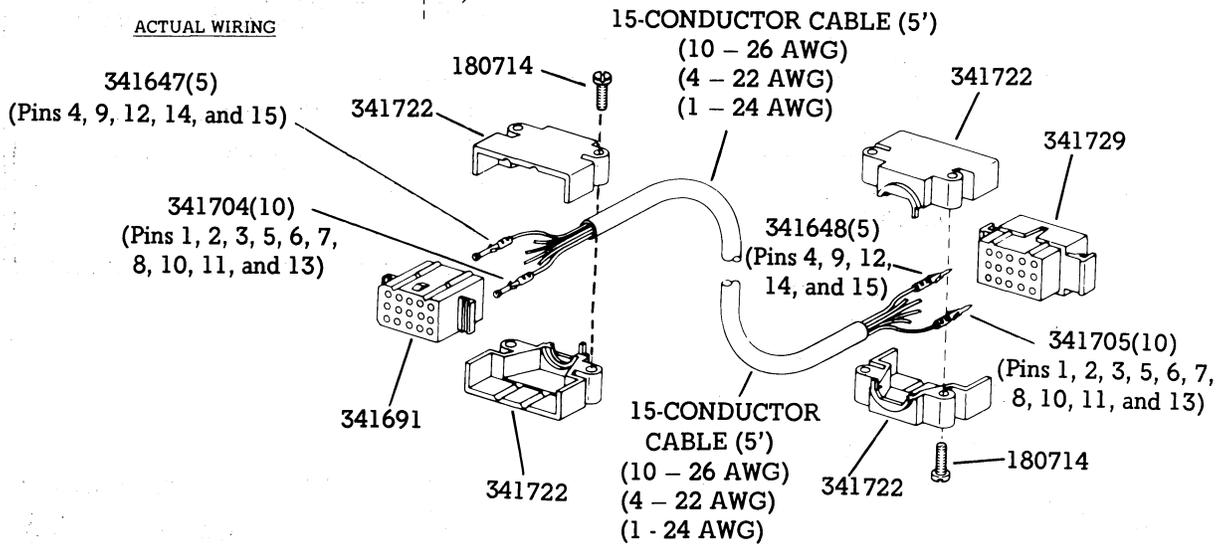



2.06 341895 Printer Extension Cable Assembly

341977 CONNECTOR		401150 CONNECTOR	
13	BK	1	}
14	BR	2	
16	R	3	}
17	O	6	
	Y (SPARE)		


ACTUAL WIRING

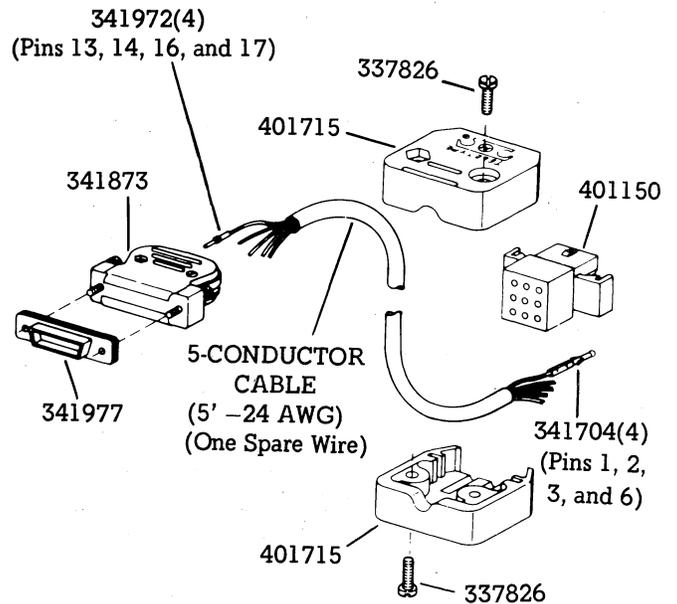



2.07 341896 Data Set Interface Cable Assembly

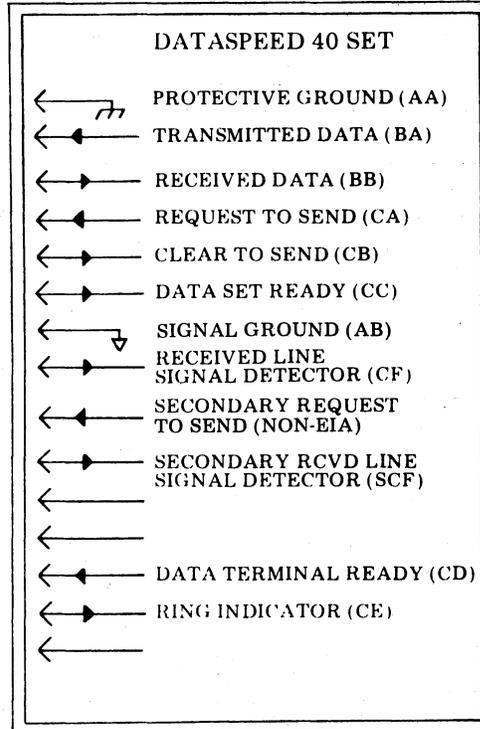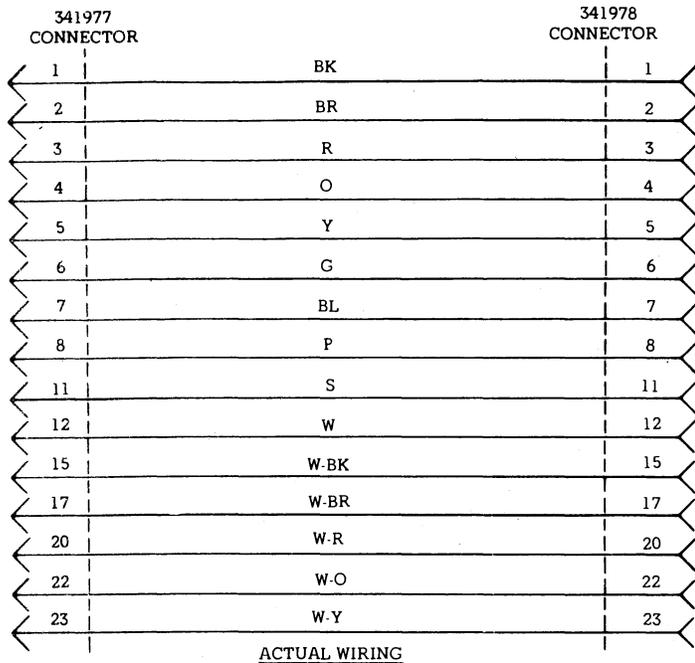

15-CONDUCTOR CABLE (5' -24 AWG)

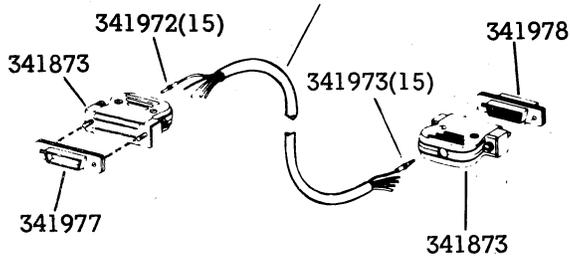


2.08 401640 ROP Extension Cable Assembly

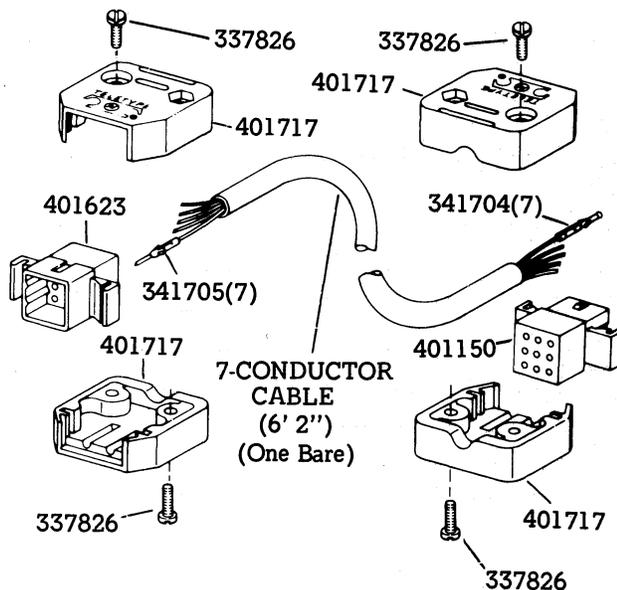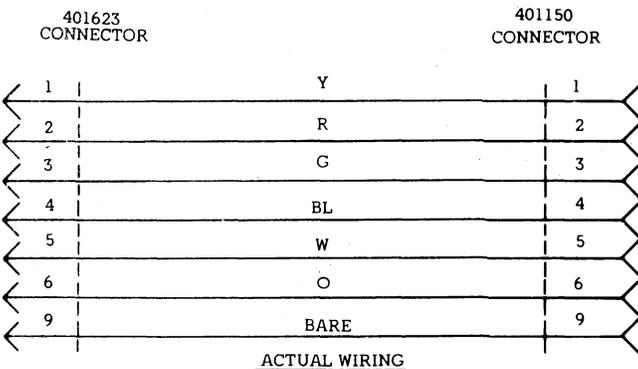

2.09 401641 Opcon Extension Cable Assembly


401623 CONNECTOR			401150 CONNECTOR	
1		R		1
2		Y		2
3		G		3
4		W-Y		4
5		W-R		5
6		○		6
7		BL		7
8		W		8
9		BARE		9

ACTUAL WIRING

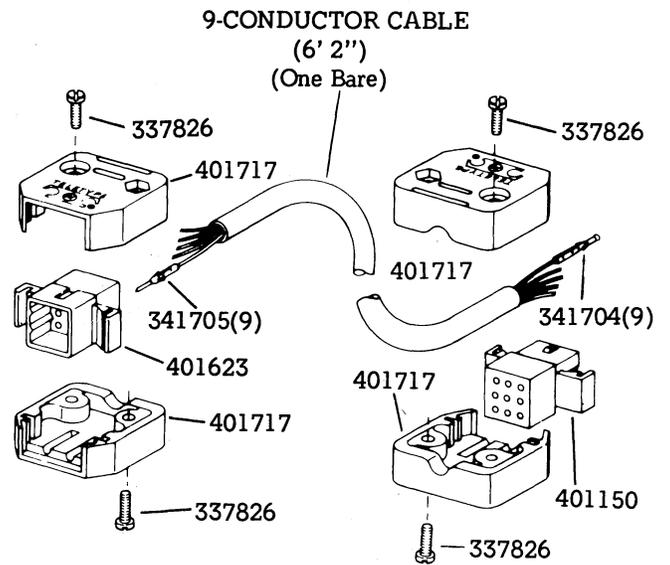


3. SET AND STATION CABLE ARRANGEMENTS

3.01 ROP Set or Station

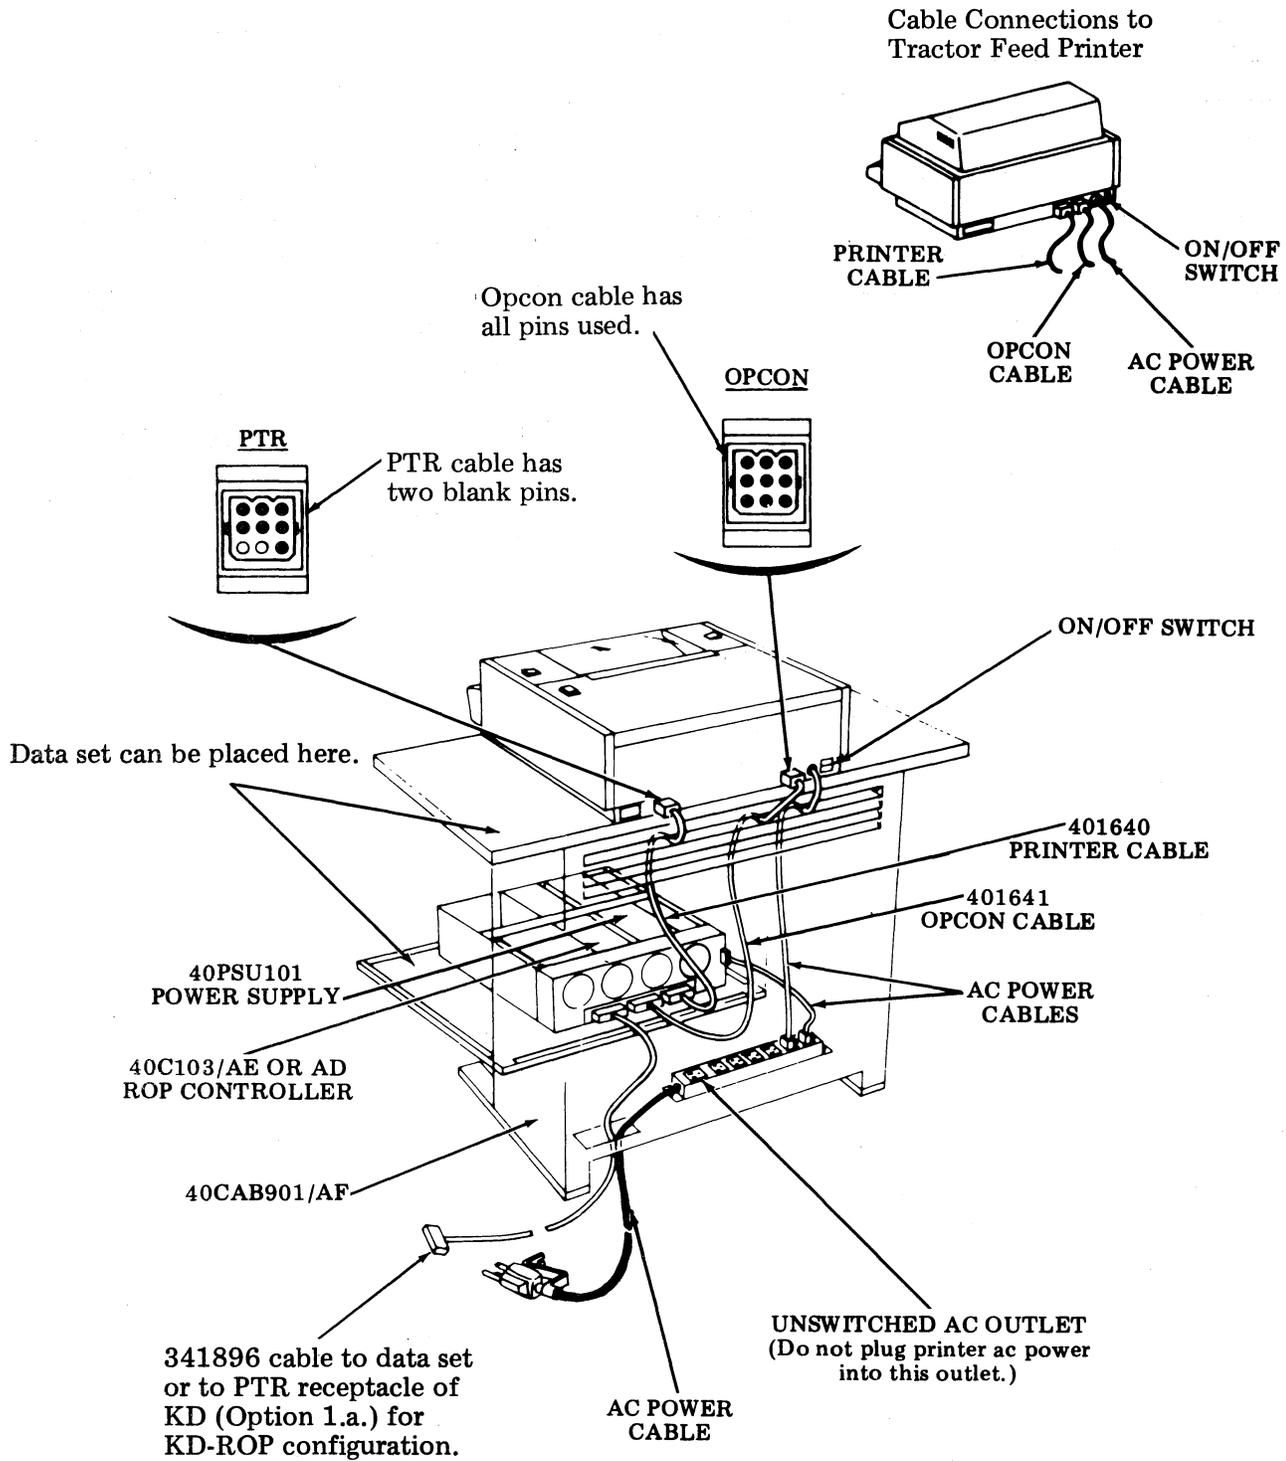


3.02 KD Station

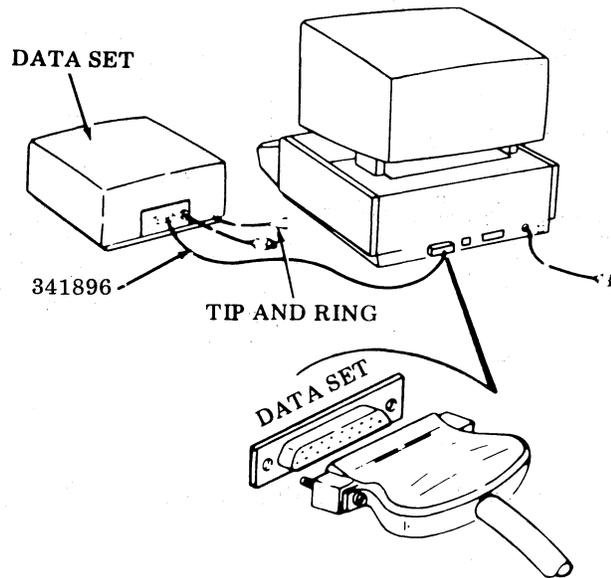


Note: This station arrangement may also use a pedestal, with the data set mounted in the pedestal.


3.03 KDP Set — Adjacent Logic (Printer Under Monitor — Friction Feed Only)

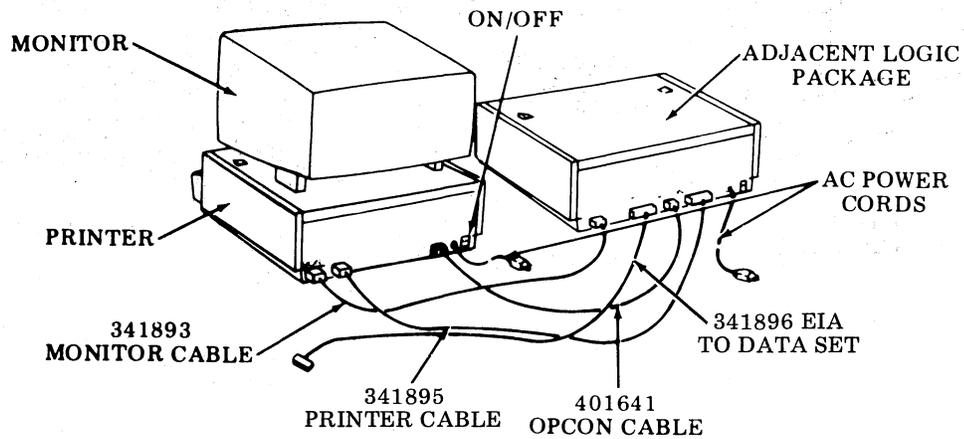

3.04 KDP Station — Adjacent Printer (Friction or Tractor Feed)

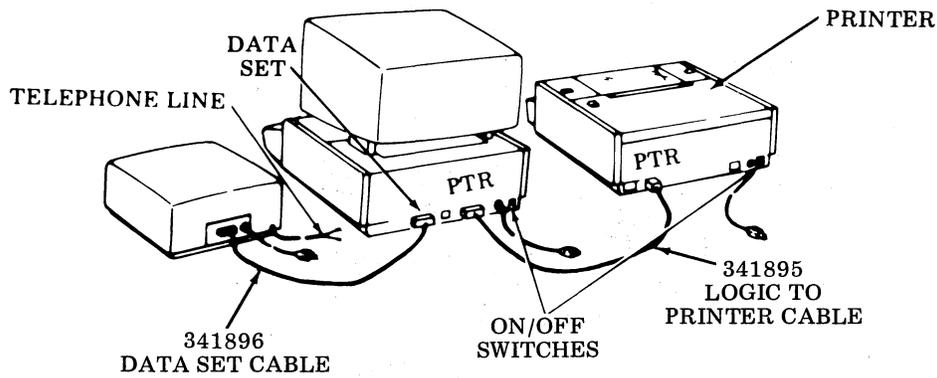

3.05 KDP Set — Adjacent Printer on Pedestal (Friction Feed Only)

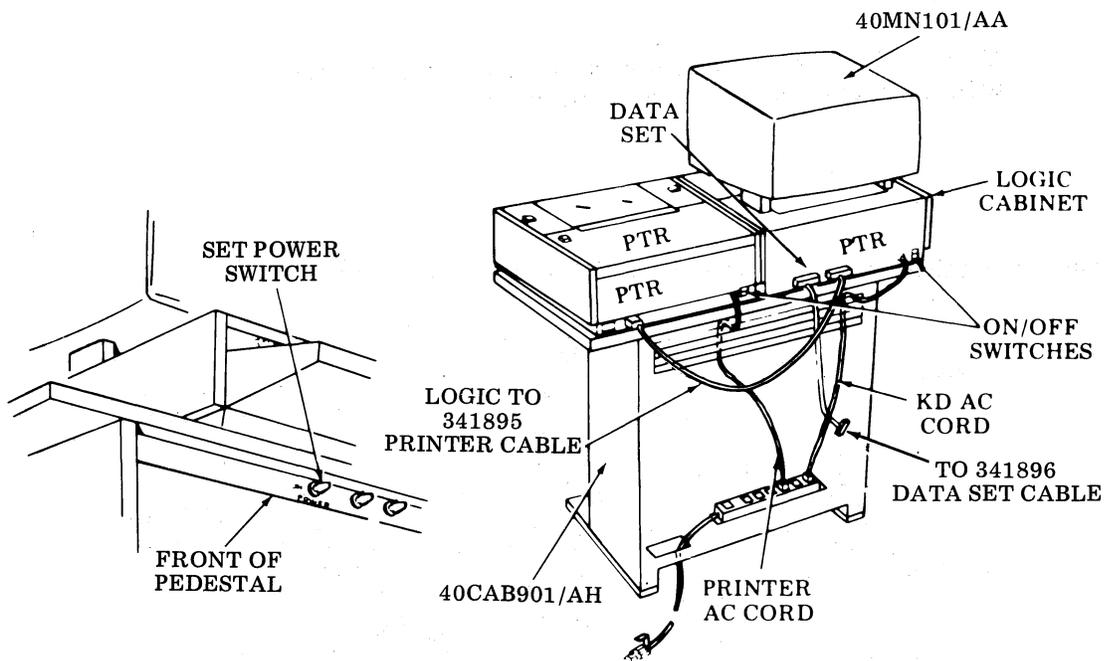

3.06 KDP Set — Printer Under Monitor, Logic in Pedestal (Friction Feed Only)

