

SYNCHRONOUS "DATASPEED\*" 40/4  
 SINGLE DISPLAY STATION ARRANGEMENTS  
 DISASSEMBLY/REASSEMBLY AND PARTS




CONTENTS	PAGE	1. GENERAL
1. GENERAL .....	1	1.01 This section contains all necessary information on the removal and replacement of various components of DATASPEED 40/4 Single Display Station Arrangements. This section also includes locations of test switches and indicators used in trouble analysis and testing of the station.
2. DISASSEMBLY/REASSEMBLY....	3	
MONITOR .....	3	
OPCON.....	3	
PRINTERS .....	4	1.02 Whenever this section is reissued, the reason for reissue will be listed in this paragraph.
A. Friction Feed Printer.....	4	
B. Tractor Feed Printer (80 or 132 Column) .....	5	1.03 Abbreviations used in this section are defined in Section 582-200-101.
PEDESTALS AND CABINETS.....	5	1.04 To disassemble or reassemble parts (or units) of this section, the following tools (or equivalents) are required:
40PSU101 POWER SUPPLY.....	6	Screwdriver, 1/8 inch blade
CONTROLLER.....	7	Screwdriver, 1/4 inch blade
A. Circuit Cards .....	7	Socket wrench, 1/4 inch
B. Cables .....	8	Socket wrench, 5/16 inch
C. Back Panel .....	12	Open-end wrench, 1/4 inch
D. Ventilation Assembly .....	13	Open-end wrench, 1/2 inch
3. PARTS .....	15	Static ground strap, 346392 (required only if circuit cards are handled)
INDEX OF REPLACEABLE PARTS .....	17	Terminal extractor, 402840

*Note:* When ordering replaceable components, unless otherwise specified, prefix each part number with the letters "TP" (ie, TP410055).

\*Registered Trademark of AT&TCo.

1.05 Grounding Strap Locations

Note: Remove strapping only when necessary.

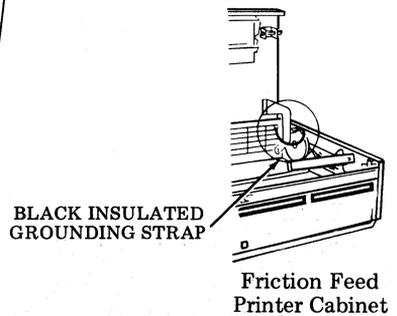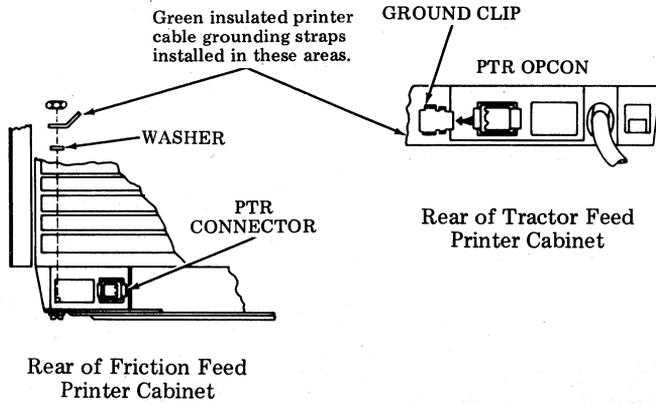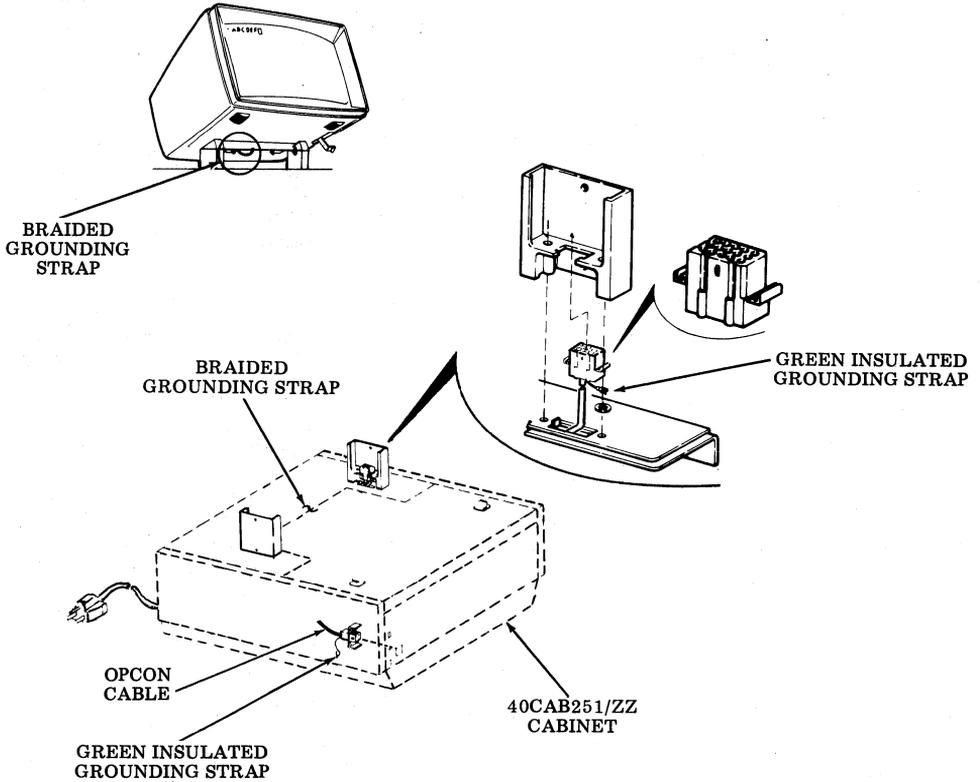


2. DISASSEMBLY/REASSEMBLY

**Caution:** Remove all power from the set before performing any component replacement or conversions. This does not apply to cover removal for access to test switches, or to power on adjustments of the monitor.

MONITOR

2.01 To remove the monitor:

- ① Removal of entire monitor unit from set:  
Grasp monitor by sides near supports and simply lift up. Electrical cable connectors are part of support assembly.
- ② Removal of monitor housing:  
Tilt monitor back and disengage latch. Slide housing back partially. Position monitor to its normal position making sure it locks in that position. Remove housing completely.

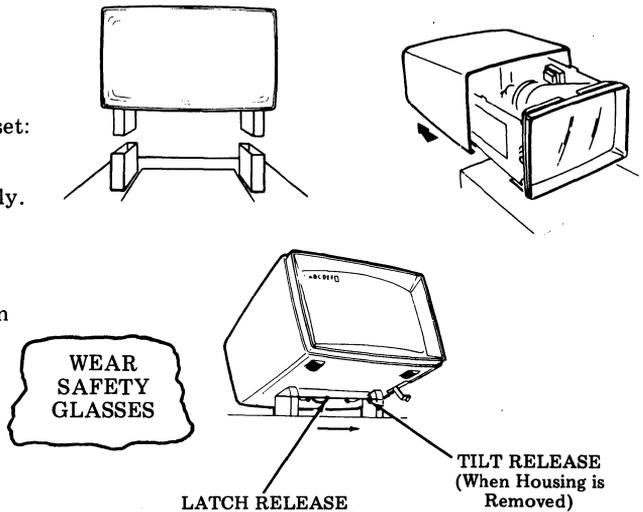


2.02 To replace the monitor, reverse the removal procedures of 2.01. For further disassembly of the monitor, refer to Section 582-213-701 or FIMP 579-505-350 (Part 7).

OPCON

2.03 To remove the opcon:

- ① Place thumb on inward tab of opcon (both sides).
- ② Press downward into unlatched position (each side).
- ③ Remove opcon by pulling straight away from the cabinet.

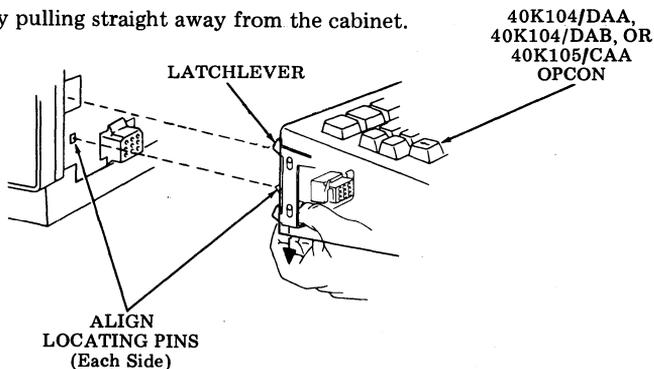


2.04 To replace the opcon, reverse the removal procedures of 2.03. When replacing opcon, make sure locating pins are fully engaged before pushing latchlevers upward into locked position. For further disassembly of opcon, refer to Section 582-211-700 or FIMP 579-505-350 (Part 7).

PRINTERS


A. Friction Feed Printer

2.05 To remove the entire printer assembly:

*Note:* The circuit card can be removed after Step 4 of disassembly. If printer is not being removed omit Steps 2 and 3.

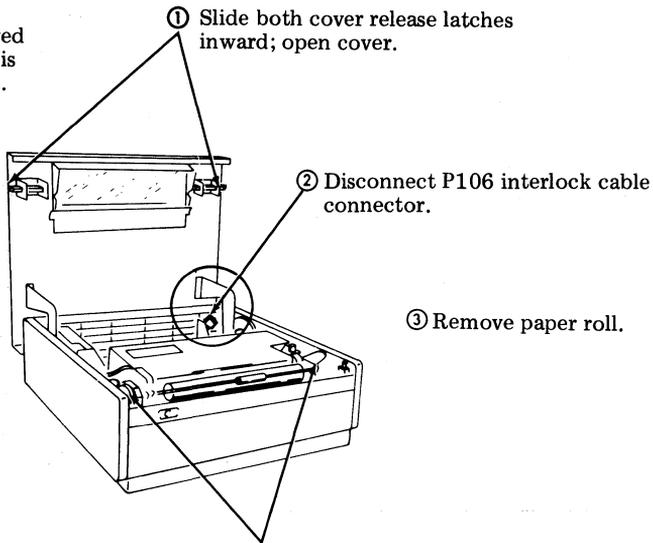



⑦ Use both hands. Release (push in) the printer slide detents and pull the printer out by grasping it by the frame (front bottom) then also by the rear (middle).

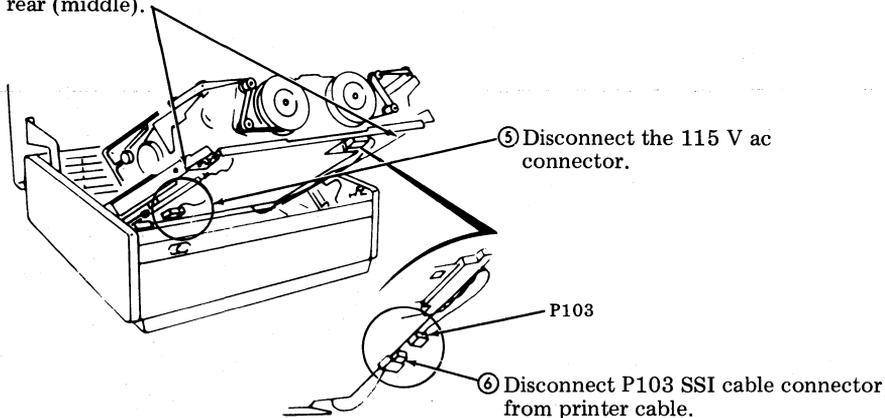

2.06 To replace the printer, reverse the removal procedures of 2.05. For further disassembly of printer and printer cabinet, refer to Section 582-210-702 or FIMP 579-505-350 (Part 7).

## B. Tractor Feed Printer (80 or 132 Column)

2.07 To remove the entire printer assembly:

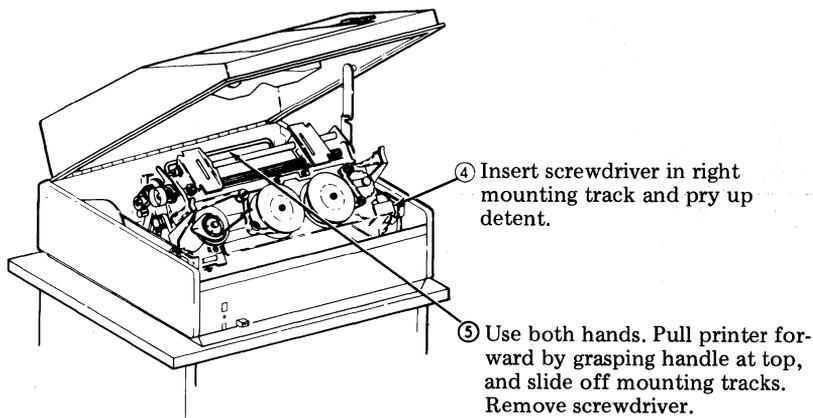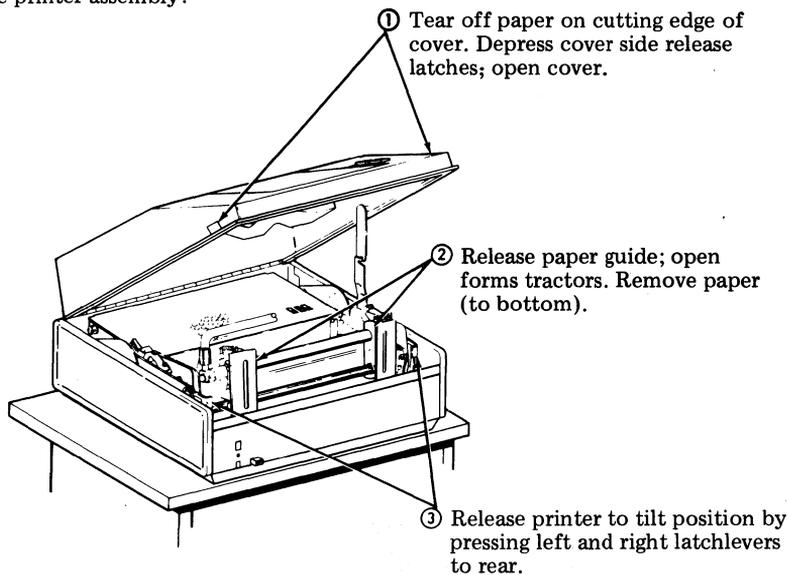

2.08 To replace the printer, reverse the removal procedures of 2.07. For further disassembly, refer to Section 582-210-702 or FIMP 579-505-350 (Part 7) for printers and Section 582-212-700 for cabinets.

## PEDESTALS AND CABINETS

2.09 Refer to Section 582-212-700 or FIMP 579-505-350 for assembly or disassembly of a pedestal or cabinet.


## 40PSU101 POWER SUPPLY

2.10 To remove 40PSU101 power supply, follow Steps 1 through 8 (also see Warning following Step 8).

- ① Release lid latches and open lid.
- ② Insert fingers as shown and lift then pull module forward.

*Note 1:* Do not attempt to lift at opcon (if present).

- ③ Move module forward until blocked by latch.

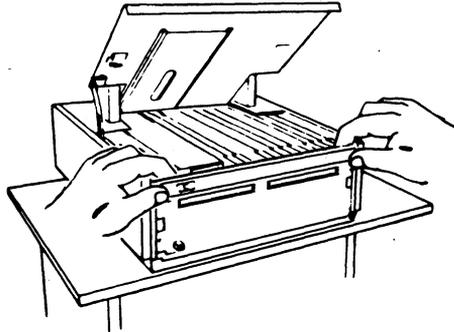


(Monitor and opcon not shown.)

- ④ Use handle to lift out power supply.

*Warning:* Do not attempt to force power supply up. Late design power supplies are secured with hardware from the bottom. (See Note 2.)

- ⑤ Replace power supply making sure to seat on locating pins.

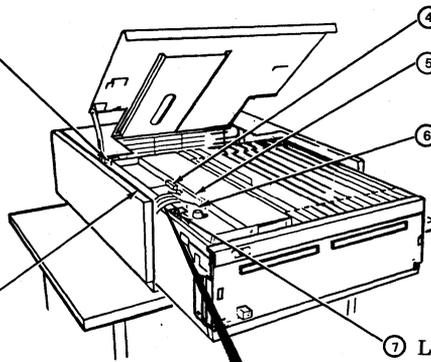


- ④ Disconnect ac power cord.

- ⑤ Remove screws that secure insulator; remove insulator.

- ⑥ Loosen five screws from terminal strip; remove cable terminals from terminal strip.

- ⑦ Loosen bracket screw sufficient to raise and turn retainer bracket away from handle.

- ⑧ Slip on cable terminals and tighten screws.

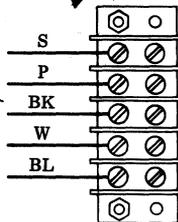

- ⑨ Replace insulator. Plug in ac power cord. Reposition retainer bracket; tighten bracket screw. Move module to rear. Lower and latch lid.

*Note 2:* If the Warning applies, complete removal of power supply by:


- Removing 406046 monitor cable, but only from retainer and back panel (2.16),
- Removing 406036 or 406066 cable, but only from data set or data auxiliary set — as applies (2.20).
- Removing 406039 printer cable, but only from printer (2.22).
- Removing logic package from cabinet (Steps 1, 2, and 3 of 2.24).
- Turning logic package so that it rests on the left side, removing power supply mounting hardware from bottom of logic package. Remove power supply.

2.11 To replace 40PSU101 power supply, follow Steps 9 through 11.

## CONTROLLER

- Perform Steps 1 and 2 of 2.10.

Move module forward until blocked by latch to provide sufficient clearance for card removal.

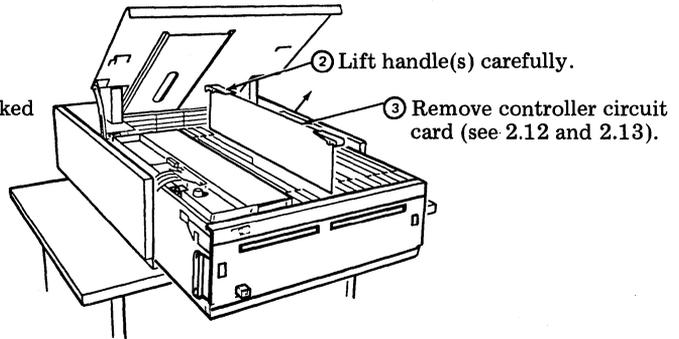


### A. Circuit Cards

*Note:* The required circuit cards and their locations are given in Section 582-200-205.

- 2.12 To remove a controller circuit card (see 2.13 for 410261 circuit card removal):

Lift up on extractor handles and lift straight up.

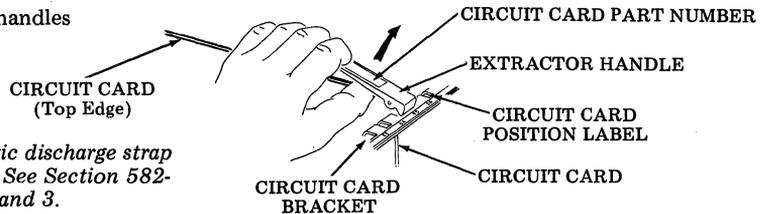

*Warning:* Wear 346392 static discharge strap when removing circuit cards. See Section 582-200-205, 1.04 Warnings 1, 2 and 3.

- 2.13 To remove 410261 circuit card:

- ① Remove 410251 circuit card; observe black plastic retainer near top edge of card.
- ② Collapse tab of retainer and lift the 410261 circuit card.
- ③ Work the top edge over the tab, then even up the rear edge; remove 410261 circuit card.

- 2.14 To replace a controller circuit card (see 2.15 for 410261 circuit card replacement):

- ① Check that card is proper for location (see Note above).

Check that pins on card are straight (not bent) by sighting down the two rows of pins.

*Warning:* Attempting to insert a card with bent pins into the back panel may result in damaging the back panel or the card.

- ③ Place card in slot, then depress gently but firmly until card is fully seated.

- 2.15 To replace 410261 circuit card:

Remove 410251 circuit card (if not already removed).


- ② Check that mating pins on 410261 circuit card are straight.
- ③ Place 410261 circuit card (component side up) over 410251 circuit card (component side up); mount the 410261 circuit card. The tab of the black plastic retainer near the top edge of 410251 circuit card will secure the 410261 circuit card.

## B. Cables


## 406046 Monitor Cable

## 2.16 To remove 406046 monitor cable:

- Remove monitor (2.01).
- ① Use flat blade of screwdriver against connector front ear and use screwdriver shank against right support guide to hold ear in. With your other hand push down on front of connector to drop ear below mounting slot. Hold rear ear in and push down on connector.
- ② Remove two screws and lockwashers from right support guide (retain nut when 406065 screw is removed).
- ③ Push connector down through hole in cover. Notice that connector keying notches face rear of unit and that star washer is positioned under connector ground terminal on the front.

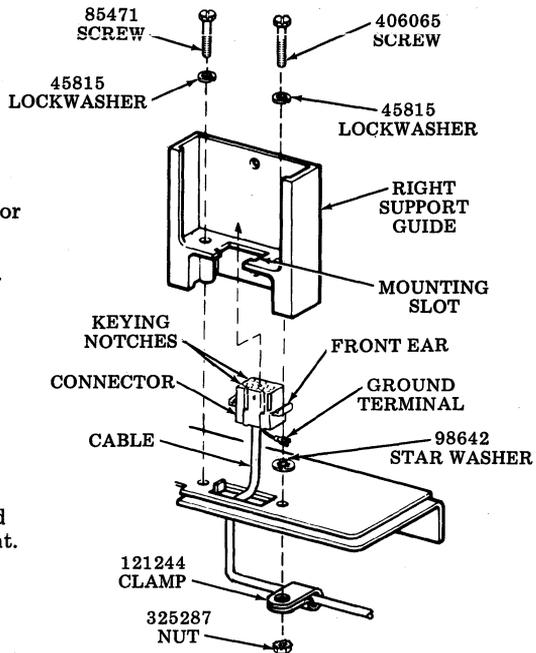

- ④ Perform Steps 1, 2 and 3 of 2.10.

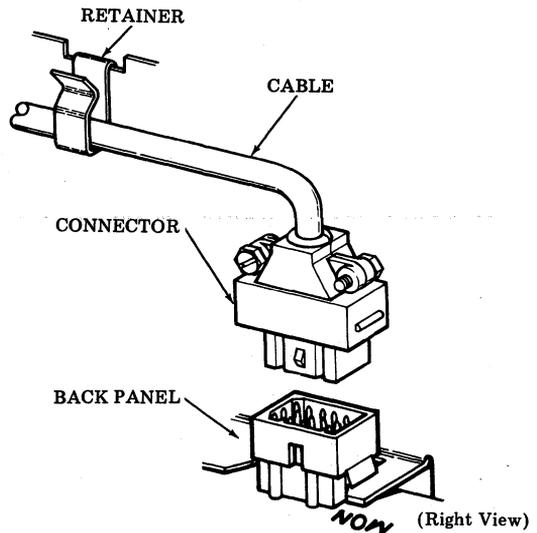

- ⑤ Remove cable from retainer by opening retainer and lifting cable out. Disconnect connector from back panel by pulling up while rocking connector back and forth.


2.17 To install 406046 monitor cable, reverse the removal procedures of 2.16. At right support guide end, route cable to just below mounting slot. Install right support guide on cover (insure that the ground terminal and starwasher are in place). Push one ear into mounting slot, rock connector back and forth to engage other ear (keying notches to rear).

406048 Opcon Cable


2.18 To remove 406048 opcon cable:

- Remove opcon (2.03).
- Remove 40PSU101 power supply (2.10).

( C Disconnect connector from back panel.

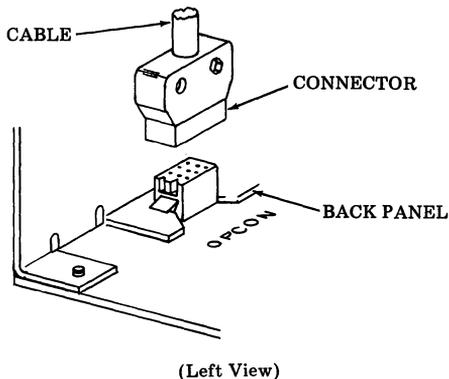

② While holding one connector ear down, ease connector from the mounting slot toward inside of frame.

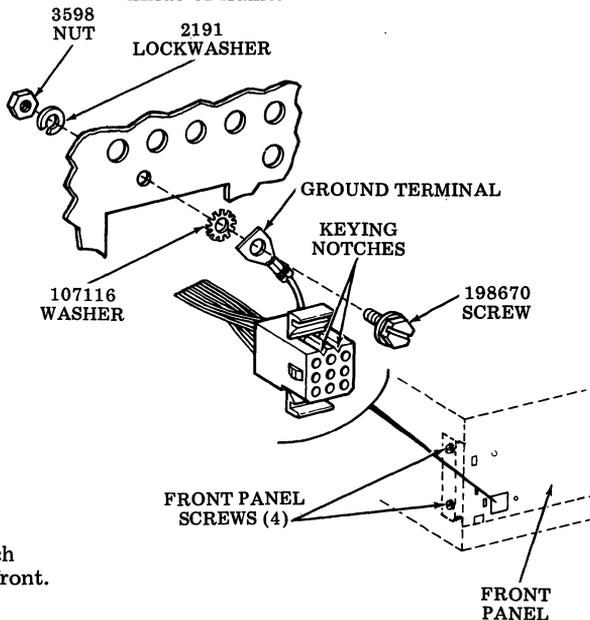


③ Remove four front panel screws (two on each side). Remove front panel and cable to the front.

④ Remove ground terminal screw and washer from front panel and a lockwasher and nut from inside the front panel.

2.19 To install 406048 opcon cable, reverse removal procedures of 2.18.

406036 EIA Cable or 406066 Private Line Interface Cable

2.20 To remove 406036 or 406066 cable:

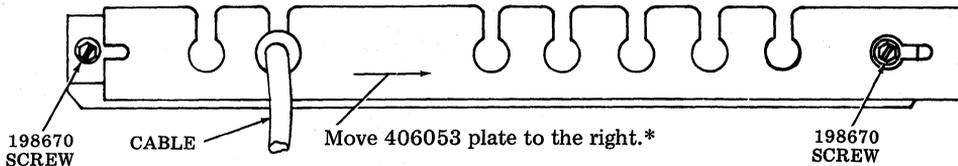


(Rear View of Controller)

\*Directions are given as from rear of station.


At the rear of controller, loosen two plate mounting screws (do not remove). Move plate to the right (as shown in illustration).

- ② Loosen nut and lockwasher that retains cable. Slide cable up from slot in plate.

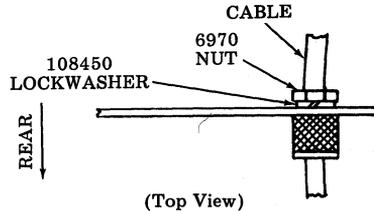



(Top View)

- ③ Release lid latches and raise lid. Disconnect connector from back panel by pulling up while rocking connector back and forth.

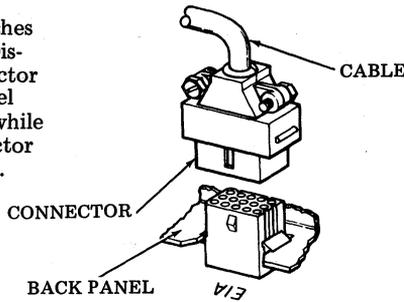

(Right View)

406036 only: At data set end, loosen two connector mounting screws. Disconnect connector.  
 406066 only: At 829 DAS end, loosen one connector mounting screw. Disconnect connector.

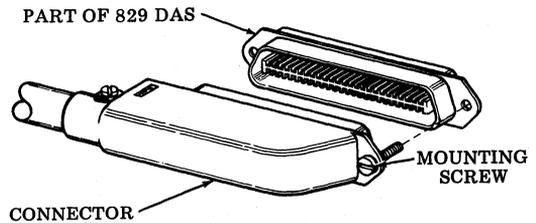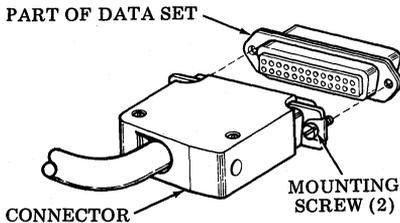


2.21 To install 406036 or 406066 cable, reverse removal procedures of 2.20.

406039 Printer Cable

2.22 To remove 406039 printer cable:


- ① Disconnect connector from rear of printer cabinet.

Remove ground lead from cabinet ground terminal (friction feed) or cabinet ground clip (tractor feed).

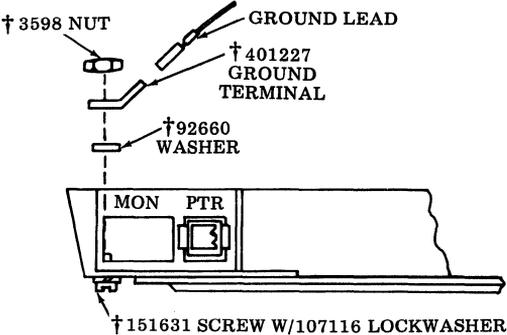


(Rear View of Friction Feed Printer Cabinet)

† Hardware supplied with 406039 printer cable. Do not remove hardware when removing ground lead.

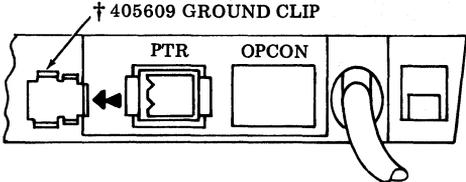


(Rear View of Tractor Feed Printer Cabinet)

- ③ At rear of controller, loosen two plate mounting screws (do not remove). Move plate to the right (as shown in illustration).

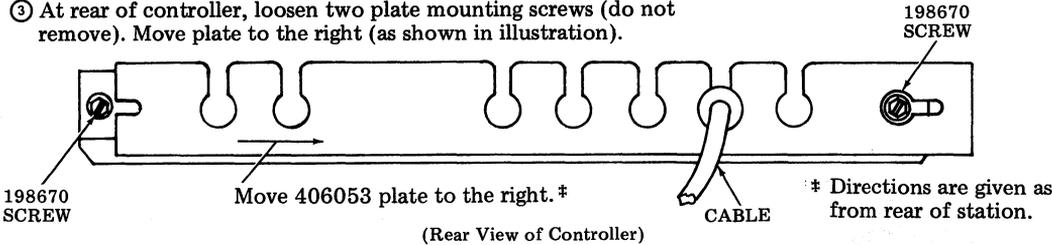


(Rear View of Controller)

- ④ Loosen nut and lockwasher that retains cable. Slide cable up from its slot in the plate.

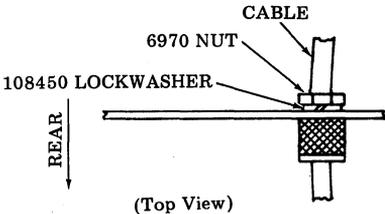

(Top View)

- ⑤ Release lid latches and raise lid. Disconnect connector from back panel by pulling up while rocking connector back and forth.

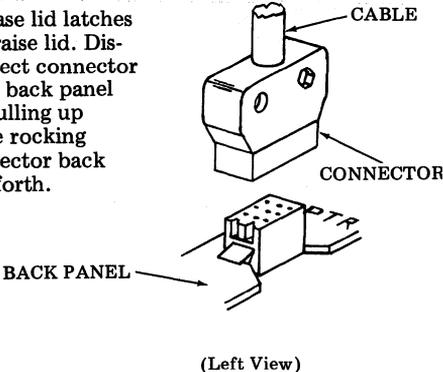


2.23 To install 406039 printer cable, reverse removal procedures of 2.22.

C. Back Panel

2.24 To remove 410276 (early design) or 410277 (late design) back panel:

- Remove 40PSU101 power supply (2.10).
- Remove controller circuit cards (2.12 and 2.13).
- Remove 406046 monitor cable from controller (Step 5 of 2.16).
- Remove opcon (2.03) and disconnect 406048 opcon cable from controller.
- Remove 406036 EIA cable or 406066 private line interface cable from controller — as applies (Steps 1 and 3 of 2.20).
- Remove 406039 printer cable from controller — if present (Steps 3 and 5 of 2.22).


⑤ Lift back panel from module by support brackets.

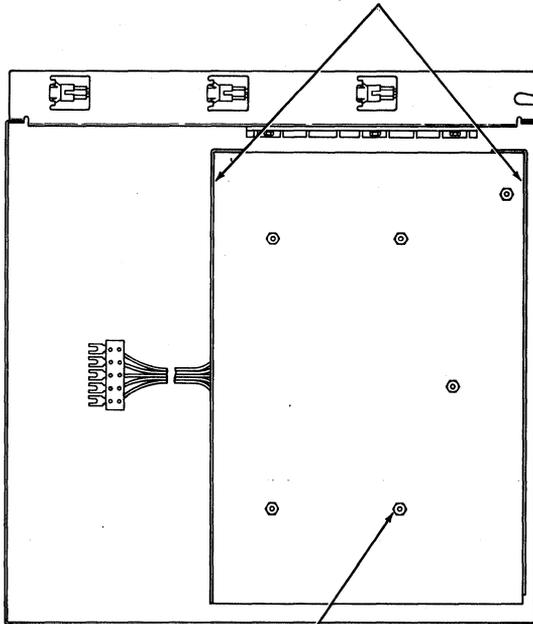

(Top View of Module)


④ Remove six 405958 mounting nuts from back panel.

③ Slide logic package forward and out of cabinet.

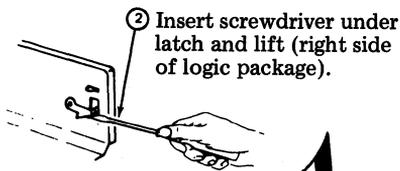


② Insert screwdriver under latch and lift (right side of logic package).

Note 1: Monitor can remain in place.

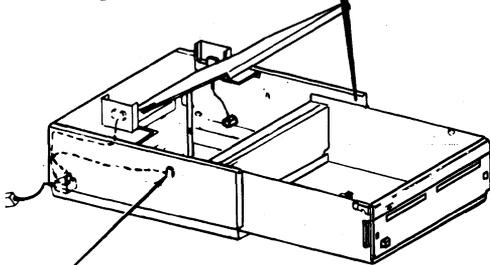

① Disconnect 3-pin connector of 405047 ac input cable from 408017 fan/power supply cable (see illustration on Page 13).

Note 2: The insulator should not touch any spacers.

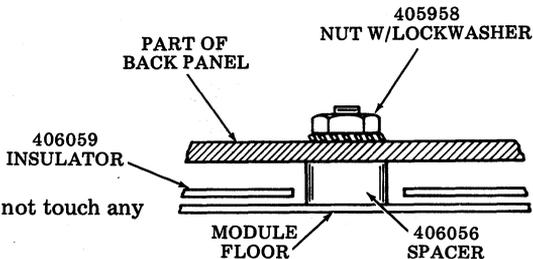


25 To install back panel, reverse removal procedures of 2.24.

## D. Ventilation Assembly

## 408017 Fan/Power Supply Cable

2.26 To remove 408017 fan/power supply cable:

- Remove 40PSU101 power supply (2.10).
- Remove controller circuit cards (2.12 and 2.13).
- Remove 406046 monitor cable from controller (Step 5 of 2.16).
- Remove opcon (2.03).
- Remove 406036 EIA cable or 406066 private line interface cable from controller — as applies (Steps 1 and 3 of 2.20).
- Remove 406039 printer cable from controller — if present (Steps 3 and 5 of 2.22).
- Perform Steps 1, 2, and 3 of 2.24.

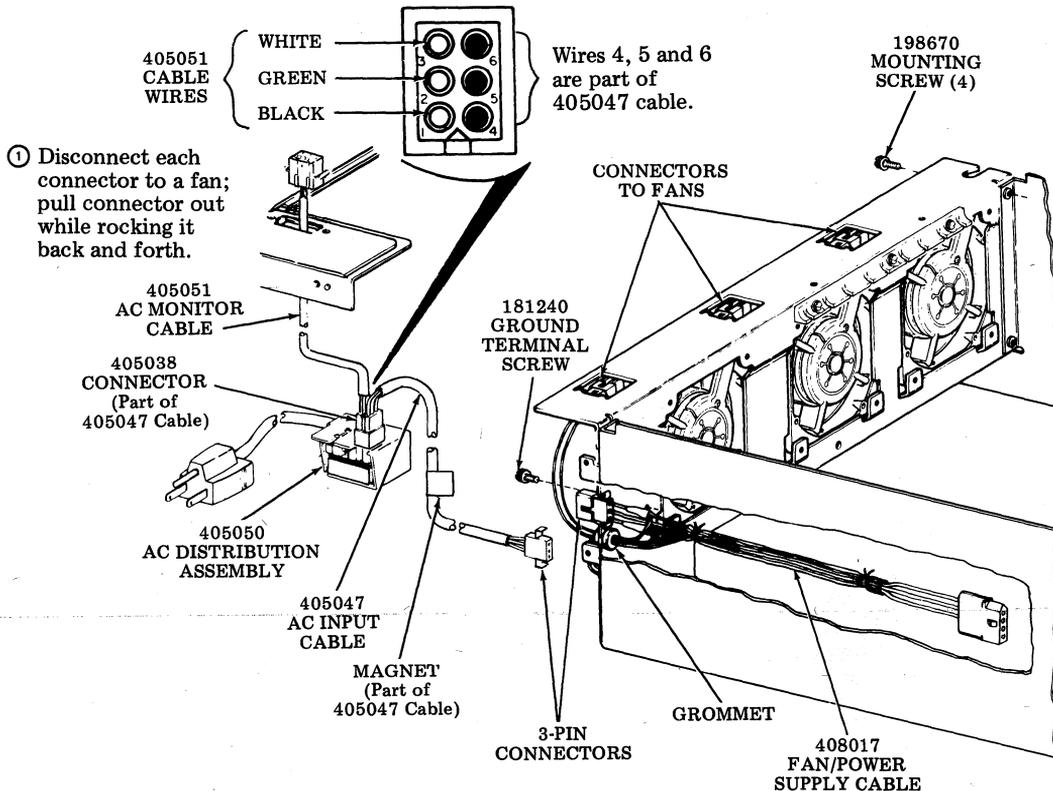

- ② Remove ground terminal screw. Remove ring terminals of cable from screw.
- ③ Perform Steps 1 and 2 of 2.28.
- ④ Slide grommet and 3-pin connector of 408017 fan/power supply cable off ventilation assembly.



2.27 To install 408017 fan/power supply cable, reverse removal procedures of 2.26.

### 408050 Ventilation Assembly

2.28 To remove 408050 ventilation assembly:

- Remove 40PSU101 power supply (2.10).
- Remove controller circuit cards (2.12 and 2.13).
- Remove 406046 monitor cable from controller (Step 5 of 2.16).
- Remove opcon (2.03).
- Remove 406036 EIA cable or 406066 private line interface cable from controller — as applies (Steps 1 and 3 of 2.20).
- Remove 406039 printer cable from controller — if present (Steps 3 and 5 of 2.22).
- Perform Steps 1, 2, and 3 of 2.24.

- ① Remove two screws that secure 406052 plate. Remove plate.
- ② Remove two remaining screws, 3598 nut, and 2191 lockwasher. Remove ventilation assembly.

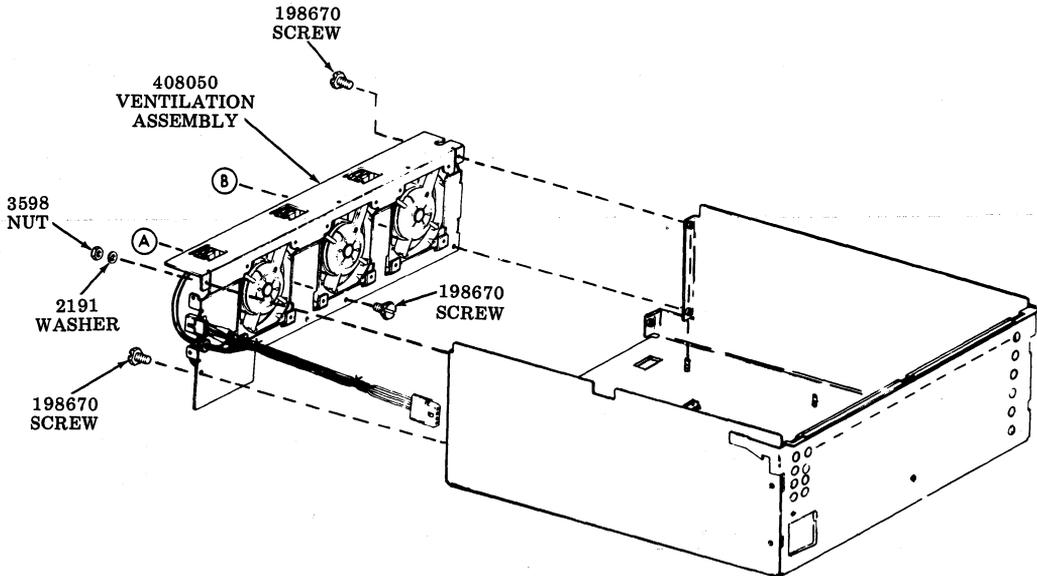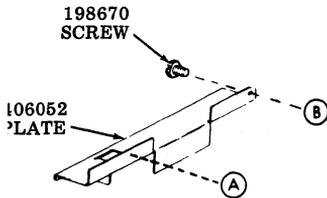

29 To install ventilation assembly, reverse removal procedures of 2.28.


## 408015 Fan

2.30 To remove a 408015 fan:

- Remove 40PSU101 power supply (2.10).
- Remove controller circuit cards (2.12 and 2.13).
- Remove 406046 monitor cable from controller (Step 5 of 2.16).
- Remove opcon (2.03).
- Remove 406036 EIA cable or 406066 private line interface cable from controller — as applies (Steps 1 and 3 of 2.20).
- Remove 406039 printer cable from controller — if present (Steps 3 and 5 of 2.22).
- Perform Steps 1, 2, and 3 of 2.24.

① Remove four screws and washers that secure fan.

Disconnect fan connector from 408017 fan/power supply cable connector. Remove fan.

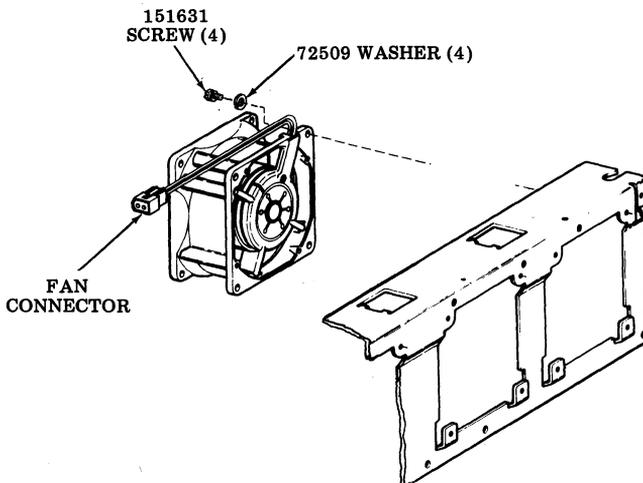


2.31 To install a 408015 fan, reverse removal procedures of 2.30.

### 3. PARTS

- 3.01 For parts information on interconnect cables of the DATASPEED 40/4, refer to Section 582-200 405.
- 3.02 Parts information for individual components (printer, monitor, etc) are not illustrated in this section. Refer to appropriate BSP section.
- 3.03 Field replaceable components of controllers are listed in the index which follows the parts illustration, see 3.04.

SECTION 582-200-705

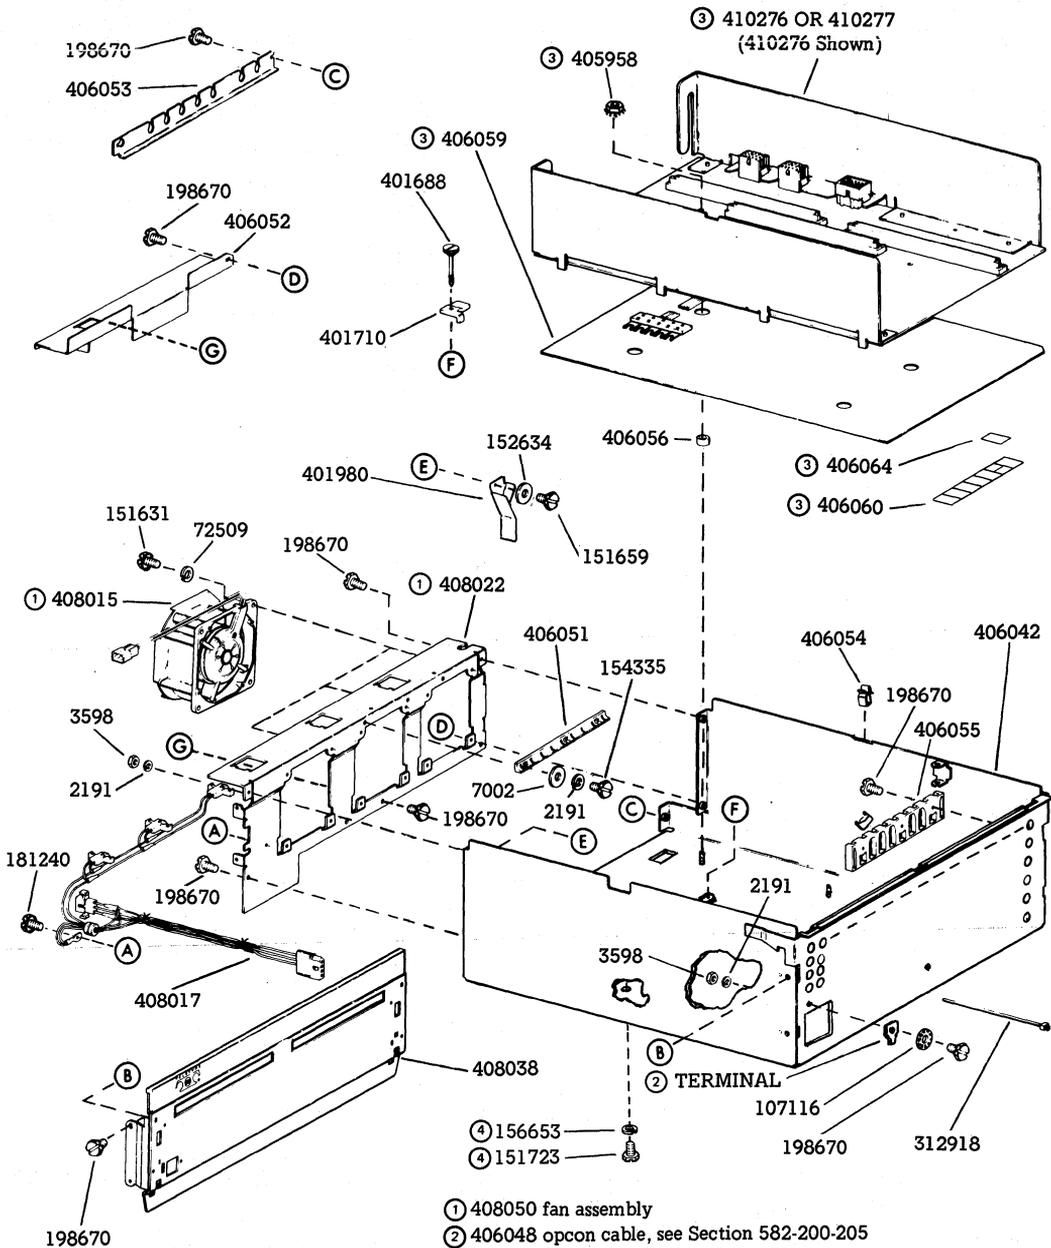

- ① 408050 fan assembly
- ② 406048 opcon cable, see Section 582-200-205
- ③ 410276 (early design) or 410277 (late design) back panel assembly
- ④ Present only on 406042 logic module (late design); used only for 40PSU101 power supply (late design)

40C304 Controller

## INDEX OF REPLACEABLE PARTS

3.04 The index below contains field replaceable parts. The index shows the section or page number of this section on which access is provided.

*Note:* When ordering replaceable components, unless otherwise specified, prefix each part number with the letters "TP" (ie, TP410055).

APPLICATION	PART NO.	DESCRIPTION	SECTION OR PAGE NO.
Monitor	40MN101/AA 341578	Monitor Fuse, 1.4 Amp	3 582-200-751
Opcon	40K104/DAA	Opcon (ASCII, Typewriter Style)	3
	40K104/DAB	Opcon (EBCDIC, Typewriter Style)	3
	40K105/CAA	Opcon (EBCDIC, Data Entry Style)	3
Printer	40P101/ZZ	Printer, Friction Feed	4
	40P151/ZZ	Printer, Tractor Feed — 80 Column	5
	40P201/ZZ	Printer, Tractor Feed — 132 Column	5
	143306	Fuse, 1 Amp SL-BL MDL-1	582-200-751
Controller	40C304/AA/001	Controller (SDC)	7
	40PSU101	Power Supply	6
	129920	Fuse, 5 Amp SL-BL (for 40PSU101)	582-200-751
	408015	Fan	15
	408050	Ventilation Assembly	14
	410276	Back Panel	12
(Early Design)			
410277	Back Panel	12	
(Late Design)			
	Various Numbers	Circuit Cards	7 (Locations Given in 582-200-205)
	Various Numbers	Cabinets and Pedestals	582-212-700
Cable	406036	EIA Cable	10
	406039	Printer Cable	11
	406046	Monitor Cable	8
	406048	Opcon Cable	9
	406066	Private Line Interface Cable	10
	408017	Fan/Power Supply Cable	13