


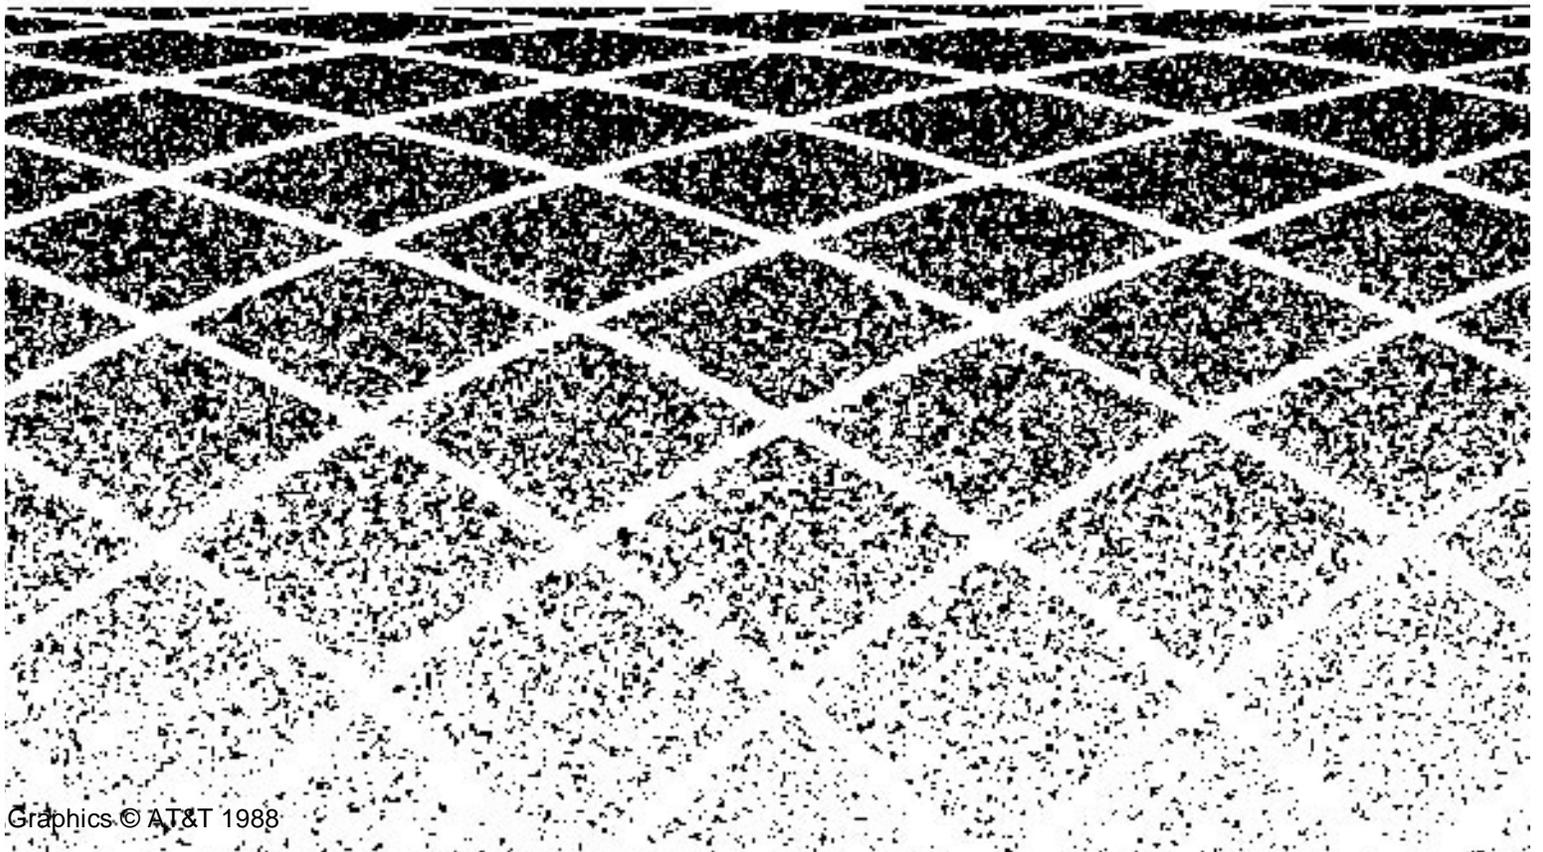

585-300-535
Issue 1
November, 1994

U.S. English Announcements/Fragments



AT&T 585-300-535 Issue 1

U.S. English

Announcements/Fragments

AT&T Bell Laboratories

U. S. English Announcements/Fragments for Intuity AUDIX and DEFINITY AUDIX 3.1 Systems. Select Code 585-300-535

November, 1994 From: Product Documentation Development

This document supports announcement customization for the U.S. English language on the Intuity AUDIX R3.2 and DEFINITY AUDIX R3. 1 systems. This document includes the following:

- A list of announcement numbers and the text associated with those announcements.
- A list of fragment numbers and the announcement numbers and text associated with those fragments.

The instructions for changing the AUDIX voice prompts (customizing announcements) are covered in other documents as follows:

For the Intuity AUDIX R3.2 system, the *Intuity AUDIX R3.2 Administration and Feature operations (585-310-552)*

For the DEFINITY AUDIX system, the *DEFINITY AUDIX System Administration (585-300-507)* and *DEFINITY AUDIX System Release 3. 1 Screens Reference (585-300-211)*.

January27, 1995

a1

NUMBER f745: active.
f823: ...for all calls
f776: the system greeting
f745: active.
f823: ...for all calls

a2

f936: Partial entry deleted.

a4

f46: To access your mailbox, press star R.
f117: To reach the covering extension, press star zero.
f291: To transfer to another extension, press star T.

a5

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.
f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a6

f561: You are addressing your message.
f285: To add a member, enter extension
f224: and pound sign.
f328: To delete the previous entry, press star D. To add a mailing list you have already created, or a public list owned by others, press star L. To review or modify the list you are creating, press star 1. To approve the list you are creating and move on to the next step, press pound.
f58: For name addressing, press star A.

a7

f561: You are addressing your message.
f286: To add a member, enter last name
f224: and pound sign.

f328: To delete the previous entry, press star D. To add a mailing list you have already created, or a public list owned by others, press star L. To review or modify the list you are creating, press star 1. To approve the list you are creating and move on to the next step, press pound. f148: For extension addressing, press star A.

a8

f46: To access your mailbox, press star R.

f291: To transfer to another extension, press star T.

a9

f235: To restart at the activity menu, press star R To transfer to another extension, press star T.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a10

f306: You are changing your password.

f212: Please enter password again for confirmation. To delete the password you just entered, press *D

f235: To restart at the activity menu, press star R To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a11

f233: Previous login incorrect. Please re-enter extension

f224: and pound sign.

a12

f233: Previous login incorrect. Please re-enter extension

f224: and pound sign.

f330: Or enter just the pound sign if it's your phone.

a13

f105: To restart at the activity menu, press star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a14

f306: You are changing your password.

f210: Please enter a new password

f224: and pound sign.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a15

f555: To access your mailbox, press star R

f117: To reach the covering extension, press star zero.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a16

f306: You are changing your password.

f212: Please enter password again for confirmation. To delete the password you just entered, press *D

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a17

f555: To access your mailbox, press star R.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a18

f555: To access your mailbox, press star R.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a19

f327: You are creating a mailing list.

f285: To add a member, enter extension

f224: and pound sign.

f328: To delete the previous entry, press star D. To add a mailing list you have already created, or a public list owned by others, press star L. To review or modify the list you are creating, press star 1. To approve the list you are creating and move on to the next step, press pound.

f58: For name addressing, press star A.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a20

f327: You are creating a mailing list.

f286: To add a member, enter last name

f224: and pound sign.

f328: To delete the previous entry, press star D. To add a mailing list you have already created, or a public list owned by others, press star L. To review or modify the list you are creating, press star 1. To approve the list you are creating and move on to the next step, press pound.

f148: For extension addressing, press star A.

f235: To restart at the activity menu, press star R To transfer to another extension, press star

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a21

f821: You are administering call types.

a22

f821: You are administering call types.

f798: Prime time is

TIME f524: to

TIME f788: To identify calls as out-of-hours, press 3.

f789: otherwise, press 4.

a23

f821: You are administering call types.

f785: Same greeting used for all calls.

f786: To identify calls as internal and external, press 1.

f787: To identify calls as busy and no answer, press 2.

a24

f503: You are administering your attendant menu.

f502: To record attendant menu, press 1. To listen to attendant menu, press 0.

f550: To rewind your attendant menu, press two. To delete it, press star D. To stop playback of your attendant menu, press three.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a25

f373: You are choosing whether to attach a copy of original message to your reply. To include the original, press Y for yes. To send only your reply, press N for no.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a26

f299: You are administering your greeting.

f5: To record personal greeting, press 1. To listen to personal greeting, press 0. To select which greeting to use, press star pound.

f39: To delete, press star D. To stop playback, press 3.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a27

f46: To access your mailbox, press star R.

a28

f529: You are changing your outcalling options.

f527: To change number, press 1. To change times, press 2. For instructions on entering your outcalling number, press 3.

f528: To turn on, press y. To turn off, press n.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a29

f347: You are adding a list.

f111: Please enter list id

f224: and pound sign.

f366: To specify a different owner by extension, press star D.

f363: To approve the list you are creating, press pound.

a30

f302: You are recording announcement fragments. Enter fragment id followed by pound sign. Refer to admin manual for correct id.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a31

f347: You are adding a list.

f111: Please enter list id

f224: and pound sign.

f367: To specify a different owner by name, press star D.

f363: To approve the list you are creating, press pound.

a32

f303: You are recording names. Enter extension

f224: and pound sign.

f235: To restart at the activity menu, press star R To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a33

f382: You are scheduling your message for delivery.

f341: Enter the number of the month, one through twelve, then two digits for the day of the month, then the pound sign. f487: To delete time, press star D. To default rest of the delivery time, press pound.

a34

f108: You are recording a message.

f167: To approve, press pound. To record from here, press 1. To playback, press 2-3.

f24: To delete, press star D.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

a35

f816: You are listening to a personal greeting.

f753: Enter greeting number.

f913: If finished, press pound.

a36

f817: You are recording a personal greeting.

f753: Enter greeting number.

f913: If finished, press pound.

a37

f820: You are selecting which greeting to activate.

a38

f368: You are entering the number for a new list. Please enter a number up to six digits long

f224: and pound sign.

f369: To replace an existing list, enter that list's number,

f224: and pound sign.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a39

f358: You are identifying a list as private or public.

f14: To make private, press 1. To make public, press 2.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a40

f370: These are entries in your list.

f294: To add entries, press 1.

f371: To rewind to current entry, press 2. To rewind to previous entries, press 2 as many times as necessary. To continue playback of list, press 3.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f372: To skip to next entry, press pound. To delete current entry, press star D.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a41

f360: You are scanning mailing lists. To review list members, press 0. To rewind to previous list, press 2. To continue scanning lists, press 3.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f361: To skip to next list, press pound. To delete list, press star D.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a42

f587: You are reviewing a list.

f388: To skip, press pound.

f371: To rewind to current entry, press 2. To rewind to previous entries, press 2 as many times as necessary. To continue playback of list, press 3.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a43

f359: You are changing the status of your list. To modify status, press Y for yes or N for no.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a44

f370: These are entries in your list.

f333: To add entries to the list or to change status of list, press 1.

f371: To rewind to current entry, press 2. To rewind to previous entries, press 2 as many times as necessary. To continue playback of list, press 3.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f372: To skip to next entry, press pound. To delete current entry, press star D.

f'235: To restart at the activity menu, press star R To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a45

f327: You are creating a mailing list.

f329: You have not yet entered enough characters to identify a specific subscriber. To enter the letter Q, press 7; for Z press 9.

f484: Enter more characters followed by the pound sign; if you just completed entering the last name, enter the first name.

f224: and pound sign.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a46

f815: You are administering your personal greetings.

a47

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

a48

f549: You are administering your attendant menu. To create attendant menu, press 1.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a49

f108: You are recording a message.

f13: To record, press 1. After recording, press 1 again.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

a50

f299: You are administering your greeting.

f36: To record a personal greeting, press 1.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a51

f306: You are changing your password.

f210: Please enter a new password

f224: and pound sign.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a52

f591: To change your outcalling phone number, press one. To hear further instructions on programming a pager, press y. To return to outcalling administration, press n.

a53

f566: You are responding to an outcall notifying you of new messages.

f551: To access your messages,

f223: Please enter extension f224: and pound sign.

f543: To avoid further notification of these messages, press star pound.

f567: Either logging in or pressing star pound will result in the outcall being canceled for the new messages currently in your mailbox. If additional new messages arrive, another outcall will be scheduled."

a54

f347: You are adding a list.

f362: If you own the list, press pound. If someone else owns the list

f364: enter owner's extension

f224: and pound sign.

f298: To specify owner by name, press star A.

a55

f347: You are adding a list.

f362: If you own the list, press pound. If someone else owns the list

f365: enter owner's name

f224: and pound sign.

f297: To specify owner by extension, press star A.

a56

f220: Enter password

f224: and pound sign.

a57

f307: You are playing announcements.

f221: Enter announcement id and pound sign. Refer to admin manual for correct id.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a58

f308: You are playing announcement fragments.

f222: Enter fragment id and pound sign. Refer to admin manual for correct id.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a59

f309: You are playing names.

f223: Please enter extension

f224: and pound sign.

f235: To restart at the activity menu, press star R To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a60

f223: Please enter extension

f224: and pound sign.

a61

f357: You are choosing between subscribers whose names match your entry. To indicate no subscribers match, delete entry by pressing star D. To change to extension addressing and delete your entry, press star A.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a62

f323: You are responding to a piece of incoming mail.

f486: To reply to sender by voice mail, press 1.

f41: To forward message with comment at beginning, press 2.

f126: To forward message with comment at end, press 3.

f8: To record a new message, press 4.

f1434: To return to getting messages, press pound.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a63

f348: You are specifying a mailing list to review.

f111: Please enter list id

f224: and pound sign.

f366: To specify a different owner by extension, press star D.

f363: To approve the list you are creating, press pound.

f235: To restart at the activity menu, press star R To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a64

f348: You are specifying a mailing list to review.

f111: Please enter list id

f224: and pound sign.

f367: To specify a different owner by name, press star D.

f363: To approve the list you are creating, press pound.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a65

f348: You are specifying a mailing list to review.

f362: If you own the list, press pound. If someone else owns the list

f364: enter owner's extension

f224: and pound sign.

f298: To specify owner by name, press star A.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a66

f348: You are specifying a mailing list to review.

f362: If you own the list, press pound. If someone else owns the list

f365: enter owner's name

f224: and pound sign.

f297: To specify owner by extension, press star A.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a67

f348: You are specifying a mailing list to review.

f329: You have not yet entered enough characters to identify a specific subscriber. To enter the letter Q, press 7; for Z press 9.

f484: Enter more characters followed by the pound sign; if you just completed entering the last name, enter the first name.

f224: andpoundsign.

f148: For extension addressing, press star A.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a68

f518: You are creating a voice message which will be delivered to the person specified in your message as soon as possible. Please be aware that in order to forward this message to the recipient, someone will listen to the name and number portion.

f13: To record, press 1. After recording, press 1 again.

f304: To playback message, press 2-3. To delete your message, press star D. To approve your message, press pound.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f46: To access your mailbox, press star R.

f117: To reach the covering extension, press star zero.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a69

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f46: To access your mailbox, press star R.

f117: To reach the covering extension, press star zero.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f516: To leave a message that will be delivered as soon as possible,

f380: Please wait.

a70

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f46: To access your mailbox, press star R.

f117: To reach the covering extension, press star zero.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f274: Please make entry soon, or be disconnected.

a71

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f46: To access your mailbox, press star R.

f117: To reach the covering extension, press star zero.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f515: To be transferred to an operator,

f380: Please wait.

a73

f378: You are checking the status of your outgoing messages.

f474: To listen, press 0. To change or send again, press 1.

f376: To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a74

f819: You are scanning your personal greetings.

f781: To skip to the next greeting, press the pound sign.

f756: To listen to greeting

NUMBER f760: press 0.

f24: To delete, press star D.

f839: To rewind to the previous greeting, press 2.

f707: If finished, press star pound.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer Press 7. Faster, press 9. Slower, press 8.

a75

f385: To approve delivery time, press pound. To modify delivery time, press star D and listen for further instructions.

a76

f305: You are at the activity menu.

f983: To record and send voice mail messages, press 1. To get messages, press 2. To record or change the greeting heard by callers, press 3.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a77

f305: You are at the activity menu.

f984: To record and send voice mail messages, press 1. To get messages, press 2. To administer attendant menu, press 3.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f291: To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a78

f324: You are selecting which greeting will be played to callers. If you want your personal greeting to be played, press Y for yes. If you press N for no, the system greeting will be used.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a79

f536: You are specifying your outcalling time period. The time you specify will be restricted by the times allowed by the system administrator.

f545: To delete own time, press star D.

f235: To restart at the activity menu, press star R To transfer to another extension, press star T.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a80

f536: You are specifying your outcalling time period. The time you specify will be restricted by the times allowed by the system administrator.

f535: For outcalling any time, press 1. For outcalling during prime time, press 2. To specify your times, press 3. For system outcalling schedule, press 4.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a81

f378: You are checking the status of your outgoing messages.

f376: To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f379: To delete status information, press star D.

a83

f326: You are doing system administration. To record names, press 4. To play names, press 5. To record a machine name, press 6. To play a machine name, press 7. To record fragments, press 1. To play fragments, press 2. To play announcements, press 3.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a84

f382: You are scheduling your message for delivery.

f488: To specify immediate delivery, press pound. otherwise

f340: Enter the hour, one through twelve, then two digits for the minutes, then A for AM or P for PM, and the pound sign.

a85

f323: You are responding to a piece of incoming mail.

f486: To reply to sender by voice mail, press 1.

f41: To forward message with comment at beginning, press 2.

f126: To forward message with comment at end, press 3.

f8: To record a new message, press 4.

f163: To call sender, press zero.

f1434: To return to getting messages, press pound.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a86

f378: You are checking the status of your outgoing messages.

f381: To listen to the message, press 0. To re-record message before delivery, press 1.

f376: To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a87

f223: Please enter extension

f224: andpoundsign.

f330: or enter just the pound sign if it's your phone.

a88

f818: You have just recorded

f754: Greeting

NUMBER f766: To use this greeting for all calls, press 1.

f913: If finished, press pound.

a90

f384: Please enter number of month, then two digits for day, and pound sign.

a92

f910: You are playing an announcement which need additional input before it can be played.

f384: Please enter number of month, then two digits for day, and pound sign.

a93

f307: You are playing announcements.

f254: To play the active version, press 1.

f338: To play the admin version, press 2.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star

star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a94

f308: You are playing announcement fragments.

f254: To play the active version, press 1.

f338: To play the admin version, press 2.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a96

f503: You are administering your attendant menu.

f502: To record attendant menu, press I. To listen to attendant menu, press 0.

f550: To rewind your attendant menu, press two. To delete it, press star D. To stop playback of your attendant menu, press three.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f105: To restart at the activity menu, press star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star

star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a97

f529: You are changing your outcalling options.

f105: To restart at the activity menu, press star R.

f527: To change number, press 1. To change times, press 2. For instructions on entering your outcalling number, press 3.

f528: To turn on, press y. To turn off, press n.

f105: To restart at the activity menu, press star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a98

f11: You are recording machine names.

f6: Enter machine voice ID.

f224: and pound sign.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a99

f549: You are administering your attendant menu. To create attendant menu, press 1.

f105: To restart at the activity menu, press star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star

star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a100

f138: You are listening to machine names.

f6: Enter machine voice ID.

f224: and pound sign.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a101

f518: You are creating a voice message which will be delivered to the person specified in your message as soon as possible. Please be aware that in order to forward this message to the recipient, someone will listen to the name and number portion.

f13: To record, press 1. After recording, press 1 again.

f304: To playback message, press 2-3. To delete your message, press star D. To approve your message, press pound.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f555: To access your mailbox, press star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star

star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a102

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f555: To access your mailbox, press star R.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f516: To leave a message that will be delivered as soon as possible, f380: Please wait.

a103

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f555: To access your mailbox, press star R

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f274: Please make entry soon, or be disconnected.

a104

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f555: To access your mailbox, press star R.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f515: To be transferred to an operator,

f380: Please wait.

a105

f536: You are specifying your outcalling time period. The time you specify will be restricted by the times allowed by the system administrator.

f545: To delete own time, press star D.

f105: To restart at the activity menu, press star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a106

f536: You are specifying your outcalling time period. The time you specify will be restricted by the times allowed by the system administrator.

f535: For outcalling any time, press 1. For outcalling during prime time, press 2. To specify your times, press 3. For system outcalling schedule, press 4.

f105: To restart at the activity menu, press star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a108

f529: You are changing your outcalling options.

f527: To change number, press 1. To change times, press 2. For instructions on entering your outcalling number, press 3. f528: To turn on, press y. To turn off, press n. f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a109

f669: With the current settings, this login announcement will be interruptible and the login announcement has an expiration date of.

DATE

a110

f663: Message waiting notification is not active and this message has an expiration date of.

DATE

a111

f668: With the current settings, this login announcement will be non-interruptible and the login announcement has an expiration date of.

DATE

a112

f664: Message waiting notification is active and this message has an expiration date of.

DATE

a113

f305: You are at the activity menu.

f23: To record messages, press 1. To get messages, press 2. To administer your greeting, press

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R. f291: To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a114

f305: You are at the activity menu.

f984: To record and send voice mail messages, press 1. To get messages, press 2. To administer attendant menu, press 3.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f291: To transfer to another extension, press star T.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a115

f305: You are at the activity menu.

f986: To record and send voice mail messages, press 1. To get messages, press 2. To record or change the greetings heard by callers, press 3.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f291: To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a116

f493: You are requesting a transfer.

f562: Enter the

NUMBER f563: digit extension

f119: you wish to call

f224: and pound sign.

f115: To transfer using names instead, press star A.

f105: To restart at the activity menu, press star R.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a117

f493: You are requesting a transfer.

f562: Enter the NUMBER

f563: digit extension

f119: you wish to call

f224: and pound sign.

f115: To transfer using names instead, press star A.

f105: To restart at the activity menu, press star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a118

f847: You are automatically scanning your incoming messages. To listen to the message, press zero. To respond to or forward the message, press one.

f849: To skip to the next message, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a119

f305: You are at the activity menu.

f985: To record and send voice mail messages, press 1. To get messages, press 2.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a120

f305: You are at the activity menu.

f984: To record and send voice mail messages, press 1. To get messages, press 2. To administer attendant menu, press 3.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a121

f305: You are at the activity menu.

f986: To record and send voice mail messages, press 1. To get messages, press 2. To record or change the greetings heard by callers, press 3.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f291: To transfer to another extension, press star T.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a122

f848: You are automatically scanning your incoming messages. To listen to the message, press zero. To respond to the message, press one.

f849: To skip to the next message, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a123

f323: You are responding to a piece of incoming mail.

f41: To forward message with comment at beginning, press 2.

f126: To forward message with comment at end, press 3.

f8: To record a new message, press 4.

f1434: To return to getting messages, press pound.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a124

f375: You are getting your incoming messages. To listen to the message, press 0. To respond to the message, press 1.

f376: To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a125

f305: You are at the activity menu.

f985: To record and send voice mail messages, press 1. To get messages, press 2.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f291: To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a126

f323: You are responding to a piece of incoming mail.

f486: To reply to sender by voice mail, press 1.

f8: To record a new message, press 4.

f1434: To return to getting messages, press pound.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a127

f305: You are at the activity menu.

f983: To record and send voice mail messages, press 1. To get messages, press 2. To record or change the greeting heard by callers, press 3.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f291: To transfer to another extension, press star T.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a128

f323: You are responding to a piece of incoming mail.

f8: To record a new message, press 4.

f1434: To return to getting messages, press pound.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a129

f305: You are at the activity menu.

f985: To record and send voice mail messages, press 1. To get messages, press 2.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f291: To transfer to another extension, press star T.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a130

f659: Message waiting notification will alert all local subscribers of this message. This option should be used sparingly, for it can impact system performance.

a131

f725: You are adding entries to your personal directory.

f832: Please enter extension and pound sign.

f833: To delete current entry, press star D.

f58: For name addressing, press star A.

f913: If finished, press pound.

a132

f725: You are adding entries to your personal directory.

f118: Enter last name

f224: and pound sign.

f833: To delete current entry, press star D.

f148: For extension addressing, press star A.

f913: If finished, press pound.

a133

f657: You are choosing options for this broadcast message.

a134

f654: the message will be broadcast and private.

a135

f649: the message will be broadcast.

a136

f723: You are administering your personal directory.

f706: To add entries, press 1. To review all entries, press 2. To review a specific entry, press 3.

f913: If finished, press pound.

a137

f325: You are administering your lists. To create a mailing list, press 1. To play a summary of all your lists, press 2. To review a particular list, press 3.

a138

f665: You are choosing options for this login announcement.

a139

f650: the message will be a login announcement.

a140

f652: A broadcast message is delivered to every subscriber on this machine. You may also address a broadcast message to subscribers on other machines.

a141

f655: A login announcement will be played each time any subscriber logs onto this machine.

You may also address a login message to subscribers on other machines.

a142

f670: Non-interruptible status forces each subscriber to listen to the entire login announcement

every time they log onto this machine.

a143

f670: Non-interruptible status forces each subscriber to listen to the entire login announcement every time they log onto this machine.

f626: To specify expiration date, press 2.

f671: Expiration date specifies the last day this login announcement will be available to subscribers. The default expiration date is the second day after the scheduled delivery date.

f661: To approve these options, press pound.

f774: If you have addressed this message and wish to deliver it immediately, press star star pound.

a144

f646: A priority message will be delivered before other messages and will be flagged for special attention in the recipient's mailbox.

a145

f645: Private messages cannot be forwarded by the recipients.

a146

f662: Message waiting notification is active.

f628: To deactivate message waiting notification, press 1.

f659: Message waiting notification will alert all local subscribers of this message. This option should be used sparingly, for it can impact system performance.

f626: To specify expiration date, press 2.

a147

f288: You are in the names directory. To find a subscriber's extension, enter the last name followed by the pound sign. To enter the letter Q, press 7; for Z press 9. To look up by extension instead press star A.

f277: To exit directory, press pound.

f105: To restart at the activity menu, press star R.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDX, press star star X.

a148

f666: With the current settings, this login announcement will be non-interruptible.

a149

f643: You are choosing options for this message. There are no options currently set.

f612: To make private, press 1.

f645: Private messages cannot be forwarded by the recipients.

a150

f610: You are recording your name. After you record your name, you can access other AUDIX features. As you use AUDIX your name will be included in system announcements that you and other people will hear. Press 1 and at the tone, please speak your first and last name as you would like others to hear it. After speaking your name, press 1 again.

a151

f611: You are recording your name. To record your name, press 1. After recording, press 1 again. To playback name, press 2-3. To approve, press pound.

a152

f322: You are in the numbers directory. To find a subscriber's name enter the extension followed by the pound sign. To look up by name instead, press star A.

f277: To exit directory, press pound.

f105: To restart at the activity menu, press star R.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a153

f838: You are selecting which messages will receive outcalls.

a154

f916: To send message, press pound. or enter a delivery option. To hear a list of options, press zero.

a155

f644: You are choosing options for this message. With the current settings,

a156

f648: the message will be priority.

a157

f726: You are reviewing all entries in your personal directory.

f372: To skip to next entry, press pound. To delete current entry, press star D.

f852: To rewind to the current entry, press two. To rewind to previous entries, press two as many times as necessary.

a158

f729: You are reviewing a specific entry in your personal directory. To delete the current entry, press star D. To review another entry, enter the alias followed by the pound sign.

a159

f305: You are at the activity menu.

f986: To record and send voice mail messages, press 1. To get messages, press 2. To record or change the greetings heard by callers, press 3.

f48: To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a160

f660: Expiration date specifies the last day this broadcast message will be available to subscribers. The expiration date does not apply to a broadcast message already received by a subscriber and saved in their mailbox. The default expiration date is the second day after the scheduled delivery date. f661: To approve these options, press pound.

f774: If you have addressed this message and wish to deliver it immediately, press star star pound.

a161

f800: You are specifying the expiration date.

f660: Expiration date specifies the last day this broadcast message will be available to subscribers. The expiration date does not apply to a broadcast message already received by a subscriber and saved in their mailbox. The default expiration date is the second day after the scheduled delivery date.

f384: Please enter number of month, then two digits for day, and pound sign.

f831: To exit the expiration date options, press star pound.

f774: If you have addressed this message and wish to deliver it immediately, press star star pound.

a163

f671: Expiration date specifies the last day this login announcement will be available to subscribers. The default expiration date is the second day after the scheduled delivery date.

f661: To approve these options, press pound.

f774: If you have addressed this message and wish to deliver it immediately, press star star pound.

a164

f65: the message will be private and priority.

a165

f703: You are at subscriber administration.

f700: To administer mailing lists, press 1. To administer personal directory, press 2.

f701: To change your password, press 4.

a166

f703: You are at subscriber administration.

f700: To administer mailing lists, press 1. To administer personal directory, press 2.

f701: To change your password, press 4.

f702: To record your name, press 5.

a167

f736: You are recording your name. As you use AUDIX your name will be included in system announcements that you and other people will hear.

f608: At the tone, please speak your name. After speaking your name, press 1.

a168

f323: You are responding to a piece of incoming mail.

f486: To reply to sender by voice mail, press I.

f8: To record a new message, press 4.

f163: To call sender, press zero.

f1434: To return to getting messages, press pound.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a169

f323: You are responding to a piece of incoming mail.

f8: To record a new message, press 4.

f163: To call sender, press zero.

f1434: To return to getting messages, press pound.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a170

f323: You are responding to a piece of incoming mail.

f41: To forward message with comment at beginning, press 2.

f126: To forward message with comment at end, press 3.

f8: To record a new message, press 4.

f163: To call sender, press zero.

f1434: To return to getting messages, press pound.

f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a171

f493: You are requesting a transfer.

f987: Enter last name of the person

f119: you wish to call

f224: and pound sign.

f290: If you wish to specify a non-AUDIX subscriber, first change to extension addressing by pressing star A.

f105: To restart at the activity menu, press star R.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a172

f493: You are requesting a transfer.

f987: Enter last name of the person

f119: you wish to call f224: and pound sign.

f290: If you wish to specify a non-AUDIX subscriber, first change to extension addressing by pressing star A.

f105: To restart at the activity menu, press star R.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a174

NAME f822: As you use AUDIX your name will be included in system announcements that you and other people will hear. At the tone, please speak your name. After speaking your name, press one.

a175

NAME f146: To continue, press pound.

f143: To step back again, press 2.

a176

NAME f146: To continue, press pound.

a177

NAME f680: is busy. Sorry, you cannot leave a message now because this user's mailbox is full.

a178

NAME f197: Cannot step back.

a179

NAME f75: To skip, press pound. To delete, press star D.

f294: To add entries, press 1.

a180

NAME f388: To skip, press pound.

a181

NAME f74: deleted.

a182

NAME f679: is not available. Sorry, you cannot leave a message now because this user's mailbox is full.

a183

NAME NUMBER f63: new

f601: Priority

f160: message

NAME NUMBER f63: new

f601: Priority
f168: messages.
NAME {a1153} NUMBER f63: new
f601: Priority
f160: message
NAME {a1153} NUMBER f63: new
f601: Priority
f168: messages.

a184

NAME NUMBER f63: new
f345: Voice mail
f160: message
f17: including
NUMBER f601: Priority
f160: message
NAME NUMBER f63: new
f345: Voice mail
f160: message
f17: including
NUMBER f601: Priority
f168: messages.
NAME NUMBER f63: new
f345: Voice mail
f168: messages.
f17: including
NUMBER f601: Priority
f160: message
NAME NUMBER f63: new
f345: Voice mail f168: messages.
f17: including
NUMBER f601: Priority
f168: messages.
NAME {a1153} NUMBER f63: new

f345: Voice mail
f160: message
f17: including
NUMBER f601: Priority
f160: message
NAME {a1153} NUMBER f63: new
f345: Voice mail
f160: message
f17: including
NUMBER f601: Priority
f168: messages.
NAME {a1153 } NUMBER f63: new
f345: Voice mail
f168: messages.
f17: including
NUMBER f60l: Priority
f160: message
NAME {a1153} NUMBER f63: new
f345: Voice mail
f168: messages.
f17: including
NUMBER f601: Priority
f168: messages.
a185 NAME NUMBER f63: new
f345: Voice mail
f160: message
NAME NUMBER f63: new
f345: Voice mail
f168: messages.
NAME {a1153} NUMBER f63: new
f345: Voice mail
f160: message
NAME {a1153} NUMBER f63: new

f345: Voice mail

f168: messages.

a187

NAMEEXT f74: deleted.

a188

NAMEEXT f722: was not added to your personal directory.

a189

NAMEEXTf74: deleted.

a190

NUMBER f63: new

f345: Voice mail

f160: message

f17: including

NUMBER f601: Priority

f160: message

NUMBER f63: new

f345: Voice mail

f160: message

f17: including

NUMBER f601: Priority

f168: messages.

NUMBER f63: new

f345: Voice mail

f168: messages.

f17: including

NUMBER f601: Priority

f160: message

NUMBER f63: new

f345: Voice mail

f168: messages.

f17: including

NUMBER f601: Priority

f168: messages.

a191

f158: Transfer cannot be completed.

f236: Try again

f109: later.

f95: Please disconnect.

a192

f1463: To reply to sender by voice mail, press 1, 7.

f1464: To forward with comment, press 1, 2.

f1465: To record a new message, press 1, 4.

f24: To delete, press star D.

f388: To skip, press pound.

f1463: To reply to sender by voice mail, press 1, 7.

f1465: To record a new message, press 1, 4.

f24: To delete, press star D.

f388: To skip, press pound.

f1464: To forward with comment, press 1, 2.

f1465: To record a new message, press 1, 4.

f24: To delete, press star D.

f388: To skip, press pound.

f1465: To record a new message, press 1, 4.

f24: To delete, press star D.

f388: To skip, press pound.

f234: To respond or forward, press 1.

f24: To delete, press star D.

f388: To skip, press pound.

f252: To respond to this message, press I.

f24: To delete, press star D. f388: To skip, press pound.

a193

f562: Enter the

NUMBER f563: digit extension

f224: and pound sign.

f117: To reach the covering extension, press star zero.

f115: To transfer using names instead, press star A.

a194

f562: Enter the

NUMBER f563: digit extension

f224: and pound sign.

f117: To reach the covering extension, press star zero.

f115: To transfer using names instead, press star A.

f335: When finished, press pound.

a195

f562: Enter the

NUMBER f563: digit extension

f224: and pound sign.

f115: To transfer using names instead, press star A.

a196

f562: Enter the

NUMBER f563: digit extension

f224: and pound sign.

f115: To transfer using names instead, press star A.

f335: When finished, press pound.

a197

f94: Good-bye.

a199

f592: AUDIX passwords must now be

NUMBER f81: digits.

f593: Please choose a new password of

NUMBER f81: digits.

f173: Please enter new password

f224: and pound sign.

a200

f105: To restart at the activity menu, press star R.

- f238: To review another list,
- a201

 - f213: Re-enter password
 - f224: and pound sign.
- a202

 - f18: To forward with comment, press 2.
 - f8: To record a new message, press 4.
- a204

 - f486: To reply to sender by voice mail, press 1.
 - f8: To record a new message, press 4.
- a205

 - f8: To record a new message, press 4.
- a206

 - f252: To respond to this message, press 1.
 - f24: To delete, press star D.
 - f388: To skip, press pound.
- a207

 - f930: Accessed Messages
- a208

 - f625: To activate message waiting notification, press 1.
- a210

 - f246: Message addressed to
NAME
 - f246: Message addressed to
NAME f2: and
NUMBER f217: others
 - f246: Message addressed to
NAME f2: and
NUMBER f602: other
- a211

f336: To review addressees, press star 1.

f247: To add to list,

a212

f334: When finished addressing, press pound.

a213

f464: Enter extensions

f224: and pound sign.

a214

f118: Enter last name

f224: and pound sign.

a215

f832: Please enter extension and pound sign.

f708: If finished adding entries, press pound.

a216

f118: Enter last name

f224: and pound sign.

f708: If finished adding entries, press pound.

a218

f464: Enter extensions

f224: and pound sign.

f335: When finished, press pound.

a219

f464: Enter extensions

f224: and pound sign.

f121: When finished, approve list by pressing pound.

a220

f131: To send to others not on your list,

a222

f118: Enter last name

f224: and pound sign.

f335: When finished, press pound.

a223

f118: Enter last name

f224: and pound sign.

f121: When finished, approve list by pressing pound.

a224

f711: Alias

BUTTONS f712: defined for

NAME

a225

f711: Alias

BUTTONS

f712: defined for

NAMEEXTf74: deleted.

a226

f711: Alias

BUTTONS f712: defined for

NAMEEXT f197: Cannot step back.

a227

f631: Message waiting notification activated.

f632: Expiration date will be

DATE

a228

f711: Alias

BUTTONS

f712: defined for

NAMEEXT f372: To skip to next entry, press pound. To delete current entry, press star D.

a229

f711: Alias

BUTTONS f185: not found.

a230

f744: For all calls,
f754: Greeting
NUMBER f745: active.
f744: For all calls,
f776: the system greeting
f745: active.

a231

f716: Alias must be ten or fewer numerals.

a232

f716: Alias must be ten or fewer numerals.
f727: Enter alias and pound sign.

a233

f717: Alias already defined.

a234

f709: Enter alias for
NAME f224: and pound sign.

a235

f2: and
NUMBER f63: new
f601: Priority
f160: message
f2: and
NUMBER f63: new
f601: Priority
f168: messages.

a236

f2: and
NUMBER f602: other
f63: new
f345: Voice mail

f160: message
f2: and
NUMBER f602: other
f63: new
f345: Voice mail
f168: messages.

a237

f540: and from
TIME f524: to
TIME

a238

f16: Enter announcement id
f224: and pound sign.

a239

f627: To approve broadcast options, press pound.

a240

f634: To approve login announcement options, press pound.

a241

f606: To re-record your name, press 1. To approve, press pound.

a242

f791: Calls identified as busy and no answer.
f792: Calls identified as out-of-hours.

a243

f791: Calls identified as busy and no answer.
f793: Calls not identified as out-of-hours.

a244

f790. Calls identified as internal and external.
f792: Calls identified as out-of-hours.

a245

f790: Calls identified as internal and external.

f793: Calls not identified as out-of-hours.

a246

f502: To record attendant menu, press 1. To listen to attendant menu, press 0.

f105: To restart at the activity menu, press star R.

a247

f506: Menu approved and activated.

a248

f505: You have selected an invalid option.

a249

f27: To attach original, press Y for yes or N for no.

a250

f580: Cannot attach a private message

a251

f580: Cannot attach a private message

f581: Press N now

a252

f504: Transferring to an operator,

a253

f508: Attendant Service not available, try again later.

f95: Please disconnect.

a254

f843: To scan headers and messages, press 1. To scan headers only, press 2.
To scan messages only, press 3.

a255

f29: Returned to checking status of outgoing messages.

a256

f640: Message cannot be both a login announcement and priority.

a257

f641: Message cannot be both a login announcement and private.

a258

f272: Contact administrator for help.

f95: Please disconnect.

a259

f642: Message cannot be both broadcast and a login announcement

a260

f639: Message cannot be both broadcast and priority.

a261

f31: Date not understood.

f384: Please enter number of month, then two digits for day, and pound sign.

a262

f32: You must enter your extension to logon.

a263

f100: Invalid Entry.

a264

f35: Login incorrect.

a265

f35: Login incorrect.

f236: Try again

a266

f40: Time not understood.

f383: Please enter hour, then two digits for minutes, then A for am or P for pm, and pound sign.

a267

f13: To record, press 1. After recording, press 1 again.

a268

f683: Broadcaster has deleted this broadcast message.

a269

f682: Broadcast message from

NAME f262: received

TIME DATE f905: <.5 second pause>
{a873}

a270

f682: Broad cast message from
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873} f689: Expiration time is
TIME DATE

a271

f682: Broadcast message from
NAME f262: received
TIME DATE f905: c5 second pause>
{a873 } EXTENSION

a272

f682: Broadcast message from
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873} EXTENSION f689: Expiration time is
TIME DATE

a273

f693: Broadcast message to all local subscribers
f693: Broadcast message to all local subscribers
f2: and
NUMBER f217: others
f693: Broadcast message to all local subscribers
f7: and
NUMBER f602: other

a274

f653: For broadcast options, press star M.

a275

f623: Broadcast.

a276

f21: To listen, press 0.

f24: To delete, press star D.

f388: To skip, press pound.

a277

f917: To schedule delivery, press 3.

a278

f749: For busy calls,

f754: Greeting

NUMBER f745: active.

f749: For busy calls,

f776: thesystemgreeting

f745: active.

a279

f513: Begin your message by saying the name and telephone number of the person you are calling. Someone will listen to the start of your message, and then forward the complete message to the person you called.

a280

f51: Entries deleted, please re-enter delivery time.

a281

f74: deleted.

a282

f43: Your call is being answered by AUDIX.

f507: The person you called is not available. To leave a message, use touch tones to re-enter the number YOU called.

f239: followed by the pound sign.

a283

f5: To record personal greeting, press 1. To listen to personal greeting, press 0. To select which greeting to use, press star pound.

a284

f42: The return address for this message is not a mailbox on this system.

a285

f56: Thank you for leaving your message.
f46: To access your mailbox, press star R.
f973: If you are finished, please hang up.

a286

f47: Call from
NAME f262: received
TIME DATE {a873}

a287

f47: Call from
NAME f262: received
TIME DATE f86: extension
BUTTONS {a873}

a288

f43: Your call is being answered by AUDIX.
NAME f680: is busy. Sorry, you cannot leave a message now because this user's mailbox is full.

a289

NAME f44: is not available. To leave a message, wait for the tone.
f43: Your call is being answered by AUDIX.
NAME f44: is not available. To leave a message, wait for the tone.
f71: To leave a message, wait for the tone.

a290

NAME f45: is busy. To leave a message, wait for the tone.
f43: Your call is being answered by AUDIX.
NAME f45: is busy. To leave a message, wait for the tone.
f71: To leave a message, wait for the tone.

a291

NAME f45: is busy. To leave a message, wait for the tone.
f112: otherwise, for assistance, press zero now.
f43: Your call is being answered by AUDIX.

NAME f45: is busy. To leave a message, wait for the tone.

f112: otherwise, for assistance, press zero now.

f71: To leave a message, wait for the tone.

f112: otherwise, for assistance, press zero now.

a292

NAME f44: is not available. To leave a message, wait for the tone.

f112: otherwise, for assistance, press zero now.

f43: Your call is being answered by AUDIX.

NAME f44: is not available. To leave a message, wait for the tone.

f112: otherwise, for assistance, press zero now.

f71: To leave a message, wait for the tone.

f112: otherwise, for assistance, press zero now.

a293

f43: Your call is being answered by AUDIX.

NAME f679: is not available. Sorry, you cannot leave a message now because this user's mailbox is full.

a294

f156: Maximum length recorded.

a295

f50: Call

NAME f262: received

TIME DATE f86: extension

BUTTONS { a873 }

a296

f50: Call f262: received TIME DATE { a873 }

a297

f507: The person you called is not available. To leave a message, use touch tones to re-enter the number you called.

a298

f507: The person you called is not available. To leave a message, use touch tones to re-enter the number you called.

f274: Please make entry soon, or be disconnected.

a299

f511: If you do not have a touch tone phone,
f380: Please wait.

a300

f794: To change identification to busy and no answer, press 2.

a301

f911: Enter buttons followed by pound.

a302

f912: Enter number followed by pound.

a303

f630: To change expiration date from
DATE f762: press2.

a304

f795: To change to identification internal and external, press 1.

a305

f910: You are playing an announcement which need additional input before it
can be played.

f911: Enter buttons followed by pound.

a306

f910: You are playing an announcement which need additional input before it
can be played.

f912: Enter number followed by pound.

a307

f527: To change number, press 1. To change times, press 2. For instructions on
entering your outcalling number, press 3.

f528: To turn on, press y. To turn off, press n.

a308

f60: Changed.

a309

f565: outcall canceled for new messages currently in mailbox.

a310

f12: To re-record, press 1. After recording, press 1 again. To delete, press star D. To playback, press 2-3. To approve as is, press pound.

a311

f628: To deactivate message waiting notification, press 1.

a313

f931: Delivered Messages

a314

f801: To respond to this notification, press one. To delete, press star D. To skip, press pound.

a315

f24: To delete, press star D.
f388: To skip, press pound.

a316

f77: Deleted.

a317

f'77: Deleted.
f173: Please enter new password
f224: and pound sign.

a318

f77: Deleted.
f22: To deliver now, press pound. To schedule delivery time enter hour, minutes, A or P, and pound sign.

a319

f706: To add entries, press 1. To review all entries, press 2. To review a specific entry, press 3.
f913: If finished, press pound.

a320

f705: Directory contains
NUMBER f83: entries.

f705: Directory contains
NUMBER f84: entry.

a321

f724: Personal directory review completed.

a322

f140: Entry already deleted. To delete more entries, press star 1.

a324

f145: List has no entries.

a325

f538: Enter the ending hour, minutes, A or P, and pound sign.

a326

f472: To approve, press pound. To record from here, press 1.
f24: To delete, press star D.

a327

f727: Enter alias and pound sign.
f833: To delete current entry, press star D.
f148: For extension addressing, press star A.
f913: If finished, press pound.

a328

f727: Enter alias and pound sign.
f833: To delete current entry, press star D. f58: For name addressing, press star
A. f913: If finished, press pound.

a329

f727: Enter alias and pound sign.
f913: If finished, press pound.

a330

f713: Enter next extension and pound sign.
f708: If finished adding entries, press pound.

a331

f710: Enter next name and pound sign.

f708: If finished adding entries, press pound.

a332

f85: Erased.

f13: To record, press 1. After recording, press 1 again.

a333

f632: Expiration date will be
DATE

a334

f86: extension
BUTTONS f552: is not authorized to receive messages.

a335

f86: extension
BUTTONS f552: is not authorized to receive messages.
f553: You may enter another number

a336

f86: extension
BUTTONS f552: is not authorized to receive messages.
f95: Please disconnect.

a337

f86: extension
BUTTONS f841: not defined

a338

f86: extension f202: not valid.

a339

f748: For external calls,
f754: Greeting
NUMBER f745: active.
f748: For external calls,
f776: thesystemgreeting
f745: active.

a340

f971: To send, press #.

a341

f971: To send, press #.

f774: If you have addressed this message and wish to deliver it immediately,
press star star pound.

a342

f739: Message sent to all local subscribers.

f739: Message sent to all local subscribers. f2: and NUMBER f217: others

f739: Message sent to all local subscribers.

f2: and

NUMBER f602: other

a343

f740: Private message sent to all local subscribers.

f740: Private message sent to all local subscribers. f2: and NUMBER f217:
others

f740: Private message sent to all local subscribers. f2: and NUMBER f602: other

a344

f741: Private, priority message sent to
NAME

f741: Private, priority message sent to
NAME f2: and
NUMBER f217: others

f741: Private, priority message sent to
NAME f2: and
NUMBER f602: other

a345

f743: Priority message sent to
NAME

f743: Priority message sent to
NAME f2: and
NUMBER f217: others

f743: Priority message sent to
NAME f2: and
NUMBER f602: other

a346

f474: To listen, press 0. To change or send again, press 1.
f388: To skip, press pound.

a347

f932: Filed Messages

a348

f89: First message.
f197: Cannot step back.
f142: To listen to the header, press 3.

a349

f118: Enter last name
f224: and pound sign.
f175: Please note only AUDIX subscribers can be specified by name.

a350

f807: For busy
f2: and
f812: no answer
f814: calls.
f754: Greeting
NUMBER f745: active.
f807: For busy
f2: and f812: no answer f814: calls. f776: the system greeting f745: active.

a351

f807: For busy
f812: no answer
f813: and out-of-hours
f814: calls.
f754: Greeting

NUMBER f745: active.
f807: For busy
f812: no answer
f813: and out-of-hours
f814: calls.
f776: thesystemgreeting
f745: active.

a352

f805: For internal
f2: and
f810: external
f814: calls.
f754: Greeting
NUMBER f745: active.
f805: For internal... f2: and f810: external f814: calls. f776: thesystemgreeting
f745: active.

a353

f805: For internal
f810: external
f813: and out-of-hours
f814: calls.
f754: Greeting
NUMBER f745: active.
f805: For internal
f810: external
fg13: and out-of-hours
f814: calls.
f776: the system greeting
f745: active.

a354

f90: Enter fragment id
f224: and pound sign.

a355

f684: Private,broadcastmessagefrom
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873}

a356

f684: Private,broadcastmessagefrom
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873} f689: Expiration time is
TIME DATE

a357

f684: Private,broadcastmessagefrom
NAME f262: received
TIME DATE f905: <.5 second pause>
{ a873 } EXTENSION

a358

f684: Private,broadcastmessagefrom
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873} EXTENSION f689: Expiration time is
TIME DATE

a360

f715: Cannot add new entries because your directory is full.

a361

f715: Cannot add new entries because your directory is full.
NAMEEXT f722: was not added to your personal directory.

a362

f93: You have no personal greeting, system greeting used.

a364

f243: Rewound.

a365

f754: Greeting NUMBER f771: approved and active f823: ...for all calls

a366

f754: Greeting NUMBER f771: approved and active f827: ...for busy f2: and
f812: no answer f814: calls.

a367

f754: Greeting
NUMBER f771: approved and active
f827: ...for busy
f813: and out-of-hours
f814: calls.

a368

f754: Greeting NUMBER f771: approved and active f827: ...for busy f814: calls.

a369

f754: Greeting
NUMBER f771: approved and active
f827: ...for busy f812: no answer f813: and out-of-hours f814: calls.

a370

f754: Greeting NUMBER f771: approved and active f826: ...for external f813:
and out-of-hours f814: calls.

a371

f754: Greeting
NUMBER f771: approved and active
f826: ...for external
f814: calls.

a372

f754: Greeting NUMBER f771: approved and active f825: ...for internal f2: and
f810: external f814: calls.

a373

f754: Greeting NUMBER f771: approved and active
f825: ...for internal
f813: and out-of-hours

f814: calls.

a374

f754: Greeting

NUMBER f771: approved and active

f825: ...for internal

f814: calls.

a375

f754: Greeting

NUMBER f771: approved and active

f825: ...for internal

f810: external

f813: and out-of-hours

f814: calls.

a376

f754: Greeting

NUMBER f771: approved and active

f828: ...for no answer

f813: and out-of-hours

f814: calls.

a377

f754: Greeting

NUMBER f771: approved and active

f828: ...for no answer

f814: calls.

a378

f754: Greeting

NUMBER f771: approved and active

f829: ...for out-of-hours

f814: calls.

a379

f754: Greeting

NUMBER f74: deleted.

a380

f754: Greeting

NUMBER f74: deleted.

f332: System greeting used.

f823: ...for all calls

a381

f754: Greeting

NUMBER f74: deleted.

f332: System greeting used.

f827: ...for busy

f2: and

f812: no answer

f814: calls.

a382

f754: Greeting

NUMBER f74: deleted.

f332: System greeting used.

f827: ...for busy

f813: and out-of-hours

f814: calls.

a383

f754: Greeting

NUMBER f74: deleted.

f332: System greeting used.

f827: ...for busy f814: calls.

a384

f754: Greeting

NUMBER f74: deleted.

f332: System greeting used.

f827: ...for busy

f812: no answer

f813: and out-of-hours
f814: calls.

a385

f754: Greeting
NUMBER f74: deleted.
f332: System greeting used.
f826: ...for external
f813: and out-of-hours
f814: calls.

a386

f754: Greeting
NUMBER f74: deleted.
f332: System greeting used.
f826: ...for external
f814: calls.

a387

f754: Greeting
NUMBER f74: deleted.
f332: System greeting used.
f825: ...for internal
f2: and
f810: external
f814: calls.

a388

f754: Greeting
NUMBER f74: deleted.
f332: System greeting used.
f825: ...for internal
f813: and out-of-hours
f814: calls.

a389

f754: Greeting

NUMBER f74: deleted.
f332: System greeting used.
f825: ...for internal
f814: calls.

a390

f754: Greeting
NUMBER f74: deleted.
f332: System greeting used.
f825: ...for internal
f810: external
f813: and out-of-hours
f814: calls.

a391

f754: Greeting
NUMBER f74: deleted.
f332: System greeting used.
f828: ...for no answer
f813: and out-of-hours
f814: calls.

a392

f754: Greeting
NUMBER f74: deleted.
f332: System greeting used.
f828: ...for no answer
f814: calls.

a393

f754: Greeting
NUMBER f74: deleted.
f332: System greeting used.
f829: ...for out-of-hours
f814: calls.

a394

f754: Greeting
NUMBER f214: Approved.

a395

f754: Greeting
NUMBER f755: not recorded.

a396

f754: Greeting
NUMBER f765: recorded, but not active

a397

f754: Greeting
NUMBER f770: recorded and active
f823: ...for all calls

a398

f754: Greeting
NUMBER f770: recorded and active
f827: ...for busy
f2: and
f812: no answer
f814: calls.

a399

f754: Greeting
NUMBER f770: recorded and active
f827: ...for busy
f813: and out-of-hours
f814: calls.

a400

f754: Greeting
NUMBER f770: recorded and active
f827: ...for busy f814: calls.

a401

f754: Greeting

NUMBER f770: recorded and active
f827: ...for busy
f812: no answer
f813: and out-of-hours
f814: calls.

a402

f754: Greeting
NUMBER f770: recorded and active
f826: ...for external
f813: and out-of-hours
f814: calls.

a403

f754: Greeting
NUMBER f770: recorded and active
f826: ...for external
f814: calls.

a404

f754: Greeting
NUMBER f770: recorded and active
f825: ...for internal
f2: and f810: external f814: calls.

a405

f754: Greeting
NUMBER f770: recorded and active
f825: ...for internal
f813: and out-of-hours
f814: calls.

a406

f754: Greeting
NUMBER f770: recorded and active
f825: ...for internal
f814: calls.

a407

f754: Greeting
NUMBER f770: recorded and active
f825: ...for internal
f810: external
f813: and out-of-hours
f814: calls.

a408

f754: Greeting
NUMBER f770: recorded and active
f828: ...for no answer
f813: and out-of-hours
f814: calls.

a409

f754: Greeting
NUMBER f770: recorded and active
f828: ...for no answer
f814: calls.

a410

f754: Greeting
NUMBER f770: recorded and active
f829: . .for out-of-hours
f814: calls.

a411

f754: Greeting
NUMBER f745: active.
f823: ...for all calls

a412

f754: Greeting
NUMBER f745: active.
f827: ...for busy
f2: and

f812: no answer

f814: calls.

a413

f754: Greeting

NUMBER f745: active.

f827: ...for busy

f813: and out-of-hours

f814: calls.

a414

f754: Greeting

NUMBER f745: active.

f827: ...for busy

f814: calls.

a415

f754: Greeting

NUMBER f745: active.

f827: ...for busy

f812: no answer

f813: and out-of-hours

f814: calls.

a416

f754: Greeting

NUMBER f745: active.

f826: ...for external

f813: and out-of-hours

f814: calls.

a417

f754: Greeting

NUMBER f745: active.

f826: ...for external

f814: calls.

a418

f754: Greeting
NUMBER f745: active.
f825: ...for internal
f2: and
f810: external
f814: calls.

a419

f754: Greeting
NUMBER f745: active.
f825: ...for internal
f813: and out-of-hours
f814: calls.
a420 f754: Greeting
NUMBER f745: active.
f825: ...for internal
f814: calls.

a421

f754: Greeting
NUMBERf745: active.
f825: ...for internal
f810: external
f813: and out-of-hours
f814: calls.

a422

f754: Greeting
NUMBER f745: active.
f828: ...for no answer
f813: and out-of-hours
f814: calls.

a423

f754: Greeting

NUMBER f745: active.

f828: ...for no answer

f814: calls.

a424

f754: Greeting

NUMBER f745: active.

f829: ...for out-of-hours

f814: calls.

a425

f752: To listen to a greeting, press 0. To create, change, or delete a greeting, press 1. To scan all your greetings, press 2. To activate a greeting, press 3. To administer call types, press 4. If finished, press pound.

a426

f756: To listen to greeting

NUMBER f772: again

f760: press 0.

a427

f756: To listen to greeting

NUMBER f760: press 0.

a428

f753: Enter greeting number.

a429

f757: To re-record, press 1.

f24: To delete, press star D.

f913: If finished, press pound.

a430

f757: To re-record, press 1.

f759: To review status, press 2.

f24: To delete, press star D.

f913: If finished, press pound.

a431

f88: Cannot use the guest password

f173: Please enter new password

f224: and pound sign.

a432

f788: To identify calls as out-of-hours, press 3.

a433

f747: For internal calls,

f754: Greeting

NUMBER f745: active.

f747: For internal calls,

f776: the system greeting

f745: active.

a434

f737: Login announcement will be interruptible.

a435

f136: Line busy.

a436

f149: All circuits busy.

a437

f99: Invalid announcement.

a438

f637: Invalid date.

a439

f637: Invalid date.

DATE f678: is past the expiration date, please reschedule.

a440

f637: Invalid date.

DATE f638: is prior to delivery date, please re-schedule.

a441

f101: Invalid fragment.

a442

f10: That is not a valid machine voice ID.

a443

f579: Password must be

NUMBER f81: digits.

f173: Please enter new password

f224: and pound sign.

a444

f579: Password must be

NUMBER f211: to fifteen digits

f173: Please enter new password

f224: and pound sign.

a445

f102: That is not a valid extension.

a446

f128: To request another transfer, press star T.

f129: or leave a message for

NAME

a447

f104: Message delivered, cannot listen to a delivered message.

a448

f492: owner erased.

a449

f110: list

BUTTONS

a450

f110: list

BUTTONS

f142: To listen to the header, press 3.

a451

f110: list
BUTTONS f65: contains
NUMBER f83: entries.
f110: list
BUTTONS f65: contains
NUMBER f84: entry.

a452

f110: list
BUTTONS f65: contains
NUMBER f150: members.
f110: list
BUTTONS f65: contains
NUMBER f159: member.

a453

f110: list
BUTTONS f74: deleted.

a454

f110: list
BUTTONS f197: Cannot step back.
f142: To listen to the header, press 3.

a455

f110: list
BUTTONS f485: has
NUMBER f150: members.
f15: and is
f226: private
f110: list
BUTTONS f485: has
NUMBER f159: member.
f15: and is
f226: private
a456

f110: list
BUTTONS f485: has
NUMBER f150: members.
f15: and is
f227: public
f110: list
BUTTONS f485: has
NUMBER f159: member.
f15: and is
f227: public

a457

f110: list
BUTTONS f226: private
f61: To modify status, press Y for yes or N for no.

a458

f110: list
BUTTONS f227: public
f61: To modify status, press Y for yes or N for no.

a459

f110: list
BUTTONS f74: deleted.
f130: because there were no entries.

a460

f110: list
BUTTONS f120: too large to include.
f132: You can store your list as is by pressing star pound or add up to
NUMBER f139: additional members,

a462

f110: list
BUTTONS f120: too large to include.
f134: You can store your list or delete members, but you cannot add members.

a463

f110: list
BUTTONS f120: too large to include.
f124: No more list space.
f349: To approve list as is, press pound.
f241: To review list, press star 1.

a465

f110: list
BUTTONS f208: is not a public list.

a466

f110: list
BUTTONS f202: not valid.
f498: Please enter a new list id
f224: and pound sign.

a467

f110: list
f185: not found.

a468

f110: list
f185: not found.
f295: To re-enter list, press star L.

a469

f110: list
BUTTONS f219: owned by
NAME f65: contains
NUMBER f150: members.

a470

f110: list
BUTTONS f219: owned by
NAME f120: too large to include.
f132: You can store your list as is by pressing star pound or add up to

NUMBER f139: additional members.

a471

f110: list

BUTTONS f219: owned by

NAME f120: too large to include.

f134: You can store your list or delete members, but you cannot add members.

a472

f110: list

BUTTONS f219: owned by

NAME f120: too large to include.

f124: No more list space.

f349: To approve list as is, press pound.

f241: To review list, press star 1.

a473

f110: list

BUTTONS f219: owned by

NAME f74: deleted.

a474

f110: list

BUTTONS f219: owned by

NAME f208: is not a public list.

a476

f124: No more list space.

f970: To continue reviewing, press 3. To delete an entry, press star D. If finished reviewing, press pound.

a477

f110: list

BUTTONS f219: owned by

NAME f208: is not a public list.

f295: To re-enter list, press star L.

a478

f111: Please enter list id

f224: and pound sign.

a479

f141: No more lists.

a480

f124: No more list space.

f133: To continue reviewing, press 3. To delete an entry, press star D. If finished reviewing, press star pound.

a481

f116: List is full.

f133: To continue reviewing, press 3. To delete an entry, press star D. If finished reviewing, press star pound.

a482

f116: List is full.

f349: To approve list as is, press pound.

f241: To review list, press star 1.

a483

f124: No more list space.

f349: To approve list as is, press pound.

f241: To review list, press star 1.

a484

f113: You already have a list

BUTTONS

f114: To replace list, re-enter id and pound sign. To create a new list, enter new list id

f224: and pound sign.

a485

f154: Cannot create new list, you have maximum lists allowed. To select lists to be deleted, press 5-1-2 and follow instructions.

a486

f155: Cannot create new list, total number of members in all your lists equals maximum allowed.

a487+

f122: List space nearly full. You may enter
NUMBER f123: new members.

a488

f468: To continue playing, press 3.

a489

f691: Login announcement from
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873}

a490

f691: Login announcement from
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873} f689: Expiration time is
TIME DATE

a491

f691: Login announcement from
NAME f262: received
TIME DATE f905: <.5 second pause>
{ a873 } EXTENSION

a492

f691: Login announcement from
NAME f262: received,
TIME DATE f905: <.5 second pause>
{a873} EXTENSION f689: Expiration time is
TIME DATE

a493

f697: Login announcement to all local subscribers
f697: Login announcement to all local subscribers f2: and NUMBER f217: others
f697: Login announcement to all local subscribers f2: and NUMBER f602: other

a494

f656: For login announcement options, press star M.

a495

f624: Login announcement.

a496

f100: Invalid Entry.

f96: For help, press star H.

a497

f364: enter owner's extension

f224: and pound sign.

f471: If it's your list, press pound.

a498

f470: Enter owner's last name

f224: and pound sign.

f471: If it's your list, press pound.

a501

f240: To skip, press pound. To listen, press 0.

f24: To delete, press star D.

a502

f14: To make private, press 1. To make public, press 2.

a503

f704: To create lists, press 1. To scan lists, press 2. To review and modify lists, press 3.

a504

f82: Please leave a message for

NAME

a505

f152: Leave Word Calling from

NAME f262: received

TIME DATE

a506

f152: Leave Word Calling from
NAME f262: received
TIME DATE f86: extension
BUTTONS

a507

f474: To listen, press 0. To change or send again, press 1.
f24: To delete, press star D.
f388: To skip, press pound.

a508

f30: To change, press 1.
f24: To delete, press star D.
f388: To skip, press pound.

a509

f6: Enter machine voice ID.
f224: and pound sign.

a510

f153: Maximum length recorded. To re-record, press 2-1. To approve as is,
press pound.

a511

f125: Must be six or fewer numerals.
f111: Please enter list id
f224: and pound sign.

a512

f570: Recorded name too long

a513

f156: Maximum length recorded.
f157: To approve as is, press pound.

a514

f582: AUDIX passwords must now be at least
NUMBER f81: digits.

f593: Please choose a new password of
NUMBER f588: or more digits.

f173: Please enter new password

f224: and pound sign.

a515

f614: To make broadcast, press 8.

a516

f615: To make a login announcement, press 9.

a517

f633: To make non-interruptible, press 1.

a518

f613: To make priority, press 2.

a519

f612: To make private, press 1.

a520

f386: Cannot change a delivered message.

a521

f484: Enter more characters followed by the pound sign; if you just completed
entering the last name, enter the first name.

f224: and pound sign.

a522

f777: Cannot listen to system greeting.

a523

f778: Cannot modify system greeting.

a524

f780: Personal greetings review completed.

a525

f781: To skip to the next greeting, press the pound sign.

f756: To listen to greeting

NUMBER f760: press 0.

f24: To delete, press star D.

f'707: If finished, press star pound.

a527

f165: Returned to getting messages.

f21: To listen, press 0.

f24: To delete, press star D.

f388: To skip, press pound.

a528

f91: At end.

a529

f844: End of message.

a530

f165: Returned to getting messages.

f21: To listen, press 0.

f255: To delete this message, press star D.

f388: To skip, press pound.

a531

f166: At end. To playback, press 2-3.

a532

f473: filed

a533

f167: To approve, press pound. To record from here, press 1. To playback, press 2-3.

a534

f170: Delivery scheduled

a535

f170: Delivery scheduled

TIME DATE f66: If correct, press pound. If not, press star D and re-enter time.

a536

f631: Message waiting notification activated.

a537

f198: Partial name deleted.

a538

f603: You also have

f34: Electronic Text

f168: messages.

a539

f172: You have new

f343: Leave word calling

f168: messages.

a540

f603: You also have

f343: Leave word calling

f2: and

f34: Electronic Text

f168: messages.

a541

f603: You also have

f343: Leave word calling

f2: and

f342: Electronic document communication

f168: messages.

a542

f172: You have new

f343: Leave word calling

f2: and

f342: Electronic document communication

f168: messages.

a543

f603: You also have

f343: Leave word calling

f2: and
f344: Message Center Service
f168: messages.

a544

f172: You have new
f343: Leave word calling
f2: and f344: Message Center Service
f168: messages.

a545

f603: You also have
f343: Leave word calling
f344: Message Center Service
f2: and
f342: Electronic document communication
f168: messages.

a546

f172: You have new
f343: Leave word calling
f344: Message Center Service
f2: and
f342: Electronic document communication
f168: messages.

a547

f172: You have new
f34: Electronic Text
f168: messages.

a549

f603: You also have
f342: Electronic document communication
f168: messages.

a550

f172: You have new

f342: Electronic document communication
f168: messages.

a551

f603: You also have
f344: Message Center Service
f168: messages.

a552

f172: You have new
f344: Message Center Service
f168: messages.

a553

f603: You also have
f344: Message Center Service
f2: and
f342: Electronic document communication
f168: messages.

a554

f172: You have new
f344: Message Center Service
f2: and
f342: Electronic document communication
f168: messages.

a555

f603: You also have
f343: Leave word calling
f168: messages.

a556

f928: New Messages

a557

f600: new Broadcast messages.

a558

f845: Next message.

a559

f105: To restart at the activity menu, press star R.

f67: To create another list,

f111: Please enter list id

f224: and pound sign.

a560

f830: You must approve your recording.

f167: To approve, press pound. To record from here, press 1. To playback, press 2-3.

a561

f53: Message deleted, no delivery will occur.

a562

f180: Nothing to approve.

a563

f850: Broadcast and Login Message services are not available.

a564

f636: Login announcement will be non-interruptible.

a565

f842: Announcement not recorded. Try again later.

f95: Please disconnect.

a566

f203: No room in your mailbox for a recording.

f62: Please delete unneeded messages.

a569

f215: No room to retain a copy.

f62: Please delete unneeded messages.

a570

f1443: Voice file system is out of space.

f1444: Please contact the administrator.

a571

f207: Message too long to add comment. To record a new message, press star R-1.

a572

f209: Cannot modify another subscriber's list.

a573

f92: Nothing to advance.

a574

fl77: Cannot listen to a delivered message.

a575

fl78: No addressees identified.

a576

fl78: No addressees identified. f74: deleted.

a577

fl69: Admin version not specified, please do so using administrator's terminal.

a579

f750: For no answer calls

f754: Greeting

NUMBER f745: active.

f750. For no answer calls

f776: the system greeting

f745: active.

a581

fl 80: Nothing to approve.

fl3: To record, press 1. After recording, press 1 again.

a582

f548: You have no attendant menu.

a583

f609: No room to save Broadcast message so it will be retained in the new message category.

a584

f186: To record messages, press 1. To get messages, press 2. To check your outgoing messages, press 4.

a585

f182: Nothing to delete.

a586

f182: Nothing to delete.

f173: Please enter new password

f224: and pound sign.

a587

f714: Directory has no entries.

a589

f184: Nothing to erase.

f13: To record, press 1. After recording, press 1 again.

a590

f575: Cannot forward a private message

a592

f188: Passwords do not match. Please re-enter new password

f224: andpoundsign.

a593

f189: You have no mailbox.

f272: Contact administrator for help.

a594

f190: Message delivered, you cannot change it now.

a595

f191: No more messages.

596

f779: No greetings recorded.

a597

f192: No messages.

a598

f193: No name recorded.

a599

f193: No name recorded.

f608: At the tone, please speak your name. After speaking your name, press 1.

a600

f194: No new messages.

a601

f509: System not administered for outcalling.

a603

f49: No operator defined.

a604

f196: You have no personal greeting.

a605

f199: Nothing to rewind.

a606

f1 99: Nothing to rewind.

f256: At beginning. To re-record, press 1. To playback, press 2-3.

a607

f199: Nothing to rewind.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

a608

f3: No new remote subscribers can be addressed.

a609

f200: No time entered, nothing to delete.

f22: To deliver now, press pound. To schedule delivery time enter hour, minutes, A or P, and pound sign.

a610

f571: Non-existent subscriber

a611

f232: Recording stopped.

f180: Nothing to approve.

a612

f173: Please enter new password

f224: and pound sign.

a613

f223: Please enter extension

f224: and pound sign.

f237: or press star R.

a614

f510: Number

f202: not valid.

a615

f510: Number

f202: not valid.

f95: Please disconnect.

a616

f535: For outcalling any time, press 1. For outcalling during prime time, press 2.
To specify your times, press 3. For system outcalling schedule, press 4.

a617

f530: outcalling

f522: turned off to restart at the activity menu, press star R.

a618

f530: outcalling

f521: turned on

f835: for all new messages

a619

f530: outcalling

f521: turned on

f836: only for new priority messages

a620

f532: To change your outcalling phone number, press 1 and enter the number to be called followed by the pound sign. Anything you enter will be interpreted as a part of the called number. No global commands such as star H will be accepted at this time.

f1284: In all cases, entering a star or pound as the first digit will result in the star or pound

being outpulsed. A star entered as part of the digit string will be interpreted as a pause of one and a half seconds. If a longer pause is required, use multiple stars in a row.

f1285: If you are programming a number to call a pager that requires a pound sign in or at the end of the digit string, press y to hear further help. otherwise, press n to return to outcalling administration.

f532: To change your outcalling phone number, press 1 and enter the number to be called followed by the pound sign. Anything you enter will be interpreted as a part of the called number. No global commands such as star H will be accepted at this time.

f557: In most cases, entering a star or pound as the first digit will result in the star or pound being outpulsed. A star entered as part of the digit string will be interpreted as a pause of one and a half seconds. If a longer pause is required, use multiple stars in a row.

f560: If you are programming a number to call a pager that requires a pound sign termination, press y to hear further help. otherwise, press n to return to outcalling administration.

a621

f531: Enter outcalling number

f224: and pound sign.

f556: To exit, press star pound now.

a622

f1286: Wherever a pound sign is required in the digit string, enter star pound. For pagers requiring a pound sign termination, end your digit string with star pound pound.

f1452: A star entered as part of the digit string will be interpreted as a pause of one and a half seconds.

f1287: If a pause is required before a pound sign, enter star star pound.

f1471: Up to 60 characters may be entered.

f589: For pagers requiring a pound sign termination, start your number with a double pound sign. This will result in a single pound being outputted at the end of the digit string. Then, a star or pound in the next position will be interpreted as part of the outcalling number.

f590: A star entered as part of the digit string will be interpreted as a pause of one and a half seconds. If a longer pause is required, use multiple stars in a row.

a623

f534: Your outcalling number is
DIALSTR

a624

f544: outcalling specified for
f525: anytime
f526: subject to administrator restrictions

a625

f544: outcalling specified for
TIME f524: to
TIME f526: subject to administrator restrictions

a626

f544: outcalling specified for
TIME f524: to
TIME f526: subject to administrator restrictions
f66: If correct, press pound. If not, press star D and re-enter time.

a627

f500: This is AUDIX.
NAME f172: You have new
f168: messages.
f551: To access your messages,
f223: Please enter extension
f224: and pound sign.
f543: To avoid further notification of these messages, press star pound.

a628

f519: You are not authorized for outcalling.

a629

f520: Your outcalling number,

DIALSTR f522: turned off to restart at the activity menu, press star R.

f527: To change number, press 1. To change times, press 2. For instructions on entering your outcalling number, press 3.

f528: To turn on, press y. To turn off, press n.

a630

f520: Your outcalling number,

DIALSTR f521: turned on

f835: for all new messages

f523: for

f525: anytime

f526: subject to administrator restrictions

f105: To restart at the activity menu, press star R.

f527: To change number, press l. To change times, press 2. For instructions on entering your outcalling number, press 3.

f528: To turn on, press y. To turn off, press n.

a631

f520: Your outcalling number,

DIALSTR f521: turned on

f835: for all new messages

f523: for

TIME f524: to

TIME f526: subject to administrator restrictions

f105: To restart at the activity menu, press star R.

f527: To change number, press 1. To change times, press 2. For instructions on entering your outcalling number, press 3.

f528: To turn on, press y. To turn off, press n.

a632

f520: Your outcalling number,

DIALSTR f521: turned on

f836: only for new priority messages

f523: for

f525: anytime

f526: subject to administrator restrictions

f105: To restart at the activity menu, press star R.

f527: To change number, press 1. To change times, press 2. For instructions on entering your outcalling number, press 3.

f528: To turn on, press y. To turn off, press n.

a633

f520: Your outcalling number,

DIALSTR f521: turned on

f836: only for new priority messages

f523: for

TIME f524: to

TIME f526: subject to administrator restrictions

f105: To restart at the activity menu, press star R.

f527: To change number, press 1. To change times, press 2. For instructions on entering your outcalling number, press 3.

f528: To turn on, press y. To turn off, press n.

a634

f837: To turn on outcalling for all new messages, press 1. To turn on outcalling only for new priority messages, press 2.

a635

f929: old Messages

a636

f840: option

f841: not defined

a637

f216: originally

f259: scheduled for

TIME DATE f261: rescheduled for

TIME DATE f264: Message not delivered because mailbox was full.

f216: originally

f259: scheduled for

TIME DATE f261: rescheduled for

TIME DATE f265: Message not delivered because their mailboxes were full.

a638

f216: originally

f259: scheduled for

TIME DATE f261: rescheduled for

TIME DATE f265: Message not delivered because their mailboxes were full.

f689: Expiration time is

TIME DATE

a639

f216: originally

f259: scheduled for

TIME DATE f261: rescheduled for

TIME DATE f98: Message not delivered due to transmission problems.

a640

f216: originally

f259: scheduled for

TIME DATE f261: rescheduled for

TIME DATE f98: Message not delivered due to transmission problems.

f689: Expiration time is

TIME DATE

a641

f216: originally

f259: scheduled for

TIME DATE f261: rescheduled for

TIME DATE f387: Message not delivered because recipient not found.

a642

f216: originally

f259: scheduled for

TIME DATE f261: rescheduled for

TIME DATE f387: Message not delivered because recipient not found.

f689: Expiration time is

TIME DATE

a643

f216: originally

f259: scheduled for

TIME DATE f261: rescheduled for

TIME DATE f584: Message not delivered because special feature denied on recipients machine.

a644

f216: originally

f259: scheduled for

TIME DATE f261: rescheduled for

TIME DATE f584: Message not delivered because special feature denied on recipients machine.

f689: Expiration time is

TIME DATE

a645

f75 1: For out-of-hours calls,...

f754: Greeting

NUMBER f745: active.

f751: For out-of-hours calls

f776: the system greeting

f745: active.

a647

f681: Sorry, cannot leave a message now because this user's mailbox is full.

a648

f214: Approved.

a649

f1: Someone is changing your greeting, please try again later.

a650

f607: Name cannot be saved at this time, please continue

a651

f720: Alias entered not followed by pound and not added to the directory.

a652

f719: Extension entered not followed by pound and not added to the directory.

a653

f718: Name entered not followed by pound and not added to the directory.

a654

f37: Extension entered not followed by pound

f187: and not added to the list.

f464: Enter extensions

f224: and pound sign.

f349: To approve list as is, press pound.

a655

f38: Name entered not followed by pound

f187: and not added to the list.

f118: Enter last name

f224: and pound sign.

f349: To approve list as is, press pound.

a656

f798: Prime time is

TIME f524: to

TIME

a657

f798: Prime time is

TIME f524: to

TIME f788: To identify calls as out-of-hours, press 3.

f789: otherwise, press 4.

a658

f226: private

f47: Call from

NAME f262: received

TIME DATE {a873}

a659

f226: private
f47: Call from
NAME f262: received
TIME DATE f86: extension
BUTTONS {a873}

a660

f226: private
f50: Call
NAME f262: received
TIMEDATEf86: extension
BUTTONS { a873 }

a661

f226: private
f50: Call
f262: received
TIME DATE { a873 }

a662

f226: private
f110: list

a663

f686: Private message from
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873}

a664

f686: Private message from
NAME f262: received
TIMEDATEf905: <.5 second pause>
{ a873 } f689: Expiration time is
TIME DATE

a665

f686: Private message from
NAME f262: received
TIME DATE f905: <.5 second pause>
{ a873 } EXTENSION

a666

f686: Private message from
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873} EXTENSION f689: Expiration time is
TIME DATE

a667

f918: To re-schedule delivery, press 3.

a668

f690: Priority message from
NAME f262: received
TIME DATE { a873 }

a669

f690: Priority message from
NAMEf262: received
TIME DATE { a873 } f689: Expiration time is
TIME DATE

a670

690: Priority message from
NAME f262: received
TIME DATE { a873 } EXTENSION

a671

f690: Priority message from
NAME f262: received
TIME DATE {a873} EXTENSION f689: Expiration time is
TIME DATE

a672

f919: To file a copy, press 4.

a673

f698: Priority message to
NAME

f698: Priority message to

NAME f2: and

NUMBER f217: others

NAME f2: and

NUMBER f602: other

a674

f227: public

f110: list

a675

f694: Private, broadcast message to all local subscribers

f694: Private, broadcast message to all local subscribers

f2: and

NUMBER f217: others

f694: Private, broadcast message to all local subscribers

f2: and

NUMBER f602: other

a676

f685: Private, priority message from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873}

a677

685: Private, priority message from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873} f689: Expiration time is

TIME DATE

a678

685: Private, priority message from
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873} EXTENSION

a679

685: Private, priority message from
NAME f262: received
TIME DATE f905: <.5 second pause>
{a873} EXTENSION f689: Expiration time is
TIME DATE

a680

f242: Returned to the
f57: accessed
fl64: category.
f142: To listen to the header, press 3.

a681

242: Returned to the
f59: delivered
fl64: category.
f142: To listen to the header, press 3.

a682

242: Returned to the
f473: filed
fl64: category.
f142: To listen to the header, press 3.

a683

242: Returned to the
f63: new
fl64: category.
f142: To listen to the header, press 3.

a684

242: Returned to the
f64: old
fl64: category.
f142: To listen to the header, press 3.

a685

242: Returned to the
f68: undeliverable
fl64: category.
f142: To listen to the header, press 3.

a686

242: Returned to the
f69: undelivered
fl64: category.
f142: To listen to the header, press 3.

a687

242: Returned to the
f70: unopened
fl64: category.
f142: To listen to the header, press 3.

a688

f228: Record at the tone.

a689

229: You will have up to
NUMBER f230: seconds to record.

a690

f604: As you use AUDIX your name will be included in system announcements that you and other people will hear. Press 1, and at the tone, please speak your name. After speaking your name, press 1 again.

a691

f232: Recording stopped.

a692

232: Recording stopped.

f193: No name recorded.

f608: At the tone, please speak your name. After speaking your name, press 1.

a693

486: To reply to sender by voice mail, press 1.

f18: To forward with comment, press 2.

f8: To record a new message, press 4.

a694

f127: Returned to previous activity.

f96: For help, press star H.

a695

f19: To review from beginning, press star 1. If finished, press star pound.

a696

f147: Review completed.

a697

f147: Review completed.

f569: To modify, press one. If finished, press star pound.

a698

f147: Review completed.

f19: To review from beginning, press star 1. If finished, press star pound.

a699

f256: At beginning. To re-record, press 1. To playback, press 2-3.

a700

f619: To remove broadcast status, press 8.

a701

f620: To remove login announcement status, press 9.

a702

f635: To remove non-interruptible status, press 1.

a703

f796: To remove out-of-hours identification, press 4.

a704

f618: To remove priority status, press 2.

a705

f617: To remove private status, press 1.

a706

f244: Rewound to previous message.

f142: To listen to the header, press 3.

a707

f802: Cannot send a message to the broadcast mailbox.

a708

f245: Please return call.

a709

f245: Please return call.

f86: extension

BUTTONS

a710

785: Same greeting used for all calls.

a711

'785: Same greeting used for all calls.

f786: To identify calls as internal and external, press 1.

f787: To identify calls as busy and no answer, press 2.

a712

5 11: If you do not have a touch tone phone,

f236: Try again

f109: later.

f514: otherwise

f274: Please make entry soon, or be disconnected.

a713

248: scheduled

TIME DATE f249: To change delivery time, press star D; To approve, press pound.

a714

250: To change delivery time, press star D.

a715

22: To deliver now, press pound. To schedule delivery time enter hour, minutes, A or P, and pound sign.

a716

629: Please enter month, day, and pound sign.

a717

477: Press 1 to select
NAME

a718

905: <.5 second pause>
f478: 2 to select
NAME

a719

f905: <.5 second pause>
f479: 3 to select
NAME

a722

f23: To record messages, press 1. To get messages, press 2. To administer your greeting, press

a723

f50l: To record messages, press one. To get messages, press two. To administer attendant menu, press 3.

a724

482: Press pound to select
NAME f483: or enter more characters
f224: and pound sign.
f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a725

f482: Press pound to select
NAME f483: or enter more characters
f224: and pound sign.

a726

f482: Press pound to select
NAMEEXT f483: or enter more characters
f224: and pound sign.
f235: To restart at the activity menu, press star R. To transfer to another extension, press star T.
f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a727

f257: To use personal greeting, press Y. To use system greeting, press N.

a728

f775: To record messages, press one. To get messages, press two. To administer personal greetings, press 3.

a729

f674: Due to sending restrictions, you cannot send messages to
NAME

a730

388: To skip, press pound.

a731

626: To specify expiration date, press 2.

a732

f626: To specify expiration date, press 2.
f634: To approve login announcement options, press pound.

a733

f243: Rewound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

a734

f537: Enter the starting hour, minutes, A or P, and pound sign.

a735

f466: created

TIME DATE

a736

f259: scheduled for

TIME DATE

a737

f259: scheduled for

TIME DATE f689: Expiration time is

TIME DATE

a738

f259: scheduled for

TIME DATE f730: Message not delivered because the broadcast mailbox was not defined.

a739

f259: scheduled for

TIME DATE f699: Message not delivered because another login announcement is active.

a740

f259: scheduled for

TIME DATE f738: Message not delivered due to sending restrictions.

a741

259: scheduled for

TIME DATE f98: Message not delivered due to transmission problems.

a742

259: scheduled for

TIME DATE f387: Message not delivered because recipient not found.

a743

259: scheduled for

TIME DATE f584: Message not delivered because special feature denied on recipients machine.

a744

259: scheduled for

TIME DATE f264: Message not delivered because mailbox was full.

a745

262: received

TIME DATE

a746

f262: received

TIME DATE f689: Expiration time is

TIME DATE

a748

920: To not file a copy, press 4.

a749

472: To approve, press pound. To record from here, press 1.

f468: To continue playing, press 3.

a750

499: When finished recording, press # to approve, or 1 to edit your message.

a751

f475: To file a copy, press Y for yes or N for no.

a752

f977: Name not found.

a754

f270: subscriber id

f202: not valid.

a755

f700: To administer mailing lists, press 1. To administer personal directory, press 2.

f701: To change your password, press 4.

a756

f700: To administer mailing lists, press 1. To administer personal directory, press 2.

f701: To change your password, press 4.

f702: To record your name, press 5.

a757

f26: To record names, press 4. To play names, press 5. To record machine names, press 6. To play machine names, press 7.

a758

f539: The system allows outcalls from

TIME f524: to

TIME

a759

f18: To forward with comment, press 2.

f8: To record a new message, press 4.

f163: To call sender, press zero.

a760

f486: To reply to sender by voice mail, press 1.

f8: To record a new message, press 4.

f163: To call sender, press zero.

a761

f8: To record a new message, press 4.

f163: To call sender, press zero.

a762

f274: Please make entry soon, or be disconnected.

a763

f96: For help, press star H.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X. f274: Please make entry soon, or be disconnected.

a764

f533: Too many digits.

a765

f276: Time requested has passed, please re-schedule delivery.

f22: To deliver now, press pound. To schedule delivery time enter hour minutes, A or P, and pound sign.

a766

f275: Cannot get your messages now, due to multiple logins to your mailbox.

f95: Pleasedisconnect.

a767

f695: Private, priority message to
NAME

f695: Private, priority message to
NAME f2: and
NUMBER f217: others

f695: Private, priority message to
NAME f2: and
NUMBER f602: other

a768

f486: To reply to sender by voice mail, press 1.

f18: To forward with comment, press 2.

f8: To record a new message, press 4.

f163: To call sender, press zero.

a769

f128: To request another transfer, press star T.

a770

f118: Enter last name

f224: andpoundsign.

f175: Please note only AUDIX subscribers can be specified by name.

f117: To reach the covering extension, press star zero.

f25 1: To transfer using extension instead, press star A.

a771

f118: Enter last name

f224: and pound sign.

f175: Please note only AUDX subscribers can be specified by name.

f117: To reach the covering extension, press star zero.

f251: To transfer using extension instead, press star A.

f335: When finished, press pound.

a772

f512: Your call is being transferred to an operator.

a773

f118: Enter last name

f224: and pound sign.

f251: To transfer using extension instead, press star A.

a774

f118: Enter last name

f224: and pound sign.

f251: To transfer using extension instead, press star A.

f335: When finished, press pound.

a775

f515: To be transferred to an operator,

f380: Please wait.

a776

f933: Undeliverable Messages

a777

f934: Undelivered Messages

a778

f688: An undeliverable message was returned to your outgoing mailbox. To access your outgoing mailbox, press star R 4.

a779

f687: Undeliverable message notification received
TIME DATE

a780

f935: Unopened Messages

a781

f541: Up to

NUMBER f542: digits may be used.

a783

f766: To use this greeting for all calls, press 1.

f913: If finished, press pound.

a784

f783: To activate another greeting, enter greeting number. To deactivate a greeting, activate a different greeting in its place.

f784: To activate system greeting, enter zero.

f913: If finished, press pound.

a785

f767: To use this greeting for all calls, press 0. For busy calls, press 1. For no answer calls, press 2.

a786

f767: To use this greeting for all calls, press 0. For busy calls, press 1. For no answer calls, press 2.

f913: If finished, press pound.

a787

f764: To use this greeting for all calls, press 0. For internal calls, press 1. For external calls, press 2.

a788

f764: To use this greeting for all calls, press 0. For internal calls, press 1. For external calls, press 2.

f913: If finished, press pound.

a789

f782: To activate a greeting, enter greeting number. To deactivate a greeting, activate a different greeting in its place.

f784: To activate system greeting, enter zero. f913: If finished, press pound.

a790

f331: Personal greeting used.

a791

f797: To use same greeting for all calls, press 5.

f913: If finished, press pound.

a792

332: System greeting used.

a793

f332: System greeting used.

f823: ...for all calls

a794

f332: System greeting used.

f827: ...for busy

f2: and

f812: no answer

f814: calls.

a795

f332: System greeting used.

f827: ...for busy

f813: and out-of-hours

f814: calls.

a796

f332: System greeting used.

f827: ...for busy

f814: calls.

a797

f332: System greeting used.

f827: ...for busy

f812: no answer

f813: and out-of-hours

f814: calls.

a798

332: System greeting used.

f826: ...for external

f813: and out-of-hours

f814: calls.

a799

332: System greeting used.

f826: ...for external

f814: calls.

a800

332: System greeting used.

f825: ...for internal

f2: and

f810: external

f814: calls.

a801

332: System greeting used.

f825: ...for internal

f813: and out-of-hours

f814: calls.

a802

332: System greeting used.

f825: ...for internal

f814: calls.

a803

332: System greeting used.

f825: ...for internal

f810: external

f813: and out-of-hours

f814: calls.

a804

332: System greeting used.

f828: ...for no answer

f813: and out-of-hours

f814: calls.

a805

f332: System greeting used.

f828: ...for no answer

f814: calls.

a806

332: System greeting used.

f829: ...for out-of-hours

f814: calls.

a808

f281: Message from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873}

a809

f281: Message from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873} f689: Expiration time is

TIME DATE

a810

f281: Message from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873} EXTENSION

a811

f281: Message from

NAME f262: received
TIME DATE f905: <.5 second pause>
{a873} EXTENSION f689: Expiration time is
TIME DATE

a812
f87: This call is experiencing difficulties.
f1007: To playback, press 2-3.

a813
f380: Please wait.

a814
f283: Your mailbox is more than
NUMBER f284: percent full. Please delete unneeded messages or greetings.

a815
f287: Welcome to AUDIX.
f97: For help at anytime, press star H.

a816
f179: Warning, if you do not supply an addressee list, message will be deleted
immediately.

a817
293: Nothing to play back.

a819
TIME f253: Please enter month, day
f224: and pound sign.

a821
f86: extension
BUTTONS

a822
f20: Remote extension
BUTTONS

a823

f463: star

a824

f462: pound

a825

f546: pause

a826

f277: To exit directory, press pound.

a827

f482: Press pound to select

NAMEEXT f483: or enter more characters

a828

f764: To use this greeting for all calls, press 0. For internal calls, press 1. For external calls, press 2.

f773: To activate for out-of-hours calls, press 3.

f913: If finished, press pound.

a829

f767: To use this greeting for all calls, press 0. For busy calls, press 1. For no answer calls, press 2.

f773: To activate for out-of-hours calls, press 3. f913: If finished, press pound.

a830

f818: You have just recorded

f754: Greeting

NUMBER

a831

f658: Message waiting notification is currently not active.

f625: To activate message waiting notification, press 1.

f659: Message waiting notification will alert all local subscribers of this message. This option should be used sparingly, for it can impact system performance.

f626: To specify expiration date, press 2.

a832

f628: To deactivate message waiting notification, press 1.

f626: To specify expiration date, press 2.
f627: To approve broadcast options, press pound.

a833

f625: To activate message waiting notification, press 1.
f626: To specify expiration date, press 2.
f627: To approve broadcast options, press pound.

a834

f87: This call is experiencing difficulties.
f236: Try again
f109: later.
f95: Please disconnect.

a836

f110: list
BUTTONS f142: To listen to the header, press 3.
f143: To step back again, press 2.

a837

f846: You are selecting an option for Automatic Message Scan.
f843: To scan headers and messages, press 1. To scan headers only, press 2.
To scan messages only, press 3.

a838

f258: Message to
NAME
f258: Message to
NAME f2: and
NUMBER f217: others
f258: Message to
NAME f2: and
NUMBER f602: other

a840

f742: Private message sent to
NAME
f742: Private message sent to

NAME f2: and
NUMBER f217: others
f742: Private message sent to
NAMEf2: and
NUMBER f602: other

a841

696: Private message to
NAME
f696: Private message to
NAME f2: and
NUMBER f217: others
f696: Private message to
NAME f2: and
NUMBER f602: other

a842

647: the message will be private.

a843

390: oh

a844

391: one

a845

f392: two

a846

393: three

a847

394: four

a848

395: five

a849

f396: six

a850

f397: seven

a851

f398: eight

a852

f399: nine

a853

308: You are playing announcement fragments.

f279: Enter announcement set and pound sign.

a854

f307: You are playing announcements.

f279: Enter announcement set and pound sign.

a855

f900: Standard US English

a856

f901: Announcement set does not exist

a857

f902: Announcement set

a858

f909: Announcement

BUTTONS f906: <1.0 second pause>

a859

f910: You are playing an announcement which need additional input before it can be played.

f832: Please enter extension and pound sign.

f58: For name addressing, press star A.

a860

f910: You are playing an announcement which need additional input before it can be played.

f710: Enter next name and pound sign.

f148: For extension addressing, press star A.

a861

910: You are playing an announcement which need additional input before it can be played.

f329: You have not yet entered enough characters to identify a specific subscriber. To enter the letter Q, press 7; for Z press 9. f484: Enter more characters followed by the pound sign; if you just completed entering the last name, enter the first name.

f224: and pound sign.

a862

383: Please enter hour, then two digits for minutes, then A for am or P for pm, and pound sign.

a863

f910: You are playing an announcement which need additional input before it can be played.

f383: Please enter hour, then two digits for minutes, then A for am or P for pm, and pound sign.

a864

f914: not filed.

a865

f915: No options menu available.

a866

f226: private

a867

f969: You are choosing between announcement sets whose names match your entry. To indicate no announcement sets match, delete entry by pressing star D.

a868

f921: To make private, press 1. To send, press #.

a869

f922: To access the Delivery options Menu, press # after recording your message.

a870

f923: Press # to approve your message and access the Delivery options Menu

a872

f937: Sorry you are having difficulty. Please get help and try again later.

f94: Good-bye.

a874

f4: not private.

a875

f601: Priority

a876

f622: not Priority.

a877

f158: Transfer cannot be completed.

f736: Try again

f109: later.

a878

f263: You are recording a subscriber name.

f980: To record from here, press 1

f979: After recording, press 1 again

a879

f346: You are recording a machine name.

f13: To record, press 1. After recording, press 1 again.

a880

263: You are recording a subscriber name.

f980: To record from here, press 1

f979: After recording, press 1 again

f304: To playback message, press 2-3. To delete your message, press star D.
To approve your message, press pound.

f339: To replay the last few seconds, press 5. To advance a few seconds, press
6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

a881

346: You are recording a machine name.

f13: To record, press 1. After recording, press 1 again.

f304: To playback message, press 2-3. To delete your message, press star D.
To approve your

message, press pound.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

a882

f73: You have

NUMBER f854: seconds to finish recording.

a883

f232: Recording stopped.

f570: Recorded name too long

f608: At the tone, please speak your name. After speaking your name, press 1.

a886

f978: unknown

f861: AMIS

f510: Number

a889

f25: List id not followed by pound.

f498: Please enter a new list id

f224: andpoundsign.

a890

f37: Extension entered not followed by pound

f364: enter owner's extension

f224: and pound sign.

f471: If it's your list, press pound.

a891

f38: Name entered not followed by pound

f470: Enter owner's last name

f224: and pound sign.

f471: If it's your list, press pound.

a892

f856: This is a recorded message from
NAME f21: To listen, press 0.
f24: To delete, press star D.

a893

f856: This is a recorded message from
NAME f21: To listen, press 0.
f24: To delete, press star D.
f80: To have system wait, press star W. If finished, please hang up or to
disconnect AUDIX, press star star X.

a894

f562: Enter the
f855: remote AMIS mailbox id
f224: and pound sign.

a895

f867: You are entering the
f855: remote AMIS mailbox id
f868: Mailbox id must be less than or equal to 16 digits.
f833: To delete current entry, press star D.

a896

f259: scheduled for
TIME DATE f862: It could not be delivered because the recipient appears to be
a wrong number

a897

f259: scheduled for
TIME DATE f863: It could not be delivered after multiple attempts to deliver the
message.

a898

f864: Automated call, please press 1 to disconnect.

a899

f865: Your number was dialed by mistake. We are sorry for this inconvenience.
To prevent this from recurring, this call has been reported as a misdialled call.

a907

f858: To replay, press 0.

f24: To delete, press star D.

a908

f74: deleted.

f95: Please disconnect.

a909

859: Mailbox id not followed by pound.

a910

860: Mailbox id not valid.

a911

f866: AMIS casual subscribers cannot be added to your list.

a912

f561: You are addressing your message.

f285: To add a member, enter extension

f224: and pound sign.

f869: If the extension entered belongs to a casual AMI5 subscriber, you will be prompted for a mailbox id.

f868: Mailbox id must be less than or equal to 16 digits.

f328: To delete the previous entry, press star D. To add a mailing list you have already created, or a public list owned by others, press star L. To review or modify the list you are creating, press star 1. To approve the list you are creating and move on to the next step, press pound.

f58: For name addressing, press star A.

a913

NAME f75: To skip, press pound. To delete, press star D.

f333: To add entries to the list or to change status of list, press 1.

a914

f9: star R not available.

a915

f861: AMIS

BUTTONS f86: extension

BUTTONS

a917

f711: Alias

BUTTONS f712: defined for

NAMEEXT

a919

f617: To remove private status, press 1.

f971: To send, press #.

a920

f56: Thank you for leaving your message.

f46: To access your mailbox, press star R.

f291: To transfer to another extension, press star T.

f973: If you are finished, please hang up.

a921

f56: Thank you for leaving your message.

f46: To access your mailbox, press star R.

f291: To transfer to another extension, press star T.

f972: To reach the covering extension, press zero.

f973: If you are finished, please hang up.

a922

f974: Not broadcast.

a923

f975: Not login announcement.

a924

f375: You are getting your incoming messages. To listen to the message, press 0. To respond to the message, press 1.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f377: To delete message, press star D.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

a925

f848: You are automatically scanning your incoming messages. To listen to the message, press zero. To respond to the message, press one.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To steP back again, press 2.

f578: To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a926

f375: You are getting your incoming messages. To listen to the message, press 0. To respond to the message, press 1.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a927

f847: You are automatically scanning your incoming messages. To listen to the message, press zero. To respond to or forward the message, press one.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a928

f378: You are checking the status of your outgoing messages.

f381: To listen to the message, press 0. To re-record message before delivery, press 1.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a929

f378: You are checking the status of your outgoing messages.

f474: To listen, press 0. To change or send again, press 1.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a930

f378: You are checking the status of your outgoing messages.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f379: To delete status information, press star D.

a931

674: Due to sending restrictions, you cannot send messages to

f861: AMIS

BUTTONS

a932

493: You are requesting a transfer.

f562: Enter the

NUMBER f563: digit extension

f119: you wish to call

f224: and pound sign.

f115: To transfer using names instead, press star A.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a933

f493: You are requesting a transfer.

f562: Enter the NUMBER f563: digit extension

f119: you wish to call f224: and poundsign.

f115: To transfer using names instead, press star A.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a934

288: You are in the names directory. To find a subscriber's extension, enter the last name followed by the pound sign. To enter the letter Q, press 7; for Z press 9. To look up by extension instead press star A.

f277: To exit directory, press pound.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a935

322: You are in the numbers directory. To find a subscriber's name enter the extension followed by the pound sign. To look up by name instead, press star A.

f277: To exit directory, press pound.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a936

493: You are requesting a transfer.

f987: Enter last name of the person

f119: you wish to call

f224: and pound sign.

f290: If you wish to specify a non-AUDIX subscriber, first change to extension addressing by pressing star A.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a937

f493: You are requesting a transfer.

f987: Enter last name of the person

f119: you wish to call

f224: and pound sign.

f290: If you wish to specify a non-AUDIX subscriber, first change to extension addressing by pressing star A.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a938

f291: To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a939

f357: You are choosing between subscribers whose names match your entry. To indicate no subscribers match, delete entry by pressing star D. To change to extension addressing and delete your entry, press star A.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDX, press star star X.

a940

f482: Press pound to select

NAME f483: or enter more characters

f224: and pound sign.

f291: To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a941

f482: Press pound to select

NAMEXT f483: or enter more characters

f224: and pound sign.

f291: To transfer to another extension, press star T.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a942

291: To transfer to another extension, press star T.

f117: To reach the covering extension, press star zero.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDX, press star star X.

a943

518: You are creating a voice message which will be delivered to the person specified in your message as soon as possible. Please be aware that in order to forward this message to the recipient, someone will listen to the name and number portion.

f13: To record, press 1. After recording, press 1 again.

f304: To playback message, press 2-3. To delete your message, press star D. To approve your message, press pound.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a944

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f516: To leave a message that will be delivered as soon as possible, f380: Pleasewait.

a945

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f274: Please make entry soon, or be disconnected.

a946

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f515: To be transferred to an operator,

f380: Pleasewait.

a947

f117: To reach the covering extension, press star zero.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a948

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a949

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a95l

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f117: To reach the covering extension, press star zero.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f515: To be transferred to an operator,

f380: Pleasewait.

a952

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f117: To reach the covering extension, press star zero.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f516: To leave a message that will be delivered as soon as possible,

f380: Pleasewait.

a953

f517: You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f117: To reach the covering extension, press star zero.

f291: To transfer to another extension, press star T.

f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

f274: Please make entry soon, or be disconnected.

a954

f56: Thank you for leaving your message.

f95: Pleasedisconnect.

a955

f56: Thank you for leaving your message.

f291: To transfer to another extension, press star T.

f973: If you are finished, please hang up.

a956

f56: Thank you for leaving your message.
f291: To transfer to another extension, press star T.
f972: To reach the covering extension, press zero.
f973: If you are finished, please hang up.

a957

291: To transfer to another extension, press star T.

a958

f117: To reach the covering extension, press star zero.
f291: To transfer to another extension, press star T.

a959

f95: Please disconnect.

a960

f282: To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

a961

f518: You are creating a voice message which will be delivered to the person specified in your message as soon as possible. Please be aware that in order to forward this message to the recipient, someone will listen to the name and number portion.
f13: To record, press 1. After recording, press 1 again.
f304: To playback message, press 2-3. To delete your message, press star D. To approve your message, press pound.
f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.
f117: To reach the covering extension, press star zero.
f291: To transfer to another extension, press star T.
f80: To have system wait, press star W. If finished, please hang up or to disconnect AUDIX, press star star X.

a962

f853: Messages skipped, retained as new.

a963

f477: Press 1 to select

a964

f905: <.5 second pause>

f478: 2 to select

a965

f905: <.5 second pause>

f479: 3 to select

a968

f96: For help, press star H.

a974

259: scheduled for

TIME DATE f981: Message not delivered because it was longer than the 8 minute AMI5 message limit.

a1105

f43: Your call is being answered by AUDIX.

a1109

f1263: Please enter more digits, or pound sign.

a1112

f105: To restart at the activity menu, press star R.

f1219: To review or change your reach options, press 7.

f105: To restart at the activity menu, press star R.

f1305: Please enter an outcalling option. To hear a list of options, press 0.

f105: To restart at the activity menu, press star R.

f1305: Please enter an outcalling option. To hear a list of options, press 0.

f1219: To review or change your reach options, press 7.

f105: To restart at the activity menu, press star R.

a1121

f1404: To administer this greeting, press 1.

a1122

f1408: To administer this greeting, press 2.

f105: To restart at the activity menu, press star R.

a1123

- f1405: To listen to your secondary greeting, press 0.
- f1409: To record your secondary greeting, press 1.
- f1402: To administer your primary greeting, press pound.
- f105: To restart at the activity menu, press star R.
- f1406: To listen to your primary .greeting, press 0.
- f1407: To record your primary greeting, press 1.
- f1410: To administer your secondary greeting, press pound.
- f105: To restart at the activity menu, press star R.

a1124

- f1405: To listen to your secondary greeting, press 0.
- f757: To re-record, press 1.
- f1411: To delete your primary greeting, and use the system greeting press star D.
- f1410: To administer your secondary greeting, press pound.
- f105: To restart at the activity menu, press star R.
- f1405: To listen to your secondary greeting, press 0.
- f757: To re-record, press 1.
- f1412: To delete your secondary greeting, and use the system greeting, press star D .
- f1402: To administer your primary greeting, press pound.
- f105: To restart at the activity menu, press star R.
- f1406: To listen to your primary greeting, press 0.
- f757: To re-record, press 1.
- f1411: To delete your primary greeting, and use the system greeting press star D.
- f1410: To administer your secondary greeting, press pound.
- f105: To restart at the activity menu, press star R.
- f1406: To listen to your primary greeting, press 0.
- f757: To re-record, press 1.
- f1412: To delete your secondary greeting, and use the system greeting, press star D .

f1402: To administer your primary greeting, press pound.

f105: To restart at the activity menu, press star R.

a1125

f1413: Your new primary greeting is now active.

f1414: Your new secondary greeting is now active.

a1126

f1415: Recording deleted.

f1416: Your primary greeting has not changed.

f1415: Recording deleted.

f1417: Your secondary greeting has not changed.

a1127

f1400: For English press star one.

a1128

f1401: Your primary greeting is in

a1130

f1403: Your secondary greeting is in

a1132

f1420: Callers will hear the greeting and receive instructions in the primary language unless they press star-1, in which case they will hear the greeting and receive instructions in the secondary language.

a1133

f1418: You are administering your primary greeting.

f1419: You are administering your secondary greeting.

a1134

f1430: The following message was restored.

a1135

f1431: No message to restore.

a1136

f1432: To undelete last deleted message, press star star U.

a1137

f913: If finished, press pound.

a1138

f1433: The return address for this message is not a valid extension.

a1139

f1434: To return to getting messages, press pound. f8: To record a new message, press 4.

a1140

f1434: To return to getting messages, press pound.

f291: To transfer to another extension, press star T.

f96: For help, press star H.

a1141

f1434: To return to getting messages, press pound.

f18: To forward with comment, press 2.

f8: To record a new message, press 4.

a1143

f1436: English

a1144

f1437: <CHIME5 - LIKE DOOR BELL>

f1438: Call for NAME f0: <NULL fragment, 0.0 second pause>

f1437: <CHIME5 - LIKE DOOR BELL>

f1438: Call for

NAME f0: <FULL fragment, 0.0 second pause>

f908: <5.0secondpause>

a1145

f1439: <BEEP - LIKE CONF BRIDGE TONE>

a1146

f1440: <BEEP - LIKE RECORD AT TONE TONE>

a1147

f1441: <BEEP BEEP BEEP TONE - FOR OUT OF SPACE TONE>

a1148

f1442: <BEEP - LIKE EOM TONE BUT SOFTER>

a1149

f613: To make priority, press2.

a1150

f1445: Private, priority call from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873}

f1445: Private, priority call from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873} f86: extension

BUTTONS

f1446: Private call from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873}

f1446: Private call from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873} f86: extension

BUTTONS

f1447: Private call from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873}

f1447: Private call from

NAME f262: received

TIME DATE f905: <.5 second pause>

{ a873 } f86: extension

BUTTONS

f47: Call from

NAME f262: received

TIME DATE f905: <.5 second pause>

{a873}

f47: Call from

NAMEf262: received

TIME DATE f905: <.5 second pause>

{a873} f86: extension

BUTTONS

a1151

f1448: Private, priority call received

TIME DATE f905: <.5 second pause>

{a873}

f1448: Private, priority call received

TIME DATE f905: <.5 second pause>

{a873} f86: extension

BUTTONS

f1449: Private call received

TIME DATE f905: <.5 second pause>

{a873}

f1449: Private call received

TIME DATE f905: <.5 second pause>

{a873} f86: extension

BUTTONS

f1450: Priority call received

TIME DATE f905: <.5 second pause>

{a873}

f1450: Priority call received

TIME DATE f905: <.5 second pause>

{a873 } f86: extension

BUTTONS

f1451: Call received

TIME DATE f905: <.5 second pause>

{a873}

f1451: Call received

TIME DATE f905: <.5 second pause>

{a873} f86: extension

BUTTONS

a1152

f329: You have not yet entered enough characters to identify a specific subscriber. To enter the letter Q, press 7; for Z press 9.

f484: Enter more characters followed by the pound sign; if you just completed entering the last name, enter the first name.

f224: and pound sign.

f24: To delete, press star D.

a1153

f1453: Your password will expire in

NUMBER f1454: days.

f1455: Your password will expire within one day.

a1154

f1456: Your password has expired.

a1155

f1457: old and new passwords cannot be the same.

a1156

f1458: Password cannot be changed within

NUMBER f1459: days of last change.

f1458: Password cannot be changed within

NUMBER f1460: day of last change.

a1157

f1461: You are getting your incoming messages.

f1462: To listen to the message, press 0.

f1466: To respond to or forward the message, press one.

f376: To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

f1461: You are getting your incoming messages.

f1462: To listen to the message, press 0.

f1466: To respond to or forward the message, press one.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

f1461: You are getting your incoming messages.

f1462: To listen to the message, press 0.

f252: To respond to this message, press 1.

f376: To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

f1461: You are getting your incoming messages.

f1462: To listen to the message, press 0.

f252: To respond to this message, press 1.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a1158

f1461: You are getting your incoming messages. f1462: To listen to the message, press 0.

f1463: To reply to sender by voice mail, press 1, 7.

f1464: To forward with comment, press 1, 2.

f1465: To record a new message, press 1, 4.

f376: To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

f1461: You are getting your incoming messages.

f1462: To listen to the message, press 0.

f1463: To reply to sender by voice mail, press 1, 7.

f1464: To forward with comment, press 1, 2.

f1465: To record a new message, press 1, 4.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

f1461: You are getting your incoming messages.
f1462: To listen to the message, press 0.
f1463: To reply to sender by voice mail, press 1, 7.
f1465: To record a new message, press 1, 4.
f376: To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.
f577: To hold the message in its current category, press star star H
f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.
f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.
f377: To delete message, press star D.
f1461: You are getting your incoming messages.
f1462: To listen to the message, press 0.
f1463: To reply to sender by voice mail, press 1, 7.
f1465: To record a new message, press 1,4.
f388: To skip, press pound.
f142: To listen to the header, press 3.
f143: To step back again, press 2.
f578: To skip to the next category, press star pound.
f577: To hold the message in its current category, press star star H
f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.
f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.
f377: To delete message, press star D.
f1461: You are getting your incoming Messages.
f1462: To listen to the message, press 0.
f1464: To forward with comment, press 1, 2. f1465: To record a new message, press 1,4.
f376: To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.
f577: To hold the message in its current category, press star star H
f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.
f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.
f1461: You are getting your incoming messages.
f1462: To listen to the message, press 0.
f1464: To forward with comment, press 1, 2.
f1465: To record a new message, press 1,4.
f388: To skip, press pound.
f142: To listen to the header, press 3.
f143: To step back again, press 2.
f578: To skip to the next category, press star pound.
f577: To hold the message in its current category, press star star H
f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.
f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.
f377: To delete message, press star D.
f1461: You are getting your incoming messages.
f1462: To listen to the message, press 0.
f1465: To record a new message, press 1,4.
f376: To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.
f577: To hold the message in its current category, press star star H
f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.
f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.
f377: To delete message, press star D.
f1461: You are getting your incoming messages.
f1462: To listen to the message, press 0.
f1465: To record a new message, press 1,4.
f388: To skip, press pound.
f142: To listen to the header, press 3.
f143: To step back again, press 2.
f578: To skip to the next category, press star pound.
f577: To hold the message in its current category, press star star H
f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a1159

f847: You are automatically scanning your incoming messages. To listen to the message, press zero. To respond to or forward the message, press one.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

f847: You are automatically scanning your incoming messages. To listen to the message, press zero. To respond to or forward the message, press one.

f849: To skip to the next message, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

f848: You are automatically scanning your incoming messages. To listen to the message, press zero. To respond to the message, press one.

f388: To skip, press pound.

f142: To listen to the header, press 3.

f143: To step back again, press 2.

f578: To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

f848: You are automatically scanning your incoming messages. To listen to the message, press zero. To respond to the message, press one.

f849: To skip to the next message, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f577: To hold the message in its current category, press star star H

f339: To replay the last few seconds, press 5. To advance a few seconds, press 6.

f292: Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f377: To delete message, press star D.

a1160

f1434: To return to getting messages, press pound.

f1469: To reply to sender by voice mail, press 7.

f18: To forward with comment, press 2.

f8: To record a new message, press 4.

f1434: To return to getting messages, press pound.

f1469: To reply to sender by voice mail, press 7.

f18: To forward with comment, press 2.

f8: To record a new message, press 4.

f163: To call sender, press zero.

f1434: To return to getting messages, press pound.

f1469: To reply to sender by voice mail, press 7.

f8: To record a new message, press 4.

f1434: To return to getting messages, press pound.

f1469: To reply to sender by voice mail, press 7.

f8: To record a new message, press 4.

f163: To call sender, press zero.

f1434: To return to getting messages, press pound.

f18: To forward with comment, press 2. f8: To record a new message, press 4.

f1434: To return to getting messages, press pound.

f18: To forward with comment, press 2.

f8: To record a new message, press 4.

f163: To call sender, press zero.

f1434: To return to getting messages, press pound.

f486: To reply to sender by voice mail, press 1.
f18: To forward with comment, press 2.
f8: To record a new message, press 4.
f1434: To return to getting messages, press pound.
f486: To reply to sender by voice mail, press 1.
f18: To forward with comment, press 2.
f8: To record a new message, press 4.
f163: To call sender, press zero.
f1434: To return to getting messages, press pound.
f486: To reply to sender by voice mail, press 1.
f8: To record a new message, press 4.
f1434: To return to getting messages, press pound.
f486: To reply to sender by voice mail, press 1.
f8: To record a new message, press 4.
f163: To call sender, press zero.
f1434: To return to getting messages, press pound.
f8: To record a new message, press 4.
f1434: To return to getting messages, press pound.
f8: To record a new message, press 4.
f163: To call sender, press zero.
f1469: To reply to sender by voice mail, press 7.
f18: To forward with comment, press 2.
f8: To record a new message, press 4.
f1469: To reply to sender by voice mail, press 7.
f18: To forward with comment, press 2.
f8: To record a new message, press 4.
f163: To call sender, press zero.
f1469: To reply to sender by voice mail, press 7.
f8: To record a new message, press 4.
f1469: To reply to sender by voice mail, press 7.
f8: To record a new message, press 4.
f163: To call sender, press zero.
f18: To forward with comment, press 2.

f8: To record a new message, press 4.
f18: To forward with comment, press 2.
f8: To record a new message, press 4.
f163: To call sender, press zero.
f486: To reply to sender by voice mail, press 1.
f18: To forward with comment, press 2.
f8: To record a new message, press 4.
f486: To reply to sender by voice mail, press 1.
f18: To forward with comment, press 2.
f8: To record a new message, press 4.
f113: To call sender, press zero.
f486: To reply to sender by voice mail, press 1.
f8: To record a new message, press 4.
f486: To reply to sender by voice mail, press 1.
f8: To record a new message, press 4.
f163: To call sender, press zero.
f8: To record a new message, press 4.
f8: To record a new message, press 4.
f163: To call sender, press zero.

a1161

f323: You are responding to a piece of incoming mail.
f1469: To reply to sender by voice mail, press 7.
f41: To forward message with comment at beginning, press 2.
f126: To forward message with comment at end, press 3.
f8: To record a new message, press 4.

f1434: To return to getting messages, press pound.
f323: You are responding to a piece of incoming mail.
f1469: To reply to sender by voice mail, press 7.
f41: To forward message with comment at beginning, press 2.
f126: To forward message with comment at end, press 3.
f8: To record a new message, press 4. f163: To call sender, press zero.

f1434: To return to getting messages, press pound.

f323: You are responding to a piece of incoming mail.
f1469: To reply to sender by voice mail, press 7.
f8: To record a new message, press 4.
f1434: To return to getting messages, press pound.
f323: You are responding to a piece of incoming mail.
f1469: To reply to sender by voice mail, press 7.
f8: To record a new message, press 4.
f163: To call sender, press zero.
f1434: To return to getting messages, press pound.
f323: You are responding to a piece of incoming mail.
f41: To forward message with comment at beginning, press 2.
f126: To forward message with comment at end, press 3.
f8: To record a new message, press 4.
f1434: To return to getting messages, press pound.
f323: You are responding to a piece of incoming mail.
f41: To forward message with comment at beginning, press 2.
f126: To forward message with comment at end, press 3.
f8: To record a new message, press 4.
f163: To call sender, press zero.
f1434: To return to getting messages, press pound.
f323: You are responding to a piece of incoming mail.
f486: To reply to sender by voice mail, press 1.
f41: To forward message with comment at beginning, press 2.
f126: To forward message with comment at end, press 3.
f8: To record a new message, press 4.
f1434: To return to getting messages, press pound.
f323: You are responding to a piece of incoming mail.
f486: To reply to sender by voice mail, press 1.
f41: To forward message with comment at beginning, press 2.
f126: To forward message with comment at end, press 3.
f8: To record a new message, press 4.
f163: To call sender, press zero.
f1434: To return to getting messages, press pound.

f323: You are responding to a piece of incoming mail.

f486: To reply to sender by voice mail, press 1.

f8: To record a new message, press 4.

f1434: To return to getting messages, press pound.

f323: You are responding to a piece of incoming mail.

f486: To reply to sender by voice mail, press 1.

f8: To record a new message, press 4.

f163: To call sender, press zero.

f1434: To return to getting messages, press pound.

f323: You are responding to a piece of incoming mail.

f8: To record a new message, press 4.

f1434: To return to getting messages, press pound.

f323: You are responding to a piece of incoming mail.

f8: To record a new message, press 4.

f163: To call sender, press zero.

f1434: To return to getting messages, press pound.

a1162

f1467: The return address for this message is not a mailbox on this system.

a1163

f1468: The return address for this message is not a valid extension.

a1164

f1470: No voice portion of message to playback.

a1165

f618: To remove priority status, press 2.

a1166

f646: A priority message will be delivered before other messages and will be flagged for special attention in the recipient's mailbox.

585-300-535, Issue 1

US English Ann/Frag for Int AUDIX

f0 a1090 a1095 a1129 a1131 a1142 a1144

<NULL fragment, 0.0 second pause>

f1 a649

Someone is changing your greeting, please try again later.

f2 a210 a235 a236 a273 a342 a343 a344 a345 a350 a352 a366 a372 a381 a387 a398 a404
a412 a418 a493 a540 a541 a542 a543 a544 a545 a546 a553 a554 a673 a675 a767 a794
a800 a838 a840 a841

and

f3 a608

No new remote subscribers can be addressed.

f4 a874

not private.

f5 a26 a283

To record personal greeting, press 1. To listen to personal greeting, press 0. To select which greeting to use, press star pound.

f6 a100 a509 a98

Enter machine voice ID.

f8 a1139 a1141 a1160 a1161 a123 a126 a128 a168 a169 a170 a202 a204 a205 a62 a693
a759 a760 a761 a768 a85

To record a new message, press 4.

f9 a914

star R not available.

f10 a442

That is not a valid machine voice ID.

f11 a98

You are recording machine names.

f12 a310 a973

To re-record, press 1. After recording, press 1 again. To delete, press star D. To playback, press 2-3. To approve as is, press pound.

f13 a101 a267 a332 a49 a581 a589 a68 a879 a881 a943 a961

To record, press 1. After recording, press 1 again.

f14 a39 a502

To make private, press 1. To make public, press 2.

f15 a455 a456

and is

f16 a238

Enter announcement id

f17 a184 a190

including

f18 a1141 a1160 a202 a693 a759 a768

To forward with comment, press 2.

f19 a695 a698

To review from beginning, press star 1. If finished, press star pound.

f20 a822

Remote extension

f21 a276 a527 a530 a892 a893

To listen, press 0.

f22 a318 a609 a715 a765

To deliver now, press pound. To schedule delivery time enter hour, minutes, A or P, and pound sign.

f23 a113 a722

To record messages, press 1. To get messages, press 2. To administer your greeting, press 3.

f24 a1152 a192 a206 a276 a315 a326 a34 a429 a430 a501 a507 a508 a525 a527 a74 a892 a893 a907

To delete, press star D.

f25 a889

List id not followed by pound.

f26 a757

To record names, press 4. To play names, press 5. To record machine names, press 6. To play machine names, press 7.

f27 a249

To attach original, press Y for yes or N for no.

f29 a255

Returned to checking status of outgoing messages.

f30 a508

To change, press 1.

f31 a261

Date not understood.

f32 a262

You must enter your extension to logon.

f34 a538 a540 a548

Electronic Text

f35 a264 a265

Login incorrect.

f36 a50

To record a personal greeting, press 1.

f37 a654 a890

Extension entered not followed by pound

f38 a655 a891

Name entered not followed by pound

f39 a26

To delete, press star D. To stop playback, press 3.

f40 a266

Time not understood.

f41 a1161 a123 a170 a62 a85

To forward message with comment at beginning, press 2.

f42 a284

The return address for this message is not a mailbox on this system.

f43 a1105 a282 a288 a289 a290 a291 a292 a293

Your call is being answered by AUDIX.

f44 a289 a292

is not available. To leave a message, wait for the tone.

f45 a290 a291

is busy. To leave a message, wait for the tone.

f46 a27 a285 a4 a68 a69 a70 a71 a8 a920 a921

To access your mailbox, press star R.

f47 a1150 a286 a287 a658 a659

Call from

f48 a113 a114 a115 a119 a120 a121 a125 a127 a129 a159 a76 a77

To check your outgoing messages, press 4. To administer mailing list, personal directory, password, or account name, press 5. To change outcalling information, press 6. To scan incoming messages automatically, press 7. To re-logon, press star star R.

f49 a603

No operator defined.

f50 *a295 a296 a660 a661*

Call

f51 *a280*

Entries deleted, please re-enter delivery time.

f53 *a561*

Message deleted, no delivery will occur.

f56 *a285 a920 a921 a954 a955 a956*

Thank you for leaving your message.

f57 *a680*

accessed

f58 *a131 a19 a328 a6 a859 a912*

For name addressing, press star A.

f59 *a681*

delivered

f60 *a308*

Changed.

f61 *a457 a458*

To modify status, press Y for yes or N for no.

f62 *a566 a569*

Please delete unneeded messages.

f63 *a183 a184 a185 a190 a235 a236 a683*

new

f64 *a684*

old

f65 *a451 a452 a469*

contains

f66 *a535 a626*

If correct, press pound. If not, press star D and re-enter time.

f67 *a559*

To create another list,

f68 *a685*

undeliverable

f69 *a686*

undelivered

f70 *a687*

unopened

f71 *a289 a290 a291 a292*

To leave a message, wait for the tone.

f73 *a882*

You have

f74 *a181 a187 a225 a281 a379 a380 a381 a382 a383 a384 a385 a386 a387 a388 a389
a390 a391 a392 a393 a453 a459 a473 a576 a908*

deleted.

f75 *a179 a913*

To skip, press pound. To delete, press star D.

f77 *a316 a317 a318*

Deleted.

f80 *a102 a103 a104 a14 a147 a15 a152 a16 a17 a18 a61 a68 a69 a70 a71 a763 a893
a934 a935 a939 a944 a945 a946 a947 a948 a949 a951 a952 a953 a961*

**To have system wait, press star W. If finished, please hang up or to disconnect
AUDIX, press star star X.**

f81 a199 a443 a514

digits.

f82 a504

Please leave a message for

f83 a1104 a320 a451

entries.

f84 a1080 a1104 a320 a451

entry.

f85 a332

Erased.

f86 a1150 a1151 a287 a295 a334 a335 a336 a337 a338 a506 a659 a660 a709 a821
a915

extension

f87 a812 a834

This call is experiencing difficulties.

f88 a431

Cannot use the guest password

f89 a348

First message.

f90 a354

Enter fragment id

f91 a528

At end.

f92 a573

Nothing to advance.

f93 a362

You have no personal greeting, system greeting used.

f94 a197 a872

Good-bye.

f95 a1117 a191 a253 a258 a336 a565 a615 a766 a834 a908 a954 a959

Please disconnect.

f96 a1073 a1075 a1076 a1080 a1092 a1140 a496 a694 a763 a968

For help, press star H.

f97 a815

For help at anytime, press star H.

f98 a639 a640 a741

Message not delivered due to transmission problems.

f99 a437 a969 a973

Invalid announcement.

f100 a263 a496

Invalid Entry.

f101 a441

Invalid fragment.

f102 a445

That is not a valid extension.

f104 a447

Message delivered, cannot listen to a delivered message.

f105 a105 a106 a1112 a1122 a1123 a1124 a116 a117 a13 a147 a152 a171 a172
a200 a246 a559 a630 a631 a632 a633 a96 a97 a99

To restart at the activity menu, press star R.

f108 a34 a49

You are recording a message.

f109 a191 a712 a834 a877

later.

f110 a449 a450 a451 a452 a453 a454 a455 a456 a457 a458 a459 a460 a462 a463
a465 a466 a467 a468 a469 a470 a471 a472 a473 a474 a477 a662 a674 a836

list

f111 a29 a31 a478 a511 a559 a63 a64

Please enter list id

f112 a1093 a291 a292

Otherwise, for assistance, press zero now.

f113 a484

You already have a list

f114 a484

To replace list, re-enter id and pound sign. To create a new list, enter new list

f115 a116 a117 a193 a194 a195 a196 a932 a933

To transfer using names instead, press star A.

f116 a481 a482

List is full.

f117 a108 a114 a116 a121 a127 a129 a15 a171 a193 a194 a4 a68 a69 a70 a71
a770 a771 a79 a80 a9 a932 a936 a942 a947 a951 a952 a953 a958 a961

To reach the covering extension, press star zero.

f118 a132 a214 a216 a222 a223 a349 a655 a770 a771 a773 a774

Enter last name

f119 a116 a117 a171 a172 a932 a933 a936 a937

you wish to call

f120 a460 a462 a463 a470 a471 a472

too large to include.

f121 a219 a223

When finished, approve list by pressing pound.

f122 a487

List space nearly full. You may enter

f123 a487

new members.

f124 a463 a472 a476 a480 a483

No more list space.

f125 a511

Must be six or fewer numerals.

f126 a1161 a123 a170 a62 a85

To forward message with comment at end, press 3.

f127 a694

Returned to previous activity.

f128 a446 a769

To request another transfer, press star T.

f129 a446

or leave a message for

f130 a459

because there were no entries.

f131 a220

To send to others not on your list,

f132 a460 a470

You can store your list as is by pressing star pound or add up to

f133 a480 a481

To continue reviewing, press 3. To delete an entry, press star D. If finished reviewing, press star pound.

f134 *a462 a471*

You can store your list or delete members, but you cannot add members.

f136 *a435*

Line busy.

f138 *a100*

You are listening to machine names.

f139 *a460 a470*

additional members,

f140 *a322*

Entry already deleted. To delete more entries, press star 1.

f141 *a479*

No more lists.

f142 *a1157 a1158 a1159 a348 a450 a454 a607 a680 a681 a682 a683 a684 a685 a686 a687 a706 a733 a836 a924 a925 a926 a927 a928 a929 a930*

To listen to the header, press 3.

f143 *a1158 a1159 a175 a607 a733 a836 a924 a925 a926 a927 a928 a929 a930*

To step back again, press 2.

f145 *a324*

List has no entries.

f146 *a175 a176*

To continue, press pound.

f147 *a696 a697 a698*

Review completed.

f148 *a132 a20 a327 a67 a7 a860*

For extension addressing, press star A.

f149 *a436*

All circuits busy.

f150 *a452 a455 a456 a469*

members.

f152 *a505 a506*

Leave Word Calling from

f153 *a510*

Maximum length recorded. To re-record, press 2-l. To approve as is, press pound.

f154 *a485*

Cannot create new list, you have maximum lists allowed. To select lists to be deleted, press 5-1~2 and follow instructions.

f155 *a486*

Cannot create new list, total number of members in all your lists equals maximum allowed.

f156 *a294 a513*

Maximum length recorded.

f157 *a513*

To approve as is, press pound.

f158 *a191 a877*

Transfer cannot be completed.

f159 *a452 a455 a456*

member.

f160 *a183 a184 a185 a190 a235 a236*

message

f161 *a904*

midnight.

f163 *a1160 a1161 a168 a169 a170 a759 a760 a761 a768 a85*

To call sender, press zero.

f164 *a680 a681 a682 a683 a684 a685 a686 a687*

category.

f1 65 *a527 a530*

Returned to getting messages.

f166 *a531*

At end. To playback, press 2-3.

f167 *a34 a533 a560*

To approve, press pound. To record from here, press 1. To playback, press 2-3.

f168 *a183 a184 a185 a190 a235 a236 a538 a539 a540 a541 a542 a543 a544 a545 a546 a548 a549 a550 a551 a552 a553 a554 a555 a627*

messages.

f169 *a577*

Admin version not specified, please do so using administrator's terminal.

f170 *a534 a535*

Delivery scheduled

f172 *a539 a542 a544 a546 a548 a550 a552 a554 a627*

You have new

f173 *a199 a317 a431 a443 a444 a514 a586 a612*

Please enter new password

f175 *a349 a770 a771*

Please note only AUDIX subscribers can be specified by name.

f177 *a574*

Cannot listen to a delivered message.

f178 a575 a576

No addressees identified.

f179 a816

Warning, if you do not supply an addressee list, message will be deleted immediately.

f180 a562 a581 a611

Nothing to approve.

f182 a585 a586

Nothing to delete.

f184 a589

Nothing to erase.

f185 a229 a467 a468

not found.

f186 a584

To record messages, press 1. To get messages, press 2. To check your outgoing messages, press 4.

f187 a654 a655

and not added to the list.

f188 a592

Passwords do not match. Please re-enter new password

f189 a593

You have no mailbox.

f190 a594

Message delivered, you cannot change it now.

f191 a595

No more messages.

f192 a597

No messages.

f193 a598 a599 a692

No name recorded.

f194 a600

No new messages.

f196 a604

You have no personal greeting.

f197 a178 a226 a348 a454

Cannot step back.

f198 a537

Partial name deleted.

f199 a605 a606 a607

Nothing to rewind.

f200 a609

No time entered, nothing to delete.

f201 a904

noon.

f202 a338 a466 a614 a615 a754

not valid.

f203 a566

No room in your mailbox for a recording.

f207 a571

Message too long to add comment. To record a new message, press star R-1.

f208 a465 a474 a477

is not a public list.

f209 a572

Cannot modify another subscriber's list.

f210 a14 a51

Please enter a new password

f211 a441

to fifteen digits

f212 a10 a16

Please enter password again for confirmation. To delete the password you just entered, press *D

f213 a201

Re-enter password

f214 a394 a648

Approved.

f215 a569

No room to retain a copy.

f216 a637 a638 a639 a640 a641 a642 a643 a644

originally

f217 a210 a273 a342 a343 a344 a345 a493 a673 a675 a767 a838 a840 a841

others

f219 a469 a470 a471 a472 a473 a474 a477

owned by

f220 a56

Enter password

f221 a57

Enter announcement id and pound sign. Refer to admin manual for correct id.

f222 a58

Enter fragment id and pound sign. Refer to admin manual for correct id.

f223 a53 a59 a60 a613 a627 a87

Please enter extension

f224 a100 a11 a1152 a116 a117 a12 a132 a14 a171 a172 a19 a193 a194 a195 a196 a199 a20 a201 a213 a214 a216 a218 a219 a222 a223 a234 a238 a29 a31 a317 a32 a349 a354 a38 a431 a443 a444 a45 a466 a478 a484 a497 a498 a509 a51 a511 a514 a521 a53 a54 a55 a559 a56 a586 a59 a592 a6 a60 a612 a613 a621 a627 a63 a64 a65 a654 a655 a66 a67 a7 a724 a725 a726 a770 a771 a773 a774 a819 a861 a87 a889 a890 a891 a894 a912 a932 a933 a936 a937 a940 a941 a98

and pound sign.

f226 a455 a457 a658 a659 a660 a661 a662 a866

private

f227 a456 a458 a674

pub1ic

f228 a688

Record at the tone.

f229 a689

You will have up to

f230 a689

seconds to record.

f232 a611 a691 a692 a883

Recording stopped.

f233 a11 a12

Previous login incorrect. Please re-enter extension

f234 a192

To respond or forward, press 1.

f235 a10 a100 a108 a123 a126 a128 a168 a169 a170 a19 a20 a24 a25 a26 a28 a30 a32 a38 a39 a40 a41 a42 a43 a44 a45 a48 a5 a50 a51 a57 a58 a59 a61 a62 a63 a64 a65 a66 a67 a724 a726 a78 a79 a80 a83 a85 a9 a93 a94 a98

To restart at the activity menu, press star R To transfer to another extension, press star T.

f236 *a191 a265 a712 a834 a877*

Try again

f237 *a613*

Or press star R.

f238 *a200*

To review another list,

f239 *a282*

followed by the pound sign.

f240 *a501*

To skip, press pound. To listen, press 0.

f241 *a463 a472 a482 a483*

To review list, press star 1.

f242 *a680 a681 a682 a683 a684 a685 a686 a687*

Returned to the

f243 *a364 a733*

Rewound.

f244 *a706*

Rewound to previous message.

f245 *a708 a709*

Please return call.

f246 *a210*

Message addressed to

f247 *a211*

To add to list,

f248 *a713*

scheduled

f249 *a713*

To change delivery time, press star D; To approve, press pound.

f250 *a714*

To change delivery time, press star D.

f251 *a770 a771 a773 a774*

To transfer using extension instead, press star A.

f252 *a1157 a192 a206*

To respond to this message, press 1.

f253 *a819*

Please enter month, day

f254 *a93 a94*

To play the active version, press 1.

f255 *a530*

To delete this message, press star D.

f256 *a606 a699*

At beginning. To re-record, press 1. To playback, press 2-3.

f257 *a727*

To use personal greeting, press Y. To use system greeting, press N.

f258 *a838*

Message to

f259 *a637 a638 a639 a640 a641 a642 a643 a644 a736 a737 a738 a739 a740 a741 a742 a743 a744 a896 a897 a974*

scheduled for

f261 *a637 a638 a639 a640 a641 a642 a643 a644*

rescheduled for

f262 a1150 a269 a270 a271 a272 a286 a287 a295 a296 a355 a356 a357 a358 a489
a490 a491 a492 a505 a506 a658 a659 a660 a661 a663 a664 a665 a666 a668
a669 a670 a671 a676 a677 a678 a679 a745 a746 a808 a809 a810 a811

received

f263 a878 a880

You are recording a subscriber name.

f264 a637 a744

Message not delivered because mailbox was full.

f265 a637 a638

Message not delivered because their mailboxes were full.

f270 a754

subscriber id

a272 a258 a593

Contact administrator for help.

f274 a103 a298 a70 a712 a762 a763 a945 a953

Please make entry soon, or be disconnected.

f275 a766

Cannot get your messages now, due to multiple logins to your mailbox.

f276 a765

Time requested has passed, please re-schedule delivery.

f277 a147 a152 a826 a934 a935

To exit directory, press pound.

f279 a853 a854

Enter announcement set and pound sign.

f281 a808 a809 a810 a811

Message from

f282 a10 a100 a101 a105 a106 a108 a113 a114 a115 a116 a117 a119 a120 a121
a123 a125 a126 a127 a128 a129 a13 a159 a168 a169 a170 a171 a172 a19 a20
a24 a25 a26 a28 a30 a32 a38 a39 a40 a41 a42 a43 a44 a45 a48 a5 a50 a51 a57
a58 a59 a62 a63 a64 a65 a66 a67 a724 a726 a76 a77 a78 a79 a80 a83 a85 a9 a93
a932 a933 a936 a937 a938 a94 a940 a941 a942 a943 a96 a960 a97 a98 a99

To have system wait, press star W. To access the names or numbers directory, press star star N. If finished, please hang up or to disconnect AUDIX, press star star X.

f283 a814

Your mailbox is more than

f284 a814

percent full. Please delete unneeded messages or greetings.

f285 a19 a6 a912

To add a member, enter extension

f286 a20 a7

To add a member, enter last name

f287 a815

Welcome to AUDIX.

f288 a147 a934

You are in the names directory. To find a subscriber's extension, enter the last name followed by the pound sign. To enter the letter Q, press 7; for Z press 9. To look up by extension instead press star A.

f290 a171 a172 a936 a937

If you wish to specify a non-AUDIX subscriber, first change to extension addressing by pressing star A.

f291 a113 a114 a1140 a115 a121 a125 a127 a129 a15 a18 a4 a68 a69 a70 a71
a77 a8 a920 a921 a938 a939 a940 a941 a942 a947 a949 a951 a952 a953 a955 a956
a957 a958 a961

To transfer to another extension, press star T.

f292 a101 a1157 a1158 a1159 a118 a122 a124 a24 a26 a34 a40 a41 a42 a44 a47
a49 a68 a73 a74 a81 a86 a880 a881 a925 a926 a927 a928 a929 a930 a943 a96 a961

Louder, press 4. Softer, press 7. Faster, press 9. Slower, press 8.

f293 *a817*

Nothing to playback.

f294 *a179 a40*

To add entries, press 1.

f295 *a468 a477*

To re-enter list, press star L.

f297 *a55 a66*

To specify owner by extension, press star A.

f298 *a54 a65*

To specify owner by name, press star A.

f299 *a26 a50*

You are administering your greeting.

f300 *a904*

A. M.

f301 *a904*

P. M.

f302 *a30*

You are recording announcement fragments. Enter fragment id followed by pound sign. Refer to admin manual for correct id.

f303 *a32*

You are recording names. Enter extension

f304 *alOl a68 a880 a881 a943 a961*

To playback message, press 2-3. To delete your message, press star D. To approve your message, press pound.

f305 *all3 all4 all5 all9 al20 al21 al25 al27 al29 al59 a76 a77*

You are at the activity menu.

f306 *a10 al4 al6 a5l*

You are changing your password.

f307 *a57 a854 a93*

You are playing announcements.

f308 *a58 a853 a94*

You are playing announcement fragments.

f309 *a59*

You are playing names.

f310 *a3*

January

f311

February

f312

March

f313

April

f314

May

f315

June

f316

July

f317

August

f318

September

f319

October

f320

November

f321

December

f322 *al52 a935*

You are in the numbers directory. To find a subscriber's name enter the extension followed by the pound sign. To look up by name instead, press star A.

f323 *all61 al23 al26 al28 al68 al69 al70 a62 a85*

You are responding to a piece of incoming mail.

f324 *a78*

You are selecting which greeting will be played to callers. If you want your personal greeting to be played, press Y for yes. If you press N for no, the system greeting will be used.

f325 *al37*

You are administering your lists. To create a mailing list, press 1. To play a summary of all your lists, press 2. To review a particular list, press 3.

f326 *a83*

You are doing system administration. To record names, press 4. To play names, press 5. To record a machine name, press 6. To play a machine name, press 7. To record fragments, press 1. To play fragments, press 2. To play announcements, press 3.

f327 *al9 a20 a45*

You are creating a mailing list.

f328 *al9 a20 a6 a7 a912*

To delete the previous entry, press star D. To add a mailing list you have already created, or a public list owned by others, press star L. To review or modify the list you are creating, press star 1. To approve the list you are creating and move on to the next step, press pound.

f329 *all52 a45 a67 a861*

You have not yet entered enough characters to identify a specific subscriber. To enter the letter Q, press 7; for Z press 9.

f330 *al2 a87*

Or enter just the pound sign if it's your phone.

f331 *a790*

Personal greeting used.

f332 *a380 a381 a382 a383 a384 a385 a386 a387 a388 a389 a390 a391 a392 a393 a792 a793 a794 a795 a796 a797 a798 a799 a800 a801 a802 a803 a804 a805 a806*

System greeting used.

f333 *a44 a913*

To add entries to the list or to change status of list, press 1.

f334 *a212*

When finished addressing, press pound.

f335 *al94 al96 a218 a222 a771 a774*

When finished, press pound.

f336 *a211*

To review addressees, press star 1.

f338 *a93 a94*

To play the admin version, press 2.

f339 *all57 all58 all59 all8 al22 al24 a24 a26 a34 a47 a73 a74 a86 a880 a881 a924 a925 a926 a927 a928 a929 a96*

To replay the last few seconds, press 5. To advance a few seconds, press 6.

f340 *a84*

Enter the hour, one through twelve, then two digits for the minutes, then A for AM or P for PM, and the pound sign.

f341 a33

Enter the number of the month, one through twelve, then two digits for the day of the month, then the pound sign.

f342 a541 a542 a545 a546 a549 a550 a553 a554

Electronic document communication

f343 a539 a540 a541 a542 a543 a544 a545 a546 a555

Leave word calling

f344 a543 a544 a545 a546 a551 a552 a553 a554

Message Center Service

f345 a184 a185 a190 a236

Voice mail

f346 a879 a881

You are recording a machine name.

f347 a29 a31 a54 a55

You are adding a list.

f348 a63 a64 a65 a66 a67

You are specifying a mailing list to review.

f349 a463 a472 a482 a483 a654 a655

To approve list as is, press pound.

f350 a3

Sunday

f351

Monday

f352

Tuesday

f353

Wednesday

f354

Thursday

f355

Friday

f356

Saturday

f357 *a61 a939*

You are choosing between subscribers whose names match your entry. To indicate no subscribers match, delete entry by pressing star D. To change to extension addressing and delete your entry, press star A.

f358 *a39*

You are identifying a list as private or public.

f359 *a43*

You are changing the status of your list. To modify status, press Y for yes or N for no.

f360 *a41*

You are scanning mailing lists. To review list members, press 0. To rewind to previous list, press 2. To continue scanning lists, press 3.

f361 *a41*

To skip to next list, press pound. To delete list, press star D.

f362 *a54 a55 a65 a66*

If you own the list, press pound. If someone else owns the list

f363 *a29 a31 a63 a64*

To approve the list you are creating, press pound.

f364 *a497 a54 a65 a890*

enter owner's extension

f365 *a55 a66*

enter owner's name

f366 *a29 a63*

To specify a different owner by extension, press star D.

f367 *a31 a64*

To specify a different owner by name, press star D.

f368 *a38*

You are entering the number for a new list. Please enter a number up to six digits long

f369 *a38*

To replace an existing list, enter that list's number,

f370 *a40 a44*

These are entries in your list.

f371 *a40 a42 a44*

To rewind to current entry, press 2. To rewind to previous entries, press 2 as many times as necessary. To continue playback of list, press 3.

f372 *al57 a228 a40 a44*

To skip to next entry, press pound. To delete current entry, press star D.

f373 *a25*

You are choosing whether to attach a copy of original message to your reply. To include the original, press Y for yes. To send only your reply, press N for no.

f375 *al24 a924 a926*

You are getting your incoming messages. To listen to the message, press 0. To respond to the message, press 1.

f376 *all57 all58 al24 a73 a81 a86*

To skip to the next header, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f377 *all57 all58 all59 all8 al22 al24 a73 a86 a924 a925 a926 a927 a928 a929*

To delete message, press star D.

f378 *a73 a81 a86 a928 a929 a930*

You are checking the status of your outgoing messages.

f379 *a81 a930*

To delete status information, press star D.

f380 *alO2 alO4 a299 a69 a71 a775 a813 a944 a946 a951 a952*

Please wait.

f381 *a86 a928*

To listen to the message, press 0. To re-record message before delivery, press

f382 *a33 a84*

You are scheduling your message for delivery.

f383 *a266 a862 a863*

Please enter hour, then two digits for minutes, then A for am or P for pm, and pound sign.

f384 *al61 a261 a90 a92*

Please enter number of month, then two digits for day, and pound sign.

f385 *a75*

To approve delivery time, press pound. To modify delivery time, press star D and listen for further instructions.

f386 *a520*

Cannot change a delivered message.

f387 *a641 a642 a742*

Message not delivered because recipient not found.

f388 *all57 all58 all59 al80 al92 a206 a276 a315 a346 a42 a507 a508 a527 a530 a730 a924 a925 a926 a927 a928 a929 a930*

To skip, press pound.

f390 *a820 a843 a903*

oh

f391 *a844*

one

f392 *a845*

two

f393 *a846*

three

f394 *a847*

four

f395 *a848*

five

f396 *a849*

Six

f397 *a850*

seven

f398 *a851*

eight

f399 *a852*

nine

f400 *a972*

ten

f401

eleven

f402

twelve

f403

thirteen

f404

fourteen

f405

fifteen

f406

sixteen

f407

seventeen

f408

eighteen

f409

nineteen

f410

twenty

f411

twenty-one

f412

twenty-two

f413

twenty-three

f414

twenty-four

f415

twenty-five

f416

twenty-six

f417

twenty-seven

f418

twenty-eight

f419

twenty-nine

f420

thirty

f421

thirty-one

f422

thirty-two

f423

thirty-three

f424

thirty-four

f425

thirty-five

f426

thirty-six

f427

thirty-seven

f428

thirty-eight

f429

thirty-nine

f430

forty

f431

forty-one

f432

forty-two

f433

forty-three

f434

forty-four

f435

forty-five

f436

forty-six

f437

forty-seven

f438

forty-eight

f439

forty-nine

f440

fifty

f441

fifty-one

f442

fifty-two

f443

fifty-three

f444

fifty-four

f445

fifty-five

f446

fifty-six

f447

fifty-seven

f448

fifty-eight

f449

fifty-nine

f450 *a820*

sixty

f451

seventy

f452

eighty

f453

ninety

f454 a901

hundred

f455 a906

thousand

f456 a906

million

f462 a824

pound

f463 a823

star

f464 a213 a218 a219 a654

Enter extensions

f466 a735

created

f468 a488 a749

To continue playing, press 3.

f470 a498 a891

Enter owner's last name

f471 a497 a498 a890 a891

If it's your list, press pound.

f472 a326 a749

To approve, press pound. To record from here, press 1.

f473 a532 a682

filed

f474 a346 a507 a73 a929

To listen, press 0. To change or send again, press 1.

f475 a751

To file a copy, press Y for yes or N for no.

f477 a717 a963

Press 1 to select

f478 a718 a964

2 to select

f479 a719 a965

3 to select

f482 a724 a725 a726 a827 a940 a941

Press pound to select

f483 a724 a725 a726 a827 a940 a941

or enter more characters

f484 all52 a45 a521 a67 a861

Enter more characters followed by the pound sign; if you just completed entering the last name, enter the first name.

f485 a455 a456

has

f486 all60 all61 al26 al68 a204 a62 a693 a760 a768 a85

To reply to sender by voice mail, press 1.

f487 a33

To delete time, press star D. To default rest of the delivery time, press pound.

f488 a84

To specify immediate delivery, press pound. Otherwise

f492 *a448*

Owner erased.

f493 *all6 all7 al71 al72 a932 a933 a936 a937*

You are requesting a transfer.

f498 *a466 a889*

Please enter a new list id

f499 *a750*

When finished recording, press # to approve, or 1 to edit your message.

f500 *a627*

This is AUDIX.

f501 *a723*

To record messages, press one. To get messages, press two. To administer attendant menu, press 3.

f502 *a24 a246 a96*

To record attendant menu, press 1. To listen to attendant menu, press 0.

f503 *a24 a96*

You are administering your attendant menu.

f504 *a252*

Transferring to an operator,

f505 *a248*

You have selected an invalid option.

f506 *a247*

Menu approved and activated.

f507 *a282 a297 a298*

The person you called is not available. To leave a message, use touch tones to re-enter the number you called.

f508 *a253*

Attendant Service not available, try again later.

f509 *a601*

System not administered for outcalling.

f510 *a614 a615 a886*

Number

f511 *a299 a712*

If you do not have a touch tone phone,

f512 *a772*

Your call is being transferred to an operator.

f513 *a279*

Begin your message by saying the name and telephone number of the person you are calling. Someone will listen to the start of your message, and then forward the complete message to the person you called.

f514 *a712*

otherwise

f515 *a104 a71 a775 a946 a951*

To be transferred to an operator,

f516 *a102 a69 a944 a952*

To leave a message that will be delivered as soon as possible,

f517 *a102 a103 a104 a69 a70 a71 a944 a945 a946 a951 a952 a953*

You are entering the number of the person for whom you are leaving a message. This may be the complete number you dialed or simply the extension. For a faster response, terminate your entry with a pound sign.

f518 *a101 a68 a943 a961*

You are creating a voice message which will be delivered to the person specified in your message as soon as possible. Please be aware that in order to forward this message to the recipient, someone will listen to the name and number portion.

f519 *a628*

You are not authorized for outcalling.

f520 *a629 a630 a631 a632 a633*

Your outcalling number,

f521 *a618 a619 a630 a631 a632 a633*

turned on

f522 *a617 a629*

turned off to restart at the activity menu, press star R

f523 *a1097 a630 a631 a632 a633*

for

f524 *a22 a237 a625 a626 a631 a633 a656 a657 a758*

to

f525 *a624 a630 a632*

any time

f526 *a624 a625 a626 a630 a631 a632 a633*

subject to administrator restrictions

f527 *a108 a28 a307 a629 a630 a631 a632 a633 a97*

To change number, press 1. To change times, press 2. For instructions on entering your outcalling number, press 3.

f528 *a108 a28 a307 a629 a630 a631 a632 a633 a97*

To turn on, press y. To turn off, press n.

f529 *a108 a28 a97*

You are changing your outcalling options.

f530 *a617 a618 a619*

Outcalling

f531 *a621*

Enter outcalling number

f532 *a620*

To change your outcalling phone number, press 1 and enter the number to be called followed by the pound sign. Anything you enter will be interpreted as a part of the called number. No global commands such as star H will be accepted at this time.

f533 *a764*

Too many digits.

f534 *a623*

Your outcalling number is

f535 *alO6 a616 a80*

For outcalling any time, press 1. For outcalling during prime time, press 2. To specify your times, press 3. For system outcalling schedule, press 4.

f536 *alO5 alO6 a79 a80*

You are specifying your outcalling time period. The time you specify will be restricted by the times allowed by the system administrator.

f537 *a734*

Enter the starting hour, minutes, A or P, and pound sign.

f538 *a325*

Enter the ending hour, minutes, A or P, and pound sign.

f539 *a758*

The system allows outcalls from

f540 *a237*

and from

f541 *a781*

Up to

f542 a781

digits may be used.

f543 a53 a627

To avoid further notification of these messages, press star pound.

f544 a624 a625 a626

Outcalling specified for

f545 a105 a79

To delete own time, press star D.

f546 a825

pause

f548 a582

You have no attendant menu.

f549 a48 a99

You are administering your attendant menu. To create attendant menu, press 1.

f550 a24 a96

To rewind your attendant menu, press two. To delete it, press star D. To stop playback of your attendant menu, press three.

f551 a53 a627

To access your messages,

f552 a334 a335 a336

is not authorized to receive messages.

f553 a335

You may enter another number

f555 a101 a102 a103 a104 a15 a17 a18

To access your mailbox, press star R.

f556 a621

To exit, press star pound now.

f557 a620

In most cases, entering a star or pound as the first digit will result in the star or pound being outpulsed. A star entered as part of the digit string will be interpreted as a pause of one and a half seconds. If a longer pause is required, use multiple stars in a row.

f560 a620

If you are programming a number to call a pager that requires a pound sign termination, press y to hear further help. Otherwise, press n to return to outcalling administration.

f561 a6 a7 a912

You are addressing your message.

f562 a116 all7 al93 al94 al95 al96 a894 a932 a933

Enter the

f563 all6 all7 al93 al94 al95 al96 a932 a933

digit extension

f565 a309

Outcall canceled for new messages currently in mailbox.

f566 a53

You are responding to an outcall notifying you of new messages.

f567 a53

Either logging in or pressing star pound will result in the outcall being canceled for the new messages currently in your mailbox. If additional new messages arrive, another outcall will be scheduled.

f569 a697

To modify, press one. If finished, press star pound.

f570 a512 a883

Recorded name too long

f571 a610

Non-existent subscriber

f575 *a590*

Cannot forward a private message

f577 *all57 all58 all59 all8 al22 al24 a924 a925 a926 a927*

To hold the message in its current category, press star star H

f578 *all57 all58 all59 a924 a925 a926 a927 a928 a929 a930*

To skip to the next category, press star pound.

f579 *a443 a444*

Password must be

f580 *a250 a251*

Cannot attach a private message

f581 *a251*

Press N now

f582 *a514*

AUDIX passwords must now be at least

f584 *a643 a644 a743*

Message not delivered because special feature denied on recipients machine.

f585 *a1104 a873*

Zero

f587 *a42*

You are reviewing a list.

f588 *a514*

or more digits.

f589 *a622*

For pagers requiring a pound sign termination, start your number with a double pound sign. This will result in a single pound being outpulsed at the end of the digit

string. Then, a star or pound in the next position will be interpreted as part of the outcalling number.

f590 a622

A star entered as part of the digit string will be interpreted as a pause of one and a half seconds. If a longer pause is required, use multiple stars in a row.

f591 a52

To change your outcalling phone number, press one. To hear further instructions on programming a pager, press y. To return to outcalling administration, press n.

f592 al99

AUDIX passwords must now be

f593 al99 a514

Please choose a new password of

f600 a557

new Broadcast messages.

f601 al83 al84 al90 a235 a875

Priority

f602 a210 a236 a273 a342 a343 a344 a345 a493 a673 a675 a767 a838 a840 a841

other

f603 a538 a540 a541 a543 a545 a549 a55l a553 a555

You also have

f604 a690

As you use AUDIX your name will be included in system announcements that you and other people will hear. Press 1, and at the tone, please speak your name. After speaking your name, press 1 again.

f606 a241

To re-record your name, press 1. To approve, press pound.

f607 a650

Name cannot be saved at this time, please continue

f608 *al67 a599 a692 a883*

At the tone, please speak your name. After speaking your name, press 1.

f609 *a583*

No room to save Broadcast message so it will be retained in the new message category.

f610 *al50*

You are recording your name. After you record your name, you can access other AUDIX features. As you use AUDIX your name will be included in system announcements that you and other people will hear. Press 1 and at the tone, please speak your first and last name as you would like others to hear it. After speaking your name, press 1 again.

f611 *al51*

You are recording your name. To record your name, press 1. After recording, press 1 again. To playback name, press 2-3. To approve, press pound.

f612 *al49 a519*

To make private, press 1.

f613 *a1149 a518*

To make priority, press 2.

f614 *a515*

To make broadcast, press 8.

f615 *a516*

To make a login announcement, press 9.

f617 *a705 a919*

To remove private status, press 1.

f618 *al65 a704*

To remove priority status, press 2.

f619 *a700*

To remove broadcast status, press 8.

f620 *a701*

To remove login announcement status, press 9.

f622 *a876*

not Priority.

f623 *a275*

Broadcast.

f624 *a495*

Login announcement.

f625 *a208 a831 a833*

To activate message waiting notification, press 1.

f626 *al43 al46 a731 a732 a831 a832 a833*

To specify expiration date, press 2.

f627 *a239 a832 a833*

To approve broadcast options, press pound.

f628 *al46 a311 a832*

To deactivate message waiting notification, press 1.

f629 *a716*

Please enter month, day, and pound sign.

f630 *a303*

To change expiration date from

f631 *a227 a536*

Message waiting notification activated.

f632 *a227 a333*

Expiration date will be

f633 *a517*

To make non-interruptible, press 1.

f634 *a240 a732*

To approve login announcement options, press pound.

f635 *a702*

To remove non-interruptible status, press 1.

f636 *a564*

Login announcement will be non-interruptible.

f637 *a438 a439 a440*

Invalid date.

f638 *a440*

is prior to delivery date, please re-schedule.

f639 *a260*

Message cannot be both broadcast and priority.

f640 *a256*

Message cannot be both a login announcement and priority.

f641 *a257*

Message cannot be both a login announcement and private. f

642 *a259*

Message cannot be both broadcast and a login announcement

f643 *al49*

You are choosing options for this message. There are no options currently set.

f644 *a155*

You are choosing options for this message. With the current settings,

f645 *al45 al49*

Private messages cannot be forwarded by the recipients.

f646 *all66 al44*

A priority message will be delivered before other messages and will be flagged for special attention in the recipient's mailbox.

f647 *a842*

the message will be private.

f648 *al56*

the message will be priority.

f649 *al35*

the message will be broadcast.

f650 *al39*

the message will be a login announcement.

f651 *al64*

the message will be private and priority.

f652 *al40*

A broadcast message is delivered to every subscriber on this machine. You may also address a broadcast message to subscribers on other machines.

f653 *a274*

For broadcast options, press star M.

f654 *al34*

the message will be broadcast and private.

f655 *al41*

A login announcement will be played each time any subscriber logs onto this machine. You may also address a login message to subscribers on other machines.

f656 *a494*

For login announcement options, press star M.

f657 *al33*

You are choosing options for this broadcast message.

f658 *a831*

Message waiting notification is currently not active.

f659 *al30 al46 a831*

Message waiting notification will alert all local subscribers of this message. This option should be used sparingly, for it can impact system performance.

f660 *al60 al61*

Expiration date specifies the last day this broadcast message will be available to subscribers. The expiration date does not apply to a broadcast message already received by a subscriber and saved in their mailbox. The default expiration date is the second day after the scheduled delivery date.

f661 *al43 al60 al63*

To approve these options, press pound.

f662 *al46*

Message waiting notification is active.

f663 *a110*

Message waiting notification is not active and this message has an expiration date of.

f664 *a112*

Message waiting notificadon is active and this message has an expiration date of

f665 *al38*

You are choosing options for this login announcement.

f666 *a148*

With the current settings, this login announcement will be non-interruptible.

f668 *all*

With the current settings, this login announcement will be non-interruptible and the login announcement has an expiration date of

f669 *a109*

With the current sefflngs, this login announcement will be interruptible and the login announcement has an expiration date of.

f670 *a142 a143*

Non-interruptible status forces each subscriber to listen to the entire login announcement every time they log onto this machine.

f671 *a143 a163*

Expiration date specifies the last day this login announcement will be available to subscribers. The default expiration date is the second day after the scheduled delivery date.

f674 *a729 a931*

Due to sending restrictions, you cannot send messages to

f678 *a439*

is past the expiration date, please reschedule.

f679 *a182 a293*

is not available. Sorry, you cannot leave a message now because this user's mailbox is full.

f680 *a177 a288*

is busy. Sorry, you cannot leave a message now because this user's mailbox is full.

f681 *a647*

Sorry, cannot leave a message now because this user's mailbox is full.

f682 *a269 a270 a271 a272*

Broadcast message from

f683 *a268*

Broadcaster has deleted this broadcast message.

f684 *a355 a356 a357 a358*

Private, broadcast message from

f685 *a676 a677 a678 a679*

Private, priority message from

f686 *a663 a664 a665 a666*

Private message from

f687 *a779*

Undeliverable message notification received

f688 *a778*

An undeliverable message was returned to your outgoing mailbox. To access your outgoing mailbox, press star R 4.

f689 *a270 a272 a356 a358 a490 a492 a638 a640 a642 a644 a664 a666 a669 a671 a677 a679 a737 a746 a809 a811*

Expiration time is

f690 *a668 a669 a670 a671*

Priority message from

f691 *a489 a490 a491 a492*

Login announcement from

f693 *a273*

Broadcast message to all local subscribers

f694 *a675*

Private, broadcast message to all local subscribers

f695 *a767*

Private, priority message to

f696 *a841*

Private message to

f697 *a493*

Login announcement to all local subscribers

f698 *a673*

Priority message to

f699 *a739*

Message not delivered because another login announcement is active.

f700 *al65 al66 a755 a756*

To administer mailing lists, press 1. To administer personal directory, press

f 701 *al65 al66 a755 a756*

To change your password, press 4.

f702 *al66 a756*

To record your name, press 5.

f703 *al65 al66*

You are at subscriber administration.

f704 *a503*

To create lists, press 1. To scan lists, press 2. To review and modify lists, press 3.

f705 *a320*

Directory contains

f706 *al36 a319*

To add entries, press 1. To review all entries, press 2. To review a specific entry, press 3.

f707 *alO80 alO84 a525 a74*

If finished, press star pound.

f708 *a215 a216 a330 a331*

If finished adding entries, press pound.

f709 *a234*

Enter alias for

f710 *a331 a860*

Enter next name and pound sign.

f711 *a224 a225 a226 a228 a229 a917*

Alias

f712 *a224 a225 a226 a228 a917*

defined for

f713 *a330*

Enter next extension and pound sign.

f714 *a587*

Directory has no entries.

f715 *a360 a361*

Cannot add new entries because your directory is full.

f716 *a231 a232*

Alias must be ten or fewer numerals.

f717 *a233*

Alias already defined.

f718 *a653*

Name entered not followed by pound and not added to the directory.

f719 *a652*

Extension entered not followed by pound and not added to the directory.

f720 *a651*

Alias entered not followed by pound and not added to the directory.

f722 *al88 a361*

was not added to your personal directory.

f723 *al36*

You are administering your personal directory.

f724 *a321*

Personal directory review completed.

f725 *al31 al32*

You are adding entries to your personal directory.

f726 *a157*

You are reviewing all entries in your personal directory.

f727 *a232 a327 a328 a329*

Enter alias and pound sign.

f729 *a158*

You are reviewing a specific entry in your personal directory. To delete the current entry, press star D. To review another entry, enter the alias followed by the pound sign.

f730 *a738*

Message not delivered because the broadcast mailbox was not defined.

f736 *a167*

You are recording your name. As you use AUDIX your name will be included in system announcements that you and other people will hear.

f737 *a434*

Login announcement will be interruptible.

f738 *a740*

Message not delivered due to sending restrictions.

f739 *a342*

Message sent to all local subscribers.

f740 *a343*

Private message sent to all local subscribers.

f741 *a344*

Private, priority message sent to

f742 *a840*

Private message sent to

f743 *a345*

Priority message sent to

f744 *a230*

For all calls,...

f745 *al a230 a278 a339 a350 a351 a352 a353 a411 a412 a413 a414 a415 a416 a417 a418 a419 a420 a421 a422 a423 a424 a433 a579 a645*

active.

f747 *a433*

For internal calls,...

f748 *a339*

For external calls,...

f749 *a278*

For busy calls,...

f750 *a579*

For no answer calls,...

f751 *a645*

For out-of-hours calls,...

f752 *a425*

To listen to a greeting, press 0. To create, change, or delete a greeting, press 1. To scan all your greetings, press 2. To activate a greeting, press 3. To administer call types, press 4. If finished, press pound.

f753 *a35 a36 a428*

Enter greeting number.

f754 *a230 a278 a339 a350 a351 a352 a353 a365 a366 a367 a368 a369 a370 a371 a372 a373 a374 a375 a376 a377 a378 a379 a380 a381 a382 a383 a384 a385 a386 a387 a388 a389 a390 a391 a392 a393 a394 a395 a396 a397 a398 a399 a400 a401 a402 a403 a404 a405 a406 a407 a408 a409 a410 a411 a412 a413 a414 a415 a416 a417 a418 a419 a420 a421 a422 a423 a424 a433 a579 a645 a830 a88*

Greeting

f755 *a395*

not recorded.

f756 a426 a427 a525 a74

To listen to greeting

f757 all24 a429 a430

To re-record, press 1.

f759 a430

To review status, press 2.

f760 a426 a427 a525 a74

press 0.

f762 a303

press 2.

f764 a787 a788 a828

To use this greeting for all calls, press 0. For internal calls, press 1. For external calls, press 2.

f765 a396

recorded, but not active

f766 a783 a88

To use this greeting for all calls, press 1.

f767 a785 a786 a829

To use this greeting for all calls, press 0. For busy calls, press 1. For no answer calls, press 2.

f770 a397 a398 a399 a400 a401 a402 a403 a404 a405 a406 a407 a408 a409 a410

recorded and active

f771 a365 a366 a367 a368 a369 a370 a371 a372 a373 a374 a375 a376 a377 a378

approved and active

f772 a426

again

f773 *a828 a829*

To activate for out-of-hours calls, press 3.

f774 *a143 al60 al61 al63 a341*

If you have addressed this message and wish to deliver it immediately, press star star pound.

f775 *a728*

To record messages, press one. To get messages, press two. To administer personal greetings, press 3.

f776 *a1 a230 a278 a339 a350 a351 a352 a353 a433 a579 a645*

the system greeting

f777 *a522*

Cannot listen to system greeting.

f778 *a523*

Cannot modify system greeting.

f779 *a596*

No greetings recorded.

f780 *a524*

Personal greetings review completed.

f781 *a525 a74*

To skip to the next greeting, press the pound sign.

f782 *a789*

To activate a greeting, enter greeting number. To deactivate a greeting, activate a different greeting in its place.

f783 *a784*

To activate another greeting, enter greeting number. To deactivate a greeting, activate a different greeting in its place.

f784 *a784 a789*

To activate system greeting, enter zero.

f785 *a23 a710 a711*

Same greeting used for all calls.

f786 *a23 a711*

To identify calls as internal and external, press 1.

f787 *a23 a711*

To identify calls as busy and no answer, press 2.

f788 *a22 a432 a657*

To identify calls as out-of-hours, press 3.

f789 *a22 a657*

Otherwise, press 4.

f790 *a244 a245*

Calls identified as internal and external.

f791 *a242 a243*

Calls identified as busy and no answer.

f792 *a242 a244*

Calls identified as out-of-hours.

f793 *a243 a245*

Calls not identified as out-of-hours.

f794 *a300*

To change identification to busy and no answer, press 2.

f795 *a304*

To change to identification internal and external, press 1.

f796 *a703*

To remove out-of-hours identification, press 4.

f797 a791

To use same greeting for all calls, press 5.

f798 a22 a656 a657

Prime time is

f800 a161

You are specifying the expiration date.

f801 a314

To respond to this notification, press one. To delete, press star D. To skip, press pound.

f802 a707

Cannot send a message to the broadcast mailbox.

f805 a352 a353

For internal...

f807 a350 a351

For busy...

f810 a352 a353 a372 a375 a387 a390 a404 a407 a418 a421 a800 a803

external

f812 a350 a351 a366 a369 a381 a384 a398 a401 a412 a415 a794 a797

no answer

*f813 a351 a353 a367 a369 a370 a373 a375 a376 a382 a384 a385 a388 a390 a391 a399
a401 a402 a405 a407 a408 a413 a415 a416 a419 a421 a422 a795 a797 a798 a801 a803
a804*

and out-of-hours

*f814 a350 a351 a352 a353 a366 a367 a368 a369 a370 a371 a372 a373 a374 a375
a376 a377 a378 a381 a382 a383 a384 a385 a386 a387 a388 a389 a390 a391 a392
a393 a398 a399 a400 a401 a402 a403 a404 a405 a406 a407 a408 a409 a410 a412
a413 a414 a415 a416 a417 a418 a419 a420 a421 a422 a423 a424 a794 a795 a796
a797 a798 a799 a800 a801 a802 a803 a804 a805 a806*

calls.

f815 *a4C*

You are administering your personal greetings.

f816 *a35*

You are listening to a personal greeting.

f817 *a36*

You are recording a personal greeting.

f818 *a830 a88*

You have just recorded

f819 *a74*

You are Scanning your personal greetings.

f820 *a37*

You are selecting which greeting to activate.

f821 *a21 a22 a23*

You are administering call types.

f822 *al74*

As you use AUDIX your name will be included in system announcements that you and other people will hear. At the tone, please speak your name. After speaking your name, press one.

f823 *al a365 a380 a397 a411 a793*

...for all calls

f825 *a372 a373 a374 a375 a387 a388 a389 a390 a404 a405 a406 a407 a418 a419 a420 a421 a800 a801 a802 a803*

...for internal

f826 *a370 a371 a385 a386 a402 a403 a416 a417 a798 a799*

...for external

f827 a366 a367 a368 a369 a381 a382 a383 a384 a398 a399 a400 a401 a412 a413
a414 a415 a794 a795 a796 a797

...for busy

f828 a376 a377 a391 a392 a408 a409 a422 a423 a804 a805

...for no answer

f829 a378 a393 a410 a424 a806

...for out-of-hours

f830 a560

You must approve your recording.

f831 a161

To exit the expiration date options, press star pound.

f832 a131 a215 a859

Please enter extension and pound sign.

f833 a131 a132 a327 a328 a895

To delete current entry, press star D.

f835 a618 a630 a631

for all new messages

f836 a619 a632 a633

only for new priority messages

f837 a634

To turn on Outcalling for all new messages, press 1. To turn on outcalling only for new priority messages, press 2.

f838 a153

You are selecting which messages will receive outcalls.

f839 a74

To rewind to the previous greeting, press 2.

f840 a636

Option

f841 a337 a636

not defined

f842 a565

Announcement not recorded. Try again later.

f843 a254 a837

To scan headers and messages, press 1. To scan headers only, press 2. To scan messages only, press 3.

f844 a529

End of message.

f845 a558

Next message.

f846 a837

You are selecting an option for Automatic Message Scan.

f847 all59 all8 a927

You are automatically scanning your incoming messages. To listen to the message, press zero. To respond to or forward the message, press one.

f848 a1159 a122 a925

You are automatically scanning your incoming messages. To listen to the message, press zero. To respond to the message, press one.

f849 a1159 a118 a122

To skip to the next message, press the pound sign. To listen to the header, rewind by pressing two, then play by pressing three. To skip to the next category, press star pound.

f850 a563

Broadcast and Login Message services are not available.

f852 al57

To rewind to the current entry, press two. To rewind to previous entries, press two as many times as necessary.

f853 *a962*

Messages skipped, retained as new.

f854 *a882*

seconds to finish recording.

f855 *a894 a895*

remote AMIS mailbox id

f856 *a892 a893*

This is a recorded message from

f858 *a907*

To replay, press 0.

f859 *a909*

Mailbox id not followed by pound.

f860 *a910*

Mailbox id not valid.

f861 *a886 a915 a931*

AMIS

f862 *a896*

It could not be delivered because the recipient appears to be a wrong number.

f863 *a897*

It could not be delivered after multiple attempts to deliver the message.

f864 *a898*

Automated call, please press 1 to disconnect.

f865 *a899*

Your number was dialed by mistake. We are sorry for this inconvenience. To prevent this from recurring, this call has been reported as a misdialed call.

f866 *a911*

AMIS casual subscribers cannot be added to your list.

f867 *a895*

You are entering the

f868 *a895 a912*

Mailbox id must be less than or equal to 16 digits.

f869 *a912*

If the extension entered belongs to a casual AMIS subscriber, you will be prompted for a mailbox id.

f900 *a855*

Standard US English

f901 *a856*

Announcement set does not exist

f902 *a857*

Announcement set

f903

<.1 second pause>

<.2 second pause>

f905 *all50 all51 a269 a270 a271 a272 a355 a356 a357 a358 a489 a490 a491 a492 a663 a664 a665 a666 a676 a677 a678 a679 a718 a719 a808 a809 a810 a811 a964 a965*

<.5 second pause>

f906 *a858*

<1.0 second pause>

f907 *alO90*

<2.0 second pause>

f908 a1144

<5.0 second pause>

f909 a858

Announcement

f910 a305 a306 a859 a860 a861 a863 a92

You are playing an announcement which need additional input before it can be played.

f911 a301 a305

Enter buttons followed by pound.

f912 a302 a306

Enter number followed by pound.

f913 a1074 a1102 a1137 a131 a132 a136 a319 a327 a328 a329 a35 a36 a429 a430
a783 a784 a786 a788 a789 a791 a828 a829 a88

If finished, press pound.

f914 a864

not filed.

f915 a865

No options menu available.

f916 a154

To send message, press pound. Or enter a delivery option. To hear a list of options, press zero.

f917 a277

To schedule delivery, press 3.

f918 a667

To re-schedule delivery, press 3.

f919 a672

To file a copy, press 4.

f920 a748

To not file a copy, press 4.

f921 a868

To make private, press 1. To send, press #.

f922 a869

To access the Delivery Options Menu, press # after recording your message.

f923 a870

Press # to approve your message and access the Delivery Options Menu

f924 a873 a972

seconds

f925 a873

minutes

f926 a871

<error sound>

f928 a556

New Messages

f929 a635

Old Messages

f930 a207

Accessed Messages

f931 a313

Delivered Messages

f932 a347

Filed Messages

f933 a776

Undeliverable Messages

f934 *a777*

Undelivered Messages

f935 *a780*

Unopened Messages

f936 *a2*

Partial entry deleted.

f937 *a872*

Sorry you are having difficulty. Please get help and try again later.

f938 *a905*

first

f939

second

third

f941

fourth

f942

fifth

f943

sixth

f944

seventh

f945

eighth

f946

ninth

f947

tenth

f948

eleventh

f949

twelfth

f950

thirteenth

f951

fourteenth

f952

fifteenth

f953

sixteenth

f954

seventeenth

f955

eighteenth

f956

nineteenth

f957

twentieth

f958

twenty-first

f959

twenty-second

f960

twenty-third

f961

twenty-fourth

f962

twenty-fifth

f963

twenty-sixth

f964

twenty-seventh

f965

twenty-eighth

f966

twenty-ninth

f967

thirtieth

f968

thirty-first

f969 *a867*

You are choosing between announcement sets whose names match your entry. To indicate no announcement sets match, delete entry by pressing star D.

f970 *a476*

To continue reviewing, press 3. To delete an entry, press star D. If finished reviewing, press pound.

f971 a340 a341 a919

To send, press #.

f972 a921 a956

To reach the covering extension, press zero.

f973 a1073 a1074 a285 a920 a921 a955 a956

If you are finished, please hang up.

f974 a922

Not broadcast.

f975 a923

Not login announcement.

f977 a752

Name not found.

f978 a886

unknown

f979 a878 a880

After recording, press 1 again

f980 a878 a880

To record from here, press 1

f981 a974

Message not delivered because it was longer than the 8 minute AMIS message limit.

f983 a127 a76

To record and send voice mail messages, press 1. To get messages, press 2. To record or change the greeting heard by callers, press 3.

f984 a114 a120 a77

To record and send voice mail messages, press 1. To get messages, press 2. To administer attendant menu, press 3.

f985 all9 al25 al29

To record and send voice mail messages, press 1. To get messages, press 2.

f986 all5 al21 al59

To record and send voice mail messages, press 1. To get messages, press 2. To record or change the greetings heard by callers, press 3.

f987 al71 al72 a936 a937

Enter last name of the person

f1007 a812

To playback, press 2-3.

f1213 alO94

You are being prompted whether you want to paging service of the person you were calling.

f1214 alO98

You are being prompted to enter the caller PIN given to you by the person you were calling. This must be entered correctly before a reach or page attempt will be made. To leave a voice mail message instead, you may press one.

f1215 alO68

To try to reach

f1216 alO68

please press two now, or hold to leave a message.

f1217 alO69

was not available at the number you called. To try to reach

f1218 alO69

at an alternate number, please press two. To leave a voice mail message instead, press one. If you don't press anything, you will also be able to leave a message.

f1219 a1070 a1112

To review or change your reach options, press 7.

f1220 a1074 a1088

When paging is turned on, callers who are unable to contact you at your reach number will have the option to transfer to your paging service.

f1221 a1072 a1074

Your reach number

f1222 a1072 a1074

is turned on

f1223 a1072 a1074

is turned off

f1224 a1074 a1101

Call screening is turned on.

f1225 a1074 a1101

To change reach number information, press 1.

f1226 a1073 a1102

To change reach number, press 1.

f1227 a1073 a1074

To retrieve messages, press 2

f1228 a1073 a1074 a1102

To change call screening status, press 3.

f1229 a1074 a1077

When your reach number is turned on, incoming calls will attempt to be forwarded to it.

f1230 a1074 a1103

Paging is turned on.

f1231 a1074 a1103

Paging is turned off.

f1232 a1074 a1079

When call screening is turned on, callers who are trying to contact you will need to enter a personal identification number, or PIN, that you have given them, before the call will be forwarded to your reach number or allow the caller to page you.

f1233 a1074

To change your reach number, press 1.

f1234 a1075 a1077

To turn your present reach number on, press pound.

f1235 a1075 a1077

To turn your present reach number off, press zero pound.

f1236 a1075 a1077

To enter and turn-on a new reach number, enter that number, followed by the pound sign.

f1237 a1076

is not a valid telephone number or speed dial code.

f1238 a1077

You are updating the status of your reach number.

f239 a1077

Your present reach number is

f1240 a1077

The number you enter may be a valid telephone number, entered as though you were dialing from your office phone.

f1241 a1077

Or the number you enter may be a single-digit speed-dial code. The only valid speed-dial codes are the digits one through six. For help setting up or changing the speed-dial codes for this account, please contact your system administrator.

f1242 a1077

You do not presently have a reach number.

f243 a1078

To turn call screening on, press pound.

f1244 a1078

To turn call screening off, press zero pound.

f1245 a1079

You are being prompted to turn call screening on or off.

f246 a1108

You are being prompted to turn paging on or off.

f1247 a1080

in your caller PIN list is

f1248 a1080

To skip to the next PIN, press pound.

f1249 a1080

To delete this PIN, press star D.

f1250 a1080

To add a new PIN, press 1.

f1251 a1081

You are reviewing your list of caller personal identification numbers.

f1252 a1082

You are being prompted to add a caller personal identification number to your list.

f1253 a1081 a1082

When call screening is turned on, callers will need to enter one of these PIN's in order to contact you or have you paged.

f1254 a1082 a1087

Caller PIN's must contain between three and ten digits

f1255 a1082

and cannot contain the star or pound characters.

f1256 a1084

To add a caller PIN to your list, enter the PIN, followed by the pound sign.

f257 a1083

Your list already contains the maximum number of caller PIN's. You must delete an existing PIN before adding a new one.

f1258 a1085

Caller PIN

f1259 a1085

added to list

f1260 a1086

Duplicate entry.

f1261 a1086

The caller PIN you just entered is already contained in your list.

f1262 a1086

Please enter a different number.

f263 a1109

Please enter more digits, or pound sign.

f1264 a1087

Caller PIN's cannot contain more than

f1265 a1113

Caller PIN's cannot contain the star or pound characters.

f1266 a1074 a1102

To change paging status, press 5.

f267 a1090

Incoming external call for

f1268

Or, press star H for help.

f269 a1090

To speak with the calling party, please enter your password, followed by the pound sign.

f1270 a1091

This is an automatic system, trying to forward a call to

f1271 a1091

A password must be entered to complete the call.

f1272 a1091

Please enter the password, followed by the pound sign.

f1273 a1089

Please stay on the line.

f1274 a1093

Please enter your PIN now.

f1275 a1096

Please re-enter the PIN or press 1 to leave a message.

f1276 a1071

A reach attempt is about to be made.

f1277 a1071 a1089

This may take up to

f1278 a1067

We were unable to reach the paging service.

f1279 a1071 a1089

Please stay on the line as we try to reach

f1280 a1071

Or, press 1 to leave a message.

f1281 a1097

To transfer to the paging service

f1282 a1097

press two now or hold to leave a message.

f1283 a1090

Incoming call for

f1284 a1077 a620

In all cases, entering a star or pound as the first digit will result in the star or pound being outpulsed. A star entered as part of the digit string will be interpreted as a pause of one and a half seconds. If a longer pause is required, use multiple stars in a row.

f1285 a620

If you are programming a number to call a pager that requires a pound sign in or at the end of the digit string, press y to hear further help. Otherwise, press n to return to outcalling administration.

f1286 a1077 a622

Wherever a pound sign is required in the digit string, enter star pound. For pagers requiring a pound sign termination, end your digit string with star pound pound.

f1287 a1077 a622

If a pause is required before a pound sign, enter star star pound.

f1296 a1106

Your party was not available.

f1297 a1102

To change personal identification numbers, press 4.

f1298 a1110

System not administered for reach service.

f1299 a1107

To change call screening status, press 3.

f1300 a1074

To review or change the personal identification numbers used by callers when you have call screening turned on, press 4.

f1301 a1107

To change your BPCS password, press 5.

f1302 a1074

To hear this help message again, press star H.

f1303 a1104

Your list of caller personal identification numbers contains

f304 a1111

You are not authorized for reach service.

f1305 a1112

Please enter an outcalling option. To hear a list of options, press 0.

f1306 a1071

You will be put on hold while we dial the number where the person you were calling can be reached. If they answer, you will be connected with them.

f1307 a1092

No PINs active.

f1308 a1068

please press two now, followed by your PIN, or hold to leave a message.

f1309 a1114

For help, press *H again.

f1310

Up to 58 characters may be entered.

f1311 a1077

Up to 29 characters may be entered.

f1312 *a1077*

To repeat this help, press *H *H.

f1313 *a1115*

At the tone, please speak your name.

f1314

Then stay on the line.

f1315 *a1116*

Begin speaking.

f1316 *a1117*

The calling party hung up.

f1400 *a1127*

For English press star one.

f1401 *a1128*

Your primary greeting is in

f1402 *a1123 a1124*

To administer your primary greeting, press pound.

f1403 *all30*

Your secondary greeting is in

f1404 *a1121*

To administer this greeting, press 1.

f1405 *a1123 a1124*

To listen to your secondary greeting, press 0.

f1406 *a1123 a1124*

To listen to your primary greeting, press 0.

f1407 *a1123*

To record your primary greeting, press 1.

f1408 *a1122*

To administer this greeting, press 2.

f1409 *a1123*

To record your secondary greeting, press 1.

f1410 *a1123 a1124*

To administer your secondary greeting, press pound.

f1411 *a1124*

To delete your primary greeting, and use the system greeting press star D.

f1412 *a1124*

To delete your secondary greeting, and use the system greeting, press star D .

f1413 *a1125*

Your new primary greeting is now active.

f1414 *a1125*

Your new secondary greeting is now active.

f1415 *a1126*

Recording deleted.

f1416 *a1126*

Your primary greeting has not changed.

f1417 *a1126*

Your secondary greeting has not changed.

f1418 *a1133*

You are administering your primary greeting.

f1419 *a1133*

You are administering your secondary greeting.

f1420 a1132

Callers will hear the greeting and receive instructions in the primary language unless they press star-1, in which case they will hear the greeting and receive instructions in the secondary language.

f1430 a1134

The following message was restored.

f1431 a1135

No message to restore.

f1432 a1136

To undelete last deleted message, press star star U.

f1433 a1138

The return address for this message is not a valid extension.

f1434 a1139 a1140 a1141 a1160 a1161 a123 a126 a128 a168 a169 a170 a62 a85

To return to getting messages, press pound.

f1436 all43

English

f1437 all44

<CHIMES - LIKE DOOR BELL>

f1438 a1144

Call for

f1439 a1145

<BEEP - LIKE CONF BRIDGE TONE>

f1440 a1146

<BEEP - LIKE RECORD AT TONE TONE>

f1441 a1147

<BEEP BEEP BEEP TONE - FOR OUT OF SPACE TONE>

f1442 a1148

<BEEP - LIKE EOM TONE BUT SOFTER>

f1443 a570

Voice filesystem is out of space.

f1444 a570

Please contact the administrator.

f1445 a1150

Private, priority call from

f1446 a1150

Private call from

f1447 a1150

Private call from

f1448 a1151

Private, priority call received

f1449 a1151

Private call received

f1450 all51

Priority call received

f1451 all51

Call received

f1452 a622

A star entered as part of the digit string will be interpreted as a pause of one and a half seconds.

f1453 a1153

Your password will expire in

f1454 a1153

days.

f1455 *a1153*

Your password will expire within one day.

f1456 *a1154*

Your password has expired.

f1457 *a1155*

Old and new passwords cannot be the same.

f1458 *a1156*

Password cannot be changed within

f1459 *a1156*

days of last change.

f1460 *a1156*

day of last change.

f1461 *a1157 a1158*

You are getting your incoming messages.

f1462 *a1157 a1158*

To listen to the message, press 0.

f1463 *a1158 a192*

To reply to sender by voice mail, press 1, 7.

f1464 *all58 al92*

To forward with comment, press 1, 2.

f1465 *all58 al92*

To record a new message, press 1, 4.

f1466 *a1157*

To respond to or forward the message, press one.

f1467 a1162

The return address for this message is not a mailbox on this system.

f1468 a1163

The return address for this message is not a valid extension.

f1469 a1160 a1161

To reply to sender by voice mail, press 7.

f1470 a1164

No voice portion of message to playback.

f1471 a622

Up to 60 characters may be entered.