



## **Intuity™ Message Manager**

Installation, Administration, and  
Diagnostics for Intuity™ Systems

585-310-553  
Issue 1  
Comcode 107380669  
December 1994

#### Notice

Every effort was made to ensure that the information in this book was complete and accurate at the time of printing. However, information is subject to change.

#### Avaya Web Page

The world wide web home page for Avaya is:  
<http://www.avaya.com>

#### Preventing Toll Fraud

Toll Fraud is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or working on your company's behalf). Be aware that there is a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

#### Avaya Fraud Intervention

If you *suspect that you are being victimized* by toll fraud and you need technical assistance or support, call the Technical Service Center's Toll Fraud Intervention Hotline at 1.800.643.2353.

#### Providing Telecommunications Security

Telecommunications security of voice, data, and/or video communications is the prevention of any type of intrusion to, that is, either unauthorized or malicious access to or use of, your company's telecommunications equipment by some party.

Your company's "telecommunications equipment" includes both this Avaya product and any other voice/data/video equipment that could be accessed via this Avaya product (that is, "networked equipment").

An "outside party" is anyone who is not a corporate employee, agent, subcontractor, or working on your company's behalf. Whereas, a "malicious party" is Anyone, including someone who may be otherwise authorized, who accesses your telecommunications equipment with either malicious or mischievous intent.

Such intrusions may be either to/through synchronous (time-multiplexed and/or circuit-based) or asynchronous (character-, message-, or packet-based) equipment or interfaces for reasons of:

- Utilization (of capabilities special to the accessed equipment)
- Theft (such as, of intellectual property, financial assets, or toll-facility access)
- Eavesdropping (privacy invasions to humans)
- Mischief (troubling, but apparently innocuous, tampering)
- Harm (such as harmful tampering, data loss or alteration, regardless of motive or intent)

Be aware that there may be a risk of unauthorized intrusions associated with your system and/or its networked equipment. Also realize that, if such an intrusion should occur, it could result in a variety of losses to your company, including but not limited to, human/data privacy, intellectual property, material assets, financial resources, labor costs, and/or legal costs).

#### Your Responsibility for Your Company's Telecommunications Security

The final responsibility for securing both this system and its networked equipment rests with you – an Avaya customer's system administrator, your telecommunications peers, and your managers. Base the fulfillment of your responsibility on acquired knowledge and resources from a variety of sources including but not limited to:

- Installation documents
- System administration documents
- Security documents
- Hardware-/software-based security tools
- Shared information between you and your peers
- Telecommunications security experts

To prevent intrusions to your telecommunications equipment, you and your peers should carefully program and configure your:

- Avaya provided telecommunications systems and their interfaces
- Avaya provided software applications, as well as their underlying hardware/software platforms and interfaces
- Any other equipment networked to your Avaya products

#### Federal Communications Commission Statement

**Part 15: Class A Statement.** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interfer-

ence when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

#### Trademarks

See the preface of this document.

#### Obtaining Products

To learn more about Avaya products and to order products, contact Avaya Direct, the direct-market organization of Avaya Business Communications Systems. Access their web site at [www.lucentdirect.com](http://www.lucentdirect.com). Or call the following numbers: customers 1 800 451 2100, account executives 1 888 778 1880 (voice) or 1 888 778 1881 (fax).

#### European Union Declaration of Conformity

The "CE" mark affixed to the equipment means that it conforms to the referenced European Union (EU) Directives listed below:

EMC Directive 89/336/EEC

Low-Voltage Directive 73/23/EEC

For more information on standards compliance, contact your local distributor.

#### Disclaimer

Intellectual property related to this product (including trademarks) and registered to AT&T has been transferred or licensed to Avaya Inc.

Any reference within the text to AT&T should be interpreted as references to Avaya Inc.

Avaya Inc. formed as a result of Lucent's planned restructuring, designs builds and delivers voice, converged voice and data, customer relationship management, messaging, multi-service networking and structured cabling products and services. Avaya Labs is the research and development arm for the company.

---

# Contents

---

<b>Table of Contents</b>	i
--------------------------	---

---

<b>About This Document</b>	v
■ Purpose	v
■ Intended Audiences	v
■ Related Resources	v
■ Trademarks and Service Marks	vi
■ How to Comment on This Document	vi

---

<b>1</b>	<b>Overview and Planning</b>	1-1
	■ IMM Feature Capabilities	1-2
	■ IMM Feature Operation	1-3
	■ Intuity AUDIX Server Requirements	1-4
	■ PC Requirements	1-6
	■ LAN Requirements	1-6
	■ Planning for Installation	1-10

---

<b>2</b>	<b>Installation, Administration, and Test</b>	2-1
	■ Task 1: Configure and Install the LAN Interface Card	2-1
	■ Task 2 (Optional): Install 10BaseT Connection to Wall Field	2-3
	■ Task 3: Verify Feature Activation	2-4
	■ Task 4: Administer TCP/IP Networking	2-7
	■ Task 5: Reboot System and Attach LAN Cable	2-9
	■ Task 6: Test TCP/IP Connection	2-12
	Troubleshooting Guidelines for IMM	2-15
	■ Task 7: Administer IMM Options on AUDIX	2-17
	Task 7A: Set System Parameters for IMM	2-17
	Task 7B: Check Access for IMM	2-19

---

---

## Contents

- Task 8: IMM Software Installation and Tests 2-21
- Isolating Faults 2-22

---

<b>IN</b>	<b>Index</b>	IN-1
-----------	--------------	------

---

## About This Document

---

### **Purpose**

---

*Intuity Message Manager Installation, Administration, and Diagnostics for Intuity Systems* describes how an Intuity™ platform is set up with a Local Area Network (LAN) and client personal computers (PCs) to allow the Intuity™ Message Manager (IMM) application to work on the system.

### **Intended Audiences**

---

This document is intended for system administrators, on-site technicians, and remote services personnel supporting the Intuity system and IMM. It is assumed that the primary readers of this book are familiar with basic system administration and troubleshooting techniques. They will work with the customer's LAN administrator who is responsible for setting up the LAN and making connections between the Intuity platform and the IMM users' PCs.

### **Related Resources**

---

The following documents provide information relating to the information in this document.

- *Intuity MAP/5 Hardware Installation*, 585-310-146
- *Intuity MAP/40 Hardware Installation*, 585-310-138
- *Intuity MAP/100 Hardware Installation*, 585-310-139
- *Intuity Software Installation*, 585-310-140
- *Intuity Platform Administration and Maintenance*, 585-310-534

- *Intuity New System Planning*, 585-310-603
- *Intuity System Description*, 585-310-211
- *Intuity Message Manager User's Guide*, 585-310-725

The *Intuity Documentation Guide*, 585-310-540, describes all the books included in the Intuity document set.

## **Trademarks and Service Marks**

The following trademarked products are mentioned in this book:

- AUDIX<sup>®</sup> is a registered trademark of AT&T.
- DEFINITY<sup>®</sup> is a registered trademark of AT&T.
- Intuity<sup>™</sup> is a trademark of AT&T.
- MS-DOS<sup>®</sup> is a registered trademark of Microsoft Corporation.
- WINDOWS<sup>™</sup> is a trademark of Microsoft Corporation.

## **How to Comment on This Document**

A reader comment card is behind the title page of this book. While we have tried to make this book fit your needs, we are interested in your suggestions for improving it and urge you to complete and return a reader comment card.

If the comment card has been removed from this book, please send your comments to:

AT&T  
Product Documentation Development Department  
Room 22-2C11  
11900 North Pecos Street  
Denver, Colorado 80234

---

## Overview and Planning

# 1

---

Intuity™ Message Manager (IMM) allows an AUDIX subscriber to use a personal computer (PC) to access and manipulate information in his or her AUDIX mailbox. Access is gained over a Local Area Network (LAN). IMM employs a standard Microsoft Windows interface, allowing use of icons, pulldown menus, a toolbar, and other Windows elements.

IMM requires three distinct components to operate:

- AUDIX server software—Purchasable with the Intuity AUDIX System as an IMM Right-to-Use feature package
- IMM client software diskettes—Separately purchasable and installed either on each subscriber's PC or on a LAN server
- LAN—Wholly owned and maintained by the customer. It must meet certain requirements for IMM to work.

---

## **IMM Feature Capabilities**

---

IMM provides many message-processing capabilities, which interact with other Intuity AUDIX features as follows:

- *Address-by-Name*: Subscribers can use name addressing when using IMM.
- *Delivery Scheduling*: Subscribers can schedule delivery of messages with IMM.
- *Directory*: Subscribers can access the AUDIX directory using IMM.
- *Exit AUDIX*: Subscribers can exit the AUDIX system from IMM if IMM was used to log into the AUDIX system.
- *Mailing List*: Subscribers can set up their mailing lists using IMM.
- *Multilingual*: Subscribers can set up their Multilingual greetings using IMM.
- *Multiple Personal Greetings*: Subscribers can set up their Multiple Personal Greetings administration using IMM.
- *Outcalling*: Subscribers can set up Outcalling administration using IMM. Also, the IMM audio interface uses the Outcalling feature to complete a call to a subscriber's telephone. The number of Outcalling ports may need to be increased to accommodate IMM.
- *Voice Mail*: Subscribers can record and address voice mail messages with IMM.
- *Voice Mailbox*: Subscribers can view up to 16 message headers on their IMM screen and play selected messages. They also can reply to and forward messages.

## IMM Feature Operation

The IMM feature operates under the following limits:

**Table 1-1. IMM Use on an Intuity System**

LAN Connections to Intuity AUDIX	Limit	User Activities During Sessions
<p><i>Administered Subscribers</i></p> <p>Those with IMM software loaded on their PCs and administered to use Intuity AUDIX</p>	<p>Available PCs</p>	<p>None</p>
<p><i>TCP/IP Sessions</i></p> <p>When administered subscribers are connected to the system, that is, that time when an IMM icon shows on the subscriber's Windows screen or the subscriber is logged in</p>	<p>0 to 500</p>	<p>Subscribers receive notification of new messages arriving in their AUDIX mailbox or are involved in a login session</p>
<p><i>Login Sessions</i></p> <p>That time when administered subscribers are logged into Intuity AUDIX and accessing and manipulating the IMM screens</p>	<p>0 to 32</p>	<ul style="list-style-type: none"> <li>—Message Creation</li> <li>—Personal Greeting Administration</li> <li>—Notification Administration</li> <li>—List Administration</li> <li>—Directory Access</li> <li>—Forward Message</li> <li>—Replay to Sender</li> <li>—Call Sender</li> <li>—Empty Wastebasket</li> <li>—Message movement between folders</li> <li>—Server data viewing and administration</li> <li>—Refresh message header contents</li> </ul>
<p><i>Audio Sessions</i></p> <p>That time when IMM requires a voice port</p>	<p>0 to 16 ports</p>	<ul style="list-style-type: none"> <li>—Message Playback</li> <li>—Recording and Playback of Personal Greetings</li> <li>—Message Creation</li> <li>—Call Sender</li> <li>—Play/record name</li> <li>—Originate call via IMM</li> </ul>

---


## **Intuity AUDIX Server Requirements**

When a client purchases IMM, the Intuity MAP/5, MAP/40, or MAP/100 platform is required to have a LAN interface card. This card provides Transmission Control Protocol/Internet Protocol (TCP/IP) server connectivity into the LAN.

TCP/IP is a commonly-used set of protocols which allows a process of one machine to send data to a process on another machine over a LAN. Using IEEE 802.3 network standards, TCP/IP supports multiple operating systems and machine architectures.

Figure 1-1 shows an SMC Elite 16C Ultra Ethernet card which is used for the LAN interface. Included with the card in the shipping box is the following:

- *EtherCard Elite Ultra Adapters User Guide*
- SMC Ethernet STREAMS Device Driver Package

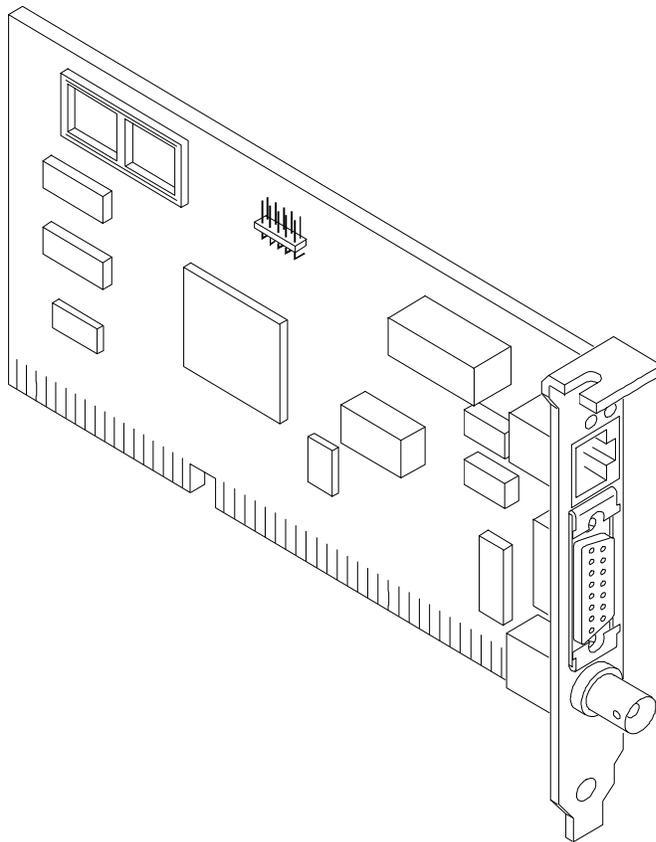


---

**Figure 1-1. The Ethernet LAN Interface Card**

Only one (1) card can be installed in a MAP/5, MAP/40, or MAP/100 platform.  
The required slot positions are:

- MAP/5—Slot 2 (The second slot is obstructed by SIMM modules. Only a half-length card can fit into this slot. The LAN interface card is half-length.)
- MAP/40—Highest available slot reserved for optional feature cards. These slots include slots 1 through 7, or slot 11.
- MAP/100—Slot 15

The LAN card requires one jumper, connected to W1. The default setting is 1, which sets the card for a “soft” configuration. Figure 1-2 illustrates the placement of the jumper on W1.

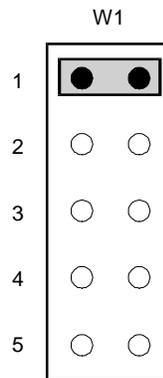

---

**Figure 1-2. LAN Card Software Programmable Jumper Setting**

---

## PC Requirements

---

A client PC requires the following minimum hardware and software to accommodate IMM.

- A 386SX-25 MHZ with four Mbytes of random access memory and 2½ Mbytes of available disk storage (a PC with a 486 or higher processor is strongly recommended)
- A VGA monitor (color or monochrome)
- A mouse that is supported by Microsoft Windows (optional, but strongly recommended)
- Microsoft Windows version 3.1 or higher, or Windows for Work Groups 3.11 or higher
- Microsoft MS-DOS version 5.0 or higher
- WINSOCK.DLL version 1.1 access to TCP/IP protocol, provided by either:
  - A TCP/IP protocol stack in the PC
  - A Netware Loadable Module (NLM) located in the LAN server, accessing each PC whenever a session is established\*

## LAN Requirements

---


PC connectivity to the AUDIX server can be provided by:

- Twisted-pair wiring, either:
  - 10BaseT
  - without link integrity (See Figure 1-3)
- RG-58 50-ohm thinwire coaxial cabling (10Base2 BNC) (See Figure 1-4)
- RG-8 or RG-11 50-ohm thickwire coaxial cabling (10Base5 using an Auxiliary Unit Interface [AUI]. The AUI is also called a transceiver or patch cable.) (See Figure 1-5)

As shown in these figures, AT&T is responsible for the installation and upkeep of equipment up to the demarcation point. The customer is responsible for the LAN including the file server and other associated equipment, and the PCs.

---

\* The Network Loadable Module can be used in an approved *Novell* network operating system.

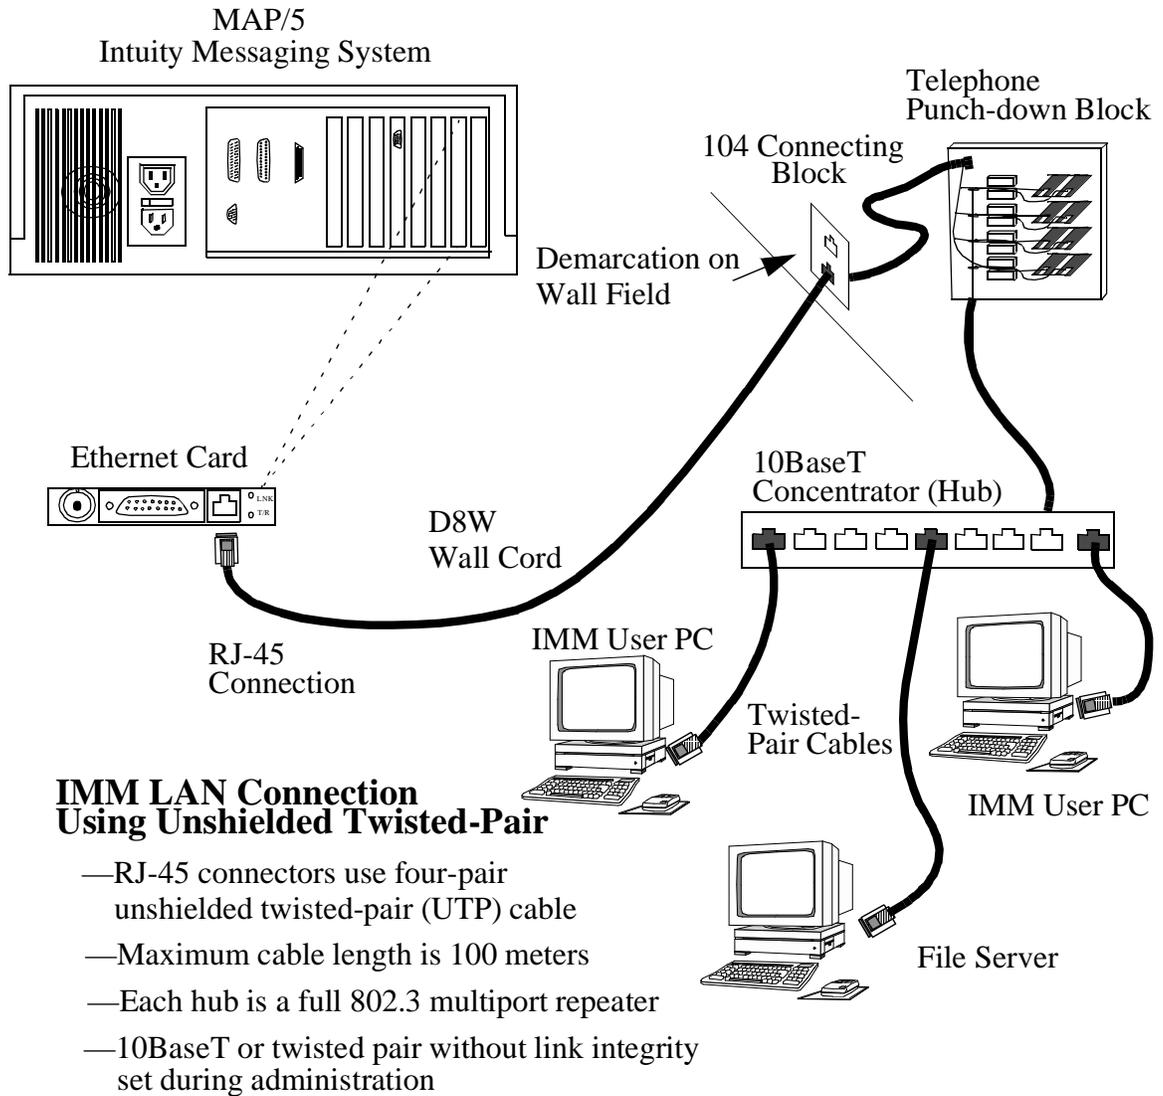

**Figure 1-3. LAN Using Unshielded Twisted-Pair (UTP) Cable**

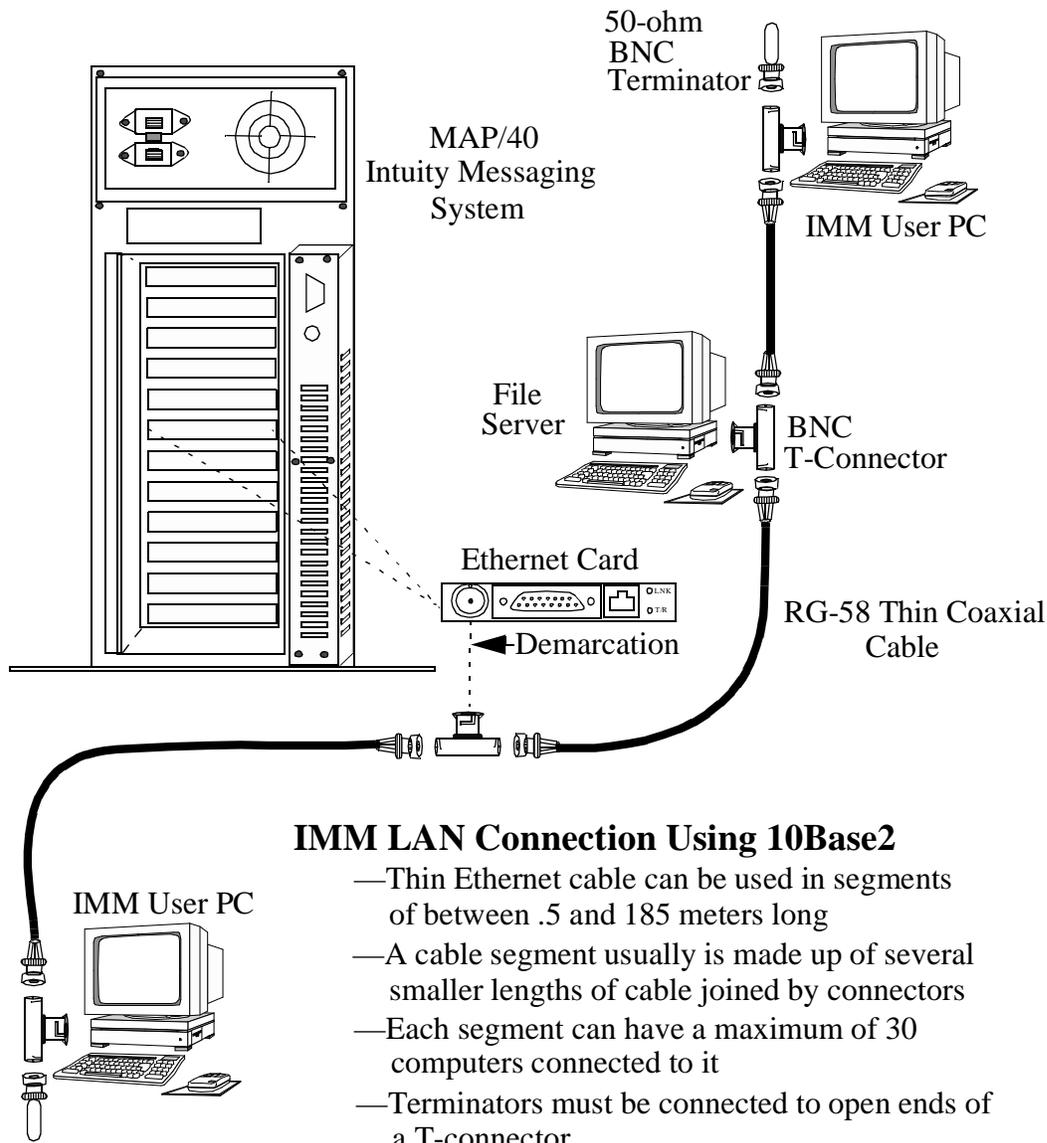


Figure 1-4. LAN Using Thin Coaxial Cable

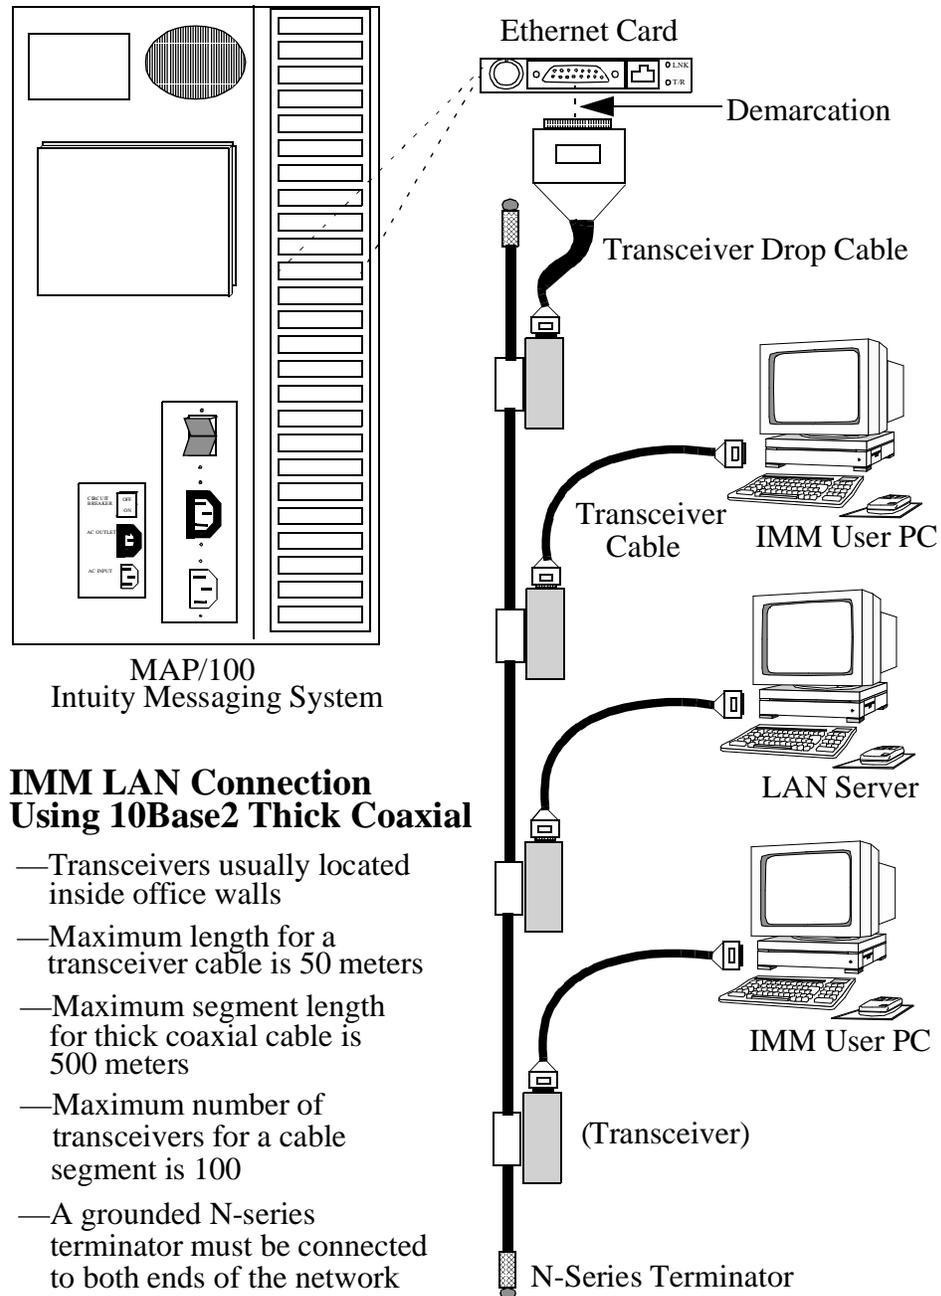


Figure 1-5. LAN Using Thick Coaxial Cable

## Planning for Installation

The following worksheet, *IMM Parameters and Installation Worksheet*, outlines the requirements that must be considered when ordering and successfully installing and administering IMM. Use this as a guide and checkoff list during installation and administration. These tasks are outlined in Chapter 2.

### IMM Parameters and Installation Worksheet

**Customer:** \_\_\_\_\_

**Phone Number:** \_\_\_\_\_

**Prepared by:** \_\_\_\_\_

**Date:** \_\_\_\_\_

**Phone Number of Remote Maintenance Center:** \_\_\_\_\_

**LAN System Administrator:** \_\_\_\_\_

**Phone Number:** \_\_\_\_\_

**Special Instructions:** \_\_\_\_\_

\_\_\_\_\_

Requirement	Default	Options
<i>Intuity Platform</i>		
Installation of SMC Elite 16C Ultra Ethernet card inserted into proper slot on platform  — <b>MAP/5:</b> Slot 2  — <b>MAP/40:</b> Highest available slot reserved for optional feature cards. Includes slots 1 through 7, or slot 11.  — <b>MAP/100:</b> Slot 15  <b>Jumper connection for W1 on circuit card</b>  <b>Cable type connected to circuit card</b>	1	—RJ-45  —BNC T-connector  —Transceiver drop cable

Requirement	Default	Options
<p><b>Planned Number of IMM Users:</b> _____</p> <p>Software is purchased and installed in one of the two following ways:</p> <p>—<b>Client License</b> (One copy per PC)</p> <p>One or more packages can be ordered. Each package contains five copies each of the software, tutorial, and user guide.</p> <p>How many?_____</p> <p>—<b>Site License</b> (One copy on the LAN)</p> <p>One package is ordered. It contains two copies each of the software, user guide, and tutorial, and one copy of the license agreement appropriate to the number of users at the site.</p> <p><b>Expected IMM LAN Traffic</b></p> <p>—Each packet = 100-200 bytes            —Each voice packet = 2,000 bytes            —Each connection with 5-minute session timeout interval generates 50 packets/hour            —Each active session generates 2.1 packets/second</p> <p>Choose category of busy hour usage:</p> <p>Light_____ (93 packets/user)            Medium_____ (128 packets/user)            Heavy_____ (163 packets/user)            V Heavy_____ (198 packets/user)            E Heavy_____ (233 packets/user)</p> <p>Total packets during busy hour: _____            (Category x number/users)</p>		

<b>Requirement</b>	<b>Default</b>	<b>Options</b>
<i>Intuity Administration</i>		
<b>Feature Options:</b> (Set prior to delivery)		
—Max Number of IMAPI Sessions	32	N/A
—TCP/IP Administration	ON	N/A
<b>Ethernet Board Configuration:</b>		<ul style="list-style-type: none"> <li>—10Base-T</li> <li>—AUI</li> <li>—BNC</li> <li>—Twisted Pair No Link Integrity</li> </ul>
<b>Will the LAN manager:</b>		
Preadminister the LAN? _____		
Administer it during installation? _____		

Requirement	Default	Options
<p><b>TCP/IP Administration:</b></p> <p>—UNIX Machine Name (Assigned name up to eight letters)</p> <p>_____</p>		
<p>—IP Address (Assigned Number)</p> <p>_____._____._____._____</p>		
<p>NOTE: LAN administrator must add this number to the network domain name server prior to installation. This allows name addressing for the AUDIX server.</p>		
<p>—Subnet Mask (Assigned Number)</p> <p>_____._____._____._____</p>	<p>255.255.0.0 (Does not show on screen)</p>	
<p>—Default Gateway IP Address (Assigned Number)</p> <p>_____._____._____._____</p>		
<p>—Test IP Address</p> <p>_____._____._____._____</p>	<p>None</p>	
<p>—Alternate Test IP Address</p> <p>_____._____._____._____</p>	<p>None</p>	

<b>Requirement</b>	<b>Default</b>	<b>Options</b>
<i>AUDIX Administration</i>		
<b>System-parameters imapi-options:</b>		
—Maximum Number of ENABLED IMAPI Sessions	32	
—Enable Check New Messages	n (No)	y (Yes)
—Enable Deliver CA Message	n	y
—Enable Voice File Transfer	n	
—IMAPI Session Timeout	5	10 through 60, in five minute increments
<b>Class of Service:</b>		
—IMAPI Access?	n	y
—IMAPI Voice File Transfer?	n	y
<b>Subscriber:</b>		
—IMAPI Access?	n	y
—IMAPI Voice File Transfer?	n	y

This chapter provides information to install, administer, and test the hardware and software that will allow an Intuity MAP/5, MAP/40, or MAP/100 to work with Intuity Message Manager (IMM).

- "Task 1: Configure and Install the LAN Interface Card"
- "Task 2 (Optional): Install 10BaseT Connection to Wall Field"
- "Task 3: Verify Feature Activation"
- "Task 4: Administer TCP/IP Networking"
- "Task 5: Reboot System and Attach LAN Cable"
- "Task 6: Test TCP/IP Connection"
- "Task 7: Administer IMM Options on AUDIX"
- "Task 8: IMM Software Installation and Tests"

It also discusses the escalation procedures an IMM user would use to solve a problem with IMM.

### **Task 1: Configure and Install the LAN Interface Card**

---

**⇒ NOTE:**

The driver on the LAN interface card has been configured prior to shipment. Before installing the card, make certain the jumper W1 is set to position 1 - SOFT CONFIGURATION.

1. Install the LAN interface card using the detailed circuit card installation procedures for the MAP/5, MAP/40, or MAP/100. These instructions are found in the following manuals:

- 
- *Intuity MAP/5 Hardware Installation, 585-310-146*
  - *Intuity MAP/40 Hardware Installation, 585-310-138*
  - *Intuity MAP/100 Hardware Installation, 585-310-139*

The following substeps outline the general procedure used to install a LAN interface card into a MAP/100. This procedure is similar to the steps performed when installing the card into a MAP/5 or a MAP/40, except the requirements to open and close each specific platform.



**WARNING:**

*Observe proper electrostatic discharge precautions when handling computer components. Wear a ground wrist strap against your bare skin and connect to an earth ground.*

- a. Ensure that the LAN interface card appears to be in usable condition and was not damaged during shipment.
- b. Perform a “soft” shutdown if the system has been operating as a fully-loaded system.
- c. Turn *off* both the front panel power switch and the circuit breaker in the rear and remove the incoming line. Also disconnect keyboard and video cords.
- d. Tag the power plugs with a note indicating that nobody other than yourself should reconnect power to the equipment.
- e. Remove the dress covers and open the card cage.
- f. Remove the filler for the appropriate slot and save the retaining screw.
- g. Align the circuit card faceplate and the edge of the circuit card with the circuit card guide and the backplane slot position. The card is now next to the expansion slot. Move the card until it touches the slot.
- h. Place your thumbs flat on the edge of the card over the connector and push it into the backplane slot. Firmly push on the card until it is completely seated.
- i. Reinstall any internal and/or external cable assemblies that were previously removed, making sure the cable connector pin 1 indicator is mated to the circuit card or pin header.
- j. Replace the retaining screw by placing it through the card faceplate opening that is similar to the cover plate previously removed.
- k. Close the card cage and/or peripheral bay access door, and replace the dress covers if you have completed work inside the platform.
- l. Power up the Intuity platform.

## Task 2 (Optional): Install 10BaseT Connection to Wall Field

---

The customer must provide an RJ-45 connection into the LAN within 25 feet of the Intuity platform. This could be an RJ-45 drop cord or a 104-type outlet. If an outlet isn't within reach, AT&T will provide a 104A connecting block and a 10BaseT twisted pair cable to make the connection between the wall and the Intuity platform. Set up as follows:

1. On the 104A mounting block, unfasten the bolt on the top cover with a flathead screwdriver and lift off the cover.
2. Check whether or not eight wires are hard-connected across the two mounting blocks inside the 104A, as shown in Figure 2-1. If the blocks are not connected:

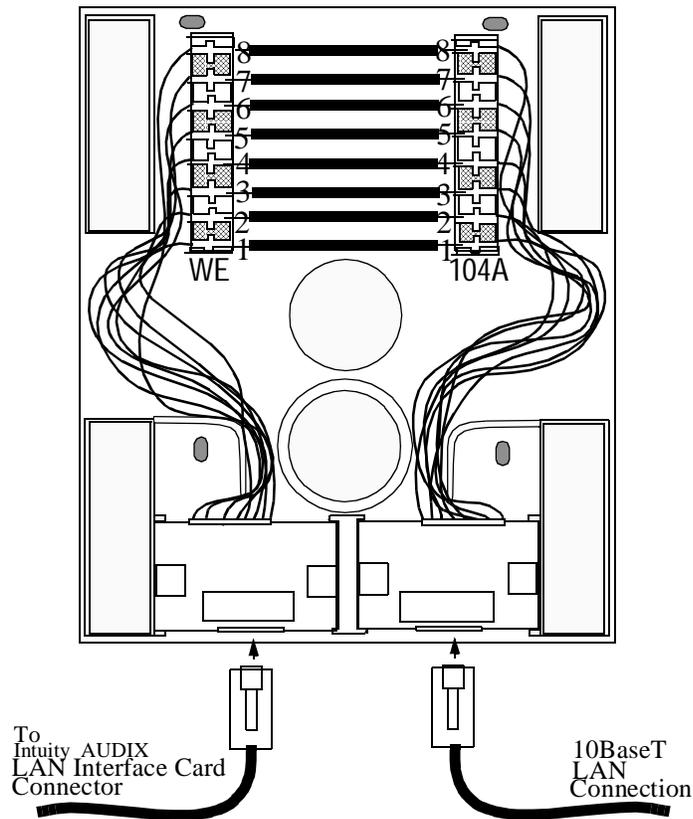


Figure 2-1. 104A Mounting Block

---

- 
- a. Remove the four protector caps that cover the tops of the mounting blocks.
  - b. Strip the ends of eight proper lengths of wire of insulation.
  - c. Using a punch-down tool, press the ends of these eight wires into matching *WE* and *104A* block connectors (numbered 1 to 8).
  - d. Press the four protector caps back into place on the mounting blocks.
3. Using four screws, mount the 104A on the wall field within 25 feet of the Intuity platform.
  4. Attach and tighten the cover.
  5. Plug the LAN drop cable and the supplied twisted-pair cable into the 104A.



**CAUTION:**

*Do NOT connect the twisted-pair cable into the LAN card until after the system has been powered up and TCP/IP administration has been completed. This is a preventative measure to keep from disrupting the customer's LAN.*

### **Task 3: Verify Feature Activation**

---

1. If you are not already logged onto the Intuity system, press **(ENTER)**. The system responds:


```
The systems's name is Intuity
Welcome to USL UNIX system V Release 4.2 Version
Console Login:
```

It may be necessary to press **(ENTER)** more than once to obtain a console login prompt.


## Task 3: Verify Feature Activation

---

2. Log on as **craft**. The system displays the *INTUITY (TM) Administration* menu.

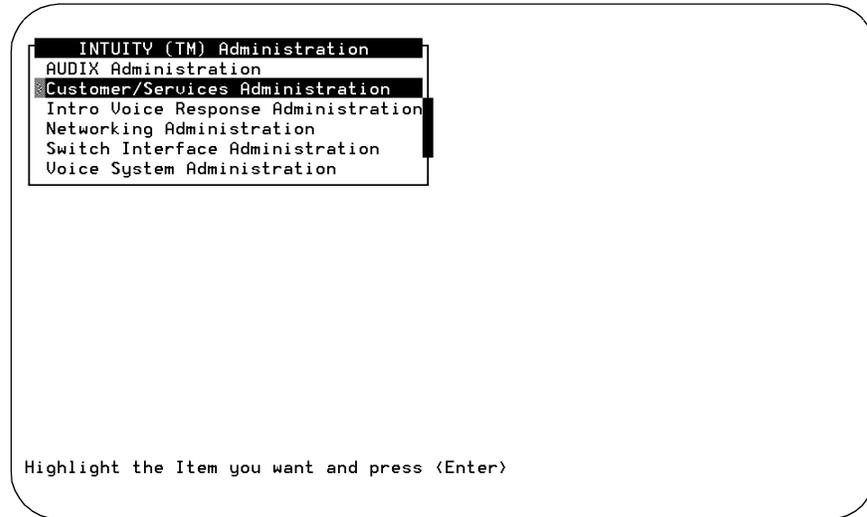

3. Using the **▼** (scroll down) key or the **TAB** key and pressing **ENTER**, go through the following path.

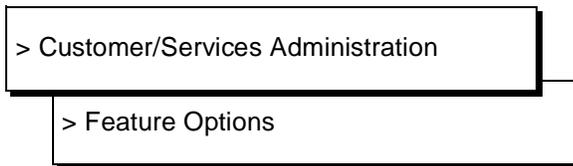

The system responds with the *Feature Options* screen. Screen configuration may differ slightly depending on the features activated on individual Intuity systems.

Feature Options (Read Only)		
Feature Option	Current	Maximum
AMIS Analog Networking	OFF	N/A
High speed digital ports	0	12
Low speed digital ports	0	12
Max Number of IMAPI Sessions	32	32
Multilingual	ON	N/A
SCSI Disk Mirroring	OFF	N/A
TCP/IP Administration	ON	N/A
hours_of_speech	12	16
voice_ports	12	12

4. Verify that the Max Number of IMAPI Sessions field has been administered to **32**. For this field, **0** (zero) is “off” and **32** is “on.”
5. Verify that the TCP/IP Administration field is set to **on**.

**⇒ NOTE:**

If these fields are different, contact your remote maintenance center. They will make the changes. After the changes are made, ensure that the system is rebooted.

6. Press **CANCEL** (F6) until you reach the INTUITY (TM) Administration screen.
7. Contact the LAN or System Administrator.


Customer LANs differ. Some LANs may be pre-administered prior to your arrival on site. Other LANs require that the administration for a new machine be administered around the time of installation because an open connection may cause the LAN to fail.

Refer to the *IMM Parameters and Installation Information* worksheet from your project manager. It will indicate if you must ask the LAN administrator to administer the LAN, or if the LAN has already been administered.

## Task 4: Administer TCP/IP Networking


---

1. Starting at the INTUITY (TM) Administration menu, go through the following path:

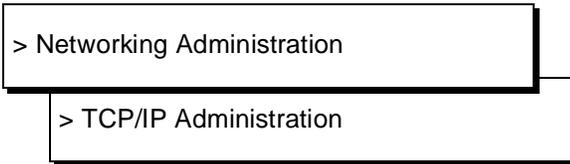

The system responds with the *TCP/IP Administration* screen. Enter those values listed on the *IMM Parameters and Installation Information* worksheet.

Use the UP and/or DOWN arrow keys or the (TAB) key to move through the fields.

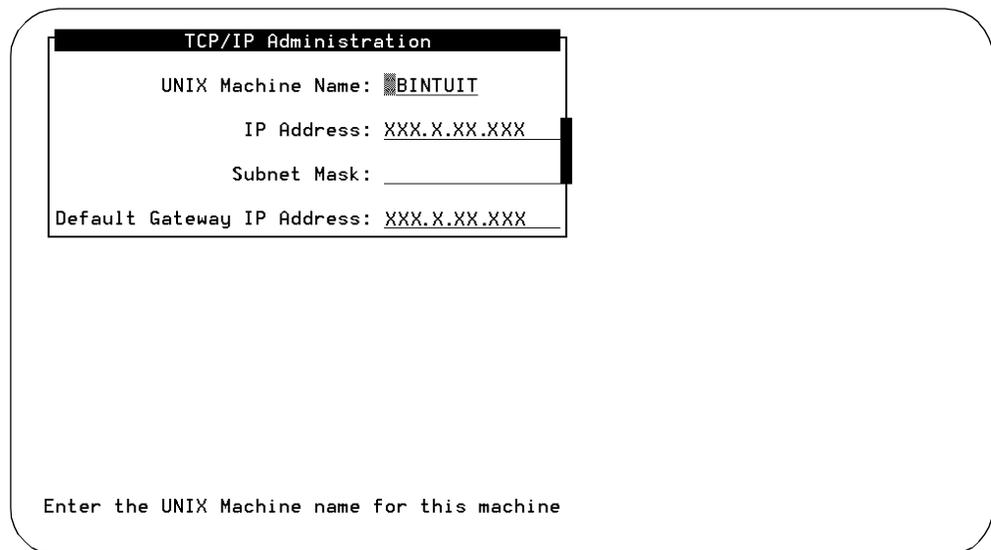

2. Enter the **UNIX machine name**.

The UNIX name may be up to eight characters in length, and consist of letters and/or numbers. This is a case-sensitive field: capital letters must be entered as capitals, and lower-case letters as lower case.

If you are installing digital networking, the UNIX name should be the same as the local machine name specified on the Local Machine Administration screen.

3. Enter the **IP (Internet protocol) Address**. This is the Intuity system's address.

4. Enter the **Subnet Mask**.

The subnet mask is used to determine which bytes of the IP address specify the network and host addresses. This is an optional field. If there is no entry for this field on your worksheet, leave the field blank. The system will automatically use a default of 255.255.0.0.

5. Enter the **Default Gateway IP Address**.

The default gateway IP address is the address of the gateway router that serves to connect to addresses on other LANs. This field is left blank if the Intuity system will only be communicating with other machines on the same LAN.

6. Press **(CHG-KEYS)** (F8) to change the identity of the soft keys.


7. Press **(BRD CNFG)** (F4) to display the Ethernet Board Configuration screen.

The system responds with the Ethernet Board Configuration screen.

The image shows two terminal-style screenshots within a rounded rectangular frame. The top screenshot is titled "TCP/IP Administration" and contains the following text: "UNIX Machine Name: cbintuit", "IP Address: XXX.X.XX.XXX", "Subnet Mask: \_\_\_\_\_", and "Default Gateway IP Address: XXX.X.XX.XXX". The bottom screenshot is titled "Ethernet Board Configuration" and contains the text "Network Interface Type: \_\_\_\_\_". Below these screenshots, the text "Enter the Interface Type, use <CHOICES> for options" is displayed.

8. Press **(CHOICES)** (F2) to display a list of the network interface types.

The system responds with the *Network Interface Types* screen.

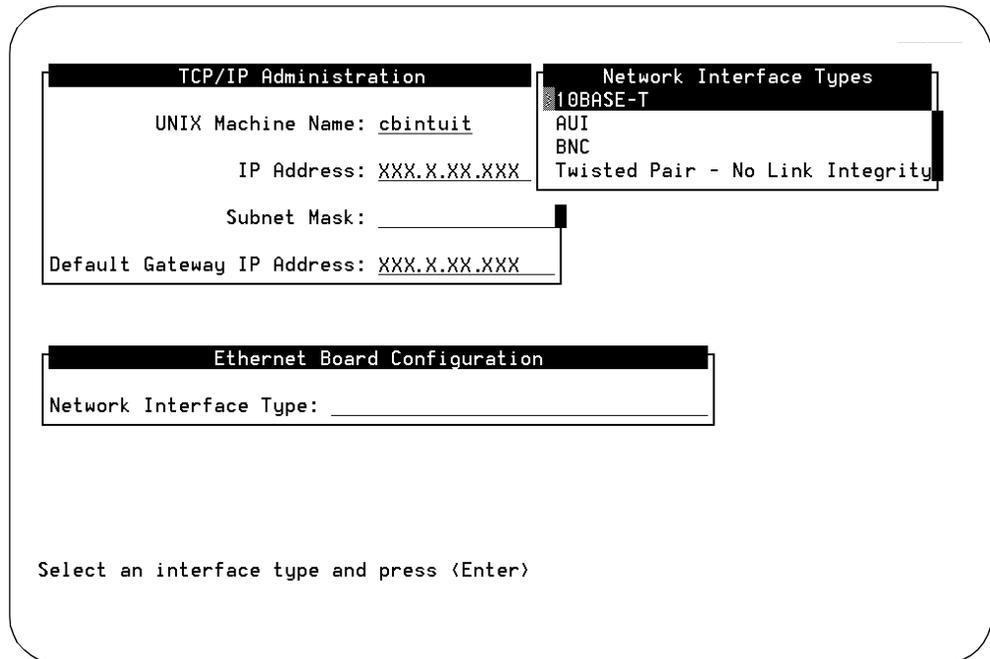

9. Highlight and enter the **network interface type** to be used on this system. Your selection is displayed in the *Network Interface Type* field in the *Ethernet Board Configuration* screen.
10. Press **SAVE** (F3) to save the Ethernet Board configuration.
11. Press **SAVE** (F3) to save the TCP/IP administration values.
12. Press **CANCEL** (F6) twice to return to the INTUITY (TM) Administration menu.

## Task 5: Reboot System and Attach LAN Cable

---

Rebooting at this point must be done to apply the newly entered network information into the system.

1. Starting at the INTUITY (TM) Administration menu, take the following path:

---

> Customer/Services Administration

>System Management

>System Control

>Shutdown Voice System

The path to the shutdown command is shown below.

The screenshot shows a menu system with three windows. The first window, titled "Customer/Services Administration", lists: Alarm Management, Backup/Restore, Database Audits, Diagnostics, Feature Options, Log Administration, >System Management, and System Verification. The second window, titled "System Management", lists: Disk Management, >System Control, and UNIX Management. The third window, titled "System Control", lists: Shutdown Voice System, Start Voice System, and Stop Voice System. Below the windows, the text reads: "Highlight the item you want and press <Enter>".

The system responds:

Enter y to continue, no to quit

2. Enter **y** to continue the shutdown.

The system responds:

Shutdown started. Month date time year

INIT: New run level: 0

The system is coming down. Please wait

The system is down.

Press CTRL-ALT-DEL to reboot your computer.

3. If the LAN cable has not been connected to the back of the ethernet board, *continue with Step 4.*

If the LAN cable has already been connected, *skip to Step 8.*

4. Press the circuit breaker on the Intuity platform to OFF to turn off system power.
5. Attach the LAN cable to the proper connector on the Ethernet board (See the figures in Chapter 1).
6. Press the circuit breaker on the Intuity system to ON to turn on system power.
7. Press the reset button or **CONTROL-ALT-DEL** to reboot the system.

The system responds in two stages. The first, readying the system, displays copyright and address information, and rebuilds the UNIX kernel.



**CAUTION:**

*Do not strike ENTER or Esc. during this process: the system will automatically proceed to the next step.*

The system then repeats the copyright and address information. This stage ends with the message:

```
The system is ready.
```

After this message, the system presents a console login, followed by the message:

```
Automatically starting the voice system.
```

This message signals the start of the second stage, the stage that starts the voice system. This stage includes auditing a database, initializing AUDIX, and running file checks. The last two messages in this series are:

```
Startup of the Voice System is complete.
```

```
Saving output to trace process.
```

Saving the output to trace process takes approximately a minute.

8. Press **ENTER** to obtain a console login prompt.

The system responds:


```
The systems's name is Intuity
Welcome to USL UNIX system V Release 4.2 Version
Console Login:
```

It may be necessary to press **ENTER** more than once to obtain the login prompt.

---

## Task 6: Test TCP/IP Connection

1. Log on as **craft**.
2. Press **(ENTER)** to accept the default of AT386 as your terminal (TERM) type.
3. Starting at the INTUITY (TM) Administration menu, go through the following path:

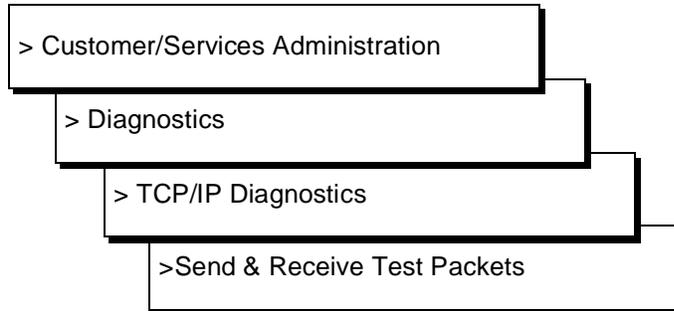

The system responds with the *Send & Receive Test Packets From* screen.

```
TCP/IP Diagnostics
View Packet Statistics
>Send & Receive Test Packets


Send & Receive Test Packets From
IP Address: _____

Enter the IP Address of the machine to test with
```

4. Referring to the worksheet, type in the **Internal Protocol (IP) Address**. This is the Intuity system's own address.
5. Press **(SAVE)** (F3) to start the test.

The system responds by displaying the word “working” and a flashing cursor at the upper right-hand corner of the screen. While the cursor flashes, the system is performing the test.

When the system has finished the test, it displays the *Test Packets Results* screen. (The test results displayed on the following screen are sample test results.)

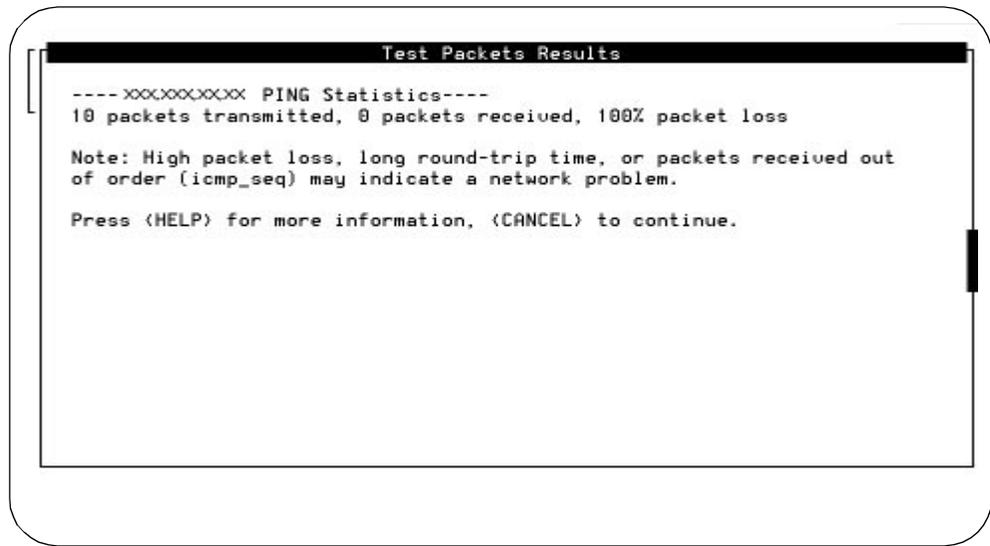

6. Examine the PING Statistics:

The packet loss field, which does not access the LAN, will be either 0% or 100%.

If 0% packet loss is reported, the test is successful. Continue with **Step 7**.

If 100% packet loss is reported, the test failed.


- a. Go back to the Send & Receive Test Packets From screen by pressing **CANCEL** (F6). Verify that you entered the correct IP Address for the Intuity system.
- b. If it matches the address on the worksheet, press **CANCEL** (F6) continuously until you get back to the INTUITY (TM) Administration menu.
- c. Go to the TCP/IP Administration screen. Check that the IP Address matches that on your worksheet.
- d. If they do not match, re-administer the TCP/IP Administration screen and reboot the system.
- e. Send and receive test packets again. If the test fails this time, contact your remote maintenance center.
- f. After the problem has been resolved, *repeat substeps a through e*.

g. If the test passes, go back to the Send & Receive Test Packets From screen.

7. Type in the **IP Address**, using the test address listed at the bottom of the worksheet.

8. Press **(SAVE)** (F3) to start the test.

The system responds by displaying the word **working** and a flashing cursor at the upper right-hand corner of the screen. When the system has finished the test, the *Test Packets Results* screen is displayed.

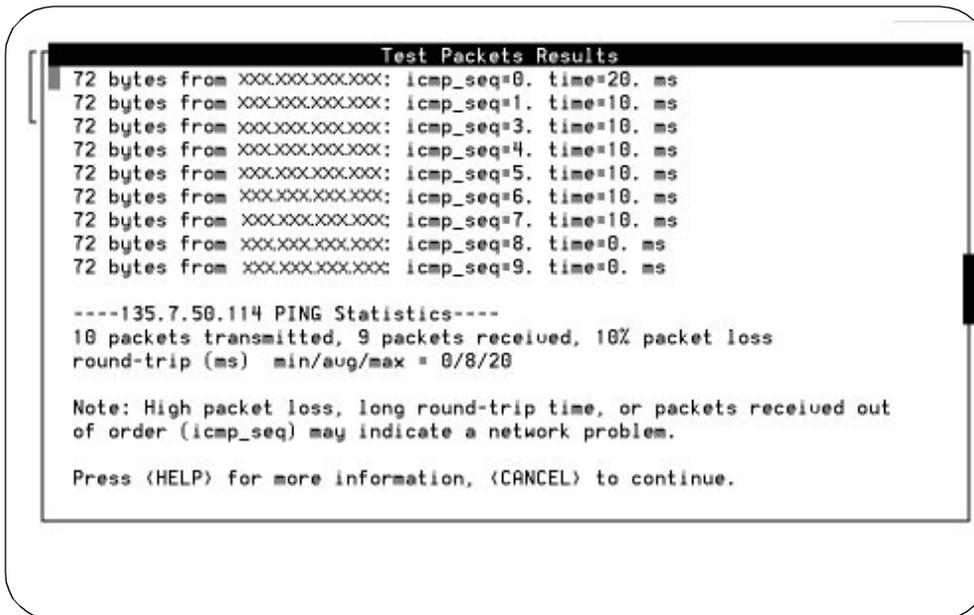

```
Test Packets Results
72 bytes from xxxxxxxxxxxx: icmp_seq=0. time=20. ms
72 bytes from xxxxxxxxxxxx: icmp_seq=1. time=10. ms
72 bytes from xxxxxxxxxxxx: icmp_seq=3. time=10. ms
72 bytes from xxxxxxxxxxxx: icmp_seq=4. time=10. ms
72 bytes from xxxxxxxxxxxx: icmp_seq=5. time=10. ms
72 bytes from xxxxxxxxxxxx: icmp_seq=6. time=10. ms
72 bytes from xxxxxxxxxxxx: icmp_seq=7. time=10. ms
72 bytes from xxxxxxxxxxxx: icmp_seq=8. time=0. ms
72 bytes from xxxxxxxxxxxx: icmp_seq=9. time=0. ms

----135.7.50.114 PING Statistics----
10 packets transmitted, 9 packets received, 10% packet loss
round-trip (ms) min/avg/max = 0/8/20

Note: High packet loss, long round-trip time, or packets received out
of order (icmp_seq) may indicate a network problem.

Press <HELP> for more information, <CANCEL> to continue.
```

9. Examine the packets-out-of-sequence (*icmp\_seq=*) field. If one or two packets are out-of-sequence, the condition is acceptable to the Intuity system.

However, if more than two packets are out-of-sequence (for example, 0, 2, 5, 3, 1...), inform the LAN or system administrator. Out-of-sequence packets may indicate network congestion or misrouting.

10. Examine the Ping Statistics. The number of “lost” packets will vary from network to network. Percentage of loss depends upon the number of users, the number of machines, and the distance between machines.

- Consider the test successful if the Intuity system reports a packet loss percentage between **0** and **49%**. Do, however, inform the LAN or system administrator if the loss is above **10%**. Slow response time may be the result of such a loss.

If the test is successful, press **(CANCEL)** (F6) until you reach the INTUITY (TM) Administration menu, and continue with Task 7.

- Consider the test a failure if the packet loss value is between **50** and **99%**. In this range, IMM will be extremely slow, or will completely fail to communicate even though it has made a connection to the LAN.

Press **CANCEL** (F6) and refer to the troubleshooting procedures below.

- A **100%** packet loss indicates that the Intuity system has not established communication to the test machine address. The test will not report if packets are being sent to an incorrect or non-existent machine. Verify that you used the correct test IP address. If you entered the correct address from the worksheet, return to Task 4 and repeat the test using the Alternate Test IP Address from your worksheet. If the Alternate Test IP Address doesn't work, refer to the troubleshooting procedures section below.

### **Troubleshooting Guidelines for IMM**

---

The following is a suggested troubleshooting procedure for use if an Intuity system has failed the TCP/IP diagnostics send and receive test packets test.

**⇒ NOTE:**

AT&T service technicians dispatched for Intuity system installation and maintenance may not troubleshoot the customer LAN. After cutover, the customer is responsible for maintaining the TCP/IP addresses and administration on the Intuity system unless otherwise specified by contract.

1. Verify the physical connection.
  - a. Visually inspect the faceplate of the LAN (SMC Ultra-16 Elite) interface card. The green LED on the faceplate should be lit under the following conditions:
    - The interface type is twisted pair without link integrity, or
    - The interface type is 10 BASE T and the hub device is up.

**⇒ NOTE:**

For 10 BASE 2 or 10 BASE 5, the green light will not necessarily be lit. Do not consider this a failure, but continue with these procedures.

If the LED is lit, *go to substep b*. If it is not lit, perform the following numbered substeps.

1. Return to Task 4 and verify that the Board Configuration is correct. If not, make the correction.

**⇒ NOTE:**

You do not have to reboot the system to reconfigure the board interface type.

- 
2. Check the green LED again. If it is lit, retry the send and receive packets test using the Test IP Address, and *continue with substep b.*
  3. If the green LED is not lit, have the LAN administrator test the LAN to see if it is live.
    - If it is not live and the cable is 10 BASE T, the LAN interface card, cable, or the hub device may be bad.
    - If it is not live and the cable is twisted pair, the card is bad. Contact your remote support and replace the card.
- b. Visually inspect the faceplate of the LAN interface card. For all interface types, the yellow transmit/receive light on the faceplate should flash if the card is sensing packets on the LAN. On Ethernet LAN networks, each machine reads all packets transmitted to and from other machines on the network, and ignores the packets not addressed directly to that machine.
- If the yellow light is flashing, *continue with Step 2.*
  - If the yellow light is not flashing:
    - 1) Visually inspect the cable and the cable connection. If the connection is loose, tighten the cable and retry the send and receive packets test. If the test fails again:
    - 2) Contact the customer LAN or system administrator. It is the responsibility of the customer to provide you with a live cable.
    - 3) If the cable is live but the yellow light still won't flash, the LAN interface card may be bad. Contact your remote maintenance center and replace the circuit card.
2. Verify your TCP/IP addressing and board configuration administration. Return to *Task 4: Administer TCP/IP Networking*, and use the procedure listed to display the screens.

If your addressing is correct, use the **CANCEL** (F6) key to exit from the screens and *go to Step 3.*

If your addressing or board configuration is not correct, re-administer the Intuity TCP/IP networking screen and reboot the system. Retry the send and receive packets test. If this test fails again, *go to Step 3.*
  3. Ask the LAN or the system administrator to verify that the LAN is correctly administered for the Intuity system. Ask the administrator to verify the Intuity:
    - UNIX name
    - Internet Protocol (IP) address

- Subnet mask
- Default gateway

If all of the information matches what you have administered onto the Intuity system, *go to Task 7*.

If the information for the Intuity system was not correctly administered for the LAN, re-administer the Intuity TCP/IP networking screen and reboot the system. Try the send and receive packets test again.

If the send and receive packets test fails after you have re-administered and rebooted the Intuity system, ask the administrator to attempt a PING test to the Intuity system. If the administrator reports a failure to you but indicates that the customer LAN is operational, contact your remote support.

## **Task 7: Administer IMM Options on AUDIX**

---

This task is required if the customer has ordered IMM. Refer to the worksheet from your project manager for the settings for these parameters.

### **Task 7A: Set System Parameters for IMM**

---

1. Starting at the INTUITY (TM) Administration menu, select:



```
> AUDIX Administration
```

The system responds with the *AUDIX* screen.

#### **⇒ NOTE:**

This screen provides command-line entry. The prompt for these forms is locate toward the lower left-hand corner of the screen. To exit these forms, enter **exit**.



3. Move the cursor to the `Enable Check New Messages` field. Set to **y**. This allows clients to check for new messages without the overhead of logging in. If left at **n**, automatic new message notification from IMM is disabled.
4. Move the cursor to the `Enable Deliver_ca_Message` field. Leave at **n**. Entering **y** enables the public class-of-service function allowing messages to be delivered over the IMAPI interface. This feature is not used in IMM Release 1.0.
5. Move the cursor to the `Enable Voice File Transfer` field. Enter **y** to enable the use of the personal folder in IMM and also voice file transfer for all subscribers who have IMAPI Voice File Transfer enabled.
6. Move the cursor to the `LAN Session Timeout` field. This is the amount of time that a session can be inactive before the user is logged out of the mailbox. Intervals can be set in five-minute increments from 5 to 60 minutes. Leave at 5. After being logged out, the user still has an active TCP/IP connection to the AUDIX server.
7. Press the `(ENTER)` (F3) function key to save the changes.

### **Task 7B: Check Access for IMM**

You need to give the subscriber permission to use IMM. You may:

- Change each subscriber's profile which results in a custom class of service (cos), or
- Change the cos for people who are to have IMM permission. In this case, perform the following steps:
  1. With the cursor on the DEFINITY AUDIX command line, enter **change cos** and the class of service the group of subscribers using IMM will be assigned to.

The system displays the *Change COS* screen.

```
drmf2 Active Alarms: mwa Logins: 4
change cos 9 Page 1 of 2
CLASS OF SERVICE

Name: class09 COS Number: 9 Modified? y
Addressing Format: extension

System Multilingual is ON Login Announcement Set: System
Call Answer Primary Annc. Set: System
Call Answer Language Choice? n Call Answer Secondary Annc. Set: System

PERMISSIONS Type: call-answer Announcement Control? n
Outcalling? n Priority Messages? n Broadcast: none
IMAPI Access? y IMAPI Voice File Transfer? y

enter command: change cos 9
1Cancel 2Refresh 3Enter 4ClearFld 5Help 6Choices 7NextPage 8PrevPage
```

2. Ensure that the IMAPI access? field for IMM and the IMAPI Voice File Transfer? field for a personal folder are set to **y**.
3. With the cursor on the DEFINITY AUDIX command line, enter **add subscriber** and the extension of a subscriber who will have Intuity Message Manager on their PC. Press **(NEXTPAGE)** (F7) to display the second page.

The system displays the *Add Subscriber* screen.

```

AUDIX           Active           Alarms: MmWA           Logins: 2
add subscriber 86437           Page 2 of 2
SUBSCRIBER CLASS OF SERVICE PARAMETERS
Addressing Format: xtension
System Multilingual is ON           Login Announcement Set: System
Call Answer Language Choice? n     Call Answer Primary Annc. Set: System
Call Answer Secondary Annc. Set: System
PERMISSIONS Type: call-answer       Announcement Control? n
Outcalling? n                       Priority Messages? n     Broadcast: none
IMAPI Access? y                     IMAPI Voice File Access? y
INCOMING MAILBOX                     Order: fifo             Category Order: nuo
Retention Times (days), New: 10     Old: 10                 Unopened: 10
OUTGOING MAILBOX                     Order: fifo             Category Order: unfda
Retention Times(days), File Cab: 10   Delivered/Nondeliverable: 5
Voice Mail Message (seconds), Maximum Length: 300 Minimum Needed: 32
Call Answer Message (seconds), Maximum Length: 120 Minimum Needed: 8
End of Message Warning Time (seconds):
Maximum Mailing Lists: 25           Total Entries in all Lists: 250
Mailbox Size (seconds), Maximum: 1200 Minimum Guarantee: 0
Press [ENTER] to execute or press [CANCEL] to abort
enter command: add subscriber 86437
    
```

4. Ensure that the IMAPI access? field for IMM and the IMAPI Voice File Transfer? field for a personal folder are set to y.

## Task 8: IMM Software Installation and Tests

From this point, PC users assigned to use IMM will install the software in their machines *if a client license* was purchased. If a *site license* was purchased, the LAN administrator will normally install the software on the LAN server.

Prior to IMM installation, each PC will be tested with the *Intuity Message Manager Bravo Test Tool*. The tests on this diskette ensure that the needed TCP/IP network package and the associated WINSOCK.DLL have been loaded and put into the correct Windows or Network directory.

To test the installed IMM software, PC users will send a ping from their DOS window to the assigned IP address (or UNIX name) of the AUDIX server.

---

## Isolating Faults

---

If IMM isn't working, users should try to isolate the problem from their PC before escalating the problem to you or the LAN administrator.

- If the user forgets a step or does something incorrectly while using IMM, Message Manager brings up a message box stating the problem.
- If IMM locks up during use, there may be a Windows or PC problem. The user should exit and restart Windows and Message Manager, and then reboot her PC if necessary.
- If the reboot works, the user should bring up some other PC application and see if it is working correctly. **If the PC will not reboot, the user should call his PC repair person.**
- If Message Manager will not play messages or otherwise connect to the AUDIX server, the user should pick up his phone and dial into his AUDIX system.
- If the AUDIX system answers, the AUDIX server probably is not the problem. To doublecheck, however, the user should try to log into Message Manager from another PC, or ask other Message Manager users if they can log in. **If the AUDIX server doesn't answer, is busy, or won't let other users log in, the user should contact you at this point.**
- To test the LAN and TCP/IP software, the user should bring up another Windows application that uses the LAN. For example, she could print a file over the network or connect to a network drive.
- The user should check the physical connections between his PC and the LAN. **If any cables are disconnected, he should contact his LAN administrator.**
- A user should attempt to ping the AUDIX server by name and by TCP/IP address using the ping utility that came with her TCP/IP software. She must run the ping from a DOS box while Windows is running.
- The user should check that the correct TCP/IP drivers are installed on his PC. These are typically installed in the 386 Enhanced section of the Windows *system.ini* file.
- The user should make certain that the TCP/IP files including WINSOCK.DLL are installed in the correct directory in her PC, and that each required directory is in her DOS path. **The LAN administrator should be contacted for assistance if files appear out of place or the ping doesn't work.**
- To check the phone switching system, the user should call himself from another phone or have someone else call him, making sure the call eventually covers to the AUDIX system. **If the phone or coverage-path doesn't work, the user should contact his telecommunications person.**

- **If the problem still has not been solved, the user should contact you with a detailed description of the problem. It is up to you to:**
  - Ensure that the user has been properly administered to use Message Manager
  - Run the *TCP/IP Diagnostics* and the *Send & Receive Test Packets* tests. (These should be run on a periodic basis whether or not problems occur)
  - Ensure that the LAN interface card is properly configured
  - Ensure that the LAN interface card is properly seated in the Intuity platform, that its green and yellow LEDs are lit, and that it has a good connection to the LAN
  - Work with the LAN administrator to figure out the problem.



---

# Index

---

---

## Numerics

104A mounting block, 2-3

---

## A

Address-by-Name feature, 1-2  
Administered subscribers, 1-3  
Audio sessions, 1-3  
AUDIX server  
    administration, 2-17  
    class of service, 2-19  
    IP address, 1-13  
    PC connectivity, 1-6  
    system parameters, 1-14  
Auxiliary unit interface (AUI), 1-6

---

## B

Bravo test tool for IMM, 2-21  
Busy hour usage over LAN, 1-11

---

## C

Class of service, 2-19  
Client license, 1-11  
Coaxial cabling, 1-6

---

## D

Default gateway IP address, 1-13, 2-8  
Delivery Scheduling feature, 1-2  
Directory feature, 1-2

---

## E

Exit AUDIX feature, 1-2

---

---

## F

Feature options, 1-12, 2-6

---

## I

### IMM

feature options, 1-12  
licensing, 1-11  
limits of operation, 1-3  
message-processing capabilities, 1-2  
required components for operation, 1-1  
session timeout limits, 1-14  
software installation in LAN server, 2-21  
software installation in PC, 2-21

### Installation

IMM software in PC, 2-21  
LAN card in MAP/100, 2-2

### IP address, 2-8

### Isolating problems

connection to AUDIX server, 2-22  
escalating to AUDIX administrator, 2-23  
IMM lock up on PC, 2-22  
LAN and TCP/IP, 2-22  
switching system, 2-22  
TCP/IP drivers and files, 2-22

---

## L

### LAN administrator responsibilities

default gateway IP address, 1-13  
IP address, 1-13  
preadministration of LAN, 2-6  
subnet mask, 1-13

### LAN interface card

jumper configuration, 2-1  
LED operation, 2-15, 2-23  
location in Intuity platforms, 1-5  
W1 soft configuration, 1-5

### LAN traffic usage, 1-11

### Licensing

client, 1-11  
site, 1-11

### Limits of operation for IMM, 1-3

### Login sessions, 1-3

---

## M

### Mailing List feature, 1-2

MAP/100, slot location of LAN interface card, 1-5  
MAP/40, slot location of LAN interface card, 1-5

MAP/5, slot location of LAN interface card, 1-5  
Maximum  
    audio sessions, 1-3  
    limited subscribers, 1-3  
    login sessions, 1-3, 2-6, 2-18  
    TCP/IP sessions, 1-3  
Multilingual feature, 1-2  
Multiple Personal Greetings feature, 1-2

---

## N

Netware Loadable Module (NLM), 1-6  
Network interface types, 2-8  
New messages check, 2-19

---

## O

Out of sequence test packets, 2-13  
Outcalling feature, 1-2

---

## P

Packet  
    loss, 2-13  
    size, 1-11  
    test, 2-12  
PC requirements for IMM, 1-6  
Ping statistics, 2-13, 2-14

---

## R

Related documents, v

---

## S

Screens  
    cos (class of service), 2-20  
    subscriber, 2-20  
    system-parameters imapi-options, 2-18  
Session timeout, 2-19  
Sessions  
    audio, 1-3  
    login, 1-3  
    TCP/IP, 1-3  
Site license, 1-11  
Subnet mask, 1-13, 2-8  
Subscriber extension for IMM use, 2-20  
System administrator logon, 2-5

System shutdown, 2-10

---

## T

Tasks  
    administering AUDIX IMM options, 2-17  
    for installation of LAN interface card, 2-1  
    installing 10BaseT connector, 2-3  
    LAN cable attachment, 2-11  
    system reboot, 2-9  
    TCP/IP networking administration, 2-7  
    testing TCP/IP connection, 2-12  
TCP/IP  
    connection tests, 2-12  
    protocol stack in PC, 1-6  
    sessions, 1-3  
    troubleshooting, 2-15  
    use in multiple operating systems, 1-4  
    verification of addressing, 2-16  
Test packets, 2-12  
Trademarks, vi

---

## U

UNIX machine name, 1-13, 2-7

---

## V

Voice file transfer, 2-19  
Voice Mail feature, 1-2  
Voice mailbox feature, 1-2

---

## W

Wiring used on LANs, 1-6  
Worksheet requirements, 1-10