

DATA SET 113D-L1/2
TRANSMITTER-RECEIVER
SINGLE SET
DESCRIPTION AND OPERATION

CONTENTS	PAGE	CONTENTS	PAGE
1. GENERAL	1	A. Test Buttons	10
2. PHYSICAL DESCRIPTION	2	B. Analog Loop-Back Test	10
A. DS 113D-L1	2	C. End-to-End Self Test	11
B. DS 113D-L1/2	3	D. Local Self Test	12
3. FUNCTIONAL DESCRIPTION	4	E. Digital Loop-Back Test	12
A. Customer Interface	4	5. OPERATION	12
B. Telephone Interface	6	A. Manually Originating a Call	12
C. Options	6	B. ACU-Originated Call	12
D. General Operation	6	C. Manually Answering a Call	12
E. Answer Mode	7	D. Answering an Incoming Call Automatically	12
F. Carrier in Data Mode	7	E. Terminating a Data Call	13
G. Disconnecting the Data Set	7	6. COMPARISON OF DS 113D-L1/2 WITH DS 103J AND DS 113B	13
H. Telephone Sets	8	7. REFERENCES	13
I. Make-Busy Feature	9	1. GENERAL	
J. Other Features	9	1.01 This section describes the physical and functional characteristics of data set (DS) 113D-L1/2 (Fig. 1). General operating information is included for single set installations. The 590-010-ZZZ layer provides examples and guidelines to be followed for station arrangements that include	
K. Performance	9		
L. Status Lamps	9		
M. Installation and Maintenance	10		
4. TEST FEATURES	10		

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

multi-set arrangements in 40A-type data mounting(s) and cabinet.

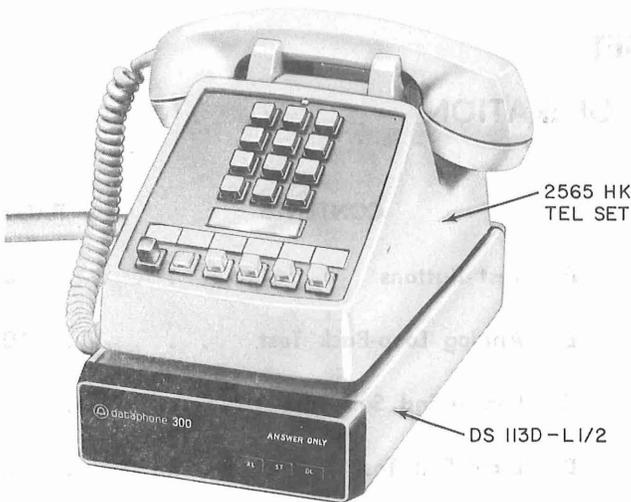


Fig. 1—DS 113D-L1/2 With 2565HK Telephone

1.02 When this section is reissued, this paragraph will contain the reason for reissue.

1.03 DS 113D-L1/2 is intended for use on 2-wire switched network circuits at speeds up to 300 baud.

1.04 The following is a specification summary for DS 113D-L1/2.

Operation: Nonsynchronous, binary, serial, full-duplex on 2-wire switched network.

Modulation: Frequency shift keying.

Rate: Up to 300 baud.

Modes: Answer only.

Customer Interface Connection: EIA Standard RS-232-C. Customer-provided equipment (CPE) must connect via a 25-pin Cinch or Cannon DB-19604-432 (male) connector plug with Cinch DB-51226-1 hood (or equivalents). Interface cable should be less than 50 feet long per EIA Standard RS-232-C recommendations.

Power: 105 to 129 Vac at 57 to 63 Hz, approximately 10 watts.

Environment: Ambient temperature = 40 to 120°F, relative humidity = 20 to 95 percent.

Note: These environmental operational limits are valid only under the condition that no condensation occurs.

Dimensions and Weights: DS 113D-L1 overall dimensions are 5.6 inches wide, 10.4 inches long, and 1.5 inches high. The assembly weighs approximately 2 pounds. DS 113D-L1/2 dimensions are 5.8 inches wide, 10.9 inches long, and 2.2 inches high. The weight is approximately 5 pounds.

Compatibility: Line signal compatible when called from any DS 103-type on switched network. DS 113D is also compatible with DS 113A and 113C.

Installation Configurations: Single set or multiple, manual calling, manual and/or automatic answer.

Testing: Local self test, analog loop-back, digital loop-back and end-to-end self test.

2. PHYSICAL DESCRIPTION

2.01 List code designations have been assigned to DS 113D as follows:

- **DS 113D-L1:** Printed circuit pack assembly shown in Fig. 2.
- **DS 113D-L1/2:** Printed circuit pack assembly DS 113D-L1, housing assembly, power cord and transformer, and M13F cord (Fig. 3).

A. DS 113D-L1

2.02 This list code specifies the basic data set. DS 113D-L1 consists of two printed circuit boards interconnected by a flexible tape. The overall dimensions are 1.5 inches high, 5.6 inches wide, 10.4 inches long, and the weight is 2 pounds. A faceplate is provided which contains the status indicators and the three test switches. All interconnections to the circuit packs are made via a plug at the rear of the board.

2.03 The test switches perform the same function in DS 113D-L1 as in DS 113D-L1/2. The status indicators perform the same function; however, in DS 113D-L1 the light emitting diodes (LEDs) are

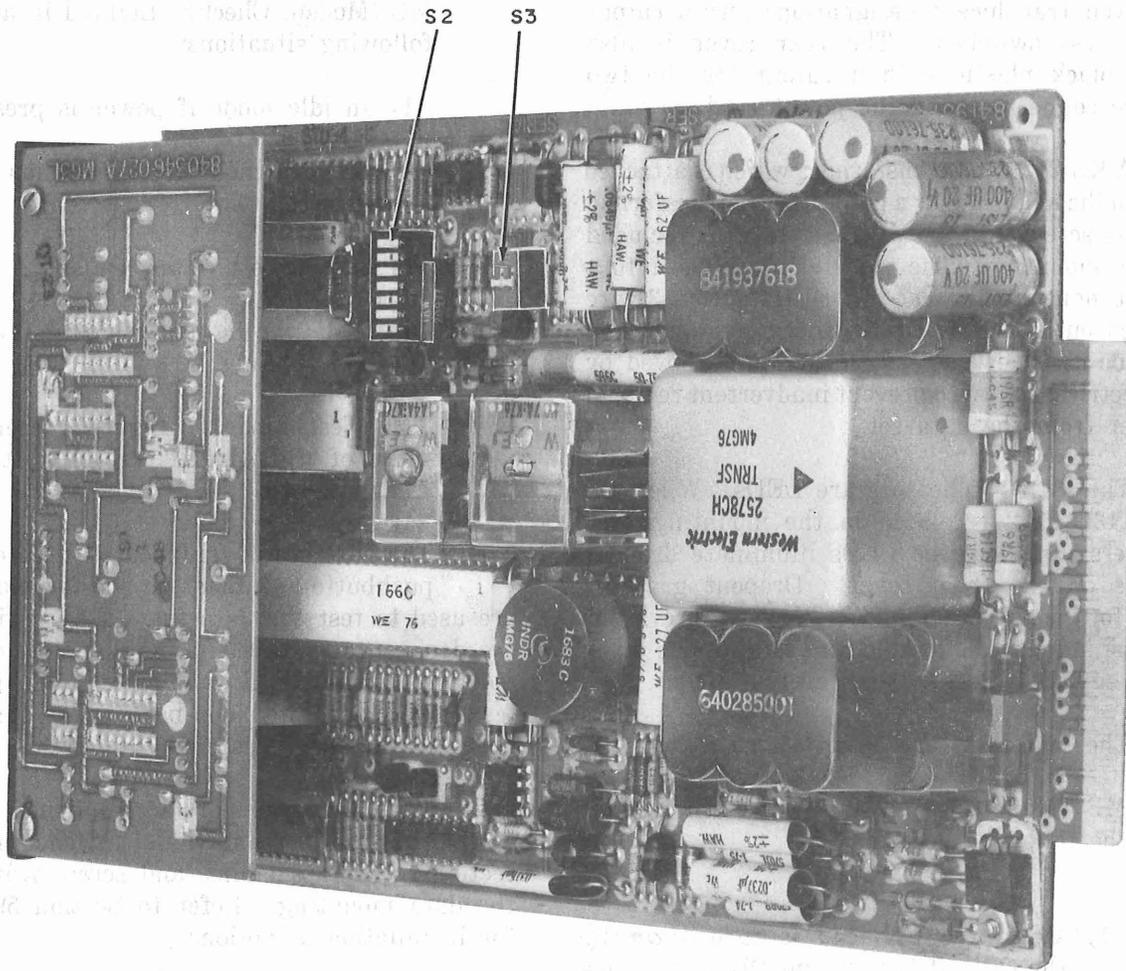


Fig. 2—DS 113D-L1

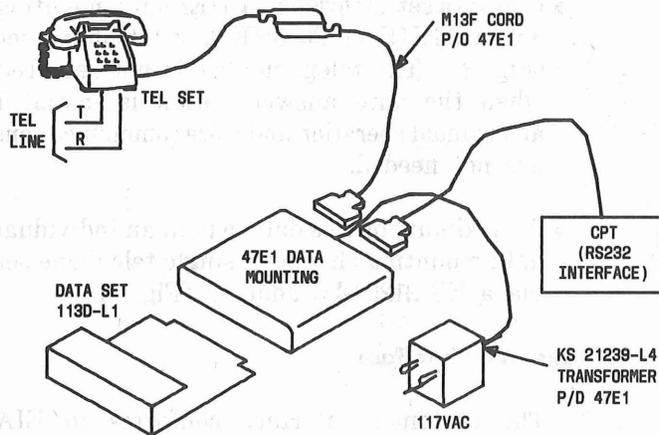


Fig. 3—Single Data Set Installation

viewed directly, while in DS 113D-L1/2 the LEDs illuminate dropout graphics. The options are the same for both codes except that the common ground options are made on their respective data mountings.

B. DS 113D-L1/2

2.04 This list code specifies the single set configuration. It consists of the data set previously described, enclosed in a 47E1 data mounting.

2.05 The data mounting is an extruded aluminum shell measuring 2.2 inches high, 5.8 inches wide, 10.9 inches long, and weighing 2.3 pounds (3.2 with KS-21239 transformer). The data mounting and data set plus transformer weigh approximately 5 pounds. The front cover is molded black plastic

with seven translucent designations and a cutout for the test switches. The rear cover is also molded black plastic with a cutout for the two interface connectors and the power cord.

2.06 A KS-21239-L4 transformer, which is attached to the mounting by a power cord, a transformer mounting screw, and an M13F set cord, is included with the mounting. The transformer plugs into a standard nonswitched 117-volt 60-Hz outlet, 3-wire grounded outlet. It is equipped with a tab which should be secured to the outlet (where allowed by local electrical codes) to prevent inadvertent removal of power from the data set.

2.07 The status indicators are LEDs. When DS 113D-L1/2 is placed in the mounting with the covers installed, the LEDs illuminate dropout graphics on the front cover. Dropout graphics provide for the appearance of the 2-letter abbreviation when the indicator is lighted and a continuous black opaque surface when the indicator is off.

2.08 The indicators are described as follows:

- **MB (Made Busy):** Lighted when any of the following occurs:

(1) When the CN lead is turned **on** by the CPE, if the ST and DL buttons are released.

(2) When option K (fail-safe state of CN circuit) is installed and there is zero volt or an open circuit on CN lead, provided the ST and DL button are released.

(3) When the AL test button is operated.

- **TR (Terminal Ready):** Lighted when the data terminal ready (CD) lead is **on**.

- **MR (Modem Ready):** Lighted when the data set ready (CC) lead is **on**.

- **SD (Send Data):** Lighted when the transmitted data (BA) lead is spacing.

- **RD (Receive Data):** Lighted when the received data (BB) lead is spacing.

- **MC (Modem Check):** Lighted in any of the following situations:

(1) In idle mode if power is present

(2) In data mode if carrier has not been detected

(3) In self test if test fails.

Note: May be lighted for first few seconds while handshaking.

- **TM (Test Mode):** Lighted when one or more of the AL, ST, or DL test switches is depressed.

2.09 The data set is equipped with three locking pushbutton switches on the faceplate, which are used to test the data set. These switches are the depress-to-operate and depress-to-release type, and are designated AL (analog loop-back), ST (self test) and DL (digital loop-back). The functions of these switches are described in Part 4.

2.10 Installer options are accomplished by setting the position of individual switches on multiple section rocker assemblies and screw switch S1 on the data mounting. Refer to Section 591-040-200 for installation of options.

3. FUNCTIONAL DESCRIPTION

3.01 DS 113D-L1/2 provides 300-baud answer service in the following configurations:

- One data set enclosed in a 47E1 data mounting and a 565HK or 2565HK key telephone set (Fig. 3). The telephone set is not required when the auto answer option is installed and manual operation and voice communications are not needed.

- A maximum of five data sets in an individual data mounting sharing a single telephone set via a KS-21253-L3 adapter (Fig. 4).

A. Customer Interface

3.02 The customer interface conforms to EIA Standard RS-232-C. The 25-pin female connector is not part of the data set card but is provided on the mounting (Fig. 5). The connector pin designations and functions are listed in Table A.

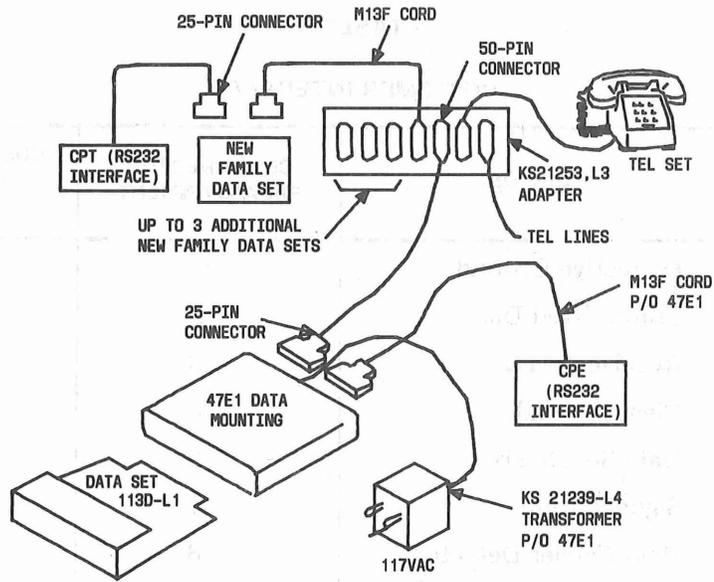


Fig. 4—DS 113D-L1/2 Sharing Telephone Set With up to Four Other New Family Data Sets

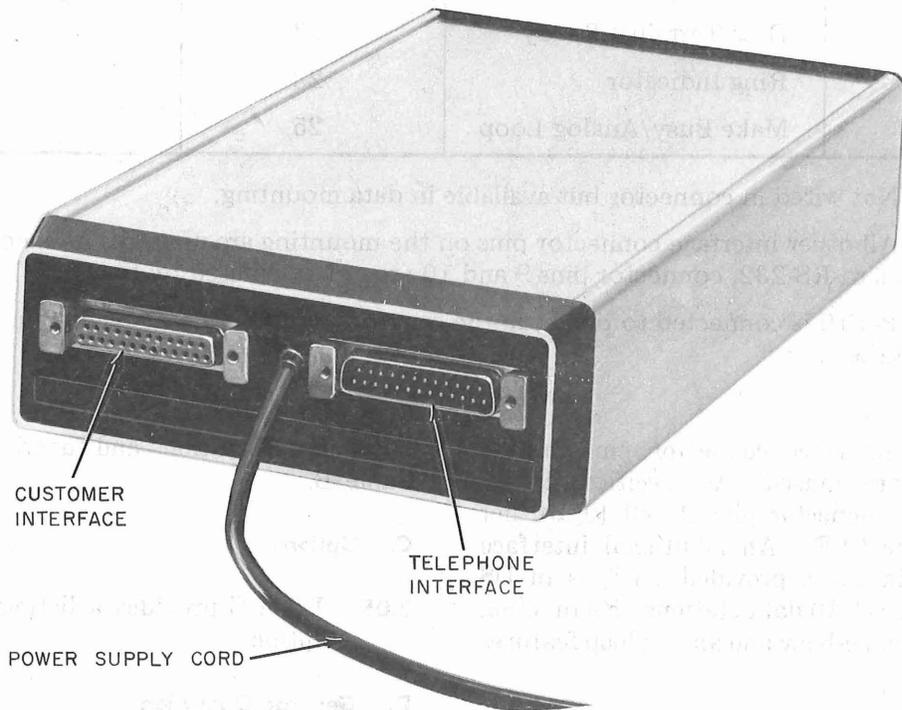


Fig. 5—DS 113D-L1/2—Rear View

TABLE A
CUSTOMER INTERFACE

EIA DESIGNATION	CIRCUIT	CP CONNECTOR PIN ASSIGNMENT	CUSTOMER INTERFACE CONNECTOR PIN ASSIGNMENT
AA	Protective Ground	—	Note 1
BA	Transmitted Data	2	2
BB	Received Data	3	3
CB	Clear to Send	5	5
CC	Data Set Ready	6	6
AB	Signal Ground	7	7
CF	Data Carrier Detector	8	8
+P	Data Set Test (+12V)	27	9 } Note 2
-P	Data Set Test (-12V)	26	10 }
—	Not Used	—	11 } Note 3
—	Not Used	—	19 }
CD	Data Terminal Ready	22	20
CE	Ring Indicator	23	22
CN	Make Busy/Analog Loop	25	25

Note 1: Not wired in connector but available in data mounting.

Note 2: All other interface connector pins on the mounting are unused. As specified in EIA Standard RS-232, connector pins 9 and 10 are not to be used by the CPE.

Note 3: Pin 19 is connected to pin 11 in the housing. This circuit is not used in low-speed data sets.

3.03 All other interface connector pins on the mounting are unused. As specified in EIA Standard RS-232, connector pins 9 and 10 are not to be used by the CPE. An additional interface circuit, CN on pin 25, is provided, as it is in DS 103E and 113-type (113B) data stations. Its function is to activate the make-busy and analog loop features via the interface.

B. Telephone Interface

3.04 A plug is provided on the mounting for all telephone company connections (Fig. 5). The

plug pin designations and functions are itemized in Table B.

C. Options

3.05 Table C provides a listing of DS 113D-L1/2 options.

D. General Operation

3.06 DS 113D-L1/2 is a single mode data set, suitable for answering calls. The frequencies used are as follows:

Transmit: f_2 mark--2225 Hz
 f_2 space--2025 Hz

Receive: f_1 mark--1270 Hz
 f_1 space--1070 Hz

E. Answer Mode

3.07 In response to a ringing voltage, the CE lead is turned **on** by the data set while ringing voltage is present.

3.08 If option ZG (automatic answer—NO) was selected at installation, incoming calls are not answered automatically. Manual answer is accomplished by depressing the associated locking line key located on the telephone set and lifting the telephone receiver. Connection of the data set to the line is effected by momentarily depressing the data key, provided that the CD lead is **on**.

3.09 If option ZH (automatic answer—YES) was selected, the data set is connected to the line after the end of a ringing interval, provided the CD lead is **on**.

3.10 When the data set is connected by either method, the CC lead is turned **on** and the transmitter is kept disabled for a period of 2 seconds, after which time the f_2 mark frequency

is transmitted. After receipt of this tone for some time, the originating station transmits the f_1 mark tone. If no such signal is received for 14 ± 4 seconds after connecting, an abort timer automatically disconnects the set. If a continuous f_1 mark is detected, the CB and CF leads are turned **on**, a mark hold is removed from the BB lead, and the CPE can send and receive data.

F. Carrier in Data Mode

3.11 In the data mode, any frequency in the f_1 band will keep the carrier detector **on**. A loss for approximately 10 ms results in CF being turned **off** and BB clamped to mark. CB either goes **off** or stays **on** during periods of carrier fail, depending on the option selected. Any in-band signal of sufficient amplitude and duration is capable of restoring the carrier detector.

G. Disconnecting the Data Set

3.12 There are four ways by which DS 113D-L1/2 can be disconnected.

- (1) The data set can be disconnected by turning the CD lead **off** for at least 50 ms. Provided option T is installed, the data set then transmits 3 ± 1 seconds of spacing signal prior to disconnecting.

TABLE B

TELEPHONE INTERFACE

PI PLUG PIN ASSIGNMENT	DESIGNATION	DESCRIPTION
1	LT	Tel set line lamp control from data set
2	LG	Tel set line lamp ground from data set
5	TD	Talk/data control from tel set
7	T	Telephone line tip lead
8	R	Telephone line ring lead
12	RD	Common ringer control contact to ground
21	T1	Tel set tip lead
22	R1	Tel set ring lead
25	TDG	Talk/data control ground lead

TABLE C
DS113D OPTIONS

FEATURE		OPTION
Receive Space Disconnect	YES NO	V* ✓ Y
Send Space Disconnect	YES NO	T* ✓ U
Loss of Carrier Disconnect	YES NO	S* ✓ R
CB and CF Indications	COMMON SEPARATE	A* ✓ B
CC Indication for Analog Loop	ON OFF	ZF* ✓ ZE
Fail-Safe State of CN Circuit	ON OFF	K J* ✓
Automatic Answer	YES NO	ZH* ✓ ZG
Tip-Ring Make Busy	YES NO	F E* ✓
Contact to Ground Make Busy Floating Contact Make Busy	For use with 40A-type data mounting only.	
Common Grounds	YES NO	Q* ✓ P

* Factory-Furnished Option

- (2) Provided option V is installed, the data set disconnects upon receipt of a continuous space disconnect signal of at least 2.0 seconds.
- (3) If option S is installed, the data set disconnects when incoming carrier is lost for approximately 250 ms.
- (4) The data set may also be manually disconnected by using the associated telephone.

H. Telephone Sets

3.13 The 565HK or 2565HK telephone set can be used with either the 47E1 or 40A-type data mounting. The 830C or 2830C telephone set may

be used with one 40A data mounting, and the 831C or 2831C with two mountings.

3.14 The operation of all telephone sets is similar. One locking line key is associated with a particular data set and its telephone line. Depressing the line key and lifting the handset makes the telephone set available for dialing or answering calls and for talking. The lamp under the key does not light in the talk mode.

3.15 To transfer a call from the talk mode to the data mode, momentarily depress the red, nonlocking data key. This key is used for all data sets sharing the telephone set. The lamp under the line key lights whenever the associated

data set is off-hook. The handset may be replaced during the data call.

3.16 To transfer a call from the data mode to the talk mode, depress the associated line key and pick up the handset.

3.17 A method for manually disconnecting a data call consists of entering the talk mode and then replacing the handset.

3.18 During ringing on any line, the lamp under the associated line key flashes at the ringing rate.

3.19 For installations where automatic answering is used and the talk mode is not required, the telephone set can be omitted. Nevertheless, its use is recommended for ease of maintenance.

I. Make-Busy Feature

3.20 A make-busy feature is available for DS 113D. This feature is important in line-hunting arrangements. It should not be used for nonline-hunting installations, for which the "don't answer" condition is proper to indicate that a port is out of service.

J. Other Features

3.21 The telephone set used with DS 113D is not provided with keys to select automatic or manual answer. An installer option determines whether the automatic answer feature is functional. To override the automatic answer feature, if installed, CD lead should be turned **off** in the CPE. An alternate method consists of operating the AL button, if the make-busy option is not installed. Before manually transferring to the data mode, this button must be released.

K. Performance

3.22 The performance of DS 113D over the switched telephone network is as good as or better than the performance of the older 113-type sets. The transmit level is fixed and is -9 dBm maximum into a 600-ohm line. It can receive at any level between 0 and -50 dBm, and detects loss of carrier when the signal falls below this level, typically at -53 dBm.

L. Status Lamps

3.23 DS 113D is equipped with seven status lamps. These are useful for checking the status of the data set, for observation of the progress of a call and of the exchange of data, and for checking the results of tests. The lamps are designated as follows:

MB—Made Busy

TR—Terminal Ready

MR—Modem Ready

SD—Send Data

RD—Receive Data

MC—Modem Check

TM—Test Mode.

3.25 These lamps and the associated line keys light as follows.

Data Set in Idle Mode (On Hook, All Test Buttons Released), or Talk Mode

- MC is lighted.
- TR is lighted while CD lead (data terminal ready) is **on**.
- SD is lighted while BA lead (send data) is spacing.

Note: The MC lamp in idle mode serves as a "power on" indication. No ON lamp is provided.

Ringing

- The line key lamp flashes lighted and off at the ringing rate.
- MC is lighted.
- TR is lighted while CD lead is **on**.
- SD is lighted while BA lead is spacing.

Entering the Data Mode

- MC is lighted.

- SD is lighted while BA lead is spacing.
- TR is lighted (CD lead must be **on**, otherwise the set cannot enter the data mode).
- The line key lamp lights and MR lights when the data set goes off-hook.
- MC goes off when the CF lead is turned **on**.

Data Mode

- TR and MR are lighted.
- SD lights whenever the CPE applies a space on the BA (send data) lead.
- RD lights whenever the data set receives a space and the BB (receive data) lead is spacing.

Note: A steady mark on BA or BB can be recognized by a nonlighted SD or RD lamp. Data transmission can be detected by a flickering lamp. Reversals at rates above 60 baud may look like a steadily lighted lamp.

Test Modes

- TM lights if any of the test keys of the data set are depressed and serves as an indication to the attendant that a manual operation is required to restore the set to normal. On a test initiated by turning **on** of the CN lead (terminal busy) by the CPE, TM does not light.

Made Busy

- MB lights if any of the three following events occur:
 - (1) CPE turns **on** the CN lead, provided the ST and DL buttons are released.
 - (2) Option K is installed and there is zero volt or an open circuit on the CN lead, provided the ST and DL buttons are released.
 - (3) Operation of the AL test button.

Note: The MB light does not light if the line is made busy by the data mounting circuits.

M. Installation and Maintenance

- 3.26** No special tools are required at installation.
- 3.27** DS 113D does not require routine maintenance or adjustments. Troubles isolated to the set should be cleared by data set replacement.

4. TEST FEATURES

A. Test Buttons

- 4.01** The data set is equipped with three push-to-operate, push-to-release buttons which are accessible at the front panel. The buttons are designated as follows:

AL—Analog Loop-Back

ST—Self Test

DL—Digital Loop-Back.

B. Analog Loop-Back Test

- 4.02** This test can be initiated by either of two methods:

- The AL button is operated.
- CPE applies an **on** condition to the CN lead.

Note: If option K (fail-safe state of CN circuit **on**) is installed, a zero-volt condition on the CN lead causes the data set to go into the analog loop-back test mode.

- 4.03** In the analog loop-back test mode, the data set is isolated from the telephone line, with the exception of the ring detector circuit. During this test, the data set circuits are modified to keep both the transmitter and the receiver in the fi mode. The output of the transmitter is looped via an attenuating circuit to the receiver.

- 4.04** If a make-busy option is installed, the telephone line is made busy. If not, the data set ring detector turns **on** the CE lead and lights the associated line key lamp in the normal way. Automatic answer is inhibited during this

test; the telephone set and telephone ringer remain functional.

4.05 The test is performed in the following manner.

(a) The AL button is depressed or the CN lead is turned **on** by the CPE. If at this time the CD lead is **off**, the MC and MB lamps are lighted, indicating that an idle data set is in the AL test mode. The TM lamp is also lighted if AL is depressed, and SD is off only if the BA lead is marking.

(b) If the CD lead is **on**, the data set goes through the "handshaking" sequence. TR and MR are lighted and after a slight delay, MC goes off and the CB and CF leads are turned **on**.

Note: If option ZE is installed, the CC lead remains **off** per RS-232-C for the duration of the test. If option ZF is installed, the CC lead is turned **on** for the duration of the test. Some terminals require the CC **on** indication to be able to proceed with this test.

(c) The CPE can now send data signals which will be modulated by the transmitter, looped back to the receiver, demodulated, and presented to the CPE via the BB lead. In this way the CPE, in a duplex mode, can test the complete operation of the data set, and its own capability to generate and read data signals. The data signals may be observed at the SD and RD lamps.

(d) Release of the AL button and/or turning **off** of the CN lead restores the station and lamps to normal.

C. End-to-End Self Test

4.06 Operation of the ST button turns **off** the CC, CB, and CF leads, opens the BB lead, and arranges the data set circuits to ignore the BA, CN, and CD leads from the CPE. It simulates internally the **on** condition of the CD circuit, and connects a square wave (reversals) signal generator of about 300 baud to the transmitting circuits and a bias detector to the output of the receiver.

4.07 To perform an end-to-end self test, a call is set up to another DS 100-type equipped

with a self test button. The ST buttons are operated at both ends, and the data mode is entered in the normal way. The test can be performed with or without a terminal connected to the data set. The TR lamp continues to monitor the terminal and can be ignored. TM, SD, and MC are lighted. When entering the data mode, MR and RD light, and MC goes off only if the signal from the far end is received with less than 35 percent distortion. Similarly, the MC lamp at the far end indicates the proper reception of the square wave generated at the near-end data set. On noisy connections, MC may go off but flash on occasionally, indicating a "hit" or error.

4.08 A similar test may be conducted when the set is connected to a testboard, with the testboard using a square wave (reversals) generator and a bias indicator. It should be noted that some TMS bias indicators will give excessive readings if the speed setting of the indicator differs from the actual speed of the generator. At DS 113D, the speed is held to 300 \pm 15 baud. The built-in bias detector of DS 113D is speed-insensitive.

4.09 If the far-end data set does not have a self test button but is provided with a digital loop-back feature, it is still possible to make an end-to-end test, but the results may be ambiguous. Have the far-end data set placed in the digital loop-back mode and depress the ST button on the near-end DS 113D. The square wave signal makes one complete round trip, and the signal detector of DS 113D checks if the round-trip distortion exceeds 35 percent. If the MC lamp goes off now, there is a very strong indication that both data sets and the line facilities are satisfactory.

Note: There is a slight possibility that the bias may be excessive in at least one direction, but that this bias is compensated for by bias of the opposite polarity in the other direction.

A successful test indicates that all circuits of both data sets seem to be working. If the MC lamp does not go off, the only conclusion that can be drawn is that the round-trip distortion exceeds 35 percent. As the bias distortion in the two directions of transmission may be additive, no conclusion about the proper operability of the sets and the line facilities can be drawn.

D. Local Self Test

4.10 By operating the ST and then the AL button, a local self test can be performed. The effect on the telephone line, the telephone set, and make-busy circuits is outlined in 4.03 and 4.04, and the effect on the CPE is outlined in 4.06.

4.11 In the local self test, an internal CD *on* condition is applied; the data set goes through the "hand-shaking" sequence; and a data signal is applied to the transmitter, looped back to the receiver (both in the *f₁* mode), and the demodulated signal is checked by the bias detector. In this way, most of the circuits of the data set are checked. The MC lamp goes out after a short delay if the bias of the received signal is under 20 percent, indicating proper operation of the set.

E. Digital Loop-Back Test

4.12 A digital loop-back test is normally set up at the request of the test center. Operation of the DL button turns *off* the CC, CB, and CF leads, clamps the BB lead marking, and arranges the data set circuits to ignore the BA and CD leads from the CPE. It simulates internally the *on* condition of the CD circuit, and internally loops BB to BA. When a data call is established between the test center and the data set, the test center can measure the round trip data distortion.

4.13 The digital loop-back test can also be set up between two data sets, as described in 4.09. During the test, TR monitors the CD lead and SD monitors the BA lead; MB, RD, and MC are off; and MR and TM are lighted.

4.14 No mode switching takes place, and the set must be manually restored to normal by releasing the DL button.

5. OPERATION**A. Manually Originating A Call**

5.01 Data calls can be originated from DS 113D, but only to originate-only data sets. Calling an originate-only data set assures frequency compatibility. To originate a call manually, perform the following:

- Depress the appropriate line button and lift handset.

- Listen for dial tone.

- Dial the call (to a DS 113A or DS 113C) in the usual way.

- When the call is answered in the telephone mode, request a transfer to the data mode in the following manner.

- (1) The DATA key at the calling station should be depressed first.
- (2) The called attendant, upon hearing *f₂* mark tone, should then proceed to put the called station in the data mode.

B. ACU-Originated Call

5.02 The automatic calling unit (ACU) cannot be used with DS 113D.

C. Manually Answering a Call

5.03 To answer call manually, perform the following procedure:

- Depress the flashing line key on the telephone set and lift handset.
- When requested, momentarily depress data key. The line key releases and lights. Data transmission can begin.

Note: If the data key is depressed when TR is not lighted, the call will be lost.

- On the data set, the MR lamp lights and the MC lamp goes off.
- The handset may be placed in the on-hook position.

D. Answering an Incoming Call Automatically

5.04 Stations arranged for automatic answer require no intervention by the attendant provided the TR lamp is lighted. (CPE ready).

5.05 To override the automatic answer feature, depress the AL key. With the AL key depressed, the telephone can be used in the talk mode. Be sure to release the AL key before going into the data mode, or call will be lost.

Note: If make-busy option is installed, 5.05 does not apply.

E. Terminating A Data Call

5.06 A data call can be terminated in any of four ways.

- (1) The call is terminated by going into the talk mode and hanging up.
 - Depress the associated line key.
 - Lift the handset. Line key lamp goes off.
 - Hang up the handset.
- (2) The CPE can terminate the call by momentarily turning off the CD lead (data terminal ready).
- (3) With option V (receive space disconnect) installed, the data set disconnects on reception of a long spacing signal.
- (4) With option S (loss of carrier disconnect) installed, the data set disconnects upon loss of carrier.

6. COMPARISON OF DS 113D WITH DS 103J AND 113B

6.01 DS 113D is similar in construction and in circuitry to DS 103J. The major differences are as follows:

- The single mode operation (transmitting f_2 and receiving f_1 frequencies) of DS 113D is similar to the answer mode of DS 103J. However, when DS 103J is originating (dialing) calls, it is in the originate mode. DS 113D may originate calls, but it remains in the answer mode.
- DS 113D does not use an ACU interface.

- DS 113D has no "A" lead control, which is required for operation on some key telephone systems.
- DS 113D has no common ringer feature, of use when two or more data sets share a telephone set.
- DS 113D has no CC indication early or delayed options; these are not applicable to operation in the answer mode.

6.02 Many differences exist between DS 113D and DS 113B in appearance, features, and operating procedures. The basic timing intervals are the same, but some disconnect sequences in DS 113D differ from those of DS 113B. However, both data sets comply with the requirements of EIA Standard RS-232, the needs of the telephone network, and are compatible with all Bell System switched network and 100-type data sets. Some important differences are tabulated in Table D.

6.03 Table E provides a comparison of the options available on data sets 113D, 103J, and 113B.

7. REFERENCES

SECTION	TITLE
590-001-111	Data Set 113D-L1/2—Reference Guide
591-040-150	Data Set 113D-L1/2 Transmitter-Receiver—Supplementary Information
591-040-180	Data Set 113D-L1/2 Transmitter-Receiver—Summarizing Specification
591-040-200	Data Set 113D-L1/2 Transmitter-Receiver—Installation and Connections
591-040-500	Data Set 113D-L1/2 Transmitter-Receiver—Test Procedures

TABLE D

COMPARISON OF DATA SETS 113D AND 113B

DESCRIPTION	DATA SET 113D			DATA SET 113B		
Appearance	New Family			Old Image		
Size (in inches)	HEIGHT	WIDTH	DEPTH	HEIGHT	WIDTH	DEPTH
Data set (circuit pack)	5.6	1.5	10.4	9.3	1.5	9.75
Single mounting	2.2	5.75	11.2	Not available		
Multiple mounting	7.0	19,23 or 25	13.5	20.0	23 or 25	11.0
Attendant or tel set	5.3	9.5	9.5	7.0	20.0	12.0
	(for 5 data sets)			(for 60 data sets)		
	4.3	11.3	7.0			
(for 8 or 16 data sets)						
Compatibility with other data sets:						
Tel set for single mounting can be shared with other new family data sets	Up to 4 other data sets			No		
Multiple mounting can be shared with other sets	Yes (202S, 801C, 103J, etc)			No		
New Features:						
Send space disconnect	Yes, optional			No		
Receive space disconnect	Yes, optional			No		
Manual answer on data line	Yes, optional			No		
Dialing and talking on data line	Yes			No		
New Diagnostics:						
Analog loop	Yes			No		
End-to-end self test	Yes			No		
Local self test	Yes			No		
Digital loop	Key activated			External test plug		
Status display	On data set for all sets			On attendant set for one selected set		
Line Interface	600 ohms			900 ohms		
CPT Interface	Pin 1 open			Circuit AA on pin 1		

TABLE E

COMPARISON OF OPTIONS IN DATA SETS 113D, 103J, AND 113B

FEATURE		DS 113D OPTION (NOTE 1)	DS 103J OPTION	DS 113B
Receive Space Disconnect	YES	V*	V*	NA
	NO	Y	Y	Provided
Send Space Disconnect	YES	T*	T*	NA
	NO	U	U	Provided
Loss of Carrier Disconnect	YES	S*	S*	Z
	NO	R	R	w/o Z
CC Indication	EARLY	NA	ZD*	NA
	DELAYED	NA	ZC	NA
CB and CF Indications	COMMON	A*	A*	W
	SEPARATE	B	B	w/o W
CC Indication for Analog Loop	ON	ZF*	ZF*	NA
	OFF	ZE	ZE	NA
Fail-Safe State of CN Circuit	ON	K	K	w/o X*
	OFF	J*	J*	X (Note 2)
Automatic Answer	YES	ZH*	ZH*	Provided
	NO	ZG	ZG	NA
Common Ringer	YES	NA	ZB	NA
	NO	Provided	ZA*	Provided
Tip-Ring Make Busy	YES	F (Note 3)	F (Note 3)	Y*
	NO	E*	E*	w/o Y
Contact to Ground Make Busy Floating Contact Make Busy	For use with 40A-type data mounting only			For use with 32A1 data mounting
Common Grounds	YES	Q*† (Note P† 4)	Q*‡ (Note P‡ 4)	V*
	NO			w/o V
Transmit Level (Telco Selected Adjustment)	Fixed		Fixed	Screwdriver Adjustment of Potentiometer

Note 1: All 113D options are identical to corresponding options in DS 103J.

Note 2: With option X, circuit does not respond to *on* or *off* inputs via CN lead. In DS 113D, circuit always responds to CN.

Note 3: Also install option ZX on 40A-type data mounting when used in multiple installation.

Note 4: Also install option ZI or ZJ on 40A-type data mounting when used in multiple installation.

*Factory-furnished option

†Options P and Q are on the 47E1 data mounting.

‡Options P and Q are on the 47C1 data mounting.

