

TESTING DATA SET 113D-L1/2
FROM FIELD LOCATIONS
USING J1P005 AUTOMATIC DATA TEST SYSTEM (ADTS)

CONTENTS	PAGE	
1. GENERAL	1	Loopback and error run tests are provided using the J1P005 ADTS. These procedures are to be used when testing DS 113D-L1/2 on an initial installation or during a maintenance visit.
2. INSTALLATION TESTS	2	
3. MAINTENANCE TESTS	2	1.02 When this section is reissued, the reason for reissue will be presented in this paragraph.
4. SELF TEST PROCEDURES	2	1.03 The self tests require no external test equipment, and are included here for completeness.
A. Analog Loopback Self Test	4	
B. Digital Loopback Self Test	4	1.04 This section contains information for testing DS 113D-L1/2 by means of DIVA (Digital Inquiry Voice Answer). DIVA requires a TOUCH-TONE® dial telephone, or a rotary dial telephone used with a KS-21799-L1 (or equivalent) portable TOUCH-TONE pad.
C. End-to-End Self Test	4	
5. ADTS TEST PROCEDURES	5	1.05 In this section, the term "user" refers to telephone company (telco) personnel at the data set responsible for interfacing the data set with the ADTS.
A. General	5	
Functions Available Via DIVA	5	
Accessing ADTS	5	
Performing Tests	6	1.06 Test circuitry built into DS 113D-L1/2 permits the following self tests to be performed: analog loopback, digital loopback, and end-to-end. Additional tests require the use of external test equipment such as a 921A data test set (DTS) and/or the ADTS.
Leaving ADTS	7	
B. Loopback Test	8	
C. End-to-ADTS Error Run Test Using 921A DTS	9	1.07 Detailed self test procedures are presented in paragraphs 4.02 through 4.07.
6. REFERENCES	12	
1. GENERAL		1.08 General ADTS test information is presented in paragraphs 5.01 through 5.26. Detailed ADTS test procedures are presented in paragraphs 5.27 through 5.57.
1.01 This section provides self test and field test information for data set (DS) 113D-L1/2.		

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

2. INSTALLATION TESTS

2.01 This part provides the sequence in which tests are to be performed following installation of the data set. This test sequence (Fig. 1) provides a method of verifying that the installation is satisfactory. Before proceeding with the tests, verify that the local loop meets the requirements specified in Section 314-205-501.

3. MAINTENANCE TESTS

3.01 This part provides the sequence in which tests are to be performed when clearing a trouble report and during a maintenance visit to the data station.

3.02 When a trouble report is received, a test center or ADTS is responsible for isolating the trouble to the data station or the transmission facility. The procedure for doing this is shown in Fig. 2.

3.03 If the trouble seems to be in the data station equipment, a telco employee must be dispatched to conduct more extensive tests at the data station. The following equipment should be taken on a trouble visit:

- 921A DTS
- Spare DS 113D-L1/2

3.04 Troubleshooting is performed by the ADTS using the loopback test or error run test. If the

trouble is isolated to the data set, replace the data set and repeat the test.

3.05 If the trouble persists after the tests have been completed, proceed as follows:

- (a) Check that options installed in data set agree with those specified on service order.
- (b) Verify that customer-provided equipment (CPE) has been tested and is operating properly.
- (c) Check for physical damage to data station equipment.
- (d) Verify that all cords and connectors are properly connected.
- (e) Check for intermittent trouble in station wiring.
- (f) Verify that data set and CPE are connected to a common ground.
- (g) If trouble persists, request help from immediate supervisor, who may then obtain technical support from DATEC (Data Technical Support) per Section 010-521-100.

4. SELF TEST PROCEDURES

4.01 This part provides procedures for the installation and maintenance self tests.

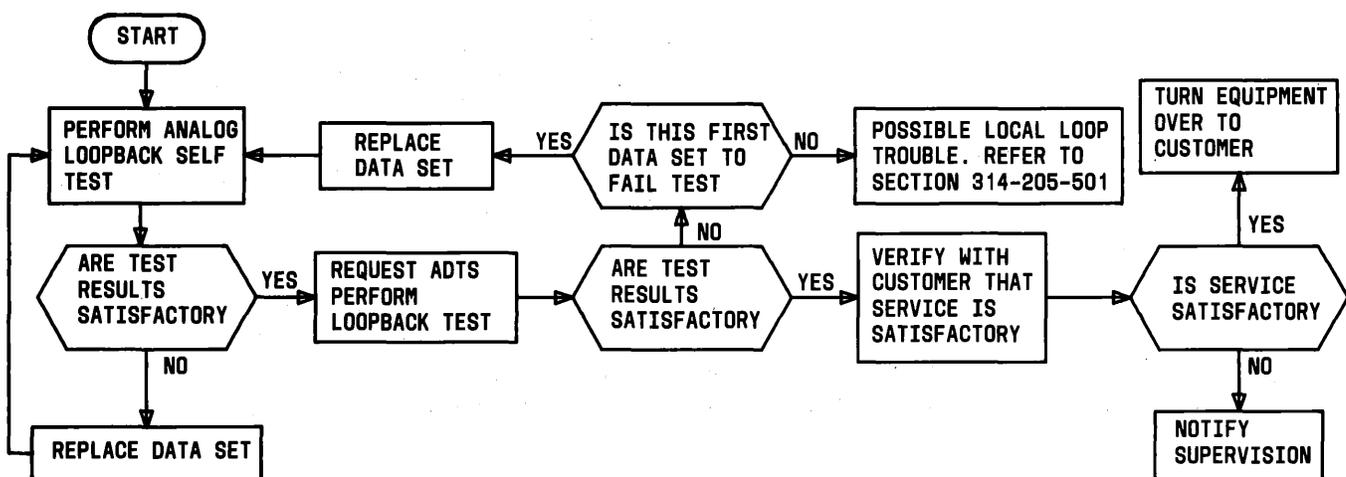


Fig. 1—Installation Test Sequence

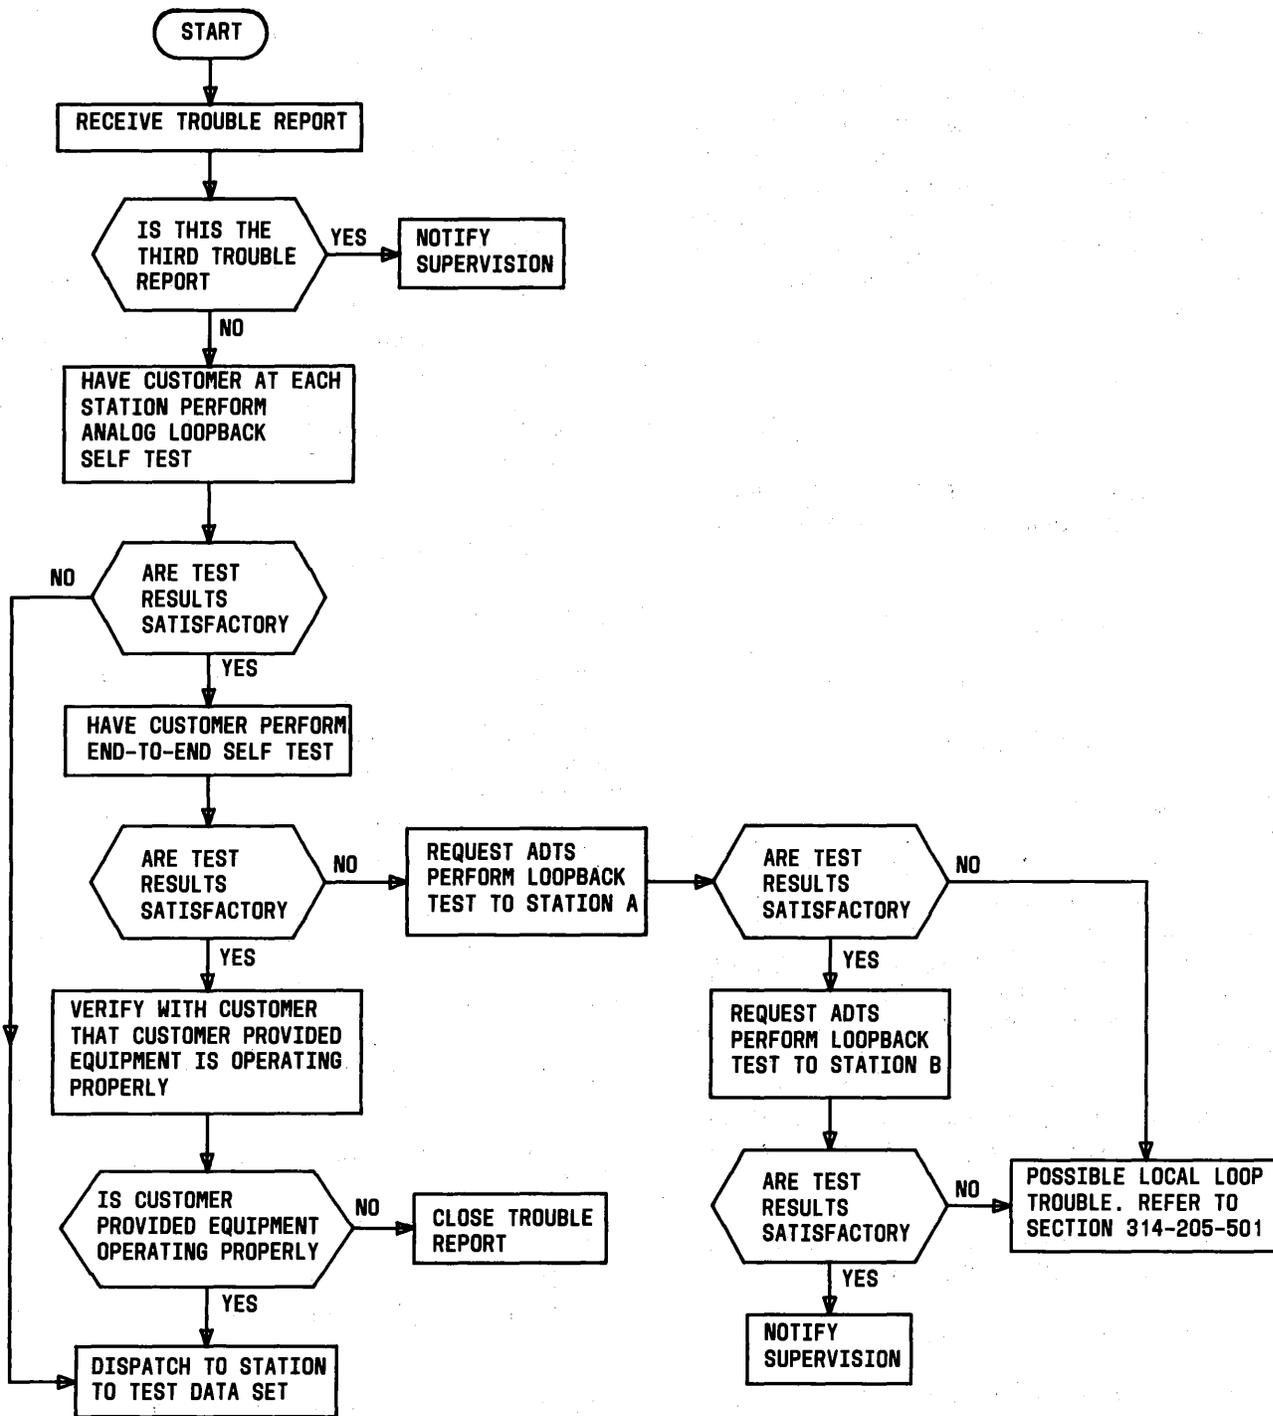


Fig. 2—Clearing Trouble Report

A. Analog Loopback Self Test

4.02 This test checks the data set transmitter and receiver. The customer interface is not checked. Test data generated by the data set is looped back internally from the transmitter output to the receiver input. The received data is compared to the transmitted data. If the distortion threshold (20 percent) is not exceeded, the MC lamp goes off after a short interval.

4.03 Perform the test as follows:

- (1) Depress AL and ST switches on data set.

Requirements: MB, MR, and TM lamps light and MC lamp goes off after SD and RD lamps light.

- (2) Observe MC lamp for 1 minute.

Requirement: MC lamp remains off.

- (3) Release AL and ST switches.

B. Digital Loopback Self Test

4.04 This test checks the transmitter and receiver of a local and a distant data set and the facilities connecting the data sets. The customer interfaces are not checked. Test data generated and transmitted by the local data set is looped back internally from the receiver output to the transmitter input of the distant data set and retransmitted. This data is received by the local data set and compared to the original transmitted data. If the distortion threshold (35 percent) is not exceeded, the MC lamp goes off after a short interval.

Note: The distant data set can be a 103J, 103JR, 113C, 113CR, 113D, or 113DR.

4.05 Perform the test as follows:

- (1) Place a call to distant station. If distant data set is already in DL mode, it will answer automatically.
- (2) If distant data set does not answer automatically, instruct attendant at distant station to depress DL switch on data set and go to data mode.
- (3) On local data set, depress ST switch and go to data mode.

Requirements: On local data set, MR and TM lamps light and MC lamp goes off after SD and RD lamps light.

- (4) Observe MC lamp on local data set for 2 minutes.

Requirements: If MC lamp remains off, both data sets and the line facilities are operating properly. If MC lamp remains lighted, the round-trip distortion exceeds 35 percent. Since the distortion in the two directions may be additive, no conclusion about the proper operability of the data sets and the line facilities may be drawn.

- (5) Release ST switch on local data set. Call distant station and have DL switch released.

C. End-to-End Self Test

4.06 This test checks the transmitter and receiver of a local and a distant data set and the facilities connecting the data sets. The customer interfaces are not checked. Both data sets generate and transmit test data to each other. If the distortion threshold (35 percent) is not exceeded, the MC lamps on both data sets go off after a short interval.

Note: The distant data set can be a DS 103J, 103JR, 113C, 113CR, 113D, or 113DR.

4.07 Perform the test as follows:

- (1) Call distant station and arrange to conduct an end-to-end self test.
- (2) Depress ST switch on both data sets.
- (3) Go to data mode at both stations.

Requirements: On both data sets, MR and TM lamps light and MC lamp goes off after SD and RD lamps light.

- (4) Observe MC lamp on both data sets for 2 minutes.

Requirements: If MC lamps remain off, both data sets and the line facilities are operating properly. If MC lamps remain lighted, the distortion exceeds 35 percent.

- (5) At end of test, go to talk mode and then release ST switch on both data sets.

5. ADTS TEST PROCEDURES

A. General

5.01 This part provides instructions necessary for the proper operation of ADTS from field data sets. Included are instructions for entering and leaving the system and for performing installation and maintenance tests.

5.02 Operations involving ADTS require man/machine interaction. With DIVA, the information is entered into ADTS by tones from a TOUCH-TONE dial. The system outputs a message by a voice response unit, and the user receives the message via the telephone handset.



Every entry from a TOUCH-TONE dial must be followed by a TOUCH-TONE star () except when calling the DIVA port number. To avoid repetition, the star entry has not been included in the text but should be understood as included whenever an entry is mentioned.*

5.03 The ADTS must be on-line and DIVA must be up to accept DIVA tests.

Functions Available Via DIVA (Table B)

5.04 The test functions available via DIVA initiate a static or dynamic test of a data set. When 3 is used as a prefix with a test function, a fast test is performed on the data set without review of the line card information and without receiving test instructions.

5.05 **Test Function List:** With an entry of 8, DIVA will respond with a message of all test functions that can be performed on DS 113D-L1/2.

5.06 **Loopback Test:** This function provides a loopback test of DS 113D-L1/2 by the ADTS. The loopback test is initiated by entering 52; the fast loopback test by entering 352.

5.07 **Error Run Test:** This function provides an error run test between the data set and the ADTS in each direction (half duplex). A 921A DTS is required at the data set. Bit errors are automatically recorded for various combinations of pseudorandom data sequences and for various periods of time. The

data sequences and the periods of time are user specified. Use of the 921A DTS requires an initial test setup as described in paragraph 5.39. The error run test is initiated by entering 37; the fast error run test by entering 337.

5.08 **Results:** This function provides results of the most recent test of the data set. The results function is initiated by entering 7. In response to the results function entry, the ADTS gives the audible query WHAT IS THE TELEPHONE OR SPECIAL SERVICE CIRCUIT NUMBER? After receiving a number, the ADTS outputs the results in a format similar to the following:

THE TEST RESULTS ARE:

THE DATA SET CODE IS (data set code)

THE RECEIVED SIGNAL LEVEL IS OUT OF LIMITS

WHAT IS THE FUNCTION YOU WISH TO PERFORM?

5.09 **Stop:** This function stops the present function and requests a new function. The stop function is initiated by entering #73.

5.10 **Off:** This function stops the present function and disconnects the DIVA port. The off function is initiated by entering #63.

Accessing ADTS

5.11 Access to ADTS by DIVA is obtained by placing a call to a DIVA port number. Depending on the mode of ADTS and the mode of DIVA, one of four actions will occur:

- (a) Busy signal; all DIVA ports are busy. Try again later.
- (b) Call not answered; either ADTS or DIVA is in the down mode.
- (c) Call answered; the user will hear a 1-second burst of answer tone. Following the answer tone will be the audible query: THIS IS THE AUTOMATIC DATA TEST SYSTEM. PLEASE ENTER THE PASSWORD. Once the password has been entered, the system responds with PLEASE ENTER THE FUNCTION YOU WISH TO PERFORM.

(d) Call answered; the user will hear the password query and then the following: THE ADTS IS OFF-LINE. PLEASE ENTER THE FUNCTION YOU WISH TO PERFORM. This is only a temporary situation. Retry the access in a minute or two.

5.12 The user may shorten the password-function request formalities by inputting both the password and the desired function in one entry (no intervening *). If both the password and function are valid, ADTS begins executing the function immediately. To shorten the time required to set up a test, answers to familiar questions asked by DIVA may be given while the question is in progress.

5.13 Information is entered into ADTS by letters or numbers on the TOUCH-TONE dial. Numbers are entered into ADTS by depressing the desired digits on the TOUCH-TONE dial. Letters are entered into ADTS by using the following format:

- (a) Depress #.
- (b) Depress button with desired letter on it.
- (c) Depress a number (1, 2, or 3) corresponding to the letter's position on the button [depressed in (b)].

5.14 In response to a YES or NO question, the following format is used:

- (a) YES, enter one (1).
- (b) NO, enter zero (0).

5.15 The user can again listen to the last spoken message, by entering #* (Table A).

Performing Tests

5.16 To start a test, the user enters the desired number code from Table B. The ADTS response is WHAT IS THE TELEPHONE OR SPECIAL SERVICE CIRCUIT NUMBER? After the number has been entered, the ADTS response is YOU HAVE ENTERED (telephone or special service circuit number). IS THAT CORRECT? The user enters 1 for YES or 0 for NO. If the response is incorrect, ADTS repeats the original query.

5.17 If the response is correct, ADTS will attempt to find a line card file (LCF). If an LCF is

found, ADTS will use the data set code to find the test program. If there is a test program for the data set code and test function entered, ADTS will continue. If no test program is found, ADTS will abort the test with the following message: THE ADTS CANNOT RUN SELECTED TEST ON THIS DATA SET. (Since there are test programs available for DS 113D-52 and 37—this response indicates that the wrong test code was entered.)

5.18 If both an LCF and test program are found, the LCF information is given to the user. The user is then given a chance to make any necessary changes.

5.19 If no LCF is found, the ADTS response is THE DATA SET IS NOT ON FILE. ENTER THE DATA SET CODE. The user must then answer this question and others to create an LCF. After entry of the data set code, ADTS checks for the test program.

5.20 After the LCF information has been given or after new line card information has been entered ADTS instructs the user TO CORRECT ERRORS ENTER ONE. IF NO ERRORS, ENTER ZERO. If a 1 is entered, ADTS repeats the line card information query.

5.21 If no corrections are made to the LCF, ADTS asks ARE YOU CALLING FROM THE DATA SET? If the user is calling from a data set, the user must hang up. ADTS will then call the data set for testing. After the test has been completed, ADTS calls the data set again to give the user the results of the test. The test instructions direct the user on this procedure.

5.22 The ADTS asks the user DO YOU WANT INSTRUCTIONS? If requested, ADTS will supply test instructions. These instructions are to prompt the user, not to replace the data set BSP instructions.

5.23 After the instructions, ADTS gives the following message: WHEN READY, ENTER ONE. Upon receipt of a 1, ADTS responds THANK YOU. A pause will follow the thank you message as ADTS attempts to seize the hardware needed for the test. If the test hardware is busy performing another test or a self test, ADTS gives the following message: THE ADTS TEST EQUIPMENT IS BUSY, PLEASE WAIT. When the test hardware becomes available, ADTS outputs THE TEST IS READY TO START.

5.24 At completion of the test, the user receives a short message describing the test results.

TABLE A
TOUCH-TONE CODES FOR DIVA

FUNCTION	DEPRESS BUTTON(S)	DESCRIPTION
1, 2, 3, . . .etc.	Appropriate button(s)	Digits
#	#	Prefix character.
*	*	TOUCH-TONE star. Used at end of all entries as EOL character.
A,B,C, . . .etc.	Depress number sign, button on which character appears, and digit corresponding to the relative position of the letter (1,2, or 3). Example: For the letter A #21	Alphabetic characters.
Yes	1*	Answer yes to a question.
No	0*	Answer no to a question.
Repeat	#*	Repeats last message spoken by the system.
Telephone Number	Example: 3115552368*	Enter telephone number in sequence followed by EOL.
Data Set Code	Example: 202#23* Example: 202#235* Example: 401#515*	202C 202C5 401J5
Data Set Transmit Level	Example: 12*	-12 dBm. Eliminate sign and units designation. Enter numerical value.

When the data set fails, the system gives the reason(s) for failure. After giving the results of the data set test, the system returns to the function query.

Leaving ADTS

5.25 Manual Abort: Whenever the system is expecting user input, the user can abort the operation by entering #73 (the letter S) or #63 (the letter O). The letter S, for STOP, causes ADTS to abort the operation and return to the function query. The letter O, for OFF, causes ADTS to abort the operation and the DIVA port to hang up.

5.26 Automatic Abort: The ADTS automatically performs the equivalent of a user OFF if the user does not respond to a system request. Thirty seconds without a user entry after the original function query, ADTS will repeat the query. Thirty seconds after the second query without a user entry, ADTS will repeat the query for the third time. Thirty seconds after the third query without a user entry, ADTS will abort the task and hang up. If incorrect or illogical entries are made three successive times, ADTS will perform the equivalent of an OFF. After each invalid entry, an appropriate error message such as THE NUMBER IS INVALID, PLEASE RE-ENTER will be spoken. After a third invalid entry, ADTS will abort the task and hang up.

TABLE B
FUNCTIONS AVAILABLE FROM DIVA

FUNCTION	DESCRIPTION	NORMAL	FAST
Test List	Lists valid test functions.	8 *	
Loopback Test	Static test of a data set.	52 *	352 *
Error Run Test	Tests a data set with data test set connected.	37 *	337 *
Results	Outputs results of most recent test of a data set.	7 *	
STOP	Stops present function and requests new function.	#73 *	
OFF	Stops present function and disconnects.	#63 *	

B. Loopback Test

5.27 Call the DIVA port number of the serving ADTS, using a TOUCH-TONE (TT) dial or pad. A 1-second answer tone will be heard in the handset. After the answer tone will be the following: THIS IS THE AUTOMATIC DATA TEST SYSTEM. PLEASE ENTER THE PASSWORD.

Note 1: If the above message is not heard, refer to paragraph 5.11.

Note 2: TOUCH-TONE stars are shown hereafter as required.

5.28 Enter the 4-character password, followed by a *, on the TT dial. ADTS will respond with PLEASE ENTER THE FUNCTION YOU WISH TO PERFORM.

5.29 Enter 52* on the TT dial. (The fast test, which omits line card review and test instructions, may be requested by entering 352*.) ADTS will respond with LOOPBACK TEST. WHAT IS THE TELEPHONE OR SPECIAL SERVICE CIRCUIT NUMBER?

5.30 Enter the data set telephone number, followed by *, on the TT dial. ADTS will respond with YOU HAVE ENTERED (telephone number). IS THAT CORRECT?

5.31 If the number is correct, enter 1* on the TT dial. If the number is incorrect, enter 0* on the TT dial.

5.32 If 0* was entered, the query in paragraph 5.29 will be repeated. If 1* was entered, ADTS will

respond with THE DATA SET CODE IS 113D. TO CORRECT ERRORS ENTER ONE. IF NO ERRORS ENTER ZERO. Enter 1* to change the data set code. ADTS will respond ENTER THE DATA SET CODE. Follow this with an entry of 113#31* to select DS 113D.

5.33 ADTS continues: ARE YOU CALLING FROM THE DATA SET? Enter 1* for "yes"; enter 0* for "no".

5.34 This question follows: DO YOU WANT INSTRUCTIONS? A 1* reply requests instructions, which are as follows:

(1) When ADTS is called from a telephone other than at the data set: DEPRESS THE DL BUTTON. THE ADTS WILL CALL TO TEST THE DATA SET.

(2) When ADTS is called from the data set telephone: DEPRESS THE DL BUTTON. ON THE TONE HANG UP THE DATA SET. THE ADTS WILL CALL TO TEST THE DATA SET. AT THE COMPLETION OF THE TEST, THE ADTS WILL CALL THE DATA SET AGAIN TO REPORT THE TEST RESULTS.

ADTS continues: DO YOU WANT THESE INSTRUCTIONS REPEATED? Enter 1* for "yes"; enter 0* for "no". A "yes" answer causes the instructions to be repeated.

The ADTS then gives the message WHEN READY ENTER ONE.

5.35 When the user is satisfied that the instructions are understood, enter 1*, to which the

ADTS responds THANK YOU. THE TEST IS READY TO START.

5.36 On satisfactory conclusion of the test the ADTS gives the results as follows:

THE TEST RESULTS ARE:

THE DATA SET TESTS OK. PLEASE ENTER THE FUNCTION YOU WISH TO PERFORM. If another test will not be performed at this time, enter #63* to disconnect from the DIVA port.

5.37 If the data set failed the test, one or more of the following messages is given:

- BUSY TONE DETECTED. TEST ABORTED.
- REORDER TONE DETECTED. TEST ABORTED.
- THE ANSWER TONE WAS NOT RECEIVED. TEST ABORTED.
- THE F2 MARK FREQUENCY IS OUT OF LIMITS.
- THE F2 SPACE FREQUENCY DID NOT COME ON.

- The F1 SLICE FREQUENCY IS OUT OF LIMITS.
- THE F2 SPACE FREQUENCY IS OUT OF LIMITS.
- THE DATA SET DID NOT RELEASE FROM THE TEST MODE.
- DATA SET SENSITIVITY FAILED.

ADTS then asks DO YOU WANT DETAILED RESULTS? Enter 1* for "yes"; enter 0* for "no". With an entry of 1*, ADTS responds with the error data.

5.38 The ADTS repeats the function query. If another test will not be performed at this time, enter #63* to disconnect from the DIVA port.

C. End-to-ADTS Error Run Test Using 921A DTS

Initial Test Setup for 921A DTS

5.39 Perform the initial test setup for the 921A DTS when used to test DS 113D-L1/2 as follows:

STEP	ACTION	VERIFICATION
1	Connect data set to DTS using interface cable and Electronic Industries Association (EIA) adapter cord provided with DTS. <i>Note:</i> The interface cable is equipped with two 37-pin connectors. The 6-inch adapter cord is equipped with a 37-pin female connector and a 25-pin male connector. Connect interface cable from DATA SET (DCE) connector on DTS to 37-pin connector on adapter cord. Insert 25-pin connector on adapter cord into customer interface connector on data set.	
2	Connect DTS to a 105- to 129-Vac 60-Hz power source.	
3	Apply power to data set.	
4	On front of DTS, set POWER switch to ON.	POWER lamp lights.

SECTION 591-040-502

STEP	ACTION	VERIFICATION
5	<p>Press RST on keyboard.</p> <p>Note: If RST is pressed during a test, the test is ended and the DTS recycles to this step.</p>	<p>Display reads (briefly) version number of DTS. DTS then performs self tests. If DTS is defective, display reads— TEST FAILED If DTS is satisfactory, display reads— DATA SET:</p>
6	<p>Remove EIA interface module from storage and ensure that all 25 interface module switches are in TERM position.</p>	
7	<p>On right side of DTS, ensure that locking lever is in OPEN position.</p>	
8	<p>Insert interface module into slot.</p>	
9	<p>Move locking lever to CLOSE position.</p>	
10	<p>On front of DTS, ensure that all 37 DCE interface lead switches are in NORM position.</p>	
11	<p>Enter 20.</p> <p>Note: To delete a wrong entry on keyboard during any test, press back arrow (←).</p>	<p>Display reads— DATA SET: 20</p>
12	<p>Press GO.</p>	<p>Display reads— BIT RATE:</p>
13	<p>Enter 03.</p>	<p>Display reads— BIT RATE: 03</p>
14	<p>Press GO.</p> <p>Note: If GO or TST is pressed at an unauthorized point in a test, the test is ended and the DTS recycles to this step.</p>	<p>Display reads— TEST SEQ:</p>

5.40 Call the DIVA port number of the serving ADTS, using a TOUCH-TONE (TT) dial or pad. A 1-second answer tone will be heard in the handset. After the answer tone will be the following: THIS IS THE AUTOMATIC DATA TEST SYSTEM. PLEASE ENTER THE PASSWORD.

Note: If the above message is not heard, refer to paragraph 5.11.

5.41 Enter the 4-character password, followed by a *, on the TT dial. ADTS will respond with PLEASE ENTER THE FUNCTION YOU WISH TO PERFORM.

5.42 Enter 37* on the TT dial. (The fast test, which omits line card review and test instructions, may be requested by entering 337*.) ADTS will respond with WHAT IS THE TELEPHONE OR SPECIAL SERVICE CIRCUIT NUMBER?

5.43 Enter the data set telephone number, followed by *, on the TT dial. ADTS will respond with YOU HAVE ENTERED (telephone number). IS THAT CORRECT?

5.44 If the number is correct, enter 1* on the TT dial. If the number is incorrect, enter 0* on the TT dial.

5.45 If 0* was entered, the query in paragraph 5.42 will be repeated. If 1* was entered, ADTS will respond with THE DATA SET CODE IS 113D. ACCESS TYPE LAST USED WAS DDD, ADTS ORIGINATED. TO CORRECT ERRORS ENTER ONE. IF NO ERRORS ENTER ZERO.

5.46 Enter 1* to change the data set code. Follow this with an entry of 113#31* to select DS 113D.

5.47 Enter 1* to change the data set access type. The ADTS responds with ENTER THE DATA SET ACCESS TYPE.

1. DDD, ADTS ORIGINATED
2. DDD, DATA SET ORIGINATED
3. RTAU
4. RTS.

5.48 If there are no more corrections, the ADTS asks the following question: DO YOU WANT THE ADTS TO TRANSMIT TO THE DATA SET?

5.49 A "yes" or "no" answer is followed by the following question: DO YOU WANT TO USE THE STANDARD TEST PARAMETERS? (Standard test parameters are: test time, 15 minutes; word bit length, 511; bit error count). A "yes" answer is followed by PLEASE WAIT; a "no" answer by the following: ENTER THE TEST TIME IN MINUTES. ENTER THE WORD BIT LENGTH: 15, 63, 511, OR 2047 BITS.

5.50 If the answer to the question in paragraph 5.49 was "no", the following message is given: DO YOU WANT TO DETECT BLOCK ERRORS? The response to a "yes" is ENTER THE BLOCK WORD LENGTH. An acceptable answer is 1, 2, 4, 8, or 16. If response is "no", a bit error count is made. With the proper answer, the ADTS responds PLEASE WAIT, then ARE YOU CALLING FROM THE DATA SET? A "yes" or "no" answer is acceptable.

5.51 A "yes" reply to the question DO YOU WANT INSTRUCTIONS? prompts the following message if the ADTS is originating the call and the call is not initiated from the data set: THE ADTS WILL CALL THE DATA SET AND START THE TEST AFTER THE DATA SET ANSWERS. LEAVE THIS TELEPHONE OFF-HOOK TO RECEIVE THE TEST RESULTS. WHEN READY ENTER ONE.

5.52 When the call is from the data set the instructions are: ON THE TONE, HANG UP. THE ADTS WILL CALL AND TEST THE DATA SET. WHEN THE TEST IS COMPLETED, THE ADTS WILL CALL THE DATA SET TO REPORT THE TEST RESULTS OR YOU MAY CALL ADTS AND REQUEST THE TEST RESULTS.

ADTS Transmitting Data

5.53 If the ADTS is to transmit to the data set, this message follows: ADTS TEST DATA TRANSMISSION WILL BE PRECEDED BY 30 SECONDS OF GOOD DATA FOLLOWED BY THE INJECTION OF 10 BIT ERRORS.

5.54 During this initial period of data transmission, prepare the 921A data test set to receive the test data as indicated in the steps below. Receipt of bit errors is a positive indication that transmission is taking place. The time entered in Step 8 must be less than the time requested for the ADTS test, since erroneous errors will be produced if the 921A DTS looks for data when none is being transmitted.

STEP	ACTION	VERIFICATION
1	Ensure that initial test setup described in paragraph 5.39 has been performed.	Display reads— TEST SEQ:
2	Enter 55.	Display reads— TEST SEQ: 55

SECTION 591-040-502

STEP	ACTION	VERIFICATION
3	Press GO.	Display reads— TRANSMITTER=? 1=921 2=914 3=903
4	Enter 1, 2, or 3 to correspond to the type of DTS being used at distant end.	Typical display reads (briefly)— TRANSMITTER=1 1=921 2=914 3=903 Display then reads— D=DT 0=SP 1=MK 2=2047 5=511 6=63
5	Enter 5.	Display reads (briefly)— 511 BIT ERROR TEST Display then reads— 1=BIT ERRORS 2=BLOCK ERRORS
6	Enter 1.	Display reads— ???? SECONDS
7	Place data set in data mode.	On DTS, DSR indicator lights.
8	Enter 0900. <i>Note:</i> To perform functions listed below, press associated key.	Display reads (briefly)— 0900 SECONDS Display then reads— 0000 BITS IN ERROR From this point, display counts number of bits in error. If sync is lost during test, display flashes OSYN. If this occurs, test must be repeated by pressing A. At end of test, display reads TEST COMPLETE, total sync losses, and total bits in error.
	KEY FUNCTION	
	A Repeat test.	
	B Display time remaining in test.	
	C Clear display.	
	D End test.	
	E Inject 8 errors into data stream.	
	F Force out-of-sync condition.	
		Requirement: Total bits in error are less than 6.

ADTS Receiving Data

5.55 If the ADTS is to receive data from the data set, repeat the steps in paragraph 5.54 at the transmitting station.

5.56 After all instructions are performed and the test is complete, the ADTS gives this message: **THE TEST RESULTS ARE (results). THE TEST TIME WAS (number of) MINUTES. DO YOU WANT TO RUN ANOTHER TEST?**

5.57 The ADTS gives error message(s) as shown in paragraph 5.37 if the data set test was not performed successfully.

6. REFERENCES

6.01 Additional information concerning DS 113D and use of the ADTS is contained in the following publications:

SECTION	TITLE
107-402-100	921A Data Test Set—Description and Operation
314-205-501	Data Systems—DATAPHONE® Service and Data Access Arrangements on Direct Distance Dialing Network—Test Requirements for Subscriber, Foreign Exchange, and Remote Exchange Lines

SECTION	TITLE	SECTION	TITLE
590-010-500	J1P005 Automatic Data Test System (ADTS)—Operation From Field Locations	591-040-500	Data Set 113D-L1/2 Transmitter-Receiver—Test Procedures
591-040-100	Data Set 113D-L1/2 Transmitter-Receiver—Description and Operation	591-040-501	Data Set 113D-L1/2 Transmitter-Receiver—Test Procedures Using 921A Data Test Set
591-040-200	Data Set 113D-L1/2 Transmitter-Receiver—Installation and Connections		