

DATA SET 201C-L1D
TRANSMITTER-RECEIVER
TEST PROCEDURES USING 921A DATA TEST SET

CONTENTS	PAGE	CONTENTS	PAGE
1. GENERAL	1	K. Digital Loopback Test (4-Wire Private Line)	17
A. Test Capabilities	2	L. End-to-End Block Error Test	18
B. Restrictions on Use of Self Tests	2	2-Wire Private Line	18
2. INSTALLATION TESTS	2	4-Wire Private Line	20
3. MAINTENANCE TESTS	2	M. Start-Up Tests	21
4. TEST PROCEDURES	3	Analog Loopback Start-Up Test	21
A. Analog Loopback Self Test	4	Digital Loopback Start-Up Test (4-Wire Private Line)	23
B. Digital Loopback Self Test (4-Wire Private Line)	9	End-to-End Start-Up Test	24
C. End-to-End Self Test	10	5. REFERENCES	26
2-Wire Private Line	10		
4-Wire Private Line	10	1. GENERAL	
D. Receiver Margin Self Test	11	1.01 This section contains test procedures using the 921A data test set (DTS) and the self-test capabilities of data set (DS) 201C-L1D. Test procedures using the 914-type DTS and the self-test capabilities of DS 201C-L1D are contained in Section 592-029-520. These procedures are to be used when testing DS 201C-L1D on an initial installation or during a maintenance visit.	
E. Remote Test	11	1.02 When this section is reissued, the reason for reissue will be contained in this paragraph.	
2-Wire Private Line	11	1.03 When DS 201C-L1D is used as an extension of a DS 209A-L1 multiplex system, refer to Section 592-032-300 for maintenance information. Procedures used at the serving test center (STC)	
4-Wire Private Line	11		
F. Initial Test Setup for 921A DTS	11		
G. Analog Loopback Test	13		
H. CA-CB (RS-CS) Interval Test	14		
I. Transmitter Clock Test	14		
J. Transmitter Output Test	15		

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

to maintain this system are contained in Section 666-511-504.

1.04 When DS 201C-L1D is used as a subrate off-net extension of the Digital Data System (DDS), refer to Section 314-919-300 for maintenance information. Procedures used at the hub office STC to maintain the analog portion of this system are contained in Section 666-511-501.

A. Test Capabilities

1.05 Test circuitry built into DS 201C-L1D permits the following self tests to be performed: analog loopback, digital loopback, end-to-end, and receiver margin. The test circuitry also facilitates the remote test of the data set from a test center. Additional tests require the use of external test equipment such as the 921A DTS.

1.06 The 921A DTS (Fig. 1) is a portable, general purpose data test set that provides the serial testing capabilities of the 914C DTS and is compatible with the 914C DTS for the testing of serial data sets. The 921A DTS also provides additional testing capabilities that are described in Section 107-402-100. Input to the 921A DTS is made through a 20-button keyboard. A 32-character display provides operator prompting and test results.

B. Restrictions on Use of Self Tests

1.07 If DS 201C-L1D is used as a remote extension of a DS 209A-L1 multiplex system or as a subrate off-net extension of the digital data system (DDS), the following restrictions apply to the use of the self tests:

(a) The analog loopback self test cannot be performed at a remote extension with options as installed. If the internal timing option is temporarily installed or the M23B cord is temporarily removed at the remote extension, this test can be performed.

(b) The digital loopback self test cannot be performed from a remote extension (with options as installed) in toward DS 201C-L1D collocated with DS 209A-L1. If the internal timing option is temporarily installed or the M23B cord is temporarily removed at the remote extension, this test can be performed.

(c) The digital loopback self test cannot be performed from a remote extension (with options as installed) in toward a hub office of the DDS. If the internal timing option is temporarily installed or the M23B cord is temporarily removed at the remote extension, this test can be performed.

2. INSTALLATION TESTS

2.01 This part provides the sequence in which tests are to be performed following installation of the data set. This test sequence provides a method of verifying that the installation is satisfactory. The self-test features of the data set are used for all installation testing—external test equipment is not required.

2.02 Before proceeding with the tests, verify that the private line meets the requirements specified in Section 314-410-500. For a 2-wire private line, the installation test sequence is shown in Fig. 2. For a 4-wire private line, the installation test sequence is shown in Fig. 3.

3. MAINTENANCE TESTS

3.01 This part provides the sequence in which tests are to be performed when clearing a trouble report and during a maintenance visit to the data station.

3.02 When a trouble report is received, a test center is responsible for isolating the trouble to the data station or the transmission facility. The procedure for doing this is shown in Fig. 4 (2-wire private line) and Fig. 5 (4-wire private line).

3.03 If the trouble seems to be in the data station equipment, a telephone company (telco) employee must be dispatched to conduct more extensive tests at the data station. The following equipment should be taken on a trouble visit:

- Spare data set
- 921A DTS

3.04 Refer to Fig. 6 (2-wire private line) and Fig. 7 (4-wire private line) for the sequence in which tests are to be performed by the telco employee at the data station. If the data set is replaced, the defective data set should be tagged

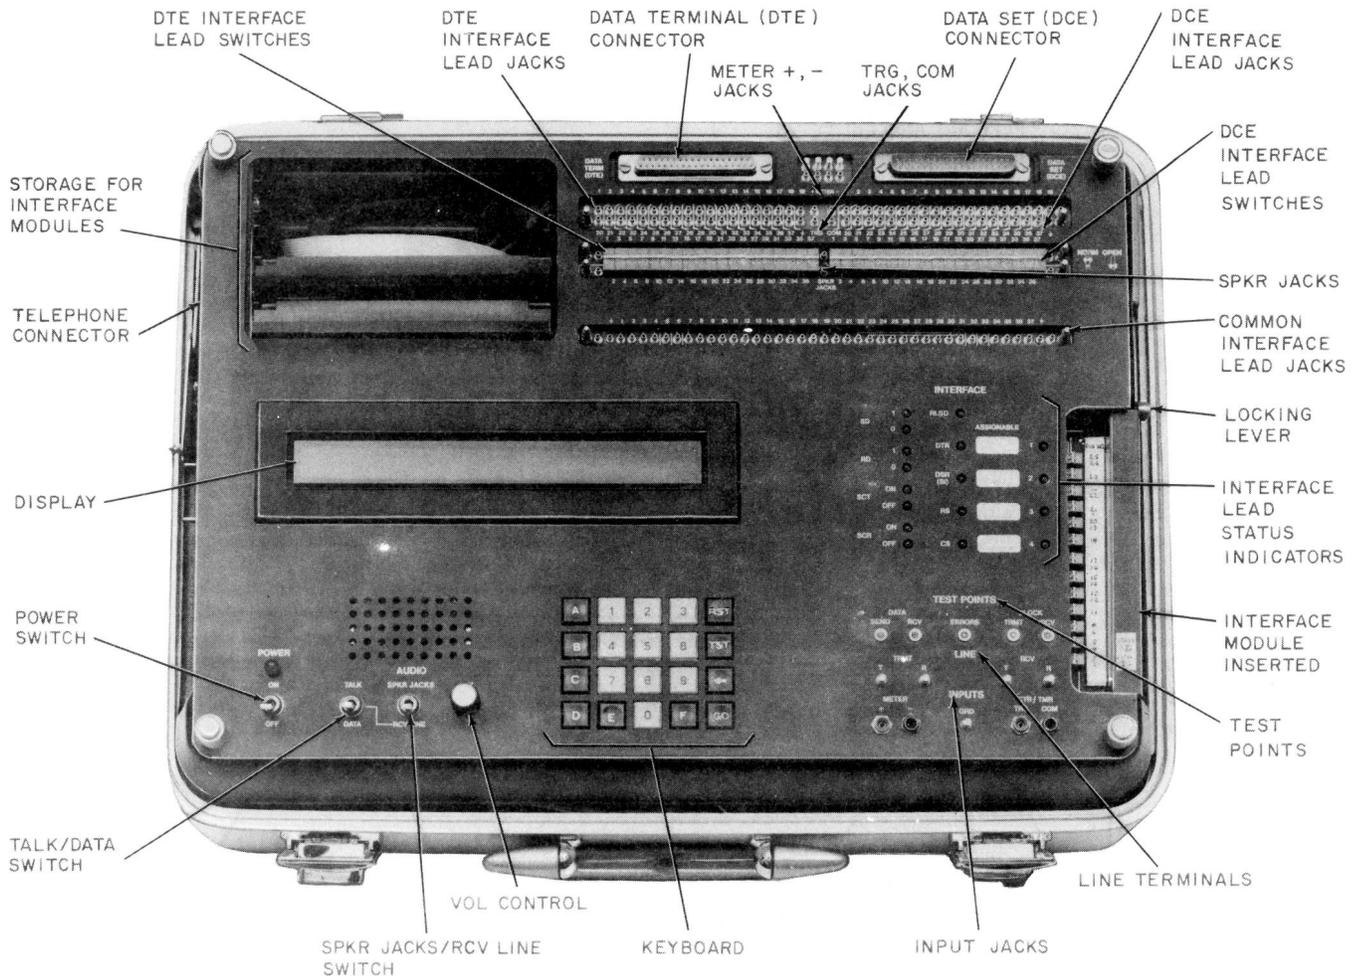


Fig. 1—921A Data Test Set—Front Panel

with a description of the trouble, carefully packed, and returned to the service center for repair. Verify that the replacement data set is equipped with the proper options before placing the data set in service.

3.05 If the trouble persists after the tests have been completed, proceed as follows:

- (a) Check that options installed in data set agree with those specified on service order.
- (b) Verify that customer-provided equipment (CPE) has been tested and is operating properly.
- (c) Check for physical damage to data station equipment.

(d) Verify that all cords and connectors are properly connected.

(e) Check for intermittent trouble in station wiring.

(f) Verify that data set and CPE are connected to a common ground.

(g) If trouble persists, request help from immediate supervisor.

4. TEST PROCEDURES

4.01 This part provides the procedures for the installation and maintenance tests.

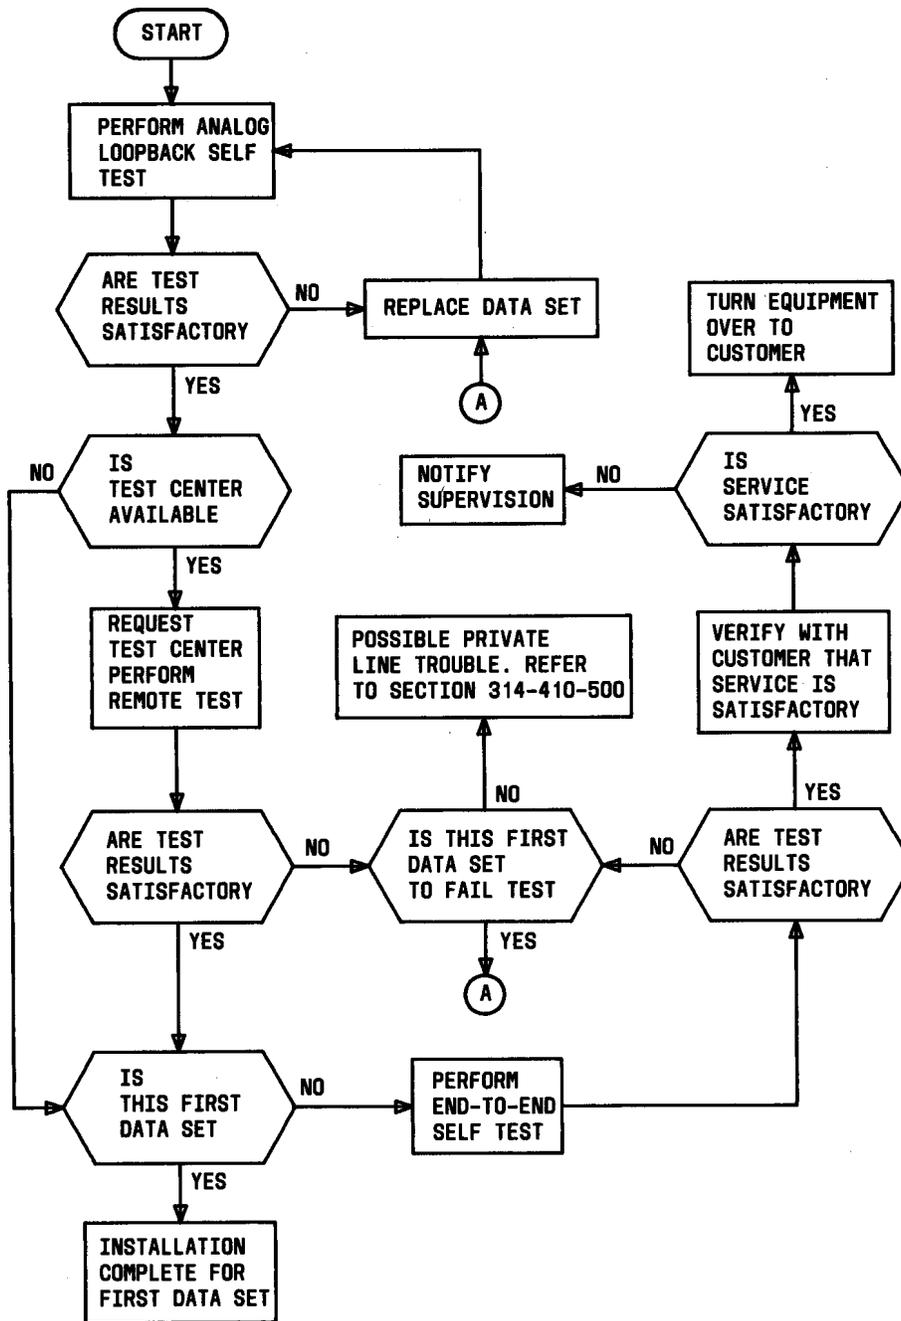


Fig. 2—Installation Test Sequence (2-Wire Private Line)

A. Analog Loopback Self Test

4.02 This test checks the data set transmitter and receiver. The customer interface is not checked. Test data generated by the data set is looped back internally from the transmitter output

to the receiver input. The received data is compared to the original data. Data errors and data set condition are indicated by the data set status lamps. The DL switch can be used to force a loss of synchronization to verify that the data set will recognize a data set failure condition.

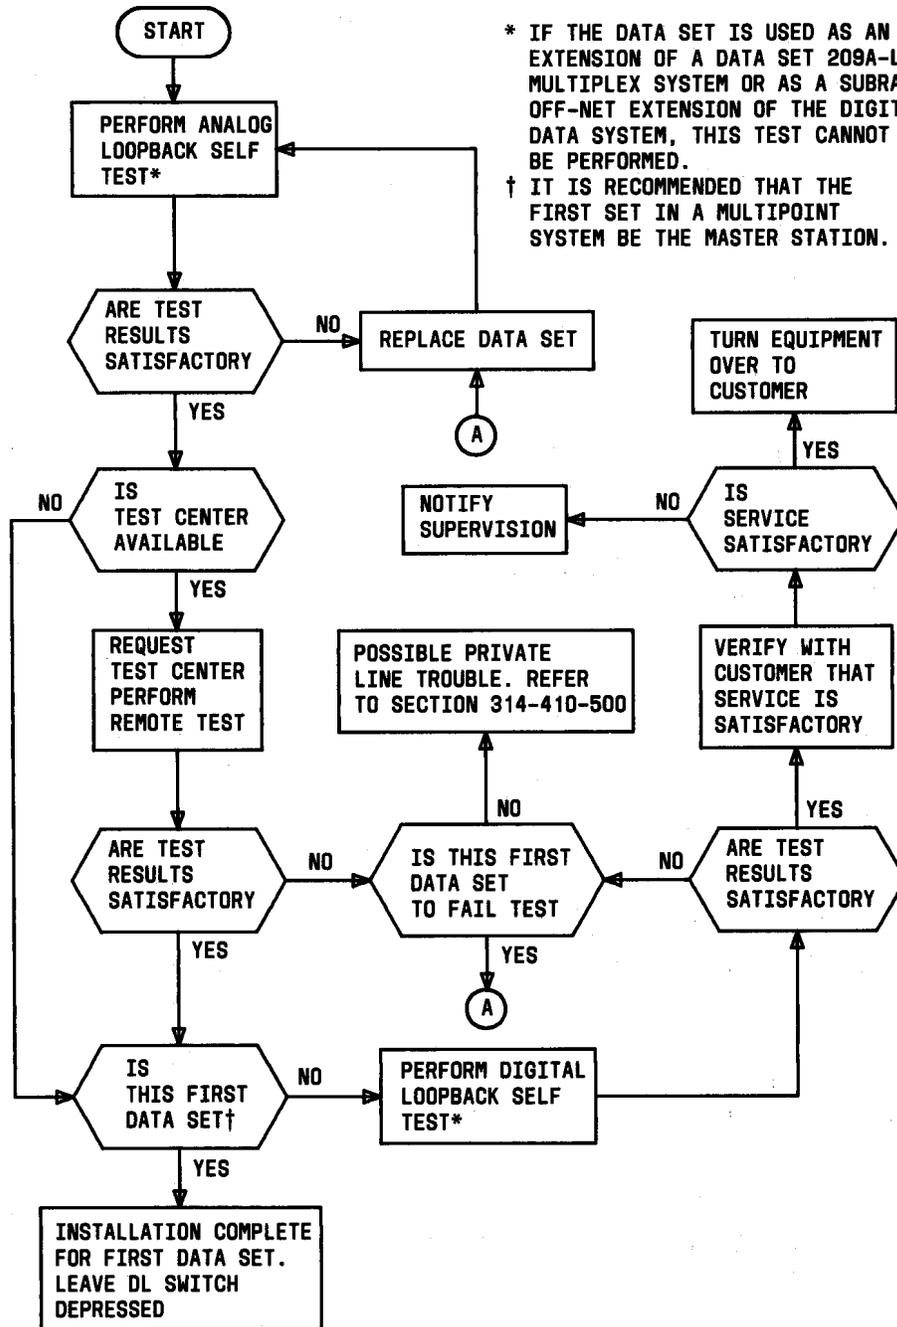


Fig. 3—Installation Test Sequence (4-Wire Private Line)

4.03 Perform the test as follows:

- (1) Ensure that data set is not transmitting or receiving data.
- (2) Depress AL and ST switches on data set.
- (3) Observe data set status lamps for at least 30 seconds.
- (4) Depress RO switch on data set.

Requirement: MC lamp is off continuously. All other lamps are lighted.

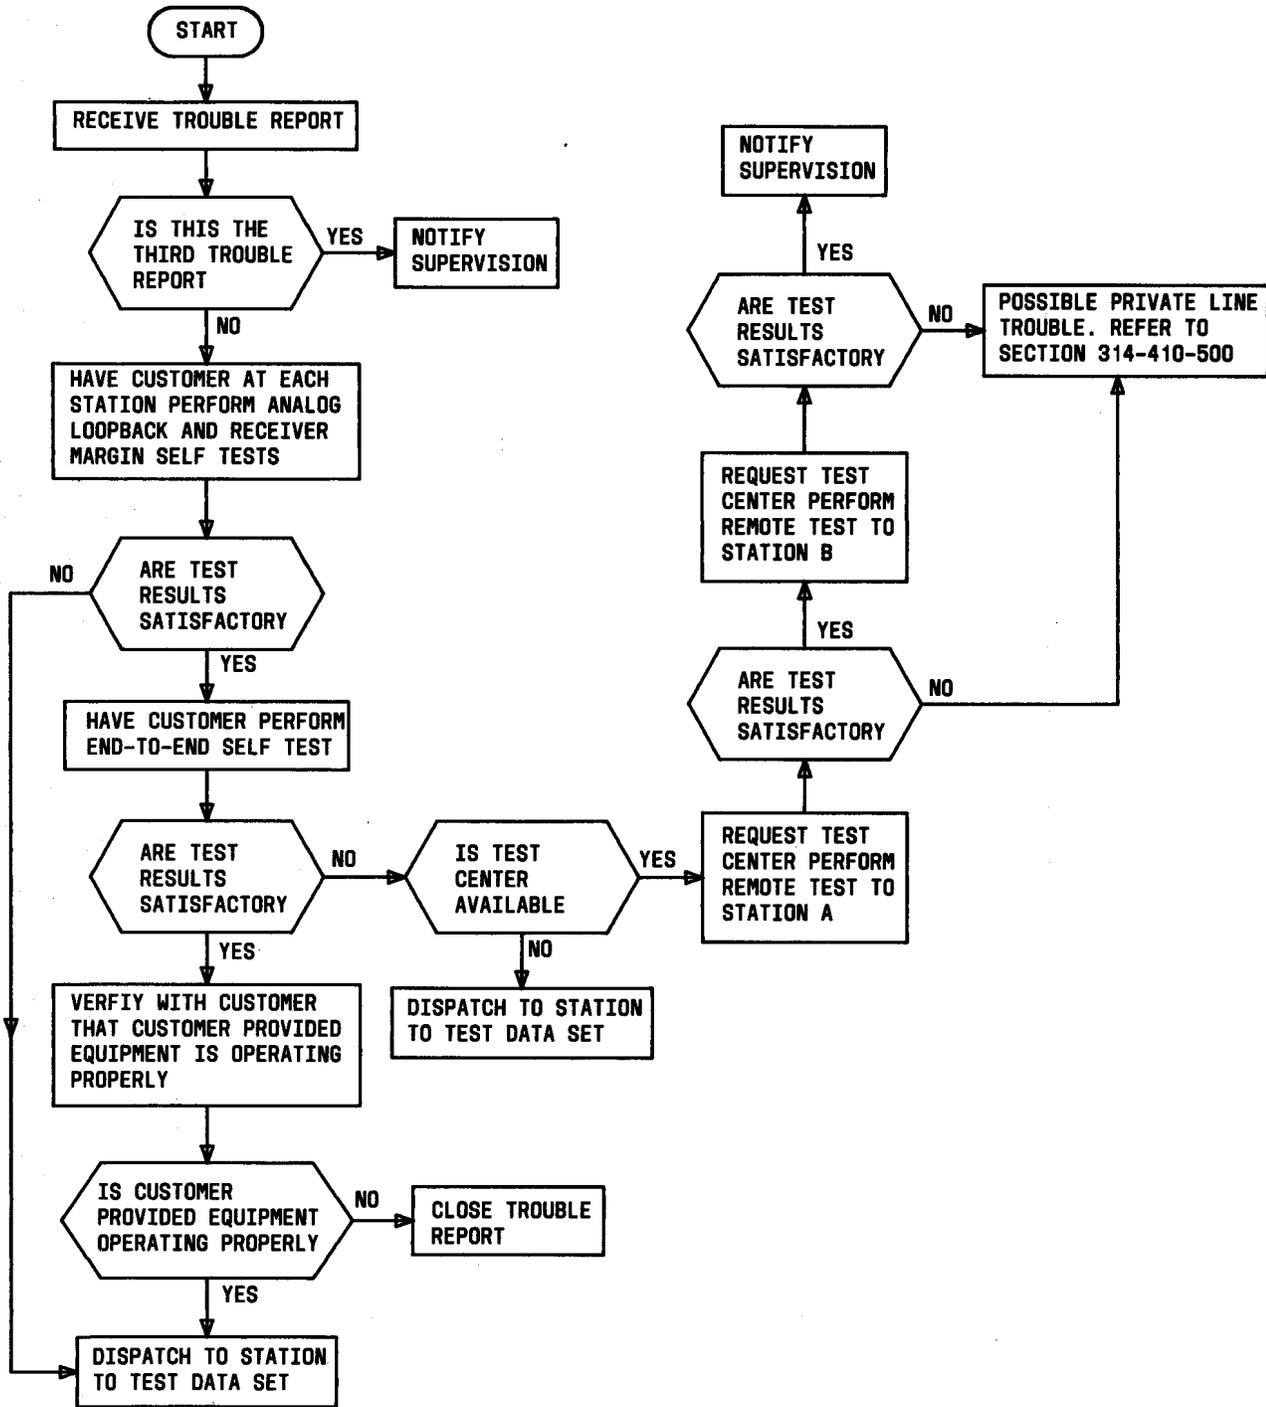


Fig. 4—Clearing Trouble Report (2-Wire Private Line)

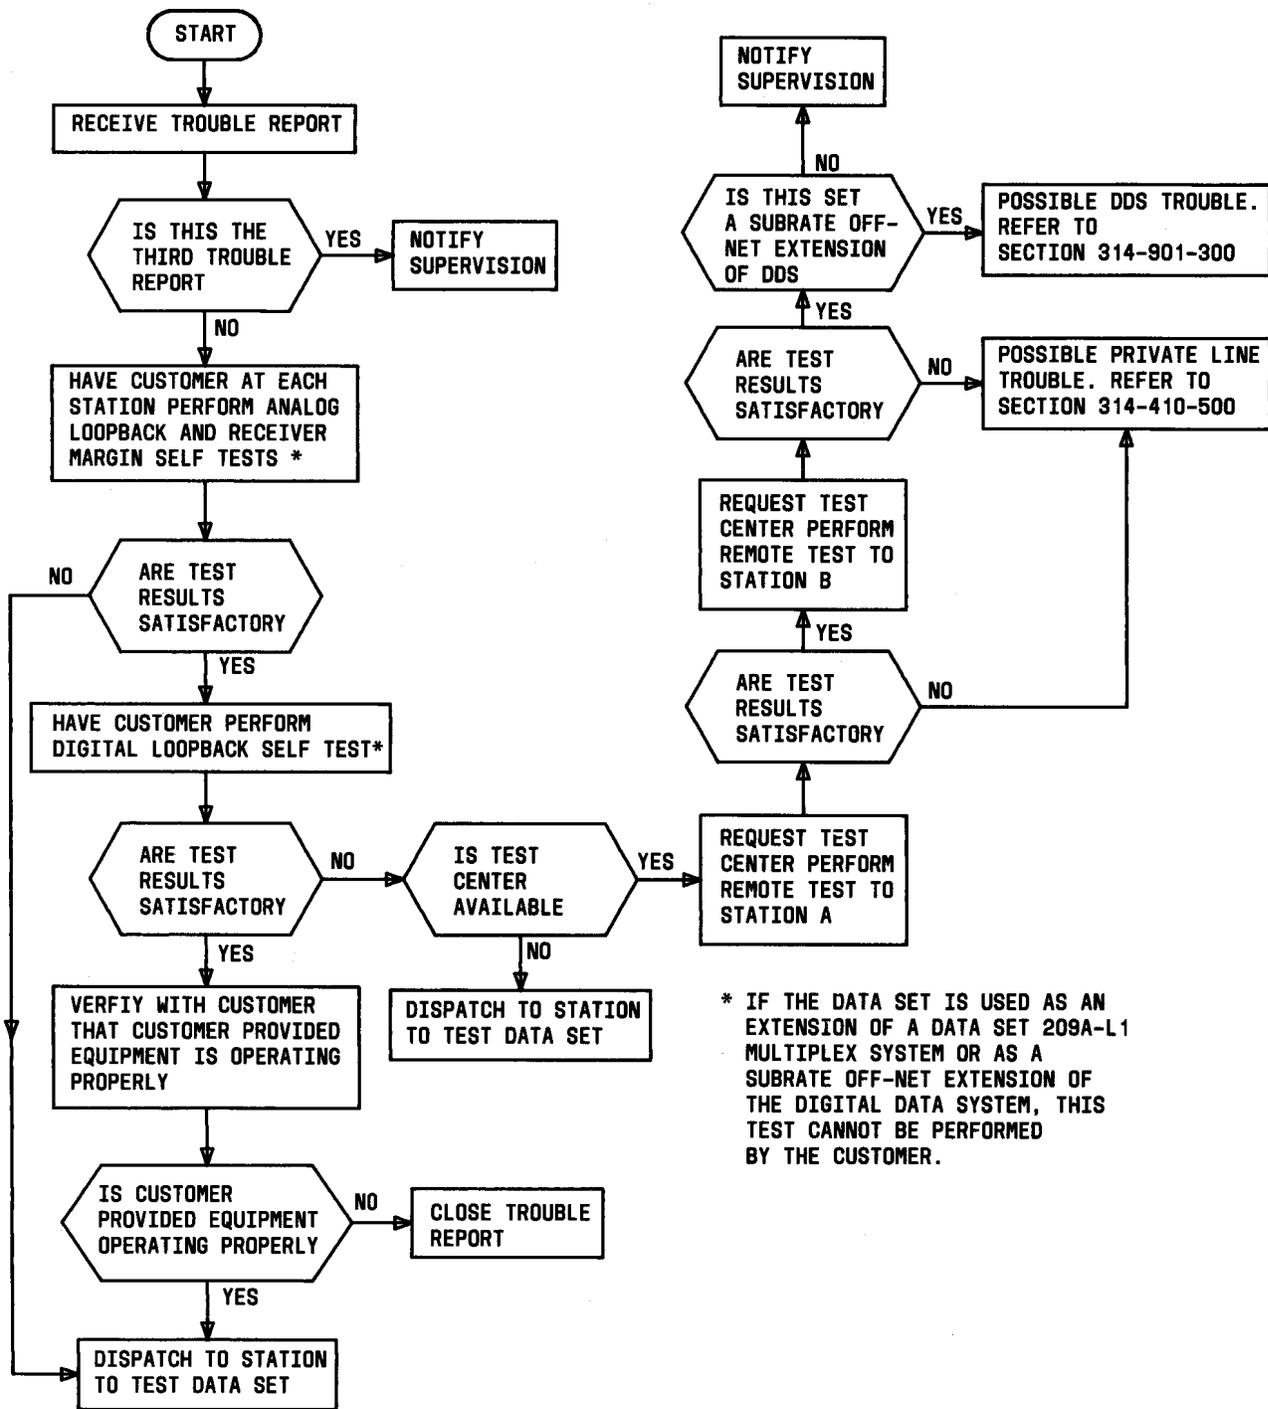


Fig. 5—Clearing Trouble Report (4-Wire Private Line)

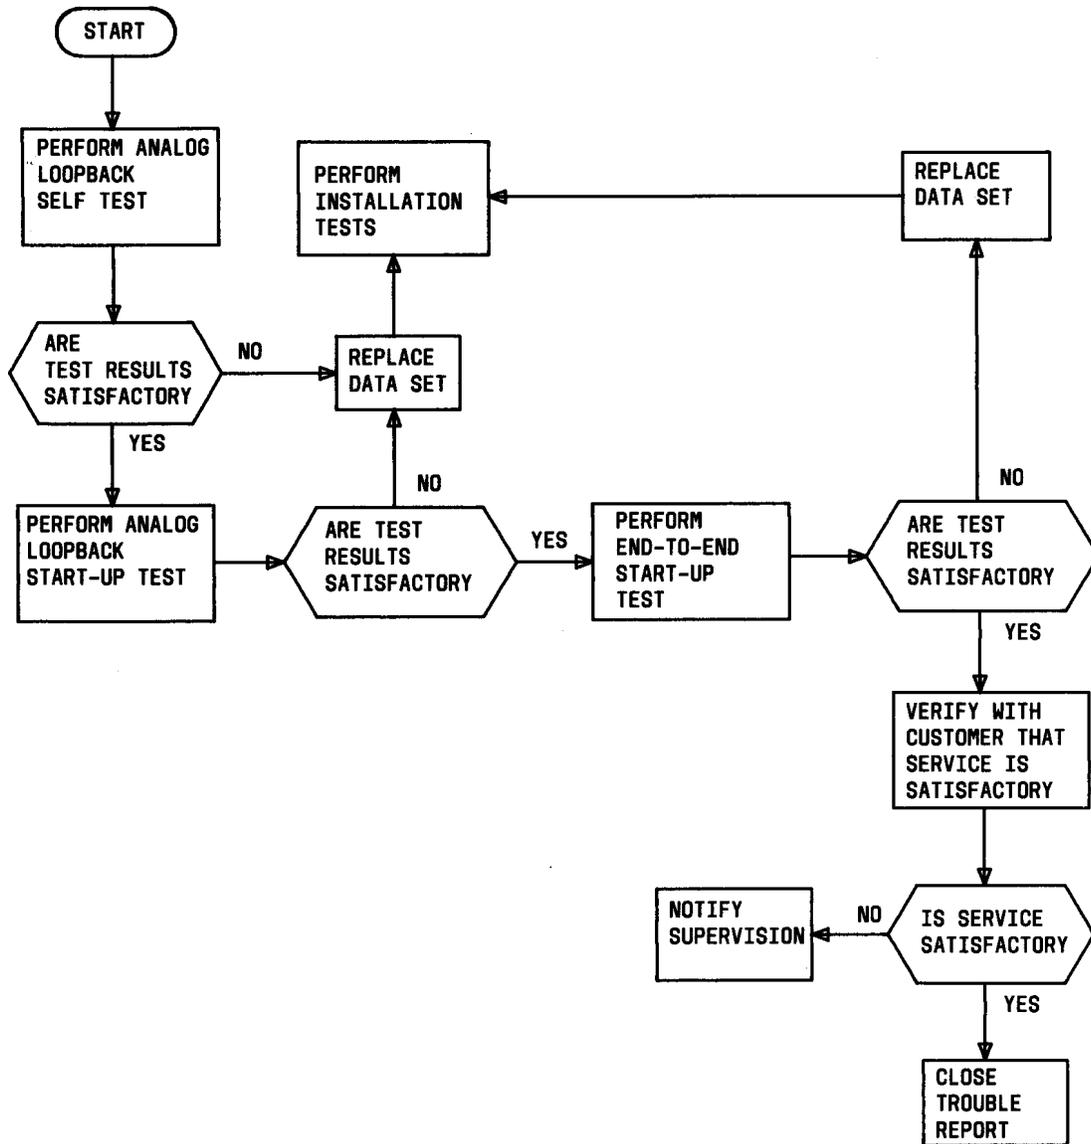


Fig. 6—Maintenance Test Sequence (2-Wire Private Line)

Requirement: RS and CS lamps go off. MC lamp lights. If data set is optioned for switched carrier (option XA or XE), CO lamp goes off. If data set is optioned for continuous carrier (option XB or XC), CO lamp remains lighted.

(5) Release RO switch.

Requirement: All lamps are lighted except MC.

(6) Depress DL switch on data set.

Requirement: MC lamp blinks. All other lamps are lighted.

(7) Release DL, AL, and ST switches.

Requirement: ON, MC, and MR lamps are lighted. All other lamps are off.

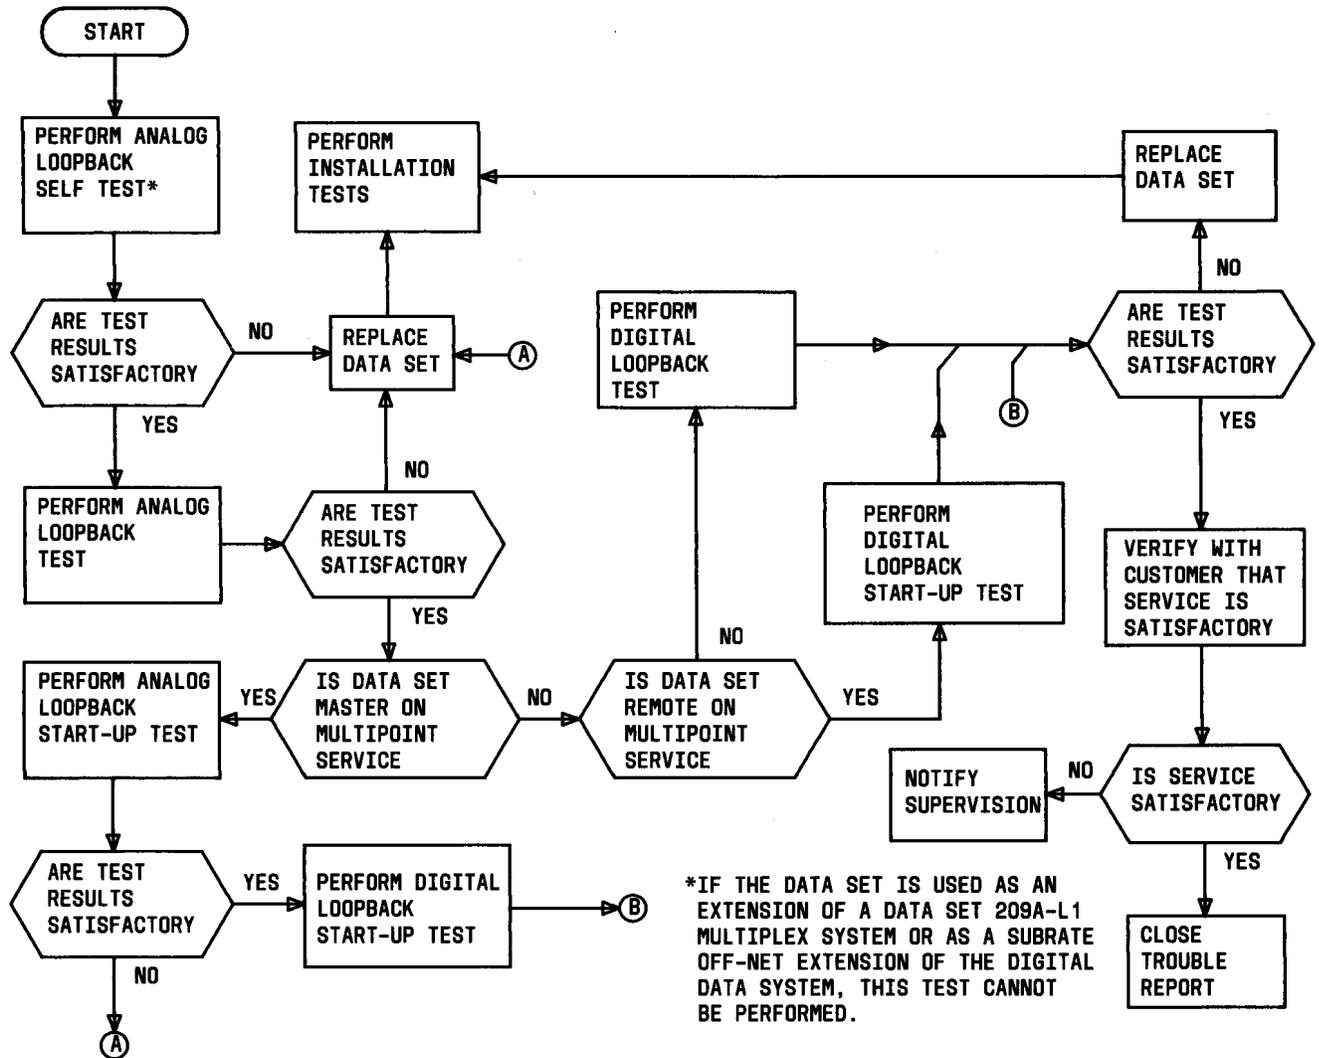


Fig. 7—Maintenance Test Sequence (4-Wire Private Line)

B. Digital Loopback Self Test (4-Wire Private Line)

4.04 This test checks the transmitter and receiver of a local and a distant data set and the facilities connecting the data sets. The customer interfaces are not checked. Test data generated and transmitted by the local data set is looped back internally from the receiver output to the transmitter input of the distant data set and retransmitted. This data is received by the local data set and compared to the original data. Data errors and data set condition are indicated by the status lamps on the local data set. The distant data set may be a 201C-L1D or a 201C-L1.

4.05 Perform the test as follows:

- (1) Ensure that data set is not transmitting or receiving data.
- (2) On local data set, depress ST switch.

Requirement: TM lamp lights.

- (3) Contact distant data station and have DL switch on data set depressed. Verify that TM lamp is lighted.

Requirement: On local data set, all lamps are lighted except MC.

SECTION 592-029-521

- (4) On local data set, depress DL switch.

Requirement: MC lamp blinks. All other lamps are lighted.

- (5) Observe MC lamp for ten 1-minute periods.

Requirement: MC lamp does not blink more than an average of two blinks per 1-minute period.

- (6) Contact distant data station and have DL switch on data set released. Verify that TM lamp is off.

- (7) On local data set, release DL and ST switches.

Requirement: TM lamp goes off.

C. End-to-End Self Test

4.06 This test checks the transmitter and receiver of a local and a distant data set and the facilities connecting the data sets. The customer interfaces are not checked. Identical test data is generated by both data sets, transmitted by one of the data sets, and compared to the data generated by the receiving data set. Data errors and data set condition are indicated by the status lamps on the data sets. The distant data set may be a 201C-L1D or a 201C-L1.

2-Wire Private Line

4.07 Perform the test as follows:

- (1) Establish voice communication between the data stations and arrange to conduct an end-to-end self test.
- (2) Ensure that neither data set is transmitting or receiving data.
- (3) On transmitting data set, depress ST switch.

Requirement: All lamps are lighted except CO.

- (4) On receiving data set, depress ST and RO switches.

Requirement: All lamps are lighted except RS, CS, and MC.

- (5) On transmitting data set, depress DL switch.

Requirement: On receiving data set, MC lamp blinks.

Note: If transmitting data set is not a 201C-L1D, MC lamp on receiving data set will not blink.

- (6) On transmitting data set, release DL switch.

- (7) On receiving data set, observe MC lamp for ten 1-minute periods.

Requirement: MC lamp does not blink more than an average of two blinks per 1-minute period.

- (8) Perform end-to-end self test in opposite direction by releasing RO switch on original receiving data set and depressing RO switch on original transmitting data set.

- (9) Repeat (5) through (7).

- (10) On both data sets, release test switches.

Requirement: On both data sets, TM lamp goes off.

4-Wire Private Line

4.08 Perform the test as follows:

- (1) Establish voice communication between the data stations and arrange to conduct an end-to-end self test.
- (2) Ensure that neither data set is transmitting or receiving data.
- (3) On both data sets, depress ST switch.

Requirement: On both data sets, all lamps are lighted except MC.

- (4) On both data sets, depress DL switch.

Requirement: On both data sets, MC lamp blinks.

Note: If one data set is not a 201C-L1D, MC lamp on other data set will not blink.

- (5) On both data sets, release DL switch.
- (6) On both data sets, observe MC lamp for ten 1-minute periods.

Requirement: On both data sets, MC lamp does not blink more than an average of two blinks per 1-minute period.

- (7) On both data sets, release ST switch.

Requirement: On both data sets, TM lamp goes off.

D. Receiver Margin Self Test

4.09 In this test, the data set is in the analog loopback mode, but the receiver compromise equalizer is bypassed and the distortion threshold at which the MC indicator will light is reduced. The MC indicator acts not only as an indicator of errors in the locally looped data stream, but also blinks on for 50 ms whenever the peak signal distortion measured by the demodulator exceeds the "half-way" point to the receiver decision threshold. The DL switch can be used to force an out-of-sync condition and cause the MC indicator to blink.

4.10 Perform the test as follows:

- (1) Ensure that data set is not transmitting or receiving data.
- (2) Depress AL and RT switches on data set.
- (3) Observe data set status lamps for at least 30 seconds.

Requirement: MC and MR lamps are off. All other lamps are lighted.

- (4) Depress DL switch on data set.

Requirement: MC lamp blinks.

- (5) Release DL switch.

Requirement: MC lamp goes off.

- (6) Release AL and RT switches.

Requirement: ON, MC, and MR lamps are lighted. All other lamps are off.

E. Remote Test

4.11 This test allows a test center to check the data set transmitter and receiver and the facilities connecting the data set and the test center. The customer interface is not checked.

2-Wire Private Line

4.12 For a 2-wire private line, an end-to-end self test is performed with a test center replacing one of the data sets. Refer to paragraph 4.07 for the required test procedures.

4-Wire Private Line

4.13 For a 4-wire private line, test data is generated and transmitted by a test center. This data is looped back internally from the receiver output to the transmitter input of the data set and retransmitted. The data is received by the test center and compared to the original data. Perform the test as follows:

- (1) Contact test center and request a remote test.
- (2) When directed by test center, depress DL switch on data set.

Requirement: TM lamp lights.

- (3) Test center performs remote test.
- (4) When directed by test center, release DL switch on data set.

Requirement: TM lamp goes off.

F. Initial Test Setup for 921A DTS

4.14 Perform the initial test setup for the 921A DTS when used to test DS 201C-L1D as follows:

STEP	ACTION	VERIFICATION
1	Connect data set to DTS using interface cable and Electronic Industries Association (EIA) adapter cord provided with DTS.	

SECTION 592-029-521

STEP	ACTION	VERIFICATION
	<p>Note: The interface cable is equipped with two 37-pin connectors. The 6-inch adapter cord is equipped with a 37-pin female connector and a 25-pin male connector. Connect interface cable from DATA SET (DCE) connector on DTS to 37-pin connector on adapter cord. Insert 25-pin connector on adapter cord into customer interface connector on data set.</p>	
2	Connect DTS to a 105- to 129-Vac 60-Hz power source.	
3	Apply power to data set.	Data set ON lamp lights.
4	On front of DTS, set POWER switch to ON.	POWER lamp lights.
5	Press RST on keyboard.	<p>Display reads (briefly) version number of DTS. DTS then performs self tests. If DTS is defective, display reads— TEST FAILED If DTS is satisfactory, display reads— DATA SET:</p>
6	Remove EIA RS-232-C interface module from storage and ensure that all 25 interface module switches are in TERM position.	
7	On right side of DTS, ensure that locking lever is in OPEN position.	
8	Insert interface module into slot.	
9	Move locking lever to CLOSE position.	
10	On front of DTS, ensure that all 37 DCE interface lead switches are in NORM position.	
11	Enter 62 on keyboard.	Display reads— DATA SET: 62
	<p>Note: To delete a wrong entry on keyboard during any test, press back arrow (←).</p>	
12	Press GO.	Display reads— BIT RATE:
13	Enter 24.	Display reads— BIT RATE: 24

STEP	ACTION	VERIFICATION
14	Press GO. <i>Note:</i> If GO or TST is pressed at an unauthorized point in a test, the test is ended and the DTS recycles to this step.	Display reads— TEST SEQ:

G. Analog Loopback Test

4.15 In this test, an analog loopback block error run is performed. The block error run checks the data set transmitter and receiver and the customer interface. Test data is generated by the 921A DTS and looped back internally from the

data set transmitter output to the receiver input. The received data is compared to the original data by the DTS. Data errors are indicated by the DTS display.

4.16 Perform the test as follows:

STEP	ACTION	VERIFICATION
1	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:
2	On data set, depress AL switch.	TM lamp lights.
3	On DTS, enter 55.	Display reads— TEST SEQ: 55
4	Press GO.	Display reads (briefly)— SELECT ERROR TEST Display then reads— D=DT 0=SP 1=MK 2=2047 5=511 6=63
5	Enter 5.	Display reads (briefly)— 511 BIT ERROR TEST Display then reads— 1=BIT ERRORS 2=BLOCK ERRORS
6	Enter 2.	Display reads— ????? BITS IN A BLOCK
7	Enter 01024.	Display reads (briefly)— 01024 BITS IN A BLOCK Display then reads— ???? SECONDS
8	Enter 0300.	

Note: To perform functions listed below, press associated key.

KEY FUNCTION

A Repeat test.	Display reads (briefly)— 0300 SECONDS
B Display time remaining in test.	Display then reads—
C Clear display.	

STEP	ACTION	VERIFICATION
	D End test. E Inject 8 errors into data stream. F Force out-of-sync condition.	BLK RCVD=0000 ERR=0000 From this point, display counts number of blocks received and number of blocks in error. If sync is lost during test, display flashes OSYN. If this occurs, test must be repeated by pressing A. At end of test, display reads TEST COMPLETE, total sync losses, total blocks received, and total blocks in error. Requirement: No blocks in error.
9	On data set, release AL switch.	TM lamp goes off.

H. CA-CB (RS-CS) Interval Test

turned **on** and the clear-to-send (CB) lead turns **on**.

4.17 This test measures the interval between the time the request-to-send (CA) lead is

4.18 Perform the test as follows:

STEP	ACTION	VERIFICATION
1	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:
2	On data set, depress AL switch.	TM lamp lights.
3	On DTS, enter 30.	Display reads— TEST SEQ: 30
4	Press GO. Note 1: Only the option actually installed in the data set need be tested. Note 2: To repeat test, press A.	Display reads RS-CS (CA-CB) interval in milliseconds. Requirement: Option XA—7 to 11 ms Option XB—7 to 11 ms Option XC—0 to 2 ms Option XE—138 to 158 ms
5	On data set, release AL switch.	TM lamp goes off.

I. Transmitter Clock Test

4.20 Perform the test as follows:

4.19 This test measures the frequency of the transmitter clock signal, DB (SCT), on the transmitter signal element timing lead.

STEP	ACTION	VERIFICATION
1	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:
2	Enter 47 48 17 47.	Display reads— TEST SEQ: 47 48 17 47
3	Press GO.	Display reads (briefly)— TEST COMPLETE Display then reads— SW CONN: X=?? Y=??
4	Enter 04 03.	Display reads (briefly)— SW CONN: X=04 Y=03 Display then reads— SW CONN: X=?? Y=??
5	Press GO.	Display reads (briefly)— TEST INTERRUPTED For Version 2 and higher DTS: Display then reads (briefly)— CROSS CONNECTIONS MANUALLY SET Display then reads transmitter clock frequency in hertz. Requirement: 2399 to 2401 Hz.
6	Press GO.	Display reads (briefly)— TEST INTERRUPTED For Version 2 and higher DTS: Display then reads (briefly)— CROSS CONNECTIONS MANUALLY SET Display then reads (briefly)— TEST COMPLETE Display then reads— TEST SEQ:

J. Transmitter Output Test

4.22 Perform the test as follows:

4.21 This test uses the 921A DTS to measure the output level of the transmitted signal with the DTS providing the proper output termination.

STEP	ACTION	VERIFICATION
1	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:

SECTION 592-029-521

STEP	ACTION	VERIFICATION
2	Connect data set to DTS using telephone interface cable and adapter cord provided with DTS. <i>Note:</i> The telephone interface cable is equipped with two 9-pin connectors. The 6-inch adapter cord is equipped with a 9-pin connector and a double-faced, 25-pin connector. Connect interface cable from 9-pin telephone connector on left side of DTS to 9-pin connector on adapter cord. Insert double-faced, 25-pin connector on adapter cord between telephone line connector on data set and telephone line cord.	
3	On front of DTS: (a) Connect meter leads from LINE—TRMT terminals T and R to INPUTS—METER jacks + and -. (b) Set TALK/DATA switch to DATA. (c) Set SPKR JACKS/RCV LINE switch to RCV LINE.	
4	Enter 36.	Display reads— TEST SEQ: 36 RS=? (0 OR 1)
5	Enter 1.	Display reads— TEST SEQ: 36 RS=1 (0 OR 1)
6	Enter 11.	Display reads— :11 R=? 1=135 6=600 9=900 0=N
7	Enter 6.	Display reads (briefly)— :11 R=6 1=135 6=600 9=900 0=N Display then reads— :
8	Press GO.	Display reads (briefly)— TEST COMPLETE Display then reads transmitter output level in mV ac and dBm. Requirement: -2.0 to +2.0 dBm
9	Disconnect meter leads, telephone interface cable, and adapter cord.	

K. Digital Loopback Test (4-Wire Private Line)

4.23 This test checks the transmitter and receiver of a local and a distant data set and the facilities connecting the data sets. The customer interface at the distant data set is not checked. Test data is generated by the 921A DTS and transmitted by the local data set. This data is

looped back internally from the receiver output to the transmitter input of the distant data set and retransmitted. The data is received by the local data set and compared to the original data by the DTS. Data errors are indicated by the DTS display.

4.24 Perform the test as follows:

STEP	ACTION	VERIFICATION
1	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:
2	Contact distant data station and have DL switch on data set depressed.	TM lamp lights on distant data set.
3	On DTS, enter 55.	Display reads— TEST SEQ: 55
4	Press GO.	Display reads (briefly)— SELECT ERROR TEST Display then reads— D=DT 0=SP 1=MK 2=2047 5=511 6=63
5	Enter 5.	Display reads (briefly)— 511 BIT ERROR TEST Display then reads— 1=BIT ERRORS 2=BLOCK ERRORS
6	Enter 2.	Display reads— ????? BITS IN A BLOCK
7	Enter 01024.	Display reads (briefly)— 01024 BITS IN A BLOCK Display then reads— ???? SECONDS
8	Enter 0900.	

Note: To perform functions listed below, press associated key.

KEY	FUNCTION	
A	Repeat test.	Display reads (briefly)— 0900 SECONDS
B	Display time remaining in test.	Display then reads— BLK RCVD=0000 ERR=0000
C	Clear display.	From this point, display counts number of blocks received and number of blocks in error. If sync is lost during test, display flashes OSYN. If this occurs, test must be repeated by pressing A.
D	End test.	
E	Inject 8 errors into data stream.	
F	Force out-of-sync condition.	

STEP	ACTION	VERIFICATION
		At end of test, display reads TEST COMPLETE, total sync losses, total blocks received, and total blocks in error.
		Requirement: Total blocks in error are less than 23.
9	Contact distant data station and have DL switch on data set released.	TM lamp goes off on distant data set.

L. End-to-End Block Error Test

4.25 This test checks the transmitter and receiver of a local and a distant data set and the facilities connecting the data sets. The customer interfaces are also checked. Identical test data is generated by 921A DTSs at both data sets. This data is transmitted by one of the data sets and

compared to the data generated by the DTS at the receiving data set. Data errors are indicated by the DTS display.

2-Wire Private Line

4.26 Perform the test as follows:

STEP	ACTION	VERIFICATION
1	Establish voice communication between the data stations and arrange to conduct an end-to-end block error test.	
	Note 1: If distant station is not equipped with a 921A DTS, use a test set that provides at least one of the test patterns provided by the 921A DTS and use the same word length at both stations.	
	Note 2: Procedure at transmitting station must be performed first.	
At transmitting station, perform Steps 2 through 6.		
2	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:
3	Enter 53.	Display reads— TEST SEQ: 53
4	Press GO.	Display reads (briefly)— SELECT ERROR TEST Display then reads— D=DT 0=SP 1=MK 2=2047 5=511 6=63
5	Enter 5.	Display reads— 511 BIT ERROR TEST

STEP	ACTION	VERIFICATION
6	Place data set in data mode.	On DTS, DSR indicator lights (data set ready lead <i>on</i>) Display continues to read— 511 BIT ERROR TEST
<i>At receiving station, perform Steps 7 through 15.</i>		
7	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:
8	Enter 54.	Display reads— TEST SEQ: 54
9	Press GO.	Display reads (briefly)— SELECT ERROR TEST Display then reads— D=DT 0=SP 1=MK 2=2047 5=511 6=63
10	Enter 5.	Display reads (briefly)— 511 BIT ERROR TEST Display then reads— 1=BIT ERRORS 2=BLOCK ERRORS
11	Enter 2.	Display reads— ????? BITS IN A BLOCK
12	Enter 01024.	Display reads (briefly)— 01024 BITS IN A BLOCK Display then reads— ???? SECONDS
13	Place data set in data mode.	On DTS, DSR indicator lights (data set ready lead <i>on</i>) Display continues to read— ???? SECONDS
14	Enter 0900.	

Note: To perform functions listed below, press associated key. Keys A through D function at receiving station only. Keys E and F function at transmitting station only.

KEY FUNCTION

A Repeat test.
B Display time remaining in test.
C Clear display.
D End test.
E Inject 8 errors into data stream.
F Force out-of-sync condition.

Display reads (briefly)—
0900 SECONDS
Display then reads—
BLK RCVD=0000 ERR=0000
From this point, display counts number of blocks received and number of blocks in error.

STEP	ACTION	VERIFICATION
15	Perform the end-to-end block error test in the opposite direction. The receiving station now becomes the transmitting station.	<p>If sync is lost during test, display flashes OSYN. If this occurs, test must be repeated by pressing A.</p> <p>At end of test, display reads TEST COMPLETE, total sync losses, total blocks received, and total blocks in error.</p> <p>Requirement: Total blocks in error are less than 23.</p>

4-Wire Private Line

4.27 Perform the test as follows:

STEP	ACTION	VERIFICATION
1	Establish voice communication between the data stations and arrange to conduct an end-to-end block error test.	
	Note: If distant station is not equipped with a 921A DTS, use a test set that provides at least one of the test patterns provided by the 921A DTS and use the same word length at both stations.	
At both stations, perform Steps 2 through 8.		
2	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:
3	Enter 55.	Display reads— TEST SEQ: 55
4	Press GO.	Display reads (briefly)— SELECT ERROR TEST Display then reads— D=DT 0=SP 1=MK 2=2047 5=511 6=63
5	Enter 5.	Display reads (briefly)— 511 BIT ERROR TEST Display then reads— 1=BIT ERRORS 2=BLOCK ERRORS
6	Enter 2.	Display reads— ????? BITS IN A BLOCK

STEP	ACTION	VERIFICATION
7	Enter 01024.	Display reads (briefly)— 01024 BITS IN A BLOCK Display then reads— ???? SECONDS

8 Enter 0900.

Note: To perform functions listed below, press associated key.

KEY FUNCTION

- A Repeat test.
- B Display time remaining in test.
- C Clear display.
- D End test.
- E Inject 8 errors into data stream.
- F Force out-of-sync condition.

Display reads (briefly)—
0900 SECONDS
Display then reads—
BLK RCVD=0000 ERR=0000
From this point, display counts number of blocks received and number of blocks in error. If sync is lost during test, display flashes OSYN. If this occurs, test must be repeated by pressing A.
At end of test, display reads TEST COMPLETE, total sync losses, total blocks received, and total blocks in error.

Requirement: Total blocks in error are less than 23.

M. Start-Up Tests

4.28 The start-up tests check the ability of the data set to begin error-free transmission. In these tests, the 921A DTS (1) starts transmitting a 128-bit word, (2) stops transmitting the word, and (3) checks the word for errors. This sequence of operations is automatically repeated for the duration of the tests.

4.29 Three types of start-up tests can be performed.

- **Analog Loopback:** The local data set is placed in the analog loopback mode. The local data set must be equipped with switched carrier.

- **Digital Loopback:** The local data set is placed in the data mode and the distant data set is placed in the digital loopback mode. Both local and distant data sets must be equipped with switched carrier.

- **End-to-End:** Both local and distant data sets are placed in the data mode. Either the local or distant data set must be equipped with switched carrier.

Analog Loopback Start-Up Test

4.30 Perform the test as follows:

STEP	ACTION	VERIFICATION
1	If continuous carrier (option XB or XC) is installed in data set, temporarily install switched carrier (option XA).	

SECTION 592-029-521

STEP	ACTION	VERIFICATION
2	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:
3	On data set, depress AL switch.	TM lamp lights.
4	On DTS, enter 67.	Display reads— TEST SEQ: 67
5	Press GO.	Display reads— 1=ONE WAY 2=IR SW 3=IR CONT
6	Enter 2.	Display reads— TRMT: 1=MAN 2=TIMED 3=SW CARR
7	Enter 2.	Display reads— PRESS A TO START
8	Press A.	

Note 1: When A is pressed, a count may appear on BLK RCVD, ERR, and/or * display. If this occurs, press C to clear displays.

Note 2: To perform functions listed below, press associated key.

KEY FUNCTION

A Restart test.
C Clear display.
D Stop test.

Display reads—
BLK RCVD=0000 ERR=0000 * =0000
From this point, BLK RCVD display counts number of blocks received, ERR display counts number of received blocks in error, and * display counts number of times DTS transmitted a block but did not receive a block.

9	At end of about 1 minute, press D.	Requirement: Zero count on ERR and * displays.
10	On data set, release AL switch.	TM lamp goes off.

Note: If switched carrier (option XA) was temporarily installed in data set in Step 1, leave this option installed until all remaining tests are completed.

Digital Loopback Start-Up Test (4-Wire Private Line)

4.31 Perform the test as follows:

STEP	ACTION	VERIFICATION
1	If continuous carrier (option XB or XC) is installed in local or distant data set, temporarily install switched carrier (option XA).	
2	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:
3	Contact distant data station and have DL switch on data set depressed.	TM lamp lights on distant data set.
4	On DTS, enter 70.	Display reads— TEST SEQ: 70
5	Press GO.	Display reads— 1=ONE WAY 2=IR SW 3=IR CONT
6	Enter 2.	Display reads (briefly)— ENTER HEX CHARS Display then fills with 32 “?”s.
7	Enter FF FF FF 16 16 01 31 32 33 02 53 54 41 52 54 03. <i>Note:</i> To delete last character entered, press back arrow (←).	Display reads (briefly)— FFFFFFFF16160131323302535441525403 Display then reads— TRMT: 1=MAN 2=TIMED 3=SW CARR
8	Enter 2.	Display reads— PRESS A TO START
9	Press A. <i>Note 1:</i> When A is pressed, a count may appear on BLK RCVD, ERR, and/or * display. If this occurs, press C to clear displays. <i>Note 2:</i> To perform functions listed below, press associated key.	

KEY FUNCTION

A Restart test.
C Clear display.
D Stop test.

Display reads—
BLK RCVD=0000 ERR=0000 *=0000
From this point, BLK RCVD display counts number of blocks received, ERR display counts number of received blocks in error, and * display counts number of times DTS transmitted a block but did not receive a block.

STEP	ACTION	VERIFICATION
10	At end of about 1 minute, press D.	Requirements: Count of less than 2 on ERR display and zero count on * display.
11	Contact distant data station and have DL switch on data set released. Note: If switched carrier (option XA) was temporarily installed in local or distant data set in Step 1, leave this option installed until all remaining tests are completed.	TM lamp goes off on distant data set.

End-to-End Start-Up Test

operating control of the test. Perform the test as follows:

4.32 In this test, one end is arbitrarily selected as the controlling station. This station has

STEP	ACTION	VERIFICATION
1	Establish voice communication between the data stations and arrange to conduct an end-to-end start-up test. Note 1: For 4-wire service, if continuous carrier (option XB or XC) is installed in data set at controlled station, temporarily install switched carrier (option XA). Note 2: Procedure at controlled station must be performed first.	

At controlled station, perform Steps 2 through 7.

2	Ensure that initial test setup described in paragraph 4.14 has been performed.	Display reads— TEST SEQ:
3	Enter 68.	Display reads— TEST SEQ: 68
4	Press GO.	Display reads— 1=ONE WAY 2=IR SW 3=IR CONT
5	For 2-wire service, enter 2. For 4-wire service with switched carrier (option XA) at controlling station, enter 2. For 4-wire service with continuous carrier (option XB or XC) at controlling station, enter 3.	Display reads— PRESS A TO START
6	Place data set in data mode.	On DTS, DSR indicator lights (data set ready lead on)

STEP	ACTION	VERIFICATION
7	<p>Press A.</p> <p>Note: When A is pressed in Step 14, a count may appear on BLK RCVD, ERR, and/or * display. If this occurs, press C to clear displays.</p>	<p>Display continues to read— PRESS A TO START</p> <p>Display reads— BLK RCVD=0000 ERR=0000 *=0000 After A is pressed at controlling station, BLK RCVD display counts number of blocks received, ERR display counts number of received blocks in error, and * display counts number of times DTS transmitted a block but did not receive a block. All displays stop counting when D is pressed at controlling station.</p> <p>Requirements: Count of less than 2 on ERR display and zero count on * display.</p>
<p>At controlling station, perform Steps 8 through 15.</p>		
8	<p>Ensure that initial test setup described in paragraph 4.14 has been performed.</p>	<p>Display reads— TEST SEQ:</p>
9	<p>Enter 67.</p>	<p>Display reads— TEST SEQ: 67</p>
10	<p>Press GO.</p>	<p>Display reads— 1=ONE WAY 2=IR SW 3=IR CONT</p>
11	<p>For 2-wire service, enter 2. For 4-wire service with switched carrier (option XA) at controlling station, enter 2. For 4-wire service with continuous carrier (option XB or XC) at controlling station, enter 3.</p>	<p>Display reads— TMRT: 1=MAN 2=TIMED 3=SW CARR</p>
12	<p>Enter 2.</p>	<p>Display reads— PRESS A TO START</p>
13	<p>Place data set in data mode.</p>	<p>On DTS, DSR indicator lights (data set ready lead on) Display continues to read— PRESS A TO START</p>
14	<p>Press A.</p> <p>Note 1: When A is pressed, a count may appear on BLK RCVD, ERR, and/or * display. If this occurs, press C to clear displays.</p> <p>Note 2: To perform functions listed below, press associated key.</p>	

STEP	ACTION	VERIFICATION
	KEY FUNCTION	
	A Restart test. C Clear display. D Stop test.	Display reads— BLK RCVD=0000 ERR=0000 *=0000 From this point, BLK RCVD display counts number of blocks received, ERR display counts number of received blocks in error, and * display counts number of times DTS transmitted a block but did not receive a block.
15	At end of about 1 minute, press D.	Requirements: Count of less than 2 on ERR display and zero count on * display.

Note: If switched carrier (option XA) was temporarily installed in data set at controlled station, leave this option installed until all remaining tests are completed.

5. REFERENCES

5.01 Additional information concerning the testing of DS 201C-L1D is contained in the following publications:

SECTION	TITLE
592-029-120	Data Set 201C-L1D—Transmitter-Receiver— Description and Operation
592-029-220	Data Set 201C-L1D—Transmitter-Receiver— Installation and Connections
592-029-520	Data Set 201C-L1D—Transmitter-Receiver—Test Procedures Using 914-Type Data Test Set
592-032-300	Data Set 209A-L1—Transmitter-Receiver—Maintenance
666-511-501	Test of Data Services Provided by Data Set 201C From a Private Line Testroom
666-511-504	Test of Data Services Provided by Data Set 209A-L1 From a Private Line Testroom
5.02	Detailed information concerning DS 201C-L1D is contained in CD- and SD-1D290-01.

SECTION	TITLE
107-402-100	921A Data Test Set—Description and Operation
314-410-500	Voice Bandwidth Private Line Data Circuits—Tests and Requirements
314-901-300	Digital Data System—Serving Test Center—Two-Point Private Line Circuit—Maintenance Procedures
314-919-300	Digital Data System— Substrate Off-Net Extension Arrangements—Maintenance