

KS-14103 L6 TEST SET
(BREAKDOWN)
DESCRIPTION, USE, AND MAINTENANCE

1. GENERAL

1.001 This addendum supplements Section 634-305-502, Issue 1. Place this pink sheet ahead of Page 1 of the section.

1.002 This addendum is issued for the following reasons:

- To revise paragraph 9.02(b)
- To add testing instructions using L11 test cord
- To add L11 test cord (Fig. 19.1).

2. CHANGES TO SECTION

2.001 On page 20, Part 9, revise paragraph 9.02(b) as follows: If the meter reads less than 2 amps, each battery should be checked individually.

2.002 On page 20, after Fig. 19, add subparagraph 9.02(c) as follow:

- (c) Connect the L11 test cord (Fig. 19.1) to the L8 control unit. With the function switch in the BREAKDOWN position and the range switch in the 500V position, remove and check

each battery by inserting the unused end of the L11 test cord into the battery. If the meter reads less than 2 amps, replace that particular battery. Repeat the above for all fourteen batteries.

Warning: A small spark may occur when plugging into a good battery. To conserve battery life, do not leave the L11 test cord plugged into a battery.



Fig. 19.1—L11 Test Cord

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement