


CODED TOOLS

NOS. 467A TO 477A


TOOL, 467A

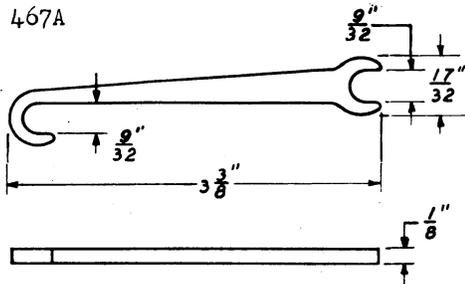

9/32" hex. open double end flat wrench.

For use on clutch adjusting nuts.


TOOL, 468A

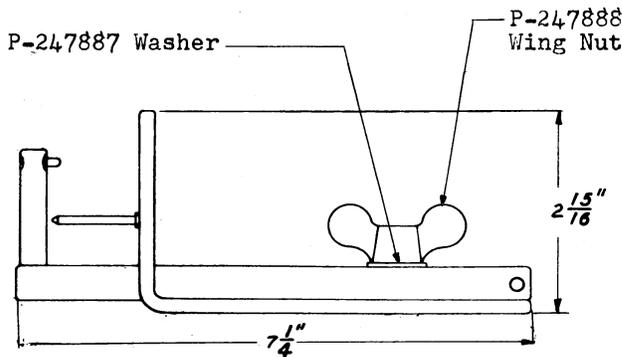

Bench fixture.

For use in holding rotor hubs of 200-, 206-, 209- and 211-type selectors and 25 point rotary switches while cleaning.


TOOL, 469A

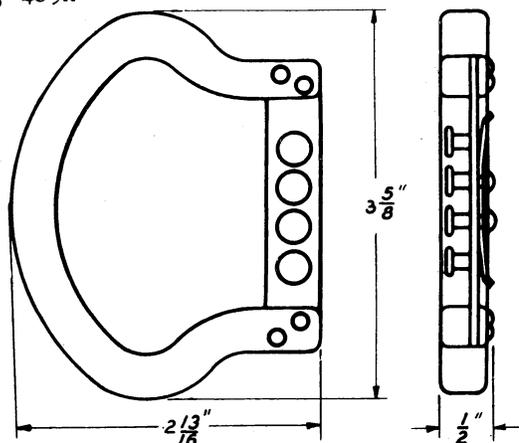

Hand grip.

For use in cleaning rotor hubs of 200-, 206-, 209- and 211-type selectors and 25 point rotary switches.


TOOL, 470A

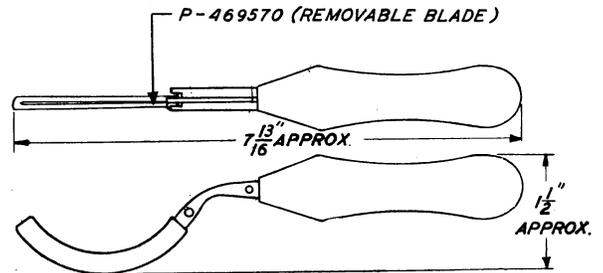

Bank contact cleaner.

For use in cleaning terminals of 10- and 26-type banks and banks associated with 25 point rotary switches.

TOOL, 471A

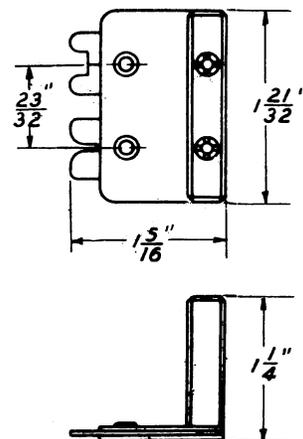


Test connector.

For use in connecting to meters, etc. in checking teletypewriter equipment.

TOOL, 472A

TOOL, 472B


TOOL, 472C

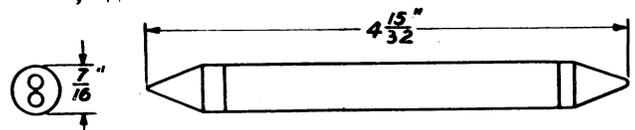

Line switch test tool. Resistance 1100 ohms for No. 472A, 1300 ohms for No. 472B, and 1650 ohms for No. 472C.

For use on plunger type line switches.


TOOL, 473A

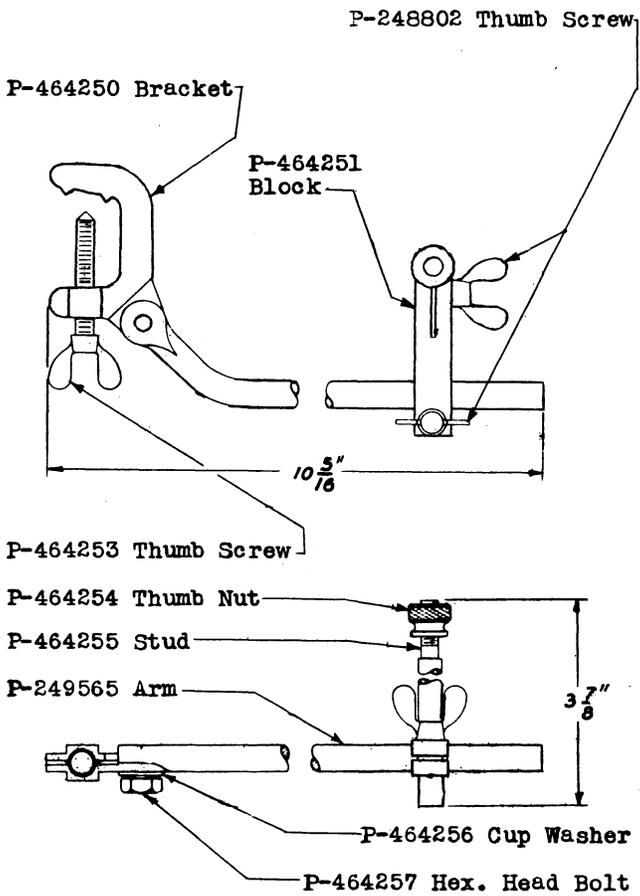

Gauge positioning bracket.

For use in checking reciprocating bar type interrupters.


TOOL, 474A

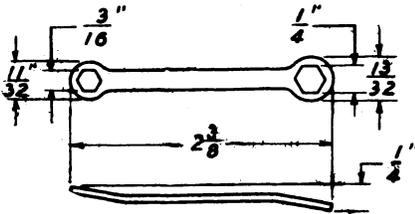

3/16" x 1/4" Hex. closed double end offset wrench.

For use on No. 50A drives, 218-type relays and in adjusting armature travel on flat type relays.


TOOL, 475A

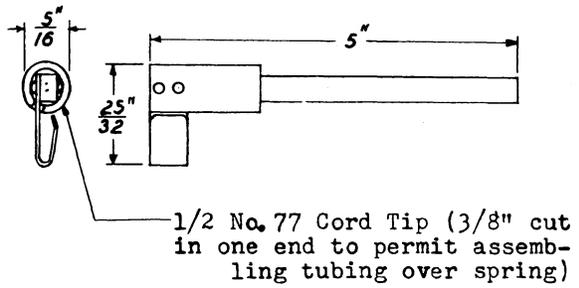

Line switch short circuiting tool.

For use on primary line switches.


TOOL, 476A

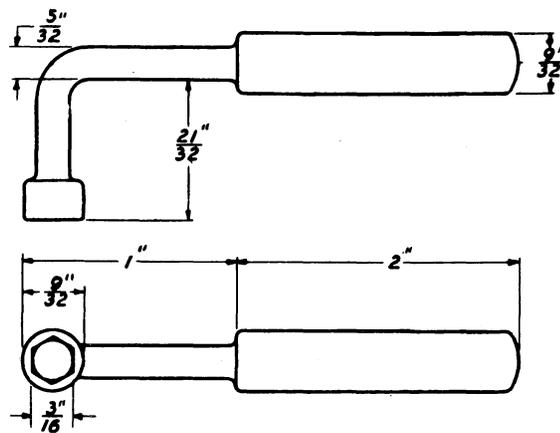

3/16" Hex. offset socket wrench.

For use on armature mounting nuts, 247- and 248-type relays and 197- and 198-type switches.

TOOL, 477A

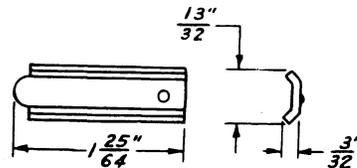

Make busy tool.

For use on 197- and 198-type switches.