


CODED TOOLS

NOS. 503A TO 518A


TOOL, 503A

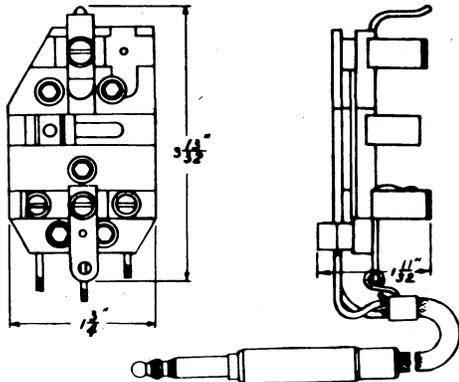

Cord-shelf connecting tool. Furnished with a W3N cord and a No. 310 plug.

For use in making connections to cord circuits of No. 1 toll switchboards.

TOOL, 504A

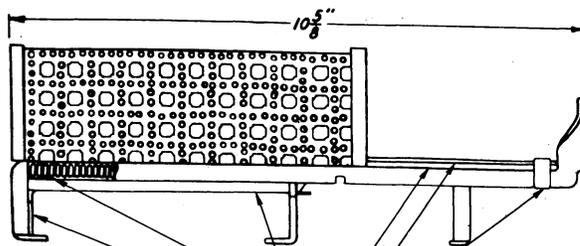


- P-463578 Bracket
- .138"-32 x 1/4" Stl. Screw, Pan H. Tapping, Nic. Plt. Fin. (Not Shown)
- P-485583 Spring
- P-485156 Clip
- P-485158 Wiping Pad (Tin Plate)
- P-469513 Pad (Asbestos)
- P-485161 Tube

Soldering copper holder

Designed to clamp on rolling ladder steps. May also be used with ED-92008-01 mounting bracket or on a flat surface.

For general use.

- TOOL, 505A
- TOOL, 506A
- TOOL, 506B
- TOOL, 507A

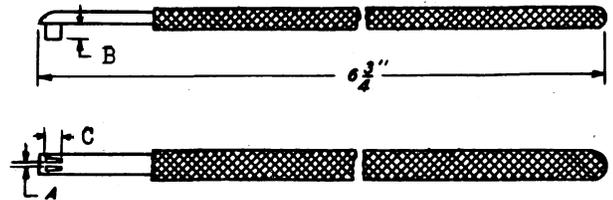

Tool No.	Dim. "A"	Dim. "B"	Dim. "C"
505A	.015"	5/32"	5/32"
506A	.024"	5/32"	5/32"
506B	.024"	3/32"	3/16"
507A	.032"	5/32"	5/32"


Spring Adjusters with insulated handles

The No. 506B tool replaces the D-157398 spring adjuster.

The Nos. 505A, 506A, and 507A tools are for use on U-, Y-, and similar type relays and 1- and 2-type timers.

The No. 506B tool is for use on 444-type jacks.


TOOL, 508A

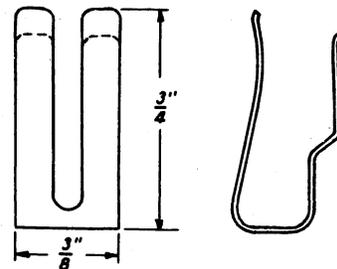

Armature blocking tool.

For use on U-, Y-, and similar type relays.


Tool, 509A

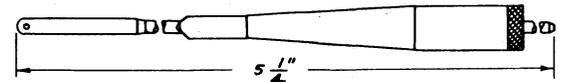

Relay winding connector

For use with a 360-type tool to connect to winding terminals of U-, Y- and similar type relays, and 263- and 264-type relays.

→ TOOL, 509B

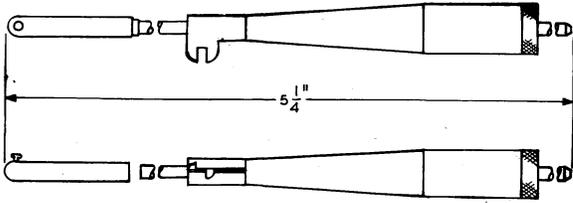


Relay winding connector.

For use with a 360-type tool to connect to winding terminals of 286-, 287-, and 288-type relays.

TOOL, 510A Manufacture discontinued. Replaced by the Nos. 510B and 561A tools.

TOOL, 510B Manufacture discontinued. Replaced by No. 510C tool.

TOOL, 510C

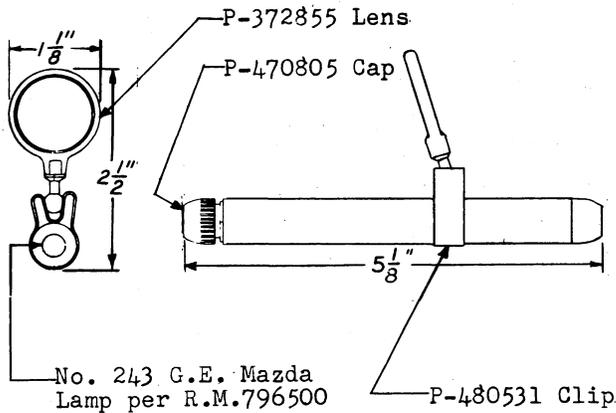

Note: Use soap and water to clean the lens and then dry with a clean, dry, lint-free cloth. If the surface is dull, use Simonize wax to restore the lustre.

Test Lamp


A W2BL cord (48V.) or W2CB cord (24V.) is required for use with this tool. The resistance of the red conductor of the W2BL cord is approximately 186 ohms and of the W2CB cord approximately 92 ohms.

For use with a No. 561A straight tip, No. 562A or No. 562B offset tip.

This tool with the No. 561A tool (straight tip) replaces the No. 510B tool.

For general test purposes.

TOOL, 513A

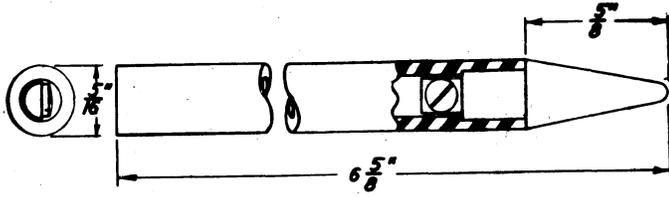


Test pick.

A W2BJ cord and a No. 47B plug are required when this tool is used with the No. 108A amplifier.

For use in toll and exchange cable testing.


TOOL, 515A

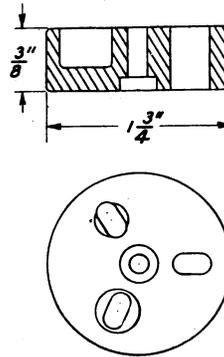

Block

For use in placing Nos. 1A or 2A cushions on the No. 557A tool.

TOOL, 516A

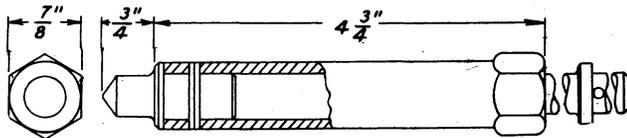


Screw jack

For use on the No. 28A valve in pneumatic ticket distributing system.

TOOL, 517A

TOOL, 517B

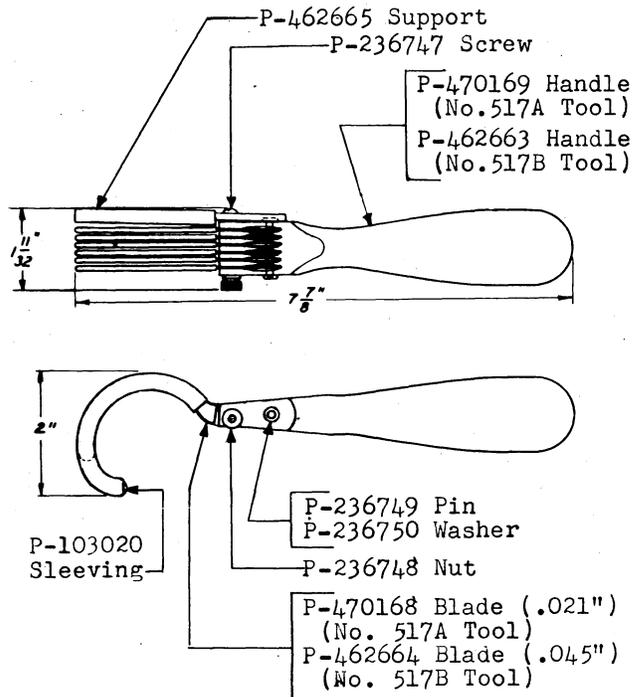**Bank contact cleaners**


The blades and support of the No. 402E tool may be used in the handle of the No. 517A tool.

The No. 517B tool replaces the No. 402D tool.

The No. 517A tool is used in cleaning and treating the contacts of 200-point banks of 197-type switches.

The No. 517B tool is used in cleaning and treating the contacts of 100-point banks of 197-type switches and 40-point banks of 198-type switches.

TOOL, 518A

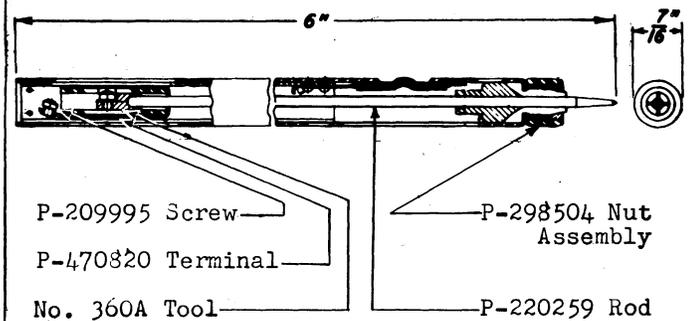

Adjustable test pick; consists of an insulated handle in which are assembled a No. 360A tool, terminals, switch and chuck.

For use with No. 67B test set.