


CODED TOOLS

NOS. 665A TO 671A

TOOL, 665A

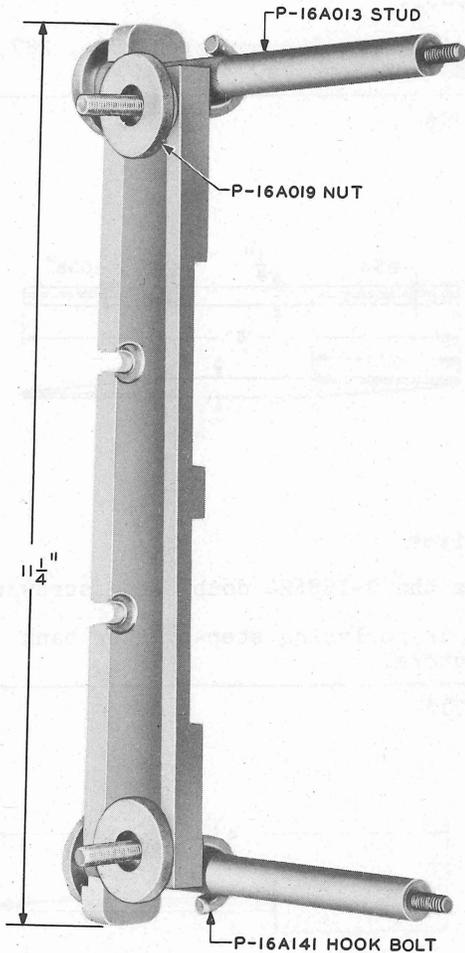


Bridge

This tool forms part of the No. 1012A tool kit.

For use with Nos. 666A, 667A, and 668A tools in replacing core plates and coils of 287- and 288-type relays.

TOOL, 665B

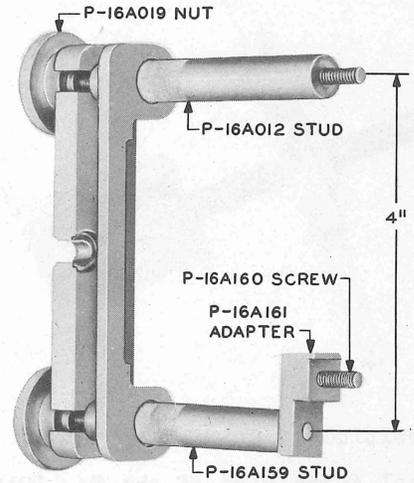


Bridge

This tool forms part of the No. 1012A tool kit.

For use with Nos. 666A, 667A, and 668A tools in replacing core plates and coils of 286-type relays.

TOOL, 666A

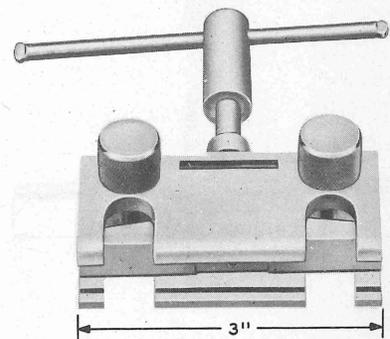


Core plate replacer

This tool forms part of the No. 1012A tool kit.

For use in replacing core plates of 286-, 287-, and 288-type relays.

TOOL, 667A

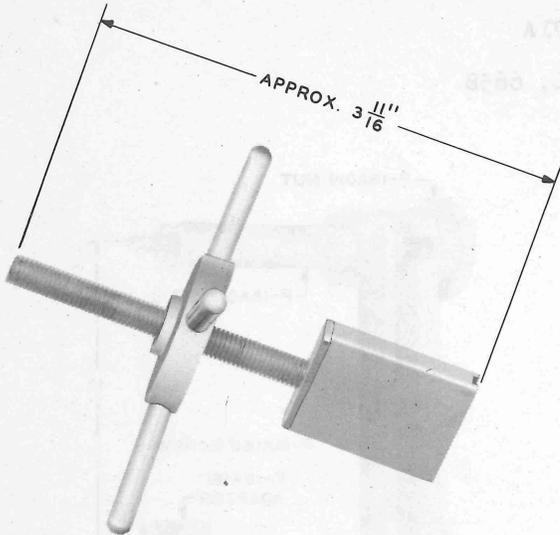


Coil positioner

This tool forms part of the No. 1012A tool kit.

For use in mounting coils of 286-, 287-, and 288-type relays.

TOOL, 668A

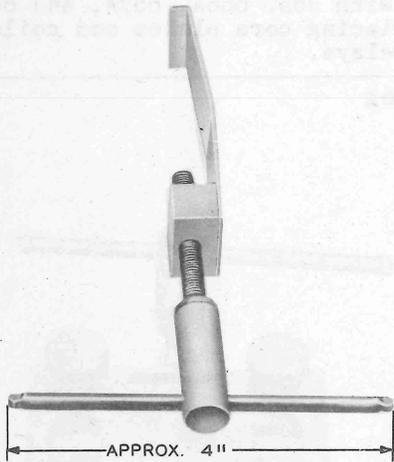


Coil remover

This tool forms part of the No. 1012A tool kit.

For use in removing coils of 286-, 287-, and 288-type relays.

TOOL, 669A

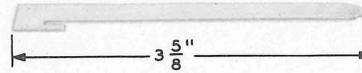


Contact separator

This tool forms part of the No. 1012A tool kit. The P-16A068 container, furnished as part of the tool kit, is used to store this tool.

For use in replacing parts of 286-, 287, and 288-type relays.

TOOL, 670A

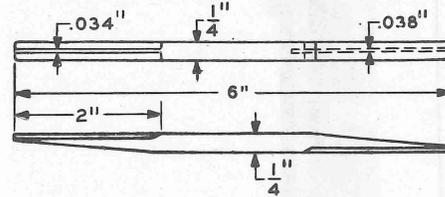


Screwdriver

Replaces the D-158524 double-end screwdriver.

For use in replacing step-by-step bank insulators.

TOOL, 671A

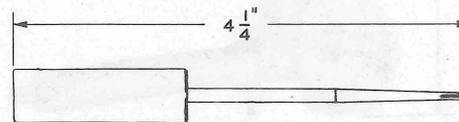

Magnetic separator adjuster.

Replaces the D-167912 magnetic separator adjuster.

For use in applying magnetic separators to Y-type relays.