


CODED TOOLS

NOS. 683A TO 699A


TOOL, 683A

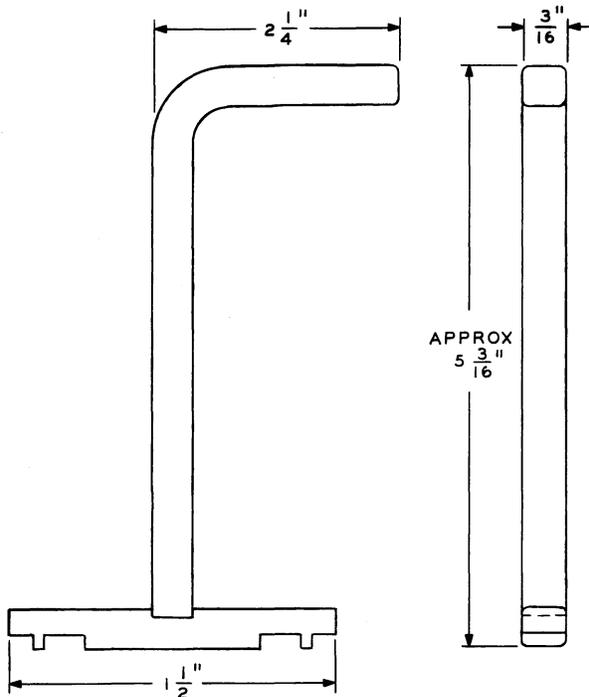

Tube Shield Wrench

For use in locking and unlocking heat dissipating tube shields in L3 carrier and in video transmission equipment.


TOOL, 684A

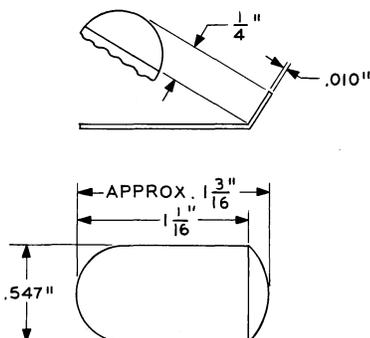

Insulator

For insulating movable contact springs on AK-type relays.


TOOL, 685A

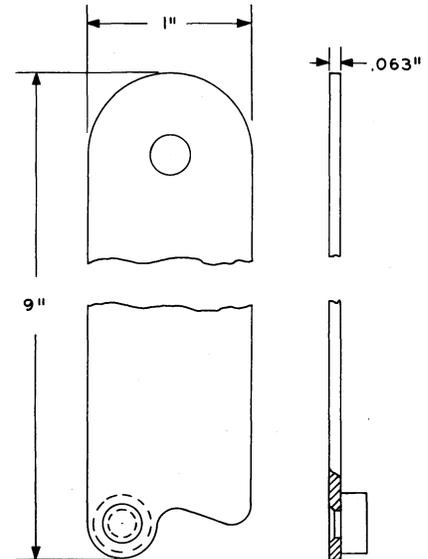

Repeater Extractor

For use in removing 143A2 regenerative repeaters from their mountings.


TOOL, 688A

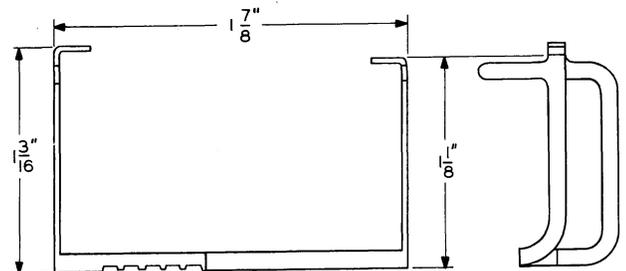

Spring holder.

For holding the movable make contact springs when replacing cards or stationary contacts on the upper half of AK-type relays.


TOOL, 688B

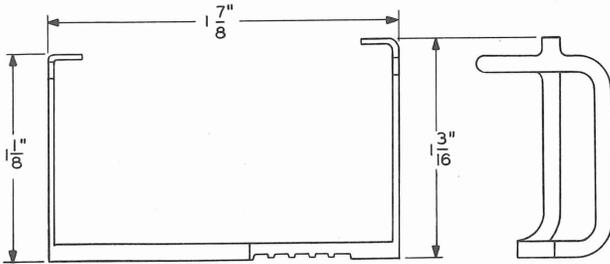

Spring Holder

For holding the movable make contact springs when replacing cards or stationary contacts on the lower half of AK-type relays.


TOOL, 689A

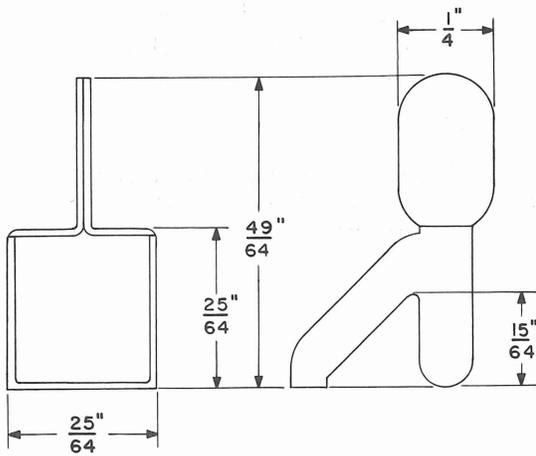

Spring Holder

For use in holding the left row of movable contact springs when replacing stationary contacts of 286-, 287-, and 288-type relays.


→ TOOL, 698A

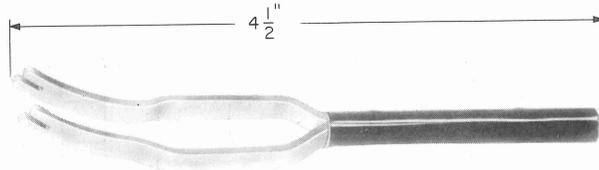

Multiple Strip Holder

For use in supporting the front multiple contact strip on vertical units of the 324-, 325-, and 328-type crossbar switch.

 → TOOL, 699A



Card Support Tab Adjuster

For use in adjusting the card support tab on vertical units of the 324-, 325-, and 328-type crossbar switch.