


NONCODED TOOLS


RACKS, READERS, REAMERS, RECEIVERS, REELS AND RELEASERS

RACK, KS-16498-L1

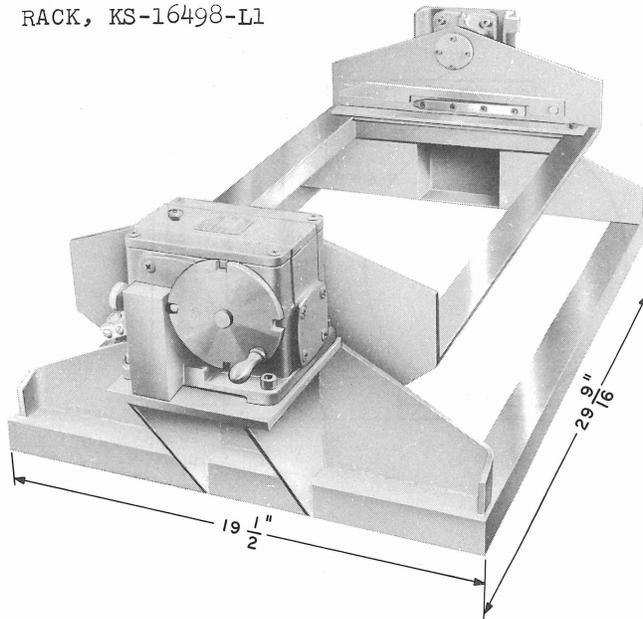

For use in handling the No. 214A selector of 1-type translators.


READER, TAPE, KS-14343

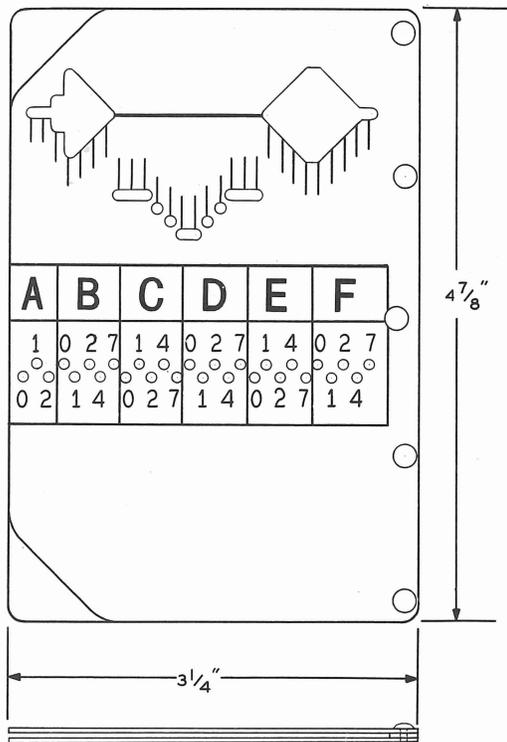

Perforated metal plate

For use in visually translating coded perforations in AMA tape.


REAMER, D-87464, 0.313"

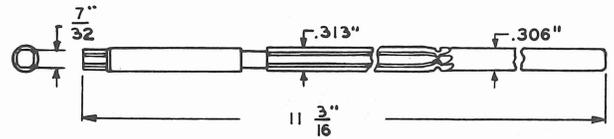

Supplied complete with handle unless otherwise specified in the order.


For use on 5- and 6-type distributors.

REAMER AND HANDLE, D-97083, 0.624"

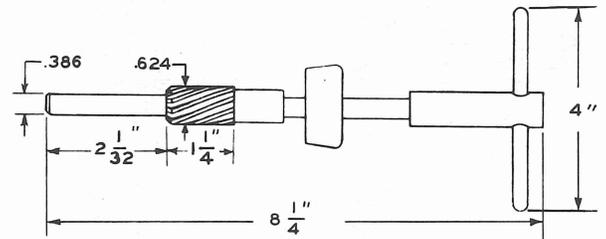

For use with the D-97084 tapered bushing in reaming bearings in worm case housings of friction roll drives to relieve over-heating.

REAMER AND HANDLE, D-97085, 3/8"

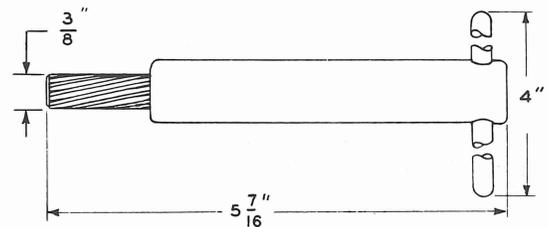


For use with the D-97086 guide and clamp nut, for reaming housing assembly bearings of friction roll drives to relieve over-heating.

RECEIVER AND CORDS, TESTER'S R-9572

Replaced by headset composed of 1 No. 716C receiver, 1 No. 11A headband and 1 No. 2W21A cord.


SECTION A707.121

REEL, WIRE, KS-8047

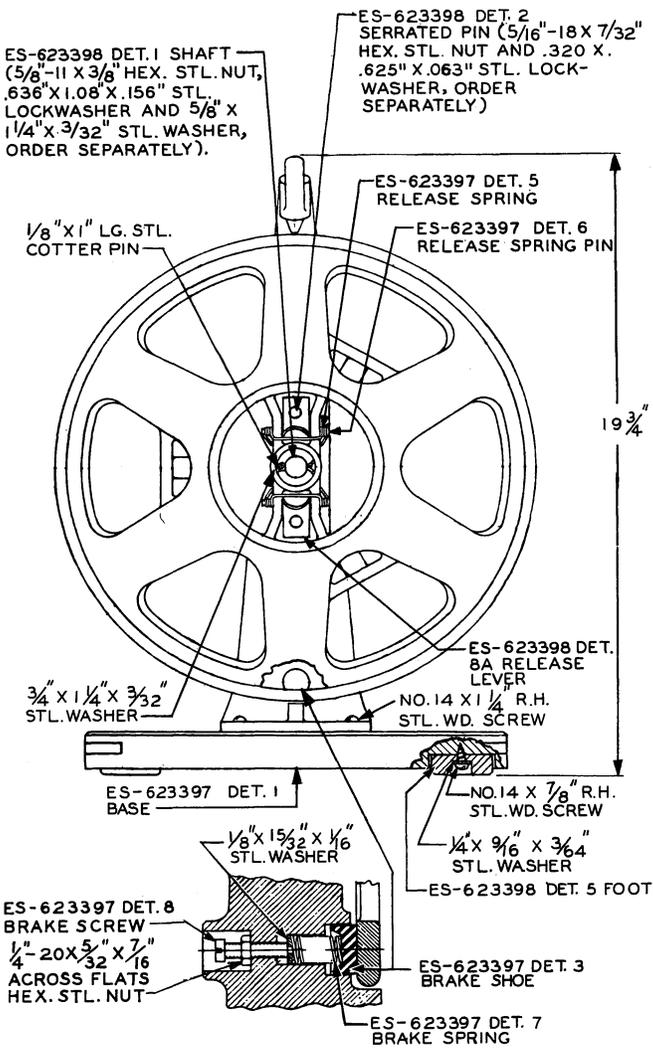


For use in central offices for holding distributing frame wire.

REEL, WIRE, KS-8289

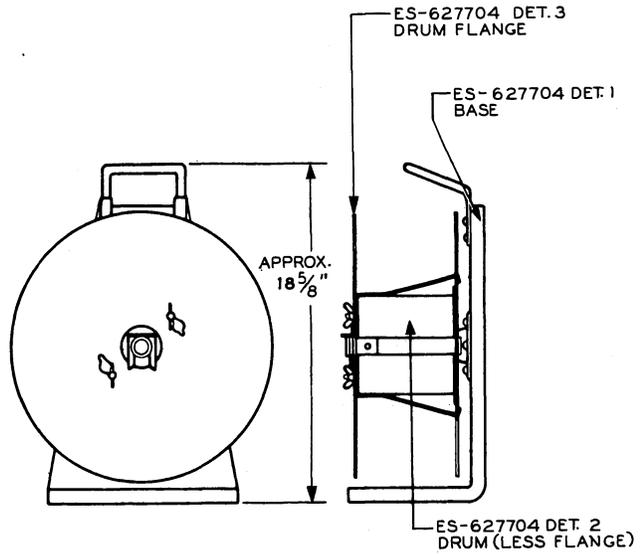

For use in central offices for holding distributing frame wire.

RELEASER, KS-16750

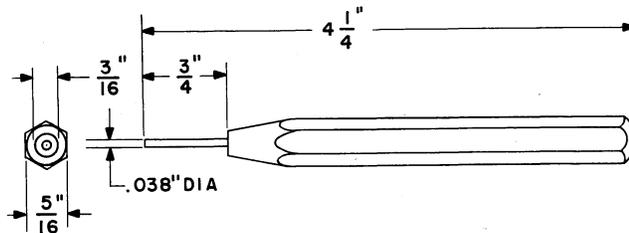

For use in releasing plastic finger wheels from No. 6- and 7-type dials.