
 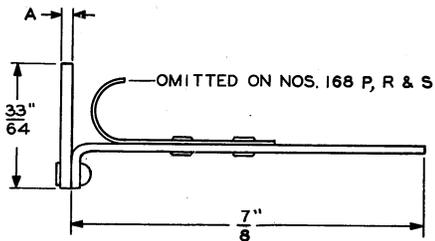


CODED GAUGES
 NOS. 168A TO 175A

GAUGE, 168A
 168B
 168C
 168D
 168E
 168F
 168G
 168H
 168J
 168K
 168L
 168N
 168P
 168R
 168S
 168T




Code No.	Dim "A"	Code No.	Dim "A"
168A	.008"	168J	.034"
168B	.010"	168K	.037"
168C	.013"	168L	.040"
168D	.016"	168N	.052"
168E	.019"	168P	.076"
168F	.021"	168R	.090"
168G	.022"	168S	.083"
168H	.031"	168T	.038"

Non-magnetic thickness gauges.


For use on the 324-, 325- and 328-type switches.

GAUGE, 169A

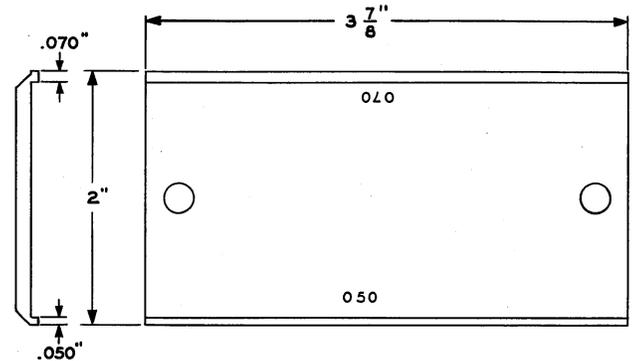

.050" and .070" double end thickness gauge.
 For use on the l-type translators.


GAUGE, 170A

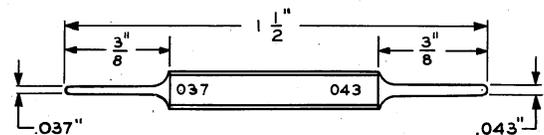

.037" and .043" diameter double end gauge
 For use on the l-type translators.

SECTION A708.022

GAUGE 171A

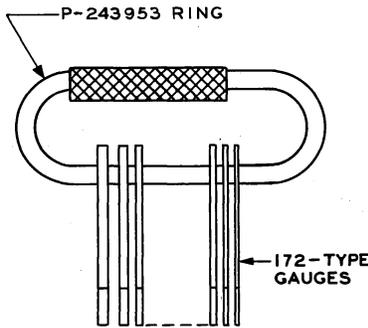


Thickness gauge nest. Consists of the following coded gauges on a P-243953 ring. The individual gauges are readily removable and replaceable.

Code No.	Gauge Size	Code No.	Gauge Size
172A	.0015"	172L	.0145"
172B	.003"	172M	.016"
172C	.0035"	172N	.0215"
172D	.0045"	172P	.023"
172E	.005"	172R	.0255"
172F	.007"	172S	.027"
172G	.0085"	172T	.031"
172H	.010"	172U	.0325"
172J	.012"	172W	.0365"
172K	.0135"	172Y	.038"

Flat thickness gauge.

For use on AF-, AG- and AJ-type relays.


GAUGE, 173A

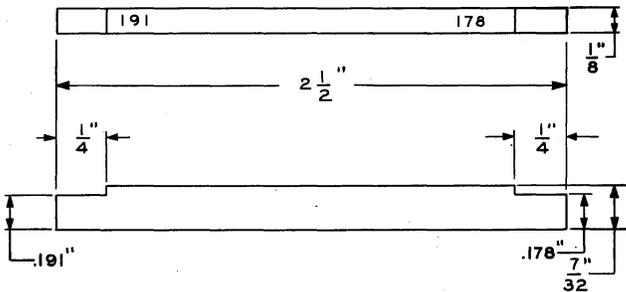

.178" and .191" double end thickness gauge.

For use on the 1-type translators.

GAUGE, 174A

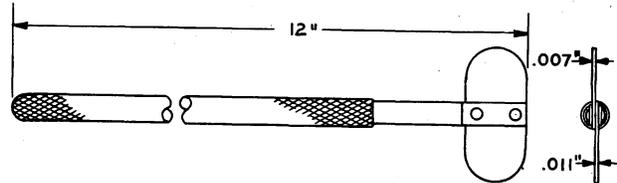


.007" and .011" non-magnetic thickness gauge.

Replaces the D-176941 gauge.

For use on the KS-13882 perforators.

GAUGE, 175A

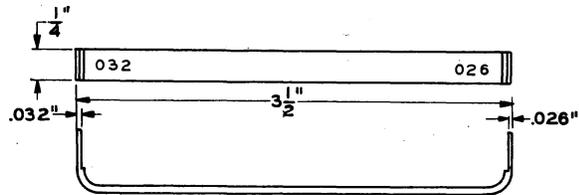

.026" and .032" non-magnetic thickness gauge.

Replaces the D-178698 gauge.

For use on the KS-13882 perforators.