

DESK STANDS

20, 40, 50, 51, 52 120, 140, 151 and 152 TYPES

DESCRIPTION AND USE

1. GENERAL

1.01 This section gives general information pertaining to desk stands such as their use, description, equivalents, and piece parts.

1.02 The 20, 40, 50, 51 and 52 type desk stands are for use with subscriber sets arranged for sidetone connections. The 120, 140, 151 and 152 types are for use with subscriber sets arranged for anti-sidetone connections.

1.03 **Dials:** The 2AA, 2AB and 2AE dials are used for the desk stands covered herein. The 2HA, 2HB, 2HE or 4HA, 4HB, 4HE type dials may be substituted for the corresponding 2A types by strapping the BB and R terminals with strap per P-290076.

1.04 **Apparatus Blanks:** The 50E apparatus blank is used on all desk stands requiring apparatus blanks except the 50 type, which use the 50D apparatus blank.

2. USE

Manual Stations

| CLASS OF SERVICE | SIDETONE DESK STANDS | | ANTI-SIDETONE DESK STANDS | |
|---|----------------------|------------------------|---------------------------|--------------|
| | Standard | Equivalent | Standard | Equivalent |
| (a) All Manual Stations Except those Listed in (b) and (c). | 51AL | 50AL, 40AL, 20AL | 151AL | 140AL, 120AL |
| | *51CM | *50CM, 40CM, 20CM | None | None |
| | *52AB | None | *152AB | None |
| (b) No. 1 Residence System and No. 2 P.B.X. | 51CN | 50CN, 40CN, 20CN | None | None |
| (c) Local Battery Talking, Common Battery Signaling. | 51AL | 51CN, 50AL, 40AL, 20AL | 151S | None |

Dial Stations

| | | | | |
|---|-------|------------|--------|------|
| (d) All Dial Stations Except those Listed in (e), (f), (g) and (h). | 51AL | 50AL | 151AL | None |
| | *51CM | *50CM | None | None |
| | *52AB | None | *152AB | None |
| (e) Two-Party Selective Message Rate-Party on Tip. | 51C | 50C | 151C | None |
| (f) No. 1 Residence System and No. 2 P.B.X. | 51CN | 50CN | None | None |
| (g) No. 750-A P.B.X. Key Stations. | 51R | None | 151R | None |
| (h) Local Battery Talking, Common Battery Signaling. | 51AL | 51CN, 50AL | 151S | None |

* Note: The 51CM and equivalent desk stands have a transmitter cut-out button. The 52AB and 152AB desk stands have a special switchhook arranged for a head receiver.

3. DESCRIPTION

3.01 A fully equipped desk stand requires a receiver, transmitter, cords, number card holder and in the case of the 50, 51, 52, 151 and 152 types, a dial or apparatus blank. The desk stand code number includes only such parts as a base assembly, base plate assembly, handle, lug holder, terminal plate with contact spring assembly and switchhook. These parts are shown in Fig. 1.

DESK STAND SHOWING PRINCIPAL PARTS BY NAME

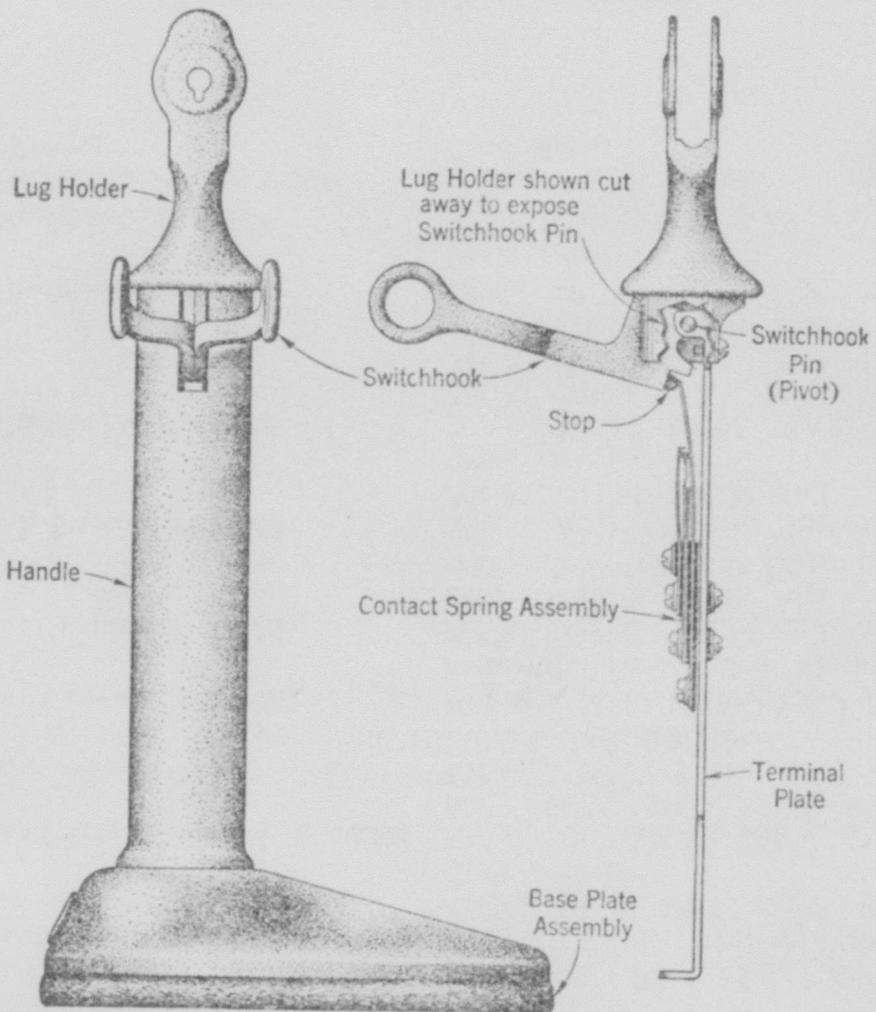


Fig. 1.

DESK STANDS,
20, 40, 50, 51, 52,
120, 140, 151, AND 152 TYPES,
DESCRIPTION AND USE

4. PIECE PARTS

| Piece Part Name and Number | Part of |
|------------------------------------|---|
| Base Plate Assembly, P-97995 | 20AL, 20CM, 20CN, 40AL, 40CM, 40CN, 120AL and 140AL desk stands. |
| Base Plate Assembly, P-98202 | 50AL, 50C, 50CM, 50CN, 51AL, 51C, 51CM, 51CN, 51R, 52AB, 151AL, 151C, 151R, 151S and 152AB desk stands. |
| Base Screws, P-290086 | For use in fastening base plate assembly on all desk stands. |
| Pin (Cotter), P-97466 | 20CM, 40CM, 50CM and 51CM desk stands. For use with transmitter cut-out button. |
| Push Button, P-97457 | Transmitter Cut-out Button for 20CM, 40CM, 50CM and 51CM desk stands. |
| Switchhook, P-98883 | 20AL, 20CM, 20CN, 50AL, 50C, 50CM, 50CN, 51AL, 51C, 51CM, 51CN, 51R, 120AL, 151AL, 151C, 151R and 151S desk stands. |
| Switchhook, P-97343 | 40AL, 40CM, 40CN and 140AL desk stands. |
| Switchhook, P-98884 | 52AB and 152AB desk stands. |
| Switchhook Pin, P-92678 (Pivot) | For use with switchhook on all desk stands. |