


**SUBSCRIBER SETS—688 AND 690 TYPES
 COMMON BATTERY — NETWORK TYPE — CONNECTIONS**

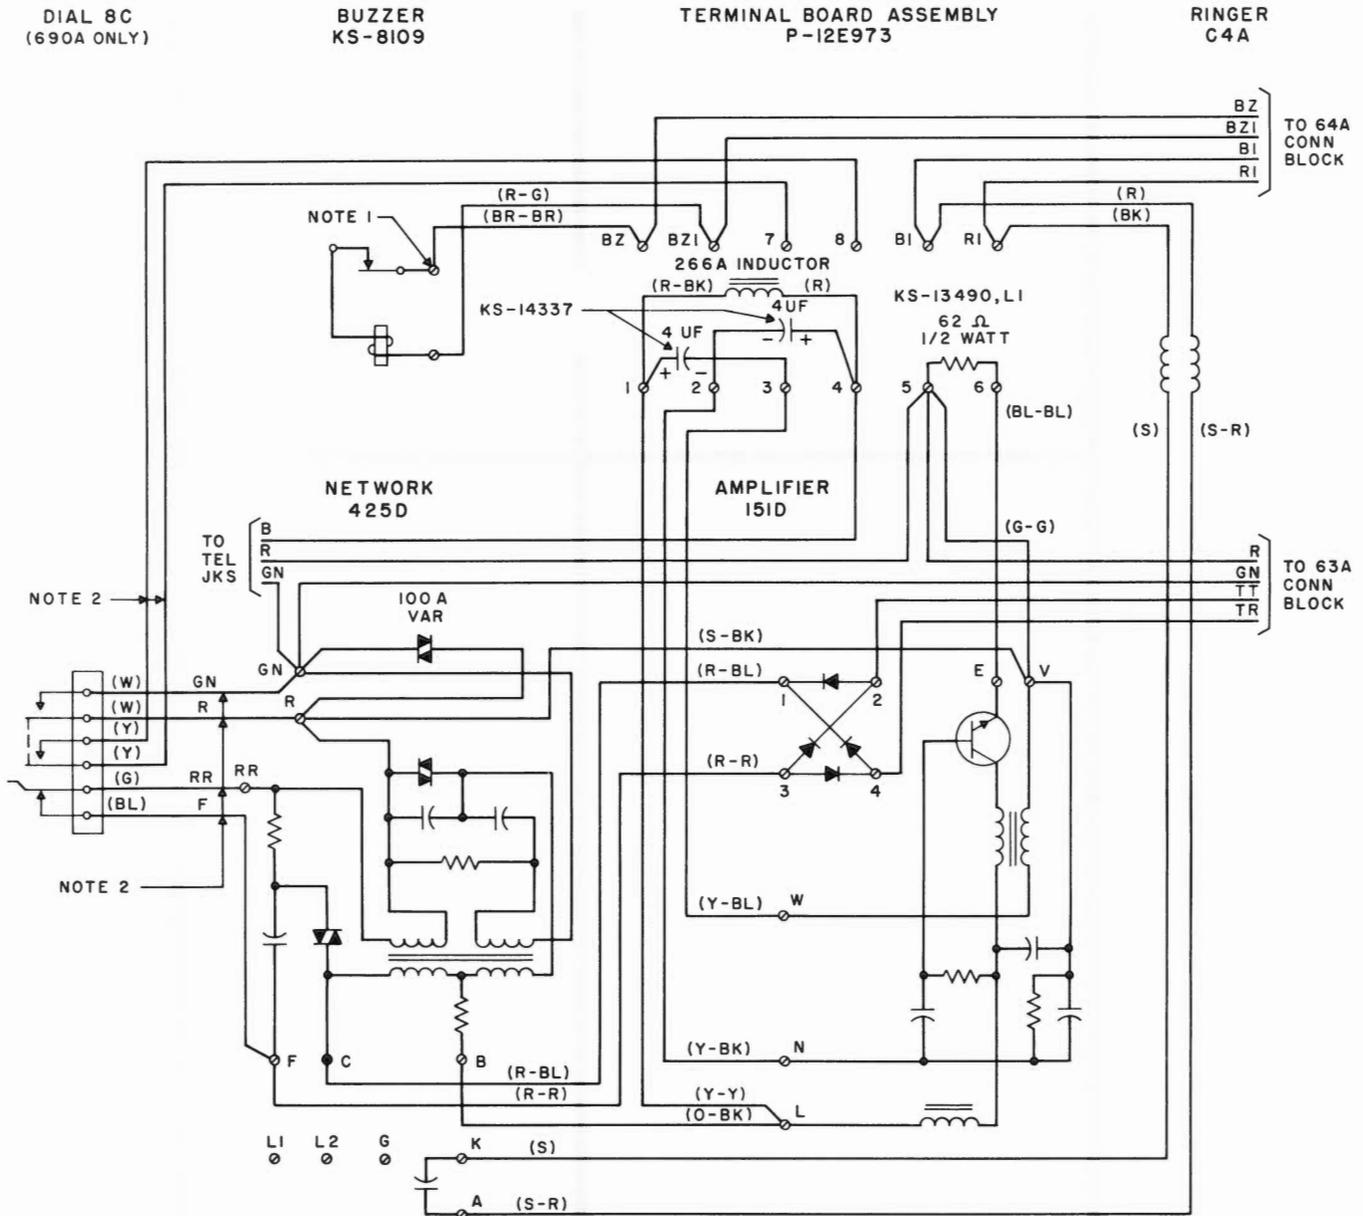

Note 1: BZ lead connects to buzzer case under mounting screw.

Note 2: Dial is part of 690A only. Leads, GN, R, RR, and F must be wired locally to 6E dial when 688A is used.

Fig. 1 — 688A (Nondial) and 690A (Dial) Subscriber Set

TABLE A
CONNECTIONS FOR USE WITH 400-TYPE
MOUNTINGS AND ASSOCIATED MODULAR-TYPE KEYS

Lead from Sub. Set	Connect to	
	Term.	Apparatus
GN	GN	Dial, when assoc with 688A (Dial is a part of 690A)
R	R	
RR	Y	
F	B	
B		Telephone Set Jacks
R		
GN		
R	R	63A Conn Block (621A or 622A Key)
GN	GN	
TT	TT	
TR	TR	
BZ	BZ	64A Conn Block (First Key Unit)
BZ1	BZ1	
B1	B1	
R1	R1	