

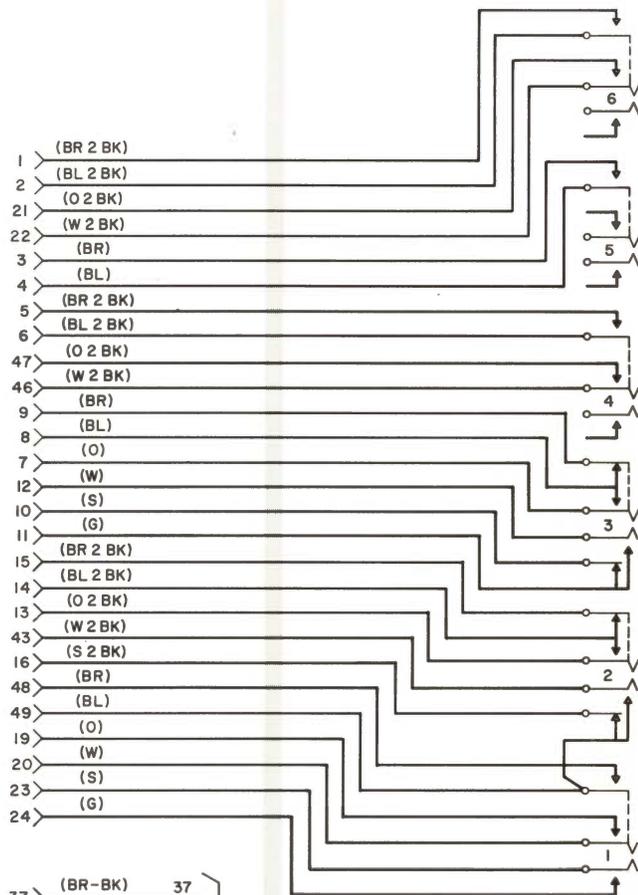


SUBSCRIBER SETS
689A, C, D AND E TYPES
CONNECTIONS

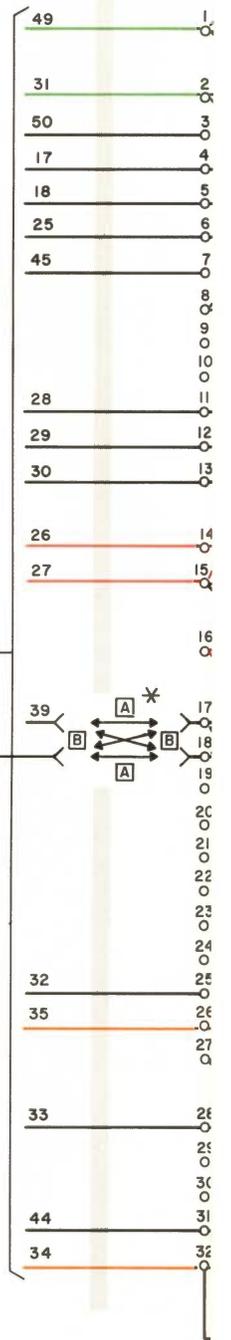

37 (BR-BK)	37
38 (G-Y)	38
36 (O-G)	36
40 (S-R)	40
41 (BR-Y)	41
43 (O-BK)	43
42 (S-Y)	42
48 (G-BR)	48


49 (BR-Y)	49
31 (O-BK)	31
50 (S-Y)	50
17 (BL-V)	17
18 (O-V)	18
25 (BL-W)	25
45 (G-Y)	45
28 (BL-R)	28
29 (G-R)	29
30 (BL-BK)	30
26 (G-W)	26
27 (S-W)	27
39 (G-V)	39
32 (G-BK)	32
35 (BL-Y)	35
33 (BR-BK)	33
44 (O-Y)	44
34 (S-BK)	34

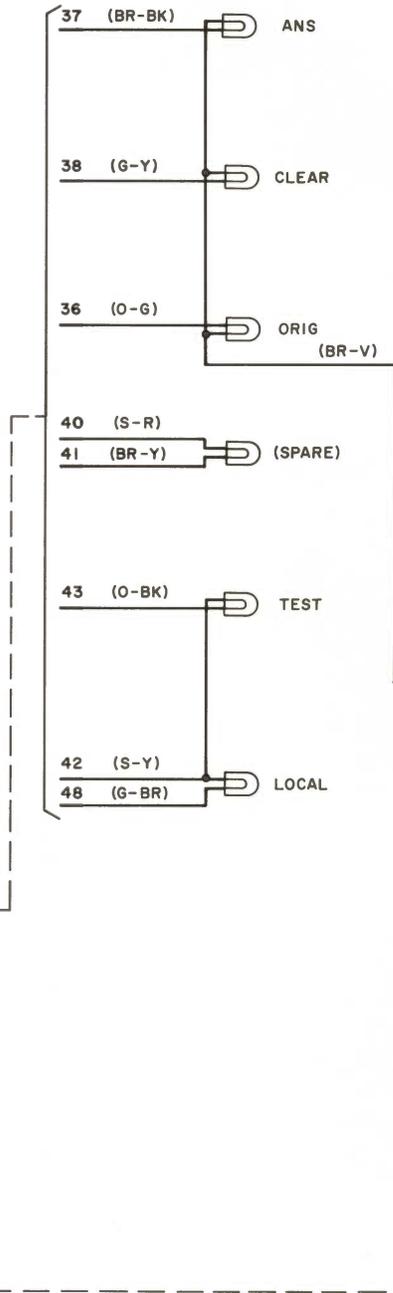

TONE PATH TO RECEIVER
AND LOUDSPEAKER

DIALING PATH
— 40A DIAL
— 8C DIAL

* **A** WIRING FOR SUBSCRIBERS SETS 61
B WIRING FOR SUBSCRIBER SET 689
 NOTE: THESE ARE NOT WIRING OPT
 USED TO FACILITATE USE OF ONE B
 FOR VARIOUS SUBSCRIBER SET TYPE

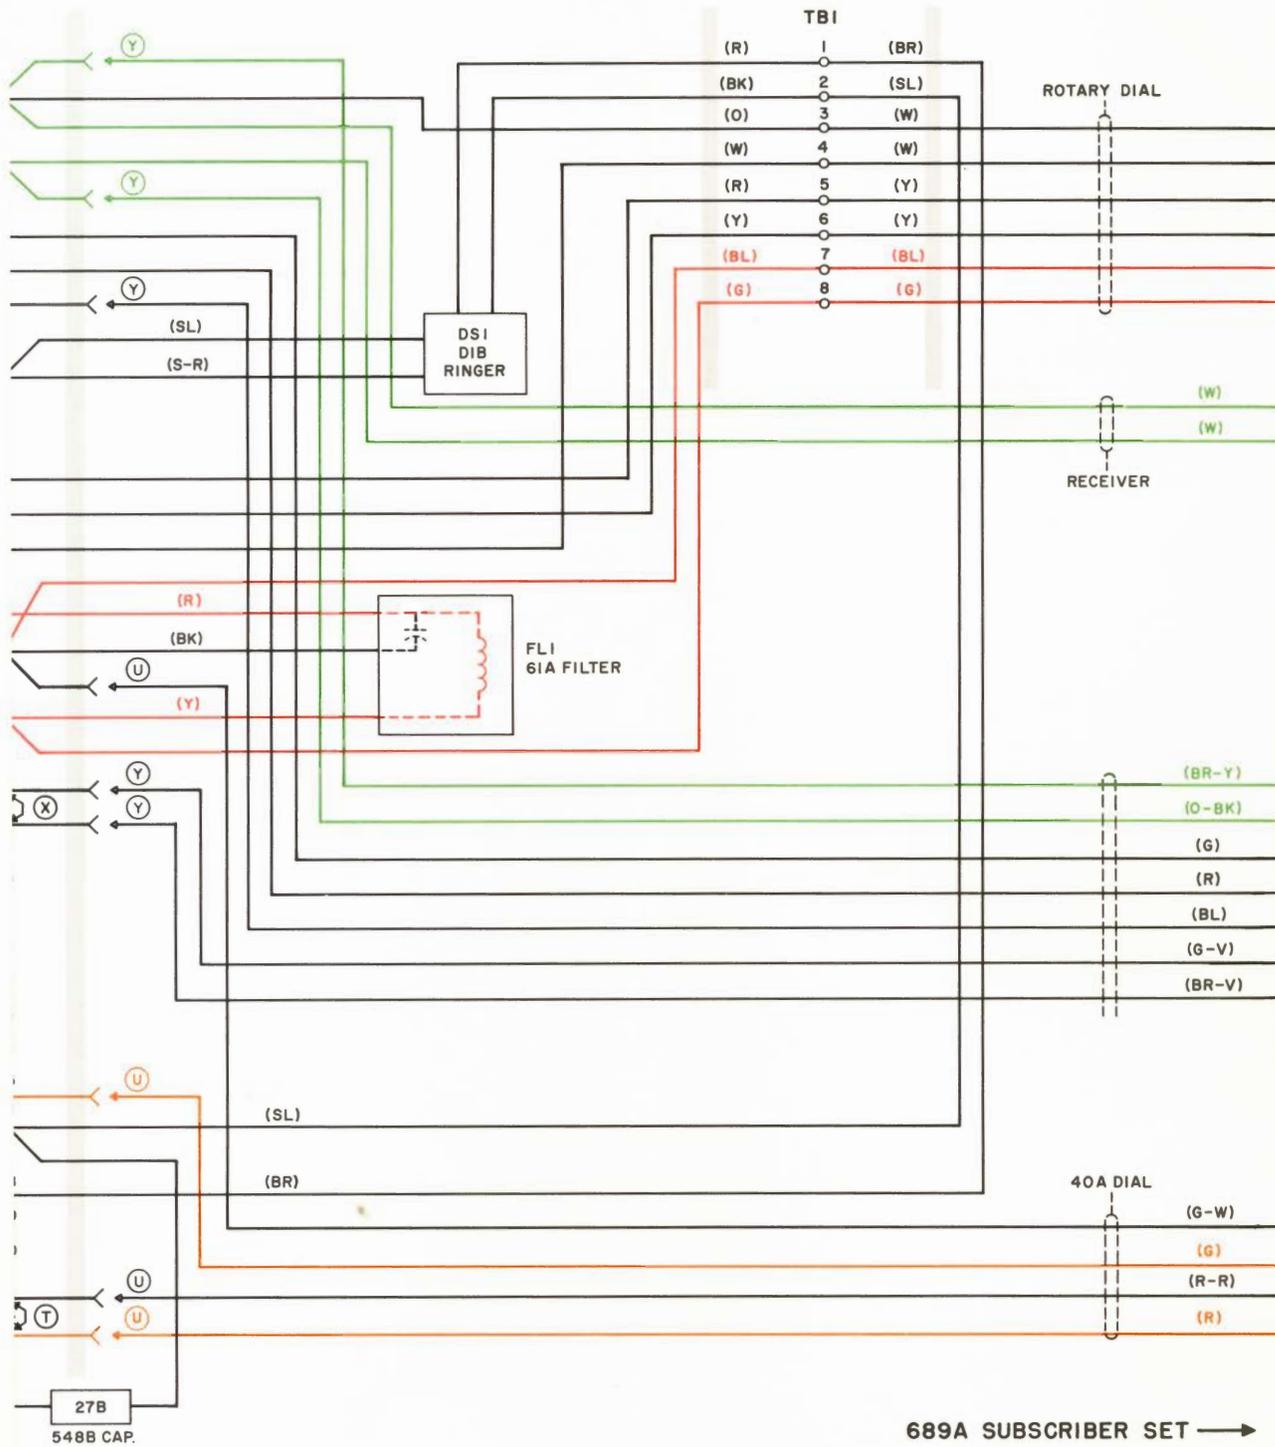



- 689A SUBSCRIBER SET →
- 689C SUBSCRIBER SET →
- 689D SUBSCRIBER SET →
- 689E SUBSCRIBER SET →

689C, 689D & 689E




OPTION	USED WITH SUBSCRIBER SET	EQUIPMENT ARRANGEMENT
T	689A, 689C	ROTARY DIAL
U	689D, 689E	CARD DIALER
X	689A, 689D	RECEIVER ONLY
Y	689C, 689E	LOUDSPEAKER & RECEIVER

OPTIONAL; THEY ARE NOT SHOWN IN THIS BASIC DRAWING UNLESS SPECIFIED.




Fig. 1 — 689A, C, D, E Types Subscriber Set Connections

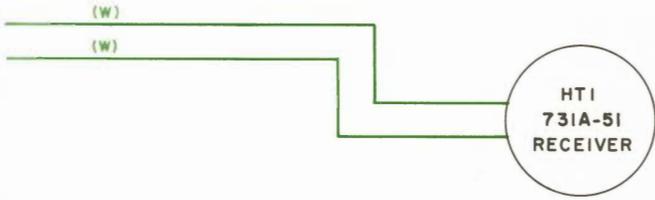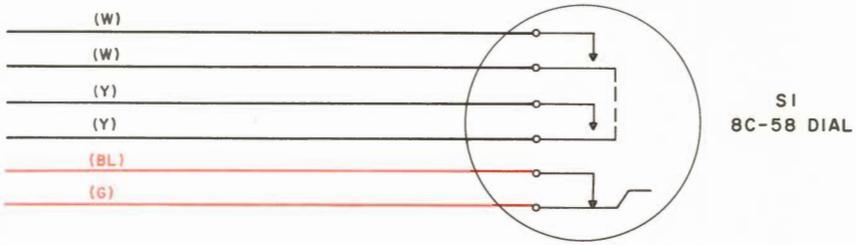





← 689A SUBSCRIBER SET

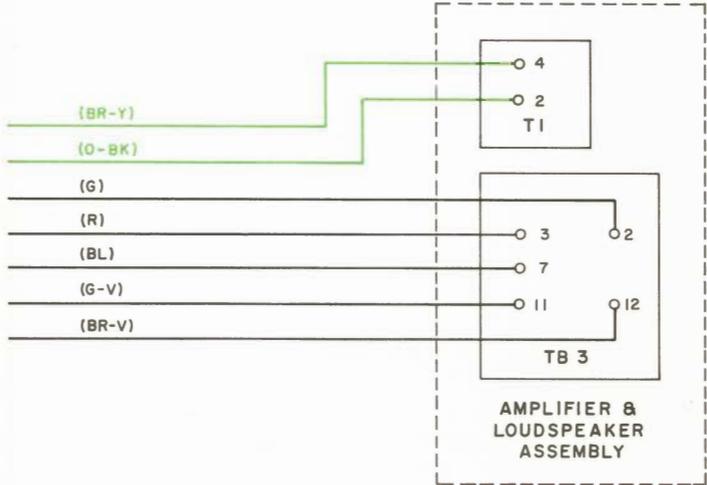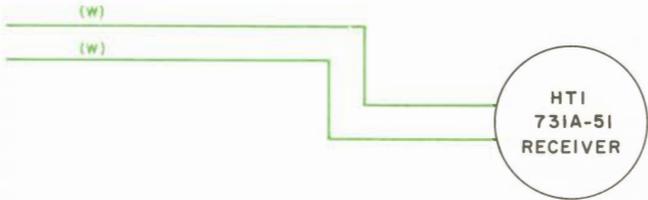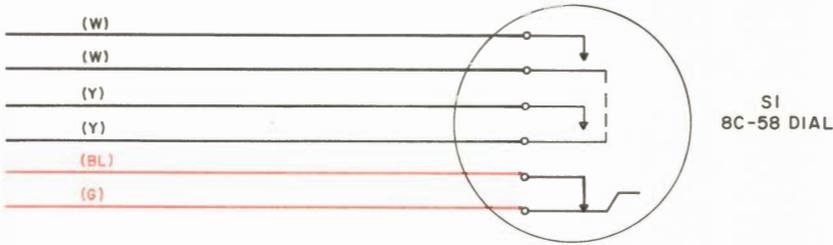

689C SUBSCRIBER SET

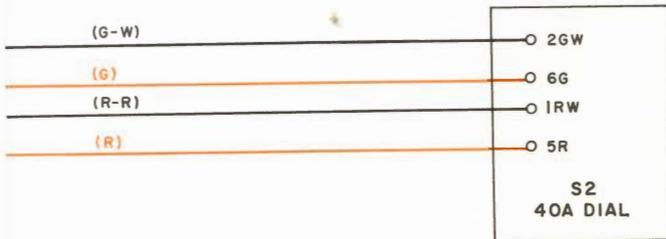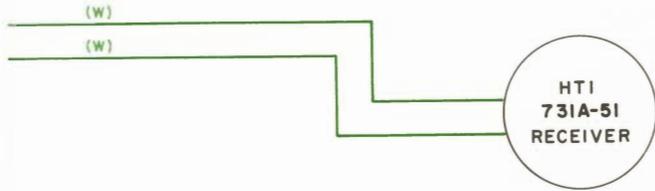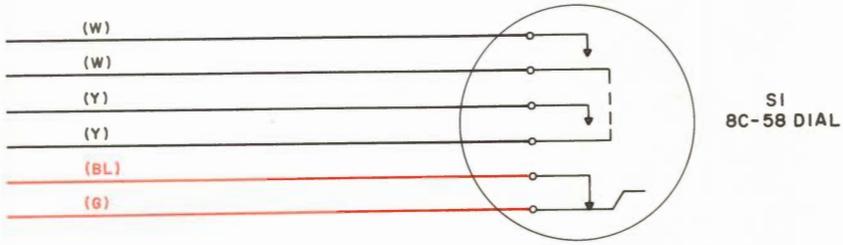

← 689D SUBSCRIBER SET

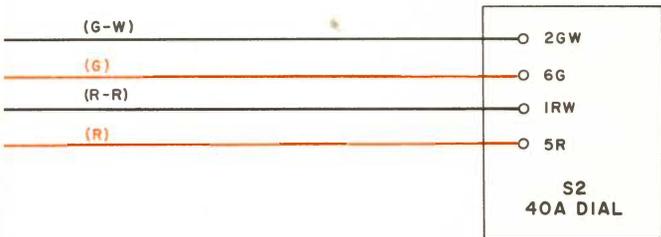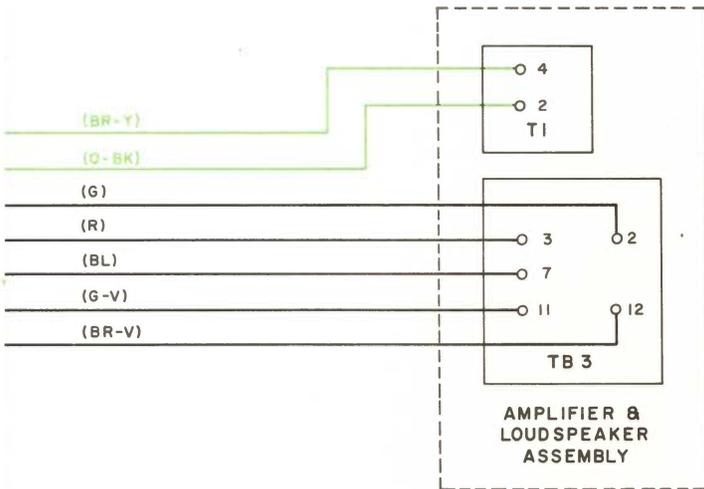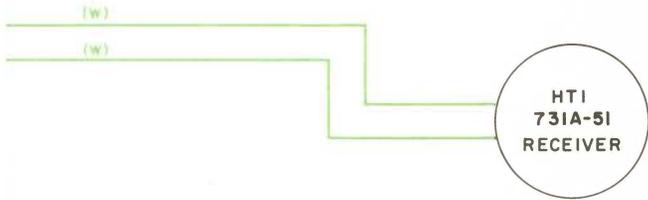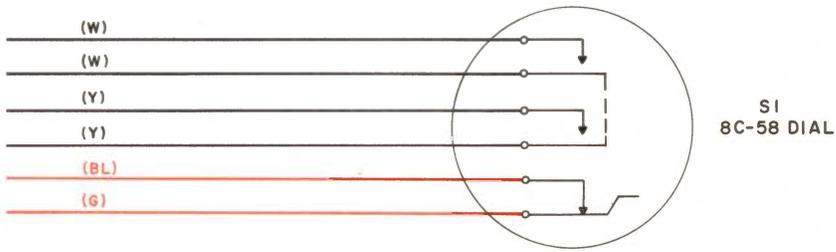

← 689E SUBSCRIBER SET