

**BELL SYSTEM PRACTICES**  
**Station Installation and Maintenance**

**SECTION C52.141**  
**Issue 2, 5-23-33**  
**Standard**

## **50 TYPE COIN COLLECTORS**

### **SIDETONE—CONNECTIONS**

#### **1. GENERAL**

1.01 This section gives information covering the connections for 50 type coin collectors and associated sidetone subscriber sets.


1.02 If for any reason it is found necessary to connect a 150 type coin collector to a sidetone subscriber set refer to the section in Subdivision C52 covering anti-sidetone coin collector connections for further information.

1.03 In general, prepayment manual and dial coin collectors are used only on individual lines. Postpayment manual coin collectors can, however, be used on either individual or party lines. When postpayment coin collectors are used on party lines, use the proper subscriber set for the class of service specified and make line and ringer connections in accordance with sections in Division C40.


1.04 **Reason for Reissue:** This practice is reissued to include information on connection changes which have to be made when using a local battery talking, common battery signaling set with a prepayment coin collector.

## 2. COIN COLLECTOR CONNECTIONS

### 2.01 Individual Lines—Prepayment Manual Service:

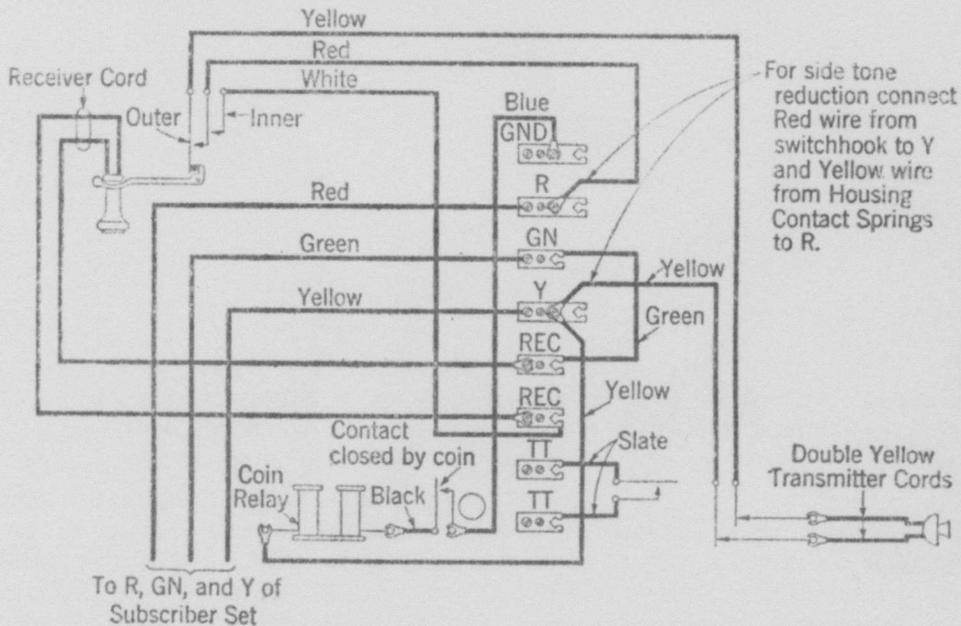


**50-A and 50-F Coin Collectors**  
**Fig. 1.**

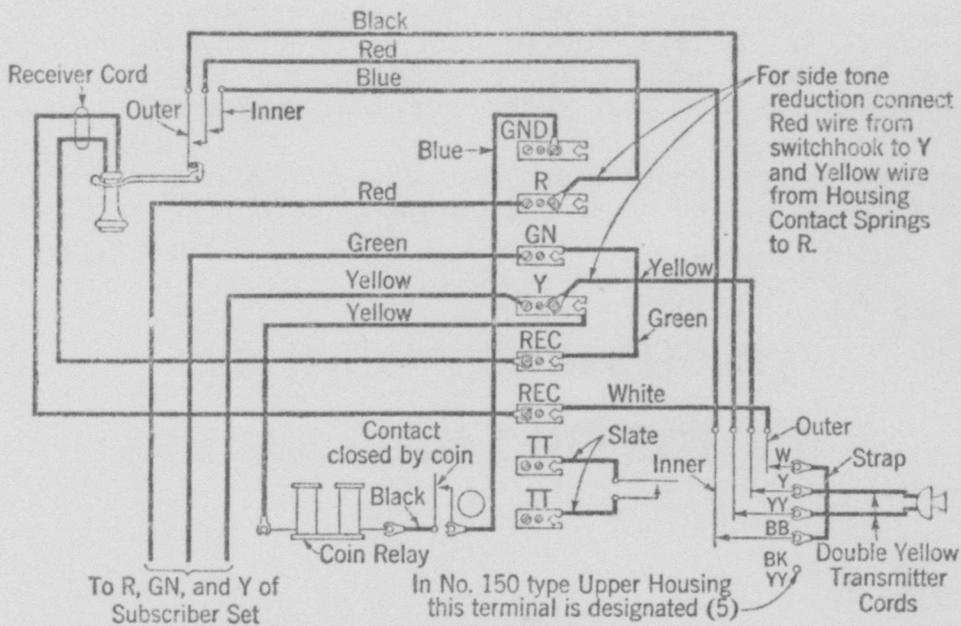


**50-G and 50-H Coin Collectors**  
**Fig. 2.**

2.02 Individual Lines—Prepayment Dial Service.

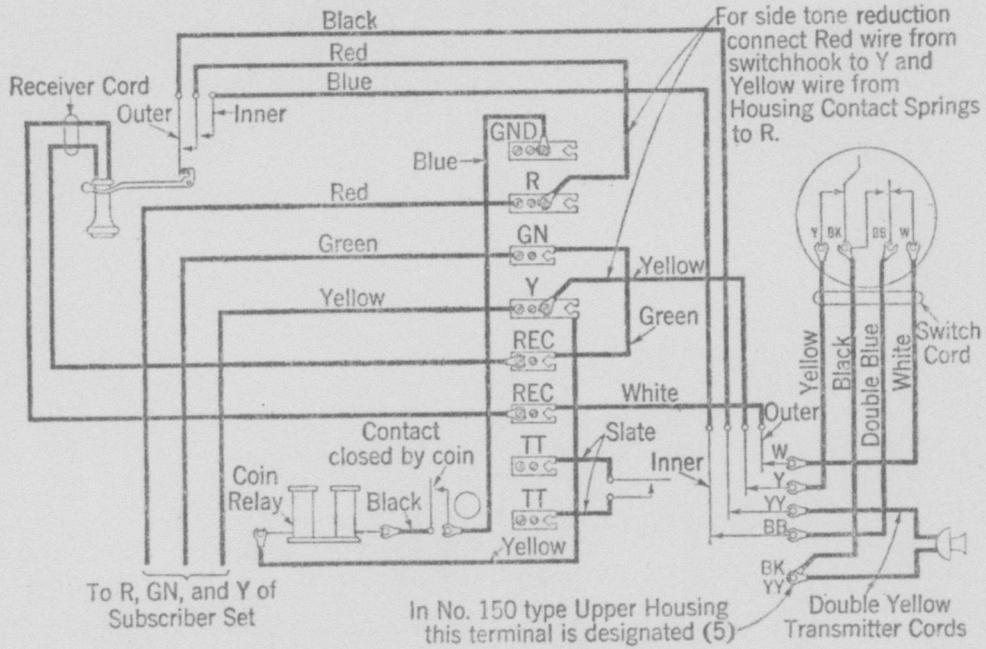

50-G and 50-H Coin Collectors  
Fig. 3.


**2.03 Individual and Party Lines—Postpayment Manual Service.**

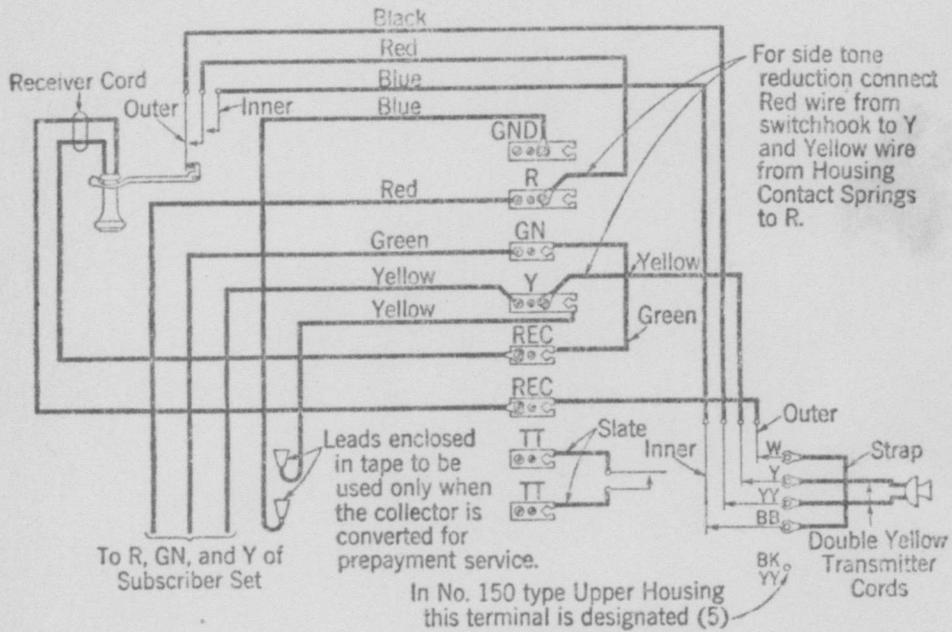


**50-K and 50-L Coin Collectors**  
**Fig. 4.**

**3. SUBSCRIBER SET CONNECTIONS**

**3.01 Individual Lines—Prepayment and Postpayment Manual and Prepayment Dial Service:**

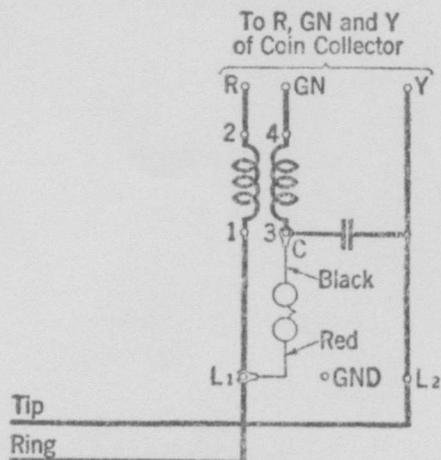

**584-A Subscriber Set Shown**  
**(For Common Battery Stations)**  
**Fig. 5.**

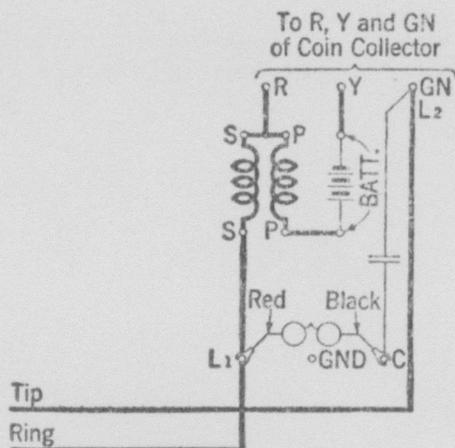


**534-Y Subscriber Set Shown**

(For local battery talking, common battery signaling stations)

**Fig. 6.**

Note: When a local battery talking, common battery signaling set is used with a prepayment coin collector it is necessary to transfer the yellow lead of the coin relay from the Y lug to the GN lug on the connecting block of the coin collector.

**3.02 Individual Lines—Postpayment Service:**

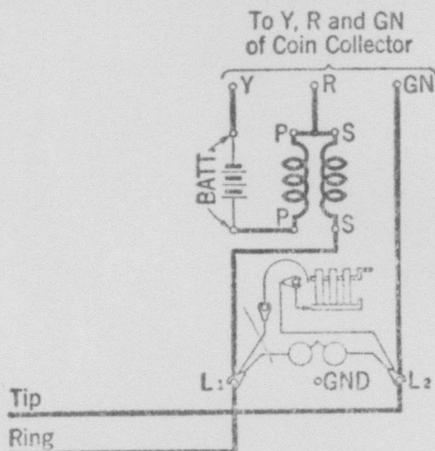

**315-H Subscriber Set Shown**

(For Magneto Stations)

**Fig. 7.**