

1A AND 1A1 KEY TELEPHONE SYSTEMS

CONNECTION DATA

INDEX

1.00 GENERAL

1.01 This is a tabular index showing connection data for terminations to be made at apparatus for the various features. The sections where the data may be found are also listed.

TABULAR TITLES		SECTION	
1A1 Key Telephone System Connection Data — Description and Use		C71.355	
Signal-key and Buzzer Circuits		C71.379	
Typical 1A1 Installations	Condensed Connection Charts	C71.381	
Terminations in Apparatus Cabinet	Power Wiring	C71.383	
	Central Office or PBX Lines	C71.385	
	Intercommunicating Lines	C71.387	
	Dial Selective Intercom Lines	Busy Lamps and Audible Signals	C71.389
		Flashing Line Lamps and Automatic Cutoff	C71.391
	Tie and Station Lines	C71.393	
	Automatic Cutoff	C71.395	
	Cutoff and Exclusion Key and Running Cables	C71.397	
Station Connections	440- and 460-series Key Telephone Sets	C71.431	
	540- and 560-series Key Telephone Sets	C71.433	
	External Signal Keys	C71.435	
	External Ringers and Buzzers	C71.437	
	Separately Mounted Keys	C71.439	
	Lamp Resistor Units	C71.441	

SECTION C71.353

INDEX

1.02 This is a complete index showing section and table titles with their corresponding section and table numbers for Sections C71.355 through C71.441.

SECTION AND TABLE TITLES	NUMBERS	
	SECTION	TABLES
<p>Connection Data—Description and Use</p> <p>Running Cable Assignments for Rarely Used Features and Circuits</p>	C71.355	55.01
<p>Signal-key and Buzzer Circuits—Terminations in Apparatus Cabinet</p> <p>201A or B Buzzer Bridging Unit—Code Signaling Only</p> <p>201A or B Buzzer Bridging Unit—Using 3A Key Telephone Unit for Code AND Selective Signaling</p> <p>Key Cable to Buzzer Bridging Unit—All Key Telephone Sets with Internal Signaling Keys except One-button Sets—Code and/or Selective Signaling</p> <p>Key Cable to Running Cable or to Buzzer Bridging Unit—Code and/or Selective Buzzer Circuit Using External Signal Keys</p>	C71.379	79.01 79.02 79.03 79.04
<p>Typical 1A1 Installations—Condensed Connection Charts</p> <p>Condensed Connection Chart—1A1 Key Telephone System Consisting of: One 212A Key Telephone Unit; Two 202B Key Telephone Units; One 16A Key Telephone Unit; a 101G Power Plant; and 564B Key Telephone Sets</p> <p>Condensed Connection Chart—1A1 Key Telephone System Consisting of: One 209A Key Telephone Unit; Three 202B Key Telephone Units; One 16A Key Telephone Unit; a 101G Power Plant; and 544B Key Telephone Sets</p>	C71.381	81.01 81.02
<p>Power Wiring</p> <p>Central Office, PBX, Building, or Local Battery to Circuit Fuse Unit through Feeder Fuse Unit per Fig. 1</p> <p>Transformers or Power Plant to Circuit Fuse Unit per Fig. 2</p> <p>Circuit Fuse Unit to Key Telephone Units Using Battery</p> <p>Power Wired Directly to Key Telephone Units</p> <p>Ringng Supply to Key Telephone Units</p> <p>Generator Resistor Lamp Unit to Key Telephone Units Using Generator</p>	C71.383	83.01 83.02 83.03 83.04 83.05 83.06

SECTION AND TABLE TITLES	NUMBERS	
	SECTION	TABLES
<p>Central Office or Private Branch Exchange Lines—Terminations in Apparatus Cabinet</p> <p>209A System Flashing and Time-out Unit and 202A, B, and/or 213A Central Office or PBX Line Units</p> <p>212A System Flashing and Time-out Unit and 202A, B, and/or 213A Central Office or PBX Line Units</p> <p>Key or Running Cable to Central Office or PBX Line Units</p> <p>Incoming Lines from Central Office or PBX</p> <p>Second Audible Signal Control Circuit (Intermittent Ringing)—16A or 211A and Associated Key Telephone Units</p> <p>Wink Circuit—210A and Associated Key Telephone Units</p> <p>Key or Running Cable to First Audible Signal Control Circuit (Continuous Ringing)</p> <p>Key or Running Cable to Second Audible Signal Control Circuit (Intermittent Ringing)</p>	C71.385	<p>85.01</p> <p>85.02</p> <p>85.03</p> <p>85.04</p> <p>85.05</p> <p>85.06</p> <p>85.07</p> <p>85.08</p>
<p>Intercommunicating Lines, 211A and 31A Key Telephone Units—Terminations in Apparatus Cabinet</p> <p>211A or 31A Intercom Line Unit and 209A or 212A System Flashing and Time-out Unit</p> <p>Key or Running Cable to Key Telephone Units</p>	C71.387	<p>87.01</p> <p>87.02</p>
<p>Dial Selective Intercommunicating Lines—Busy Lamps and Audible Signals—207A or 207B Key Telephone Units—Terminations in Apparatus Cabinet</p> <p>Dial Selective Intercom Lines With Busy Lamps—207A or B Key Telephone Unit</p> <p>Dial Selective Intercom Station Audible Signals—207A or B Key Telephone Unit</p>	C71.389	<p>89.01</p> <p>89.02</p>
<p>Dial Selective Intercommunicating Lines—Flashing Line Lamps and Automatic Cutoff—26B, 207A or 207B, 208A, 209A, and 212A Key Telephone Units—Terminations in Apparatus Cabinet</p> <p>Strapping When a Station Utilizes a Common Ringer Common to Two or More Dial Selective Intercom Lines</p> <p>Dial Selective Intercom Lines with: 209A or 212A System Flashing and Time-out Unit, 208A Signal Circuit Unit</p> <p>Dial Selective Intercom Lines with: 207A or B Dial Selective Intercom Line Unit, 208A Signal Circuit Unit</p> <p>Dial Selective Intercom Lines with: 207A or B Dial Selective Intercom Line Unit, 208A Signal Circuit Unit, 26B Automatic Cutoff Unit</p> <p>Key Cable to 208A Signal Circuit Unit</p> <p>Running Cable to 208A Signal Circuit Unit</p>	C71.391	<p>91.01</p> <p>91.02</p> <p>91.03</p> <p>91.04</p> <p>91.05</p> <p>91.06</p>

SECTION C71.353

INDEX (Contd)

SECTION AND TABLE TITLES	NUMBERS	
	SECTION	TABLES
<p>Tie and Station Lines—203A Automatic Tie Line Unit—204A Ringdown Tie Line Unit—205A Station Line Unit—Terminations in Apparatus Cabinet</p> <p>Incoming Lines from Feeder Terminals</p> <p>Strapping: 209A System Flashing and Time-out Unit; 212A Combined System Flashing, Time-out, and Central Office or PBX Line Unit; 203A and 204A Tie Line Units; 205A Station Line Unit; 211A and 16A Audible Signal Control Units</p> <p>Key or Running Cable to 203A, 204A, or 205A Line Unit</p> <p>Key Cable from External Signal Keys to 204A or 205A Line Unit</p> <p>Key Cable from External Signal Keys to Running Cable</p>	C71.393	<p>93.01</p> <p>93.02</p> <p>93.03</p> <p>93.04</p> <p>93.05</p>
<p>Automatic Cutoff—26B and 29A Key Telephone Units—Terminations in Apparatus Cabinet</p> <p>Strapping between Automatic Cutoff Units and Central Office or PBX Line Units</p> <p>Specific Cutoff Options—Strapping 26B and 29A Key Telephone Units</p> <p>Key Cable to Key Telephone Units—All 1A1 Key Telephone System Sets except 565A Set</p> <p>Key Cable to Key Telephone Units—565A Set</p> <p>Running Cable to 26B and 29A Key Telephone Units</p>	C71.395	<p>95.01</p> <p>95.02</p> <p>95.03</p> <p>95.04</p> <p>95.05</p>
<p>Cutoff and Exclusion—Key and Running Cables—Terminations in Apparatus Cabinet</p> <p>Key Cable from Cutting-off Station to 201A or B Bridging Unit and Station Being Cut Off</p> <p>Running Cable between: Key Cable of Cutting-off Station and 201A or B Bridging Unit; Bridging Unit and Key Cable of Station Being Cut Off</p> <p>Key Cable from Excluding Station to 201A or B Bridging Unit and Station Being Excluded</p> <p>Running Cable between: Key Cable of Excluding Station and 201A or B Bridging Unit; Bridging Unit and Key Cable of Station Being Excluded</p>	C71.397	<p>97.01</p> <p>97.02</p> <p>97.03</p> <p>97.04</p>

SECTION AND TABLE TITLES	NUMBERS	
	SECTION	TABLES
<p>440- and 460-series Key Telephone Sets—Station Connections</p> <p>Internal Wiring Changes Which Must Be Made before Key Telephone Sets Can Be Used with 1A1 Key Telephone System</p> <p>Ringer and Buzzer Connections</p> <p>Exclusion Key in Set Used to Exclude Lines from Stations or to Cut Off Ringer or Buzzer in Set</p> <p>Internal Connections for 440- and 460-series Key Telephone Sets Equipped with Cutoff Keys</p> <p>Key Cable, Connecting Block Terminals, Set Terminals, and Cord Conductor Colors—440- and 460-series Sets</p>	C71.431	<p>31.01</p> <p>31.02</p> <p>31.03</p> <p>31.04</p> <p>31.05</p>
<p>540- and 560-series Key Telephone Sets—Station Connections</p> <p>Internal Wiring Changes (Switchhook and Hold Key Leads) for Auxiliary Control Leads (A1 and A) in 540B, 564B, C, and D Key Telephone sets</p> <p>Internal Wiring Changes (Switchhook and Hold Key Leads) for Auxiliary Control Leads (A1 and A) in 544A, B, 545B, 565A, B, and E Key Telephone Sets with or without Station Busy Signal</p> <p>Ringer and Buzzer Connections</p> <p>Exclusion Key in Set Used to Exclude Lines from Stations or to Cut Off Ringer or Buzzer in Set</p> <p>Cutoff Connections Using 565E Key Telephone Set</p> <p>Conversion of Pickup Keys to Signal Keys—Wiring Changes for 544A, B, 545B, 565A, B, and E Key Telephone Sets</p> <p>Key Cable, Connecting Block Terminals, Set Terminals, and Cord Conductor Colors—540- and 560-series Sets</p>	C71.433	<p>33.01</p> <p>33.02</p> <p>33.03</p> <p>33.04</p> <p>33.05</p> <p>33.06</p> <p>33.07</p>
<p>External Signal Keys</p> <p>Key Cable to 551A Signal Keys</p> <p>Key Cable to Signal Keys—Code and Selective Signaling: 4 External Signal Keys Using 549A or B Key; 8 External Signal Keys Using 549C or D Key; 12 External Signal Keys Using 549C or D and 549A or B Keys</p> <p>Key Cable to Signal Keys—Code or Selective Signaling: 4 External Signal Keys Using 549A or B Key; 8 External Signal Keys Using 549C or D Key; 12 External Signal Keys Using 549C or D and 549A or B Keys</p>	C71.435	<p>35.01</p> <p>35.02</p> <p>35.03</p>

SECTION AND TABLE TITLES	NUMBERS	
	SECTION	TABLES
<p>External Ringers and Buzzers</p> <p>External Ringer or Buzzer Used for Common Audible Signal, Dial Selective Intercom Station Signal, or for Buzzer Used with Signal-key and Buzzer Circuits</p> <p>External Ringer Used as Station Line Ringer on Tip and Ring of Any Line except Private Line</p>	C71.437	37.01 37.02
<p>Separately Mounted Keys—6021DN, 6027DA, 6027DB, 6028DA, 6040A, 6040B, and 6040C</p> <p>Cutting Off Extension Station or Ringer and Transferring Audible Signal Circuit to Local Ringer Using 6028DA Key</p> <p>Key Cable to Lamps in Indicators</p> <p>Individual Line Ringer Connected on Tip and Ring of Any Line except Private Line</p> <p>Common Audible Signal, Dial Selective Intercom Line Station Signal, or Signal-key and Buzzer System Signal</p> <p>Cutting Off Individual Line Ringer on Tip and Ring of Any Line except Private Line</p> <p>Cutting Off Common Audible Signal or Dial Selective Intercom Line Station Signal Using 6028DA Key</p> <p>Cutting Off Extension Station or Ringer Using 6028DA Key</p> <p>Transferring Common Ringer or Buzzer from Another Station to Local Station Using 6028DA Key</p> <p>Cutting Off Listening-in Receiver Using 6028DA Key</p> <p>Connecting Key Cable to Key and Wiring Key to Subscriber Set and Handset</p> <p>Wiring Changes for Auxiliary Control Leads—Converting 6040A and C Keys for Use with 1A or 1A1 Key Telephone Systems</p> <p>Conversion of Pickup Keys to Signaling Keys—Wiring Changes for 6040A, B, and Keys</p> <p>Ringer and Buzzer Connections Associated with 6040A, B, and C Keys When Key Cable Is Connected Directly to Key</p> <p>Ringer and Buzzer Connections Associated with 6040A, B, and C Keys When Key Cable Is Connected to 44-type Connecting Blocks and a Cord Is Used to Connect the Key</p> <p>Cutoff Key Connections Using 6040C Key with or without Cord</p> <p>Key Cable Connections to Key and Connections from Key to Telephone Set—6040A and C Keys</p> <p>Key Cable Connections to Key and Connections from Key to Telephone Set—6040B Key</p> <p>Connection of Internal Leads Equipped with Spade Tips</p>	C71.439	39.01 39.02 39.03 39.04 39.05 39.06 39.07 39.08 39.09 39.10 39.11 39.12 39.13 39.14 39.15 39.16 39.17 39.18
<p>Lamp Resistor Units Located at Station</p> <p>Battery Supplies and Resistor Units</p> <p>Wiring 18-type Resistors and Terminating Lamp Leads at Station</p>	C71.441	41.01 41.02