



NORTEL

Nortel Communication Server 1000

Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging Fundamentals

Release: 6.0

Document Revision: 03.03

www.nortel.com

NN43001-122

Nortel Communication Server 1000
Release: 6.0
Publication: NN43001-122
Document release date: 1 December 2009

Copyright © 2007-2009 Nortel Networks. All Rights Reserved.

While the information in this document is believed to be accurate and reliable, except as otherwise expressly agreed to in writing NORTEL PROVIDES THIS DOCUMENT "AS IS" WITHOUT WARRANTY OR CONDITION OF ANY KIND, EITHER EXPRESS OR IMPLIED. The information and/or products described in this document are subject to change without notice.

Nortel, Nortel Networks, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

All other trademarks are the property of their respective owners.

Contents

New in this Release	7
Other	7
Revision History	7
How to get help	9
Contents	9
Getting help from the Nortel web site	9
Getting help over the telephone from a Nortel Solutions Center	9
Getting help from a specialist by using an Express Routing Code	10
Getting help through a Nortel distributor or reseller	10
Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging	11
Overview	11
Multiple Microsoft Exchange Unified Messaging servers on a single network	13
Operational Considerations	14
Microsoft Exchange Unified Messaging operational characteristics	15
Secure Real-Time Protocol support for Microsoft Exchange Server 2007 Unified Messaging	16
CS 1000 set configuration	21
SIP provisioning guidelines	21
Configuration of Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging	25
Configure a new user mailbox for Microsoft Exchange Unified Messaging	26
Enable a new user mailbox for use with Microsoft Exchange Unified Messaging	32
Configure a new Dial Plan for Microsoft Exchange Unified Messaging	35
Configure the Operator Assistance feature	41
Install Geomant Message Waiting Indicator (MWI) application	43
Installation of Multiple MWI applications	44
Configure Geomant Message Waiting Indicator (MWI) application	44
Additional notes on configuring CS 1000 for MWI	48
SRTP configuration using Element Manager	48

Configure Microsoft Exchange Unified Messaging in CS 1000 Element Manager	48
Configure a Node in Element Manager for use with Microsoft Exchange Unified Messaging	49
Configure Subscriber Access, Auto Attendant, and MWI DN information	50
Configure information for the MWI Application DN	54
Select MWI Dial Plan type	54
Voice mail softkeys configuration	55
Allowing calling party numbers to update while leaving message	55
Disable a user mailbox	56
Remove a user mailbox	58
Remove a dial plan	59
Disable Operator Assistance feature	61
Remove Operator Assistance feature	61
Disable MWI service for a user phone set	62
End user experience scenarios	64
Navigation	64
Answering the call	64
Subscriber Access	64
Auto Attendant	65
Message waiting indication	65
Play on phone features	66
TLS Configuration on UMS2007SP1	68

AppendixUM Dialing Plan configuration examples **77**

Navigation	77
Coordinated Dialing Plan network in the same cost area	77
UM Gateway dialing plan configuration	78
Subscriber Access and Auto Attendant Configuration	78
Same SA/AA numbers	79
Different SA/AA numbers	79
Outbound calling	80
Message Waiting Indicator configuration	81
Coordinated Dialing Plan network in different cost areas	82
UM Gateway dialing plan configuration	82
Outbound calling	83
UDP/CDP network in different cost area	84
UM gateway dialing plan configuration	84
Subscriber Access and Auto Attendant configuration	85
Outbound calling	85
Branch Office in the same long distance cost area	85
UM Gateway dialing plan configuration	86
Subscriber Access and Auto Attendant configuration	86
Outbound calling	87

MWI configuration	87
Branch Office in a different long distance cost area	88
Virtual Office	89
UM Gateway dialing plan configuration	89
Subscriber Access and Auto Attendant number configuration	90
Outbound calling	90
Geographic Redundancy	90
Subscriber Access and Auto Attendant configuration	91
Outbound calling	91
Message Waiting Indicator	91
Other scenarios	91

New in this Release

This section describes what's new in *Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging Fundamentals (43001-122) for Communication Server 1000 Release 6.0*

Other

Revision History

December 2009	Standard 03.03. This document is up-issued to add a note in the section TLS Configuration on UMS2007SP1.
June 2009	Standard 03.02. This document contains added section: TLS Configuration on UMS2007SP1.
May 2009	Standard 03.01. This document is up-issued to support Communication Server 1000 Release 6.0.
May 2008	Standard 02.03. This document is issued to reflect changes in technical content.
March 2008	Standard 02.02. This document is issued to reflect changes due to CR#Q01808992.
December 2007	Standard 02.01. This document is issued to support Communication Server 1000 Release 5.5.
August 2007	Standard 01.01. This document is issued to support Communication Server 1000 Release 5.0 and Microsoft Exchange 2007 Unified Messaging.

How to get help

Contents

This section contains information on the following topics:

- Getting help from the Nortel web site
- Getting help over the telephone from a Nortel Solutions Center
- Getting help from a specialist by using an Express Routing Code
- Getting help through a Nortel distributor or reseller

Getting help from the Nortel web site

The best way to get technical support for Nortel products is from the Nortel Technical Support web site:

www.nortel.com/support

This site provides quick access to software, documentation, bulletins, and tools to address issues with Nortel products. From this site, you can:

- download software, documentation, and product bulletins
- search the Technical Support Web site and the Nortel Knowledge Base for answers to technical issues
- sign up for automatic notification of new software and documentation for Nortel equipment
- open and manage technical support cases

Getting help over the telephone from a Nortel Solutions Center

If you do not find the information you require on the Nortel Technical Support web site, and you have a Nortel support contract, you can also get help over the telephone from a Nortel Solutions Center.

In North America, call 1-800-4NORTEL (1-800-466-7835).

Outside North America, go to the following web site to obtain the telephone number for your region:

www.nortel.com/callus

Getting help from a specialist by using an Express Routing Code

To access some Nortel Technical Solutions Centers, you can use an Express Routing Code (ERC) to quickly route your call to a specialist in your Nortel product or service. To locate the ERC for your product or service, go to:

www.nortel.com

Getting help through a Nortel distributor or reseller

If you purchased a service contract for your Nortel product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller.

Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

Overview


CS 1000 support for Microsoft Exchange Server 2007 Unified Messaging enables interoperability between the voice service capabilities of Communication Server 1000 and the Unified Messaging solution provided as a component of Microsoft Exchange Server 2007. This interoperability provides the following capabilities:

- **Call Answering:** With call answering, Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging is configured to answer incoming calls on behalf of a user by playing their personal greeting, recording a voice message from the caller, and submitting it for delivery to the user inbox as an e-mail message.
- **Subscriber Access:** enables dial-in access for users. A subscriber dialing into the Microsoft Exchange Unified Messaging system accesses their mailbox using Outlook 2007 Voice Access, enabling access using either a telephone keypad or voice inputs. When dialed into the Unified Messaging system using a telephone, a subscriber or user can perform the following functions:
 - Listen to, forward, or reply to voice mail messages, and call the sender of the voice mail.
 - Listen to calendar information.
 - Access or dial contacts stored in the global address list or in a personal contact list.
 - Accept or cancel meeting requests.
 - Set a voice mail Out-of-Office message.
 - Set security preferences and personal options.
- **Auto Attendant:** Provides a set of voice prompts that provides access to the Microsoft Exchange Unified Messaging system by external users. Using the Auto Attendant, the external user navigates the menu

structure, using either the telephone keypad or speech inputs, to place a call to a user or to locate a user for the purpose of placing a call to that user. In addition, the Auto Attendant gives system administrators the ability to perform the following functions:

- Create a customizable set of menus for use by external users.
- Define informational greetings, business hours greetings, and non-business hours greetings, and greetings for holiday schedules.
- Add instructions for callers describing how to search the organizational directory, and how to connect to a specific user by means of their extension number.
- Enable access for external callers to the operator. For more information, see [“Configure the Operator Assistance feature” \(page 41\)](#).
- **Play on Phone:** Allows a Microsoft Exchange Unified Messaging-enabled user to access a voice mail message through Outlook 2007 or Outlook Web Access and listen to the message over a telephone.
- **Message Waiting Indication (MWI):** Designed by Geomant, the MWI application is an add-on to the Microsoft Exchange Unified Messaging Server 2007 which provides support for MWI notifications to users connected to the Microsoft Exchange Unified Messaging Server. For more information on the installation and configuration of the Geomant MWI application, see [“Install Geomant Message Waiting Indicator \(MWI\) application” \(page 43\)](#) and [“Configure Geomant Message Waiting Indicator \(MWI\) application” \(page 44\)](#).

Note: The MWI 2007 software is a third-party software developed by Geomant. Information on Geomant and MWI 2007 is provided in this documentation for ease of reference only. Nortel does not sell, warrant or provide operational support for Geomant’s MWI 2007 software product, nor warrant the accuracy of MWI 2007 descriptions contained in this document. Customers using this document are strongly recommended to obtain the most recent MWI 2007 documentation from Geomant.

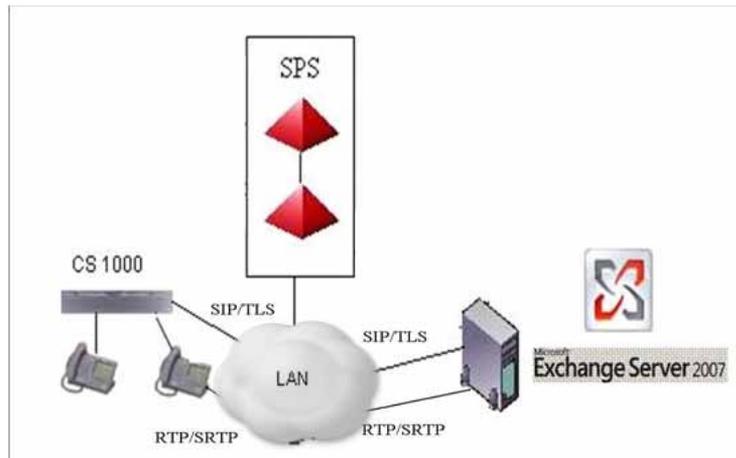

Multiple Microsoft Exchange Unified Messaging servers on a single network

Multiple Servers can be configured for a single network to ensure the effective handling of potential issues caused by challenges of:

- **Capacity:** Each Microsoft Exchange Unified Messaging Server is capable of supporting a maximum of 200 total concurrent (combination of inbound and outbound) calls. In larger customer networks that need to support a higher volume of concurrent calls, additional Microsoft Exchange Unified Messaging Servers can be configured in the same network so that users can be load-balanced.
- **Redundancy:** An additional Microsoft Exchange Unified Messaging Server can be configured as a redundant server in a network by utilizing the Least Cost Routing Mechanism on the Network Routing Service (NRS) - configuring an additional Microsoft Exchange Unified Messaging Server provides a greater measure of fault tolerance for the services provided, allowing a continuation of those services in the event of system failure
- **Geographical location:** If network systems are located across multiple geographic locations, Microsoft Exchange Unified Messaging Servers can be implemented in such a way that they are both local and specific to each location. Configuring multiple servers in this way would automatically result in load sharing of access to Microsoft Exchange Unified Messaging services by users in the network.

Operational Considerations

Considerations specific to Microsoft Exchange Server 2007 are as follows:

- The only supported codecs are G711 and G723.
- RFC2833 is required for DTMF digit transmission to the Exchange Server.
- Exchange Server 2007 must always be configured as a static endpoint on the NRS as Registration is not supported.
- The Fax on UM capability is supported.
- Geomant Message Waiting Indicator (MWI) 2007 is a required add-on for MWI functionality.
- Microsoft Outlook 2007 is required.
- Exchange Server 2007 requires the use of x64 processors.
- For the Play on Phone option to function, the default Outlook data file used must be of type **.ost**. If the default Outlook data file is of type **.pst**, the Play on Phone option will not be available.
- Calling a non-Exchange user using the Auto Attendant functionality is not supported by Microsoft Exchange Unified Messaging.
- Due to known issue concerning support of Payload 101 for RFC2833, intermittent DTMF issues will be experienced with PC-based clients.
- Interoperability with BCM/SRG and CS 2100 over H.323 causes speech path issues due to non-handling of RE-INVITE requests by Microsoft Exchange Unified Messaging Server.
- SRTP is not supported on Exchange for CS 1000 Release 5.5 and below.

Considerations specific to the Geomant MWI Application are as follows:

- In a Main Office-Branch Office (MO-BO) environment, MWI functionality is provided in either Normal or Local mode, as MWI is not supported as multiple instances in the same domain.
- In a Geographic Redundant System environment, MWI functionality is provided in either a Primary Call Server (PCS) or a Secondary Call Server (SCS) system, as MWI is not supported as multiple instances in the same domain

Considerations specific to the Communication Server 1000 are as follows:

- Only CDP dialing is supported between the home CS 1000 and the UM Server - users dial in to the home CS 1000 using any configured

dialing plan to access services provided by Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging.

- Configuration of the voice mail soft key cannot be changed if there is a combination of CallPilot and Microsoft Exchange Unified Messaging voice mail users on a single node. A recommended deployment solution would be to have CallPilot users and Microsoft Exchange Unified Messaging users associated with separate Line TPS nodes.

The voice mail soft key feature on the phone set assigns a unique key to each of the voice messaging functions.

- While operating with an MCS PC Client, Microsoft Exchange Unified Messaging calls can not be placed on hold.
- The existing limitation on the NRS of multiple endpoints with the same static IP address is not supported. This affects network environments where two CDP domains are configured to use the same Microsoft Exchange Server 2007.
- The IP Softphone 2050 does not support RFC2833; therefore, it can not be used with the Subscriber Access and Auto Attendant features of the Exchange Server 2007.
- If a call originates from an H.323 endpoint (CS 1000/BCM/SRG) and is tandem transferred by the CS 1000 to the Microsoft Exchange Unified Messaging Server using SIP, the Subscriber Access and Auto Attendant feature can only be accessed by voice command and not by keypad (DTMF), as there is no support for RFC2833 over an H.323 network.
- If the far end does not support RFC2833 (with a payload value of 101), the Play on Phone functionality is not supported.
- Calls forwarded by Integrated Call Director (ICD) to Microsoft Exchange Unified Messaging are not supported.

Microsoft Exchange Unified Messaging operational characteristics

- When a Microsoft Exchange Unified Messaging-enabled user plays back stored voice mail messages, the order of playback begins with the last message recorded. That is, when voice mail has been received (in order) from User 1, User 2, and User 3, the messages are replayed in the order of User 3, User 2, User 1.
- For a voice mail message that is a reply to an earlier voice mail message, the reply message is played before the playback of the original message.
- If there is only one voice mail message waiting for the user, it is not possible to undelete that voice mail message once it has been deleted.

- Voice mail messages that have been listened to will continue to register as a new message until the next option is used.
- When a user dials the Auto Attendant number (with speech enabled) and does not provide a name, Auto Attendant repeats the prompt for a name three times. After the third prompt, the call is forwarded to the operator automatically.
- Call answering does not work if the call is being redirected across CS 1000 nodes (or any SIP Gateways) with different dial plans. The Unified Messaging fails to answer calls from User A.

For example, there are two users—User A on node_A, with DP_A and User B on node_B, with DP_B, User A's phone is set to forward all calls to B's DN.

The UM is not able to resolve mailbox for User A between cross-dial plans.

Secure Real-Time Protocol support for Microsoft Exchange Server 2007 Unified Messaging

CS 1000 Release 6.0 Microsoft Exchange Server 2007 Unified Messaging for supports Secure Real-Time Protocol (SRTP) in the following scenarios:

- Scenario 1—CS 1000 with SRTP using Exchange Server 2007 for voice mail.
- Scenario 2—CS 1000 interoperating through Multimedia Convergence Manager with Office Communication Server 2007 and Exchange Server 2007.
- Scenario 3—CS 1000 interoperating through Multimedia Convergence Manager with Integrated Office Communication Server 2007 and Exchange 2007.

ATTENTION


TLS must be enabled between CS 1000, Exchange Server 2007, and Office Communication Server 2007 for SRTP to function. For more information about TLS, see *Security Management Fundamentals* (NN43001-604). For more information about Multimedia Convergence Manager with Integrated Office Communication Server 2007, see *Nortel Converged Office Fundamentals – Microsoft Office Communications Server 2007* (NN43001-121).

If CS 1000 and Unified Messaging are in different domains served by different DNS servers, each DNS server should have forwarders configured, which contain the domain name and IP of the other DNS server. So, if the first DNS server cannot resolve the FQDN, the DNS server itself would forward the request to the other DNS servers.

Scenario 1

This scenario describes the CS 1000 with SRTP using Microsoft Exchange Server 2007 for voicemail.


Figure 1
CS 1000 with SRTP using Microsoft Exchange Server 2007 for voicemail

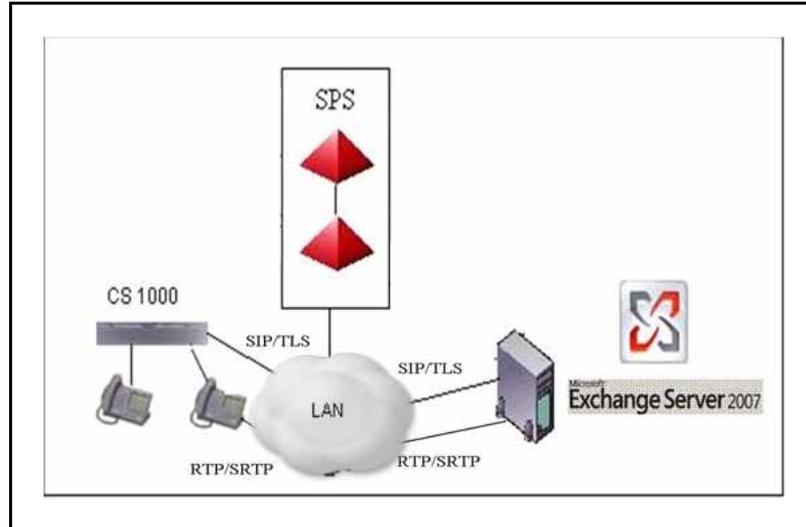

Scenario 2

This scenario describes how the CS 1000 interoperates through Multimedia Convergence Manager with Office Communication Server 2007 and Exchange Server 2007


Figure 2
OCS/Exchange for Voicemail with SRTP/RTP

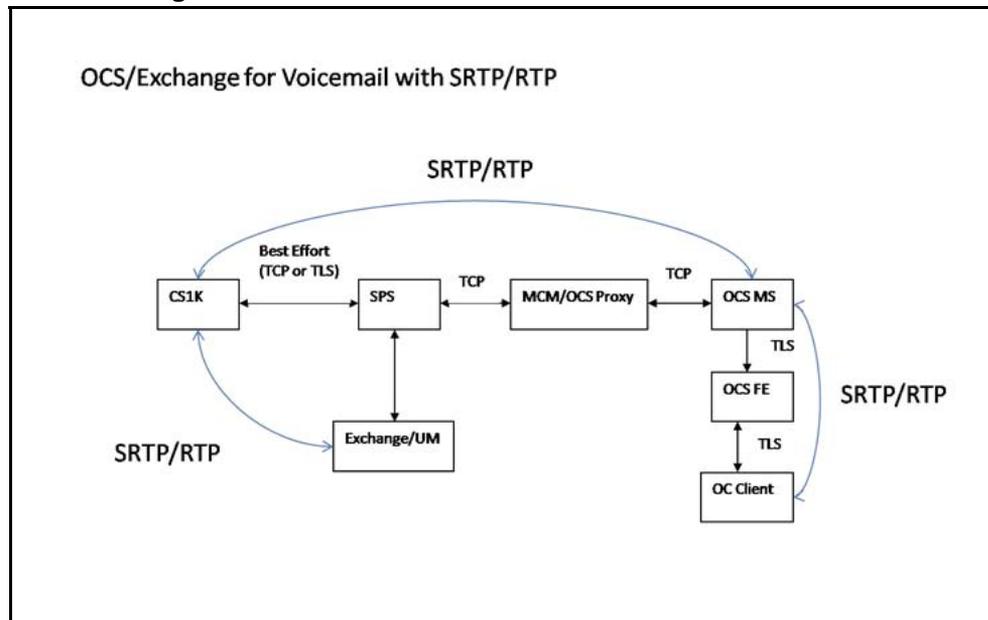

Scenario 3

This scenario describes how the CS 1000 interoperates through MCM with Integrated OCS 2007 and Exchange 2007

Figure 3
OCS/Exchange Integrated for Voicemail with SRTP/RTP

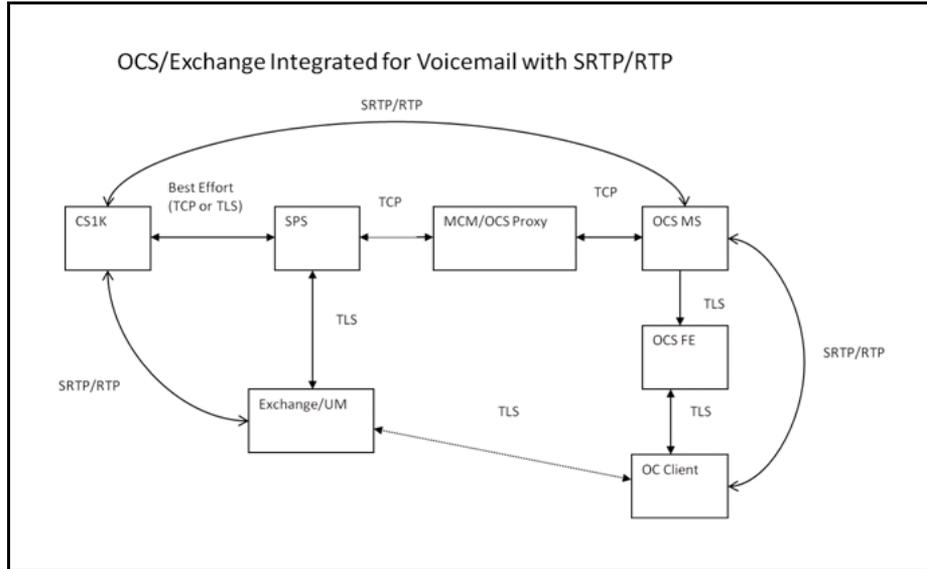

Feature Interactions

The following table provides feature interactions.

Table 1

SRTP	Wave 13	RTP/SAVP, 200 OK, using RTP/AVP
best-effort SRTP	Microsoft Exchange 2007 Service Pack 1. VOIP Security: Secured	200 OK, using RTP/SAVP
best-effort SRTP	Microsoft Exchange 2007 Service Pack 1. VOIP Security: SIP Secured	503 Services Not Available
best-effort SRTP	Microsoft Exchange 2007 Service Pack 1. VOIP Security: Unsecured	503 Services Not Available

CS 1000 Release 6.0 Interaction with Exchange 2007 Service Pack 1 and Exchange 2007 Wave 14

In order for CS 1000 and Exchange to communicate through SRTP, Element Manager must be configured to indicate if VOIP Security is configured as "Secured". The following scenario is common between a Best Effort CS 1000 SIP INVITE to Exchange 2007 Service Pack 1 and Exchange 2007 Wave 14.

(1) A Best Effort offer to Exchange with VOIP Security: Secured

```
v=0
o=- 122 3 IN IP4 192.168.117.230
o=- 122 3 IN IP4 192.168.117.230
s=-
t=0 0
c=IN IP4 0.0.0.0
m=audio 5200 RTP/AVP 0 8 101 111
a=tcap:1 RTP/SAVP
a=crypto:1 AES_CM_128_HMAC_SHA1_80
inline:NatI39V92Sgt0WOOhzMIqBZJlb0IkZD7vykD
OuLJ|2^31|2776763240:4
a=crypto:2 AES_CM_128_HMAC_SHA1_80
inline:NatI39V92Sgt0WOOhzMIqBZJlb0IkZD7vykD
OuLJ|2^31
a=rtpmap:101 telephone-event/8000
a=fmtp:101 0-15
a= sendrecv
a=pcfg:1
t=1
```

Below is a sample answer to Offer 1:v=0

```
o=- 128 2 IN IP4 192.168.116.230
s=-
t=0 0
c=IN IP4 0.0.0.0
m=audio 5200 RTP/SAVP 0 8 101 111
a=crypto:1 AES_CM_128_HMAC_SHA1_80
inline:KY2o2u8S0tKrnai4YO0STMDvnquDOEPLWbczkHJZ|2^31|2776763
240:4
a=rtpmap:101 telephone-event/8000
a=fmtp:101 0-15
a= sendrecv
```

From the sample above, the initial Best Effort offer: it supports the following Media Profiles: RTP/SAVP and defaults to RTP/AVP if RTP/SAVP cannot be used. Exchange responds with RTP/SAVP to indicate its usage of SRTP and does not include the media level attribute acfg.

Limitations

Secure Real-Time Protocol support for Microsoft Exchange Server 2007 Unified Messaging limitations

- CS 1000 has the capability to understand and process the acap attribute in an incoming offer but does not make use of it in the response or in a new offer as defined in Nortel's SRD Section 16.6.2.[1]
- When CS 1000 Release 6.0 is used with Exchange 2007 that has VOIP Security set as Secured, all mailboxes associated with that secured Dialling Plan are treated with a Media Security Class of Service of Always Secured. When VOIP Security is configured as Secured, it requires the use of TLS for SIP Signalling between Exchange and CS 1000. Any IP or digital sets that do not support SRTP are not compatible with Exchange if VOIP Security is configured as Secured. It is unknown at this time what Exchange Unified Messaging 2007 Wave 14 limitation are
- Exchange 2007 SRTP does not support MKI or <"from", "to"> rekeying, however since the typical lifetime of RTP and RTCP packets is 2^31 this means supporting key update is unnecessary.

Exchange 2007 does not renegotiate a new security context and uses the current security context for it to receive and send stream during a SIP REINVITE.

Table 2
Features not supported with Exchange 2007 SP 1 when SRTP and TLS are enabled

Action	Supported
Call on Hold	Not Supported
Call Transfer (blind)	Not Supported
Call Transfer (consultative)	Not Supported
Call Conference	Not Supported

Exchange 2007 Unified Messaging SP1 and Wave 14

The patch to negotiate best effort SRTP does not impact previous limitations between CS 1000 5.x and Exchange 2007 Unified Messaging SP1 and Wave 14.

CS 1000 set configuration

This section details appropriate set configuration to provide operation for Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging.

Required class of service configurations are as follows:

- **CFXA (Call Forward External):** Allowed
- **FNA (Call Forward No Answer):** Allowed
- **HTA (Hunting):** Allowed
- **CLS (Trunk: Call Access Restriction):** Unrestricted
- **MWA (Message Waiting Indicator):** Allowed

Both **FDN (Call Forward No Answer DN)** and **Hunt (Hunt DN)** must be set to the value for the configured **Subscriber Access DN**.

SIP provisioning guidelines

This section details the SIP provisioning requirements for operations on Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging and/or via overlay.

For references on the CS 1000 configurations, consult following NTPs:

1. CS 1000 Input/Output: Administration: *NN43001-611*.
2. CS 1000 Element Manager System Reference - Administration: *NN43001-632*.

Procedure 1

Configuring SIP/Virtual Trunks, Route, Dialplan, Route entries and Endpoints for CS 1000 to interoperate with Exchange/UM using Element Manager and/or via overlay.

Step	Action
1	Create a new virtual D-Channel to the Node that registered in the Exchange Server - LD 17.
2	Create Virtual Route (RDB) using the D-Channel (LD 16) with following parameters: "PCID=SIP, INAC=Yes, CTYP-ukwn."
3	Create Virtual Trunks for the Route previously created - LD 14.
4	Create DMI(DGT), with no deletion or insertion - LD 86.
5	Create RLB using Route and DMI previously created in steps #2 and #4 - LD 86

- 6 Create CDP Distant Steering Code to route the call to the Exchange Server - LD 87.
- 7 Create ACD DNs with NCFW configured for both Subscriber Access and Auto Attendant numbers - LD 23.
- 8 For all subscriber's phone sets, set FDN/HUNT to Subscriber Access number and add the following features in CLS (LD 11): FNA, HTA, HFA, WTA, FBA, MWA, SFXA.

--End--

Procedure 2
Configuring SIP/Virtual Trunks, Route, Dialplan, Route entries and Endpoints for CS 1000 to interoperate with Exchange/UM using NRS:

Step	Action
1	Add the Exchange Server and its IP address as a Static endpoint on NRS; and fill in the field "Static endpoint address" with the Exchange Server IP.
2	Add Routing Entries for Exchange Server gateway endpoint: DN type: Private Level 0 regional (CDP Steering Code) DN prefix: the Distant Steering Code

--End--

Assumptions

- Call model and traffic rate calculations are based on the assumptions provided by Microsoft for a typical heavy user, as described at the following URL: <http://msexchangeteam.com/archive/2006/08/14/428677.aspx>
- A single Microsoft Unified Messaging server can have up to 3000 heavy users associated with it.
- All Microsoft Unified Messaging messages are received by telephone using an SIP Trunk, and not using Microsoft Exchange Client (which does not use an SIP Trunk).
- The use of Auto Attendant for Thru-Dial and other custom voice menu services makes the following assumptions:
 - Menu selection and call transfer time is 30 seconds, with a completed call duration of 180 seconds.
 - Busy Hour (BH) Auto Attendant usage is 0.35 calls per hour for each Microsoft Unified Messaging user.

- Auto Attendant operation requires the usage of two SIP trunks, which remain in use for the duration of the call.
- If Microsoft Unified Messaging system usage differs from the call model described for the purpose of SIP trunk table calculations, it is the responsibility of the customer to monitor the actual usage of the system and ensure that there are sufficient SIP trunks available for use.

Number of UM Users	Typical BH Call Duration (seconds)	Typical BH CCS	Erlangs (ccs/36)	Number of SIP Trunks (Erlang B P05 Grade of Service)	Number of SIP Trunks (Erlang B P01 Grade of Service)	Number of SIP Trunks (Erlang B, Non-blocking)
50	15000	150	4.17	8	10	24
100	30000	300	8.33	13	16	33
200	60000	600	16.67	22	26	49
500	150000	1500	42	48	55	89
1000	300000	3000	83	88	99	147
2000	600000	6000	167	170	187	254
3000	900000	9000	250	250	273	355

Configuration of Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

For the tasks and procedures associated with configuring Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging, please refer to the sections that follow:

- “Configure a new user mailbox for Microsoft Exchange Unified Messaging” (page 26)
- “Enable a new user mailbox for use with Microsoft Exchange Unified Messaging” (page 32)
- “Configure a new Dial Plan for Microsoft Exchange Unified Messaging” (page 35)
- “Configure the Operator Assistance feature” (page 41)
- “Install Geomant Message Waiting Indicator (MWI) application” (page 43)
- “Configure Geomant Message Waiting Indicator (MWI) application” (page 44)
- “Configure Microsoft Exchange Unified Messaging in CS 1000 Element Manager” (page 48)
- “Allowing calling party numbers to update while leaving message” (page 55)

- “Disable a user mailbox” (page 56)
- “End user experience scenarios” (page 64)


Note: Throughout this document, screen captures of third-party software are included for the purposes of illustration only. While the screen captures in this document are believed to be accurate and reliable in their depiction of third-party software used in conjunction with this feature, the information is subject to change without notice. Therefore, Nortel presents all third-party screen captures in this document without express or implied warranty with regard to their complete accuracy.

Configure a new user mailbox for Microsoft Exchange Unified Messaging


The following section details the required steps for the configuration of a Microsoft Exchange Unified Messaging mailbox.

Configuring a user mailbox for Microsoft Exchange Unified Messaging


Step	Action
1	From the Exchange Management Console, select Recipient Configuration and right click on Mailbox . Select New Mailbox... to start the New Mailbox Wizard.

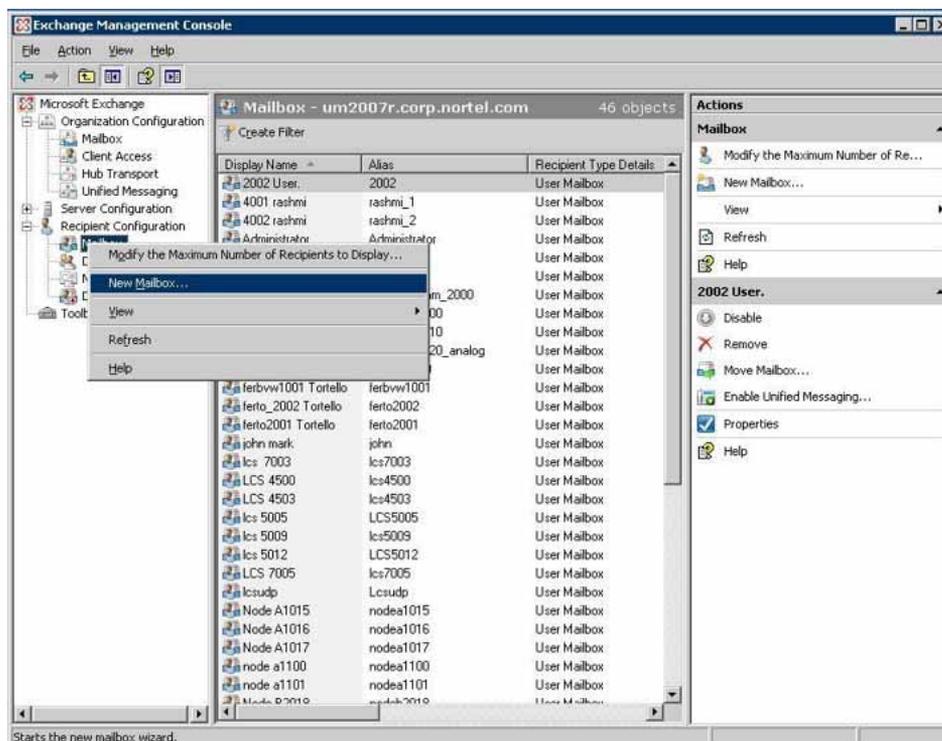


- 2 The opening screen for New Mailbox Wizard appears. Select **User Mailbox** and click **Next**, as shown in the following figure:

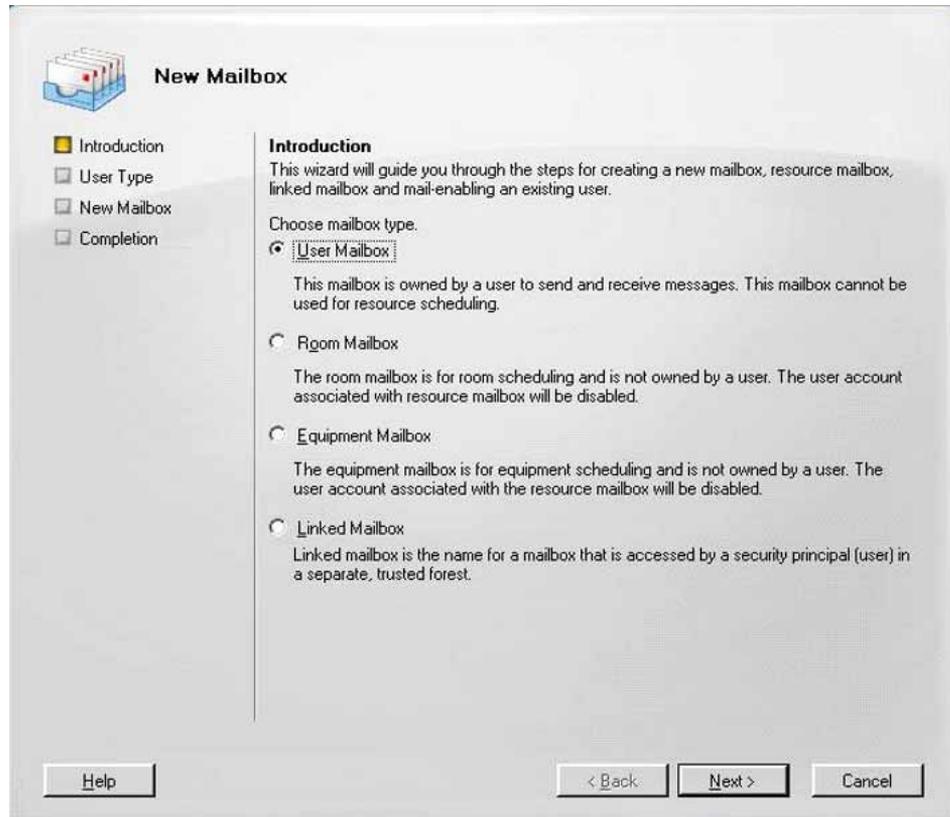


- 3 Select **New user** and click **Next**, as shown in the following figure:

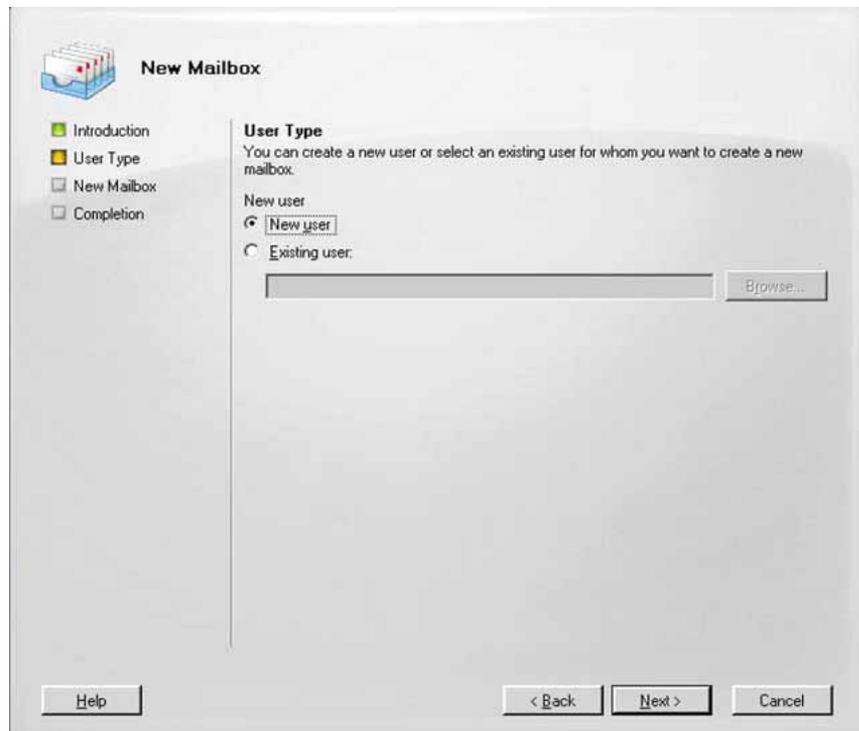


- 4 Enter account information for the mailbox user, as appropriate, as shown in the following figure:

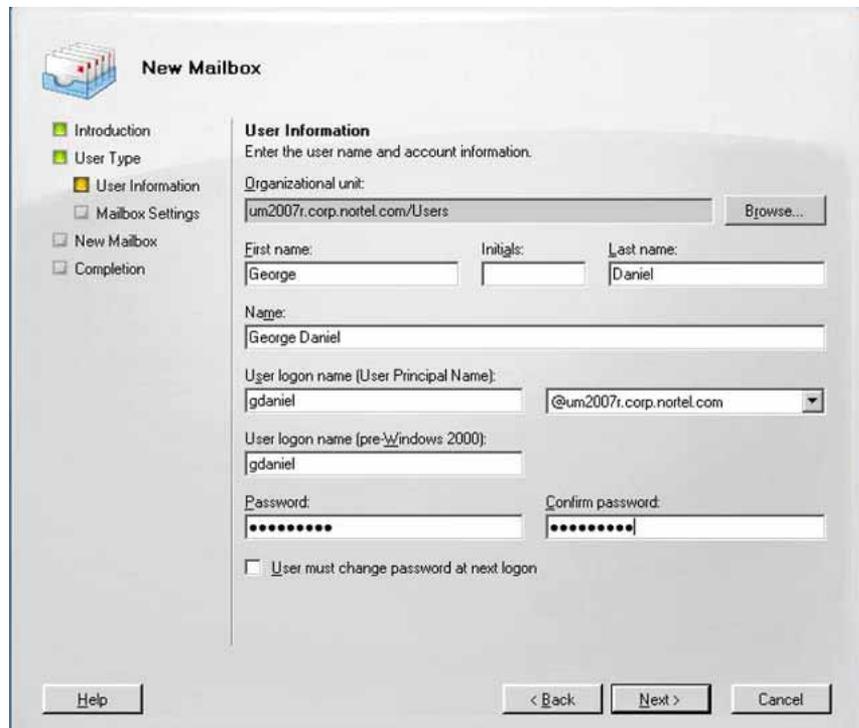


- 5 Click **Next** to continue
- 6 Enter the alias for the mailbox user, and select the mailbox location and policy settings, as shown in the following figure.

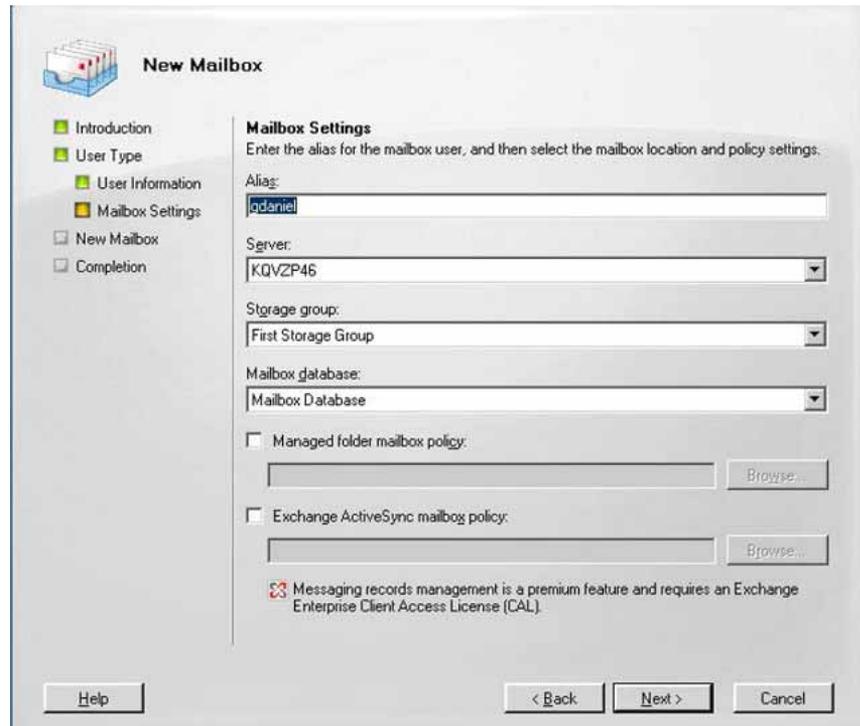

- 7 Click **Next** to continue.
- 8 The Configuration Summary for the current user mailbox is displayed, as shown in the following figure. Review for accuracy, and click **New** to create the user mailbox.

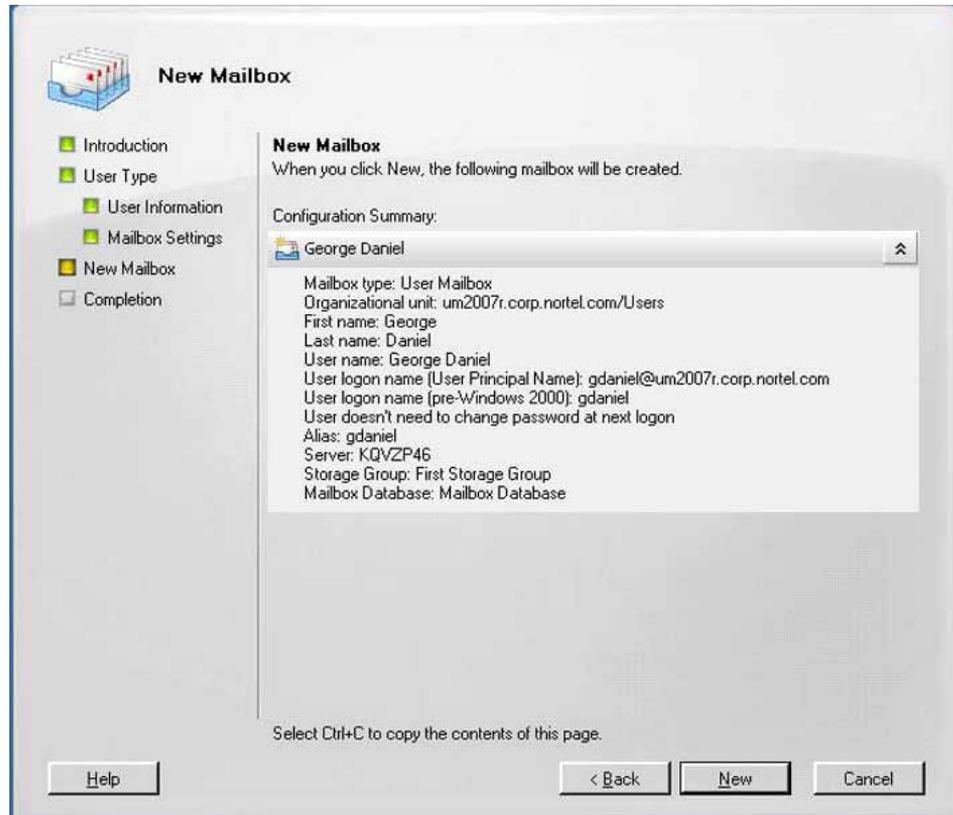

- 9 The completion screen of the New Mailbox Wizard appears. Click **Finish** to exit, as shown in the following figure:

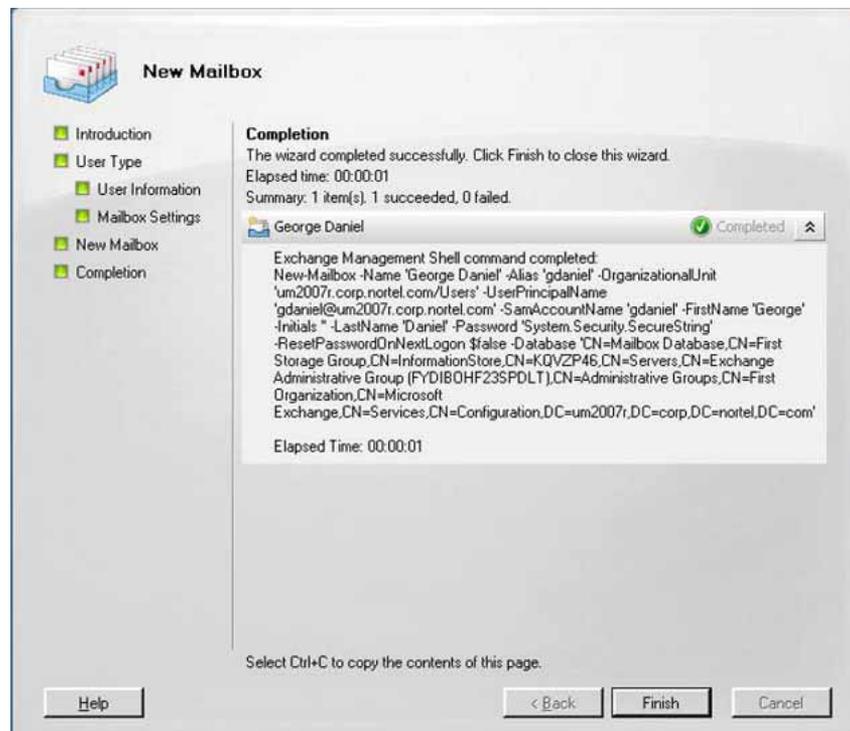


--End--

Enable a new user mailbox for use with Microsoft Exchange Unified Messaging

The following section details the required steps for the enabling an existing user mailbox for use with Microsoft Exchange Unified Messaging.

Enabling a user mailbox for use with Microsoft Exchange Unified Messaging

Step	Action
1	From the Exchange Management Console, select Recipient Configuration > Mailbox . Right click the specific user mailbox to be enabled and select Enable Unified Messaging , as shown in the following figure:

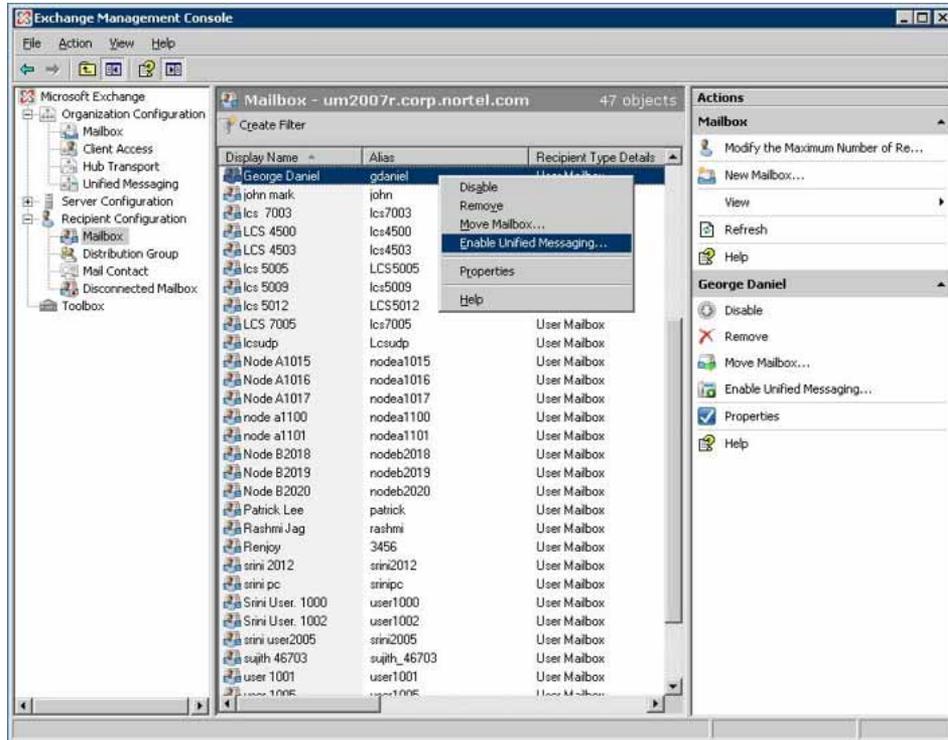

- 2 The Enable Unified Messaging Wizard appears, as shown in the following figure. Configure the Unified Messaging Mailbox Policy and PIN options, as appropriate for use on your network, and click **Enable**.



- 3 The completion screen of the Enable Unified Messaging Wizard appears. Click **Finish** to exit, as shown in the following figure:



--End--


Configure a new Dial Plan for Microsoft Exchange Unified Messaging

The following section details the required steps for the configuration of the Microsoft Exchange Unified Messaging Dial Plan.

Configure the Microsoft Exchange Unified Messaging Dial Plan


Step	Action
1	From the Exchange Management Console, select Organization Configuration > Unified Messaging > New UM Dial Plan . The New UM Dial Plan screen appears, as shown in the following figure:

Figure 4
New UM Dial Plan screen

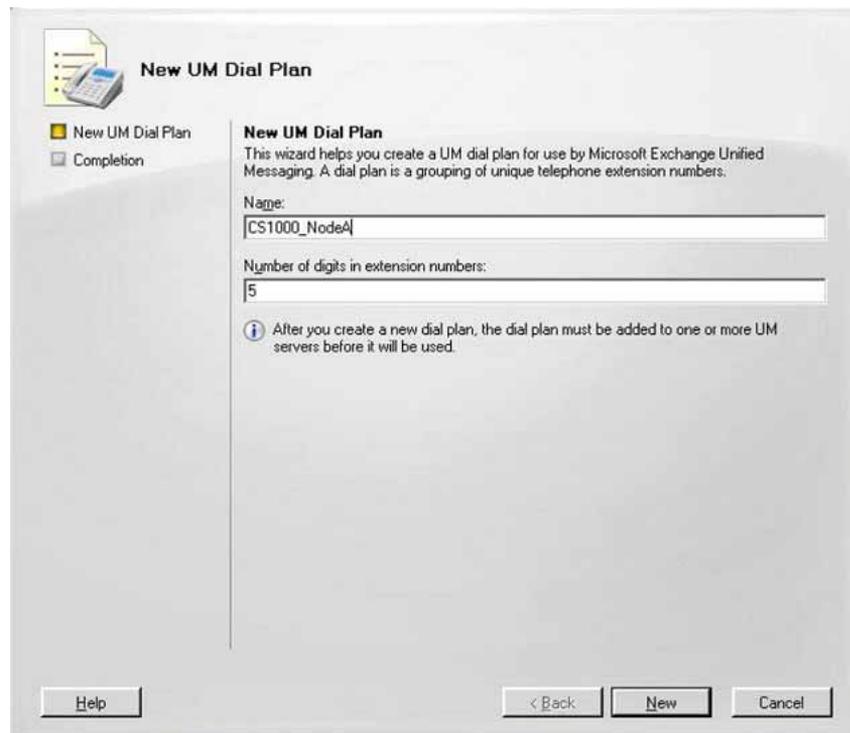


- 2 Enter the Dial Plan name and the number of digits used for the user extension expected. Click **New**. Right-click the newly-created Dial Plan and select **Properties**. The Dial Plan Properties screen appears.
- 3 Click the **General** tab. From the **VoIP security** drop-down list, select Unsecured, as shown in the following figure:

Figure 5
Dial Plan General Tab

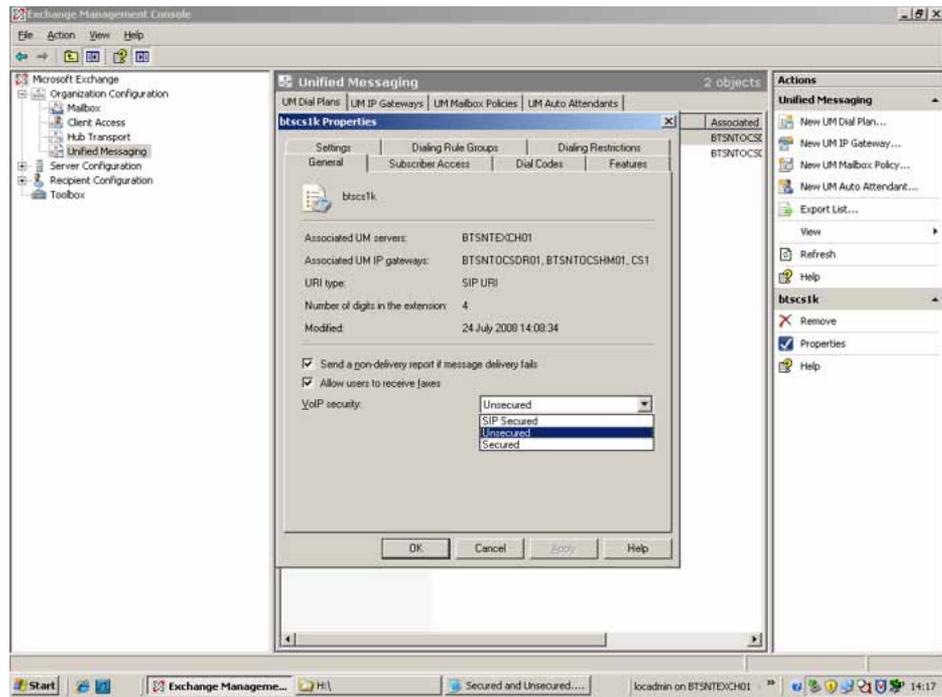


- 4 Click the **Subscriber Access** tab. Specify the Welcome Greeting, Informational announcement value, and the Subscriber Access and Call Answer number to be associated with the new Dial Plan. Click **Apply** and then **OK** to accept, as shown in the following figure:


Figure 6
Dial Plan Properties screen

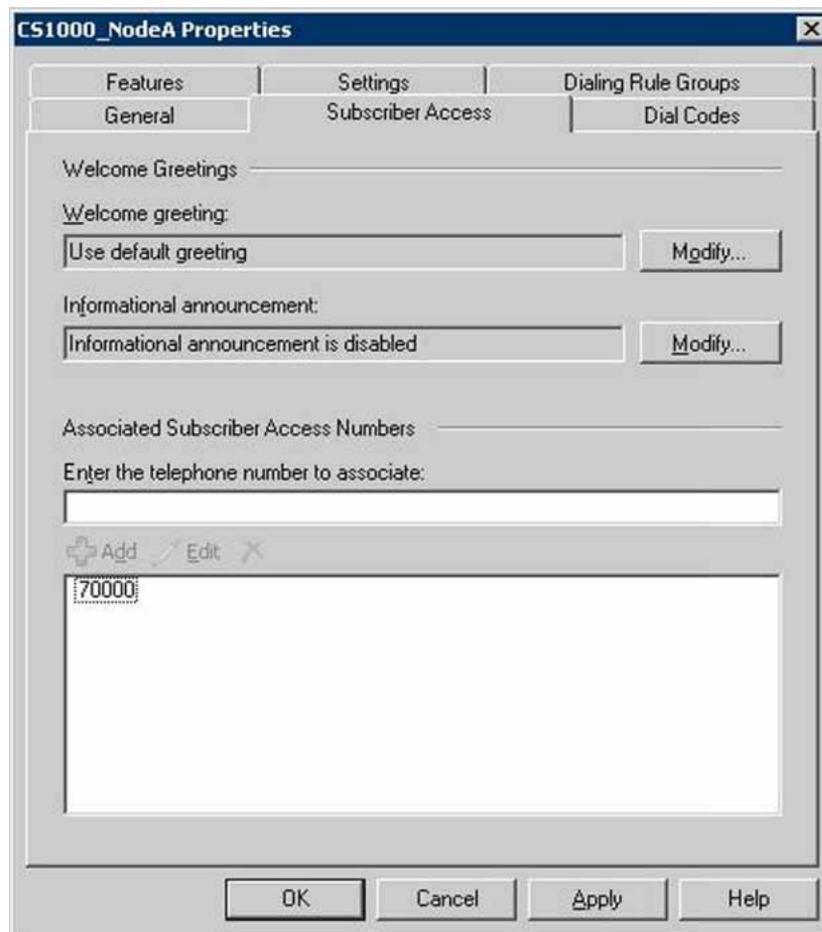

- 5 Select **Server Configuration > Unified Messaging**, and right-click the server name for which your newly-created Dial Plan is intended. Select **Properties**, as shown in the following figure:

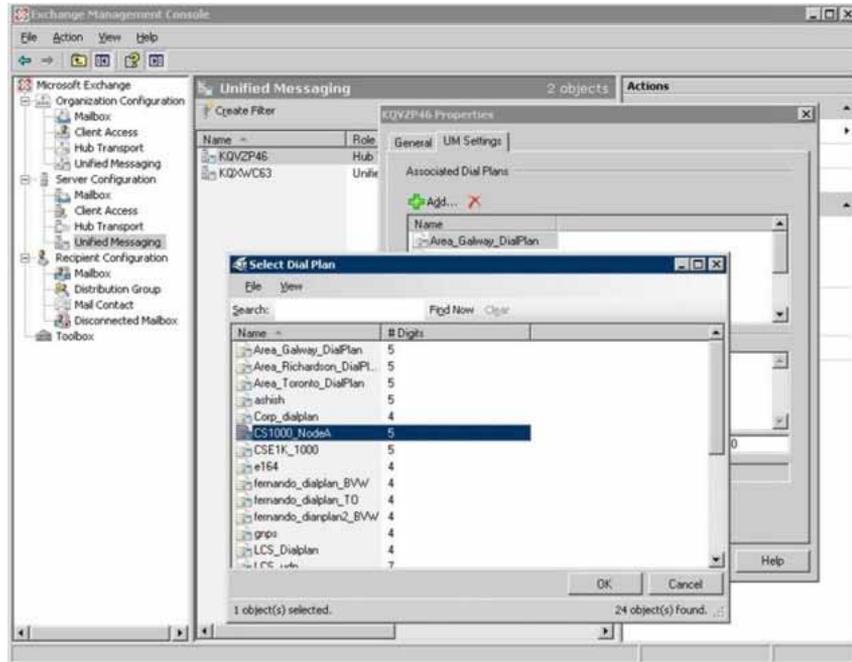


6 Add the configured Dial Plan under the **UM Settings** tab, as shown in the following figure:

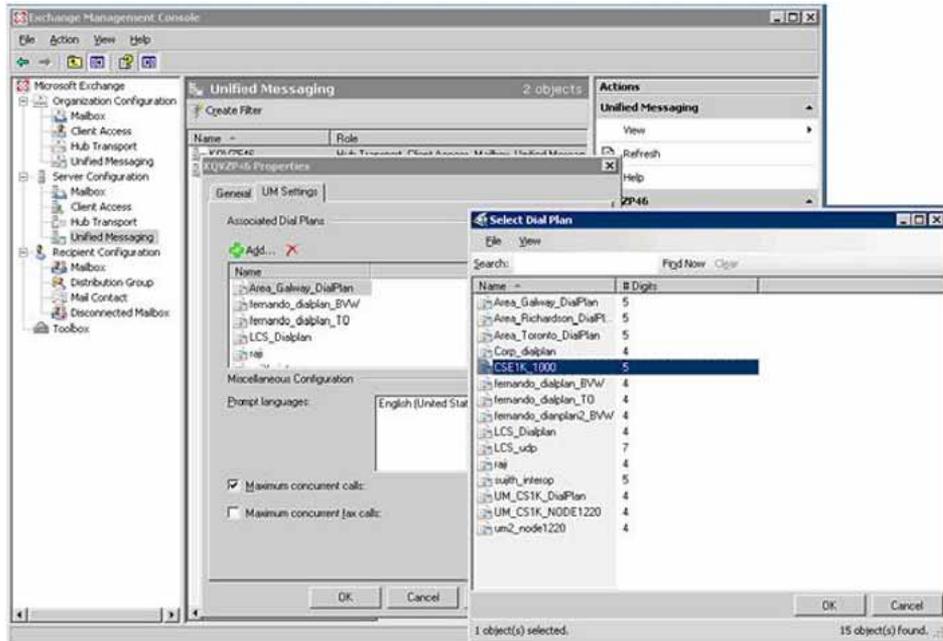


7 Click **OK**.

- 8 Specify the SIP Gateway name and IP address (Signaling Server node address) for the current Dial plan, as shown in the following figure:

Figure 7
Configuration screen for new UM IP Gateway

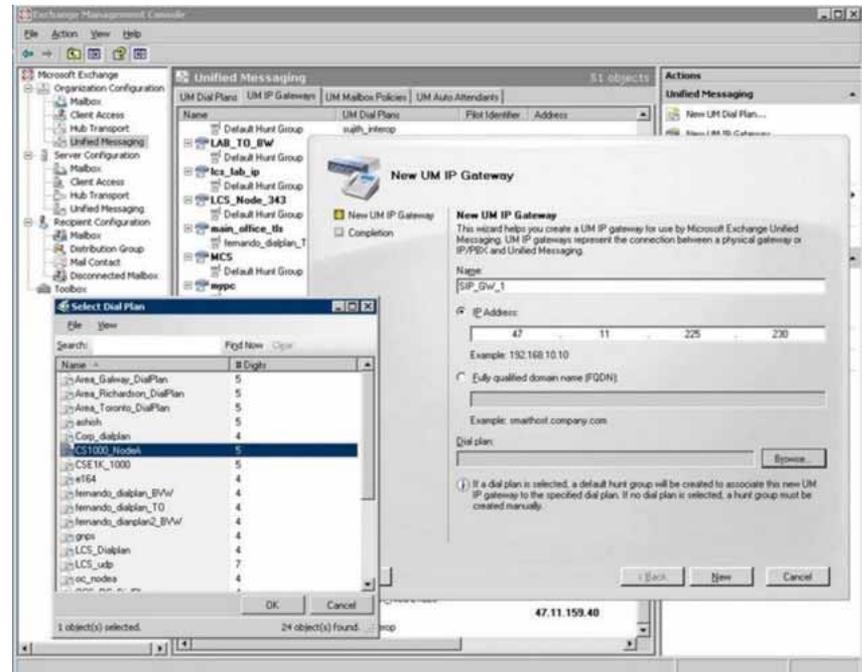

- 9 Specify Auto Attendant name and number for the new UM Dial plan. The Auto Attendant Configuration number is provided for the UM Dial Plan configured, as shown in the following figure:

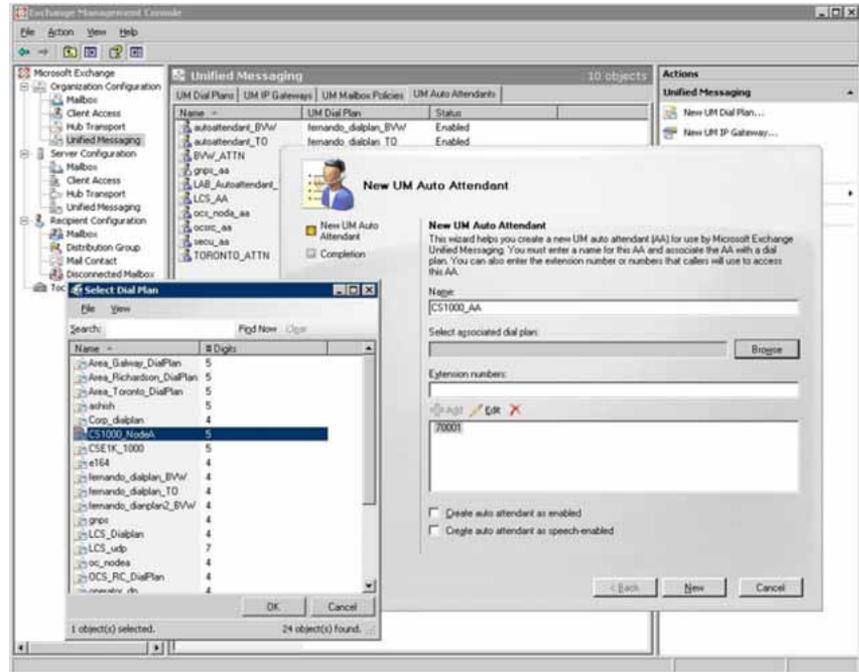

--End--


Configure the Operator Assistance feature

To configure the Operator Assistance feature to be used with a configured UM Dial Plan, perform the tasks in the following procedure:


Configure the Operator Assistance feature

Step	Action
1	After providing the operator assistance number in Dial Plan and Mailbox users, open the Exchange Management Shell.
2	Right-click on the dial plan, and select Properties from the list of the available options. Optionally, you can click on the properties menu in the action pane as shown in the following figure:

42 Configuration of Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

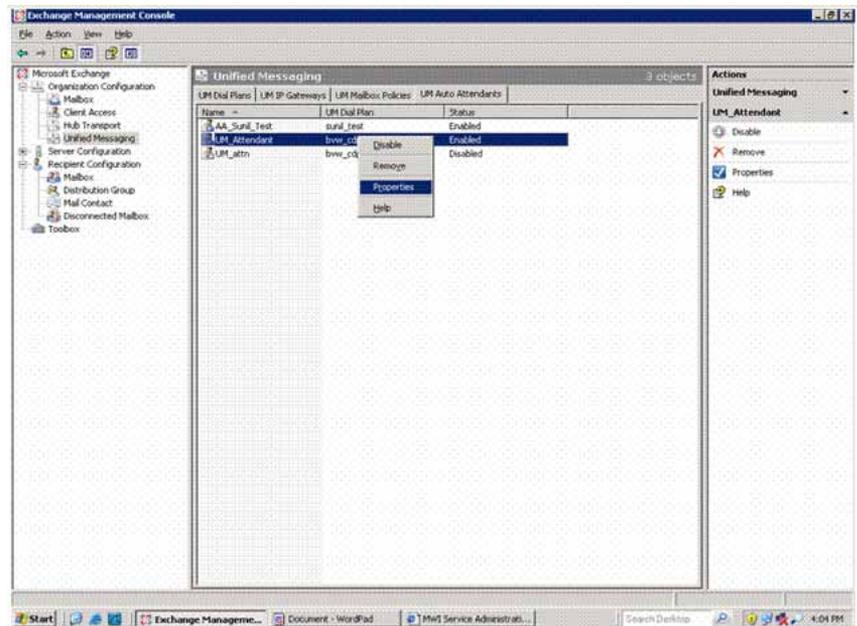


The Attendant properties window appears:

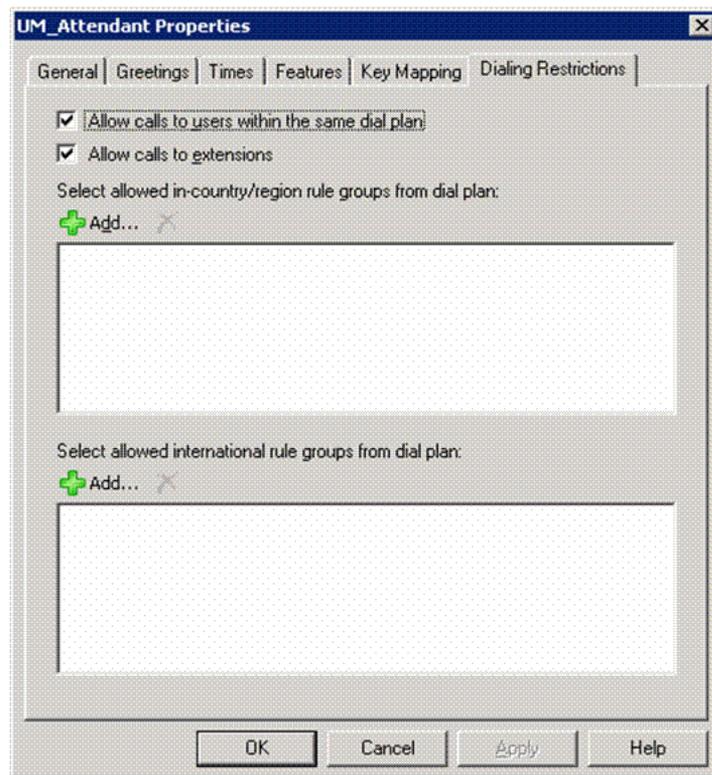

Select **Allow calls to extensions** under **Dialing Restrictions** and click **OK**.

- 3 Add an attendant number on the properties window, under the **General** tab, enter the DN number for the auto attendant, click **Add** and then **OK** to add:

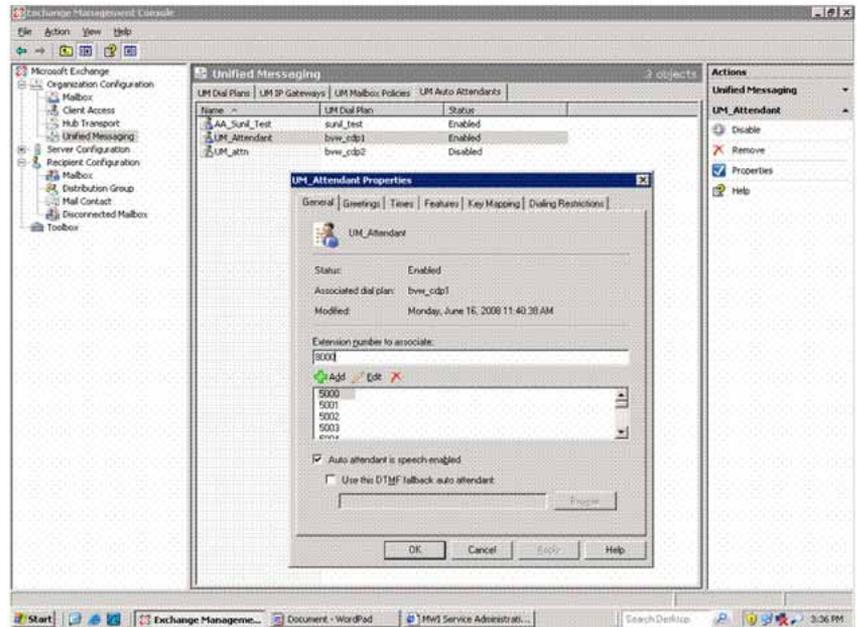

After dialling the number, the prompts for Auto Attendant service are heard by the user.

--End--

Install Geomant Message Waiting Indicator (MWI) application

Note: The MWI 2007 software is a third-party software developed by Geomant. Information on Geomant and MWI 2007 is provided in this documentation for ease of reference only. Nortel does not sell, warrant or provide operational support for Geomant's MWI 2007 software product, nor warrant the accuracy of MWI 2007 descriptions contained in this document. Customers using this document are strongly recommended to obtain the most recent MWI 2007 documentation from Geomant.

The Message Waiting Indicator (MWI) functionality of Microsoft Exchange Unified Messaging is not provided through Exchange Server 2007. Geomant MWI, a third-party vendor application, is an add-on application for use with Exchange 2007 Server, and is used to provide all notifications of new incoming messages to user telephones associated with a voice mail account on the Exchange Server 2007.

Each implemented instance of Geomant MWI is capable of providing message waiting indications for 2500 users, and has a 10 minute built-in timer for user notification time-out purposes.

Detailed procedures to be used in the installation of the Geomant MWI application are available for download at <http://mwi2007.com> > downloads > documentation package.

Note: Before attempting to install Geomant MWI, be aware of the installation prerequisites, as described by the following:

- ***Exchange Auto Discovery Feature must be configured on the domain. Please refer to the Setting up E12 Autodiscover () document present in the downloaded documentation package.***
- ***As part of Exchange Auto Discovery configuration, a Certificate Authority Server must be configured in the domain. For installation instructions, please refer to <http://www.tacteam.net/isaserverorg/vpnkitbeta2/installenterprise.htm>.***
- ***On the Active Directory used to start the MWI service, a user must be configured with permissions similar to that of the Administrator.***

Installation of Multiple MWI applications

It is possible to install and configure multiple instances of the MWI application on the same network, to accommodate a larger number of users. Users configured on the Exchange Server are distributed between the available instances of the MWI application to provide effective MWI notification.

Note: Due to a limitation of the Geomant MWI application, a user cannot be configured to receive MWI notifications from more than one MWI application. A document describing the steps for a manual installation of the MWI application software can be found in the documentation package downloaded at <http://mwi2007.com> > downloads > documentation package.

Configure Geomant Message Waiting Indicator (MWI) application

Following the successful installation of the MWI application, you are able to configure the MWI application by means of the Geomant MWI Service Web page.

The Geomant MWI Service Web page can be opened on the local server using the link <https://localhost/MWISrvAdmin/>.

Note: The Geomant MWI Service Web page can also be accessed from a different (non-local) system by replacing **localhost** with the IP Address of the server on which the MWI application has been installed.

The Geomant MWI Service Web page appears as shown in the following figure:

Figure 8
Geomant MWI Service Web page

The screenshot shows the Geomant MWI Service Web page. On the left is a navigation tree with the following items: Administration (MWI Service, MWI Users), Configuration (Status Engine, Active Directory, Exchange Server, SIP Gateway, SMS Gateway, Mapping Rules), Information (Real-time Report, Historical Report), and Troubleshooting (PBX Access, GSM Access, Alarms Raised, Event History). On the right is the 'PRODUCT INFORMATION' section, which contains a table with the following data:

Product Name	MWI SERVICE FOR EXCHANGE 2007
Current Version	1.8.5.B1
Company Name	GEOMANT ENTERPRISE SOLUTION
Web Page	GEOMANT ENTERPRISE SOLUTION
Email Address	SOFTWARE DEVELOPMENT UNIT
Current State	RUNNING
State Since	4/16/2007 8:33:57 PM
Host Memory Usage	0 MB
Host CPU Usage	0
Host Name	KQVZP46

Below the table is a 'Pause Service' button.

To configure MWI licenses for each SIP gateway through which MWI notifications will be sent, click on the **SIP Gateway** option of the Geomant MWI Service Web page (as shown in the preceding figure). Enter the appropriate values for each SIP gateway to be used. The SIP Gateway configuration screen appears as shown by the following:

Figure 9
SIP Gateway configuration screen

Display Name	Transport	Gateway Port	MWI Ports	Subscription	Local Port
AREA_TORONTO_IP_GW	TCP	5060	0	<input type="checkbox"/>	5060
AREA_RICHARDSON_IP_GW	TCP	5060	0	<input type="checkbox"/>	5060
AREA_GALWAY_IP_GW	TCP	5060	0	<input type="checkbox"/>	5060

The installed MWI service can be enabled and configured on a per-user basis with the SIP gateway to which the associated MWI notifications are to be sent. To configure MWI for each user, click the **MWI Users** option on the Geomant MWI Service Web page, which causes the Unified Messaging User Properties screen to display, as shown by the following:

Figure 10
Unified Messaging User Properties screen

UNIFIED MESSAGING USER PROPERTIES

Distinguished Name	CN=USER 2005,CN=USERS,DC=UM2007R,DC=CORP,DC=NORTEL,DC=COM
Display Name	USER 2005
Logon Name	USER2005
Email Address	USER2005@UM2007R.CORP.NORTEL.COM
Email WebDAV Access	HTTPS://KQVZP46.UM2007R.CORP.NORTEL.COM/EXCHANGE/USER2005
Email WebService Access	HTTPS://KQVZP46.UM2007R.CORP.NORTEL.COM/ews/exchange.asmx
Extension	2005
GSM Number	[UNSPECIFIED]
Gateway Port	0
Messages Timestamp	4/17/2007 8:25:52 PM
Voice Messages	2
Last Known Voicemail	4/16/2007 8:35:33 PM
Lamp Status	ON
Lamp Status Timestamp	4/17/2007 8:25:15 PM
Last Event Timestamp	4/17/2007 8:10:02 PM
Subscription Id	A2C9092E-D111-4569-8ECD-AE0402C5ED27
Event watermark	AQAAAEMLGE+EGNSJSFOQSCURWA/MMGAAAAAAAAAAE=
SIP Gateway	node_1220
MWI Service Enabled	<input checked="" type="checkbox"/>
SMS on Voicemails	<input type="checkbox"/>
<div style="background-color: #f4a460; padding: 5px; display: inline-block; border: 1px solid black;">Update Settings</div>	

Additional notes on configuring CS 1000 for MWI

- The SIP DCH should be configured with MWI for the RCAP value (LD 17).
- User telephones should be configured with MWA (Message Waiting Allowed) Class of Service to receive MWI Lamp notification.
- The Node configuration page (in Element Manager) needs to be configured with information for both the **MWI Application DN** and the **MWI Dialing Plan**. The configured MWI DN and MWI Dialing plan should be administered as a valid DN on the Call Server to ensure routing back to the SIP gateway; this is required if the ISDN Facility Response is to be sent back to the SIP gateway. For more information on configuring the MWI DN and MWI Dial Plan, see [“Configure information for the MWI Application DN” \(page 54\)](#) and [“Configure the Microsoft Exchange Unified Messaging Dial Plan” \(page 35\)](#).

SRTP configuration using Element Manager

Use the following procedure to configure SRTP negotiation between CS 1000 and Exchange 2007 in Element Manager

Procedure 3 Enabling SRTP/TLS for Exchange 2007

Step	Action
1	Navigate to Element Manager .
2	Click Nodes: Server, Media Cards .
3	Click the node you want to view.
4	Click the Microsoft Unified Messaging tab.
5	Select the Enable Secure Media check box.
6	Click Save and Transfer .

--End--

Configure Microsoft Exchange Unified Messaging in CS 1000 Element Manager

The following sections detail the use of Element Manager in configuring Microsoft Exchange Unified Messaging services on the CS 1000.


The **Edit** page of the Element Manager **Nodes: Servers, Media Cards** configuration page has a new configuration tab – **Microsoft Unified Messaging**. The Microsoft Unified Messaging tab is used to add Microsoft

Exchange Unified Messaging numbers that have been defined for use with Subscriber Access and Auto Attendant and also to configure MWI DNs and Dialing Plans. Up to five Subscriber numbers and five Auto Attendant numbers can be configured. These numbers can be added, modified or deleted using the functions of the Microsoft Unified Messaging tab.

Configure a Node in Element Manager for use with Microsoft Exchange Unified Messaging

Access to all parameters for configuration of a node for interaction with Microsoft Exchange Unified Messaging are found under IP Telephony Node section of Edit page for **Nodes: Servers, Media Cards**, as shown in the following figure:

Figure 11
Configuring a Node for use with Microsoft Exchange Unified Messaging: IP Telephony Node

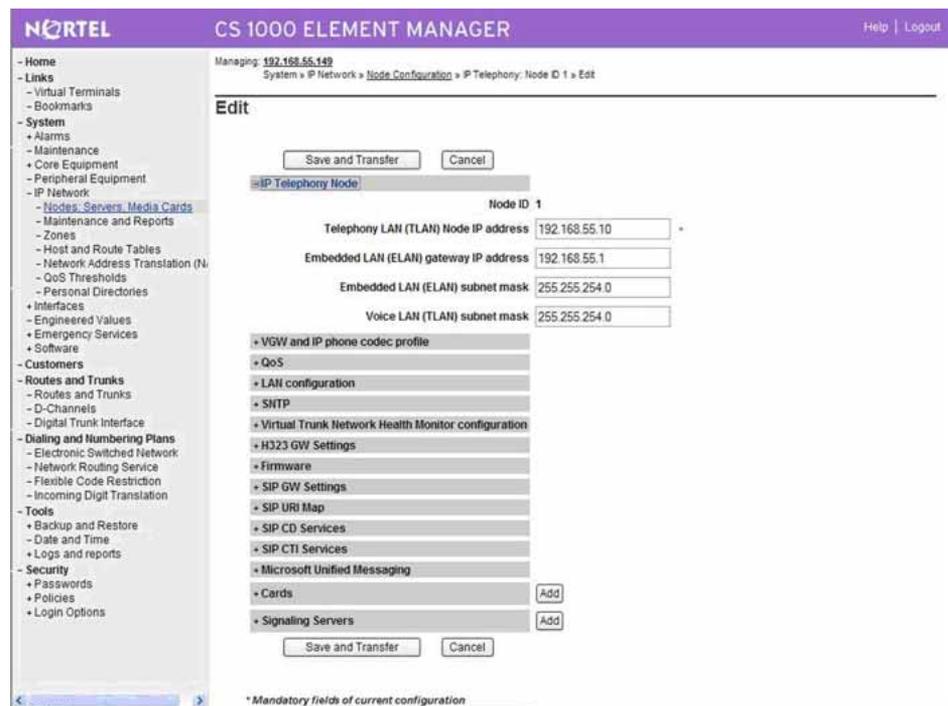

A Node can be imported and its parameters edited to interact specifically with Microsoft Exchange Unified Messaging.

Import and edit a Node for Microsoft Exchange Unified Messaging interaction

Step	Action
1	Log on to Element Manager with a valid User Account.


- 2 Navigate to the **Nodes: Servers, Media Cards** page.
- 3 Launch the **Import Node Files** page and import the node to be configured for use with Microsoft Exchange Unified Messaging and edit the imported node by navigating to the **Edit** page of that node.
- 4 Configure the Unified Messaging parameters for the node by expanding the **Microsoft Unified Messaging** section and saving the changes. For more information, see [“Configure Subscriber Access, Auto Attendant, and MWI DN information”](#) (page 50).

--End--

Configure Subscriber Access, Auto Attendant, and MWI DN information

Opening the **Microsoft Unified Messaging** tab of the Edit page for **Nodes: Servers, Media Cards** allows the Subscriber Access, Auto Attendant, and MWI DN information to be configured. These configuration parameters, once expanded, appear as shown in the following image:

Figure 12
Subscriber Access, Auto Attendant, MWI DN and Voice mail softkeys
configuration parameters

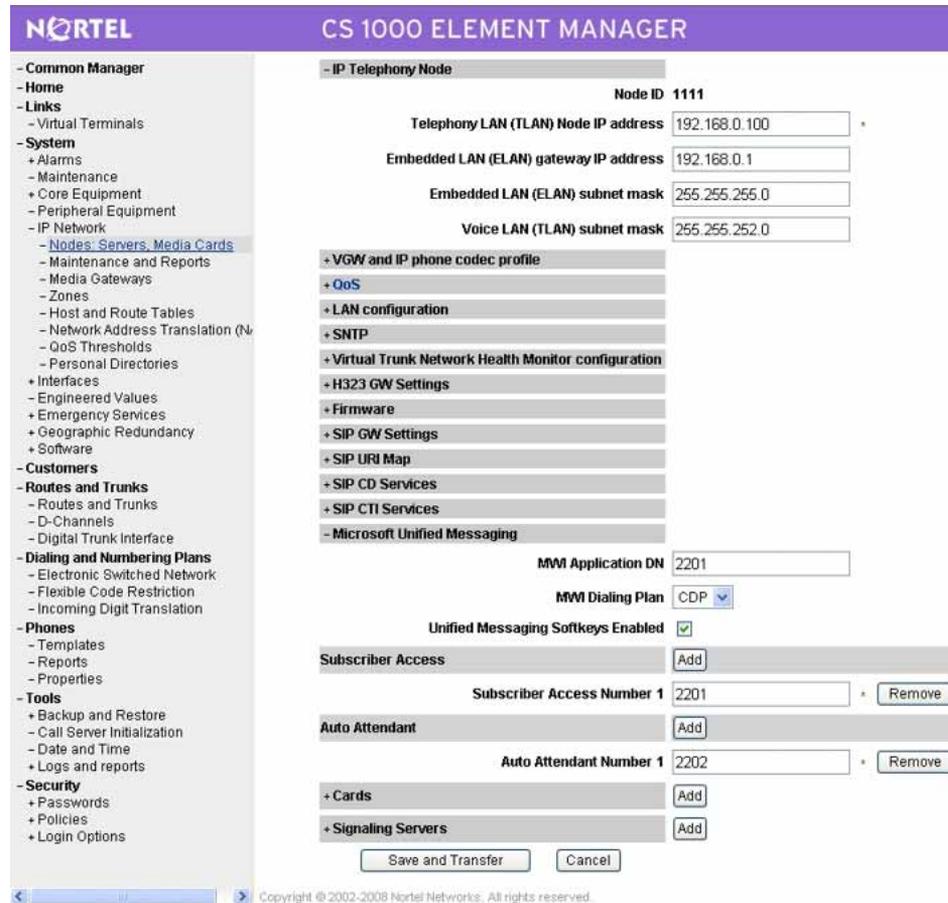

The acceptable data entries for the Subscriber Access, Auto Attendant, and MWI DN information fields are as follows:

- Subscriber Access Number: This is a numeric field for up to 32 digits.
- Auto Attendant Number: This is a numeric field for up to 32 digits.
- MWI Application DN: This is a numeric field for up to 32 digits.

Note: User is allowed to enter only up to 100 entries for auto attendant or subscriber access numbers. An error will appear in the UI once the maximum limit for the auto attendant or subscriber access number is reached.

Adding, modifying, or deleting Subscriber Access Numbers for a Microsoft Exchange Unified Messaging Node

The following procedures detail the steps to add, modify, or delete the Subscriber Access Number information for a Node interacting with Microsoft Exchange Unified Messaging.

Add new Subscriber Access Number information

Step	Action
1	Log on to Element Manager with a valid User Account.
2	Navigate to the Edit page of the Nodes: Servers, Media Cards configuration page.
3	Expand the Microsoft Unified Messaging .
4	In the space provided, add information for up to five Subscriber Access Numbers by clicking Add and saving the configuration. The Add button becomes inactive after the fifth entry.

--End--

Modify Subscriber Access Number information

Step	Action
1	Log on to Element Manager with a valid User Account.
2	Navigate to the Edit page of the Nodes: Servers, Media Cards configuration page.
3	Expand the Microsoft Unified Messaging .
4	In the space provided, modify the configuration information as required for up to five Subscriber Access Numbers and save the configuration.

--End--

Delete Subscriber Access Numbers

Step	Action
1	Log on to Element Manager with a valid User Account.
2	Navigate to the Edit page of the Nodes: Servers, Media Cards configuration page.
3	Expand the Microsoft Unified Messaging .

- 4 Delete the required Subscriber Access Number(s) by clicking the **Remove** button and saving the configuration.

--End--

Adding, modifying, or deleting Auto Attendant numbers for a Microsoft Exchange Unified Messaging Node

The following procedures detail the steps to add, modify, or delete the Auto Attendant Number information for a Node interacting with Microsoft Exchange Unified Messaging.

Add new Auto Attendant number information

Step	Action
1	Log on to Element Manager with a valid User Account.
2	Navigate to the Edit page of the Nodes: Servers, Media Cards configuration page.
3	Expand Microsoft Unified Messaging .
4	In the space provided, add information for up to five Auto Attendant Numbers by clicking Add and save the configuration. The Add button becomes inactive after the fifth entry.

--End--

Modify Auto Attendant Number information

Step	Action
1	Log on to Element Manager with a valid User Account.
2	Navigate to the Edit page of the Nodes: Servers, Media Cards configuration page.
3	Expand Microsoft Unified Messaging .
4	In the space provided, modify the configuration information as required for up to five Auto Attendant Numbers and save the configuration.

--End--

Delete Auto Attendant Numbers

Step	Action
1	Log on to Element Manager with a valid User Account.

- 2 Navigate to the **Edit** page of the **Nodes: Servers, Media Cards** configuration page.
- 3 Expand **Microsoft Unified Messaging**.
- 4 Delete the required Auto Attendant Number(s) by clicking the **Remove** button and saving the configuration.

--End--

Configure information for the MWI Application DN

The following procedure details the steps to configure the MWI Application DN information for a Node interacting with Microsoft Exchange Unified Messaging.

Configure MWI Application DN information

Step	Action
1	Log on to Element Manager with a valid User Account.
2	Navigate to the Edit page of the Nodes: Servers, Media Cards configuration page.
3	Expand Microsoft Unified Messaging .
4	Configure the proxy DN for the MWI application and save the configuration.

--End--

Select MWI Dial Plan type

The following procedure details the steps for selecting the desired MWI Dial Plan type for a Node interacting with Microsoft Exchange Unified Messaging.

Note: Currently, the available dial plan types are restricted to CDP and UDP only.

Select the desired MWI Dial Plan type

Step	Action
1	Log on to Element Manager with a valid User Account.
2	Navigate to the Edit page of the Nodes: Servers, Media Cards configuration page.
3	Expand the Microsoft Unified Messaging .

- 4 Select either **CDP** or **UDP** for the MWI Dial Plan type and save the configuration.

--End--

Voice mail softkeys configuration

The use of Exchange UM softkeys on IP phones (11XX, 12XX, 2007, 2004, 2002) is enabled through Element Manager by selecting the Unified Messaging Softkeys Enabled checkbox under Microsoft Unified Messaging. In addition, the Inbox key of each of the phones can be configured to access the Subscriber Access DN and MWK directly.

The key mapping for the softkeys is static and consists of the following options:

- Play
- Delete
- Call
- Stop
- Unread
- Reply
- Compose
- Forward
- Info

Allowing calling party numbers to update while leaving message

If a call is modified after reaching the Exchange 2007 UM Server, the calling party number is modified as well. To ensure that voice messages left will have the correct calling party information, calling party number information must be updated to the Exchange 2007 UM Server by generating a SIP INFO message with new content type header **text/source-party**. This SIP INFO message is then delivered to the Exchange 2007 UM Server, allowing any voice messages left there to reflect the correct calling party caller information.

To enable this functionality of the SIP INFO message, the following changes must be made on the Exchange 2007 UM Server:

- In the **GlobCfg.XML** file, set the **SourcePartyInfoEnabled** flag to **true**.
- Both the **Microsoft Exchange Speech Engine** and the **Microsoft Unified Messaging Services** must be restarted.


Note: The CS 1000 FAX user set must be configured with MPTD class of service in LD 11.

Disable a user mailbox


The following section details the required steps for removing all Exchange mailbox attributes from a user object in Active Directory without deleting the user object in Active Directory.

Disabling a user mailbox

Step	Action
1	In the Exchange Management Console, select Recipient Configuration > Mailbox . In the action pane, click Disable to disable the mailbox. Optionally, you can right-click the selected mailbox, and choose Disable on the pop up menu as shown in the following figure:

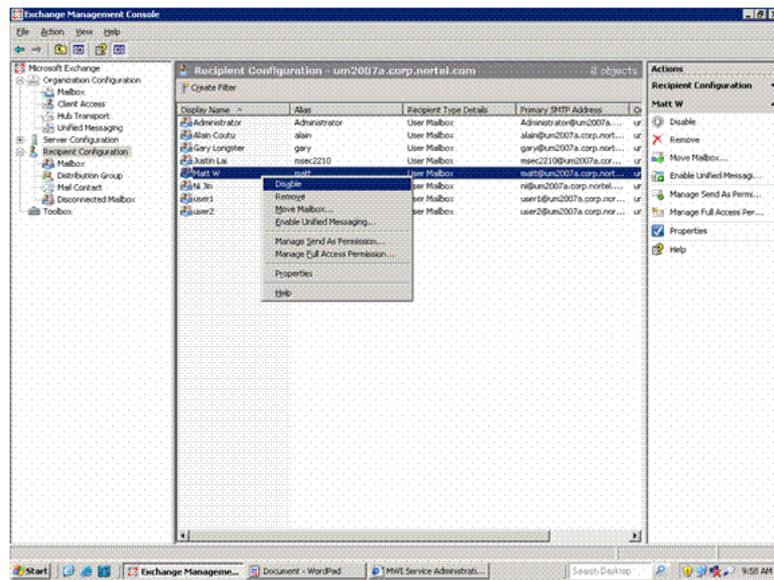

2	Click Yes to confirm the disabling of the user mailbox, as shown in the following figure:
---	--

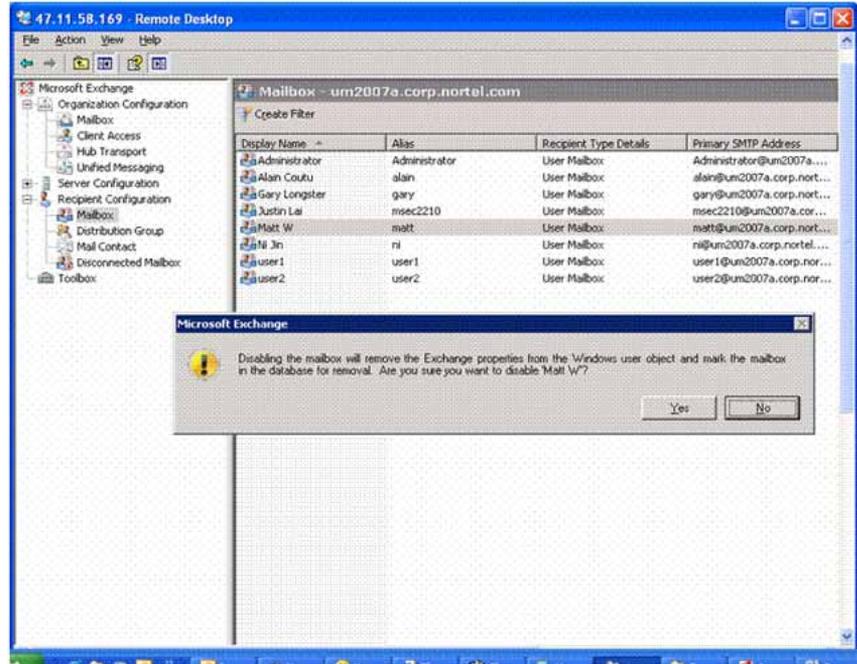

--End--

Enable the user mailbox after disabling



The user mailbox can be enabled after disabling it. The following section details the required steps to enable a disabled user mailbox.

Procedure 4 Enabling the user mailbox after disabling

- | Step | Action |
|------|--|
| 1 | Add a new mailbox using the New Mailbox Wizard , but select Existing users instead of New users when prompted for User Type .

For more information about using the New Mailbox Wizard, see “Configure a new user mailbox for Microsoft Exchange Unified Messaging” (page 26). |
| 2 | Click Add . A window appears displaying all existing users in the active directory. |
| 3 | Select the disabled user mailbox as appropriate and click OK , as shown by the following: |

58 Configuration of Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

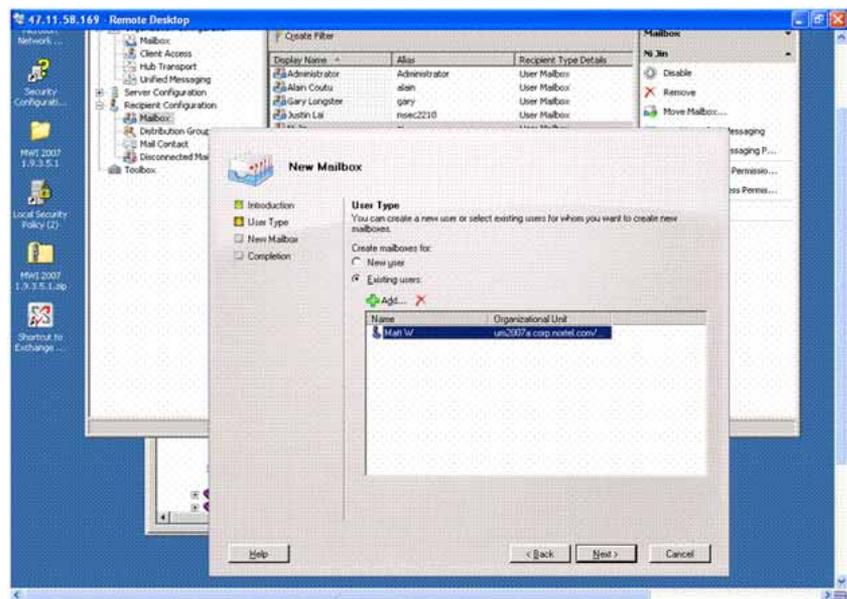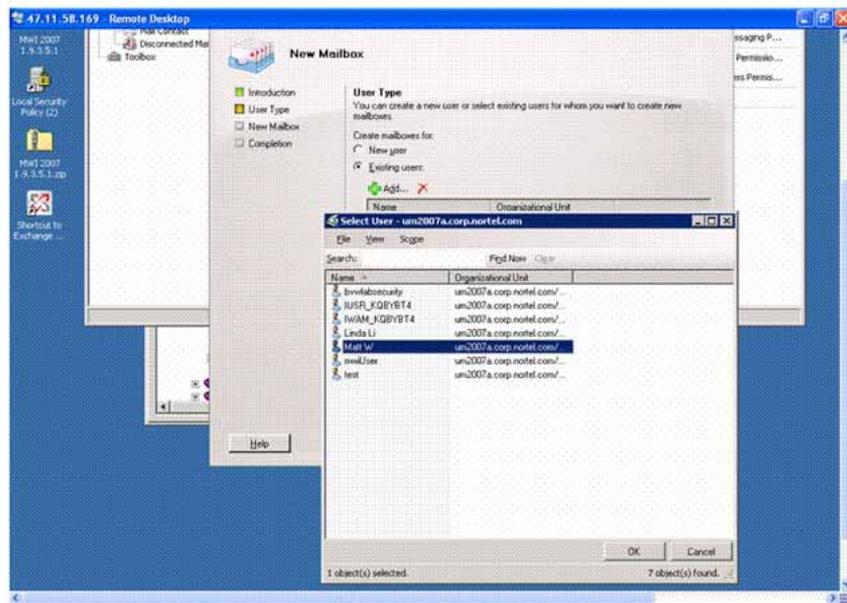

- 4 Click **Next** and follow the steps to add a new mailbox, without changing current user account information.


--End--

Remove a user mailbox

This procedure details the required steps for removing a user mailbox.

Procedure 5 Removing a user mailbox

- | Step | Action |
|------|---|
| 1 | In the Exchange Management Console, select Recipient Configuration > Mailbox . |
| 2 | In the action pane, click Remove to remove the mailbox, as shown by the following: |

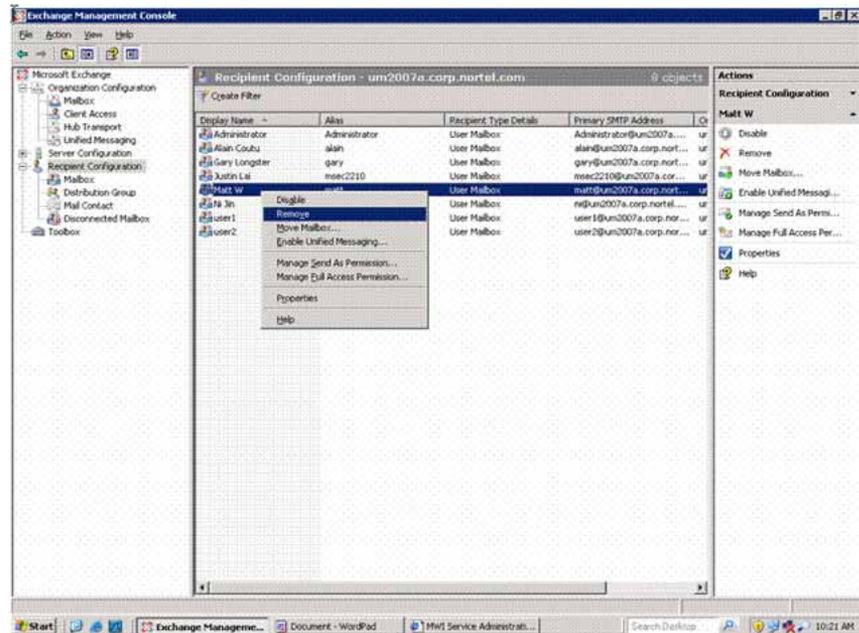

Optionally, you can right-click the selected user mailbox, and choose **Remove** from the list of menu options.

--End--

Note: When you remove a user mailbox, all associated user Exchange data is marked for deletion and the associated user account entry in the Active Directory is deleted.

Remove a dial plan


This procedure details the required steps for removing a UM dial plan.

Note: Before you can remove a UM dial plan, you must remove any existing associations with other UM components such as UM mailbox policies, Unified Messaging servers, or UM IP gateways.

Procedure 6
Removing a dial plan


Step Action

- 1 In the Exchange Management Console, select **Organization Configuration > Unified Messaging**.
- 2 Select the appropriate UM dial plan and click **Remove** on the action pane to remove the dial plan, as shown by the following:

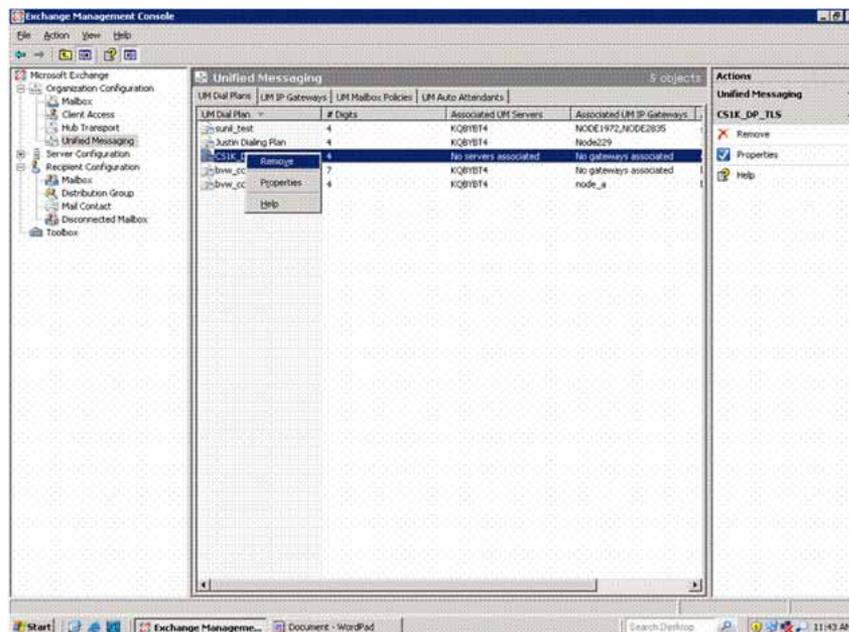

Optionally, you can right-click the UM dial plan and select **Remove** from the list of available options.

- 3 Click **Yes** to confirm the removal of the selected UM dial plan.

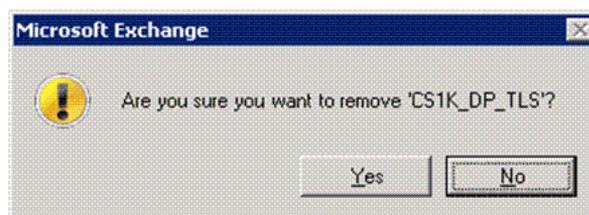

--End--


Disable Operator Assistance feature

This module details the required steps for disabling Operator Assistance feature functionality, provided by the UM Auto Attendant.

The UM Auto Attendant can be disabled: if an auto attendant is disabled, no incoming calls will be answered.

Procedure 7 Disabling the UM Auto Attendant

- | Step | Action |
|------|--|
| 1 | In the Exchange Management Console, select Organization Configuration > Unified Messaging . |
| 2 | Select the appropriate UM Auto Attendant and click Disable on the action pane to remove the dial plan, as shown by the following: |

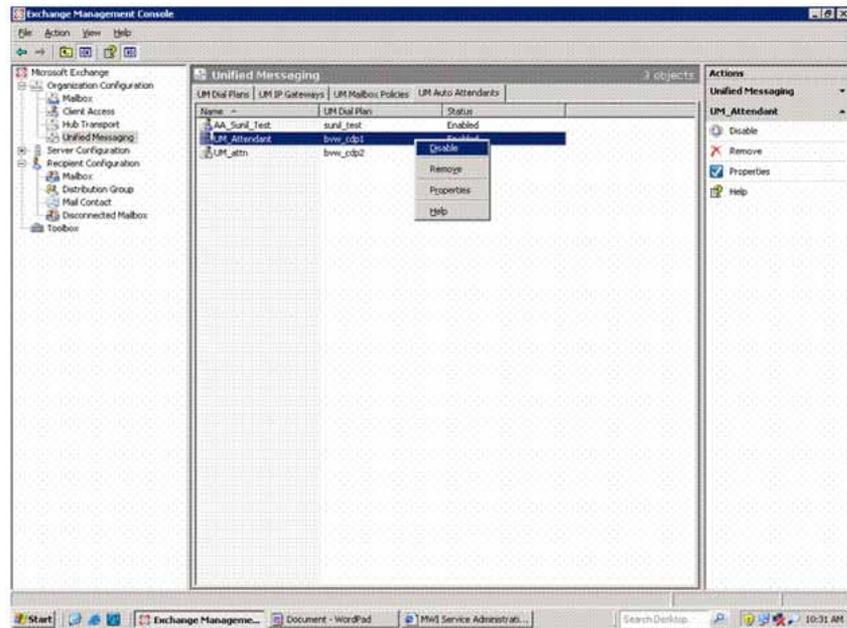

Optionally, you can right-click the UM Auto Attendant and select **Disable** from the list of available options.


--End--

Remove Operator Assistance feature

This module details the required steps to follow for removing a configured UM Auto Attendant.

**Procedure 8
Removing the UM Auto Attendant**

- | Step | Action |
|------|---|
| 1 | In the Exchange Management Console, select Organization Configuration > Unified Messaging . |
| 2 | Select the appropriate UM Auto Attendant and click Remove on the action pane to remove the dial plan, as shown by the following: |

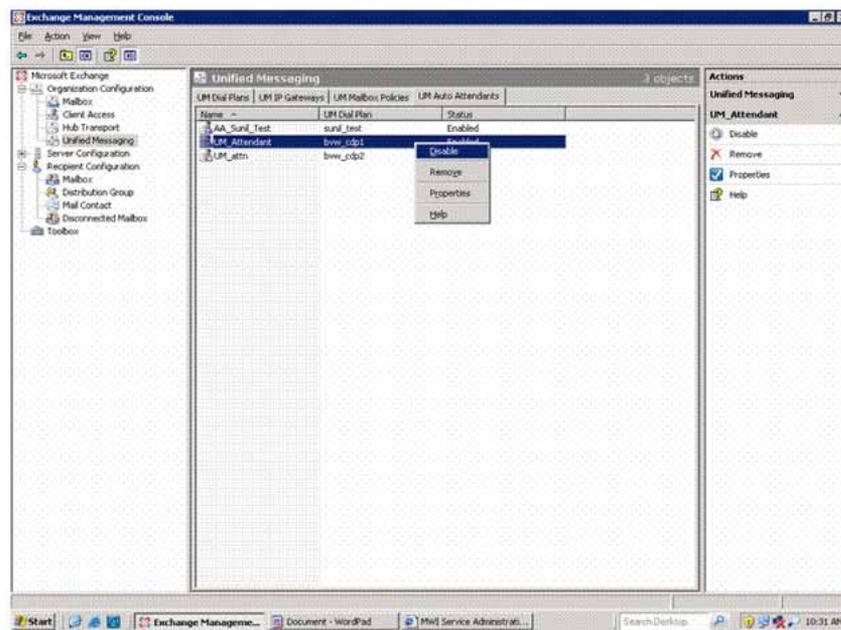

Optionally, you can right-click the UM Auto Attendant and select **Remove** from the list of available options.

--End--

Disable MWI service for a user phone set


This module details the procedure for disabling MWI service access on a user phone set.

**Procedure 9
Disabling MWI service for a user phone set**


- | Step | Action |
|------|---|
| 1 | Access the Geomant MWI Service Web page . For more information about accessing the Geomant MWI Service Web |

page, see “Configure Geomant Message Waiting Indicator (MWI) application” (page 44)

2 Select **Administration > MWI Users**.

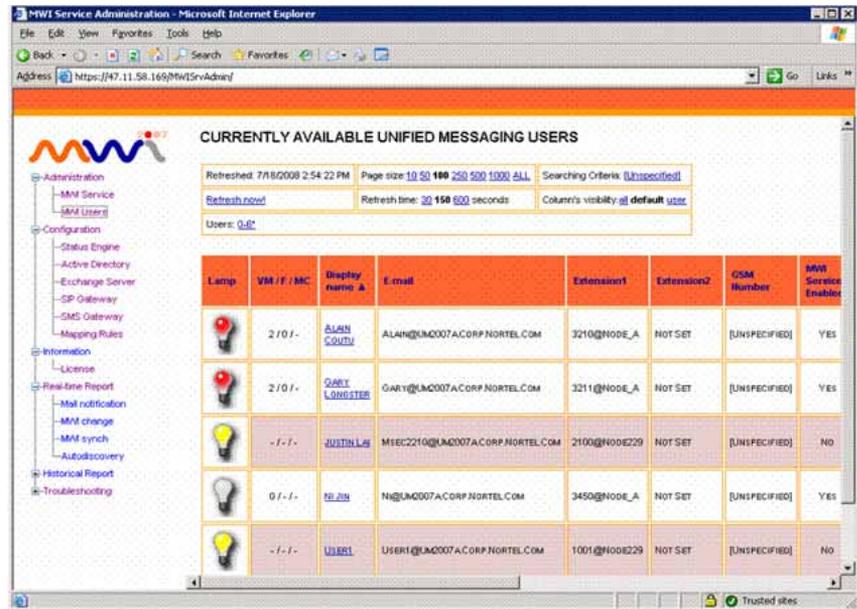

3 Select a user from the list. The **Unified Messaging User Properties** page appears.

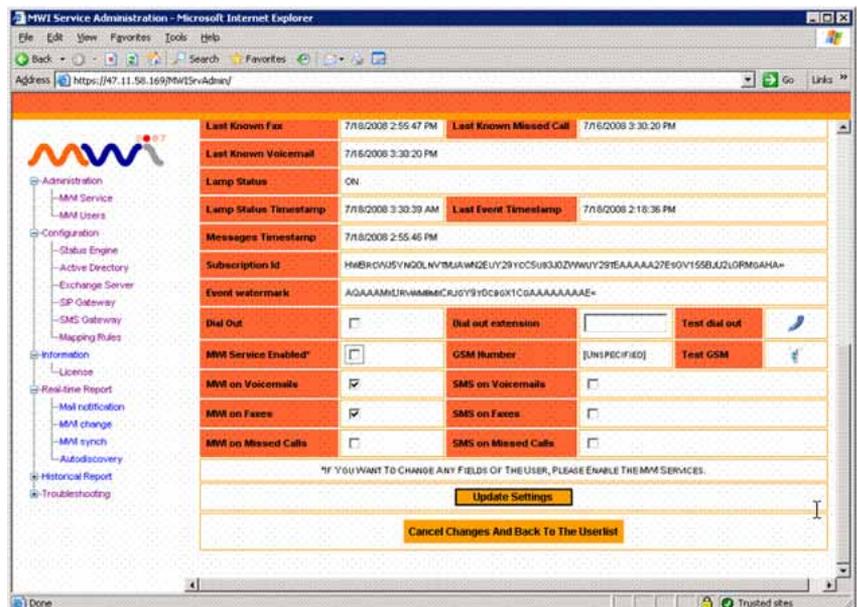

- 4 On the **Unified Messaging User Properties** screen, uncheck **MWI Service Enabled** to disable MWI service for the user.

--End--

End user experience scenarios

This section describes the end user scenarios for Unified Messaging features.

Navigation

- “Answering the call” (page 64)
- “Subscriber Access” (page 64)
- “Auto Attendant” (page 65)
- “Message waiting indication” (page 65)
- “Play on phone features” (page 66)

Answering the call

This is an end user scenario for answering the call on behalf of a user.

Step	Action
1	User A calls User B, who is a subscriber to UM services.
2	The call is redirected to UM, if the User B does not answer or his phone is busy. <div style="border: 1px solid black; padding: 5px; margin-top: 5px;">ATTENTION The caller hears the default greeting or personal greeting (if recorded).</div>
3	The caller can leave a voicemail for User B after the beep tone.
4	After the message is recorded, the caller has to press the pound (#) key for more options or wait to send the recorded message to User B mailbox.

--End--

Subscriber Access

This sections describes the end user scenario for subscriber dialing into the Microsoft Exchange Unified Messaging.

Step	Action
1	Call the UM Subscriber Access number. The caller receives the greeting prompting to enter the pin number.
2	Press the star (*) key, if the mailbox does not belong to the caller. Enter the pin number to open the mailbox.
3	The caller has various options to select from voicemail, email and so on after opening the mailbox.
<div style="border: 1px solid black; padding: 5px;"> <p>ATTENTION Both voice commands and DTMF options are available</p> </div>	
--End--	

Auto Attendant

The auto attendant service allows call transfer to any number or person in the corporate directory. This section describes the end user scenario for auto attendant service into the Microsoft Exchange Unified Messaging.

Step	Action
1	Call the UM Auto Attendant number.
2	The caller receives the greeting prompting to enter the name of the person or press the pound key (#) two times. Enter the email or press the pound key if you know the extension.
<div style="border: 1px solid black; padding: 5px;"> <p>ATTENTION If the auto attendant is speech enabled, then the UM will prompt for the name of the person.</p> </div>	
3	After the user name, number, and email is entered the auto attendant prompts the callers to press the pound key. You can leave a message to the user or wait to contact the user.
--End--	

Message waiting indication

This section describes the end user scenario for the message waiting indication in the Microsoft Exchange Unified Messaging.

Step	Action
1	User A calls User B. <div style="border: 1px solid black; padding: 5px;">ATTENTION User B must have the mailbox configured in Exchange UM.</div>
2	If User B does not answer the call, then the call is redirected to UM to record the voice message.
3	User A leaves a voice mail for user B.
4	The MWI indicator on User B is illuminated. This indicates that there is a message waiting for User B in the mailbox. <div style="border: 1px solid black; padding: 5px;">ATTENTION The message waiting features assumes that there are no voice mail in the mailbox if the User B indicator is not illuminated.</div>


--End--

Play on phone features


This section describes the end user scenario for the play on phone feature in the Microsoft Exchange Unified Messaging.

Users can invoke play on phone feature to call a phone and hear the voicemail.

Step	Action
1	Select voicemail in the Outlook or use Outlook web access (OWA) default feature provided by Exchange UM.

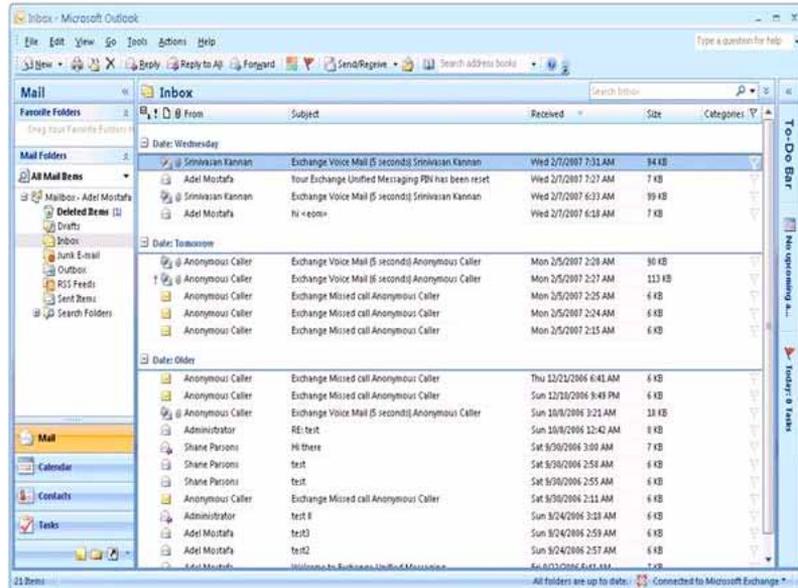

- 2 Play the message on the system or over the phone by using play on phone option.
- 3 To play using the play on phone, select the option available with the voice mail.
- 4 Enter the phone number where the message needs to be played.
- 5 Press dial.

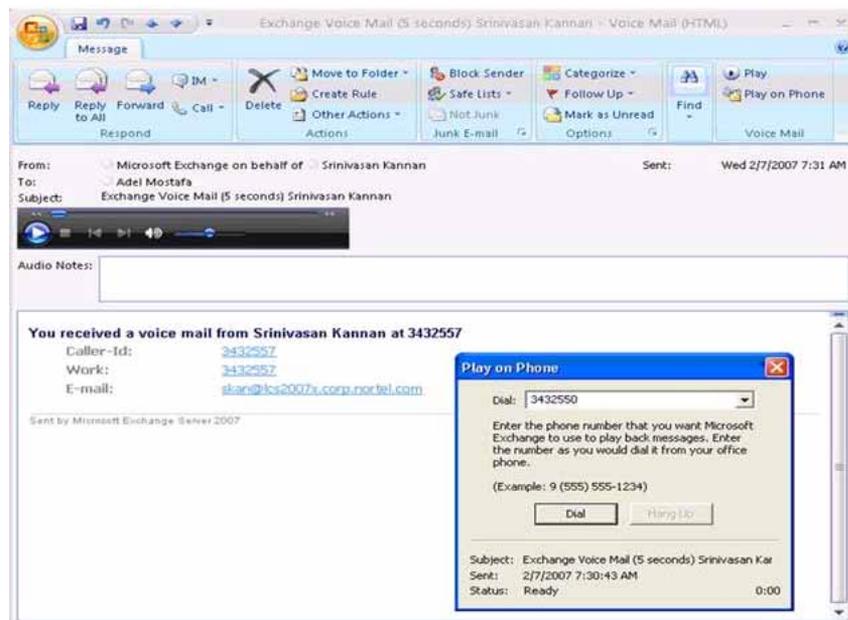

- 6 The destination phone number can also be set using the option tab so that it need not be entered again the next time a message is played.

--End--


TLS Configuration on UMS2007SP1

This section describes the procedure to configure the TLS on UMS 2007 SP1.

Procedure 10


Step	Action
------	--------

- | | |
|---|--|
| 1 | Set up the UM Dial Plan to SIPSecured. |
|---|--|

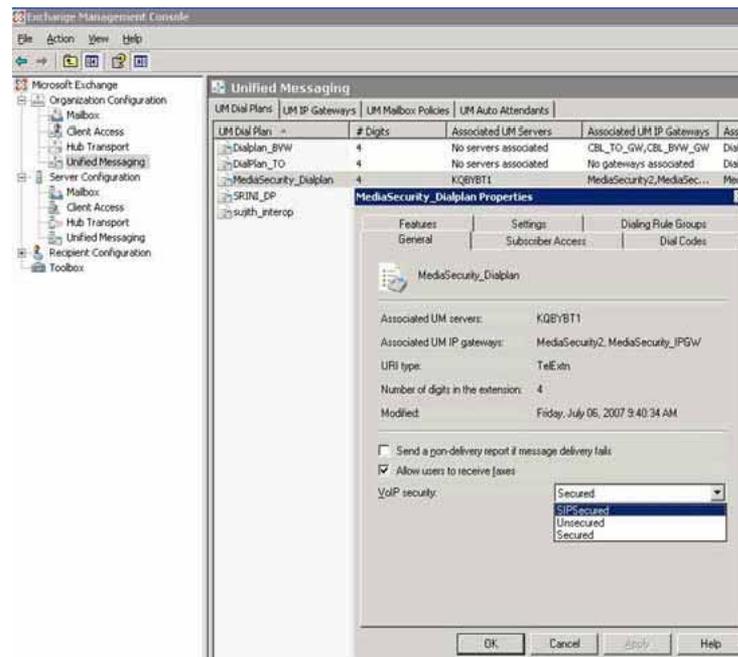


- | | |
|---|--|
| 2 | Restart the Unified Messaging Service. |
|---|--|


70 Configuration of Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

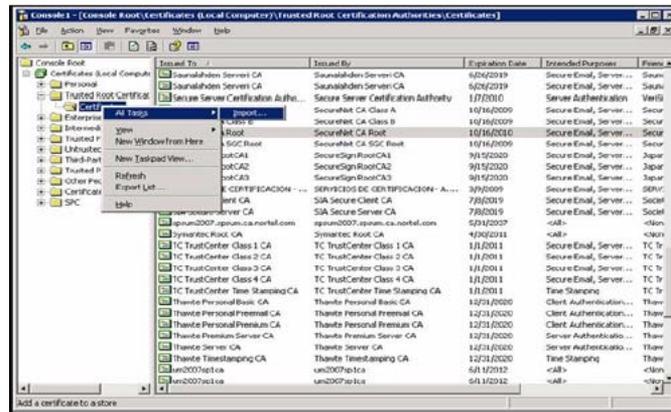


- 5 Start->run->mmc.
- 6 Add (Certificate) snap-in.
- 7 Select **Computer Account** certificate store to import the PCA Certificate to the UMS2007 server.

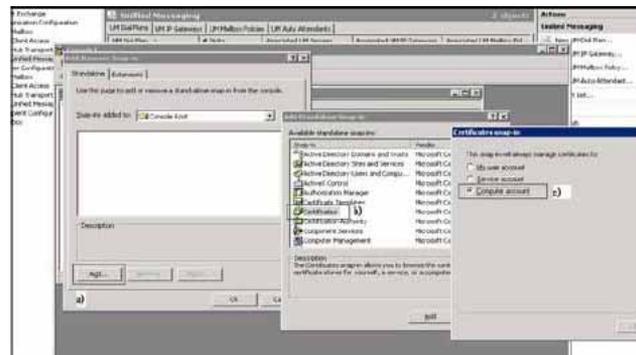


- 8 Export Microsoft Certificate Authority's certificate by going to the following website: <https://<UMS FQDN>/certsrv/certcarc.asp>

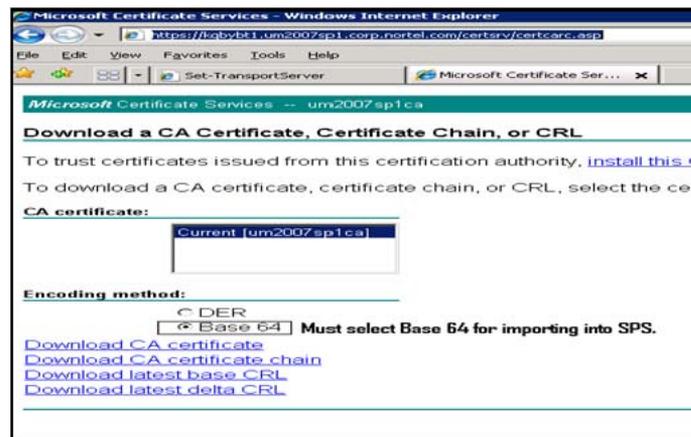

- Open the Microsoft CA certificate in a text editor and copy the content into SPS Certificate Authorities->Add pop-up window.

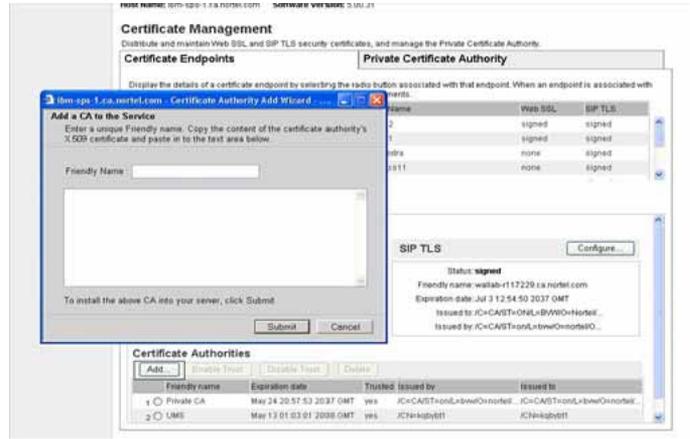


- Use following command in UMS command console:
Set-UMIPgateway -identity <IP_GATEWAY>. -Port 5061.

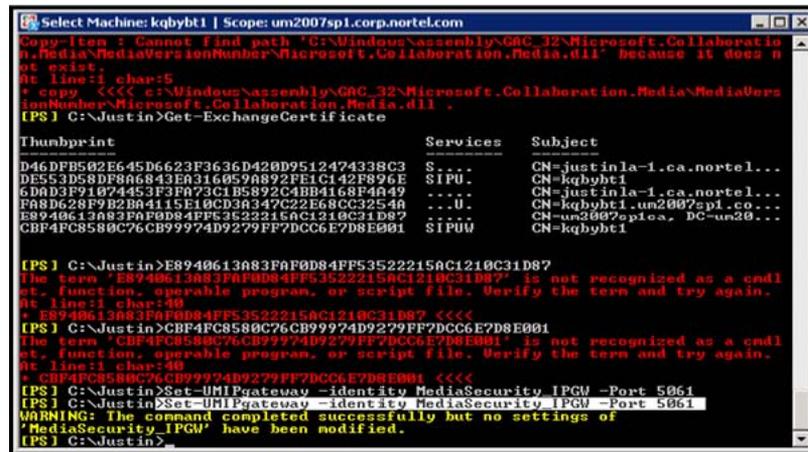


Make sure your IP_GATEWAY is identified by its FQDN in the Exchange Management Console.

72 Configuration of Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

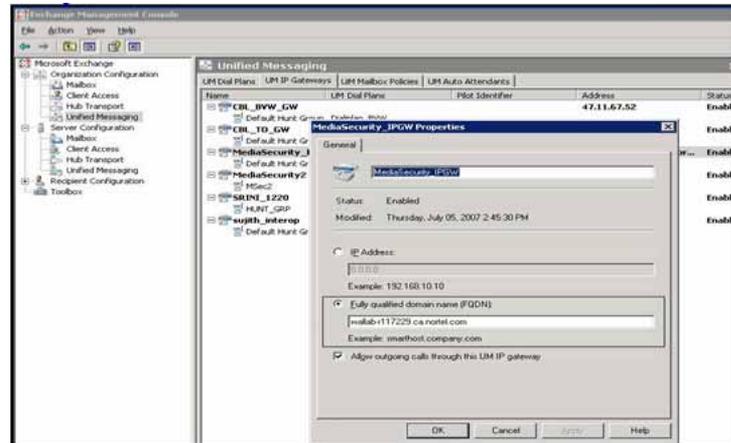


- 11 Select Control Panel ->Administrative Tools ->Local Security Policy to apply the configuration on Exchange front end that interacts with SPS.

Note: If UM is installed on the AD server itself, then it is under Domain Security Policy.

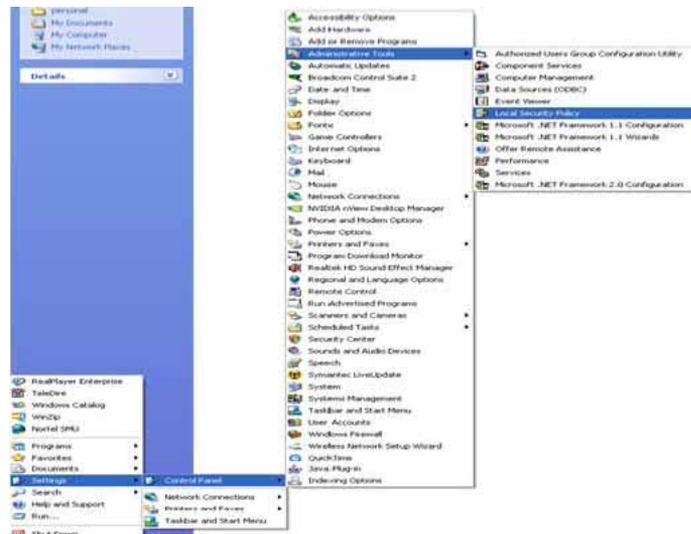

- 12 Right click Security Options ->System cryptography: Use FIPS compliant algorithms for encryption, hashing, and signing. Select **Enabled**.

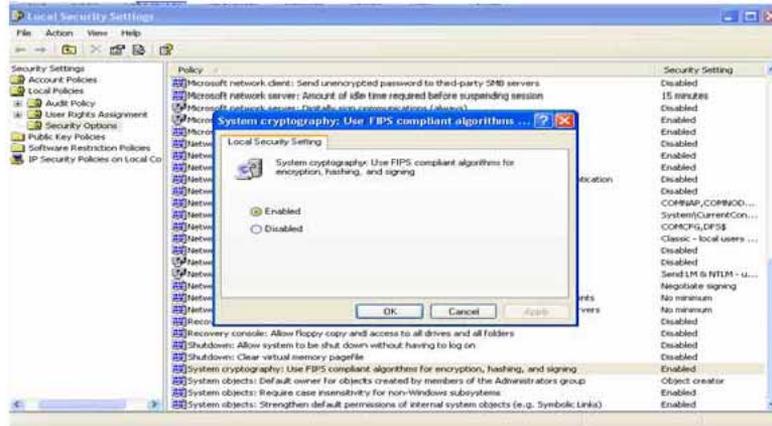


- 13 Navigate through SPS in the Network Routing Service Manager. Select SIP Proxy Server, Gatekeeper, and Network Connection Server.




- 14 Click **Restart**.
- 15 Select the Element Manager and Set TLS port to 5061.

Note: If you encounter continuous redirection when trying to make a SIP call, use the port number provided by the UM in the SIP/2.0 302 Moved Temporarily CONTACT header.05/07/2007 17:26:38 LOG0006 SIPNPM:->SIP/2.0 302 Moved Temporarily05/07/2007 17:26:38 LOG0006 SIPNPM: ->CONTACT: <sip:5510;phone-context=fittest.swlab@bvw.com:5068;transport=TLS;user=phone>.


- 16 Turn on Client Authentication and X.509 Certificate Authentication.
- 17 Special case for setup without SPS involvement. You can set the Primary Proxy to your UMS.
- 18 The DNS IP address should be updated in EM (config.ini) for UM calls to complete when using TLS.

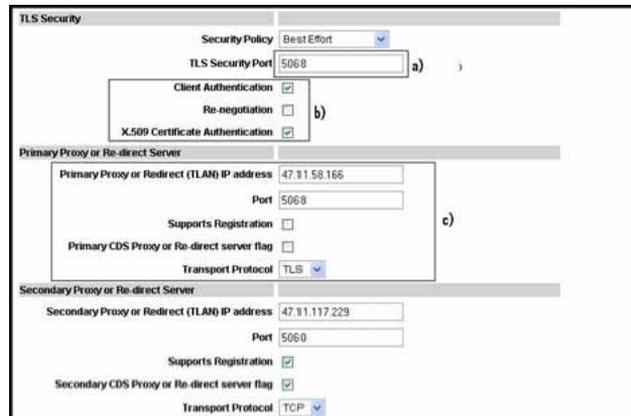

- 19 Verify that SPS is using the correct DNS Server with the correct class A FQDN entries for SPS, and UM.
- 20 Restart Exchange UM service in Exchange server.
- 21 Click the Authentication tab in **Client EXCHANGE Properties** dialog box.

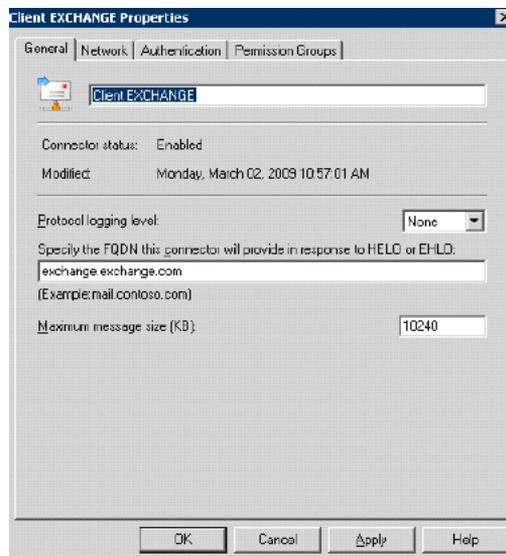

- 22 Select the Enable Domain Security (Mutual Auth TLS) check box.

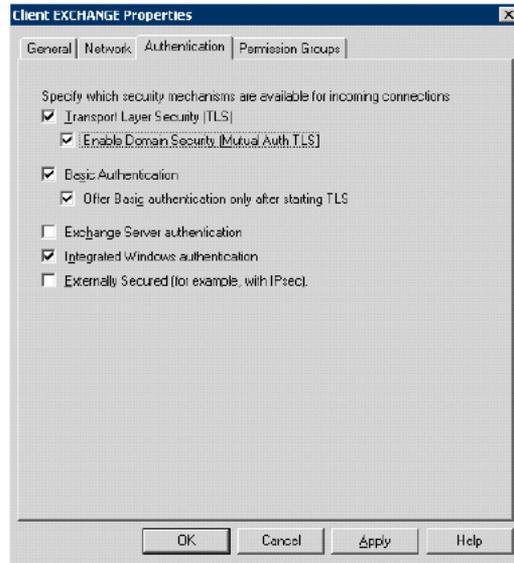

23 Click **OK**.

CS 1000 CA certificate is loaded correctly into the trusted list on Exchange Server.

--End--

TLS Limitations:

- Only TLS capable Web Browsers will be supported.
- Remote desktop version must use be at least RDP client version 5.2.

For more information, refer to the following link: <http://support.microsoft.com/kb/811833>.

Appendix

UM Dialing Plan configuration examples

This chapter provides configuration examples of various customer deployment scenarios.


Navigation

- [“Coordinated Dialing Plan network in the same cost area” \(page 77\)](#)
- [“Coordinated Dialing Plan network in different cost areas” \(page 82\)](#)
- [“UDP/CDP network in different cost area” \(page 84\)](#)
- [“Branch Office in the same long distance cost area” \(page 85\)](#)
- [“Virtual Office” \(page 89\)](#)
- [“Geographic Redundancy” \(page 90\)](#)

Coordinated Dialing Plan network in the same cost area

The following diagram depicts multiple CS 1000 nodes within the same location using the Coordinated Dialing Plan (CDP).


Figure 13
CDP Network in the same cost area

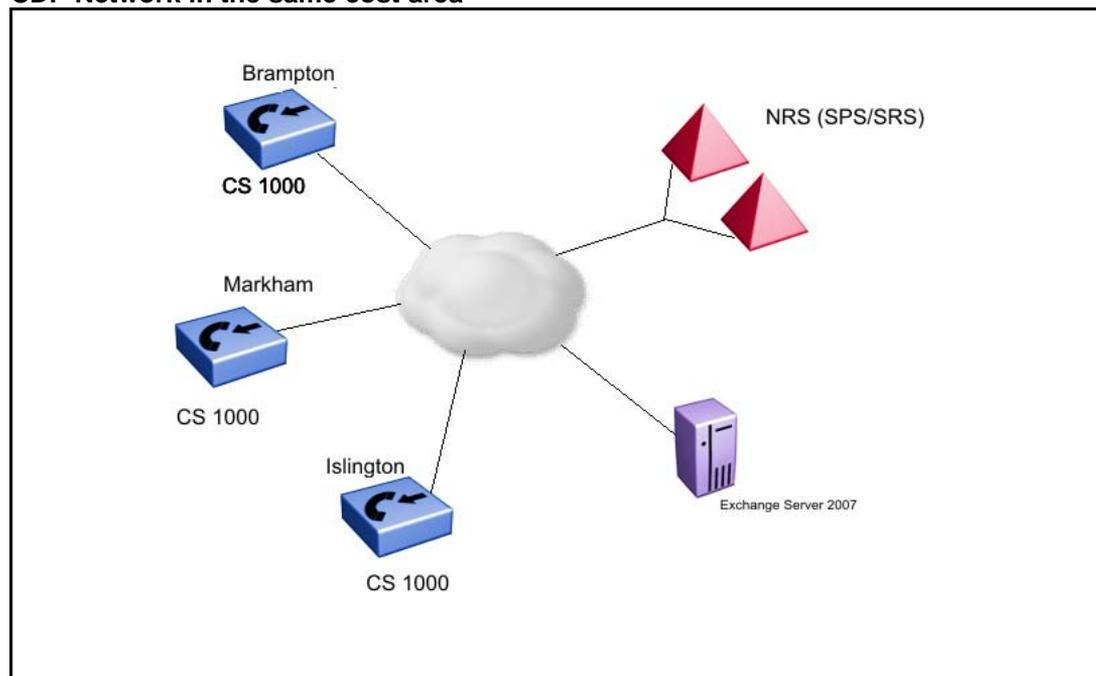

UM Gateway dialing plan configuration

The Gateways at each are individually configured on Unified Messaging 2007 using the same dialing plan.

Figure 14
Unified Messaging Window—same cost area

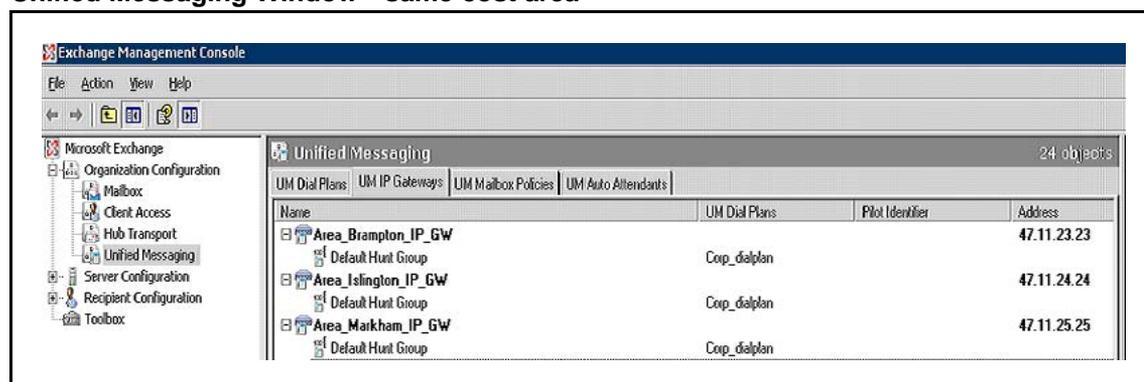

Subscriber Access and Auto Attendant Configuration

The Subscriber Access (SA) or Auto Attendant (AA) numbers are configured using the same dialing plan. The following examples show two configurations for when these numbers are the same and when the numbers are different.

Same SA/AA numbers

All nodes in the network are configured with the same SA and AA numbers as shown in the following example.

- Markham
 - Auto Attendant: 5000
 - Subscriber Access: 5001
- Islington
 - Auto Attendant: 5000
 - Subscriber Access: 5001
- Brampton
 - Auto Attendant: 5000
 - Subscriber Access: 5001

Different SA/AA numbers

All nodes in the network are configured with different SA and AA numbers.

For example, a user in Brampton can access voice mail from any location using the site specific Subscriber Access number of 3001.

- Markham
 - Auto Attendant: 5000
 - Subscriber Access: 5001
- Islington
 - Auto Attendant: 4000
 - Subscriber Access: 4001
- Brampton
 - Auto Attendant: 3000


— Subscriber Access: 3001

Outbound calling

Using the example diagram in [Figure 13 "CDP Network in the same cost area"](#) (page 78), the assumption is that Islington, Brampton, and Markham locations are within a local calling area. Outbound calls are enabled for all nodes by checking the Allow outgoing calls through this UM IP gateway check box as depicted in the following figure.

When a user selects the Play on the phone option from Outlook 2007, UM sends a request to one of the SIP Gateways in the same dialing plan. If one of these IP Gateways is down, UM selects another IP Gateway in the same dialing plan using a round-robin selection.

Figure 15
IP Gateway Properties window

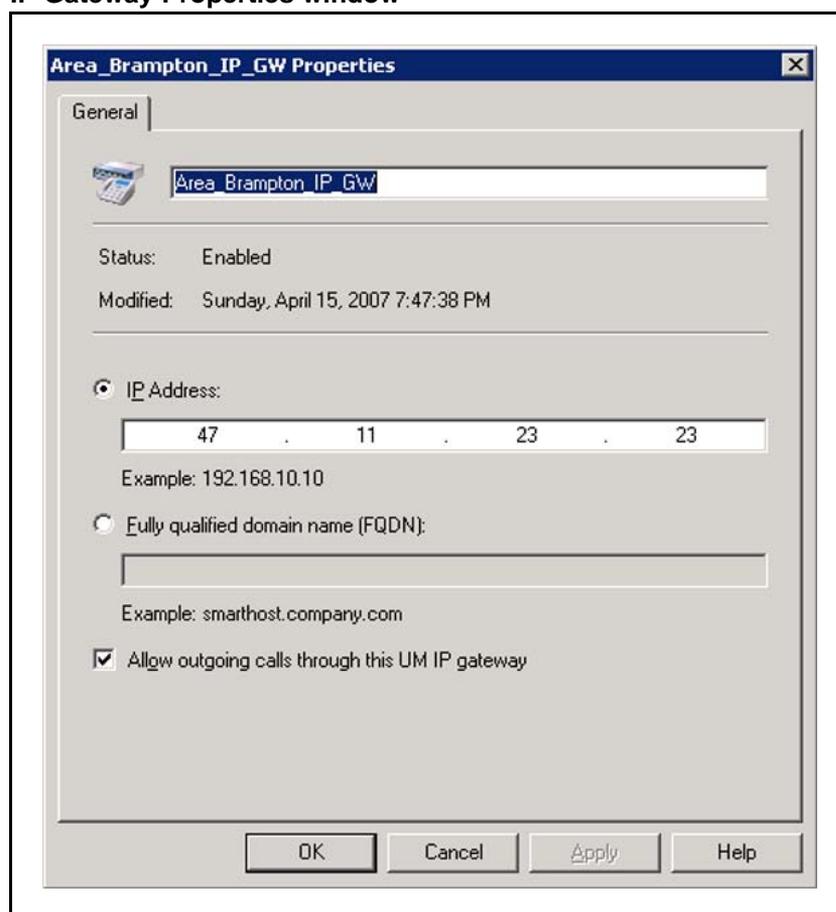

Message Waiting Indicator configuration

For each other, the gateway is selected on the same node where the user is located. The Message Waiting Indicator (MWI) notification is sent to the selected gateway when a new voice mail message is received by the UM server. In the following figure, the Gateway is selected for the users at the Brampton node.

Figure 16
MWI UM User Properties

UNIFIED MESSAGING USER PROPERTIES


Distinguished Name	CN=USER 2012,CN=USERS,DC=UM2007R,DC=CORP,DC=NORTEL,DC=COM
Display Name	USER 2012
Logon Name	USER2012
Email Address	USER2012@UM2007R.CORP.NORTEL.COM
Email WebDAV Access	HTTPS://KQVZP46.UM2007R.CORP.NORTEL.COM/EXCHANGE/USER2012
Email WebService Access	HTTPS://KQVZP46.UM2007R.CORP.NORTEL.COM/EWS/EXCHANGE.ASMX
Extension	2012
GSM Number	[UNSPECIFIED]
Gateway Port	0
Messages Timestamp	4/13/2007 6:10:01 PM
Voice Messages	0
Last Known Voicemail	4/13/2007 6:10:01 PM
Lamp Status	INIT
Lamp Status Timestamp	4/13/2007 6:10:01 PM
Last Event Timestamp	4/13/2007 6:10:01 PM
Subscription Id	[UNKNOWN]
Event watermark	[UNKNOWN]
SIP Gateway	Area_Brampton_IP_GW
MWI Service Enabled	<input checked="" type="checkbox"/>
SMS on Voicemails	<input type="checkbox"/>

Update Settings

Coordinated Dialing Plan network in different cost areas

The following diagram depicts multiple CS 1000 nodes in different locations using Coordinated Dialing Plan (CDP).


Figure 17
CDP network in different cost areas

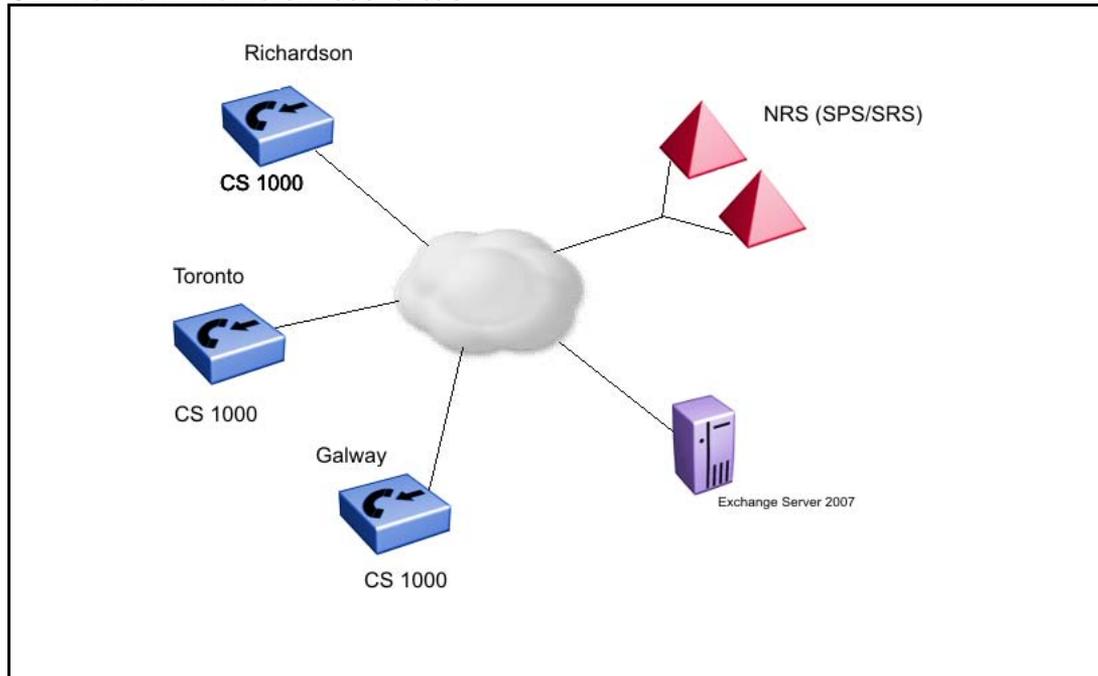

UM Gateway dialing plan configuration

Each location must have a unique dialing plan associated with the Gateway as shown in the following figure.

Figure 18
CDP in different locations

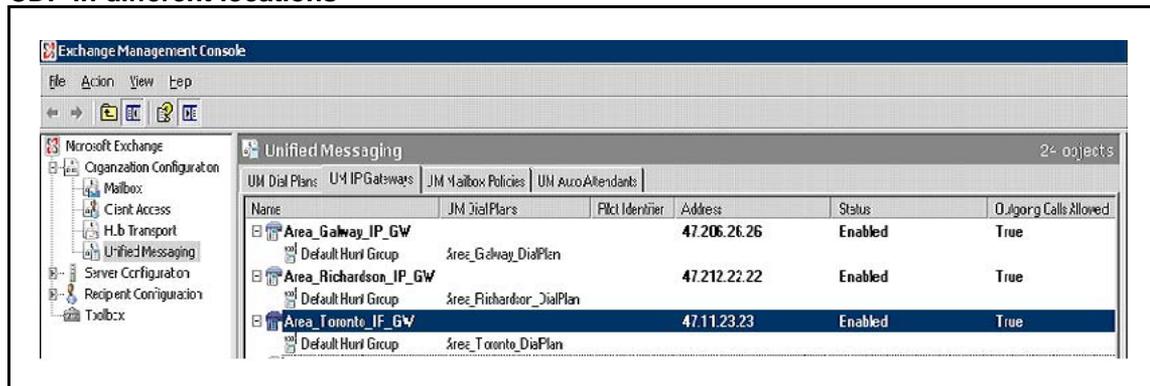

Subscriber Access and Auto Attendant configuration

All nodes in the network are configured with unique SA and AA numbers to access UM.

When a Toronto user accesses the UM service from Richardson, the user dials the local number 4000, the NRS routes the call to the UM server if a routing entry to UM exists. If no routing entry exists, the user cannot access the service because Richardson has a different dialing plan.

- Richardson
 - Auto Attendant: 5000
 - Subscriber Access: 5001
- Toronto
 - Auto Attendant: 4000
 - Subscriber Access: 4001
- Galway
 - Auto Attendant: 3000
 - Subscriber Access: 3001

The administrator must provision the network to allow the UM services to be accessed from different locations. The following example shows how the Desktop Management Interface (DMI) can be used. This example allows users from other locations to use the SA/AA number without incurring long distance charges or restrictions.

- In Richardson, insert prefix 4 for DN 4001, for example 44001.
- Configure 44 as a routing entry for Toronto on the NRS.
- In Toronto, delete prefix 4 and route the call to the NRS to terminate on UM.

Outbound calling

Each location maps to a separate dialing plan. When a user from Richardson selects Play on phone option to dial a number, the call is routed through the Richardson Gateway. Outbound calls for each location are enabled by checking the Allow outgoing calls through this UM IP


gateway check box as depicted in the following figure. Long distance charges and restrictions for the user in the Exchange Server console apply.

UDP/CDP network in different cost area

The following diagram depicts the three locations in relation to each other as defined in the UDP dialing plan.

For one location to reach another location, the user must dial the location code followed by the user DN.


Figure 19
UDP/CDP in different cost areas

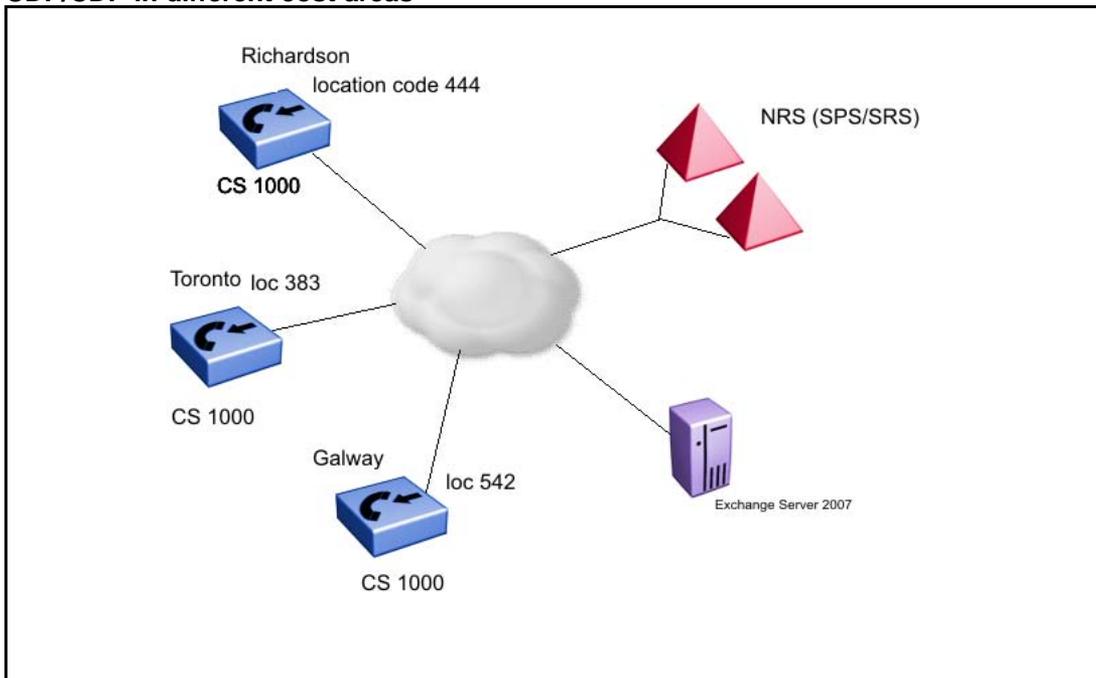

UM gateway dialing plan configuration

Each location must have a dialing plan associated with the gateway.

Figure 20
UDP/CDP network in different cost areas

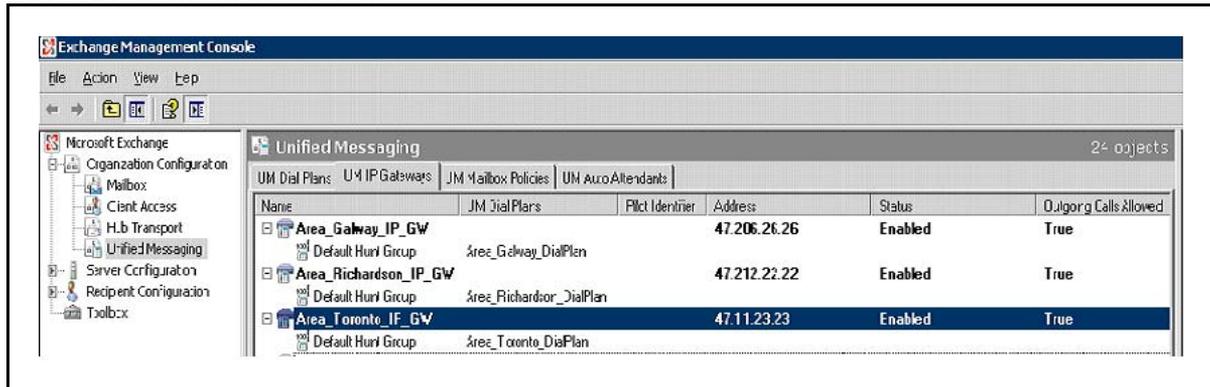

Subscriber Access and Auto Attendant configuration

Users can directly access the local SA/AA number. When access is required from a remote location, the location code must be prefixed to the SA/AA number.

When a Toronto user accesses UM service from Richardson, the location code of Toronto (383) must be included with the number. For example, 383-5000. The user can then make the call from the home CS 1000. UM permits the Subscriber Access to use the services.

Each node can have the same or different SA/AA numbers. All sites have the same SA/AA number as follows:

- Auto Attendant: 5000
- Subscriber Access: 5001


Outbound calling

Each location maps to a separate dialing plan. When a user from Richardson selects the Play on phone option to dial a number, the Richardson Gateway is used. The restriction rules apply for the user as defined on the Exchange console.

Branch Office in the same long distance cost area

The following diagram depicts a Branch office scenario where the Main Office (MO) and two Branch Offices are in the same long distance cost area. One BO is in local mode (IP connection to the MO was lost).


Figure 21
Branch Office in the same long distance cost area

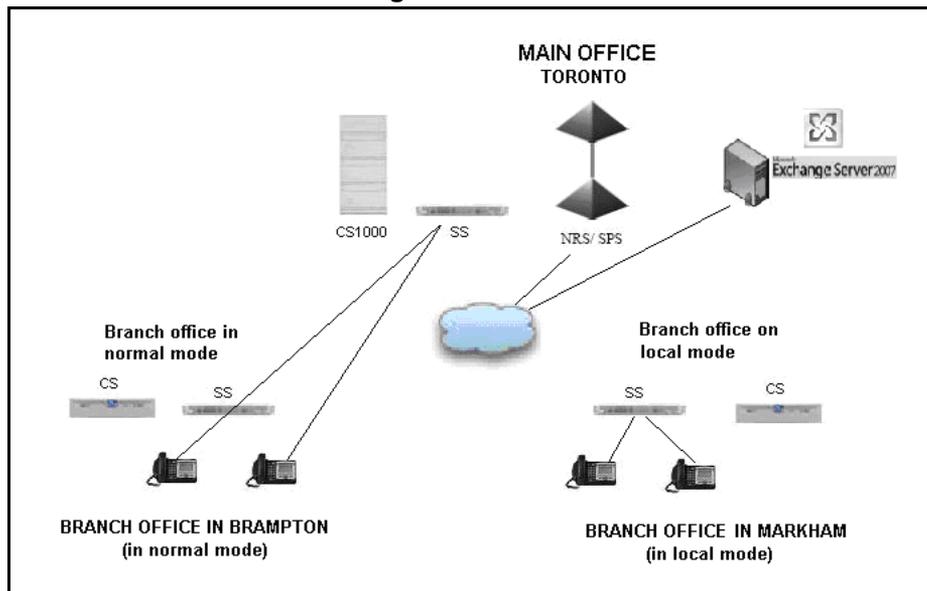

UM Gateway dialing plan configuration

The gateways at each Main Office and Branch Office site are configured individually on UM 2007 with the same dialing plan,

Figure 22
BO in the same long distance cost area

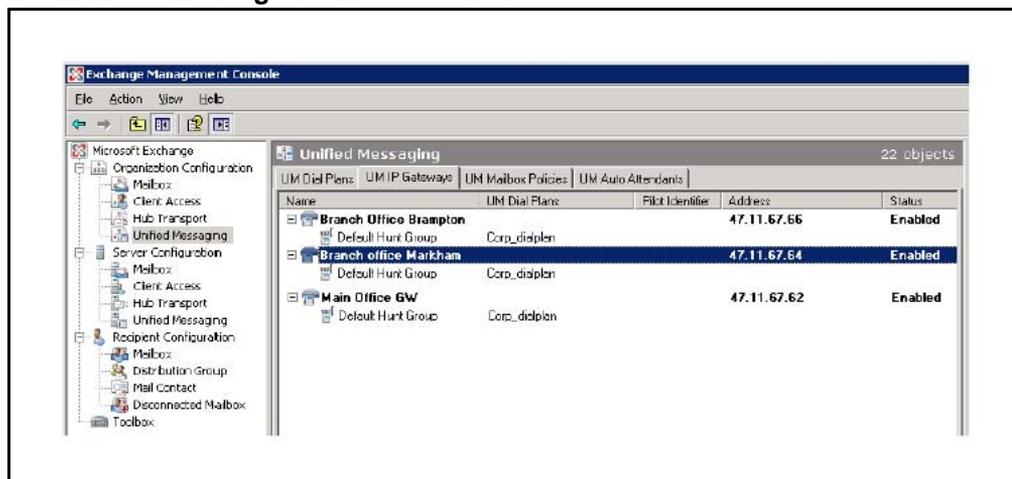

Subscriber Access and Auto Attendant configuration

The following list describes the Subscriber Access modes available for Branch Office:

- Branch Office in normal mode: In normal mode, telephones are registered to the MO Signaling Server. When a user dials the SA

number, the MO SIP Gateway sends a request to UM 2007. When the MO Gateway is configured with the corporate dialing plan, UM grants access to the user mailbox.

- Branch Office in Local mode: in local mode, telephones are registered to the BO Gateway. When the user dials the SA number, the BO SIP Gateway sends a request to UM 2007. When BO Gateway is configured with the same dialing plan as the MO, UM grants access to the user mailbox.


Outbound calling

When the Branch Office locations are in the same long distance cost area (Toronto, Brampton, and Markham), all three gateways are enabled for outbound calling by selecting the Allow outgoing calls through this UM IP gateway check box as shown in the following figure. When a user selects the Play on phone feature of Outlook 2007, UM sends a request to one of the SIP Gateways in the same dialing plan. When the selected Gateway is down, UM selects another IP Gateway in the same dialing plan using a round-robin selection.

MWI configuration

Each user in the MO/BO is configured for either normal or local Mode. MWI support can be provided to the user either in the normal or local mode, but not both. This is a limitation of the Geomant MWI application. The application does not support multiple IP Gateway configurations for an individual user or multiple instances of the MWI application. The following figure describes the configuration for MWI support for normal mode.

Figure 23
MWI support for normal mode

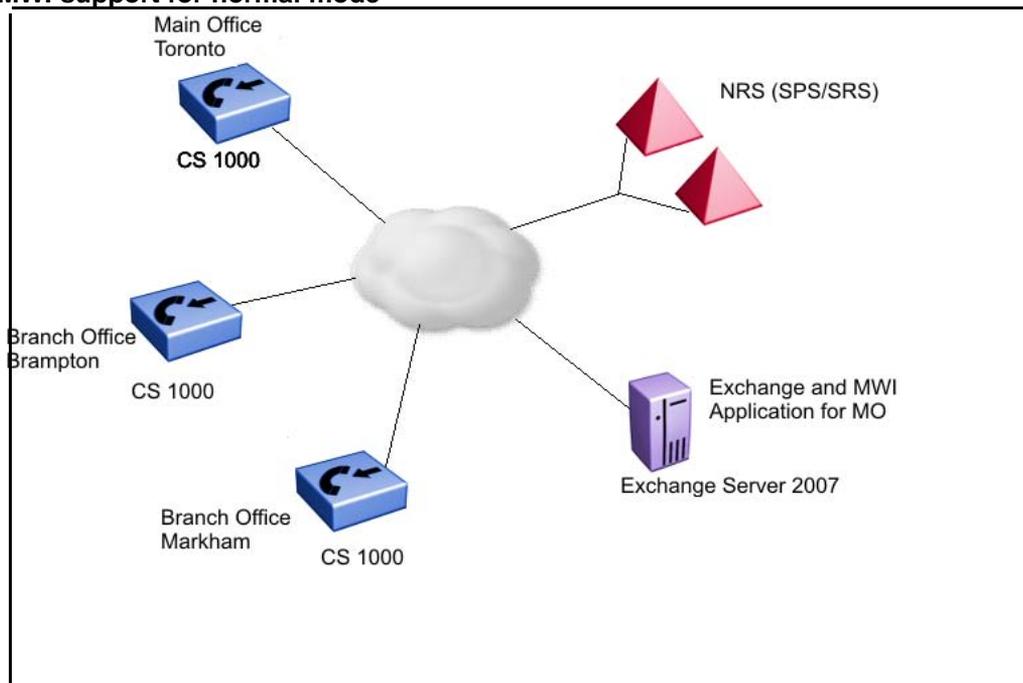


The following describes the required configuration for MWI for Unified Messaging User Properties for normal and local mode for a user on the Brampton BO.

- MWI support for normal mode: The SIP Gateway parameter points to the MO Gateway
- MWI support for local mode: The SIP Gateway parameter points to the Brampton BO Gateway

Branch Office in a different long distance cost area

For outbound calling, the configuration for the Gateway is disabled by clearing the box Allow outgoing calls through this UM IP gateway. This is necessary as one or more BOs are in different long distance cost areas.


Figure 24
Branch Office in a different long distance cost area

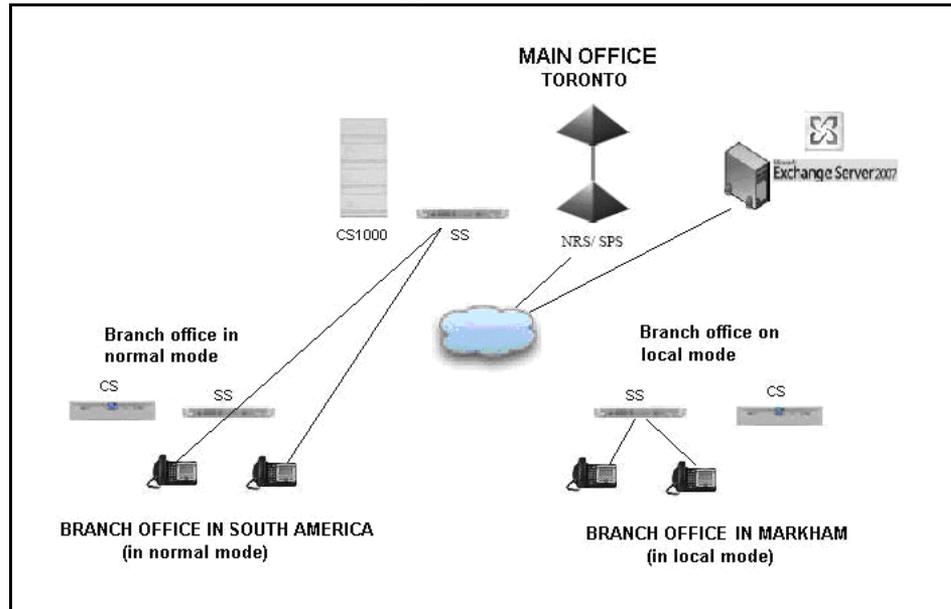

Virtual Office

The following diagram depicts a virtual office scenario

Figure 25
Virtual Office

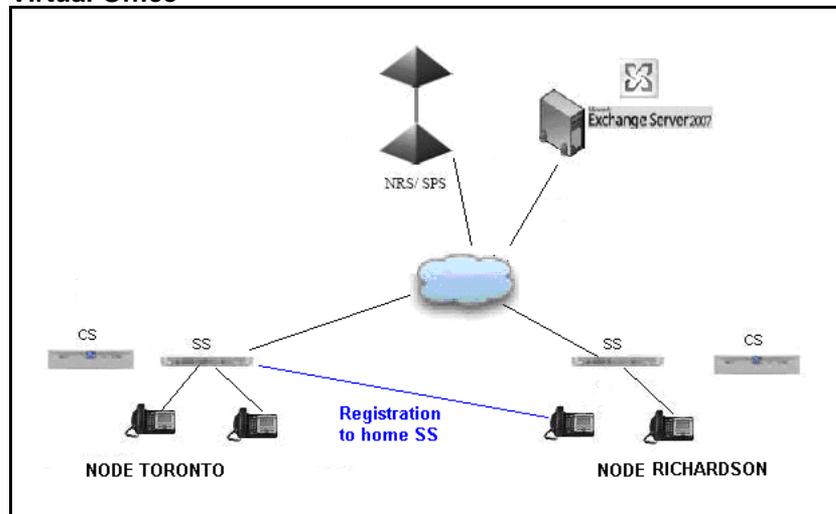

UM Gateway dialing plan configuration

You can individually configure the gateway on each site using the same or a different dialing plan.

Figure 26
Unified Messaging Window—Virtual Office dialing plan



Subscriber Access and Auto Attendant number configuration

When a user in Toronto travels temporarily to the Richardson location, the user performs a Virtual Office logon and the telephone registers to the Toronto Gateway. The local Toronto access number is dialed and the Toronto Gateway sends a request to UM allowing access to the user mailbox.


Outbound calling

When logged on with the Virtual Office feature, outbound calling is operational.

Geographic Redundancy


The following diagram depicts an example of Geographic Redundancy.

Figure 27
Geographic Redundancy

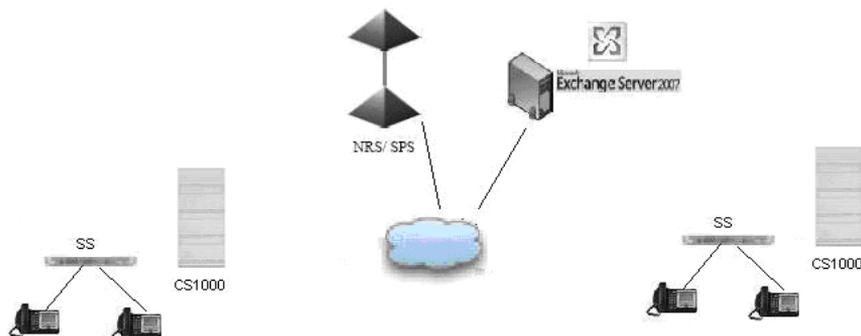

With Geographic Redundancy, telephones are redirected to the secondary Call Server if the Primary Call Server goes down. The Gateway for both Call Servers is configured in UM 2007 using the same dialing plan.

Figure 28
Geographic Redundancy Dialing plan

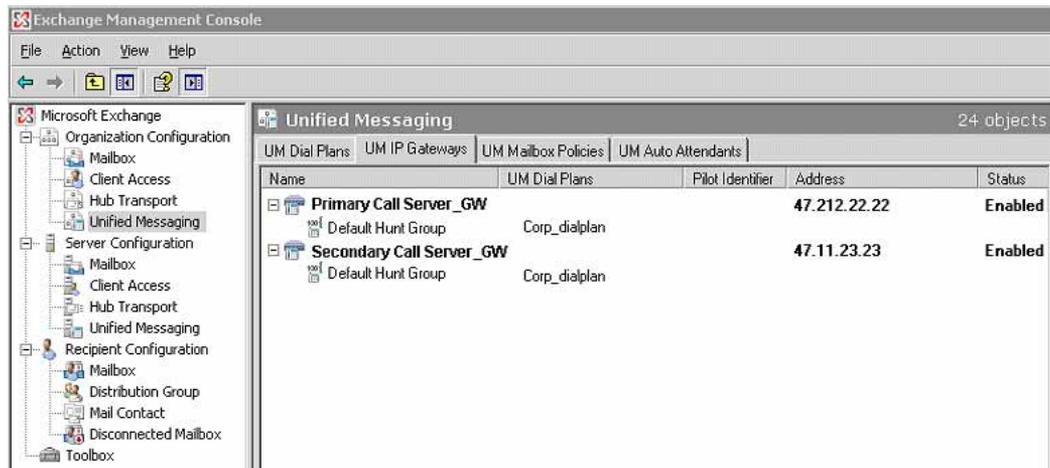

Subscriber Access and Auto Attendant configuration

The primary and secondary Call Server are both configured as part of the same dialing plan. The users can connect to UM in primary Call Server or secondary Call Server mode.

Outbound calling

Outbound callings works the same as in Main Office and Branch Office configurations.

Message Waiting Indicator

The Message Waiting Indicator setup is similar to the Main Office, Branch Office, and Geographic Redundancy configurations.

Other scenarios

Many combinations of scenarios identified in this chapter are also possible.

Nortel Communication Server 1000

Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging Fundamentals

Release: 6.0

Publication: NN43001-122

Document revision: 03.03

Document release date: 1 December 2009

Copyright © 2007-2009 Nortel Networks. All Rights Reserved.

While the information in this document is believed to be accurate and reliable, except as otherwise expressly agreed to in writing NORTEL PROVIDES THIS DOCUMENT "AS IS" WITHOUT WARRANTY OR CONDITION OF ANY KIND, EITHER EXPRESS OR IMPLIED. The information and/or products described in this document are subject to change without notice.

Nortel, Nortel Networks, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

All other trademarks are the property of their respective owners.

To provide feedback or to report a problem in this document, go to www.nortel.com/documentfeedback.

www.nortel.com

