



**NORTEL**

Nortel Communication Server 1000

# Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging Fundamentals

Release: 7.0

Document Revision: 04.02

[www.nortel.com](http://www.nortel.com)

---

NN43001-122

Nortel Communication Server 1000  
Release: 7.0  
Publication: NN43001-122  
Document release date: 10 June 2010

Copyright © 2007-2010 Nortel Networks. All Rights Reserved.

While the information in this document is believed to be accurate and reliable, except as otherwise expressly agreed to in writing NORTEL PROVIDES THIS DOCUMENT "AS IS" WITHOUT WARRANTY OR CONDITION OF ANY KIND, EITHER EXPRESS OR IMPLIED. The information and/or products described in this document are subject to change without notice.

Nortel, Nortel Networks, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

All other trademarks are the property of their respective owners.

---

# Contents

---

<b>New in this Release</b>	<b>7</b>
Features	7
Other changes	7
Revision History	7
<b>How to get help</b>	<b>9</b>
Contents	9
Getting help from the Nortel web site	9
Getting help over the telephone from a Nortel Solutions Center	9
Getting help from a specialist by using an Express Routing Code	10
Getting help through a Nortel distributor or reseller	10
<b>Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging</b>	<b>11</b>
Overview	11
Multiple Microsoft Exchange Unified Messaging servers on a single network	13
Operational Considerations	14
Microsoft Exchange Unified Messaging operational characteristics	15
Secure Real-Time Protocol support for Microsoft Exchange Server 2007 Unified Messaging	16
CS 1000 set configuration	21
SIP provisioning guidelines	21
<b>Configuration of Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging</b>	<b>25</b>
Configure a new user mailbox for Microsoft Exchange Unified Messaging	26
Enable a new user mailbox for use with Microsoft Exchange Unified Messaging	32
Configure a new Dial Plan for Microsoft Exchange Unified Messaging	35
Configure the Operator Assistance feature	42
Install Geomant Message Waiting Indicator (MWI) application	44
Installation of Multiple MWI applications	45
Configure Geomant Message Waiting Indicator (MWI) application	45
Additional notes on configuring CS 1000 for MWI	49
SRTP configuration using Element Manager	49

---

Configure Microsoft Exchange Unified Messaging in CS 1000 Element Manager	49
Configure a Node in Element Manager for use with Microsoft Exchange Unified Messaging	50
Configure Subscriber Access, Auto Attendant, and MWI DN information	51
Configure information for the MWI Application DN	55
Select MWI Dial Plan type	55
Voice mail softkeys configuration	56
Allowing calling party numbers to update while leaving message	56
Disable a user mailbox	57
Remove a user mailbox	59
Remove a dial plan	60
Disable Operator Assistance feature	62
Remove Operator Assistance feature	62
Disable MWI service for a user phone set	63
End user experience scenarios	65
Navigation	65
Answering the call	65
Subscriber Access	65
Auto Attendant	66
Message waiting indication	66
Play on phone features	67
RE-INVITE issue with Exchange 2007 and Exchange 2010	69
RE-INVITE work-around	69
Secured Dial Plan Creation	70
TLS Configuration on UMS2007SP1	72

---

## **AppendixUM Dialing Plan configuration examples** **81**

Navigation	81
Coordinated Dialing Plan network in the same cost area	81
UM Gateway dialing plan configuration	82
Subscriber Access and Auto Attendant Configuration	82
Same SA/AA numbers	83
Different SA/AA numbers	83
Outbound calling	84
Message Waiting Indicator configuration	85
Coordinated Dialing Plan network in different cost areas	86
UM Gateway dialing plan configuration	86
Outbound calling	87
UDP/CDP network in different cost area	88
UM gateway dialing plan configuration	88
Subscriber Access and Auto Attendant configuration	89
Outbound calling	89
Branch Office in the same long distance cost area	89

UM Gateway dialing plan configuration	90
Subscriber Access and Auto Attendant configuration	90
Outbound calling	91
MWI configuration	91
Branch Office in a different long distance cost area	92
Virtual Office	93
UM Gateway dialing plan configuration	93
Subscriber Access and Auto Attendant number configuration	94
Outbound calling	94
Geographic Redundancy	94
Subscriber Access and Auto Attendant configuration	95
Outbound calling	95
Message Waiting Indicator	95
Other scenarios	95



---

## New in this Release

---

This section describes what's new in *Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging Fundamentals (43001-122) for Communication Server 1000 Release 7.0*

### Features

There have been no updates to the feature descriptions in this document.

### Other changes

This release contains no other changes.

### Revision History

<b>June 2010</b>	Standard 04.02. Up-issued to reflect changes in technical content.
<b>June 2010</b>	Standard 04.01. This document is up-issued to support Communication Server 1000 Release 7.0.
<b>December 2009</b>	Standard 03.03. This document is up-issued to add a note in the section TLS Configuration on UMS2007SP1.
<b>June 2009</b>	Standard 03.02. This document contains added section: "TLS Configuration on UMS2007SP1."
<b>May 2009</b>	Standard 03.01. This document is up-issued to support Communication Server 1000 Release 6.0.
<b>May 2008</b>	Standard 02.03. This document is issued to reflect changes in technical content.
<b>March 2008</b>	Standard 02.02. This document is issued to reflect changes due to CR#Q01808992.
<b>December 2007</b>	Standard 02.01. This document is issued to support Communication Server 1000 Release 5.5.
<b>August 2007</b>	Standard 01.01. This document is issued to support Communication Server 1000 Release 5.0 and Microsoft Exchange 2007 Unified Messaging.



---

# How to get help

---

## Contents

This section contains information on the following topics:

- Getting help from the Nortel web site
- Getting help over the telephone from a Nortel Solutions Center
- Getting help from a specialist by using an Express Routing Code
- Getting help through a Nortel distributor or reseller

## Getting help from the Nortel web site

The best way to get technical support for Nortel products is from the Nortel Technical Support web site:

[www.nortel.com/support](http://www.nortel.com/support)

This site provides quick access to software, documentation, bulletins, and tools to address issues with Nortel products. From this site, you can:

- download software, documentation, and product bulletins
- search the Technical Support Web site and the Nortel Knowledge Base for answers to technical issues
- sign up for automatic notification of new software and documentation for Nortel equipment
- open and manage technical support cases

## Getting help over the telephone from a Nortel Solutions Center

If you do not find the information you require on the Nortel Technical Support web site, and you have a Nortel support contract, you can also get help over the telephone from a Nortel Solutions Center.

In North America, call 1-800-4NORTEL (1-800-466-7835).

Outside North America, go to the following web site to obtain the telephone number for your region:

[www.nortel.com/callus](http://www.nortel.com/callus)

### **Getting help from a specialist by using an Express Routing Code**

To access some Nortel Technical Solutions Centers, you can use an Express Routing Code (ERC) to quickly route your call to a specialist in your Nortel product or service. To locate the ERC for your product or service, go to:

[www.nortel.com](http://www.nortel.com)

### **Getting help through a Nortel distributor or reseller**

If you purchased a service contract for your Nortel product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller.

---

# Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

---

## Overview


CS 1000 support for Microsoft Exchange Server 2007 Unified Messaging enables interoperability between the voice service capabilities of Communication Server 1000 and the Unified Messaging solution provided as a component of Microsoft Exchange Server 2007. This interoperability provides the following capabilities:

- **Call Answering:** With call answering, Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging is configured to answer incoming calls on behalf of a user by playing their personal greeting, recording a voice message from the caller, and submitting it for delivery to the user inbox as an e-mail message.
- **Subscriber Access:** enables dial-in access for users. A subscriber dialing into the Microsoft Exchange Unified Messaging system accesses their mailbox using Outlook 2007 Voice Access, enabling access using either a telephone keypad or voice inputs. When dialed into the Unified Messaging system using a telephone, a subscriber or user can perform the following functions:
  - Listen to, forward, or reply to voice mail messages, and call the sender of the voice mail.
  - Listen to calendar information.
  - Access or dial contacts stored in the global address list or in a personal contact list.
  - Accept or cancel meeting requests.
  - Set a voice mail Out-of-Office message.
  - Set security preferences and personal options.
- **Auto Attendant:** Provides a set of voice prompts that provides access to the Microsoft Exchange Unified Messaging system by external users. Using the Auto Attendant, the external user navigates the menu

structure, using either the telephone keypad or speech inputs, to place a call to a user or to locate a user for the purpose of placing a call to that user. In addition, the Auto Attendant gives system administrators the ability to perform the following functions:

- Create a customizable set of menus for use by external users.
- Define informational greetings, business hours greetings, and non-business hours greetings, and greetings for holiday schedules.
- Add instructions for callers describing how to search the organizational directory, and how to connect to a specific user by means of their extension number.
- Enable access for external callers to the operator. For more information, see [“Configure the Operator Assistance feature” \(page 42\)](#).
- **Play on Phone:** Allows a Microsoft Exchange Unified Messaging-enabled user to access a voice mail message through Outlook 2007 or Outlook Web Access and listen to the message over a telephone.
- **Message Waiting Indication (MWI):** Designed by Geomant, the MWI application is an add-on to the Microsoft Exchange Unified Messaging Server 2007 which provides support for MWI notifications to users connected to the Microsoft Exchange Unified Messaging Server. For more information on the installation and configuration of the Geomant MWI application, see [“Install Geomant Message Waiting Indicator \(MWI\) application” \(page 44\)](#) and [“Configure Geomant Message Waiting Indicator \(MWI\) application” \(page 45\)](#).

**Note:** The MWI 2007 software is a third-party software developed by Geomant. Information on Geomant and MWI 2007 is provided in this documentation for ease of reference only. Nortel does not sell, warrant or provide operational support for Geomant’s MWI 2007 software product, nor warrant the accuracy of MWI 2007 descriptions contained in this document. Customers using this document are strongly recommended to obtain the most recent MWI 2007 documentation from Geomant.

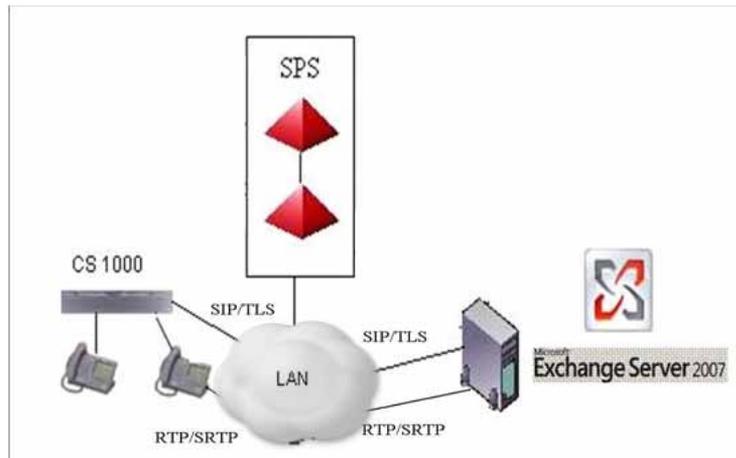

### Multiple Microsoft Exchange Unified Messaging servers on a single network

Multiple Servers can be configured for a single network to ensure the effective handling of potential issues caused by challenges of:

- **Capacity:** Each Microsoft Exchange Unified Messaging Server is capable of supporting a maximum of 200 total concurrent (combination of inbound and outbound) calls. In larger customer networks that need to support a higher volume of concurrent calls, additional Microsoft Exchange Unified Messaging Servers can be configured in the same network so that users can be load-balanced.
- **Redundancy:** An additional Microsoft Exchange Unified Messaging Server can be configured as a redundant server in a network by utilizing the Least Cost Routing Mechanism on the Network Routing Service (NRS) - configuring an additional Microsoft Exchange Unified Messaging Server provides a greater measure of fault tolerance for the services provided, allowing a continuation of those services in the event of system failure
- **Geographical location:** If network systems are located across multiple geographic locations, Microsoft Exchange Unified Messaging Servers can be implemented in such a way that they are both local and specific to each location. Configuring multiple servers in this way would automatically result in load sharing of access to Microsoft Exchange Unified Messaging services by users in the network.

## Operational Considerations

Considerations specific to Microsoft Exchange Server 2007 are as follows:

- The only supported codecs are G711 and G723.
- RFC2833 is required for DTMF digit transmission to the Exchange Server.
- Exchange Server 2007 must always be configured as a static endpoint on the NRS as Registration is not supported.
- The Fax on UM capability is supported.
- Geomant Message Waiting Indicator (MWI) 2007 is a required add-on for MWI functionality.
- Microsoft Outlook 2007 is required.
- Exchange Server 2007 requires the use of x64 processors.
- For the Play on Phone option to function, the default Outlook data file used must be of type **.ost**. If the default Outlook data file is of type **.pst**, the Play on Phone option will not be available.
- Calling a non-Exchange user using the Auto Attendant functionality is not supported by Microsoft Exchange Unified Messaging.
- Due to known issue concerning support of Payload 101 for RFC2833, intermittent DTMF issues will be experienced with PC-based clients.
- Interoperability with BCM/SRG and CS 2100 over H.323 causes speech path issues due to non-handling of RE-INVITE requests by Microsoft Exchange Unified Messaging Server.
- SRTP is not supported on Exchange for CS 1000 Release 5.5 and below.

Considerations specific to the Geomant MWI Application are as follows:

- In a Main Office-Branch Office (MO-BO) environment, MWI functionality is provided in either Normal or Local mode, as MWI is not supported as multiple instances in the same domain.
- In a Geographic Redundant System environment, MWI functionality is provided in either a Primary Call Server (PCS) or a Secondary Call Server (SCS) system, as MWI is not supported as multiple instances in the same domain

Considerations specific to the Communication Server 1000 are as follows:

- Only CDP dialing is supported between the home CS 1000 and the UM Server - users dial in to the home CS 1000 using any configured

dialing plan to access services provided by Communications Server 1000 with Microsoft Exchange Server 2007 Unified Messaging.

- Configuration of the voice mail soft key cannot be changed if there is a combination of CallPilot and Microsoft Exchange Unified Messaging voice mail users on a single node. A recommended deployment solution would be to have CallPilot users and Microsoft Exchange Unified Messaging users associated with separate Line TPS nodes.

The voice mail soft key feature on the phone set assigns a unique key to each of the voice messaging functions.

- While operating with an MCS PC Client, Microsoft Exchange Unified Messaging calls can not be placed on hold.
- The existing limitation on the NRS of multiple endpoints with the same static IP address is not supported. This affects network environments where two CDP domains are configured to use the same Microsoft Exchange Server 2007.
- The IP Softphone 2050 does not support RFC2833; therefore, it can not be used with the Subscriber Access and Auto Attendant features of the Exchange Server 2007.
- If a call originates from an H.323 endpoint (CS 1000/BCM/SRG) and is tandem transferred by the CS 1000 to the Microsoft Exchange Unified Messaging Server using SIP, the Subscriber Access and Auto Attendant feature can only be accessed by voice command and not by keypad (DTMF), as there is no support for RFC2833 over an H.323 network.
- If the far end does not support RFC2833 (with a payload value of 101), the Play on Phone functionality is not supported.
- Calls forwarded by Integrated Call Director (ICD) to Microsoft Exchange Unified Messaging are not supported.
- If a call originates from CS1000 Node A to Node B (TRO is enabled on both the nodes) which has call forward set to UM, same SA/AA DNs must be configured on both the nodes since the call is originated from Node A (and not Node B) in this case.

### **Microsoft Exchange Unified Messaging operational characteristics**

- When a Microsoft Exchange Unified Messaging-enabled user plays back stored voice mail messages, the order of playback begins with the last message recorded. That is, when voice mail has been

received (in order) from User 1, User 2, and User 3, the messages are replayed in the order of User 3, User 2, User 1.

- For a voice mail message that is a reply to an earlier voice mail message, the reply message is played before the playback of the original message.
- If there is only one voice mail message waiting for the user, it is not possible to undelete that voice mail message once it has been deleted.
- Voice mail messages that have been listened to will continue to register as a new message until the next option is used.
- When a user dials the Auto Attendant number (with speech enabled) and does not provide a name, Auto Attendant repeats the prompt for a name three times. After the third prompt, the call is forwarded to the operator automatically.
- Call answering does not work if the call is being redirected across CS 1000 nodes (or any SIP Gateways) with different dial plans. The Unified Messaging fails to answer calls from User A.

For example, there are two users—User A on node\_A, with DP\_A and User B on node\_B, with DP\_B, User A's phone is set to forward all calls to B's DN.

The UM is not able to resolve mailbox for User A between cross-dial plans.

### **Secure Real-Time Protocol support for Microsoft Exchange Server 2007 Unified Messaging**

CS 1000 Microsoft Exchange Server 2007 Unified Messaging for supports Secure Real-Time Protocol (SRTP) in the following scenarios:

- Scenario 1—CS 1000 with SRTP using Exchange Server 2007 for voice mail.
- Scenario 2—CS 1000 interoperating through Multimedia Convergence Manager with Office Communication Server 2007 and Exchange Server 2007.
- Scenario 3—CS 1000 interoperating through Multimedia Convergence Manager with Integrated Office Communication Server 2007 and Exchange 2007.


**ATTENTION**

TLS must be enabled between CS 1000, Exchange Server 2007, and Office Communication Server 2007 for SRTP to function. For more information about TLS, see *Security Management Fundamentals* (NN43001-604). For more information about Multimedia Convergence Manager with Integrated Office Communication Server 2007, see *Nortel Converged Office Fundamentals – Microsoft Office Communications Server 2007* (NN43001-121).

If CS 1000 and Unified Messaging are in different domains served by different DNS servers, each DNS server should have forwarders configured, which contain the domain name and IP of the other DNS server. So, if the first DNS server cannot resolve the FQDN, the DNS server itself would forward the request to the other DNS servers.


**Scenario 1**

This scenario describes the CS 1000 with SRTP using Microsoft Exchange Server 2007 for voicemail.

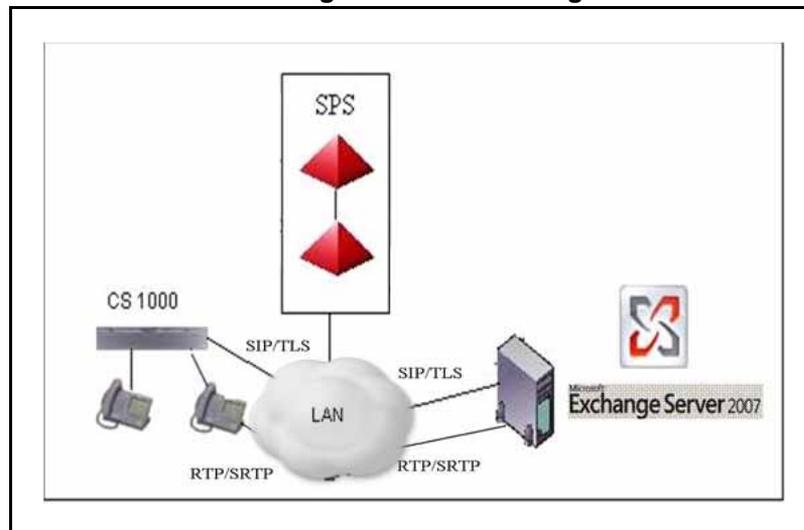**Figure 1****CS 1000 with SRTP using Microsoft Exchange Server 2007 for voicemail****Scenario 2**

This scenario describes how the CS 1000 interoperates through Multimedia Convergence Manager with Office Communication Server 2007 and Exchange Server 2007


**Figure 2**  
OCS/Exchange for Voicemail with SRTP/RTP

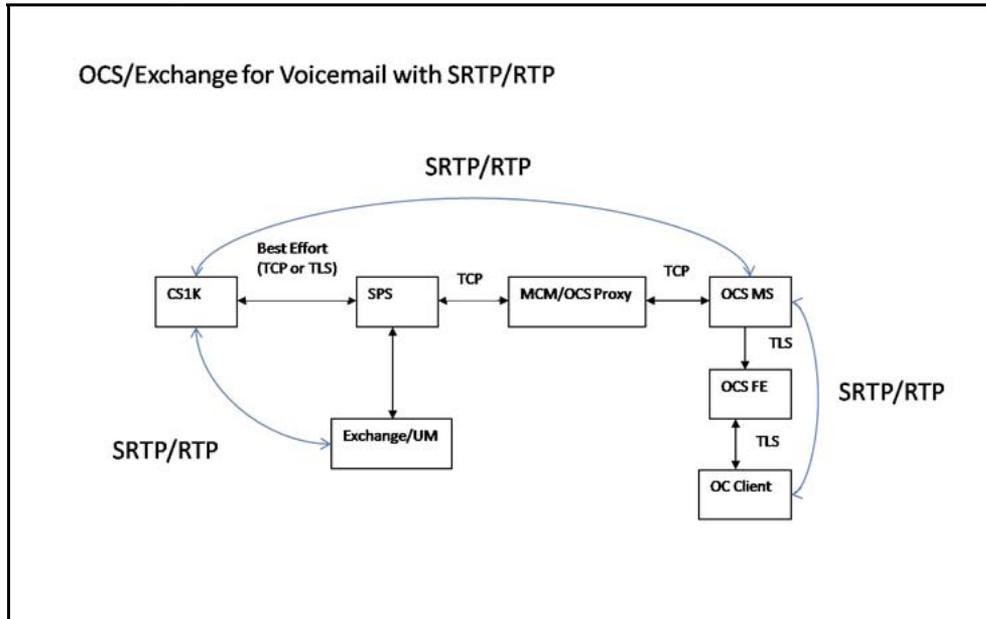

**Scenario 3**

This scenario describes how the CS 1000 interoperates through MCM with Integrated OCS 2007 and Exchange 2007

**Figure 3**  
OCS/Exchange Integrated for Voicemail with SRTP/RTP

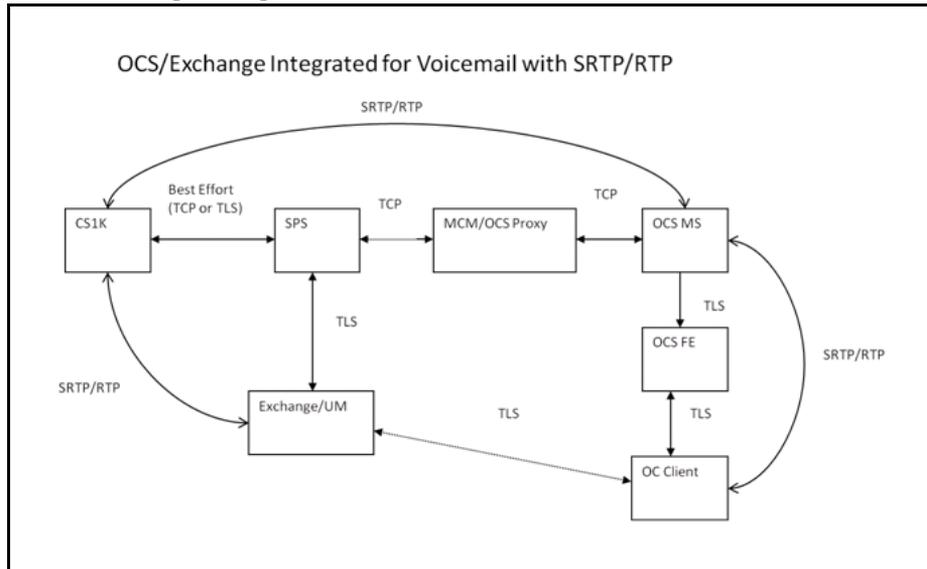

**Feature Interactions**

The following table provides feature interactions.

Table 1

SRTP	Wave 13	RTP/SAVP, 200 OK, using RTP/AVP
best-effort SRTP	Microsoft Exchange 2007 Service Pack 1. VOIP Security: Secured	200 OK, using RTP/SAVP
best-effort SRTP	Microsoft Exchange 2007 Service Pack 1. VOIP Security: SIP Secured	503 Services Not Available
best-effort SRTP	Microsoft Exchange 2007 Service Pack 1. VOIP Security: Unsecured	503 Services Not Available

### CS 1000 Interaction with Exchange 2007 Service Pack 1 and Exchange 2007 Wave 14

In order for CS 1000 and Exchange to communicate through SRTP, Element Manager must be configured to indicate if VOIP Security is configured as "Secured". The following scenario is common between a Best Effort CS 1000 SIP INVITE to Exchange 2007 Service Pack 1 and Exchange 2007 Wave 14.

(1) A Best Effort offer to Exchange with VOIP Security: Secured

```
v=0
o=- 122 3 IN IP4 192.168.117.230
o=- 122 3 IN IP4 192.168.117.230
s=-
t=0 0
c=IN IP4 0.0.0.0
m=audio 5200 RTP/AVP 0 8 101 111
a=tcap:1 RTP/SAVP
a=crypto:1 AES_CM_128_HMAC_SHA1_80
inline:NatI39V92Sgt0WOOhzMIqBZJlb0IkZD7vykD
OuLJ|2^31|2776763240:4
a=crypto:2 AES_CM_128_HMAC_SHA1_80
inline:NatI39V92Sgt0WOOhzMIqBZJlb0IkZD7vykD
OuLJ|2^31
a=rtpmap:101 telephone-event/8000
a=fmtp:101 0-15
a= sendrecv
a=pcfg:1
t=1
```

```
Below is a sample answer to Offer 1:v=0
o=- 128 2 IN IP4 192.168.116.230
s=-
t=0 0
c=IN IP4 0.0.0.0
m=audio 5200 RTP/SAVP 0 8 101 111
a=crypto:1 AES_CM_128_HMAC_SHA1_80
inline:KY2o2u8S0tKrnai4YO0STMDvnquDOEPLWbczkHJZ|2^31|2776763
240:4
a=rtpmap:101 telephone-event/8000
a=fmtp:101 0-15
a=sendrecv
```

From the sample above, the initial Best Effort offer: it supports the following Media Profiles: RTP/SAVP and defaults to RTP/AVP if RTP/SAVP cannot be used. Exchange responds with RTP/SAVP to indicate its usage of SRTP and does not include the media level attribute acfg.

### Limitations

Secure Real-Time Protocol support for Microsoft Exchange Server 2007 Unified Messaging limitations

- CS 1000 has the capability to understand and process the acap attribute in an incoming offer but does not make use of it in the response or in a new offer as defined in Nortel's SRD Section 16.6.2.[1]
- When CS 1000 is used with Exchange 2007 that has VOIP Security set as Secured, all mailboxes associated with that secured Dialling Plan are treated with a Media Security Class of Service of Always Secured. When VOIP Security is configured as Secured, it requires the use of TLS for SIP Signalling between Exchange and CS 1000. Any IP or digital sets that do not support SRTP are not compatible with Exchange if VOIP Security is configured as Secured. It is unknown at this time what Exchange Unified Messaging 2007 Wave 14 limitation are
- Exchange 2007 SRTP does not support MKI or <"from", "to"> rekeying, however since the typical lifetime of RTP and RTCP packets is  $2^{31}$  this means supporting key update is unnecessary.

Exchange 2007 does not renegotiate a new security context and uses the current security context for it to receive and send stream during a SIP REINVITE.

**Table 2**  
**Features not supported with Exchange 2007 SP 1 when SRTP and TLS are enabled**

Action	Supported
Call on Hold	Not Supported
Call Transfer (blind)	Not Supported
Call Transfer (consultative)	Not Supported
Call Conference	Not Supported

### Exchange 2007 Unified Messaging SP1 and Wave 14

The patch to negotiate best effort SRTP does not impact previous limitations between CS 1000 5.x and Exchange 2007 Unified Messaging SP1 and Wave 14.

### CS 1000 set configuration

This section details appropriate set configuration to provide operation for Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging.

Required class of service configurations are as follows:

- **CFXA (Call Forward External):** Allowed
- **FNA (Call Forward No Answer):** Allowed
- **HTA (Hunting):** Allowed
- **CLS (Trunk: Call Access Restriction):** Unrestricted
- **MWA (Message Waiting Indicator):** Allowed

Both **FDN (Call Forward No Answer DN)** and **Hunt (Hunt DN)** must be set to the value for the configured **Subscriber Access DN**.

### SIP provisioning guidelines

This section details the SIP provisioning requirements for operations on Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging and/or via overlay.

For references on the CS 1000 configurations, consult following NTPs:

1. CS 1000 Input/Output: Administration: *NN43001-611*.
2. CS 1000 Element Manager System Reference - Administration: *NN43001-632*.

**Procedure 1**  
**Configuring SIP/Virtual Trunks, Route, Dialplan, Route entries and Endpoints for CS 1000 to interoperate with Exchange/UM using Element Manager and/or via overlay.**

Step	Action
1	Create a new virtual D-Channel to the Node that registered in the Exchange Server - LD 17.
2	Create Virtual Route (RDB) using the D-Channel (LD 16) with following parameters: "PCID=SIP, INAC=Yes, CTYP-ukwn."
3	Create Virtual Trunks for the Route previously created - LD 14.
4	Create DMI(DGT), with no deletion or insertion - LD 86.
5	Create RLB using Route and DMI previously created in steps #2 and #4 - LD 86
6	Create CDP Distant Steering Code to route the call to the Exchange Server - LD 87.
7	Create ACD DN's with NCFW configured for both Subscriber Access and Auto Attendant numbers - LD 23.
8	For all subscriber's phone sets, set FDN/HUNT to Subscriber Access number and add the following features in CLS (LD 11): FNA, HTA, HFA, WTA, FBA, MWA, SFXA.

---

--End--

---

**Procedure 2**  
**Configuring SIP/Virtual Trunks, Route, Dialplan, Route entries and Endpoints for CS 1000 to interoperate with Exchange/UM using NRS:**

Step	Action
1	Add the Exchange Server and its IP address as a Static endpoint on NRS; and fill in the field "Static endpoint address" with the Exchange Server IP.
2	Add Routing Entries for Exchange Server gateway endpoint: DN type: Private Level 0 regional (CDP Steering Code) DN prefix: the Distant Steering Code

---

--End--

---

**Assumptions**

- Call model and traffic rate calculations are based on the assumptions provided by Microsoft for a typical heavy user, as described at the

following URL: <http://msexchangeteam.com/archive/2006/08/14/428677.aspx>

- A single Microsoft Unified Messaging server can have up to 3000 heavy users associated with it.
- All Microsoft Unified Messaging messages are received by telephone using an SIP Trunk, and not using Microsoft Exchange Client (which does not use an SIP Trunk).
- The use of Auto Attendant for Thru-Dial and other custom voice menu services makes the following assumptions:
  - Menu selection and call transfer time is 30 seconds, with a completed call duration of 180 seconds.
  - Busy Hour (BH) Auto Attendant usage is 0.35 calls per hour for each Microsoft Unified Messaging user.
- Auto Attendant operation requires the usage of two SIP trunks, which remain in use for the duration of the call.
- If Microsoft Unified Messaging system usage differs from the call model described for the purpose of SIP trunk table calculations, it is the responsibility of the customer to monitor the actual usage of the system and ensure that there are sufficient SIP trunks available for use.

Number of UM Users	Typical BH Call Duration (seconds)	Typical BH CCS	Erlangs (ccs/36)	Number of SIP Trunks (Erlang B P05 Grade of Service)	Number of SIP Trunks (Erlang B P01 Grade of Service)	Number of SIP Trunks (Erlang B, Non-blocking)
50	15000	150	4.17	8	10	24
100	30000	300	8.33	13	16	33
200	60000	600	16.67	22	26	49
500	150000	1500	42	48	55	89
1000	300000	3000	83	88	99	147
2000	600000	6000	167	170	187	254
3000	900000	9000	250	250	273	355



---

# Configuration of Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

---

For the tasks and procedures associated with configuring Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging, please refer to the sections that follow:

- “Configure a new user mailbox for Microsoft Exchange Unified Messaging” (page 26)
- “Enable a new user mailbox for use with Microsoft Exchange Unified Messaging” (page 32)
- “Configure a new Dial Plan for Microsoft Exchange Unified Messaging” (page 35)
- “Configure the Operator Assistance feature” (page 42)
- “Install Geomant Message Waiting Indicator (MWI) application” (page 44)
- “Configure Geomant Message Waiting Indicator (MWI) application” (page 45)
- “Configure Microsoft Exchange Unified Messaging in CS 1000 Element Manager” (page 49)
- “Allowing calling party numbers to update while leaving message” (page 56)

- “Disable a user mailbox” (page 57)
- “End user experience scenarios” (page 65)


**Note:** Throughout this document, screen captures of third-party software are included for the purposes of illustration only. While the screen captures in this document are believed to be accurate and reliable in their depiction of third-party software used in conjunction with this feature, the information is subject to change without notice. Therefore, Nortel presents all third-party screen captures in this document without express or implied warranty with regard to their complete accuracy.

## Configure a new user mailbox for Microsoft Exchange Unified Messaging


The following section details the required steps for the configuration of a Microsoft Exchange Unified Messaging mailbox.

### Configuring a user mailbox for Microsoft Exchange Unified Messaging

Step	Action
1	From the Exchange Management Console, select <b>Recipient Configuration</b> and right click on <b>Mailbox</b> . Select <b>New Mailbox...</b> to start the New Mailbox Wizard.

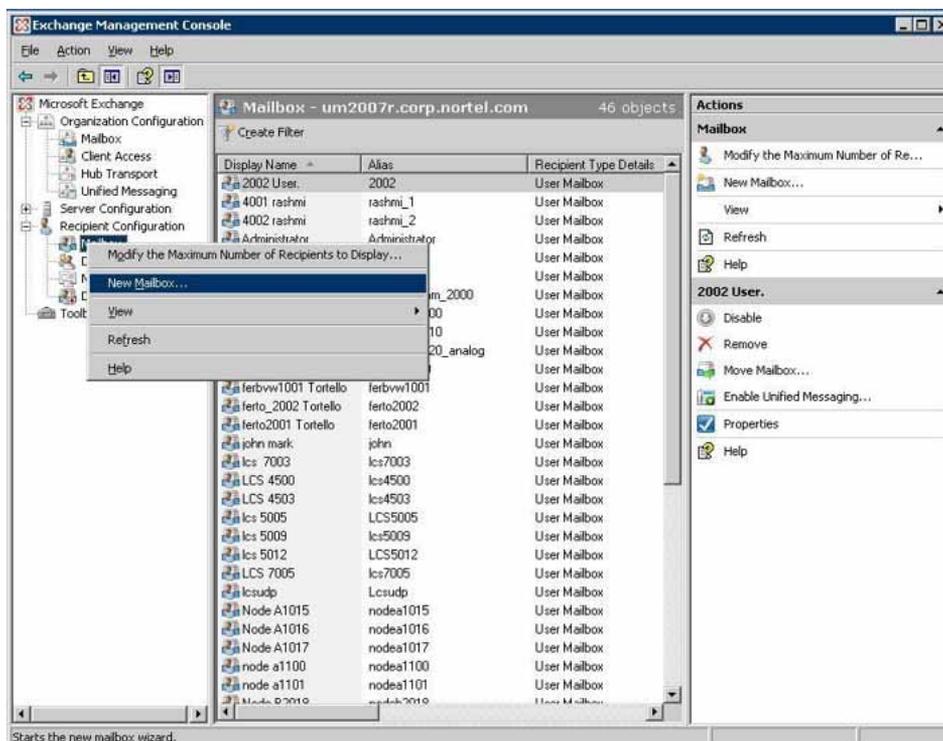


- 2 The opening screen for New Mailbox Wizard appears. Select **User Mailbox** and click **Next**, as shown in the following figure:

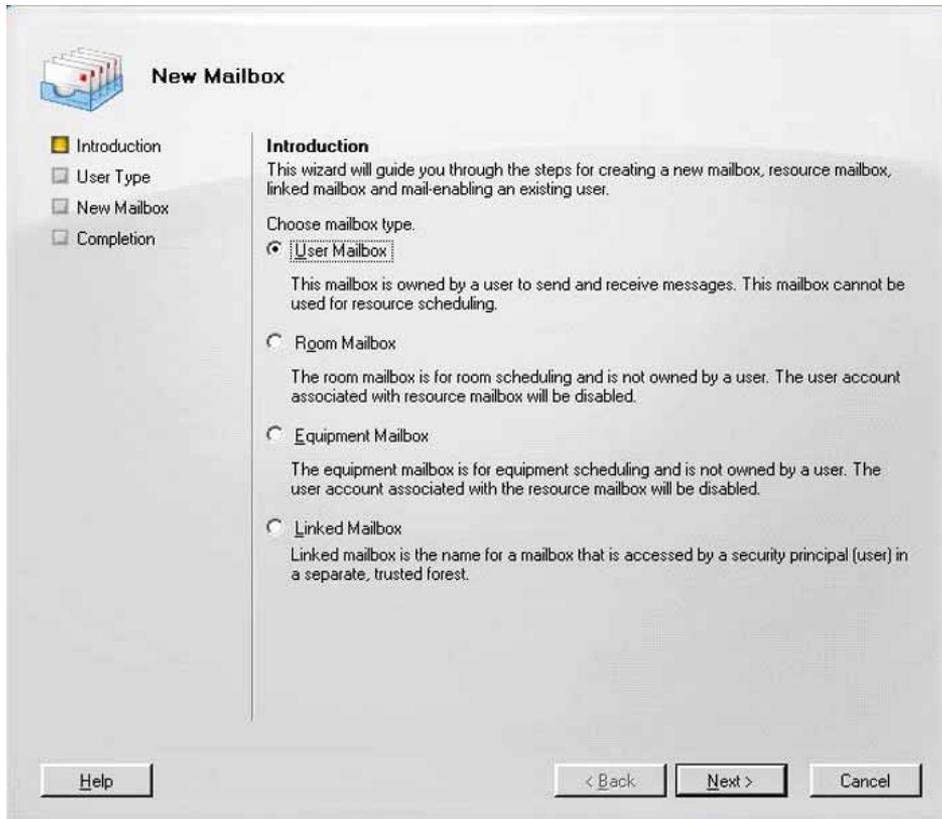

- 3 Select **New user** and click **Next**, as shown in the following figure:



4 Enter account information for the mailbox user, as appropriate, as shown in the following figure:

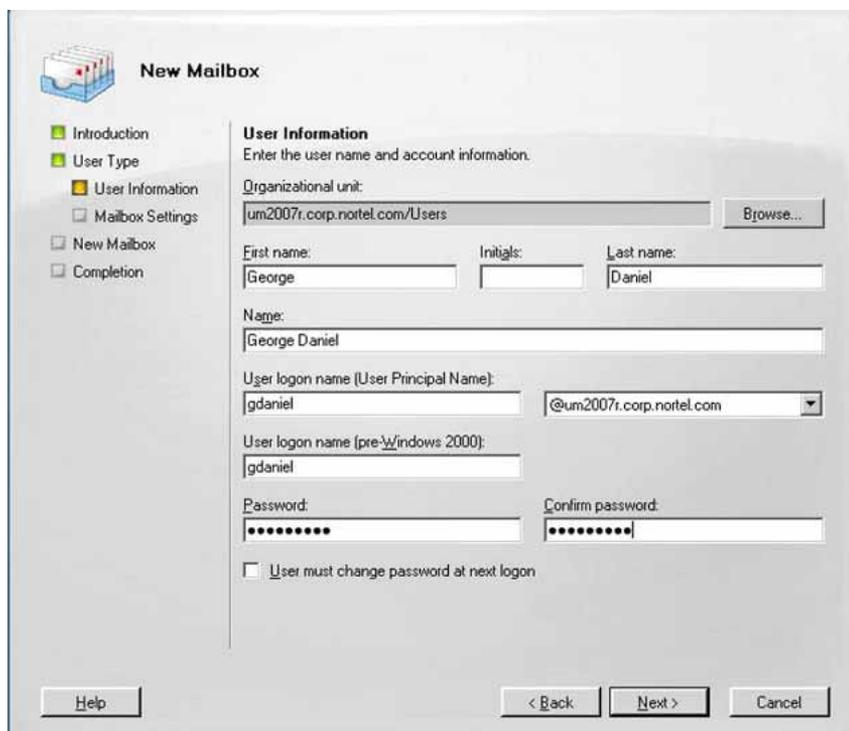

- 5 Click **Next** to continue
- 6 Enter the alias for the mailbox user, and select the mailbox location and policy settings, as shown in the following figure.

**New Mailbox**

- Introduction
- User Type
  - User Information
  - Mailbox Settings**
- New Mailbox
- Completion

**Mailbox Settings**  
Enter the alias for the mailbox user, and then select the mailbox location and policy settings.

Alias:

Server:

Storage group:


Mailbox database:

Managed folder mailbox policy:


Exchange ActiveSync mailbox policy:

 Messaging records management is a premium feature and requires an Exchange Enterprise Client Access License (CAL).

- 7 Click **Next** to continue.
- 8 The Configuration Summary for the current user mailbox is displayed, as shown in the following figure. Review for accuracy, and click **New** to create the user mailbox.

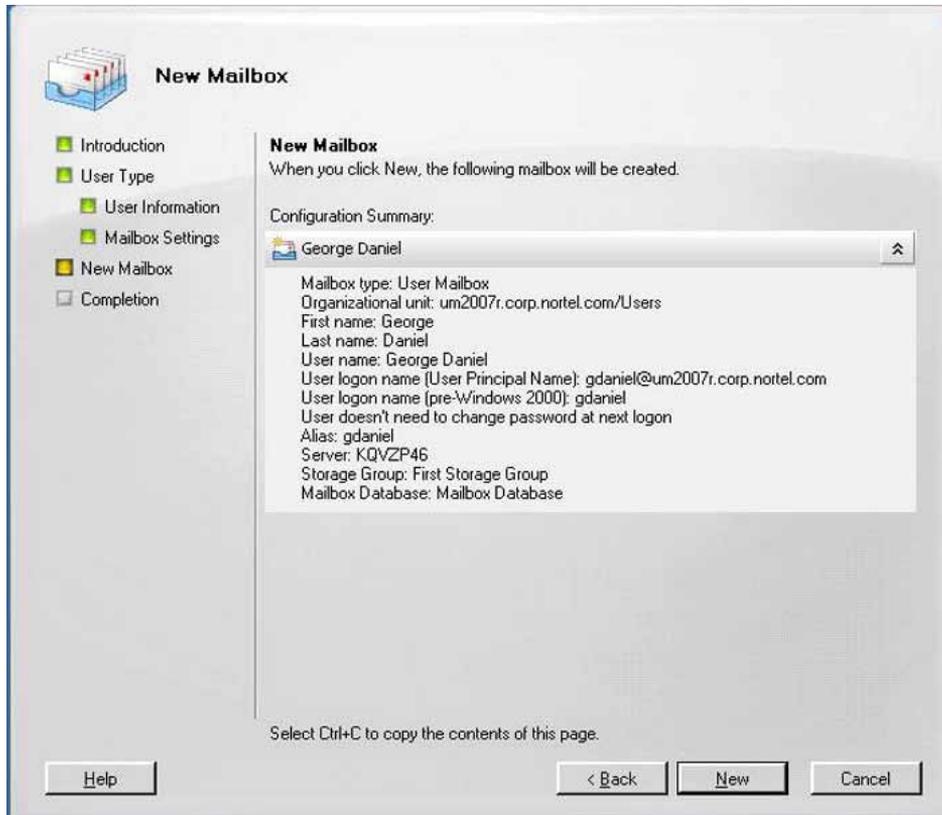

- 9 The completion screen of the New Mailbox Wizard appears. Click **Finish** to exit, as shown in the following figure:

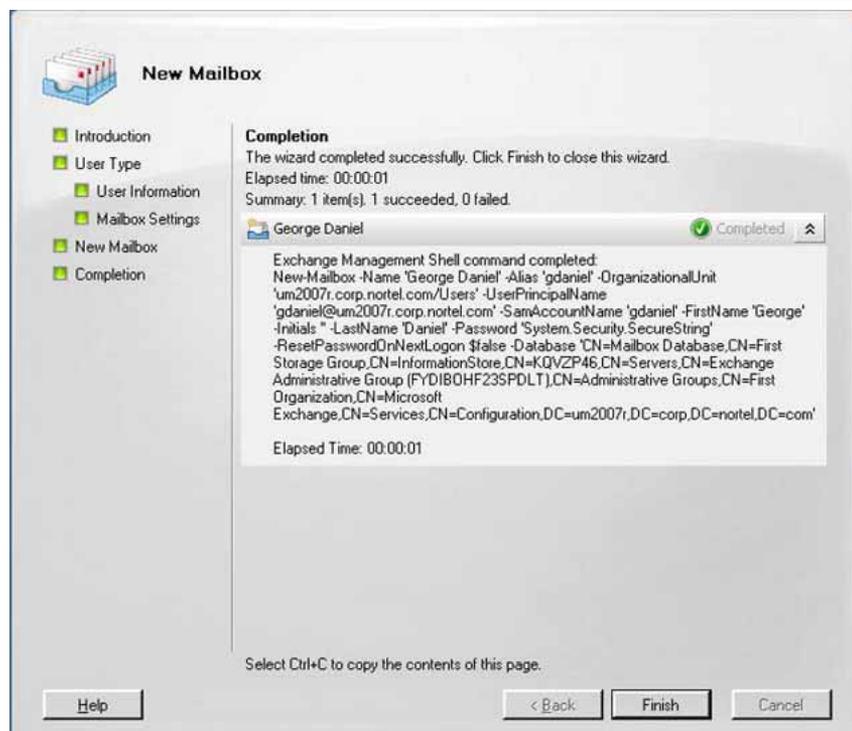


--End--

## Enable a new user mailbox for use with Microsoft Exchange Unified Messaging

The following section details the required steps for the enabling an existing user mailbox for use with Microsoft Exchange Unified Messaging.

### Enabling a user mailbox for use with Microsoft Exchange Unified Messaging

Step	Action
1	From the Exchange Management Console, select <b>Recipient Configuration &gt; Mailbox</b> . Right click the specific user mailbox to be enabled and select <b>Enable Unified Messaging</b> , as shown in the following figure:

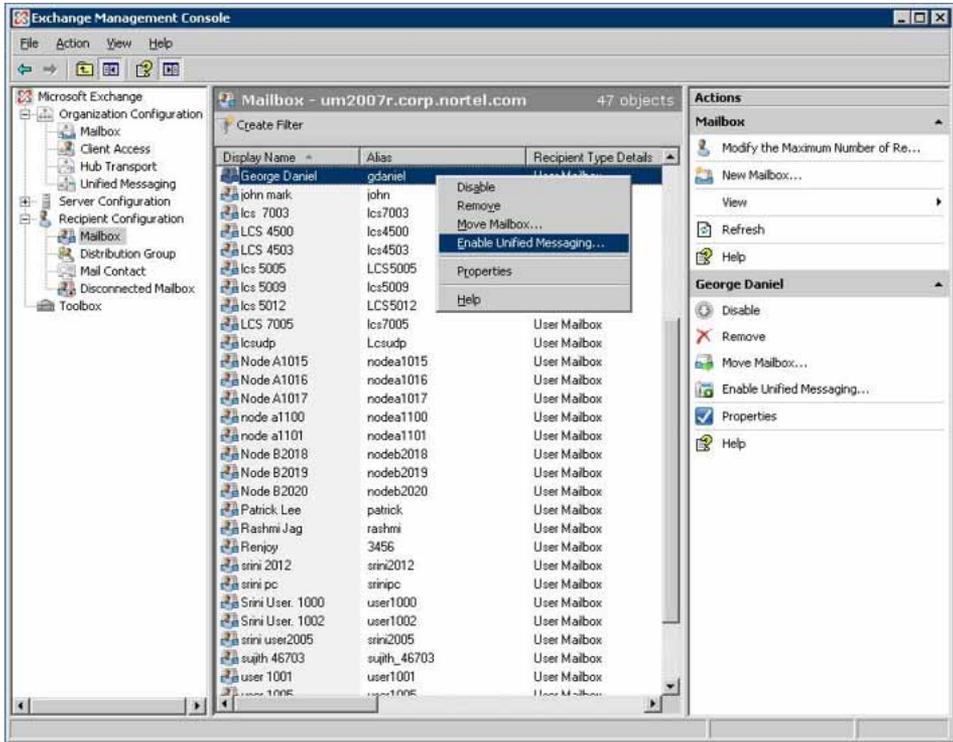


2 The Enable Unified Messaging Wizard appears, as shown in the following figure. Configure the Unified Messaging Mailbox Policy and PIN options, as appropriate for use on your network, and click **Enable**.

### 34 Configuration of Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

---



- 3 The completion screen of the Enable Unified Messaging Wizard appears. Click **Finish** to exit, as shown in the following figure:

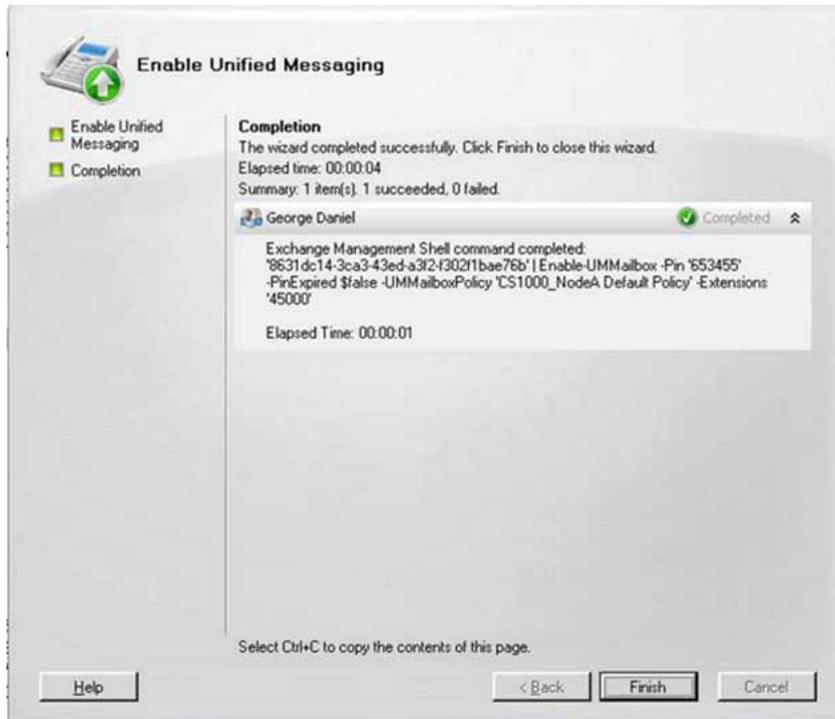


---

--End--

---


## Configure a new Dial Plan for Microsoft Exchange Unified Messaging

The following section details the required steps for the configuration of the Microsoft Exchange Unified Messaging Dial Plan.

### Configure the Microsoft Exchange Unified Messaging Dial Plan


Step	Action
1	From the Exchange Management Console, select <b>Organization Configuration &gt; Unified Messaging &gt; New UM Dial Plan</b> . The New UM Dial Plan screen appears, as shown in the following figure:

**Figure 4**  
**New UM Dial Plan screen**

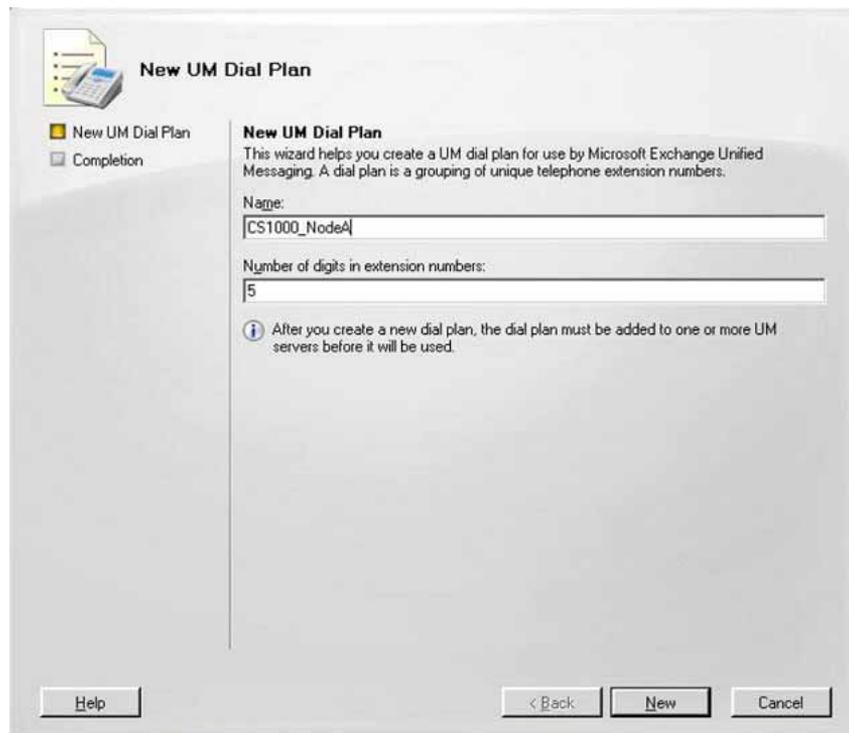


- 2 Enter the Dial Plan name and the number of digits used for the user extension expected. Click **New**. Right-click the newly-created Dial Plan and select **Properties**. The Dial Plan Properties screen appears.
- 3 Click the **General** tab. From the **VoIP security** drop-down list, select Unsecured, as shown in the following figure:

**Figure 5**  
**Dial Plan General Tab**

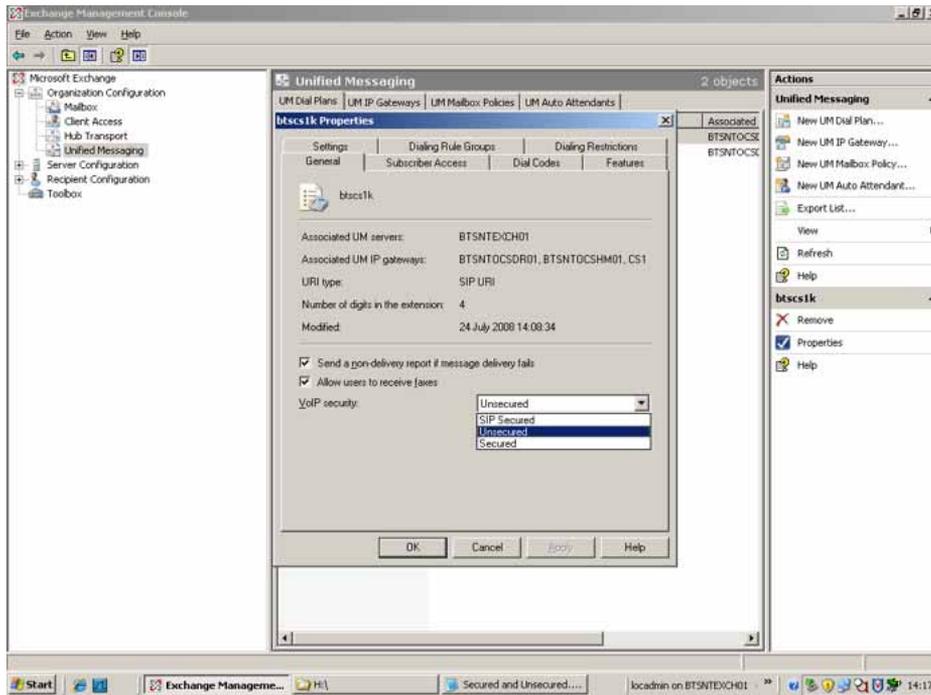


- 4 Click the **Subscriber Access** tab. Specify the Welcome Greeting, Informational announcement value, and the Subscriber Access and Call Answer number to be associated with the new Dial Plan. Click **Apply** and then **OK** to accept, as shown in the following figure:


**Figure 6**  
**Dial Plan Properties screen**

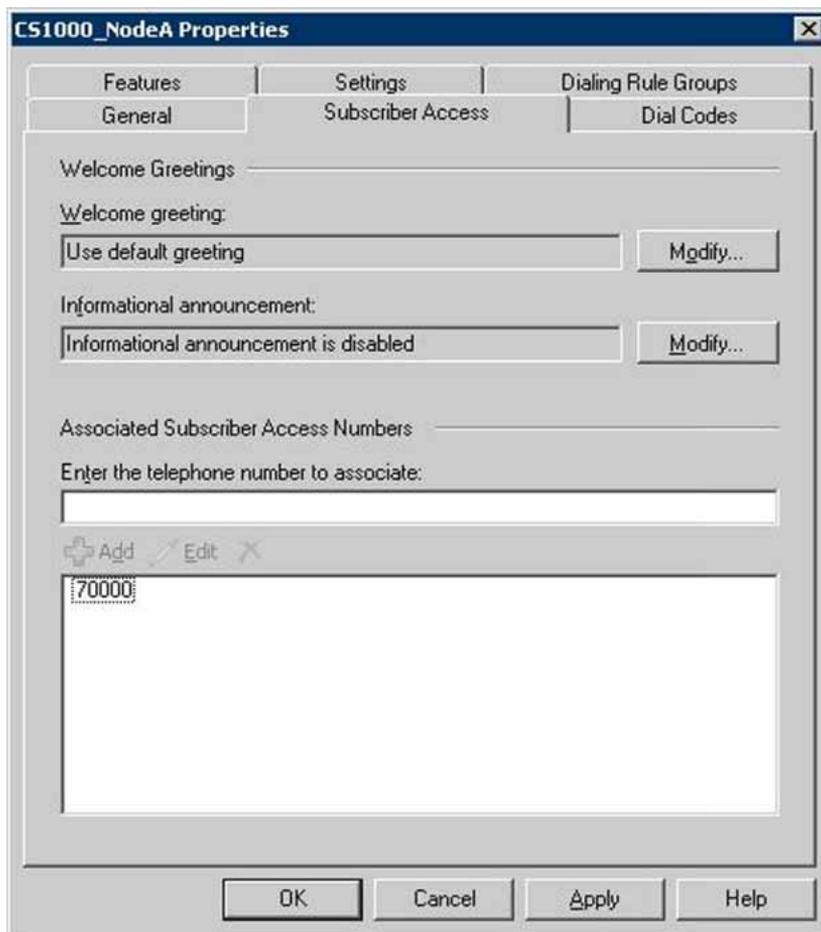

- 5 Select **Server Configuration > Unified Messaging**, and right-click the server name for which your newly-created Dial Plan is intended. Select **Properties**, as shown in the following figure:

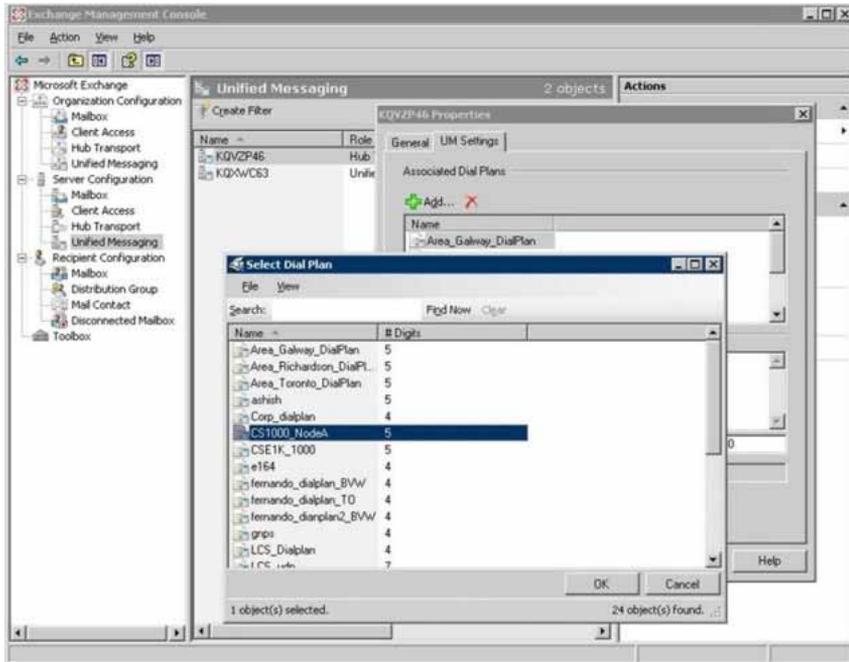


6 Add the configured Dial Plan under the **UM Settings** tab, as shown in the following figure:

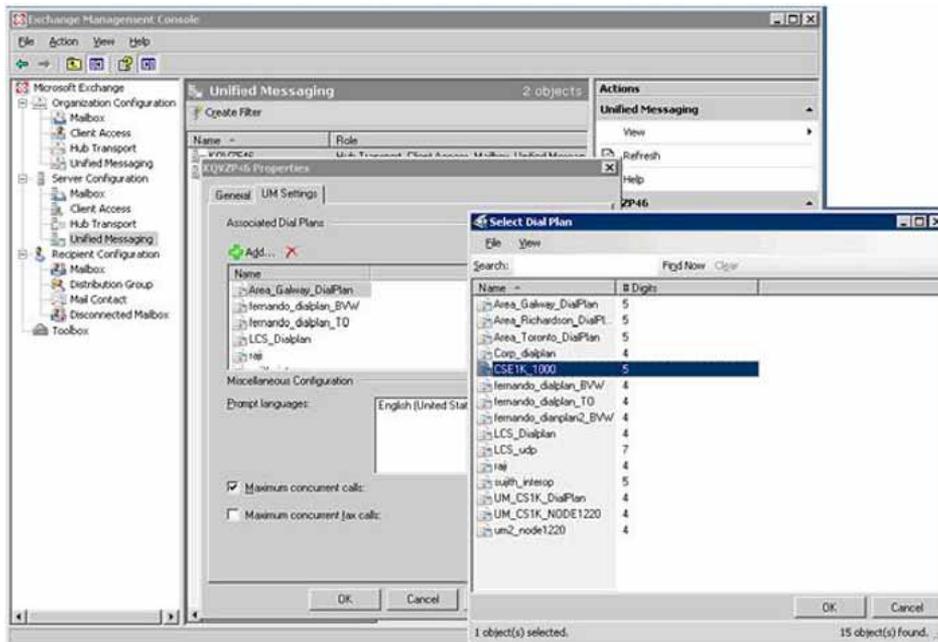


7 Click **OK**.

- 8 Specify the SIP Gateway name and IP address (Signaling Server node address) for the current Dial plan, as shown in the following figure:

Figure 7 Configuration screen for new UM IP Gateway

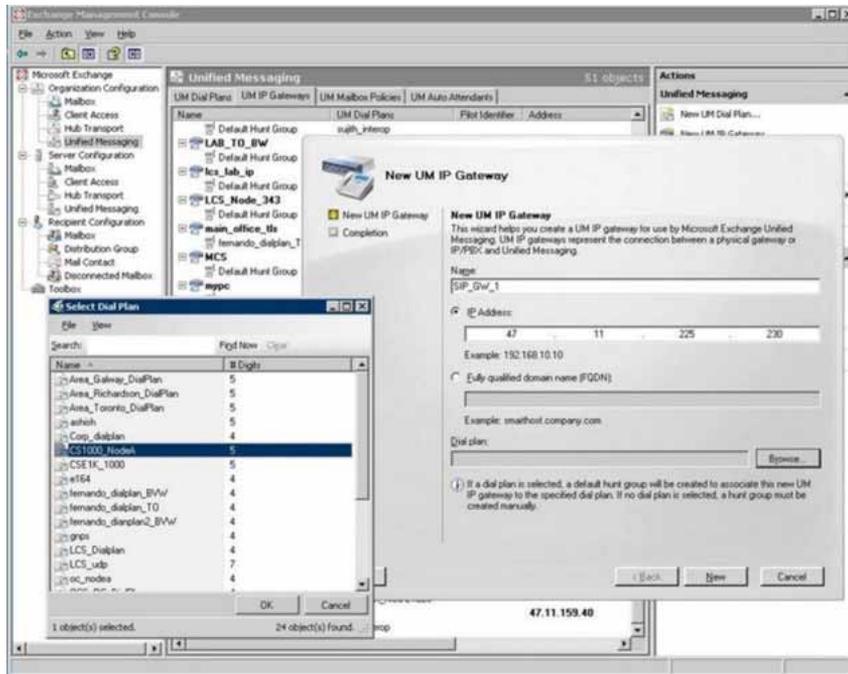

- 9 Specify Auto Attendant name and number for the new UM Dial plan. The Auto Attendant Configuration number is provided for the UM Dial Plan configured, as shown in the following figure:

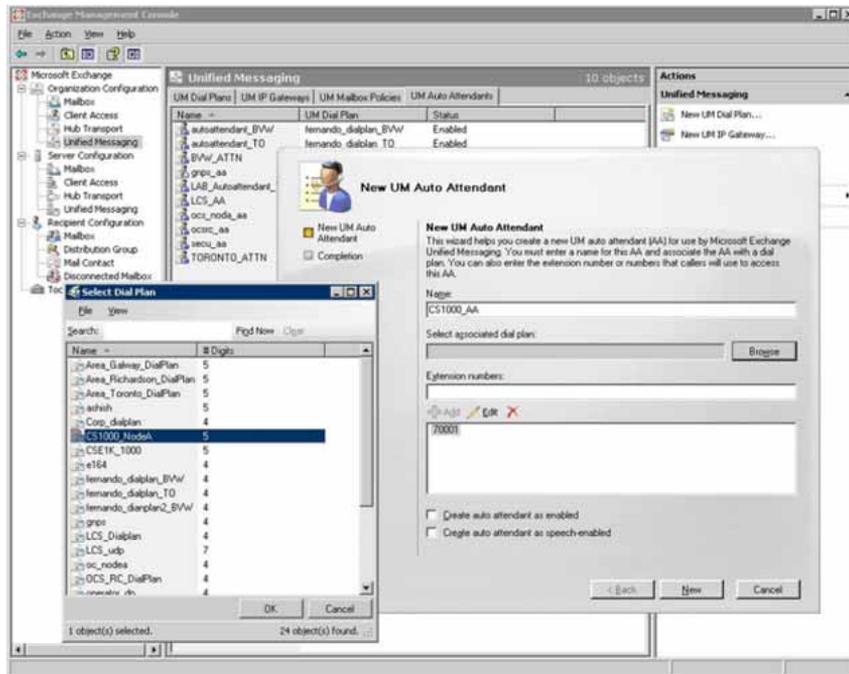

- 10** Allow users to receive fax under the dialing plan:
- In the Exchange Management Console, expand the Organization Configuration node, and then click the Unified Messaging node.
  - On the UM Dial Plans tab, select the UM dial plan for which you want to allow users associated with the dial plan to receive fax messages, and then click Properties in the action pane.
  - On the dial plan Properties page, on the General tab, select the check box next to Allow users to receive faxes.
  - Click OK to save your changes.
- 11** Allow the user to receive fax under user profile:
- In the Exchange Management Console, expand the Recipient Configuration node, and then click the Mailbox node.
  - In the result pane, select the user mailbox that you want to modify.
  - In the action pane, click Properties.
  - On the Mailbox Features tab, click Unified Messaging, and then click Properties.
  - On the Unified Messaging Properties page, select the check box next to Allow the user to receive faxes.
  - Click OK to save your changes.

- 12 On the Exchange Server, enable inband fax detection:
  - Go to C:\Program Files\Microsoft\Exchange Server\Bin
  - Open file globcfg.xml: <EnableInbandFaxDetection>>false</EnableInbandFaxDetection>
  - Change to: <EnableInbandFaxDetection>>true</EnableInbandFaxDetection>
- 13 Restart the Exchange UM service.


--End--

## Configure the Operator Assistance feature


To configure the Operator Assistance feature to be used with a configured UM Dial Plan, perform the tasks in the following procedure:

### Configure the Operator Assistance feature

Step	Action
1	After providing the operator assistance number in Dial Plan and Mailbox users, open the Exchange Management Shell.
2	Right-click on the dial plan, and select Properties from the list of the available options. Optionally, you can click on the properties menu in the action pane as shown in the following figure:

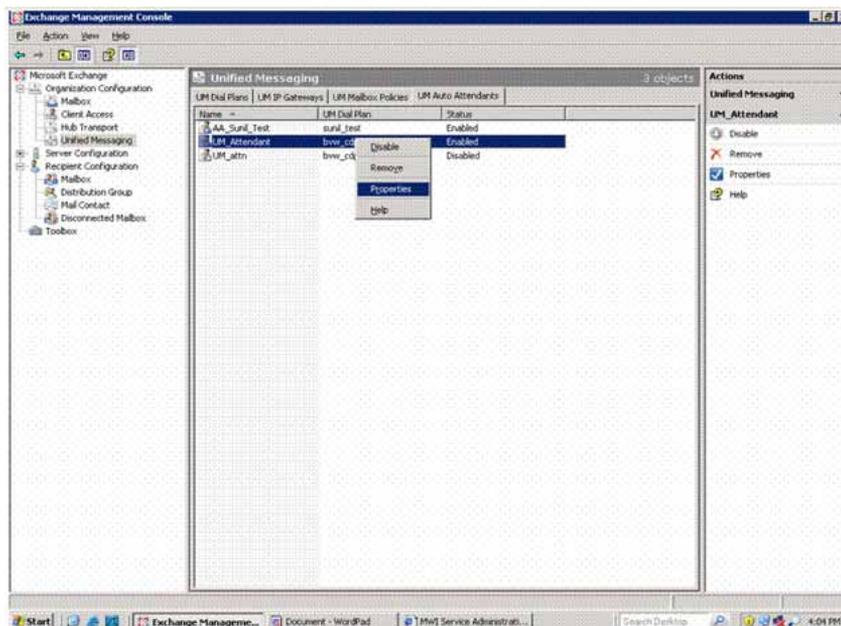


The Attendant properties window appears:

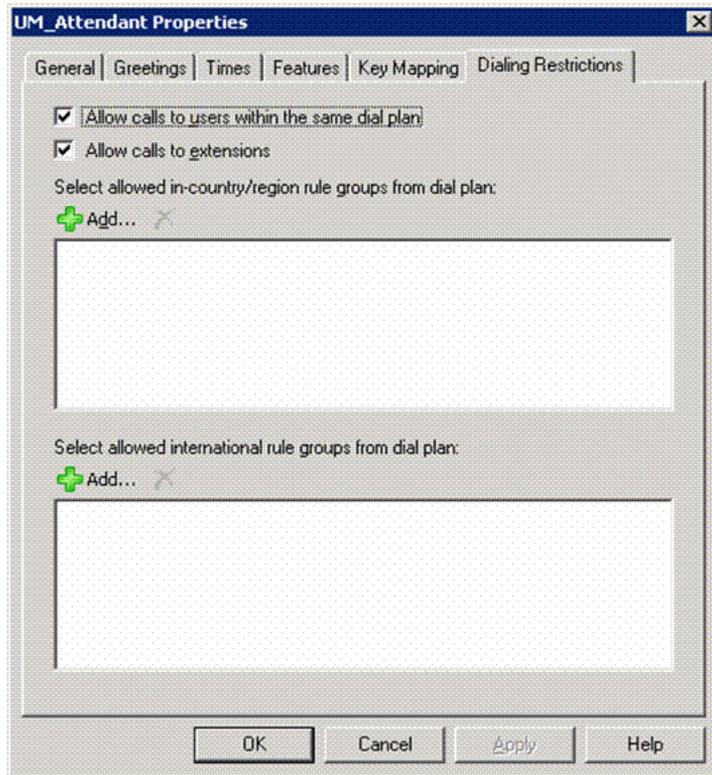

Select **Allow calls to extensions** under **Dialing Restrictions** and click **OK**.

- 3 Add an attendant number on the properties window, under the **General** tab, enter the DN number for the auto attendant, click **Add** and then **OK** to add:

## 44 Configuration of Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

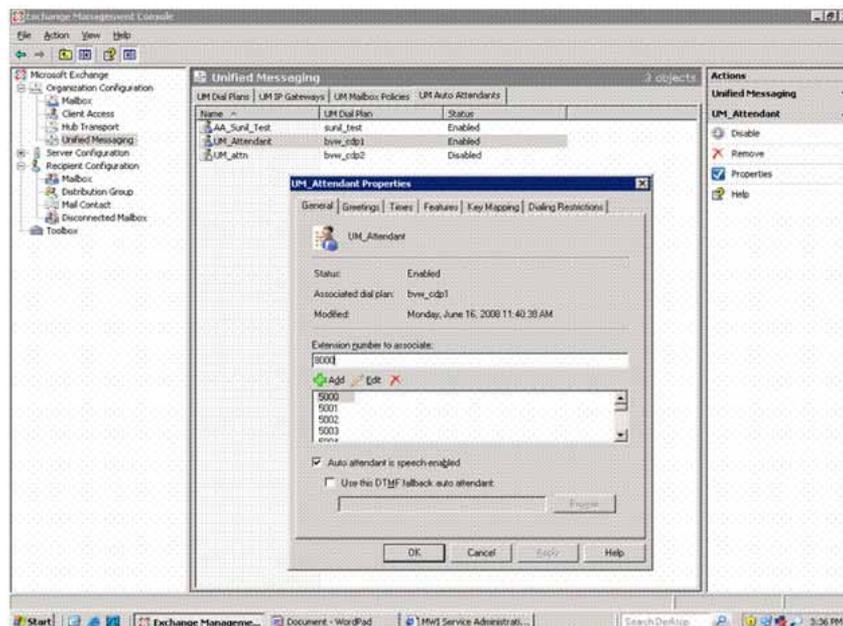

After dialling the number, the prompts for Auto Attendant service are heard by the user.

--End--

## Install Geomant Message Waiting Indicator (MWI) application

**Note:** The MWI 2007 software is a third-party software developed by Geomant. Information on Geomant and MWI 2007 is provided in this documentation for ease of reference only. Nortel does not sell, warrant or provide operational support for Geomant's MWI 2007 software product, nor warrant the accuracy of MWI 2007 descriptions contained in this document. Customers using this document are strongly recommended to obtain the most recent MWI 2007 documentation from Geomant.

The Message Waiting Indicator (MWI) functionality of Microsoft Exchange Unified Messaging is not provided through Exchange Server 2007. Geomant MWI, a third-party vendor application, is an add-on application for use with Exchange 2007 Server, and is used to provide all notifications of new incoming messages to user telephones associated with a voice mail account on the Exchange Server 2007.

Each implemented instance of Geomant MWI is capable of providing message waiting indications for 2500 users, and has a 10 minute built-in timer for user notification time-out purposes.

Detailed procedures to be used in the installation of the Geomant MWI application are available for download at <http://mwi2007.com> > downloads > documentation package.

**Note:** Before attempting to install Geomant MWI, be aware of the installation prerequisites, as described by the following:

- **Exchange Auto Discovery Feature must be configured on the domain. Please refer to the Setting up E12 Autodiscover () document present in the downloaded documentation package.**
- **As part of Exchange Auto Discovery configuration, a Certificate Authority Server must be configured in the domain. For installation instructions, please refer to <http://www.tacteam.net/isaserverorg/vpnkitbeta2/installenterprise.htm>.**
- **On the Active Directory used to start the MWI service, a user must be configured with permissions similar to that of the Administrator.**

### Installation of Multiple MWI applications

It is possible to install and configure multiple instances of the MWI application on the same network, to accommodate a larger number of users. Users configured on the Exchange Server are distributed between the available instances of the MWI application to provide effective MWI notification.

**Note:** Due to a limitation of the Geomant MWI application, a user cannot be configured to receive MWI notifications from more than one MWI application. A document describing the steps for a manual installation of the MWI application software can be found in the documentation package downloaded at <http://mwi2007.com> > downloads > documentation package.

## Configure Geomant Message Waiting Indicator (MWI) application


Following the successful installation of the MWI application, you are able to configure the MWI application by means of the Geomant MWI Service Web page.

The Geomant MWI Service Web page can be opened on the local server using the link <https://localhost/MWISrvAdmin/>.

**Note:** The Geomant MWI Service Web page can also be accessed from a different (non-local) system by replacing **localhost** with the IP Address of the server on which the MWI application has been installed.

The Geomant MWI Service Web page appears as shown in the following figure:

**Figure 8**  
**Geomant MWI Service Web page**

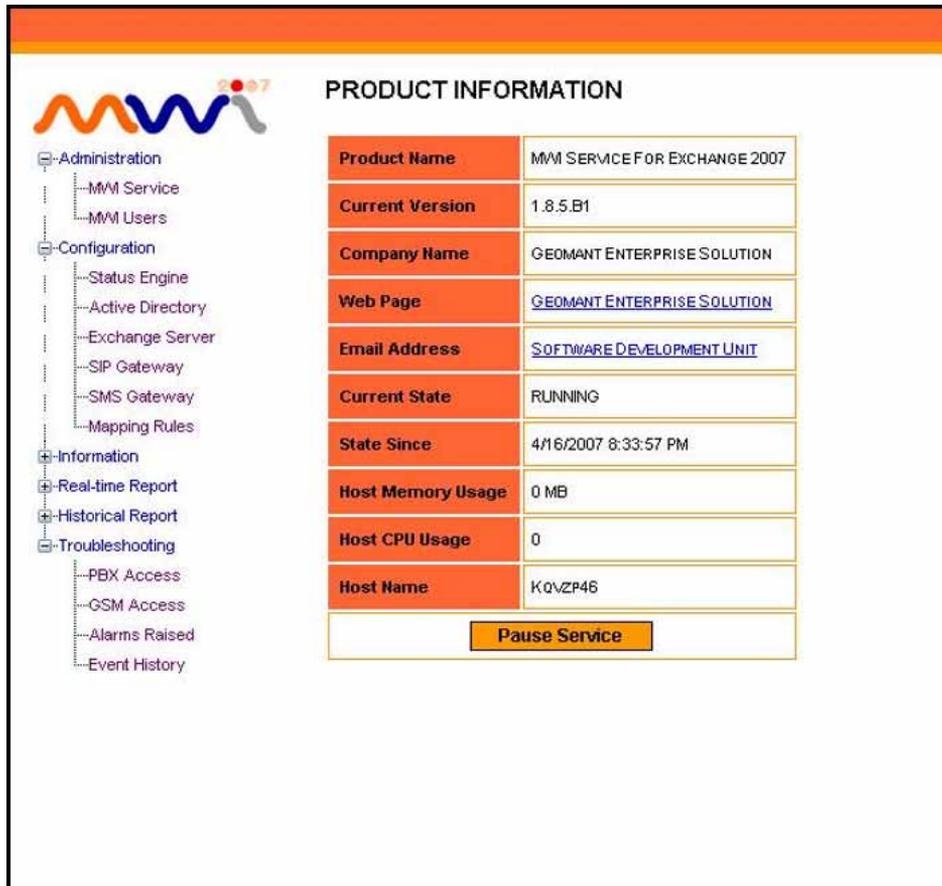

To configure MWI licenses for each SIP gateway through which MWI notifications will be sent, click on the **SIP Gateway** option of the Geomant MWI Service Web page (as shown in the preceding figure). Enter the appropriate values for each SIP gateway to be used. The SIP Gateway configuration screen appears as shown by the following:

**Figure 9**  
**SIP Gateway configuration screen**

Display Name	Transport	Gateway Port	MWI Ports	Subscription	Local Port
AREA_TORONTO_IP_GW	TCP	5060	0	<input type="checkbox"/>	5060
AREA_RICHARDSON_IP_GW	TCP	5060	0	<input type="checkbox"/>	5060
AREA_GALWAY_IP_GW	TCP	5060	0	<input type="checkbox"/>	5060

The installed MWI service can be enabled and configured on a per-user basis with the SIP gateway to which the associated MWI notifications are to be sent. To configure MWI for each user, click the **MWI Users** option on the Geomant MWI Service Web page, which causes the Unified Messaging User Properties screen to display, as shown by the following:

**Figure 10**  
**Unified Messaging User Properties screen**

**UNIFIED MESSAGING USER PROPERTIES**

<b>Distinguished Name</b>	CN=USER 2005,CN=USERS,DC=UM2007R,DC=CORP,DC=NORTEL,DC=COM
<b>Display Name</b>	USER 2005
<b>Logon Name</b>	USER2005
<b>Email Address</b>	USER2005@UM2007R.CORP.NORTEL.COM
<b>Email WebDAV Access</b>	HTTPS://MKQVZP46.UM2007R.CORP.NORTEL.COM/EXCHANGE/USER2005 <small>WebDAV access to the user's mailbox</small>
<b>Email WebService Access</b>	HTTPS://MKQVZP46.UM2007R.CORP.NORTEL.COM/ews/EXCHANGE.ASMX
<b>Extension</b>	2005
<b>GSM Number</b>	[UNSPECIFIED]
<b>Gateway Port</b>	0
<b>Messages Timestamp</b>	4/17/2007 8:25:52 PM
<b>Voice Messages</b>	2
<b>Last Known Voicemail</b>	4/16/2007 8:35:33 PM
<b>Lamp Status</b>	ON
<b>Lamp Status Timestamp</b>	4/17/2007 8:25:15 PM
<b>Last Event Timestamp</b>	4/17/2007 8:10:02 PM
<b>Subscription Id</b>	A2C9092E-D111-4569-8ECD-AED402C5ED27
<b>Event watermark</b>	AQAAAEMLGE+EGN5JSFOQSCURW/AMGAAAAAAAAAAE=
<b>SIP Gateway</b>	node_1220
<b>MWI Service Enabled</b>	<input checked="" type="checkbox"/>
<b>SMS on Voicemails</b>	<input type="checkbox"/>
<b>Update Settings</b>	

### Additional notes on configuring CS 1000 for MWI

- The SIP DCH should be configured with MWI for the RCAP value (LD 17).
- User telephones should be configured with MWA (Message Waiting Allowed) Class of Service to receive MWI Lamp notification.
- The Node configuration page (in Element Manager) needs to be configured with information for both the **MWI Application DN** and the **MWI Dialing Plan**. The configured MWI DN and MWI Dialing plan should be administered as a valid DN on the Call Server to ensure routing back to the SIP gateway; this is required if the ISDN Facility Response is to be sent back to the SIP gateway. For more information on configuring the MWI DN and MWI Dial Plan, see [“Configure information for the MWI Application DN”](#) (page 55) and [“Configure the Microsoft Exchange Unified Messaging Dial Plan”](#) (page 35).

### SRTP configuration using Element Manager

Use the following procedure to configure SRTP negotiation between CS 1000 and Exchange 2007 in Element Manager

#### Procedure 3 Enabling SRTP/TLS for Exchange 2007

Step	Action
1	Navigate to <b>Element Manager</b> .
2	Click <b>Nodes: Server, Media Cards</b> .
3	Click the node you want to view.
4	Click the <b>Microsoft Unified Messaging</b> tab.
5	Select the <b>Enable Secure Media</b> check box.
6	Click <b>Save and Transfer</b> .

--End--

## Configure Microsoft Exchange Unified Messaging in CS 1000 Element Manager

The following sections detail the use of Element Manager in configuring Microsoft Exchange Unified Messaging services on the CS 1000.


The **Edit** page of the Element Manager **Nodes: Servers, Media Cards** configuration page has a new configuration tab – **Microsoft Unified Messaging**. The Microsoft Unified Messaging tab is used to add Microsoft

Exchange Unified Messaging numbers that have been defined for use with Subscriber Access and Auto Attendant and also to configure MWI DNs and Dialing Plans. Up to five Subscriber numbers and five Auto Attendant numbers can be configured. These numbers can be added, modified or deleted using the functions of the Microsoft Unified Messaging tab.

## Configure a Node in Element Manager for use with Microsoft Exchange Unified Messaging

Access to all parameters for configuration of a node for interaction with Microsoft Exchange Unified Messaging are found under IP Telephony Node section of Edit page for **Nodes: Servers, Media Cards**, as shown in the following figure:

**Figure 11**  
**Configuring a Node for use with Microsoft Exchange Unified Messaging: IP Telephony Node**

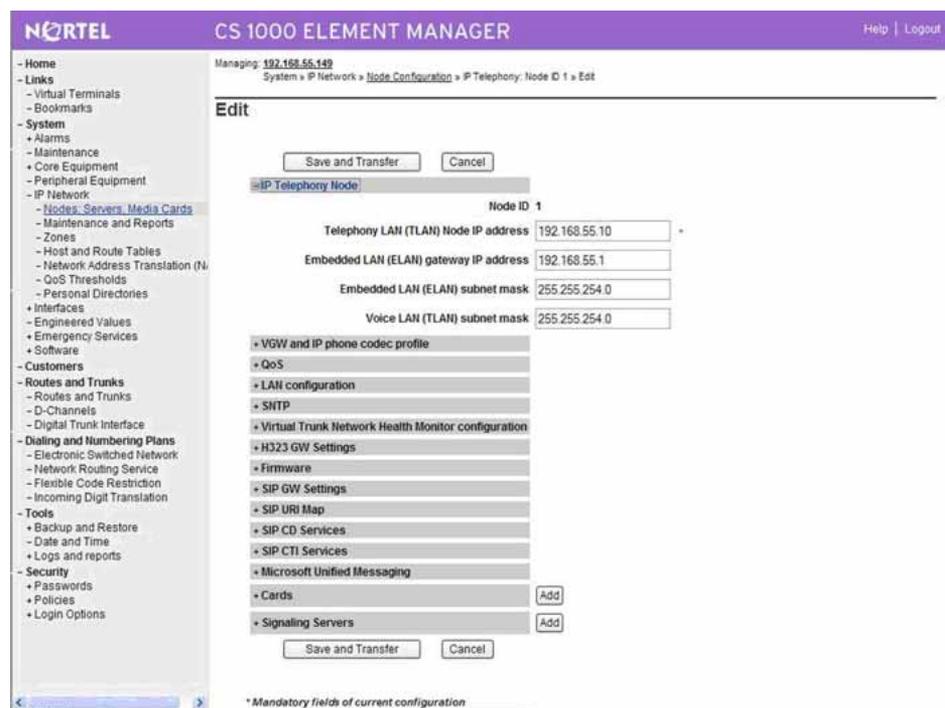

A Node can be imported and its parameters edited to interact specifically with Microsoft Exchange Unified Messaging.

### Import and edit a Node for Microsoft Exchange Unified Messaging interaction

Step	Action
1	Log on to Element Manager with a valid User Account.

- 2 Navigate to the **Nodes: Servers, Media Cards** page.
- 3 Launch the **Import Node Files** page and import the node to be configured for use with Microsoft Exchange Unified Messaging and edit the imported node by navigating to the **Edit** page of that node.
- 4 Configure the Unified Messaging parameters for the node by expanding the **Microsoft Unified Messaging** section and saving the changes. For more information, see [“Configure Subscriber Access, Auto Attendant, and MWI DN information”](#) (page 51).

---

--End--

---

### **Configure Subscriber Access, Auto Attendant, and MWI DN information**

Opening the **Microsoft Unified Messaging** tab of the Edit page for **Nodes: Servers, Media Cards** allows the Subscriber Access, Auto Attendant, and MWI DN information to be configured. These configuration parameters, once expanded, appear as shown in the following image:

**Figure 12**  
**Subscriber Access, Auto Attendant, MWI DN and Voice mail softkeys configuration parameters**

The screenshot displays the Nortel CS 1000 Element Manager configuration page for an IP Telephony Node (Node ID 1111). The left sidebar contains a navigation tree with categories like Common Manager, System, Customers, and Security. The main content area is titled '- IP Telephony Node' and includes the following configuration fields and sections:

- Node ID: 1111
- Telephony LAN (TLAN) Node IP address: 192.168.0.100
- Embedded LAN (ELAN) gateway IP address: 192.168.0.1
- Embedded LAN (ELAN) subnet mask: 255.255.255.0
- Voice LAN (TLAN) subnet mask: 255.255.252.0
- MWI Application DN: 2201
- MWI Dialing Plan: CDP
- Unified Messaging Softkeys Enabled:
- Subscriber Access: Add button
- Subscriber Access Number 1: 2201 (Remove button)
- Auto Attendant: Add button
- Auto Attendant Number 1: 2202 (Remove button)
- Signaling Servers: Add button

Buttons for 'Save and Transfer' and 'Cancel' are located at the bottom of the configuration area.

The acceptable data entries for the Subscriber Access, Auto Attendant, and MWI DN information fields are as follows:

- Subscriber Access Number: This is a numeric field for up to 32 digits.
- Auto Attendant Number: This is a numeric field for up to 32 digits.
- MWI Application DN: This is a numeric field for up to 32 digits.

### **Adding, modifying, or deleting Subscriber Access Numbers for a Microsoft Exchange Unified Messaging Node**

The following procedures detail the steps to add, modify, or delete the Subscriber Access Number information for a Node interacting with Microsoft Exchange Unified Messaging.

**Add new Subscriber Access Number information**

<b>Step</b>	<b>Action</b>
1	Log on to Element Manager with a valid User Account.
2	Navigate to the <b>Edit</b> page of the <b>Nodes: Servers, Media Cards</b> configuration page.
3	Expand the <b>Microsoft Unified Messaging</b> .
4	In the space provided, add information for up to five Subscriber Access Numbers by clicking <b>Add</b> and saving the configuration. The <b>Add</b> button becomes inactive after the fifth entry.
--End--	

**Modify Subscriber Access Number information**

<b>Step</b>	<b>Action</b>
1	Log on to Element Manager with a valid User Account.
2	Navigate to the <b>Edit</b> page of the <b>Nodes: Servers, Media Cards</b> configuration page.
3	Expand the <b>Microsoft Unified Messaging</b> .
4	In the space provided, modify the configuration information as required for up to five Subscriber Access Numbers and save the configuration.
--End--	

**Delete Subscriber Access Numbers**

<b>Step</b>	<b>Action</b>
1	Log on to Element Manager with a valid User Account.
2	Navigate to the <b>Edit</b> page of the <b>Nodes: Servers, Media Cards</b> configuration page.
3	Expand the <b>Microsoft Unified Messaging</b> .
4	Delete the required Subscriber Access Number(s) by clicking the <b>Remove</b> button and saving the configuration.
--End--	

### **Adding, modifying, or deleting Auto Attendant numbers for a Microsoft Exchange Unified Messaging Node**

The following procedures detail the steps to add, modify, or delete the Auto Attendant Number information for a Node interacting with Microsoft Exchange Unified Messaging.

#### **Add new Auto Attendant number information**

<b>Step</b>	<b>Action</b>
1	Log on to Element Manager with a valid User Account.
2	Navigate to the <b>Edit</b> page of the <b>Nodes: Servers, Media Cards</b> configuration page.
3	Expand <b>Microsoft Unified Messaging</b> .
4	In the space provided, add information for up to five Auto Attendant Numbers by clicking <b>Add</b> and save the configuration. The <b>Add</b> button becomes inactive after the fifth entry.

---

--End--

---

#### **Modify Auto Attendant Number information**

<b>Step</b>	<b>Action</b>
1	Log on to Element Manager with a valid User Account.
2	Navigate to the <b>Edit</b> page of the <b>Nodes: Servers, Media Cards</b> configuration page.
3	Expand <b>Microsoft Unified Messaging</b> .
4	In the space provided, modify the configuration information as required for up to five Auto Attendant Numbers and save the configuration.

---

--End--

---

#### **Delete Auto Attendant Numbers**

<b>Step</b>	<b>Action</b>
1	Log on to Element Manager with a valid User Account.
2	Navigate to the <b>Edit</b> page of the <b>Nodes: Servers, Media Cards</b> configuration page.
3	Expand <b>Microsoft Unified Messaging</b> .

- 4 Delete the required Auto Attendant Number(s) by clicking the **Remove** button and saving the configuration.

---

--End--

---

### Configure information for the MWI Application DN

The following procedure details the steps to configure the MWI Application DN information for a Node interacting with Microsoft Exchange Unified Messaging.

#### Configure MWI Application DN information

Step	Action
1	Log on to Element Manager with a valid User Account.
2	Navigate to the <b>Edit</b> page of the <b>Nodes: Servers, Media Cards</b> configuration page.
3	Expand <b>Microsoft Unified Messaging</b> .
4	Configure the proxy DN for the MWI application and save the configuration.

---

--End--

---

### Select MWI Dial Plan type

The following procedure details the steps for selecting the desired MWI Dial Plan type for a Node interacting with Microsoft Exchange Unified Messaging.

**Note:** Currently, the available dial plan types are restricted to CDP and UDP only.

#### Select the desired MWI Dial Plan type

Step	Action
1	Log on to Element Manager with a valid User Account.
2	Navigate to the <b>Edit</b> page of the <b>Nodes: Servers, Media Cards</b> configuration page.
3	Expand the <b>Microsoft Unified Messaging</b> .
4	Select either <b>CDP</b> or <b>UDP</b> for the MWI Dial Plan type and save the configuration.

---

--End--

---

### Voice mail softkeys configuration

The use of Exchange UM softkeys on IP phones (11XX, 12XX, 2007, 2004, 2002) is enabled through Element Manager by selecting the Unified Messaging Softkeys Enabled checkbox under Microsoft Unified Messaging. In addition, the Inbox key of each of the phones can be configured to access the Subscriber Access DN and MWK directly.

The key mapping for the softkeys is static and consists of the following options:

- Play
- Delete
- Call
- Stop
- Unread
- Reply
- Compose
- Forward
- Info

### Allowing calling party numbers to update while leaving message

If a call is modified after reaching the Exchange 2007 UM Server, the calling party number is modified as well. To ensure that voice messages left will have the correct calling party information, calling party number information must be updated to the Exchange 2007 UM Server by generating a SIP INFO message with new content type header **text/source-party**. This SIP INFO message is then delivered to the Exchange 2007 UM Server, allowing any voice messages left there to reflect the correct calling party caller information.

To enable this functionality of the SIP INFO message, the following changes must be made on the Exchange 2007 UM Server:

- In the **GlobCfg.XML** file, set the **SourcePartyInfoEnabled** flag to **true**.
- Both the **Microsoft Exchange Speech Engine** and the **Microsoft Unified Messaging** Services must be restarted.

**Note:** The CS 1000 FAX user set must be configured with MPTD class of service in LD 11.


## Disable a user mailbox

The following section details the required steps for removing all Exchange mailbox attributes from a user object in Active Directory without deleting the user object in Active Directory.


### Disabling a user mailbox

Step	Action
------	--------

- 1 In the Exchange Management Console, select **Recipient Configuration > Mailbox** . In the action pane, click **Disable** to disable the mailbox. Optionally, you can right-click the selected mailbox, and choose **Disable** on the pop up menu as shown in the following figure:

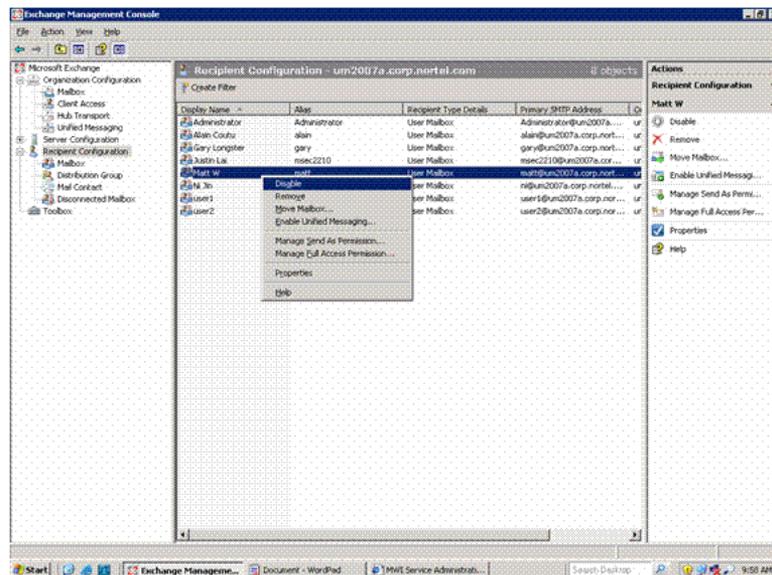

- 2 Click **Yes** to confirm the disabling of the user mailbox, as shown in the following figure:

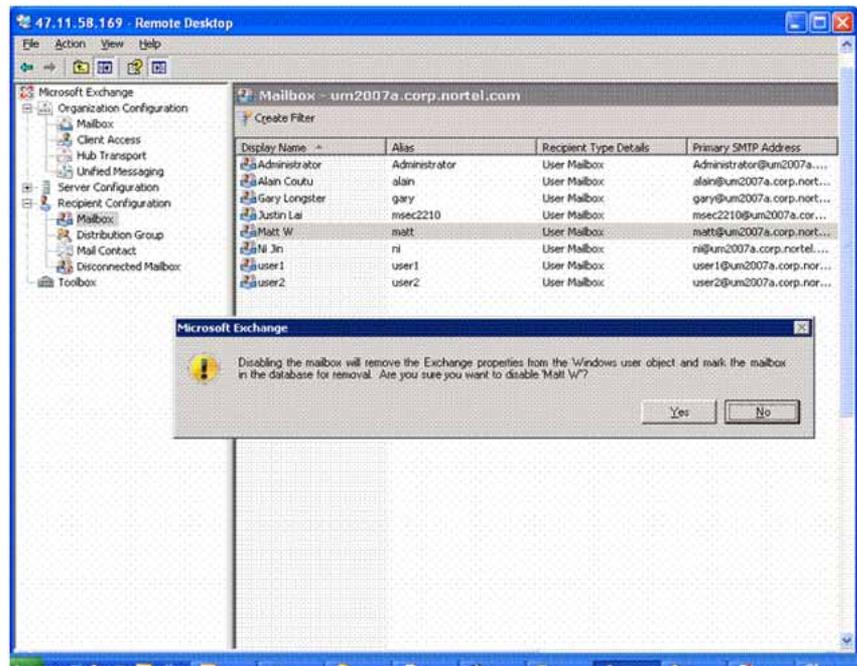



--End--

### Enable the user mailbox after disabling

The user mailbox can be enabled after disabling it. The following section details the required steps to enable a disabled user mailbox.

#### Procedure 4 Enabling the user mailbox after disabling

- | Step | Action   |
|------|--|
| 1    | Add a new mailbox using the <b>New Mailbox Wizard</b> , but select <b>Existing users</b> instead of <b>New users</b> when prompted for <b>User Type</b> .<br><br>For more information about using the New Mailbox Wizard, see <a href="#">“Configure a new user mailbox for Microsoft Exchange Unified Messaging”</a> (page 26). |
| 2    | Click <b>Add</b> . A window appears displaying all existing users in the active directory.   |
| 3    | Select the disabled user mailbox as appropriate and click <b>OK</b> , as shown by the following:   |

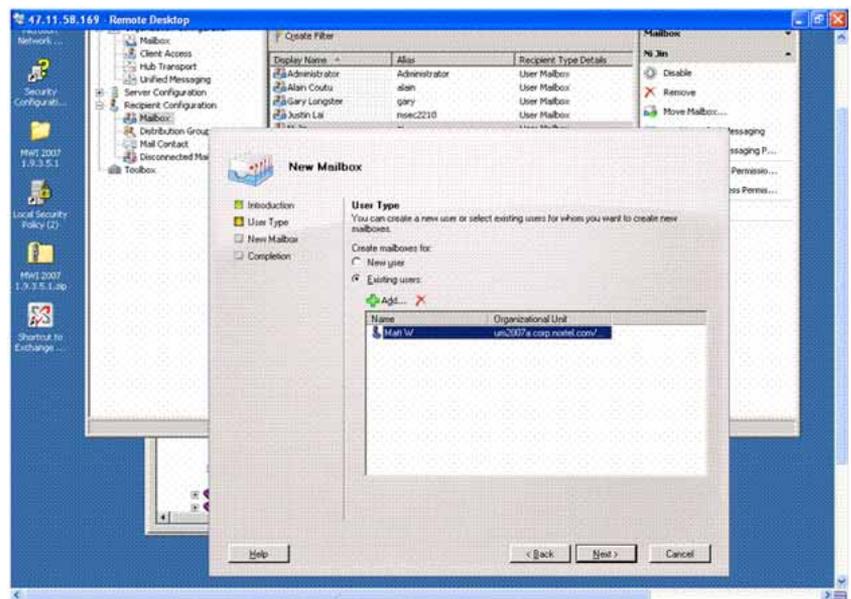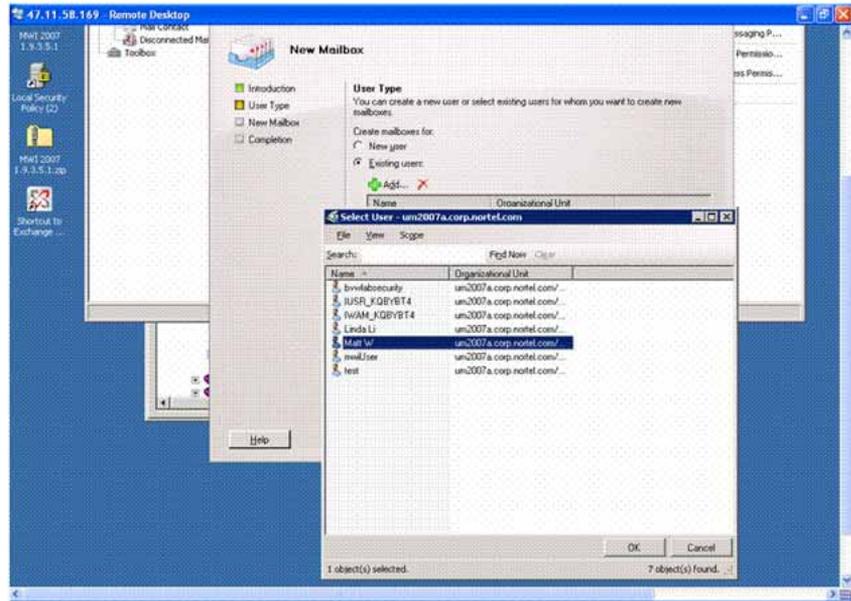

- 4 Click **Next** and follow the steps to add a new mailbox, without changing current user account information.


--End--

## Remove a user mailbox

This procedure details the required steps for removing a user mailbox.

### Procedure 5 Removing a user mailbox

- | Step | Action  |
|------|---|
| 1    | In the Exchange Management Console, select <b>Recipient Configuration &gt; Mailbox</b> .  |
| 2    | In the action pane, click <b>Remove</b> to remove the mailbox, as shown by the following: |

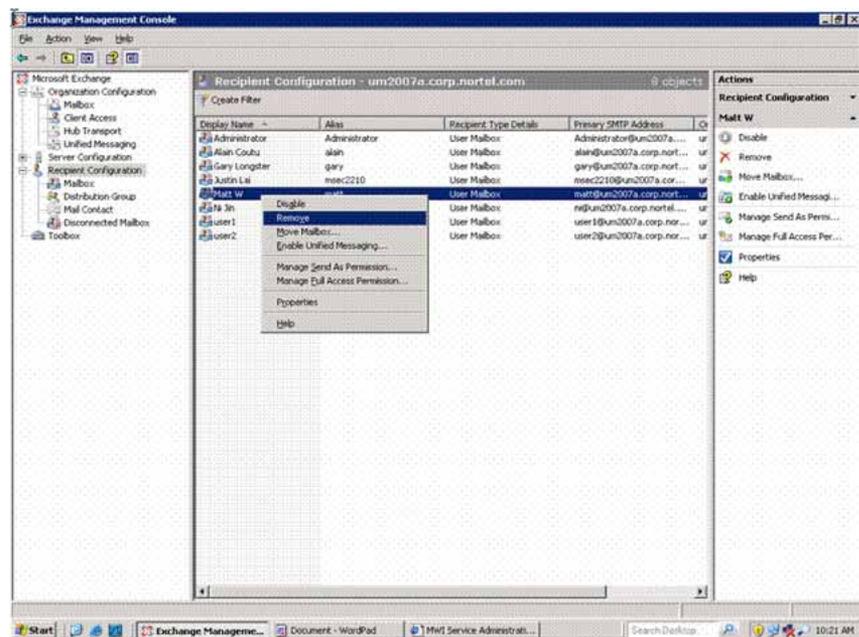

Optionally, you can right-click the selected user mailbox, and choose **Remove** from the list of menu options.

--End--

**Note:** When you remove a user mailbox, all associated user Exchange data is marked for deletion and the associated user account entry in the Active Directory is deleted.


## Remove a dial plan

This procedure details the required steps for removing a UM dial plan.

**Note:** Before you can remove a UM dial plan, you must remove any existing associations with other UM components such as UM mailbox policies, Unified Messaging servers, or UM IP gateways.


## Procedure 6 Removing a dial plan

- | Step | Action   |
|------|--|
| 1    | In the Exchange Management Console, select <b>Organization Configuration &gt; Unified Messaging</b> .                              |
| 2    | Select the appropriate UM dial plan and click <b>Remove</b> on the action pane to remove the dial plan, as shown by the following: |

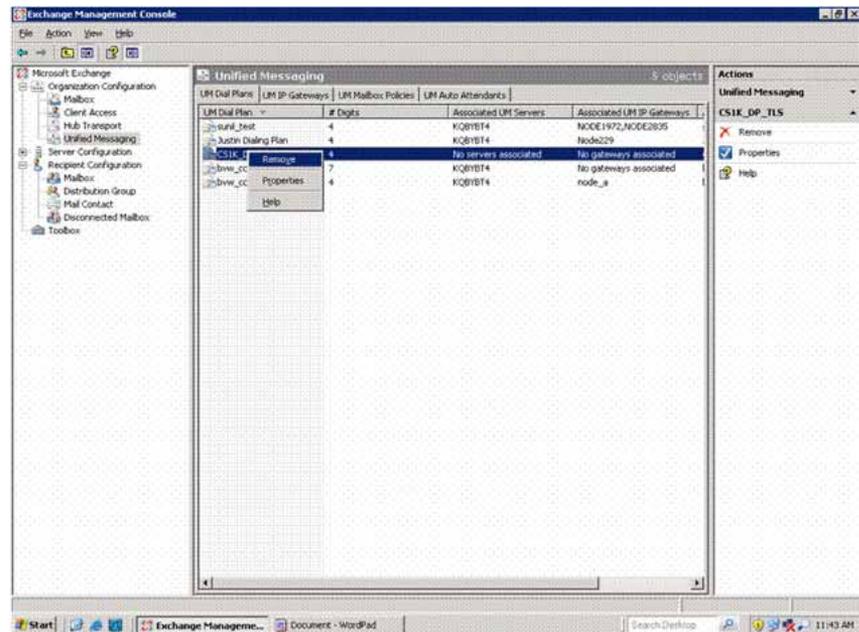

Optionally, you can right-click the UM dial plan and select **Remove** from the list of available options.

- 3 Click **Yes** to confirm the removal of the selected UM dial plan.

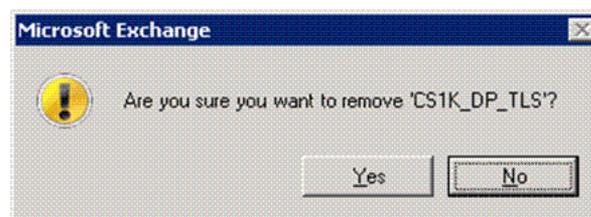

--End--


## Disable Operator Assistance feature

This module details the required steps for disabling Operator Assistance feature functionality, provided by the UM Auto Attendant.

The UM Auto Attendant can be disabled: if an auto attendant is disabled, no incoming calls will be answered.

### Procedure 7 Disabling the UM Auto Attendant

Step	Action
1	In the Exchange Management Console, select <b>Organization Configuration &gt; Unified Messaging</b> .
2	Select the appropriate UM Auto Attendant and click <b>Disable</b> on the action pane to remove the dial plan, as shown by the following:

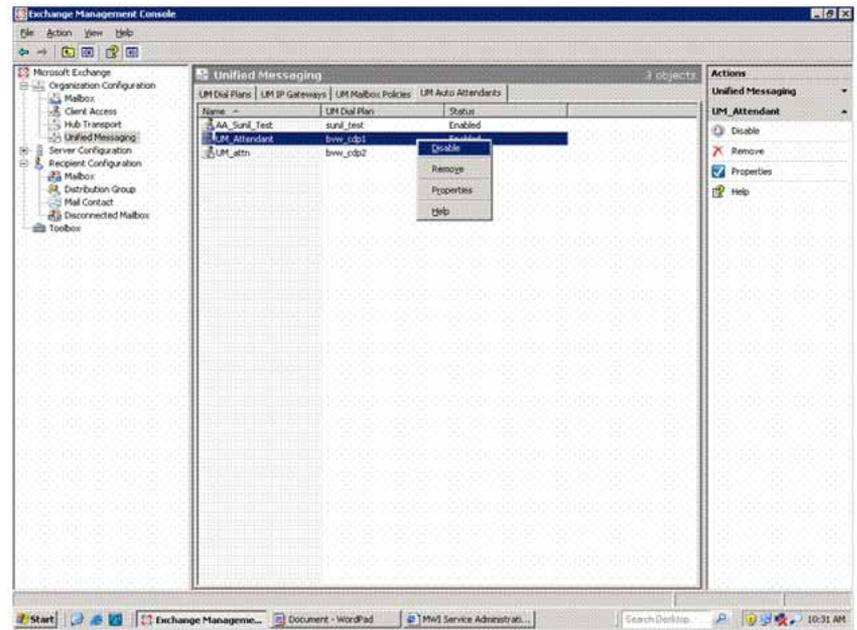

Optionally, you can right-click the UM Auto Attendant and select **Disable** from the list of available options.


--End--

## Remove Operator Assistance feature

This module details the required steps to follow for removing a configured UM Auto Attendant.

**Procedure 8  
Removing the UM Auto Attendant**

- | Step | Action  |
|------|---|
| 1    | In the Exchange Management Console, select <b>Organization Configuration &gt; Unified Messaging</b> .                                   |
| 2    | Select the appropriate UM Auto Attendant and click <b>Remove</b> on the action pane to remove the dial plan, as shown by the following: |

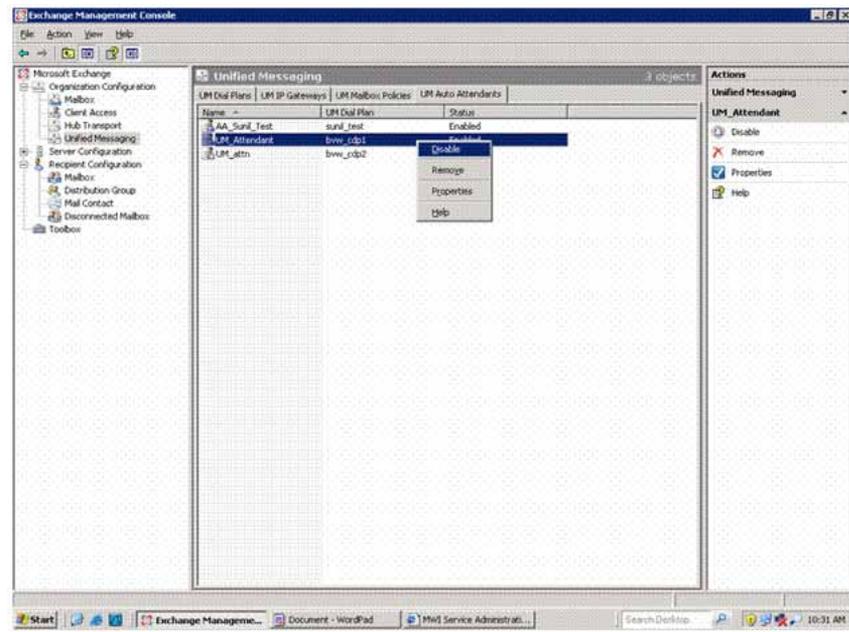

Optionally, you can right-click the UM Auto Attendant and select **Remove** from the list of available options.

--End--

**Disable MWI service for a user phone set**


This module details the procedure for disabling MWI service access on a user phone set.

**Procedure 9  
Disabling MWI service for a user phone set**


- | Step | Action  |
|------|---|
| 1    | Access the <b>Geomant MWI Service Web page</b> . For more information about accessing the Geomant MWI Service Web |

page, see “Configure Geomant Message Waiting Indicator (MWI) application” (page 45)

2 Select **Administration > MWI Users**.

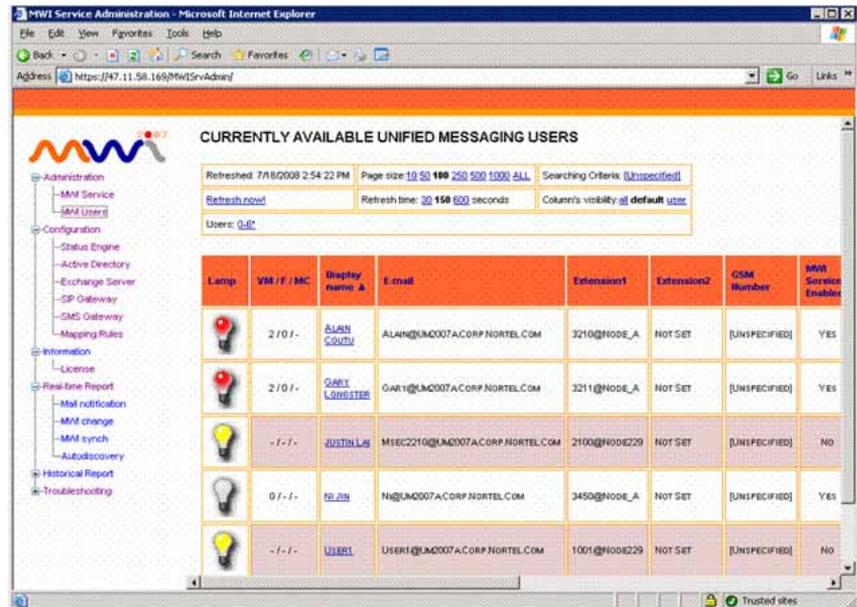

3 Select a user from the list. The **Unified Messaging User Properties** page appears.

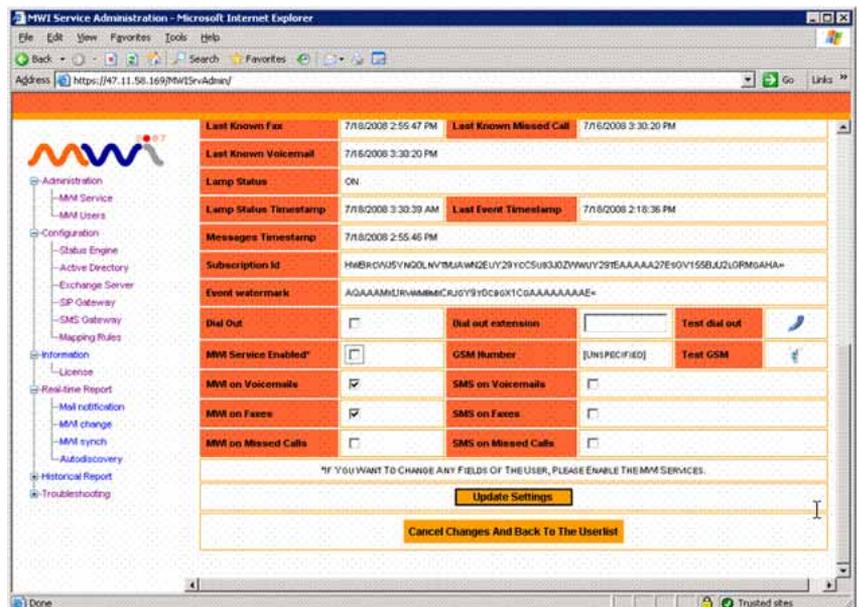

- 
- 4 On the **Unified Messaging User Properties** screen, uncheck **MWI Service Enabled** to disable MWI service for the user.
- 

--End--

---

## End user experience scenarios

This section describes the end user scenarios for Unified Messaging features.

### Navigation

- [“Answering the call” \(page 65\)](#)
- [“Subscriber Access” \(page 65\)](#)
- [“Auto Attendant” \(page 66\)](#)
- [“Message waiting indication” \(page 66\)](#)
- [“Play on phone features” \(page 67\)](#)

### Answering the call

This is an end user scenario for answering the call on behalf of a user.

Step	Action
1	User A calls User B, who is a subscriber to UM services.
2	The call is redirected to UM, if the User B does not answer or his phone is busy.
	<p><b>ATTENTION</b> The caller hears the default greeting or personal greeting (if recorded).</p>
3	The caller can leave a voicemail for User B after the beep tone.
4	After the message is recorded, the caller has to press the pound (#) key for more options or wait to send the recorded message to User B mailbox.

---

--End--

---

### Subscriber Access

This sections describes the end user scenario for subscriber dialing into the Microsoft Exchange Unified Messaging.

Step	Action
1	Call the UM Subscriber Access number. The caller receives the greeting prompting to enter the pin number.
2	Press the star (*) key, if the mailbox does not belong to the caller. Enter the pin number to open the mailbox.
3	The caller has various options to select from voicemail, email and so on after opening the mailbox.

**ATTENTION**  
Both voice commands and DTMF options are available

---

--End--

---

### Auto Attendant

The auto attendant service allows call transfer to any number or person in the corporate directory. This section describes the end user scenario for auto attendant service into the Microsoft Exchange Unified Messaging.

Step	Action
1	Call the UM Auto Attendant number.
2	The caller receives the greeting prompting to enter the name of the person or press the pound key (#) two times. Enter the email or press the pound key if you know the extension.

**ATTENTION**  
If the auto attendant is speech enabled, then the UM will prompt for the name of the person.

3	After the user name, number, and email is entered the auto attendant prompts the callers to press the pound key. You can leave a message to the user or wait to contact the user.
---	---

---

--End--

---

### Message waiting indication

This section describes the end user scenario for the message waiting indication in the Microsoft Exchange Unified Messaging.


Step	Action
1	User A calls User B. <b>ATTENTION</b> User B must have the mailbox configured in Exchange UM.
2	If User B does not answer the call, then the call is redirected to UM to record the voice message.
3	User A leaves a voice mail for user B.
4	The MWI indicator on User B is illuminated. This indicates that there is a message waiting for User B in the mailbox. <b>ATTENTION</b> The message waiting features assumes that there are no voice mail in the mailbox if the User B indicator is not illuminated.
--End--	

## Play on phone features


This section describes the end user scenario for the play on phone feature in the Microsoft Exchange Unified Messaging.

Users can invoke play on phone feature to call a phone and hear the voicemail.

Step	Action
1	Select voicemail in the Outlook or use Outlook web access (OWA) default feature provided by Exchange UM.

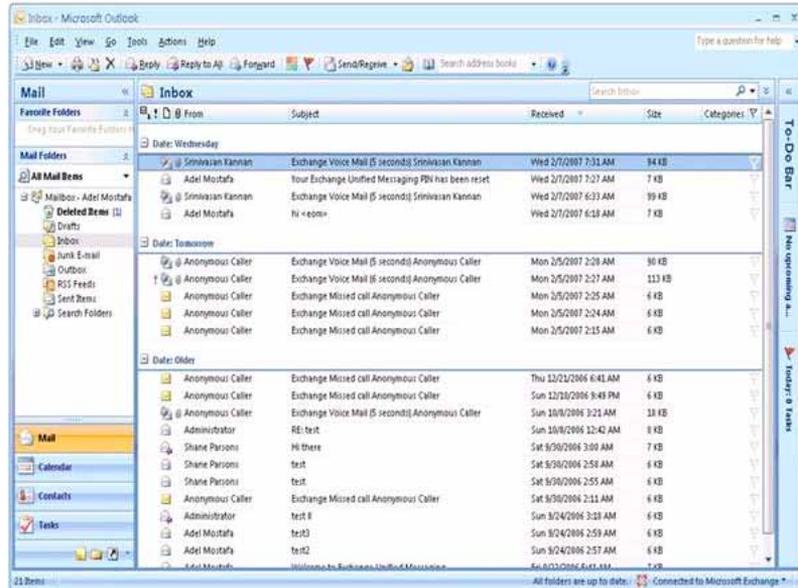

- 2 Play the message on the system or over the phone by using play on phone option.
- 3 To play using the play on phone, select the option available with the voice mail.
- 4 Enter the phone number where the message needs to be played.
- 5 Press dial.

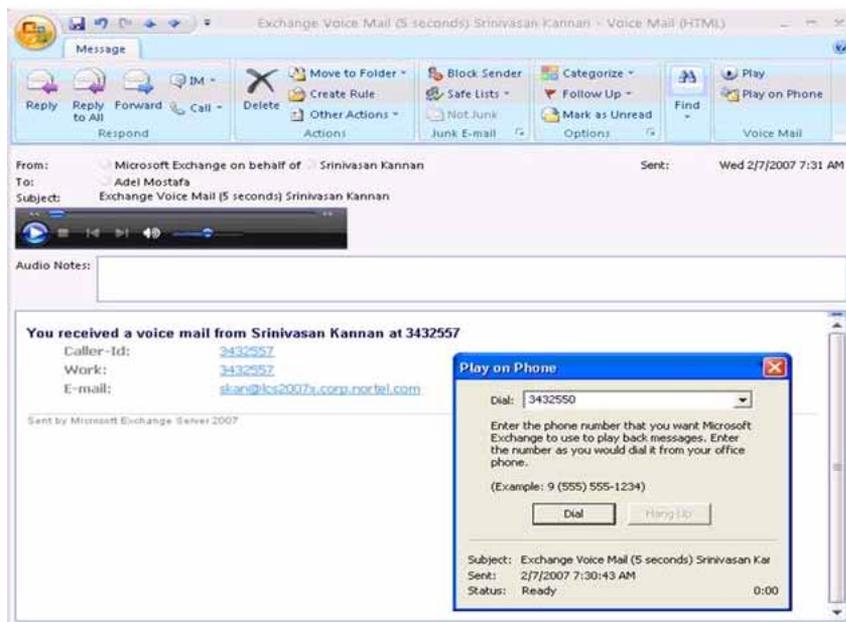

- 6 The destination phone number can also be set using the option tab so that it need not be entered again the next time a message is played.

---

--End--

---

## RE-INVITE issue with Exchange 2007 and Exchange 2010

- Exchange 2007 and 2010 do not support RE-INVITE with a modified codec list or a reordered codec list.
- Only G711 & G723 codecs are supported, with preference given to G711 as this will ensure that any RE-INVITE with a modified codec is handled by the RE-INVITE workaround solution provided below.

## RE-INVITE work-around

There are many applications and features in CS 1000 which trigger RE-INVITE to UM. The codec offered can be a subset of the initial offered codec or it can be a new set of codecs based on the feature.

Any modification to the media stream should be offered using RE-INVITE for an established session and the update method for a future session.

Exchange has a major limitation with respect to codec re-negotiation using RE-INVITES. UM does not accept RE-INVITES with a modified or re-ordered codec list.

The work-around is as follows:

- If the initial INVITE to UM features the G711 codec (and RFC 2833 is supported) then solution Modified the INITIAL SDP to UM with only G711 and RFC 2833 DTMF payload as the offered codec list to UM, with order of law (A Law / Mu Law for G711) maintained as offered from the far end (in case of tandem call scenario) /near-end.
- If the offered SDP does not have G711 and/or RFC 2833 Payload then the offered SDP is sent as is and the RE-INVITE solution does not modify the call scenario, leaving Exchange to handle the call for all subsequent RE-INVITE.
- If the SDP offered in the initial Invite is modified using the RE-INVITE solution, the solution will trigger every time there is a RE-INVITE to UM. It will attempt to modify the offered codec list in the same order, using the same list as long as negotiated voice codes are available in the RE-INVITE. If the negotiated codec is not present in RE-INVITE then the SDP is forwarded as is UM must handle the call

- RE-INVITE solution will not trigger if the RE-INVITE has a pTime (SDP attribute) value greater than the pTime (SDP attribute) value in Initial Invite.
- If a Video SDP is received in the offered coded list, it will not be sent to Exchange as part of RE-INVITE solution.

**Note:** This is only if the RE-INVITE solution is triggered based on the conditions described above, in which case the offer SDP to UM will not contain the Video codecs. Port 0 is then added by CS 1000 to ensure that the video offer is rejected. Only audio is accepted as part of UM calls.

- For SRTP calls the RE-INVITE solution will trigger based on the criterion suggested above.
- For audio. if one mline offer stands for RTP, and a second one for SRTP, with CS 1000 in tandem mode, then the RE-INVITE solution will ensure that there is only one mline sent to Exchange with SRTP attributes added in the terminal capability audio attribute "a=tcap". The answer generated will still have multiple mline with port 0 for the audio capability, which is not accepted by Exchange.



**Note:**

- SRTP is supported with limitations on RE-INVITE work-around.
- The CS 1000 gateway and Exchange UM 2007 or Exchange 2010 should be configured with same Law (A-Law or Mu-Law).

## Secured Dial Plan Creation

There are 3 types of VOIP security provided by Exchange UM:

- Unsecured (default)
- SIP secured
- Secured

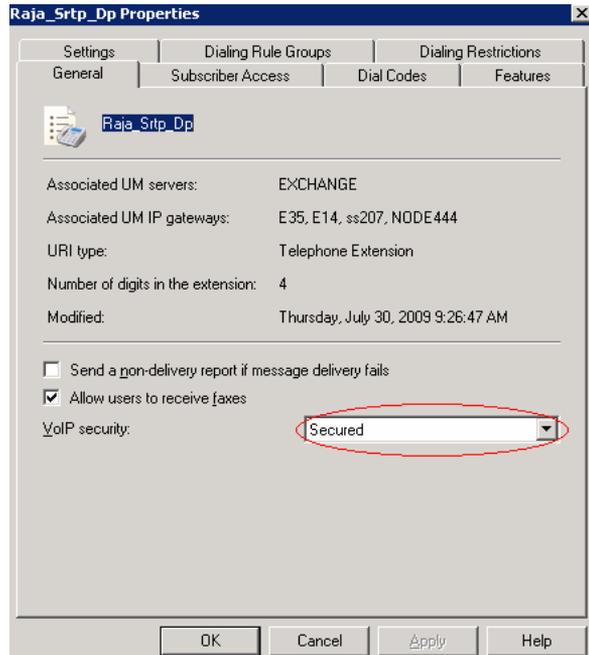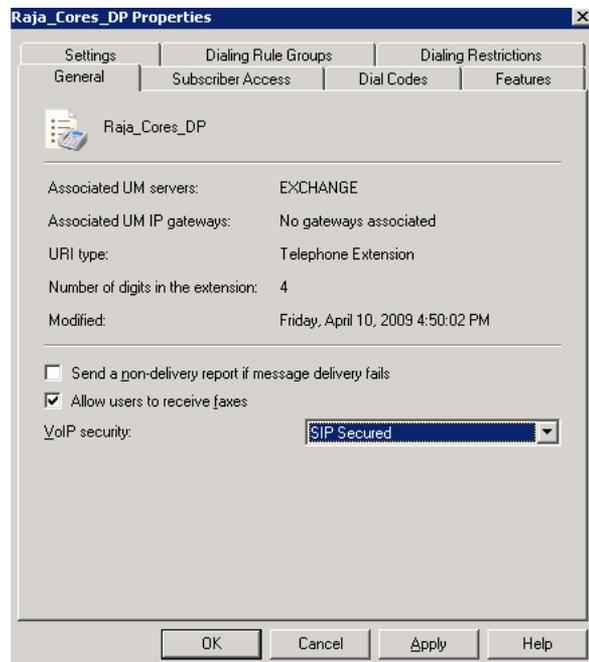**Figure 13**  
**Secured****Figure 14**  
**SIP Secured**


## TLS Configuration on UMS2007SP1

This section describes the procedure to configure the TLS on UMS 2007 SP1.


### Procedure 10

Step	Action
------	--------

- |   |  |
|---|--|
| 1 | Set up the UM Dial Plan to SIPSecured. |
|---|--|

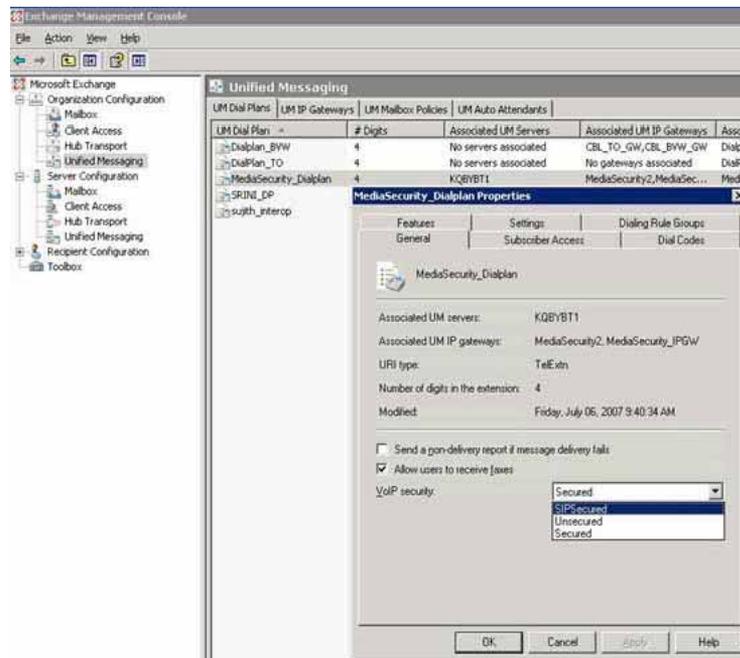


- |   |  |
|---|--|
| 2 | Restart the Unified Messaging Service. |
|---|--|

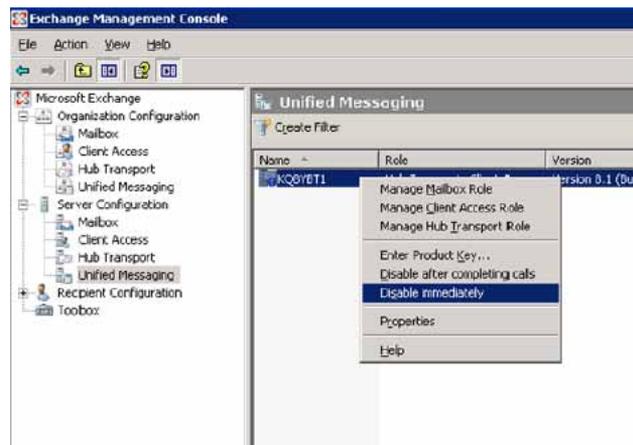





## 74 Configuration of Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

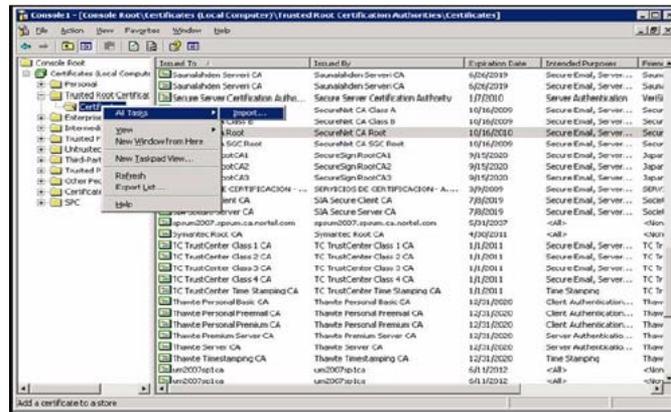


- 5 Start->run->mmc.
- 6 Add (Certificate) snap-in.
- 7 Select **Computer Account** certificate store to import the PCA Certificate to the UMS2007 server.

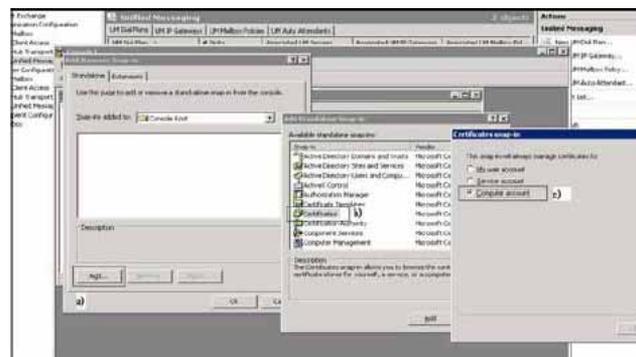


- 8 Export Microsoft Certificate Authority's certificate by going to the following website:  
<https://<UMS FQDN>/certsrv/certcarc.asp>.

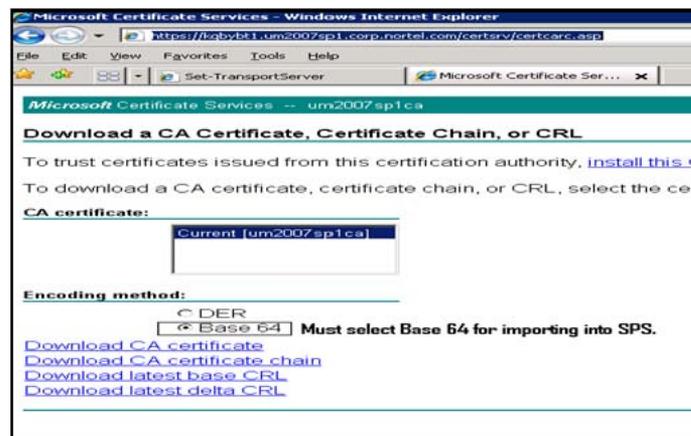

- Open the Microsoft CA certificate in a text editor and copy the content into SPS Certificate Authorities->Add pop-up window.

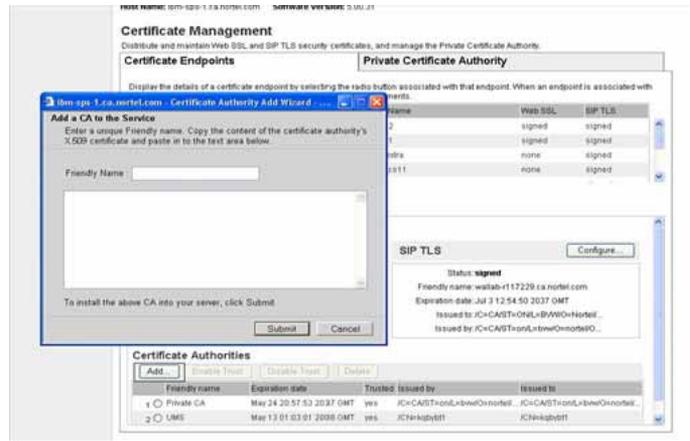


- Use following command in UMS command console:  
Set-UMIPgateway -identity <IP\_GATEWAY>. -Port 5061.

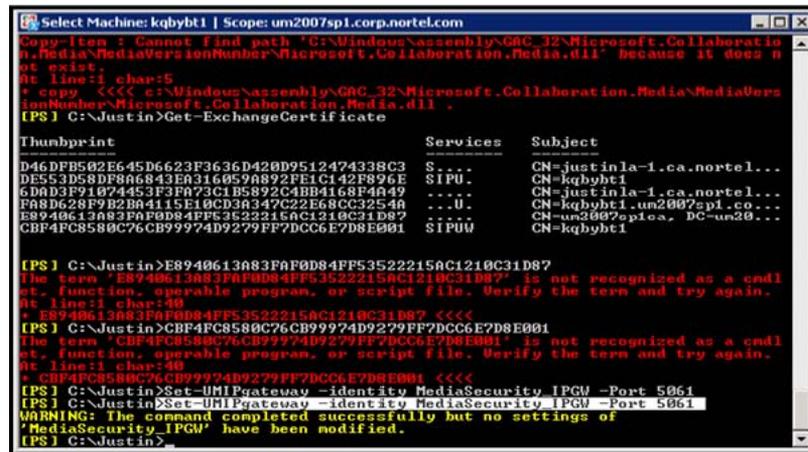


Make sure your IP\_GATEWAY is identified by its FQDN in the Exchange Management Console.

## 76 Configuration of Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging

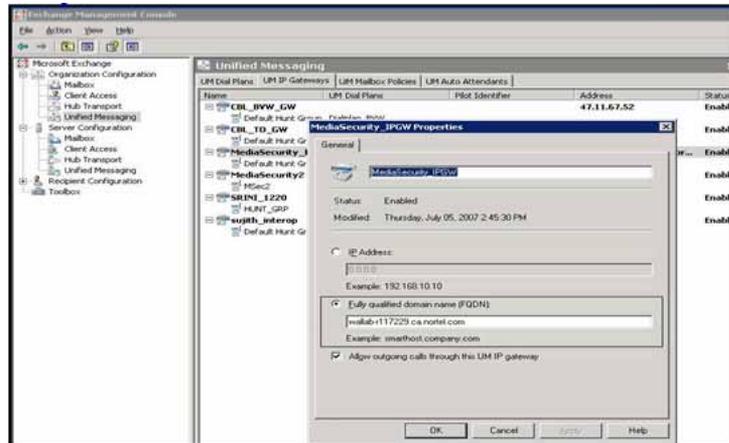


- 11 Select Control Panel ->Administrative Tools ->Local Security Policy to apply the configuration on Exchange front end that interacts with SPS.

**Note:** If UM is installed on the AD server itself, then it is under Domain Security Policy.

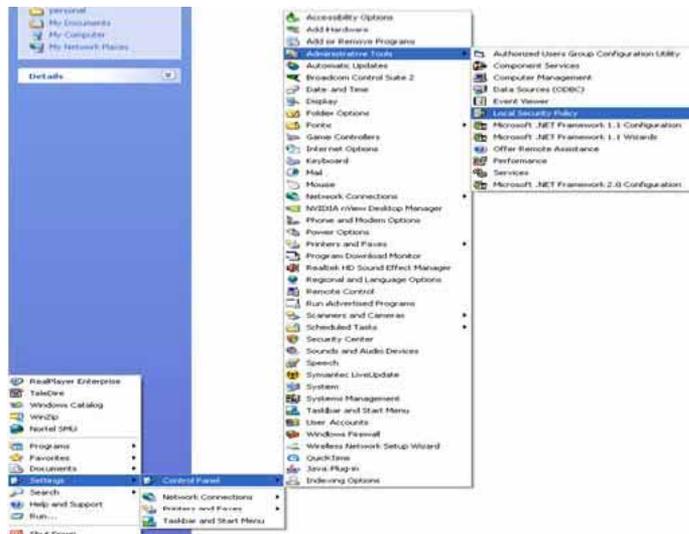

- 12 Right click Security Options ->System cryptography: Use FIPS compliant algorithms for encryption, hashing, and signing. Select **Enabled**.

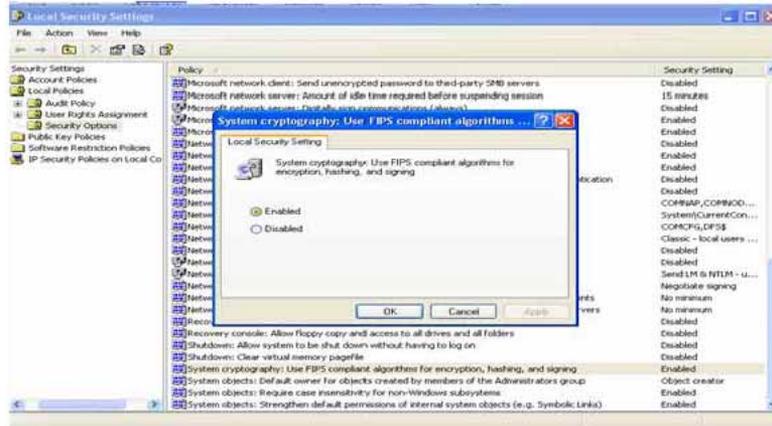


- 13 Navigate through SPS in the Network Routing Service Manager. Select SIP Proxy Server, Gatekeeper, and Network Connection Server.




- 14 Click **Restart**.
- 15 Select the Element Manager and Set TLS port to 5061.

**Note:** If you encounter continuous redirection when trying to make a SIP call, use the port number provided by the UM in the SIP/2.0 302 Moved Temporarily CONTACT header.05/07/2007 17:26:38 LOG0006 SIPNPM:->SIP/2.0 302 Moved Temporarily05/07/2007 17:26:38 LOG0006 SIPNPM: ->CONTACT: <sip:5510;phone-context=fittest.swlab@bvw.com:5068;transport=TLS;user=phone>.


- 16 Turn on Client Authentication and X.509 Certificate Authentication.
- 17 Special case for setup without SPS involvement. You can set the Primary Proxy to your UMS.
- 18 The DNS IP address should be updated in EM (config.ini) for UM calls to complete when using TLS.

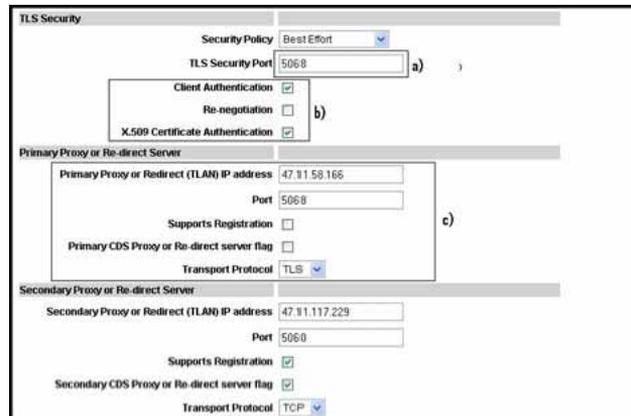

- 19 Verify that SPS is using the correct DNS Server with the correct class A FQDN entries for SPS, and UM.
- 20 Restart Exchange UM service in Exchange server.
- 21 Click the Authentication tab in **Client EXCHANGE Properties** dialog box.

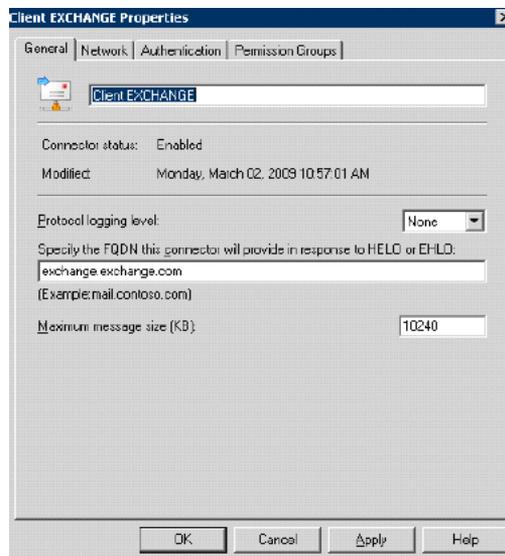

- 22 Select the Enable Domain Security (Mutual Auth TLS) check box.

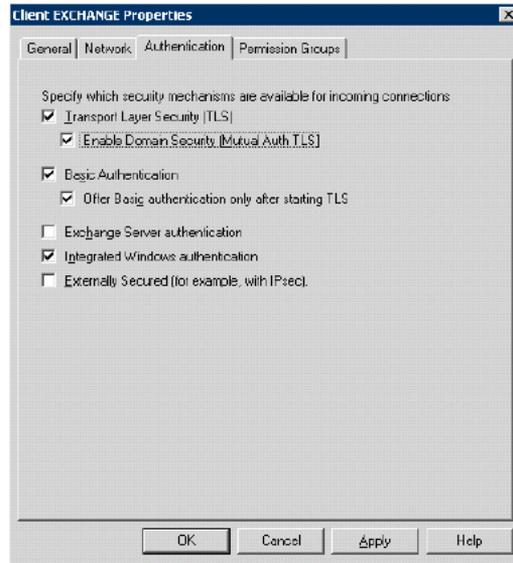

23 Click **OK**.

CS 1000 CA certificate is loaded correctly into the trusted list on Exchange Server.

---

--End--

---

TLS Limitations:

- Only TLS capable Web Browsers will be supported.
- Remote desktop version must use be at least RDP client version 5.2.

For more information, refer to the following link: <http://support.microsoft.com/kb/811833>.



# Appendix

## UM Dialing Plan configuration examples

---

This chapter provides configuration examples of various customer deployment scenarios.


### Navigation

- [“Coordinated Dialing Plan network in the same cost area” \(page 81\)](#)
- [“Coordinated Dialing Plan network in different cost areas” \(page 86\)](#)
- [“UDP/CDP network in different cost area” \(page 88\)](#)
- [“Branch Office in the same long distance cost area” \(page 89\)](#)
- [“Virtual Office” \(page 93\)](#)
- [“Geographic Redundancy” \(page 94\)](#)

### Coordinated Dialing Plan network in the same cost area

The following diagram depicts multiple CS 1000 nodes within the same location using the Coordinated Dialing Plan (CDP).


**Figure 15**  
CDP Network in the same cost area

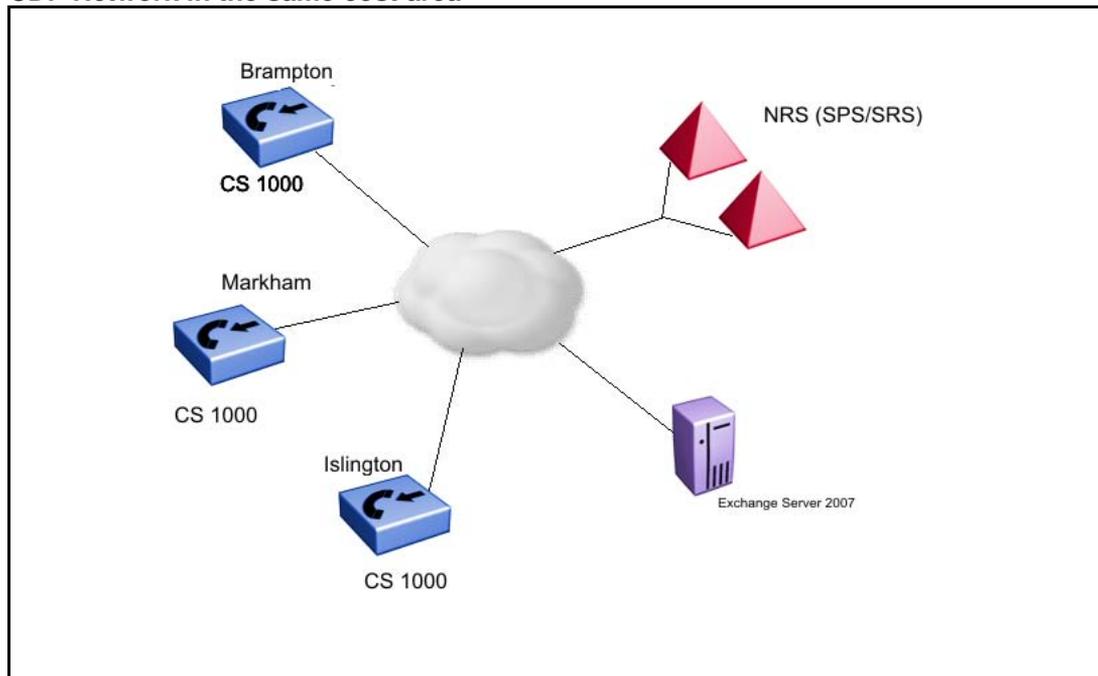

### UM Gateway dialing plan configuration

The Gateways at each are individually configured on Unified Messaging 2007 using the same dialing plan.

**Figure 16**  
Unified Messaging Window—same cost area

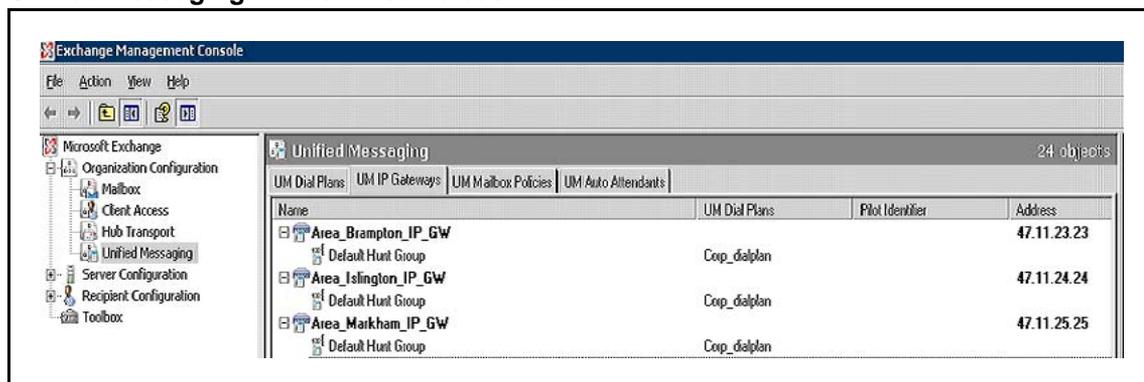

### Subscriber Access and Auto Attendant Configuration

The Subscriber Access (SA) or Auto Attendant (AA) numbers are configured using the same dialing plan. The following examples show two configurations for when these numbers are the same and when the numbers are different.

### Same SA/AA numbers

All nodes in the network are configured with the same SA and AA numbers as shown in the following example.

- Markham
  - Auto Attendant: 5000
  - Subscriber Access: 5001
- Islington
  - Auto Attendant: 5000
  - Subscriber Access: 5001
- Brampton
  - Auto Attendant: 5000
  - Subscriber Access: 5001

### Different SA/AA numbers

All nodes in the network are configured with different SA and AA numbers.

For example, a user in Brampton can access voice mail from any location using the site specific Subscriber Access number of 3001.

- Markham
  - Auto Attendant: 5000
  - Subscriber Access: 5001
- Islington
  - Auto Attendant: 4000
  - Subscriber Access: 4001
- Brampton
  - Auto Attendant: 3000


— Subscriber Access: 3001

## Outbound calling

Using the example diagram in [Figure 15 "CDP Network in the same cost area"](#) (page 82), the assumption is that Islington, Brampton, and Markham locations are within a local calling area. Outbound calls are enabled for all nodes by checking the Allow outgoing calls through this UM IP gateway check box as depicted in the following figure.

When a user selects the Play on the phone option from Outlook 2007, UM sends a request to one of the SIP Gateways in the same dialing plan. If one of these IP Gateways is down, UM selects another IP Gateway in the same dialing plan using a round-robin selection.

**Figure 17**  
**IP Gateway Properties window**

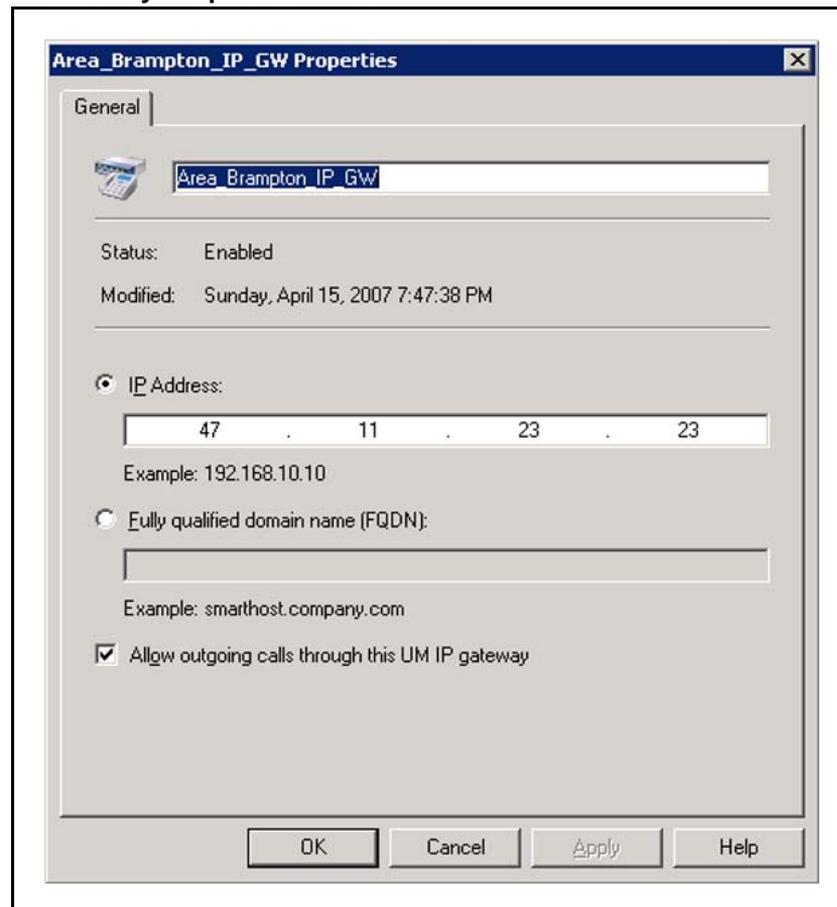

## Message Waiting Indicator configuration

For each other, the gateway is selected on the same node where the user is located. The Message Waiting Indicator (MWI) notification is sent to the selected gateway when a new voice mail message is received by the UM server. In the following figure, the Gateway is selected for the users at the Brampton node.

**Figure 18**  
MWI UM User Properties

**UNIFIED MESSAGING USER PROPERTIES**


<b>Distinguished Name</b>	CN=USER 2012,CN=USERS,DC=UM2007R,DC=CORP,DC=NORTEL,DC=COM
<b>Display Name</b>	USER 2012
<b>Logon Name</b>	USER2012
<b>Email Address</b>	USER2012@UM2007R.CORP.NORTEL.COM
<b>Email WebDAV Access</b>	HTTPS://KQVZP46.UM2007R.CORP.NORTEL.COM/EXCHANGE/USER2012
<b>Email WebService Access</b>	HTTPS://KQVZP46.UM2007R.CORP.NORTEL.COM/EWS/EXCHANGE.ASMX
<b>Extension</b>	2012
<b>GSM Number</b>	[UNSPECIFIED]
<b>Gateway Port</b>	0
<b>Messages Timestamp</b>	4/13/2007 6:10:01 PM
<b>Voice Messages</b>	0
<b>Last Known Voicemail</b>	4/13/2007 6:10:01 PM
<b>Lamp Status</b>	INIT
<b>Lamp Status Timestamp</b>	4/13/2007 6:10:01 PM
<b>Last Event Timestamp</b>	4/13/2007 6:10:01 PM
<b>Subscription Id</b>	[UNKNOWN]
<b>Event watermark</b>	[UNKNOWN]
<b>SIP Gateway</b>	Area_Brampton_IP_GW
<b>MWI Service Enabled</b>	<input checked="" type="checkbox"/>
<b>SMS on Voicemails</b>	<input type="checkbox"/>

**Update Settings**

## Coordinated Dialing Plan network in different cost areas

The following diagram depicts multiple CS 1000 nodes in different locations using Coordinated Dialing Plan (CDP).


**Figure 19**  
CDP network in different cost areas

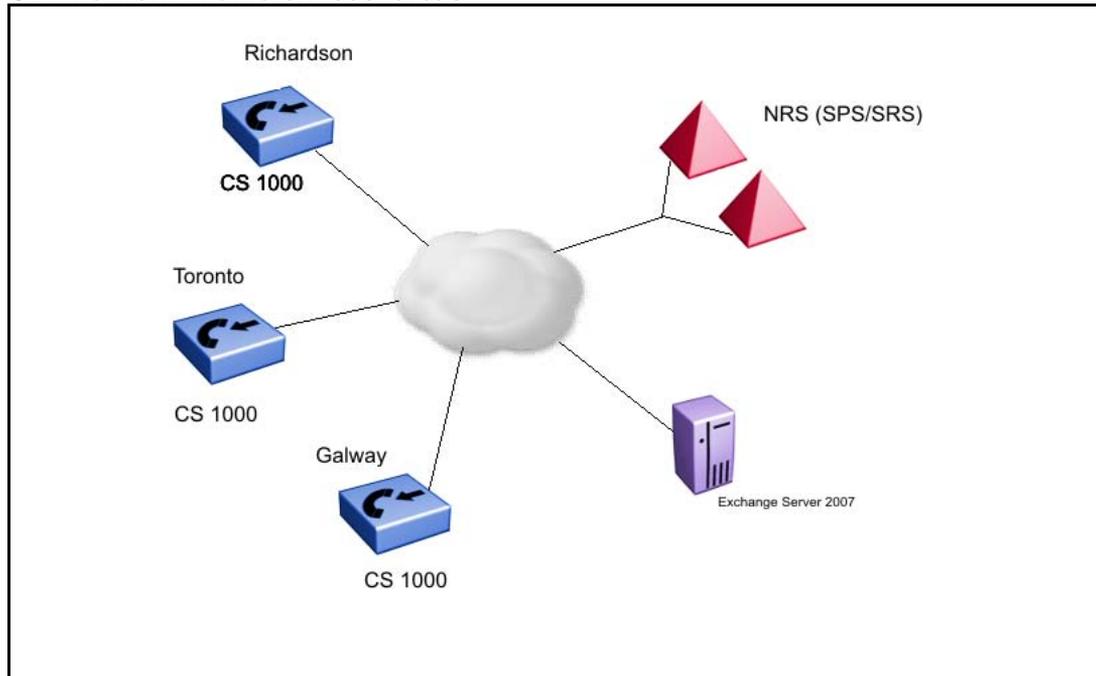

### UM Gateway dialing plan configuration

Each location must have a unique dialing plan associated with the Gateway as shown in the following figure.

**Figure 20**  
CDP in different locations

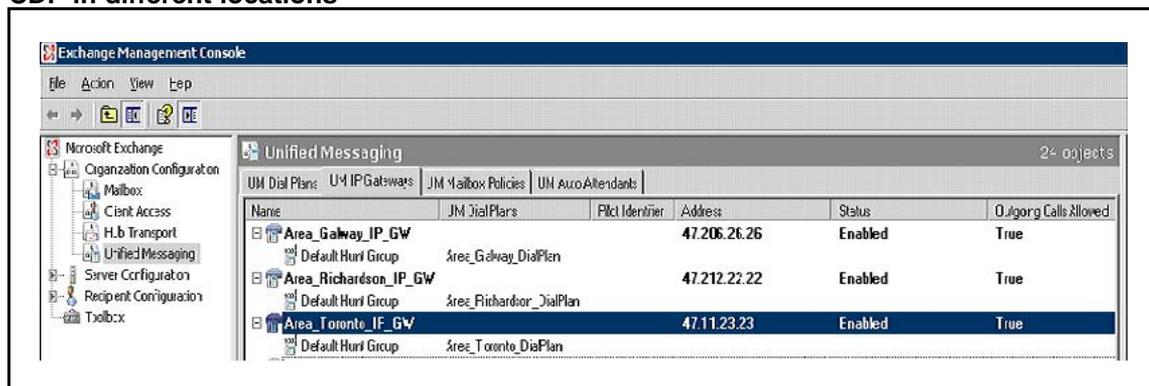

### **Subscriber Access and Auto Attendant configuration**

All nodes in the network are configured with unique SA and AA numbers to access UM.

When a Toronto user accesses the UM service from Richardson, the user dials the local number 4000, the NRS routes the call to the UM server if a routing entry to UM exists. If no routing entry exists, the user cannot access the service because Richardson has a different dialing plan.

- Richardson
  - Auto Attendant: 5000
  - Subscriber Access: 5001
- Toronto
  - Auto Attendant: 4000
  - Subscriber Access: 4001
- Galway
  - Auto Attendant: 3000
  - Subscriber Access: 3001

The administrator must provision the network to allow the UM services to be accessed from different locations. The following example shows how the Desktop Management Interface (DMI) can be used. This example allows users from other locations to use the SA/AA number without incurring long distance charges or restrictions.

- In Richardson, insert prefix 4 for DN 4001, for example 44001.
- Configure 44 as a routing entry for Toronto on the NRS.
- In Toronto, delete prefix 4 and route the call to the NRS to terminate on UM.

### **Outbound calling**

Each location maps to a separate dialing plan. When a user from Richardson selects Play on phone option to dial a number, the call is routed through the Richardson Gateway. Outbound calls for each location are enabled by checking the Allow outgoing calls through this UM IP


gateway check box as depicted in the following figure. Long distance charges and restrictions for the user in the Exchange Server console apply.

### UDP/CDP network in different cost area

The following diagram depicts the three locations in relation to each other as defined in the UDP dialing plan.

For one location to reach another location, the user must dial the location code followed by the user DN.


**Figure 21**  
**UDP/CDP in different cost areas**

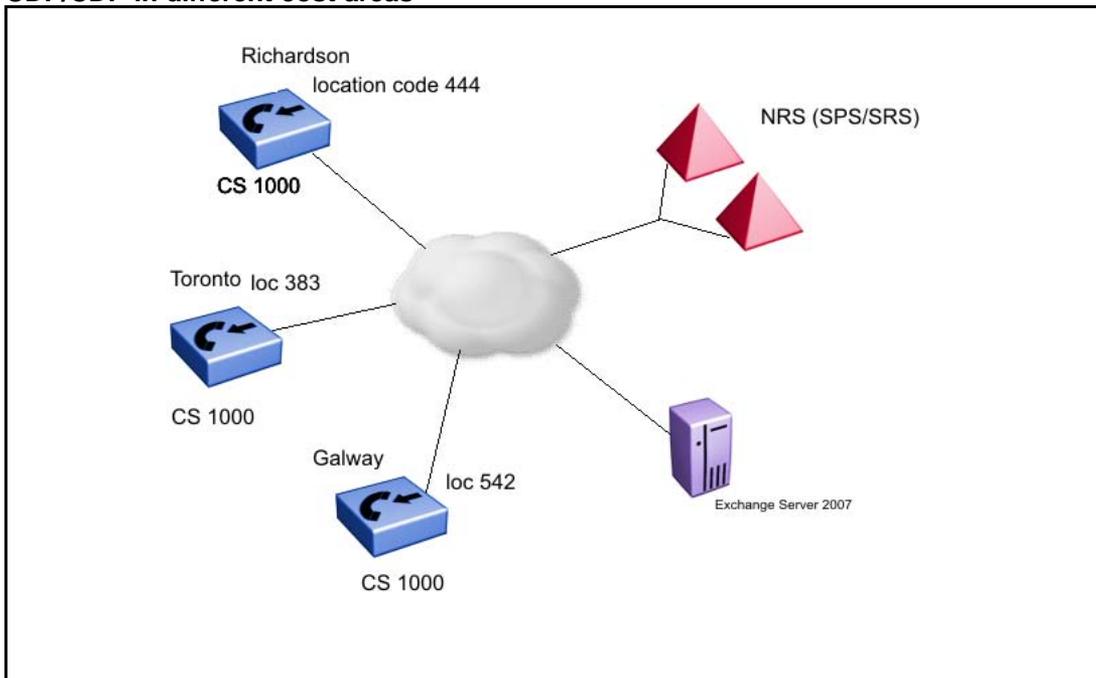

### UM gateway dialing plan configuration

Each location must have a dialing plan associated with the gateway.

**Figure 22**  
**UDP/CDP network in different cost areas**

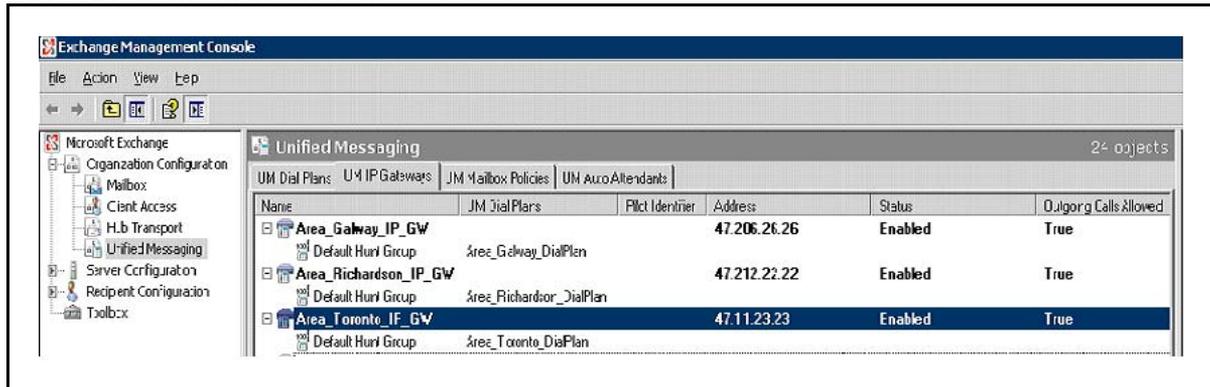

### Subscriber Access and Auto Attendant configuration

Users can directly access the local SA/AA number. When access is required from a remote location, the location code must be prefixed to the SA/AA number.

When a Toronto user accesses UM service from Richardson, the location code of Toronto (383) must be included with the number. For example, 383-5000. The user can then make the call from the home CS 1000. UM permits the Subscriber Access to use the services.

Each node can have the same or different SA/AA numbers. All sites have the same SA/AA number as follows:

- Auto Attendant: 5000
- Subscriber Access: 5001


### Outbound calling

Each location maps to a separate dialing plan. When a user from Richardson selects the Play on phone option to dial a number, the Richardson Gateway is used. The restriction rules apply for the user as defined on the Exchange console.

### Branch Office in the same long distance cost area

The following diagram depicts a Branch office scenario where the Main Office (MO) and two Branch Offices are in the same long distance cost area. One BO is in local mode (IP connection to the MO was lost).


**Figure 23**  
**Branch Office in the same long distance cost area**

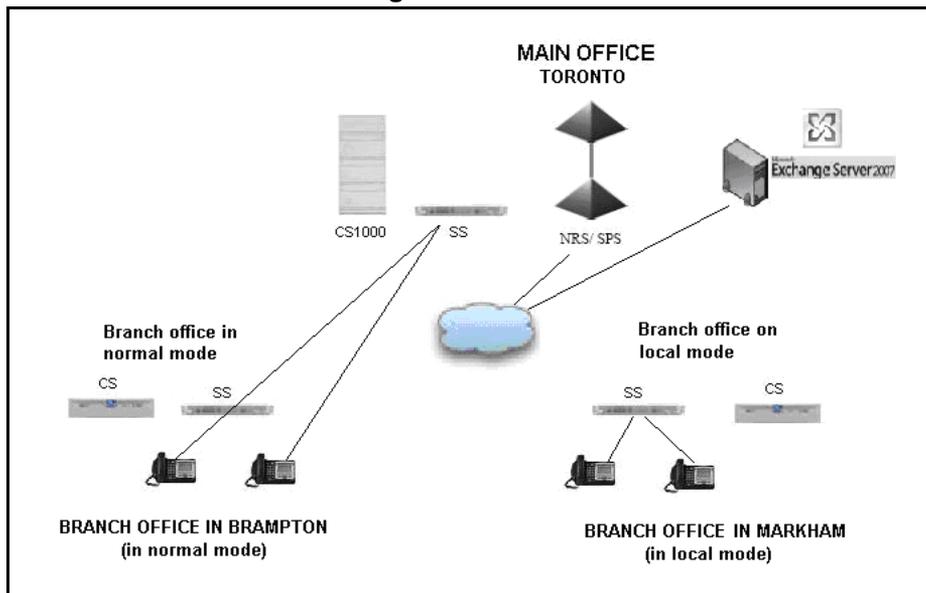

### UM Gateway dialing plan configuration

The gateways at each Main Office and Branch Office site are configured individually on UM 2007 with the same dialing plan,

**Figure 24**  
**BO in the same long distance cost area**

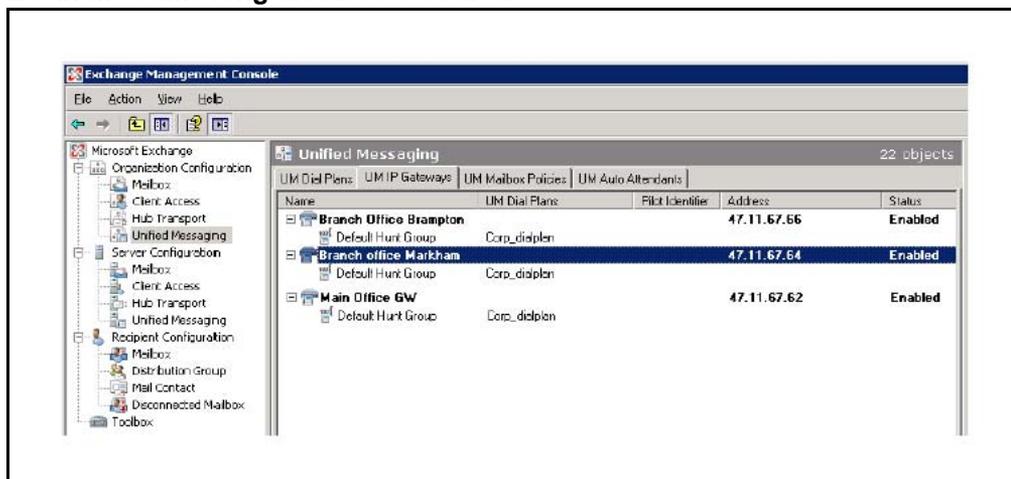

### Subscriber Access and Auto Attendant configuration

The following list describes the Subscriber Access modes available for Branch Office:

- Branch Office in normal mode: In normal mode, telephones are registered to the MO Signaling Server. When a user dials the SA

number, the MO SIP Gateway sends a request to UM 2007. When the MO Gateway is configured with the corporate dialing plan, UM grants access to the user mailbox.

- Branch Office in Local mode: in local mode, telephones are registered to the BO Gateway. When the user dials the SA number, the BO SIP Gateway sends a request to UM 2007. When BO Gateway is configured with the same dialing plan as the MO, UM grants access to the user mailbox.


### **Outbound calling**

When the Branch Office locations are in the same long distance cost area (Toronto, Brampton, and Markham), all three gateways are enabled for outbound calling by selecting the Allow outgoing calls through this UM IP gateway check box as shown in the following figure. When a user selects the Play on phone feature of Outlook 2007, UM sends a request to one of the SIP Gateways in the same dialing plan. When the selected Gateway is down, UM selects another IP Gateway in the same dialing plan using a round-robin selection.

### **MWI configuration**

Each user in the MO/BO is configured for either normal or local Mode. MWI support can be provided to the user either in the normal or local mode, but not both. This is a limitation of the Geomant MWI application. The application does not support multiple IP Gateway configurations for an individual user or multiple instances of the MWI application. The following figure describes the configuration for MWI support for normal mode.

**Figure 25**  
**MWI support for normal mode**

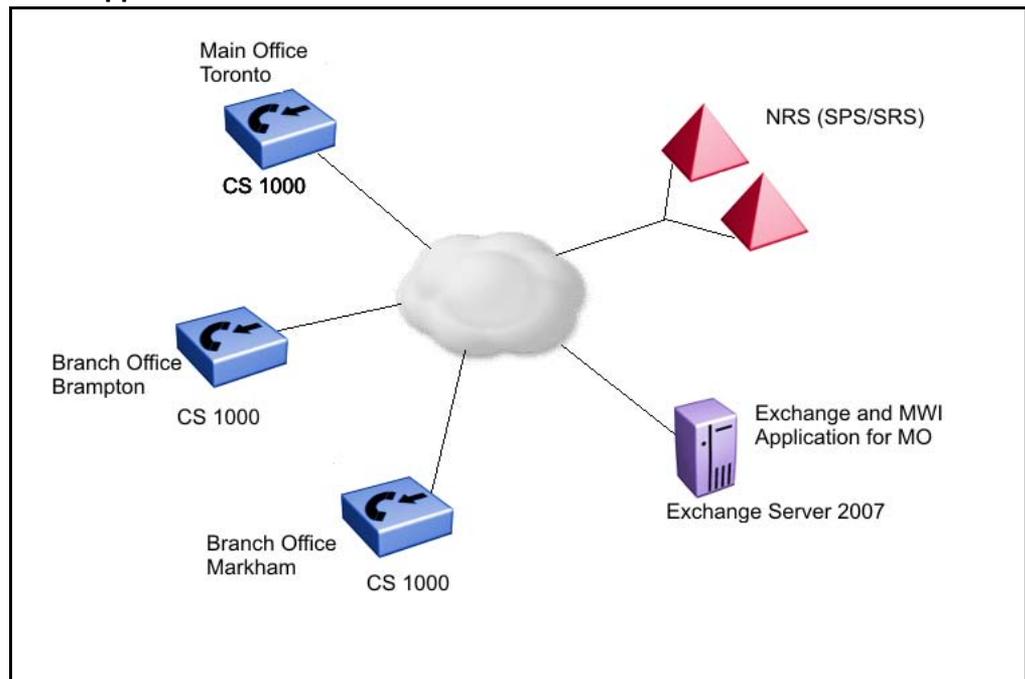


The following describes the required configuration for MWI for Unified Messaging User Properties for normal and local mode for a user on the Brampton BO.

- MWI support for normal mode: The SIP Gateway parameter points to the MO Gateway
- MWI support for local mode: The SIP Gateway parameter points to the Brampton BO Gateway

### **Branch Office in a different long distance cost area**

For outbound calling, the configuration for the Gateway is disabled by clearing the box Allow outgoing calls through this UM IP gateway. This is necessary as one or more BOs are in different long distance cost areas.


**Figure 26**  
**Branch Office in a different long distance cost area**

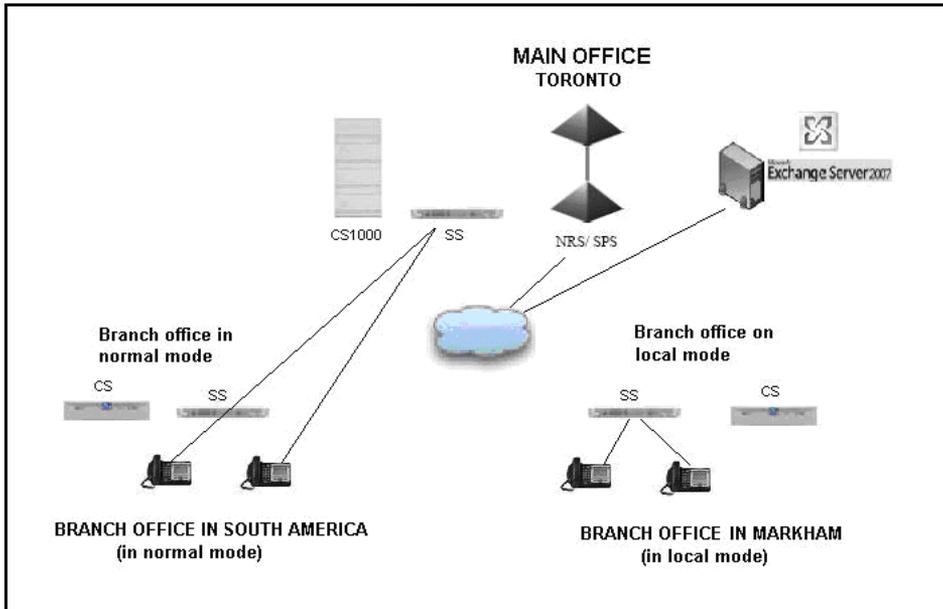

## Virtual Office

The following diagram depicts a virtual office scenario


**Figure 27**  
**Virtual Office**

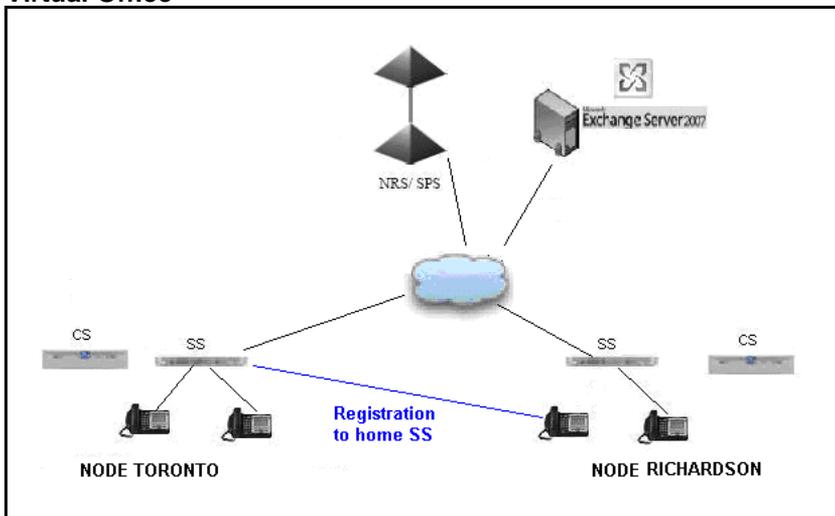

## UM Gateway dialing plan configuration

You can individually configure the gateway on each site using the same or a different dialing plan.

**Figure 28**  
**Unified Messaging Window—Virtual Office dialing plan**

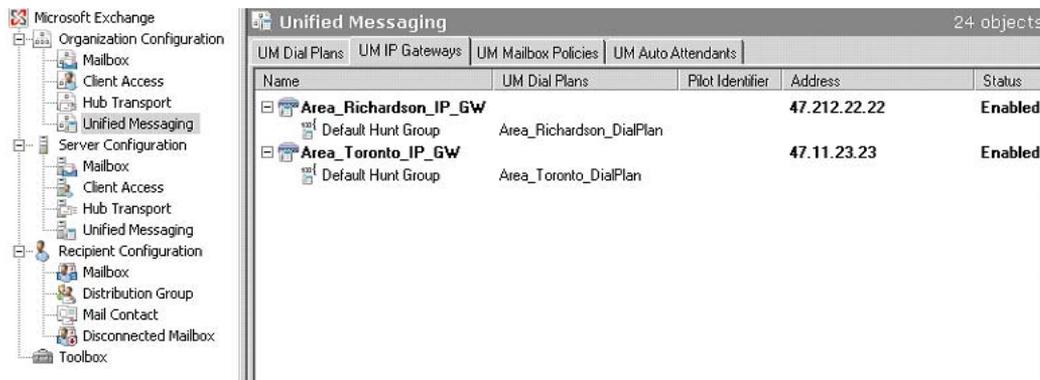

**Subscriber Access and Auto Attendant number configuration**

When a user in Toronto travels temporarily to the Richardson location, the user performs a Virtual Office logon and the telephone registers to the Toronto Gateway. The local Toronto access number is dialed and the Toronto Gateway sends a request to UM allowing access to the user mailbox.


**Outbound calling**

When logged on with the Virtual Office feature, outbound calling is operational.

**Geographic Redundancy**


The following diagram depicts an example of Geographic Redundancy.

**Figure 29**  
**Geographic Redundancy**

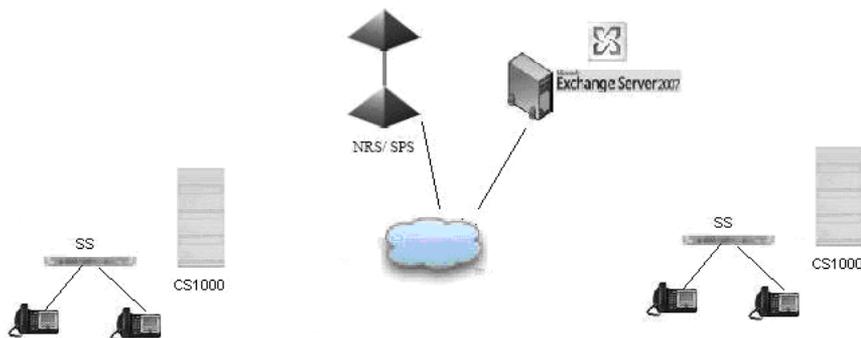

With Geographic Redundancy, telephones are redirected to the secondary Call Server if the Primary Call Server goes down. The Gateway for both Call Servers is configured in UM 2007 using the same dialing plan.

**Figure 30**  
**Geographic Redundancy Dialing plan**

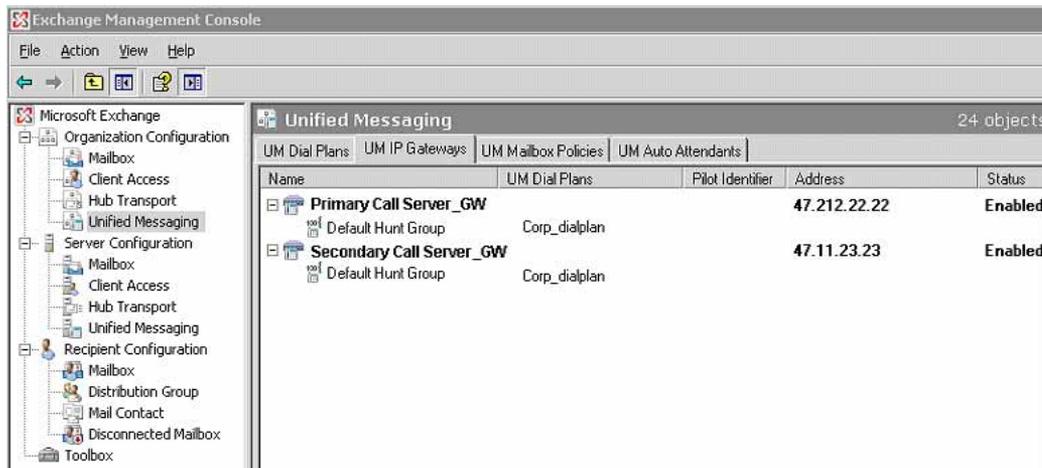

### Subscriber Access and Auto Attendant configuration

The primary and secondary Call Server are both configured as part of the same dialing plan. The users can connect to UM in primary Call Server or secondary Call Server mode.

### Outbound calling

Outbound callings works the same as in Main Office and Branch Office configurations.

### Message Waiting Indicator

The Message Waiting Indicator setup is similar to the Main Office, Branch Office, and Geographic Redundancy configurations.

## Other scenarios

Many combinations of scenarios identified in this chapter are also possible.





Nortel Communication Server 1000

# Communication Server 1000 with Microsoft Exchange Server 2007 Unified Messaging Fundamentals

Release: 7.0

Publication: NN43001-122

Document revision: 04.02

Document release date: 10 June 2010

Copyright © 2007-2010 Nortel Networks. All Rights Reserved.

While the information in this document is believed to be accurate and reliable, except as otherwise expressly agreed to in writing NORTEL PROVIDES THIS DOCUMENT "AS IS" WITHOUT WARRANTY OR CONDITION OF ANY KIND, EITHER EXPRESS OR IMPLIED. The information and/or products described in this document are subject to change without notice.

Nortel, Nortel Networks, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

All other trademarks are the property of their respective owners.

To provide feedback or to report a problem in this document, go to [www.nortel.com/documentfeedback](http://www.nortel.com/documentfeedback).

[www.nortel.com](http://www.nortel.com)

