

Nortel CallPilot

201i Server Hardware Installation

ATTENTION

Clicking on a PDF hyperlink takes you to the appropriate page. If necessary, scroll up or down the page to see the beginning of the referenced section.

Document status: Standard
Document version: 01.01
Document date: 15 February 2007

Copyright © 2007, Nortel Networks
All Rights Reserved.

Sourced in Canada

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

The process of transmitting data and call messaging between the CallPilot server and the switch or system is proprietary to Nortel Networks. Any other use of the data and the transmission process is a violation of the user license unless specifically authorized in writing by Nortel Networks prior to such use. Violations of the license by alternative usage of any portion of this process or the related hardware constitutes grounds for an immediate termination of the license and Nortel Networks reserves the right to seek all allowable remedies for such breach.

Trademarks

*Nortel, the Nortel logo, the Globemark, and Unified Networks, BNR, CallPilot, DMS, DMS-100, DMS-250, DMS-MTX, DMS-SCP, DPN, Dualmode, Helmsman, IVR, MAP, Meridian, Meridian 1, Meridian Link, Meridian Mail, Norstar, SL-1, SL-100, Communication Server 1000, Supernode, Contact Center, Telesis, and Unity are trademarks of Nortel Networks.

3COM is a trademark of 3Com Corporation.

ADOBE is a trademark of Adobe Systems Incorporated.

ATLAS is a trademark of Quantum Corporation.

BLACKBERRY is a trademark of Research in Motion Limited.

CRYSTAL REPORTS is a trademark of Seagate Software Inc.

EUDORA and QUALCOMM are trademarks of Qualcomm, Inc.

ETRUST and INOCULATEIT are trademarks of Computer Associates Think Inc.

DIRECTX, EXCHANGE.NET, FRONTPAGE, INTERNET EXPLORER, LINKEXCHANGE, MICROSOFT, MICROSOFT EXCHANGE SERVER, MS-DOS, NETMEETING, OUTLOOK, POWERPOINT, VISUAL STUDIO, WINDOWS, WINDOWS MEDIA, WINDOWS NT, and WINDOWS SERVER are trademarks of Microsoft Corporation.

GROUPWISE and NOVELL are trademarks of Novell Inc.

INTEL is a trademark of Intel Corporation.

LOGITECH is a trademark of Logitech, Inc.

MACAFEE and NETSHIELD are trademarks of McAfee Associates, Inc.

MYLEX is a trademark of Mylex Corporation.

NETSCAPE COMMUNICATOR is a trademark of Netscape Communications Corporation.

NOTES is a trademark of Lotus Development Corporation.

NORTON ANTIVIRUS and PCANYWHERE are trademarks of Symantec Corporation.

QUICKTIME is a trademark of Apple Computer, Inc.

RADISYS is a trademark of Radisys Corporation.

ROLM is a trademark of Siemens ROLM Communications Inc.

SLR4, SLR5, and TANDBERG are trademarks of Tandberg Data ASA.

SONY is a trademark of Sony Corporation.

SYBASE is a trademark of Sybase, Inc.

TEAC is a trademark of TEAC Corporation.

US ROBOTICS, the US ROBOTICS logo, and SPORTSTER are trademarks of US Robotics.

WINZIP is a trademark of Nico Mark Computing, Inc.

XEON is a trademark of Intel, Inc.

All other trademarks and registered trademarks are the property of their respective owners.

Information for Japan

Japan VCCI Statement

The following applies to server models 1005r, 703t, 201i, and 1002rp:

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の規定に基づくクラス A 装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を取るよう to 要求されることがあります。

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may occur, in which case, the user may be required to take corrective action.

Publication History

February 2007

CallPilot 5.0, Standard 01.01 of the *CallPilot 201i Server Hardware Installation* guide is issued for general release.

Contents

Chapter 1 How to get help	9
Chapter 2 About the 201i server	11
201i server description 11	
Reference Documents 11	
Network connectivity 18	
Peripheral connectivity 22	
Chapter 3 Preparing for installation	27
Installation overview 27	
Unpacking and inspecting the 201i server 31	
Switch and network requirements 33	
Chapter 4 Installing the 201i server in a large Meridian 1 system	37
Overview 37	
Repositioning the secondary backplane connector 39	
Installing the 201i server in the large Meridian 1 switch 42	
Removing the backplane (tip and ring) cables 43	
Installing the NTRH3501 backplane cable 47	
Installing the SCSI cables for Meridian 1 49	
Chapter 5 Installing the 201i server in an Option 11C or Option 11C Mini	55
Installing the 201i server in the Option 11C or Option 11C Mini switch 55	
Section A: Installing Option 11C cables 58	
Installing the intermediate SCSI cable for Option 11C 58	
Section B: Installing Option 11C Mini cables 63	
Installing the NTRH3502 SCSI cable for Option 11C Mini 63	
Installing cables on the back of the Option 11C Mini cabinet 68	
Chapter 6 Installing the 201i server in the Communication Server 1000 system	71
Communication Server 1000 description 71	
Removing the Media Gateway or Media Gateway Expansion cover 75	
Installing the 201i server 77	

Installing the NTRH3502 SCSI cable for Communication Server 1000 80
Replacing the Media Gateway or Media Gateway Expansion cover 82
Connecting cables to the Communication Server 1000 system 85

Chapter 7 Preparing peripheral devices 89

Overview 89
Setting the modem DIP switches 90
Setting the CD-ROM drive SCSI ID and DIP switches 92
Setting the tape drive SCSI ID 94
Setting SCSI device termination 95

Chapter 8 Connecting peripheral devices to the 201i server 99

Overview 99
Installing the MPCs 102
Installing the monitor, keyboard, and mouse 104
Connecting the CD-ROM and tape drives 105
Connecting the 201i server to the switch, ELAN subnet , and Nortel server
subnet 113
Connecting the modem 116
Completing the installation 118

Index 120

Chapter 1

How to get help

This section explains how to get help for Nortel products and services.

Getting help from the Nortel Web site

The best way to get technical support for Nortel products is from the Nortel Technical Support Web site:

<http://www.nortel.com/support>

This site provides quick access to software, documentation, bulletins, and tools to address issues with Nortel products. More specifically, the site enables you to:

- download software, documentation, and product bulletins
- search the Technical Support Web site and the Nortel Knowledge Base for answers to technical issues
- sign up for automatic notification of new software and documentation for Nortel equipment
- open and manage technical support cases

Getting help over the phone from a Nortel Solutions Center

If you don't find the information you require on the Nortel Technical Support Web site, and have a Nortel support contract, you can also get help over the phone from a Nortel Solutions Center.

In North America, call 1-800-4NORTEL (1-800-466-7835).

Outside North America, go to the following Web site to obtain the phone number for your region:

<http://www.nortel.com/callus>

Getting help from a specialist by using an Express Routing Code

To access some Nortel Technical Solutions Centers, you can use an Express Routing Code (ERC) to quickly route your call to a specialist in your Nortel product or service. To locate the ERC for your product or service, go to:

<http://www.nortel.com/erc>

Getting help through a Nortel distributor or reseller

If you purchased a service contract for your Nortel product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller.

Chapter 2

About the 201i server

In this chapter

"201i server description" (page 11)

"Network connectivity" (page 18)

"Peripheral connectivity" (page 22)

201i server description

Introduction

The 201i server is a flexible multimedia telephony server designed to integrate with Nortel Meridian 1* and Communication Server* 1000 products.


The 201i server occupies two slots of a Meridian 1 shelf or Communication Server 1000 Media Gateway or Media Gateway Expansion. When the server is locked into position, its connectors attach to the backplane, which provides power and communications links.

Reference Documents

For a list of all CallPilot documents, see the following Customer Documentation Map.



CallPilot Customer Documentation Map

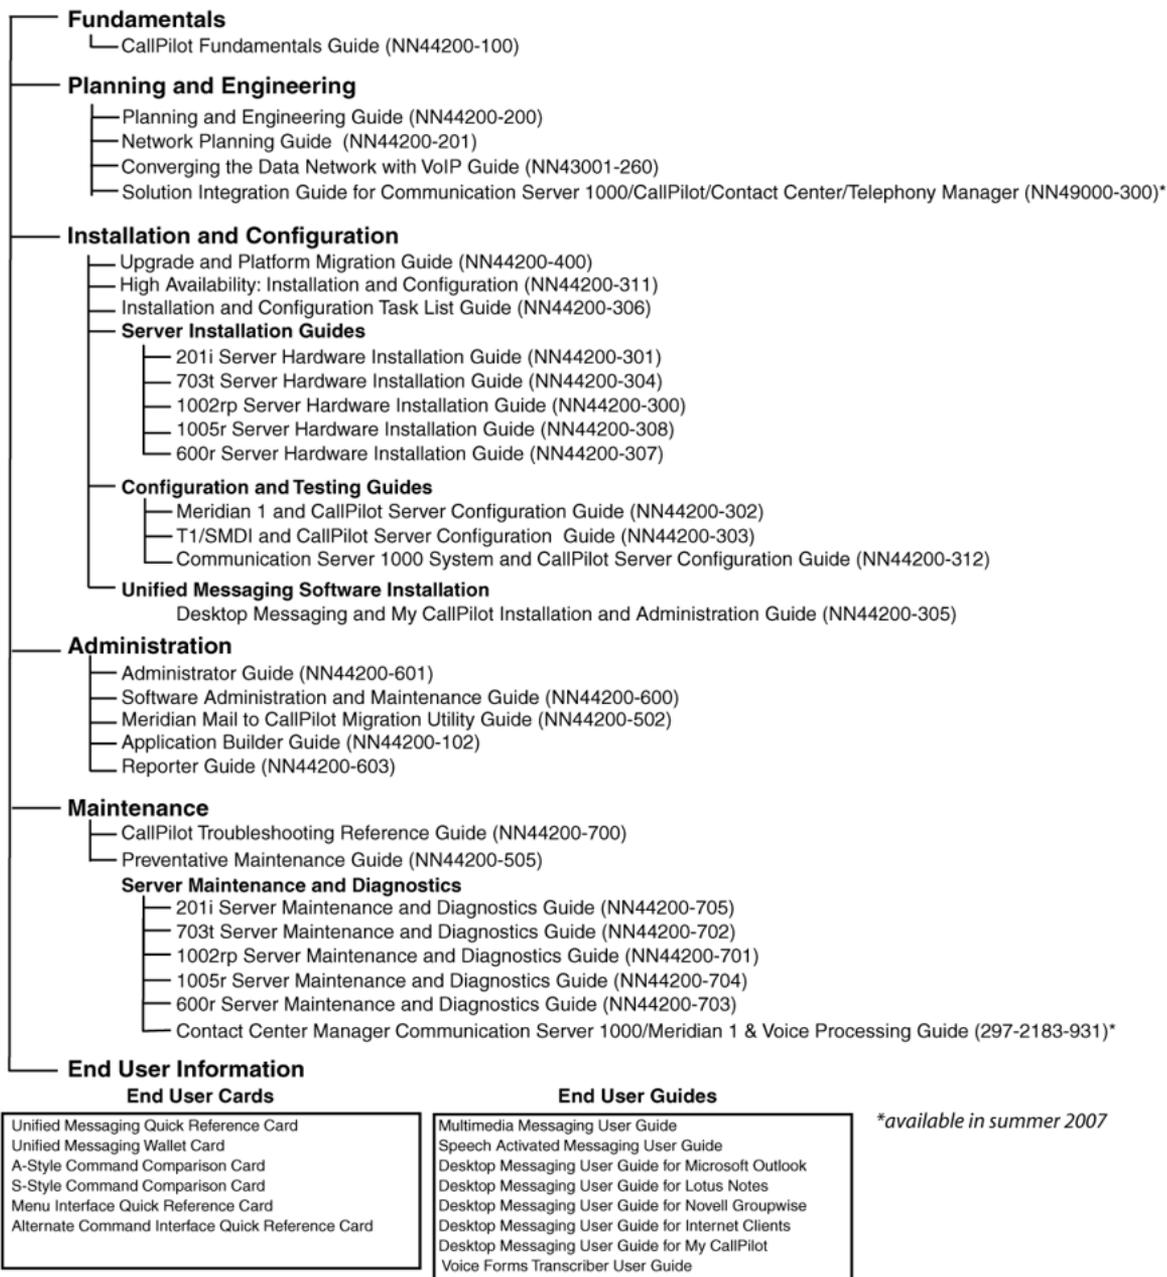

*available in summer 2007

Primary components

The 201i server motherboard houses the interfaces needed:

- to communicate with the Meridian 1 switch or Communication Server 1000 system.
- to facilitate data communications on Ethernet networks.


Two Ethernet controllers on the 201i server motherboard provide Ethernet capability. These controllers provide the network interfaces for both the ELAN subnet and the Nortel server subnet. The connections to these subnets are established by using the multi I/O cable described on "[Multi I/O cable description](#)" (page 21).

Note: The secondary backplane connector connects the 201i server to the second slot on the shelf, thereby providing access to the voice channels provided by that slot.

ATTENTION


The 201i server is shipped ready for installation into an Option 11C or Option 11C Mini switch or Communication Server 1000 system. Before you install the 201i server in a larger Meridian 1 switch (for example, Option 51C), you must move the secondary backplane (DS30X) connector to the correct position. For more information, see "[Repositioning the secondary backplane connector](#)" (page 39).

The following diagram shows the 201i server components:.

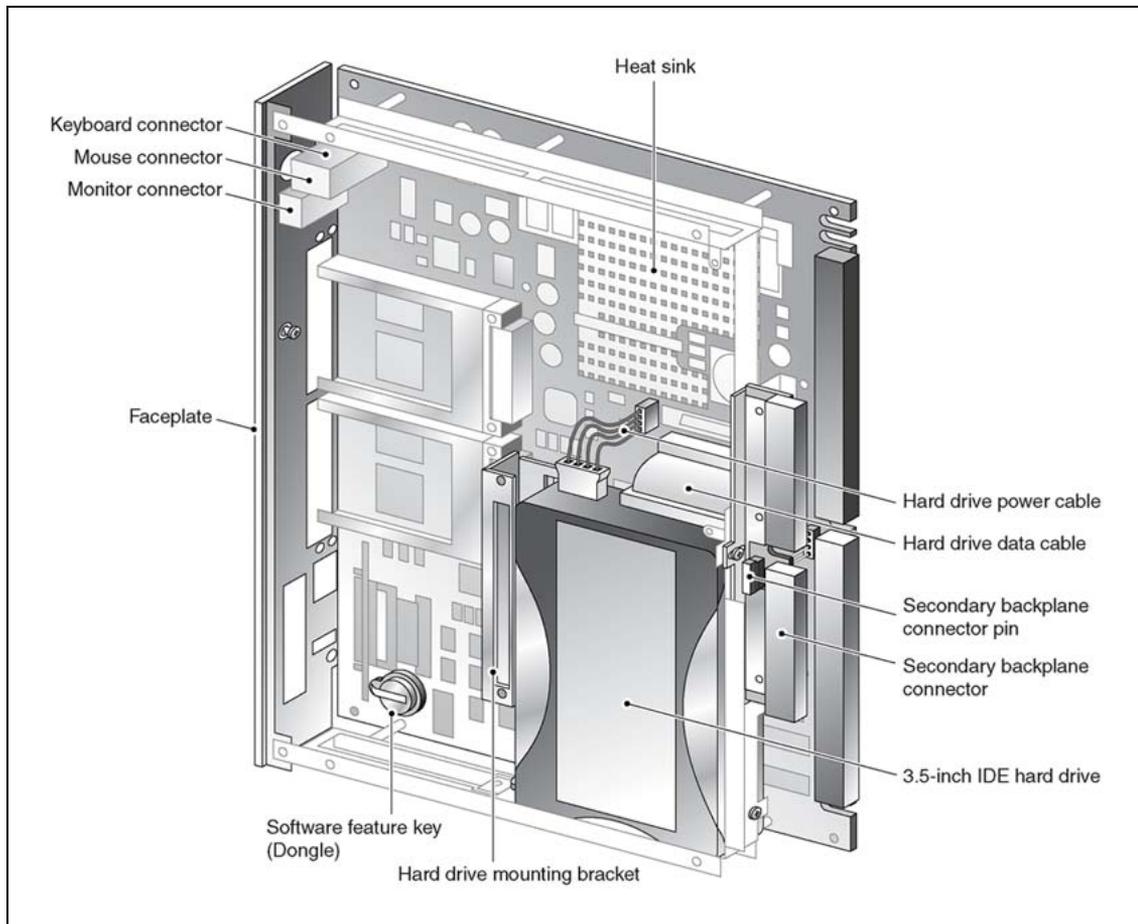

Faceplate

The following diagram shows the 201i server faceplate. The faceplate provides LEDs, MPC card slots, and connectors for peripheral devices:

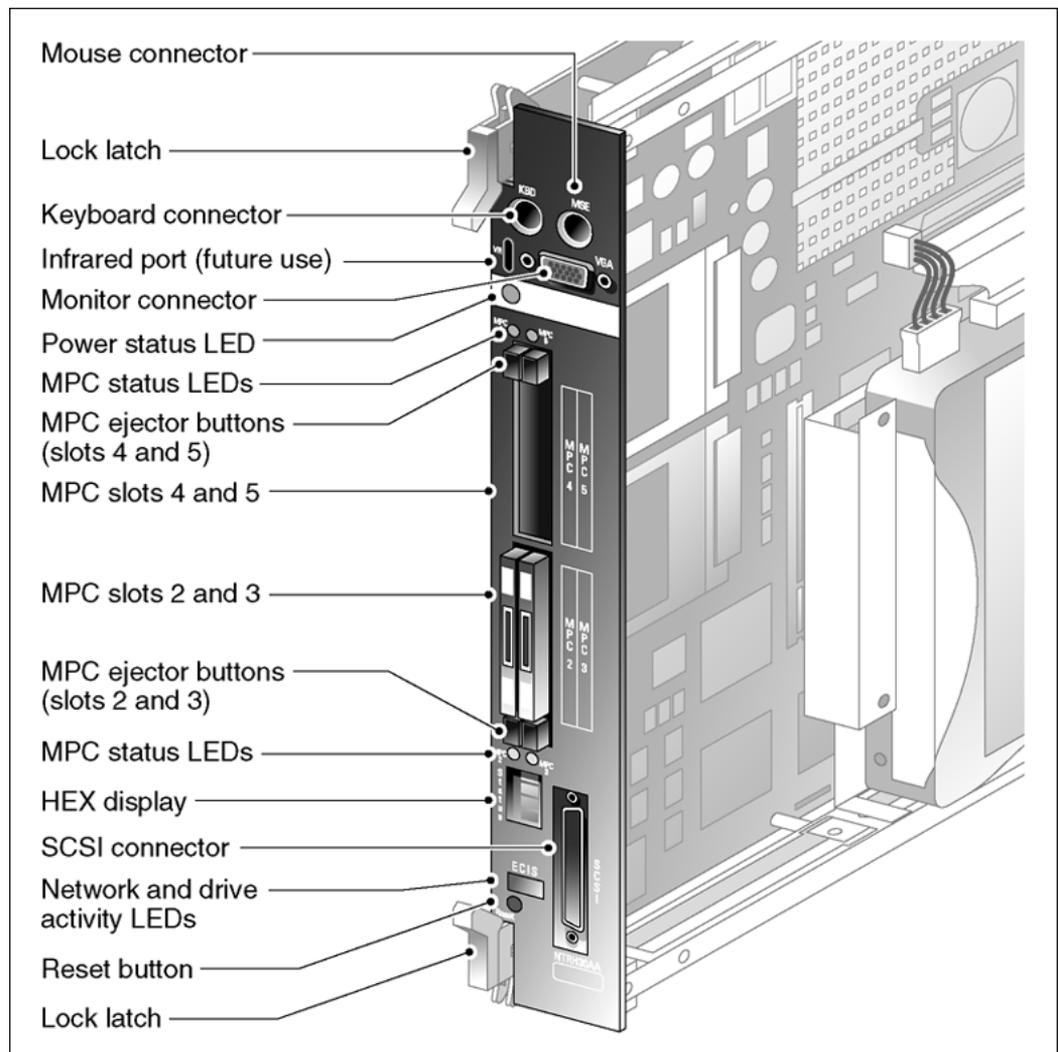

G101438

The following table describes each faceplate feature:

Faceplate feature	Description
Mouse connector	The mouse connector is a standard PS/2 connector and is hot-pluggable.
Lock latches	Lock latches at the top and bottom of the faceplate secure the server to the backplane of the Meridian 1 switch or the backplane of the Communication Server 1000 Media Gateway or Media Gateway Expansion.
Keyboard connector	The keyboard connector is a standard PS/2 connector and is hot-pluggable.
Infrared port	For future use.

Faceplate feature	Description
Monitor connector	The monitor connector is a standard, high-density, 15-pin female connector.
Power status LED	<p>The LED indicates two server states:</p> <ul style="list-style-type: none">• the completion of self-test diagnostics• when it is safe to remove the server from the Meridian 1 switch or Communication Server 1000 Media Gateway or Media Gateway Expansion
MPC card status LEDs	<p>There is an LED for each MPC card slot. The following list describes each LED status:</p> <ul style="list-style-type: none">• Off: The MPC card is not receiving power. It is safe to remove the card.• On: The MPC card is in use. It is <i>not</i> safe to remove the card.• Off, then on: The MPC card has been recognized by the 201i server software and has been powered up.• On, then off: The MPC card has been successfully powered down. It is safe to remove the card. <p>Note: For instructions on powering up or powering down the MPC card, see "Starting and stopping components" in the <i>CallPilot* <server model> Server Maintenance and Diagnostics</i> guide for your server.</p>
MPC card ejector buttons	<p>There is one ejector button for each MPC card slot. When you insert the card, the associated ejector button pops out.</p> <p>Press the button to eject the card from its slot.</p>

Faceplate feature	Description
MPC card slots	<p>MPCs house DSP units and are used for multimedia telephony processing. You can install up to four MPCs on the 201i server. The 201i is shipped with two MPC-8 cards installed. All slots are faceplate-accessible.</p> <p>The MPCs are numbered as follows:</p> <ul style="list-style-type: none"> • top row of slots: MPC cards 4 and 5 • bottom row of slots: MPC cards 2 and 3 <p>Note: MPC 1 is embedded on the motherboard.</p>
Hexadecimal (HEX) display	The four-digit LED-based display provides feedback on the current status of the server, including fault conditions.
SCSI connector	<p>This connector connects SCSI devices to the 201i server (for example, a CD-ROM or tape drive).</p> <p>Press the button latches to lock or unlock a cable from the connector.</p>
Network and drive activity LEDs (labeled as E, C, I, and S)	<p>The E and C LEDs indicate the presence of network activity for both the ELAN and CLAN interfaces (respectively). When they are lit, they indicate that the interfaces are properly attached to their respective hubs. When the LEDs are blinking, there is network activity.</p> <p>When the I and S LEDs are lit, it means that the IDE hard drive and SCSI device are being accessed.</p>
Reset button	The reset button allows you to manually restart the 201i server without disconnecting it from the backplane.

ATTENTION

Before you press the reset button, you must shut down the operating system. Press the reset button while the operating system is running *only* when you cannot shut down the operating system normally.

Environmental specifications

Temperatures

Recommended temperature	15°C (59°F) to 30°C (86°F)
Absolute temperature	10°C (50°F) to 45°C (113°F)
Long-term storage temperature	-20°C (-4°F) to 60°C (140°F)
Short-term storage temperature	-40°C (-40°F) to 70°C (158°F) (less than 72 hours)
Change rate temperature	Less than 1°C (34°F) per 3 minutes

Relative humidity

Recommended relative humidity (RH)	20% to 55% RH (noncondensing)
Absolute RH	20% to 80% RH (noncondensing)
Long-term storage RH	5% to 95% RH [at -40°C (-40°F) to 70°C (158°F) respectively] (noncondensing)

Network connectivity

Introduction

This section shows how CallPilot and the Meridian 1 or Communication Server 1000 system are integrated into your network. It also describes what is required in the network for correct CallPilot operation.


ATTENTION

To secure the CallPilot server from unauthorized access, ensure that the CallPilot network is inside your organization's firewall.

Sample network setup: Meridian 1 switch

The following diagram shows how the 201i server is integrated into your network with the following Meridian 1 switches:

- large systems, such as Option 51C
- Option 11C
- Option 11C Mini

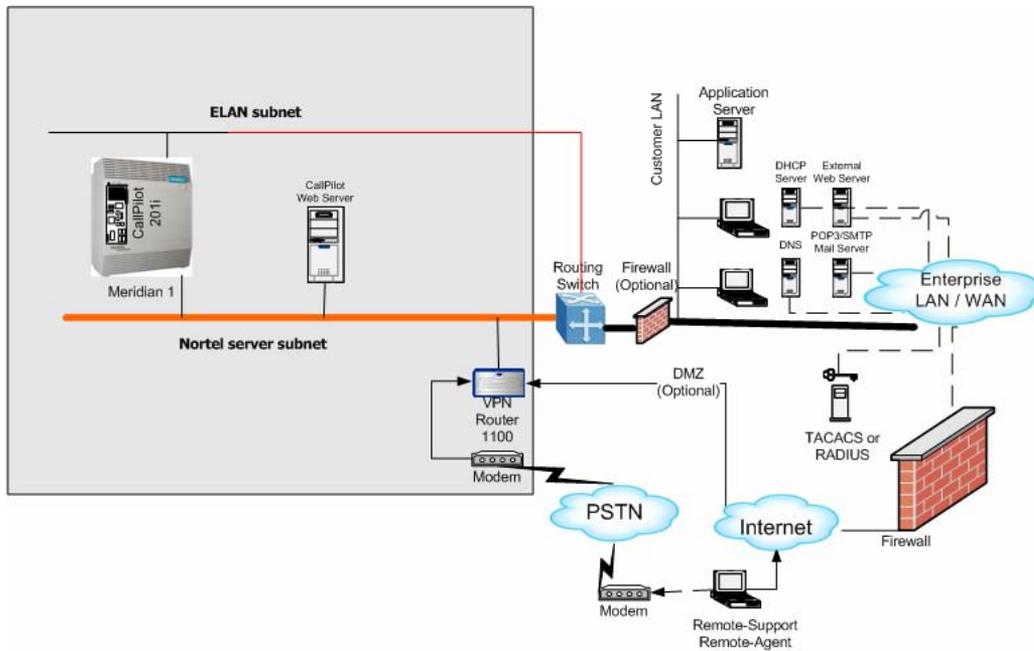


Sample network setup: Communication Server 1000

The following diagram shows an example of how the 201i server can be integrated with the Communication Server 1000 system in your network:

* Notes

1. Media Gateway or Media Gateway expansion can be used.
2. CallPilot Server represents 201i CallPilot Server, which is an internal card.

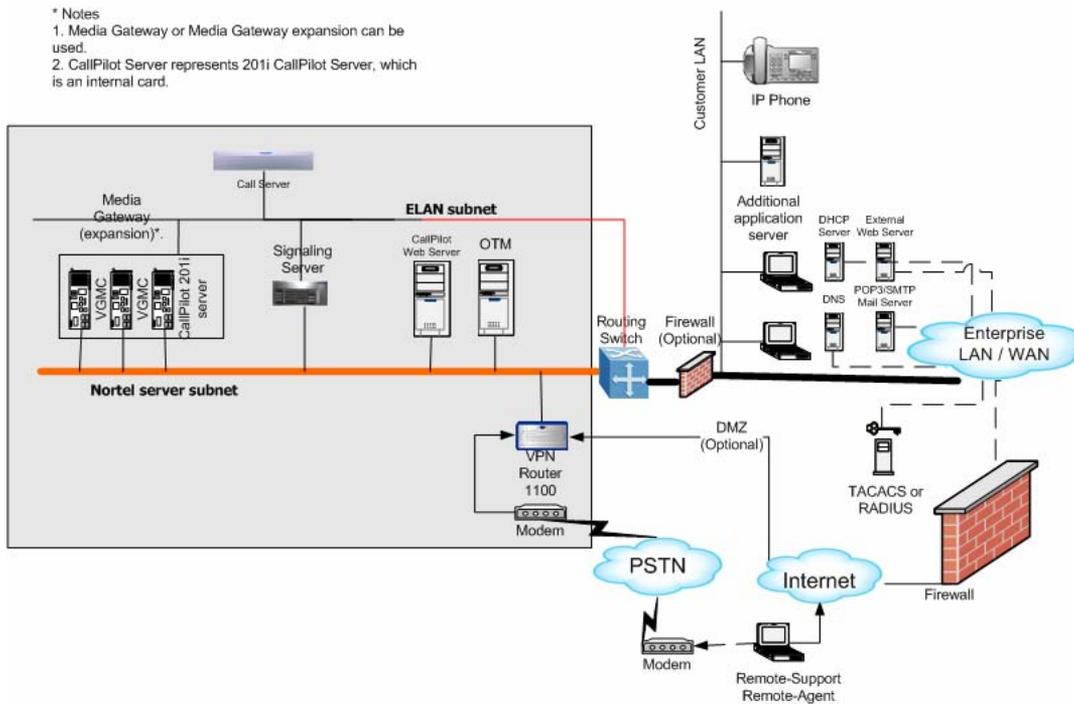

Nortel CallPilot
 201i Server Hardware Installation
 NN44200-301 01.01 Standard
 5.0 15 February 2007

In the illustration on "[Sample network setup: Communication Server 1000](#)" (page 19), the telephony LAN (TLAN) provides IP connectivity between the Communication Server 1000 system and the i2004 Internet telephones. The connection between the Call Server and Media Gateway can be point-to-point, or it can be through the LAN, if the system is installed in a distributed data network.

For information about the Communication Server 1000 system and i2004 Internet telephone bandwidth and network requirements, refer to the *Communication Server 1000 Planning and Installation Guide*

For a description of each Communication Server 1000 system component, see "[Communication Server 1000 description](#)" (page 71).

CallPilot Nortel server subnet and ELAN subnet setup

The 201i server supports the following network protocols:

- CLAN: 10/100Base-T Ethernet

A built-in Ethernet controller on the 201i server motherboard provides Ethernet connectivity to the Nortel server subnet. The Nortel server subnet provides data connectivity between desktop and web messaging clients, administrative PCs, and the CallPilot server.

- ELAN: 10Base-T Ethernet

A built-in Ethernet controller on the 201i server motherboard provides Ethernet connectivity to the ELAN subnet. The ELAN subnet carries call processing traffic between the CallPilot server and the Meridian 1 switch or Communication Server 1000 system.

Note: For more information about the ELAN subnet, see the *CallPilot Installation and Configuration Task List*.

You use the 201i server multi I/O cable to establish the connections to the ELAN subnet and the Nortel server subnet. For more information, see "[Multi I/O cable description](#)" (page 21).

Network requirements

Appropriate networking equipment must be available for both the Nortel server subnet and ELAN subnet.


The Nortel server subnet and ELAN subnet must be properly configured for correct CallPilot operation. To ensure correct configuration, Nortel recommends that you consult a network specialist.

ATTENTION

For important considerations about using the ELAN subnet in your network, see the *CallPilot Installation and Configuration Task List*.

Multi I/O cable description

The multi I/O cable contains four connectors, and is approximately 3 m (10 ft) in length. See the following diagram:

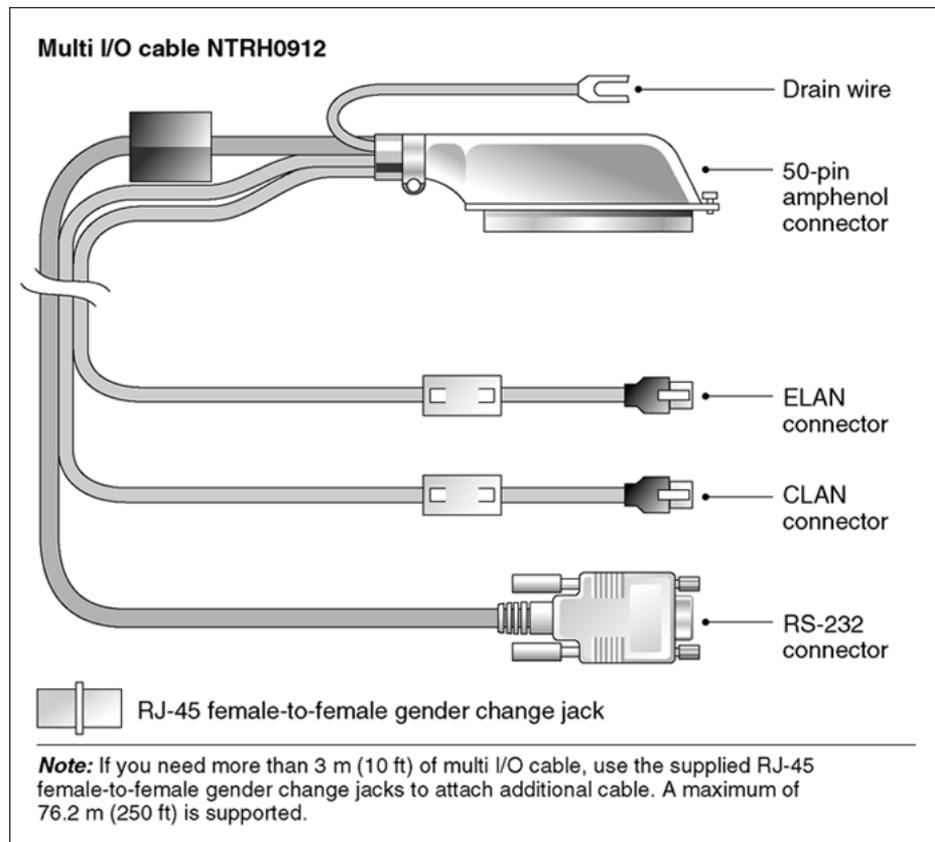

G101441

The following table identifies the purpose of each connector on the NTRH0912 multi I/O cable.

Note: Labels on the RJ-45 cables distinguish the CLAN and ELAN connectors.

Connector type	Purpose
50-pin amphenol	This connector establishes the connection between the Meridian 1 or Communication Server 1000 Media Gateway or Media Gateway Expansion backplane, ELAN and CLAN Ethernet hubs or switches, and modem.

Connector type	Purpose
10Base-T (RJ-45)	<p>This connector provides a 10 Mbit/s Ethernet connection between the 201i server and the Meridian 1 switch or Communication Server 1000 system. This connection allows the exchange of call control information between the server and the Meridian 1 switch or Communication Server 1000 system.</p> <p>For more information about the ELAN subnet, see the <i>CallPilot Installation and Configuration Task List</i>.</p>
10/100Base-T (RJ-45)	<p>This connector provides a network connection for</p> <ul style="list-style-type: none"> • user desktop computers, to enable use of the unified messaging and fax messaging features • LAN-based server administration
<p>ATTENTION</p> <p>If you need Ethernet 100Base-T operation at 100 Mbit/s on large Meridian 1 systems (such as Option 51), you must install the NTRH3501 backplane (tip and ring) cable. For more information, see Chapter 4 "Installing the 201i server in a large Meridian 1 system" (page 37).</p>	
RS-232 COM1 (male DB-9)	<p>This connector provides the connection to an external modem. The modem allows administrators and technical support personnel to administer the 201i server from a remote location.</p>

Peripheral connectivity

Introduction

Peripheral equipment is attached to the 201i server on the server faceplate.

Faceplate connections

ATTENTION

Connections made to the faceplate (with the exceptions noted below) are temporary only, because you must remove the cabinet cover to make these connections. The system does not meet specifications for radiated EMI if you remove the cabinet cover.

The following peripheral devices connect to the 201i server faceplate:

- monitor (SVGA)
- keyboard
- mouse
- MPC card (permanent connection)
- SCSI cable (permanent connection)

Monitor, keyboard, and mouse

You must connect a monitor, keyboard, and mouse to run the Configuration Wizard or to install the operating system on the 201i server as part of a recovery process.

All three peripheral components are hot-pluggable.

MPC-8 card

The MPC-8 card looks like a Type II PC card, and supports the multimedia telephony services on the 201i server. Four specially-designed card slots are available for the MPC-8. All are located on the 201i server faceplate.

ATTENTION

You cannot insert MPC-8 cards in Type II PC card slots, or Type II PC cards into MPC-8 card slots. They are not compatible.

SCSI connections

The SCSI connection is the only permanent faceplate connection. A low-profile right-angle connector on the SCSI cable allows the cable to be attached with the cabinet covers on. For more information about how the 201i server and SCSI device connections are achieved, see:

- large Meridian 1 systems (for example, Option 51C): ["Installing the SCSI cables for Meridian 1" \(page 49\)](#).
- Option 11C or Option 11C Mini: ["Installing the NTRH3502 SCSI cable for Option 11C Mini" \(page 63\)](#).
- Communication Server 1000: ["Installing the NTRH3502 SCSI cable for Communication Server 1000" \(page 80\)](#).

Supported peripheral devices

CD-ROM drive (NTRH9037)

An external CD-ROM drive is used to install and upgrade the server. The drive connects to the server with an intermediate SCSI cable that connects to the SCSI connector on the faceplate.

Because the CD-ROM drive is an external device, it requires an AC power source.

Set the SCSI ID for the CD-ROM drive to 3. If you are connecting more than one SCSI device to the server (such as a tape drive), you must daisy chain those devices.

Note: The CD-ROM drive is not hot-pluggable. You must power off the server to connect or disconnect the drive.

Tape drive (NTRH9038)

An external SCSI tape drive is used to back up and restore data. The device connects to the server by an intermediate SCSI cable that connects to the SCSI connector on the faceplate.

Since the tape drive is an external device, it requires an AC power source.

Set the SCSI ID for the tape drive to 5. If you are connecting more than one SCSI device to the server (such as a CD-ROM drive), you must daisy chain those devices.

Note: The tape drive is not hot-pluggable. You must power off the server to connect or disconnect the drive.

Modem

An external modem provides remote access to the 201i server. The modem connects to the RS-232 COM1 connector on the multi I/O cable.

Since the modem is an external device, it requires its own AC power source.

The supported modem is the 56 Kbps modem (NTRH9078).

10Base-T Ethernet hub or switch

The 10Base-T Ethernet hub provides the ELAN subnet connection between the 201i server and the Meridian 1 switch or Communication Server 1000 system.

Since the hub or switch is an external device, it requires an AC power source.

Monitor, keyboard, and mouse

- 15 in. monitor: NTRH9011 or N0038380 LCD monitor

Since the monitor is an external device, it requires an AC power source.

- Keyboard: NTRH9013
- Mouse: NTRH9014

Note: The mouse connector on the 201i faceplate is a PS/2 connector. If you plan to use a USB mouse with USB-to-PS/2 converter, you must also use the Nortel-supplied 101 mm (4-in) PS/2 extension cable (A0855616). Without the extension cable, the monitor connector partially blocks the mouse connector.

Chapter 3

Preparing for installation

In this chapter

"Installation overview" (page 27)

"Unpacking and inspecting the 201i server" (page 31)

"Switch and network requirements" (page 33)

Installation overview

Introduction

This section provides a high-level overview of the requirements and procedure for installing the 201i server.

Before you begin

Ensure that proper power and grounding are available for all the power outlets serving the CallPilot server and its associated peripherals. Power for these devices must be wired and fused independently of all other receptacles and referenced to the same ground as the PBX system.

A qualified electrician must implement the single-point ground reference as required between the power outlets of the CallPilot server and the power outlets of the switch.

Provide a sufficient number of properly grounded power outlets or power bars for all equipment.

For more information, refer to Chapter 2, "Grounding and power requirements", in the *CallPilot Planning and Engineering Guide*.

Installation checklist

The following checklist identifies the steps required to install the 201i server and peripheral devices. For more details, see [Chapter 8 "Connecting peripheral devices to the 201i server"](#) (page 99).



WARNING

Risk of personal injury and hardware failure

The power outlets used by the CallPilot server and its peripheral devices must be connected to the same ground reference as the one used by the Meridian 1 switch or Communication Server 1000 system with MGate cards (NTRB18CA) connected to the CallPilot server. If this requirement is not met, power transients can cause personal injury and hardware failure.

Step	Description	Check
1	<p>Ensure that you have reviewed the "Installing CallPilot" section in the <i>CallPilot Installation and Configuration Task List</i> and completed stage 1 of the "Installation checklist."</p> <p>This includes the following tasks:</p> <ul style="list-style-type: none"> • Unpack the server, and ensure you have all the items you need (see "Unpacking and inspecting the 201i server" (page 31)). <p>Complete the following checklists that are provided in the <i>CallPilot Installation and Configuration Task List</i>:</p> <ul style="list-style-type: none"> — "CallPilot software media and documentation checklist" — "CallPilot server hardware checklist" <ul style="list-style-type: none"> • Inspect the server for any damage that might have occurred during shipping (see "Unpacking and inspecting the 201i server" (page 31)). 	<input type="checkbox"/>
2	Familiarize yourself with the " Switch and network requirements " (page 33) of this guide.	<input type="checkbox"/>

Step	Description	Check
3	<p>If you are installing the 201i server into a Meridian 1 tiered system, do the following:</p> <ul style="list-style-type: none">• Change the location of the secondary backplane (DS30X) connector on the 201i server (see "Repositioning the secondary backplane connector" (page 39)).• Replace the existing backplane (tip and ring) cable on the Meridian 1 with the one supplied with the 201i server (NTRH3501) (see pages "Removing the backplane (tip and ring) cables" (page 43)-"What is next?" (page 49)).	<input type="checkbox"/>
4	<p>Install the intermediate SCSI cable. This cable connects the external CD-ROM or tape drive.</p> <ul style="list-style-type: none">• For Meridian 1, you require two cables to complete the connection between the 201i server and the SCSI device: NTRH1408 and NTRH1410. See "Installing the SCSI cables for Meridian 1" (page 49).• For Option 11C, you require two cables to complete the connection between the 201i server and the SCSI device: NTRH1407 and NTRH3502. See "Installing the intermediate SCSI cable for Option 11C" (page 58).• For Option 11C Mini or Communication Server 1000, you require one cable to complete the connection between the 201i server and the SCSI device: the NTRH3502 cable that is provided in the CD-ROM and tape drive kits. See the following:<ul style="list-style-type: none">— Option 11C Mini: "Installing the NTRH3502 SCSI cable for Option 11C Mini" (page 63)— Communication Server 1000: "Installing the NTRH3502 SCSI cable for Communication Server 1000" (page 80)	<input type="checkbox"/>
5	<p>Set the DIP switches on the modem (see "Setting the modem DIP switches" (page 90)).</p>	<input type="checkbox"/>

Step	Description	Check
6	<p>Set the following:</p> <ul style="list-style-type: none"> • SCSI IDs on the CD-ROM and tape drives (see pages "Setting the CD-ROM drive SCSI ID and DIP switches" (page 92) and "Setting the tape drive SCSI ID" (page 94)) • DIP switches on the CD-ROM drive (see "Setting the CD-ROM drive SCSI ID and DIP switches" (page 92)) • device termination on the CD-ROM and tape drives (see "Setting SCSI device termination" (page 95)) 	<input type="checkbox"/>
7	<p>Insert the 201i server into two consecutive slots inside the switch. For instructions, see:</p> <ul style="list-style-type: none"> • large Meridian 1 systems, such as Option 51C (see "Installing the 201i server in the large Meridian 1 switch" (page 42)) • Option 11C or Option 11C Mini (see "Installing the 201i server in the Option 11C or Option 11C Mini switch" (page 55)) • Communication Server 1000 (see "Installing the 201i server" (page 77)) 	<input type="checkbox"/>
8	<p>Install the MPC cards, if required (see "Installing the MPCs" (page 102)).</p>	<input type="checkbox"/>
9	<p>Connect the 201i server and devices as follows:</p> <ul style="list-style-type: none"> • Connect the monitor, keyboard, and mouse to the 201i server faceplate (see "Installing the monitor, keyboard, and mouse" (page 104)). • Connect the CD-ROM and tape drives to the intermediate SCSI cable (see "Connecting the CD-ROM and tape drives" (page 105)). • Connect the multi I/O cable to the ELAN and CLAN Ethernet hubs or switches (see "Connecting the 201i server to the switch, ELAN subnet , and Nortel server subnet" (page 113)). <p>Note: If more than 3 m (10 ft) of multi I/O cable is required, use the supplied RJ-45 female-to-female gender change jacks to attach additional cable. Up to 76.2 m (250 ft) of cable length is supported.</p>	<input type="checkbox"/>

Step	Description	Check
	<ul style="list-style-type: none"> • Connect the modem to the multi I/O cable (maximum length 15 m (50 ft) (see "Connecting the modem" (page 116))). • Connect the power cords for all devices, and then power them up. 	
10	Complete the installation of the 201i server as follows:	<input type="checkbox"/>
	<ul style="list-style-type: none"> • Connect the intermediate SCSI cable to the 201i server faceplate. • Close the lock latches on the 201i server. • Boot the 201i server to the operating system. <p>See "Completing the installation" (page 118).</p>	
11	Continue with the <i>CallPilot <switch model> and CallPilot Server Configuration</i> guide for your switch and server.	<input type="checkbox"/>

Unpacking and inspecting the 201i server

Introduction

This section describes how to:

- unpack the 201i server and peripherals
- inspect the 201i server for damage

It also describes what to do if you determine that the 201i server is faulty.

To unpack the 201i server

Step	Action
------	--------

ATTENTION

As you unpack each item, check it off against the packing list, as well as the following checklists provided in the *CallPilot Installation and Configuration Task List*:

- "CallPilot software media and documentation checklist"
- "CallPilot server hardware checklist"

- | | |
|---|---|
| 1 | Remove the 201i server from the carton and its antistatic bag. |
| 2 | Place the 201i server on an antistatic surface. |
| 3 | Carefully open the cartons containing the monitor, keyboard, mouse, modem, and ELAN hub (if supplied), and set the peripherals aside. |
| 4 | Put all manuals and CD-ROMs in a safe place. |
| 5 | Save all packing materials and cartons in case you must return any equipment to the carrier. |
| 6 | Review " 201i server description " (page 11), and perform a visual inspection as described in " To inspect the 201i server for shipping damage " (page 32). |

—End—

To inspect the 201i server for shipping damage

Before proceeding with the installation, visually inspect the 201i server for any damage that might have occurred during shipping. Ensure also that the items in the following checklists are secure:

Item	Yes	No
Are all cables securely seated?		
• hard drive power cable	<input type="checkbox"/>	<input type="checkbox"/>
• hard drive data cable	<input type="checkbox"/>	<input type="checkbox"/>

Item	Yes	No
See items 2 and 3 in the diagram on page 15.	<input type="checkbox"/>	<input type="checkbox"/>
Is the hard drive and bracket interface secure? See items 6 and 7 in the diagram on page 15.	<input type="checkbox"/>	<input type="checkbox"/>
Is the software feature key (dongle) securely seated in its bracket?	<input type="checkbox"/>	<input type="checkbox"/>
See 201i server components diagram on page 15.		

What to do if components are missing or damaged

IF	THEN
you observe any damage	contact your Nortel technical support representative.
components have become loose	secure them. If necessary, refer to the procedures in the <i>CallPilot <server model> Server Maintenance and Diagnostics</i> guide for your server.
you are satisfied that the 201i server has arrived at your site undamaged	you are ready to proceed with installation.

What is next?

Review the "[Switch and network requirements](#)" (page 33).

Switch and network requirements

Introduction

The information in this section will help you plan your 201i server installation.

Meridian 1 or Communication Server 1000 slot requirements

The 201i server occupies two physical and electrical slots.

Note: You can place the unit in Slot 9 of an Option11C as the unit can function from slots 9 and 10. Do not place the unit in slot 10. Even

though the unit can physically fit, there is no electrical connection on the backplane to slot 11.

You must install the 201i server in two peripheral equipment slots as follows:

Switch	Slots
Meridian 1 tiered systems	0 through 14 Ensure that both slots have electrical backplane connectivity.
Option 11C	1 through 9 in any Option 11C cabinet
Option 11C Mini	A pair of consecutive slots in any cabinet
<p>Note: You cannot install the 201i server in slots 0 or 4 because these slots are dedicated to other cards. For more information about cards and slots, refer to the Option 11C Mini documentation.</p>	
Communication Server 1000	A pair of consecutive slots in any Media Gateway or Media Gateway Expansion.
<p>Note: The 201i server cannot be installed in slots 0 or 4, because these slots are dedicated to other cards. For more information about cards and slots, refer to the <i>Communication Server 1000 Planning and Installation Guide</i></p>	

Meridian 1 I/O panel connections

On large Meridian 1 systems (such as Option 51C), the 201i server requires two connections from the slots to the I/O panel on the rear of the switch, as follows:

- One connection is for the multi I/O cable.
This connection corresponds to the left slot (when viewing the front of the Meridian 1 switch).
- The other connection is for the external SCSI device.
This connection corresponds to the right slot (when viewing the front of the Meridian 1 switch).

For information about slot and rear bulkhead wiring, refer to the *Meridian 1 System Installation and Maintenance Guide*

Nortel server subnet and ELAN subnet requirements

The ELAN subnet and the Nortel server subnet must be configured and the appropriate networking equipment must be available.

If the Nortel server subnet is to be part of the customer LAN, you need a network specialist to ensure proper configuration.

ATTENTION

For important considerations about using the ELAN in your network, see the *CallPilot Installation and Configuration Task List*.

What is next?

Install the 201i server in the Meridian 1 switch or Communication Server 1000 system. For instructions, see one of the following:

To install the 201i server in	See
a large Meridian 1 switch (for example, Option 51C)	Chapter 4 "Installing the 201i server in a large Meridian 1 system" (page 37)
an Option 11C or Option 11C Mini switch	Chapter 5 "Installing the 201i server in an Option 11C or Option 11C Mini" (page 55)
the Communication Server 1000 system	Chapter 6 "Installing the 201i server in the Communication Server 1000 system" (page 71)

Chapter 4

Installing the 201i server in a large Meridian 1 system

in this chapter

"Overview" (page 37)

"Repositioning the secondary backplane connector" (page 39)

"Installing the 201i server in the large Meridian 1 switch" (page 42)

"Removing the backplane (tip and ring) cables" (page 43)

"Installing the NTRH3501 backplane cable" (page 47)

"Installing the SCSI cables for Meridian 1" (page 49)

Overview

Introduction

This section describes how to install the 201i server in a Meridian 1 switch.

ATTENTION

To install the 201i server in an Option 11C, go to "Installing the 201i server in the large Meridian 1 switch" (page 42). For Option 11C Mini, go to "Section B: Installing Option 11C Mini cables" (page 63). For Communication Server 1000, go to Chapter 6 "Installing the 201i server in the Communication Server 1000 system" (page 71).

Meridian 1 I/O panel connections

On the Meridian 1, the 201i server requires two connections from the slots to the I/O panel on the rear of the switch, as follows:

- One connection is for the multi I/O cable.

This connection corresponds to the left slot (when viewing the front of the Meridian 1 switch).

- The other connection is for the external SCSI device.

This connection corresponds to the right slot (when viewing the front of the Meridian 1 switch).

For information about slot and rear bulkhead wiring, refer to the *Meridian 1 System Installation and Maintenance Guide*

Secondary backplane connector

The secondary backplane (DS30X) connector on the 201i server connects the server to the second slot on the shelf, thereby providing access to the voice channels provided by that slot.



CAUTION

Risk of equipment damage

The 201i server is shipped ready for installation into an Option 11C switch. Before you install the 201i server in a larger Meridian 1 switch (for example, Option 51C), you must move the secondary backplane (DS30X) connector to the correct position.

ATTENTION

A yellow warning label over the top lock latch on the 201i server prevents you from securing the 201i server in a slot. This label serves as a reminder to move the secondary backplane connector to the Meridian 1 position, if required, before installing the 201i server into the slot.

Backplane (tip and ring) cable

The backplane (tip and ring) cable supplied with the 201i server (NTRH3501) provides 100Base-T Ethernet operation for the Nortel server subnet. This cable offers more network throughput than the cable that is already installed on the Meridian 1.

When installed, this cable completes the connection between the left slot, the I/O panel on the rear of the switch, and the multi I/O cable on the 201i server.

SCSI cables

Before you can connect a CD-ROM or tape drive to the 201i server, you must install the SCSI cables. You require two cables. These cables route the SCSI connection away from the 201i server faceplate so that an external SCSI device can remain permanently connected.

Repositioning the secondary backplane connector

Introduction

The secondary backplane (DS30X) connector on the 201i server connects the server to the second slot on the shelf, thereby providing access to the voice channels provided by that slot.



CAUTION

Risk of equipment damage

The 201i server ships ready for installation into an Option 11C or Option 11C Mini switch. Before you install the 201i server in a larger Meridian 1 switch (for example, Option 51C), you must move the secondary backplane (DS30X) connector to the correct position.

Why you must move the connector

There is an approximate difference of 2 mm (0.08 in) between slots on a Meridian 1 tiered system and an Option 11C or Option 11C Mini system. As a result, you must install the secondary backplane (DS30X) connector on the 201i server in the correct position before a successful connection with the switch backplane can be established.

ATTENTION

A yellow warning label over the top lock latch on the 201i server prevents you from securing the 201i server in a slot. This label serves as a reminder to move the secondary backplane connector to the Meridian 1 position, if required, before installing the 201i server into the slot.


Secondary backplane connector description

The secondary backplane connector is attached to the backplane edge of the 201i server. It consists of the following items:

- connector
- screws
- pin connector (with four pins)

Two pairs of screw holes are provided for connecting the secondary backplane connector to the 201i server stiffening cage. The outside pair provides the Meridian 1 spacing. The inside pair provides the Option 11C or Option 11C Mini spacing.

See the following diagram:

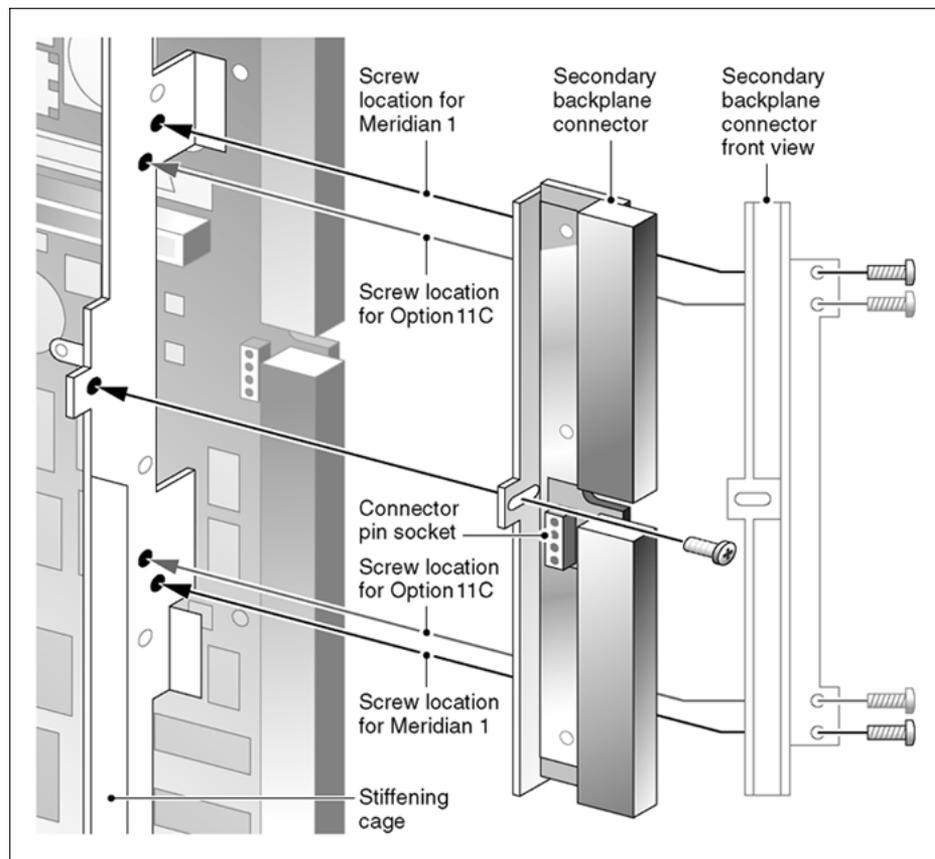


Required equipment

To move the secondary backplane connector, you need a Phillips No. 1 screwdriver. A pair of needle-nosed pliers can also be helpful for removing the pin connector.

To prepare the 201i server for installation in a Meridian 1 switch

Step	Action
1	Remove the secondary backplane pin connector. The pin connector has four pins. If necessary, use needle-nosed pliers to remove it.
2	Remove the top and bottom screws that hold the secondary backplane connector in place on the stiffening cage.
3	Loosen the middle screw, and then align the outside pair of screw holes on the bracket with the matching pair on the stiffening cage.
4	Replace and alternately tighten all screws until the connector is evenly and securely fastened.


See the following diagram:

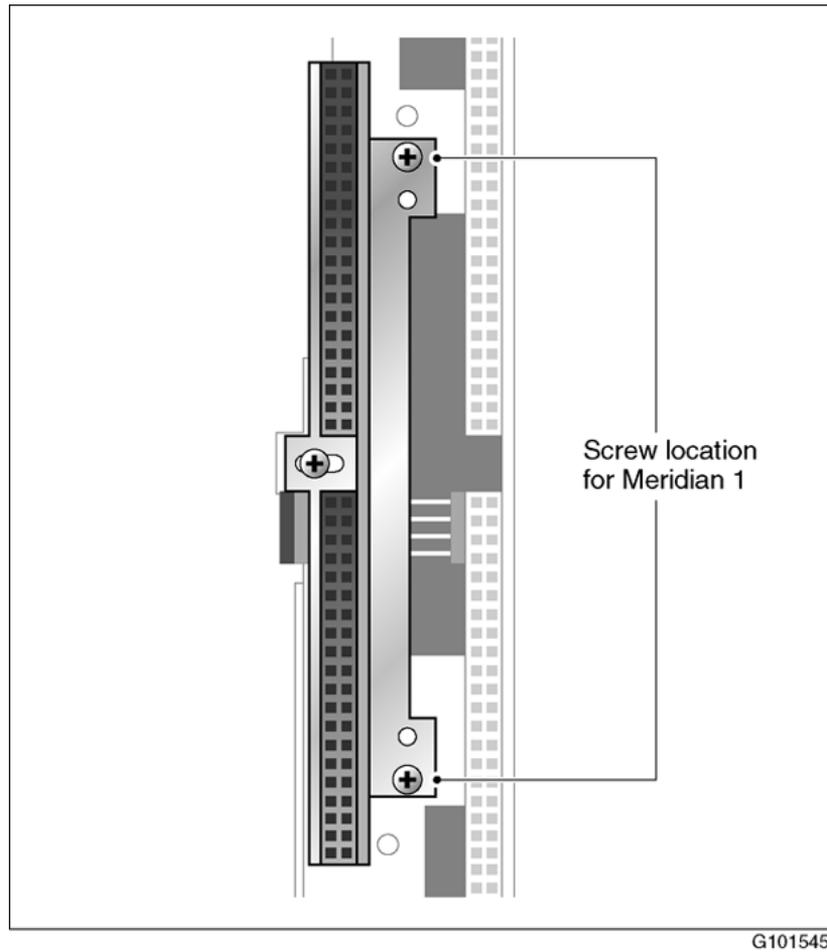

- 5 Replace the pin connector so the pins protrude through both connectors.
Ensure that the connectors are correctly aligned as shown in the diagram below.



CAUTION
Risk of equipment damage

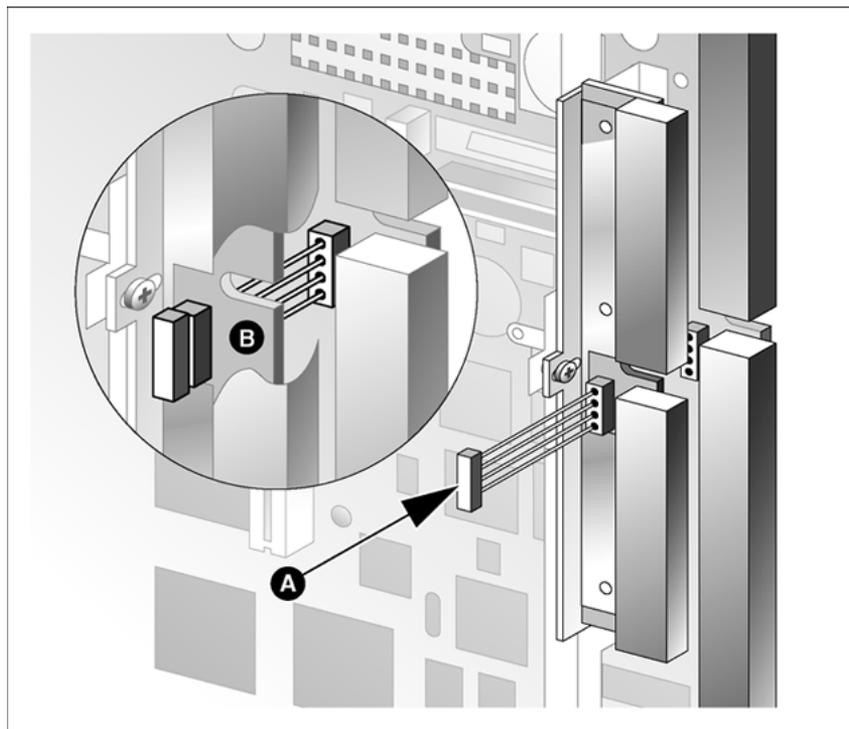

G101442

- 6 Gently press the pin connector into the socket until it is fully seated.
- 7 Remove the yellow backplane warning label from the top lock latch on the 201i server.

—End—

What is next?

Continue with ["Installing the 201i server in the large Meridian 1 switch"](#) (page 42).

Installing the 201i server in the large Meridian 1 switch

Introduction

The 201i server occupies two slots. You can install the 201i server in slots 0 through 14. Ensure that both slots have electrical backplane connectivity.

To position the 201i server on the switch shelf

Step	Action
------	--------

- | | |
|---|---|
| 1 | Ensure that no cables are connected to the slots in which you are installing the 201i server. |
| 2 | Open the lock latches at the top and bottom of the 201i server faceplate.

Note: When you open the top lock latch, you break the yellow backplane warning label, if it has not been removed. You must move the secondary backplane connector before you install the 201i server. For details, see "Repositioning the secondary backplane connector" (page 39). |
| 3 | Slide the 201i server into an unoccupied pair of slots.

Ensure that the 201i server is positioned correctly between the slots. |

ATTENTION

Do not push the 201i server into place against the backplane until you are ready to observe the startup cycle.

The 201i server receives power and starts as soon as the 201i server makes contact with the switch backplane.

- | | |
|---|--|
| 4 | Connect the low-profile right-angle SCSI cable connector to the SCSI connector on the 201i server faceplate. |
|---|--|

—End—

What is next?

Continue with ["Removing the backplane \(tip and ring\) cables"](#) (page 43).

Removing the backplane (tip and ring) cables

Introduction

You must remove the Meridian 1 backplane (tip and ring) cables that are associated with the slots occupied by the 201i server so that you can install the following cables:

- NTRH3501 backplane (tip and ring) cable

The NTRH3501 cable offers more network throughput than the cable that is already installed on the Meridian 1. This cable is connected to the backplane connectors and I/O panel slot associated with the left slot.

- NTRH1408 intermediate SCSI cable

The NTRH1408 intermediate SCSI cable routes the SCSI device connection away from the 201i server faceplate so that an external SCSI device can remain permanently connected. This cable is connected to the I/O panel only. The backplane connectors associated with the right slot are left vacant.

These cables are supplied with the 201i server.

Before you begin



DANGER

Risk of electrical shock


Ensure that the shelf is powered off before you remove the backplane cables.

Note: For information about slot and rear bulkhead wiring and powering off the shelf, refer to the *Meridian 1 System Installation and Maintenance Guide*

To remove the backplane cables

Step	Action
-------------	---------------

- 1 Remove the I/O panel cover from the rear of the Meridian 1 switch.
- 2 Remove the protective plate from the rear of the Meridian 1 switch.

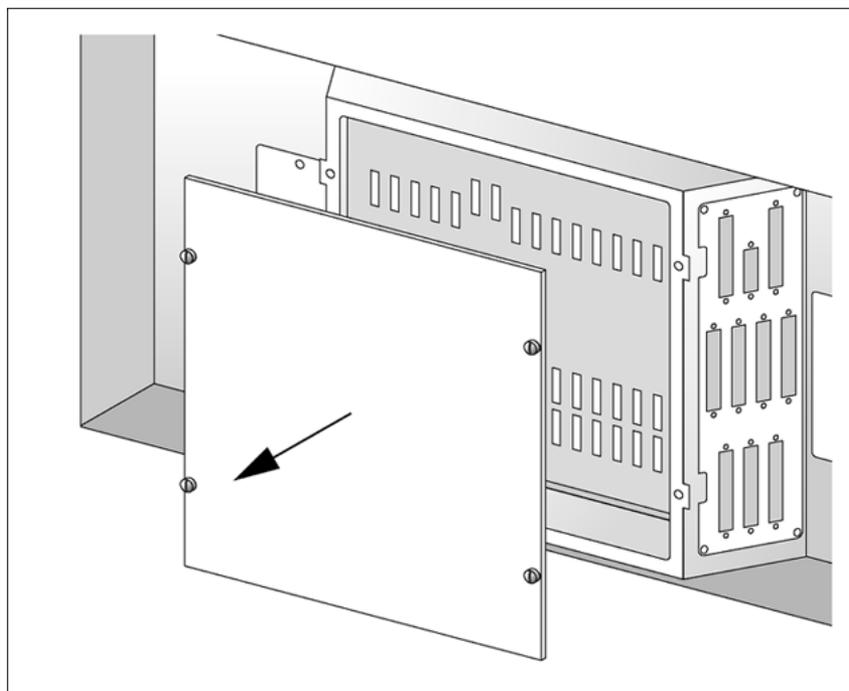

G101547

- 3 Remove the existing backplane cable, including the I/O filter assembly (NT8D81xx) and mounting hardware for the left slot as follows:
 - a. Remove the external cable attached to the outside of the I/O panel.
 - b. For each of the UP 1, UP 2, and UP 3 cable connectors, push the lock tab outwards to unlock the cable connection, and then pull the connector off.

ATTENTION

If you attempt to pull the connector off without pressing the lock tab, you can pull the connector shroud off the backplane. If this happens, refer to the adjacent connectors for correct key positioning, and then replace the connector shroud.

Remove the tie wraps where applicable to free the cable.


- c. Remove the connector, I/O filter assembly, and all mounting hardware from the inside of the I/O panel so the slot is completely vacated.

Retain the mounting hardware (that is, screws, tie wrap base, standoffs, and so on). You will reuse this hardware to fasten the NTRH3501 cable.

- 4 Repeat step 3 to remove the existing backplane cable for the right slot.

Store the cable, I/O filter assembly, and mounting hardware for this cable with your Meridian 1 spares. You will not use them with the 201i server.

The following diagram shows an example using slots 3 and 4:

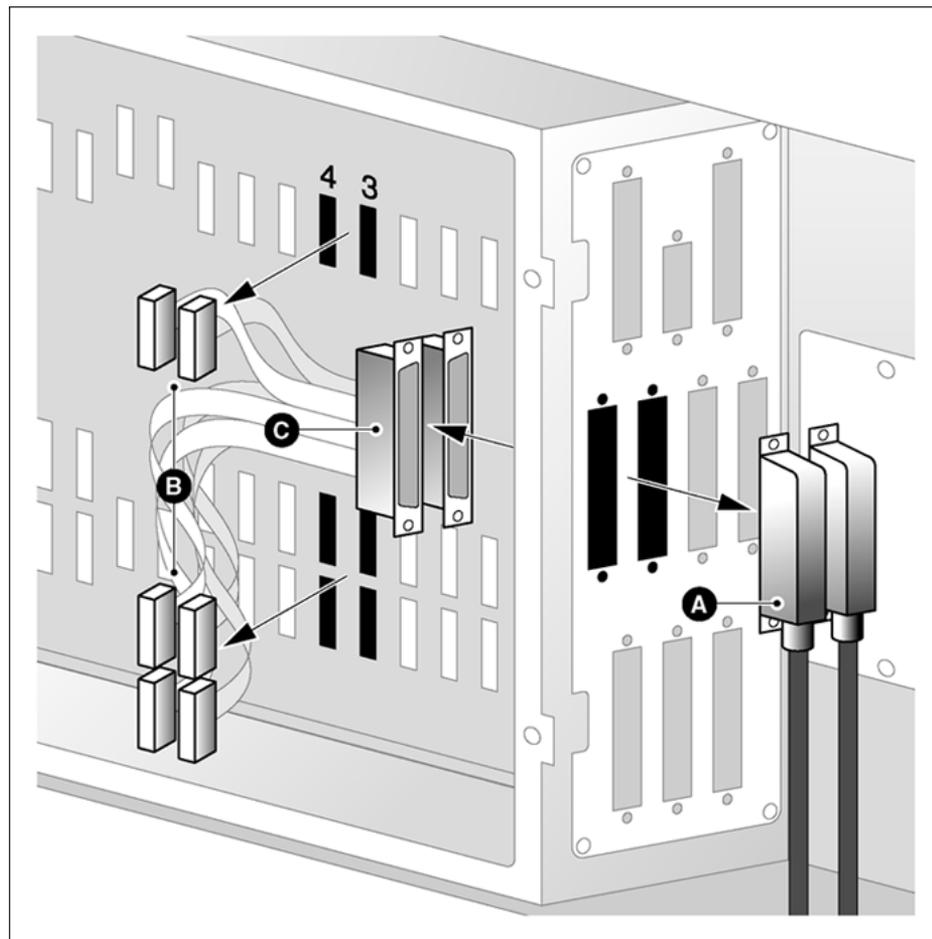

G101549

—End—

What is next?

Continue with "Installing the NTRH3501 backplane cable" (page 47).

Installing the NTRH3501 backplane cable


Introduction

You must connect the backplane (tip and ring) cable supplied with the 201i server (NTRH3501) for 100Base-T Ethernet operation to the Nortel server subnet. This cable offers more network throughput than the cable you just removed from the Meridian 1.

When installed, this cable completes the connection between the left slot, the I/O panel on the rear of the switch, and the multi I/O cable on the 201i server.

Backplane (tip and ring) cable

The following diagram shows the NTRH3501 backplane (tip and ring) cable:

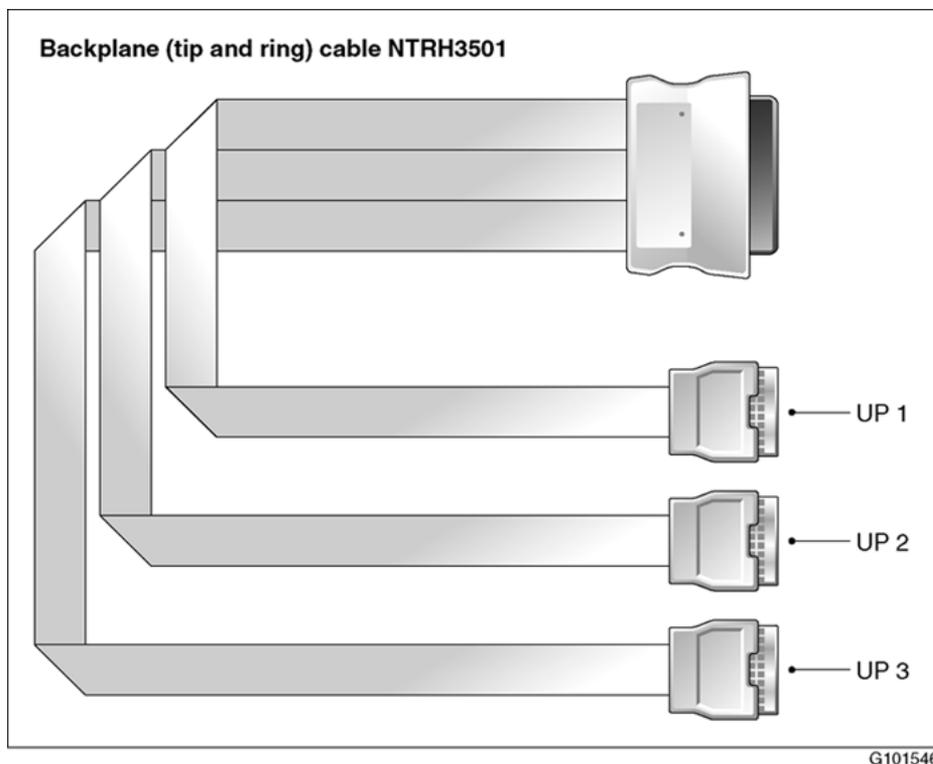

Before you begin

Before you can install the NTRH3501 cable, you must remove the existing backplane cable from the back of the switch. See ["Removing the backplane \(tip and ring\) cables"](#) (page 43).

To install the NTRH3501 backplane cable

Step	Action
------	--------

- | | |
|---|---|
| 1 | <p>Install and connect the NTRH3501 cable to the multi I/O cable as follows:</p> <ol style="list-style-type: none">Attach the backplane connector of the NTRH3501 cable to the inside of the I/O panel slot associated with the 201i server left slot.

Insert the original screw into the tie wrap base and fasten the screw into the lower position of the I/O panel slot.Attach the three inner cables to the backplane connectors associated with the left slot as follows:<ul style="list-style-type: none">UP 1 cable to the top positionUP 2 cable to the middle positionUP 3 cable to the lower position |
|---|---|

ATTENTION


The connectors are keyed; you can insert them in one position only.

Use tie wraps to secure the cables in their original positions.

- | | |
|--|---|
| | <ol style="list-style-type: none">Connect the 50-pin amphenol connector on the multi I/O cable (NTRH0912) to the NTRH3501 backplane cable connector on the I/O panel. |
|--|---|

—End—

See the following diagram:

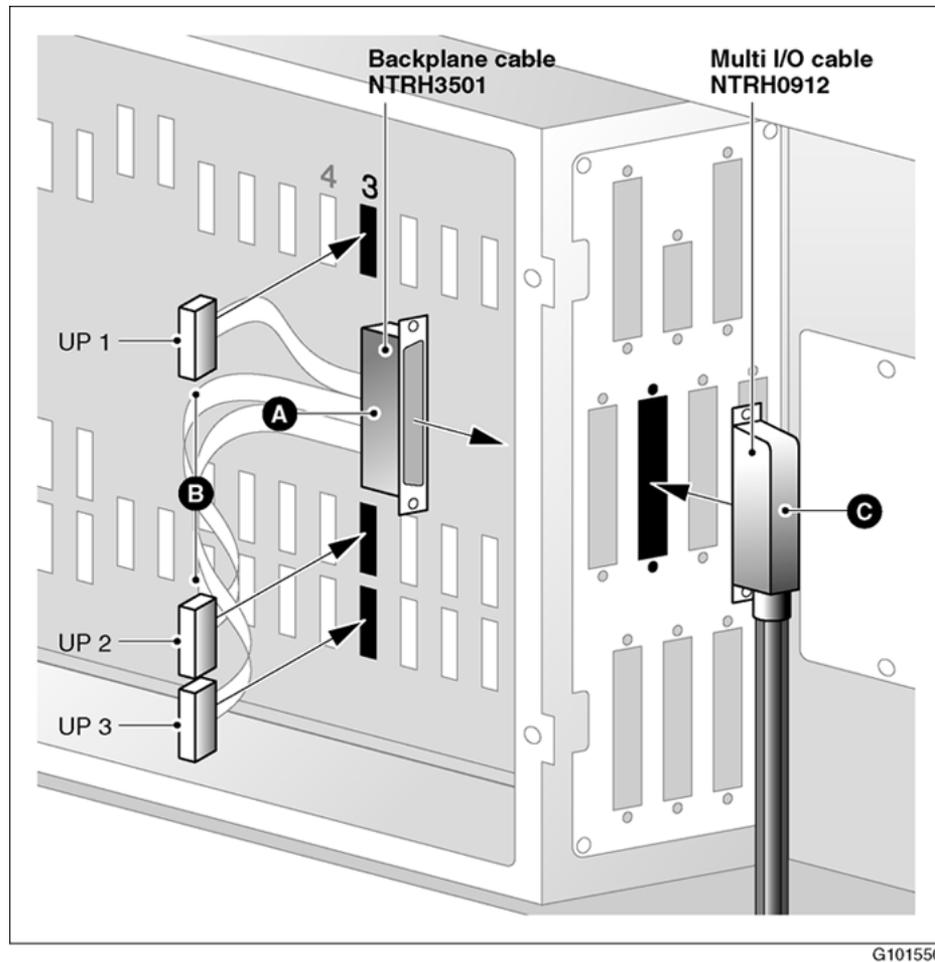

What is next?

Continue with ["Installing the SCSI cables for Meridian 1" \(page 49\)](#).

Installing the SCSI cables for Meridian 1

Introduction

Before you can connect a CD-ROM or tape drive to the 201i server, you must install the SCSI cables. The SCSI cables route the SCSI connection away from the 201i server faceplate so that an external SCSI device can remain permanently connected.



CAUTION

Risk of equipment damage


You must power off the 201i server before connecting or disconnecting SCSI cables.

Cables you need

You require the following cables:

- NTRH1408 (for connecting the 201i server to the Meridian 1 I/O panel)

The connector on the intermediate SCSI cable that attaches to the 201i server faceplate is a low-profile right-angle connector. This allows the cable to be attached with the Meridian 1 cabinet cover on.

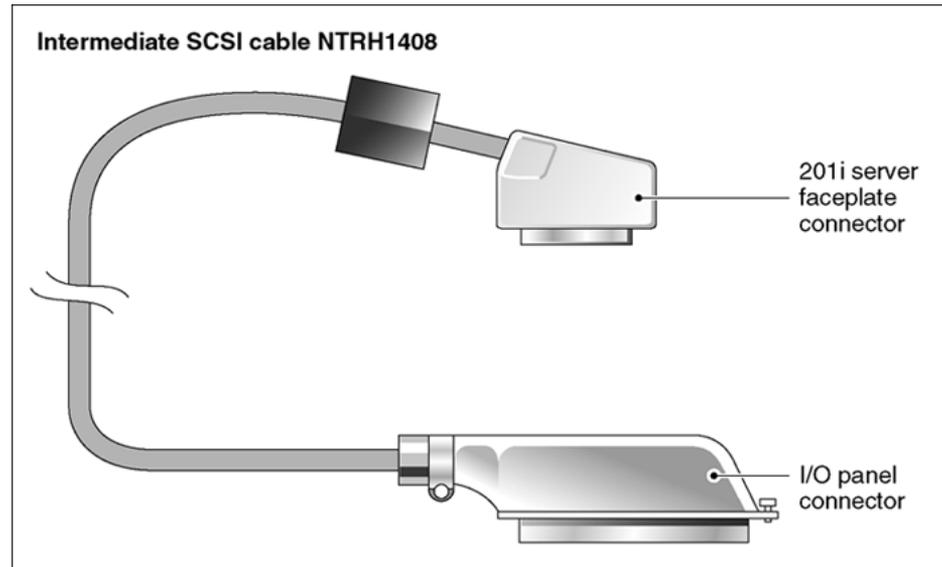


- NTRH1410 (for connecting an external SCSI device to the NTRH1408 connector on the Meridian 1 I/O panel)

The total length of the cable from the I/O panel is 4.1 m (13.3 ft).

What the completed installation looks like

The following diagram shows how the intermediate SCSI cable, CD-ROM drive, and tape drive are connected to the Meridian 1.

In this diagram, the CD-ROM drive is the first device. The tape drive is the last device.

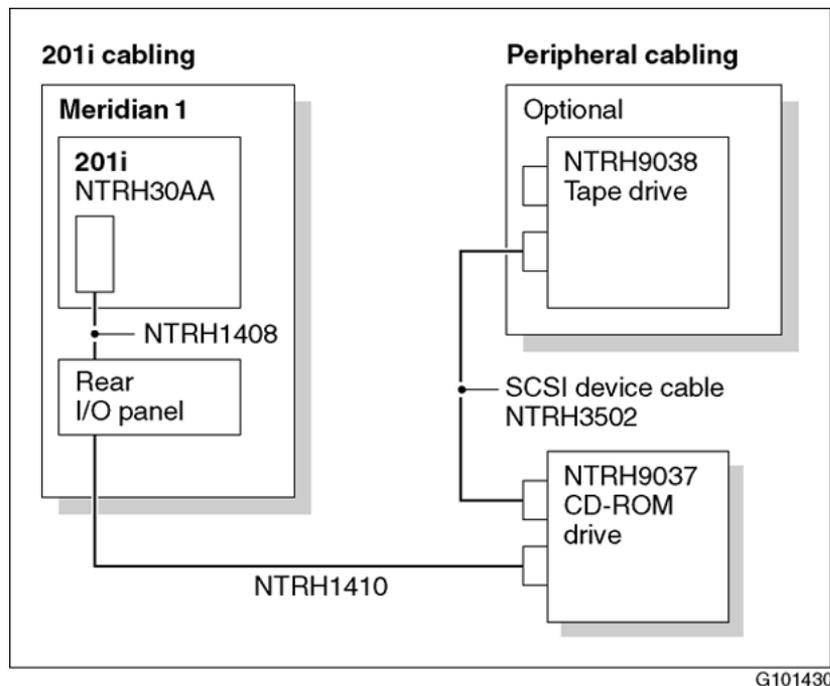

G101430

Note: Alternate SCSI device connection scenarios are supported, but are not depicted in this guide. If you want to use a connection scenario that is not described in this guide, ensure that you use appropriate cabling for each device.

Before you begin


Before you install the SCSI devices in a daisy chain, you must configure the SCSI device IDs and DIP switches. For instructions, refer to [Chapter 7 "Preparing peripheral devices"](#) (page 89).

To install the SCSI cables for Meridian 1

Step	Action
------	--------


- | | |
|---|--|
| 1 | Thread the SCSI connector end of the NTRH1408 cable from the front of the Meridian 1 along the bottom of the shelf to either the left or the right access channel. |
| 2 | Leave the low-profile right-angle SCSI connector hanging for now. You will connect it later to the 201i server faceplate. |

Note: The following diagram shows what the connection looks like after the cable is connected:

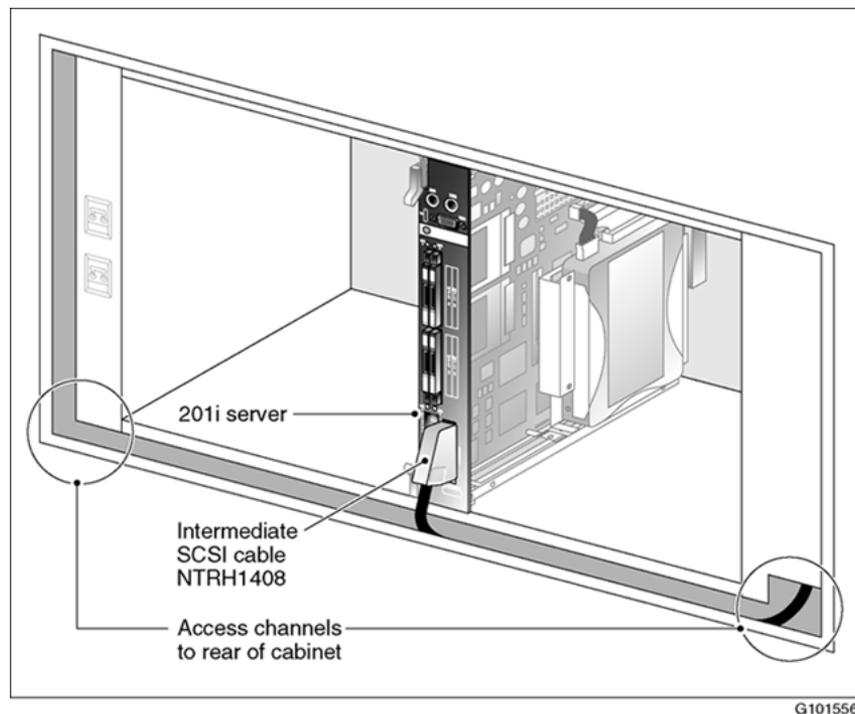

- 3 Thread the cable through the access channel to the back of the Meridian 1.
- 4 Attach the NTRH1408 cable to the inside of the I/O panel slot associated with the 201i server right slot.
- 5 Connect the NTRH1410 cable to the NTRH1408 cable connector on the I/O panel.

See the following diagram:

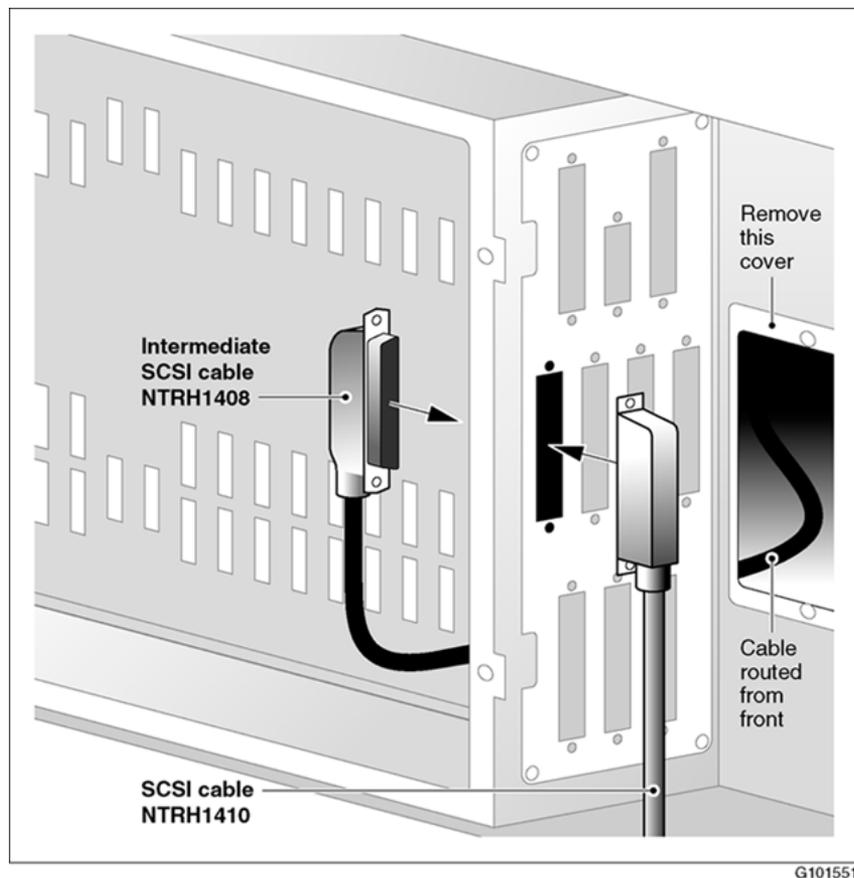

Note: The backplane connectors for the right slot are not required and, therefore, are left vacant.

- 6 Thread the NTRH1410 cable through the shelves below and out through the bottom of the Meridian 1 tower.
- 7 Replace the protective plate.
- 8 Replace the I/O panel cover.
- 9 Power up the shelf.

—End—

What is next?

Prepare the modem, CD-ROM drive, and tape drive for connection to the 201i server. For instructions, see [Chapter 7 "Preparing peripheral devices"](#) (page 89).

Chapter 5

Installing the 201i server in an Option 11C or Option 11C Mini

In this chapter

"Installing the 201i server in the Option 11C or Option 11C Mini switch" (page 55)

"Section A: Installing Option 11C cables" (page 58)

"Installing the intermediate SCSI cable for Option 11C" (page 58)

"Section B: Installing Option 11C Mini cables" (page 63)

"Installing the NTRH3502 SCSI cable for Option 11C Mini" (page 63)

"Installing cables on the back of the Option 11C Mini cabinet" (page 68)

Installing the 201i server in the Option 11C or Option 11C Mini switch

Introduction

The 201i server occupies physical and electrical slots. The 201i server must be installed in two peripheral equipment slots as follows:

Switch	Eligible slots
Option 11C	Slots 1 through 9 in any cabinet
Option 11C Mini	A pair of consecutive slots in any cabinet


Note: You cannot install the 201i server in slots 0 or 4, because these slots are dedicated to other cards. For more information about cards and slots, refer to the Option 11C Mini documentation.

To position the 201i server on the switch shelf

Step	Action
------	--------

- 1 Remove the front panel of the switch.
Note: On the Option 11C Mini, do the following:
 - a. Loosen the spring-loaded clips.
 - b. Slide the cover to the left.
 - c. Pull the cover up to remove it from the cabinet.

See the following diagram:

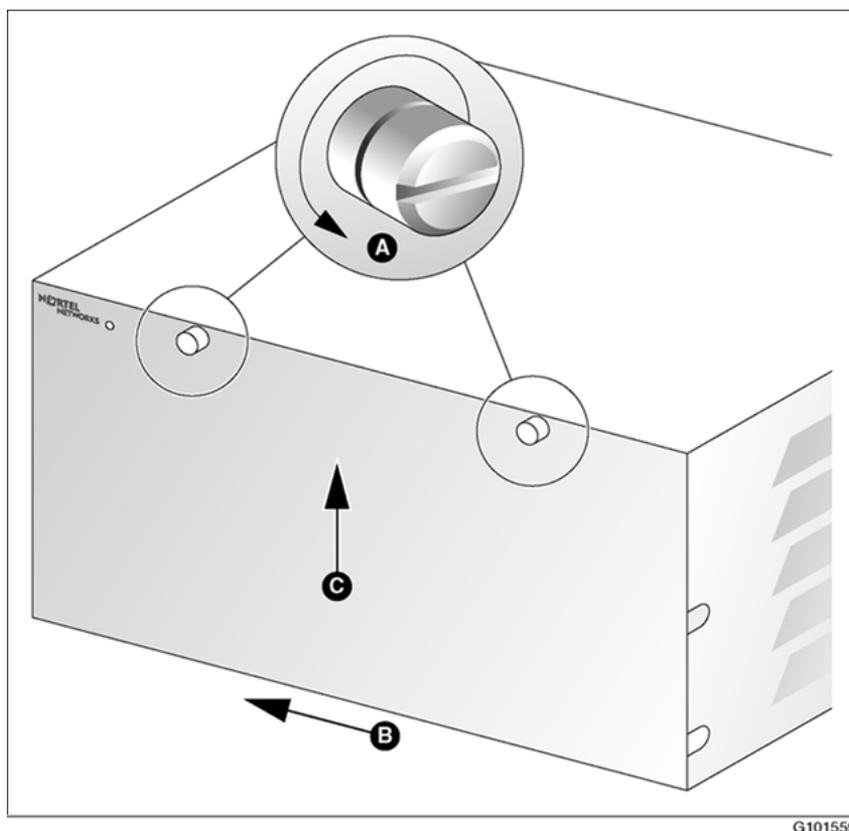


- 2 Ensure that no cables are connected to the slots in which you are installing the 201i server.
- 3 Open the lock latches at the top and bottom of the 201i server faceplate.

Note: When you open the top lock latch, it breaks the yellow backplane warning label, if the label has not been removed. The label is not relevant for Option 11C or Option 11C Mini. Remove the label and continue with this procedure.

- 4 Slide the 201i server into an unoccupied pair of slots. Ensure that the 201i server is positioned correctly between the slots.

Note: When correctly inserted in the Option 11C Mini, the top of the 201i server is on the left. See the following diagram:

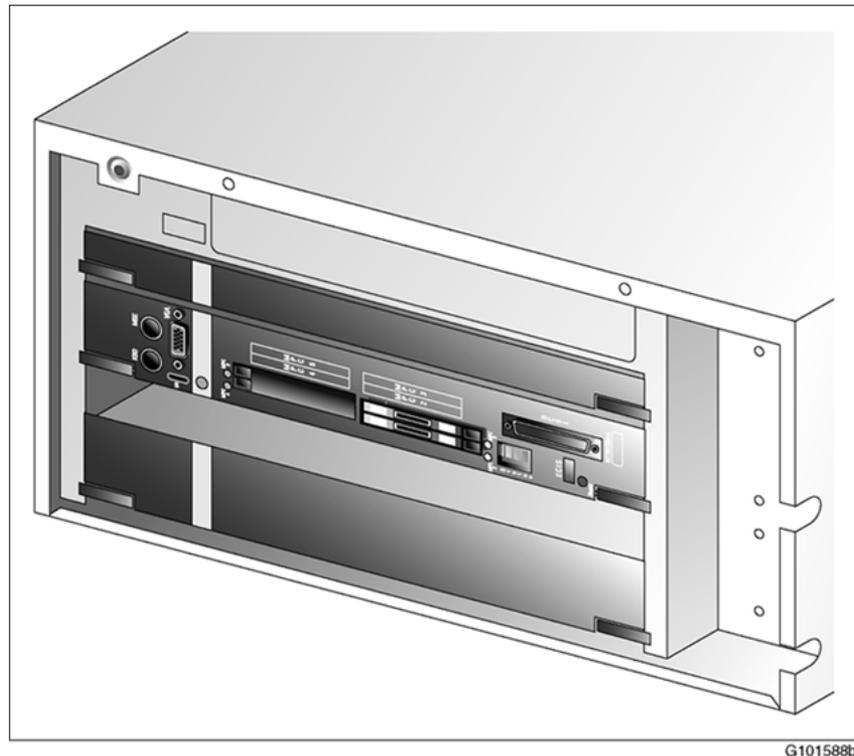

ATTENTION

Do not push the 201i server into place against the backplane until you are ready to observe the startup cycle.

The 201i server receives power and starts as soon as the 201i server makes contact with the switch backplane.

—End—

What is next?

Continue with installing the cables. Refer to one of the following:

- "Section A: Installing Option 11C cables" (page 58)
- "Section B: Installing Option 11C Mini cables" (page 63)

Section A: Installing Option 11C cables

In this section

"Installing the intermediate SCSI cable for Option 11C" (page 58)

Installing the intermediate SCSI cable for Option 11C

Introduction


Before you can connect an external CD-ROM or tape drive to the 201i server, Option 11C requires an intermediate SCSI cable (NTRH1407).

Note: If you are installing the 201i server in an Option 11C Mini, go to "Installing the NTRH3502 SCSI cable for Option 11C Mini" (page 63).

Cable description


The connector on the NTRH1407 cable that attaches to the 201i server faceplate is a low-profile right-angle connector. This allows the SCSI device to be permanently connected to the 201i server with the Option 11C cabinet cover on.

The SCSI device connector end is equipped with a bracket assembly. This bracket assembly attaches to the Option 11C below the card cage. The CD-ROM or tape drive connects to this bracket assembly with the NTRH3502 cable that is provided with the device.

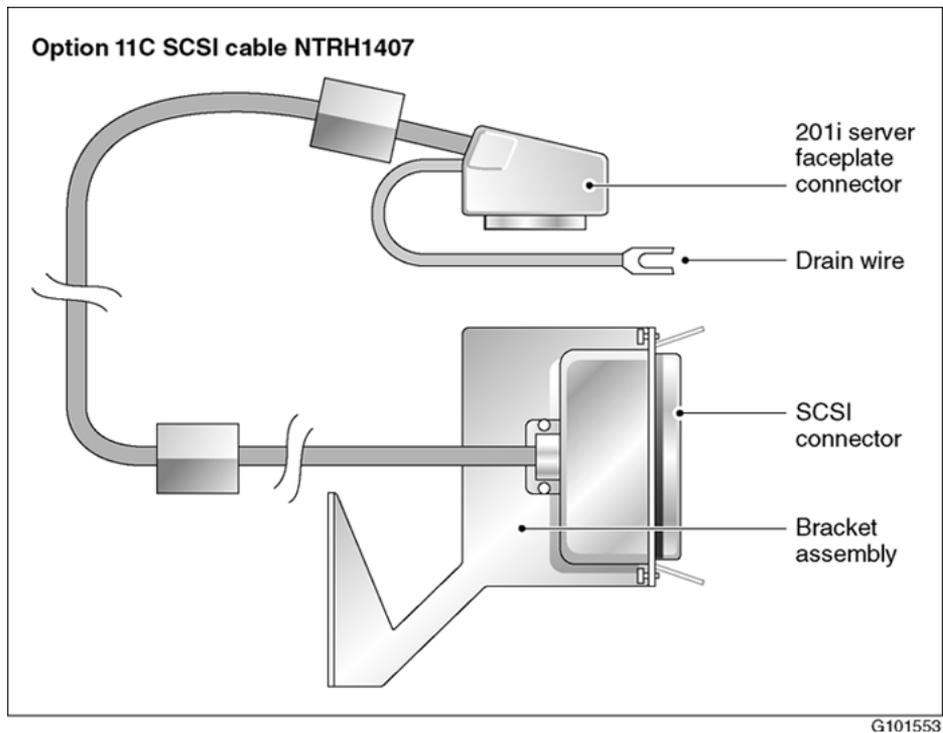

What the completed installation looks like

The following diagram shows how the intermediate SCSI cable, CD-ROM drive, and tape drive are connected to the Option 11C. The CD-ROM drive is the first device. The tape drive is the last device.

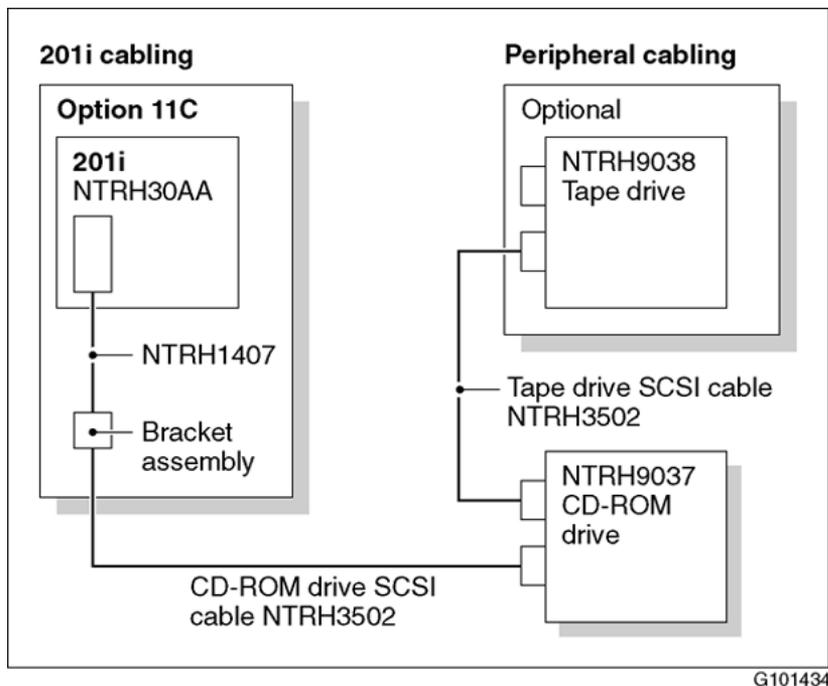

Note: Alternate SCSI device connection scenarios are supported, but are not depicted in this guide. If you want to use a connection scenario that is not described in this guide, ensure that you use appropriate cabling for each device.

Before you begin

Before you install the SCSI devices in a daisy chain, you must configure the SCSI device IDs and DIP switches. For instructions, see [Chapter 7 "Preparing peripheral devices"](#) (page 89).

To install the cable

Step	Action
------	--------



CAUTION

Risk of equipment damage

You must power off the 201i server before connecting or disconnecting SCSI cables.

- 1 Attach the bracket assembly and cable as follows:
 - a. Below the card cage, temporarily remove the hardware that secures cable connections to the Option 11C.


- b. Temporarily remove any cabling that may interfere with the installation of the intermediate SCSI cable bracket assembly.

ATTENTION

Before you disconnect the cabling, take the telephony equipment services associated with the cabling out of service.

- c. Remove the two screws on the right side of the Option 11C I/O panel.
- d. Attach the intermediate SCSI cable bracket assembly, using the screws that were removed previously, so that the SCSI connector appears on the right side of the Option 11C cabinet.

See the following diagram:

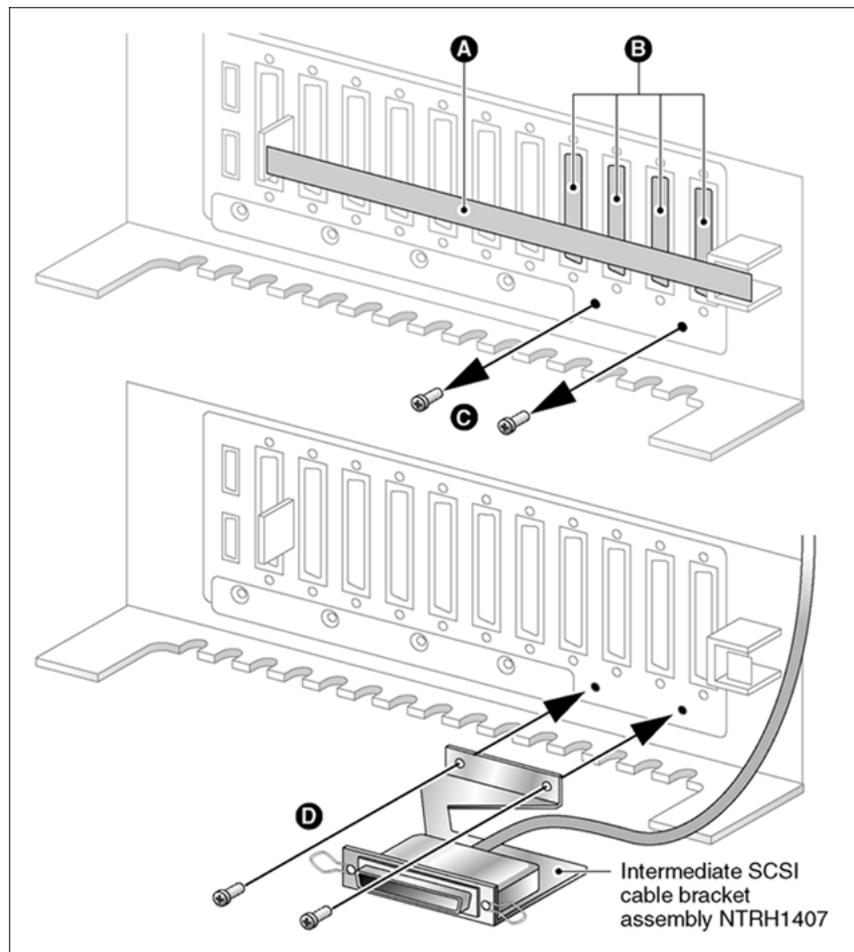


G101554

- 2 Thread the cable up through the card cage.

Note: When routing the SCSI cable through the card cage, ensure the second cable ferrite is placed halfway through the opening.

- 3 Connect the grounding braid on the intermediate SCSI cable to the card cage, and tighten the screw.
- 4 Leave the low-profile right-angle SCSI connector loose for now. You will connect it later to the 201i server faceplate.

Note: The following diagram shows what the connection looks like after the cable is connected:

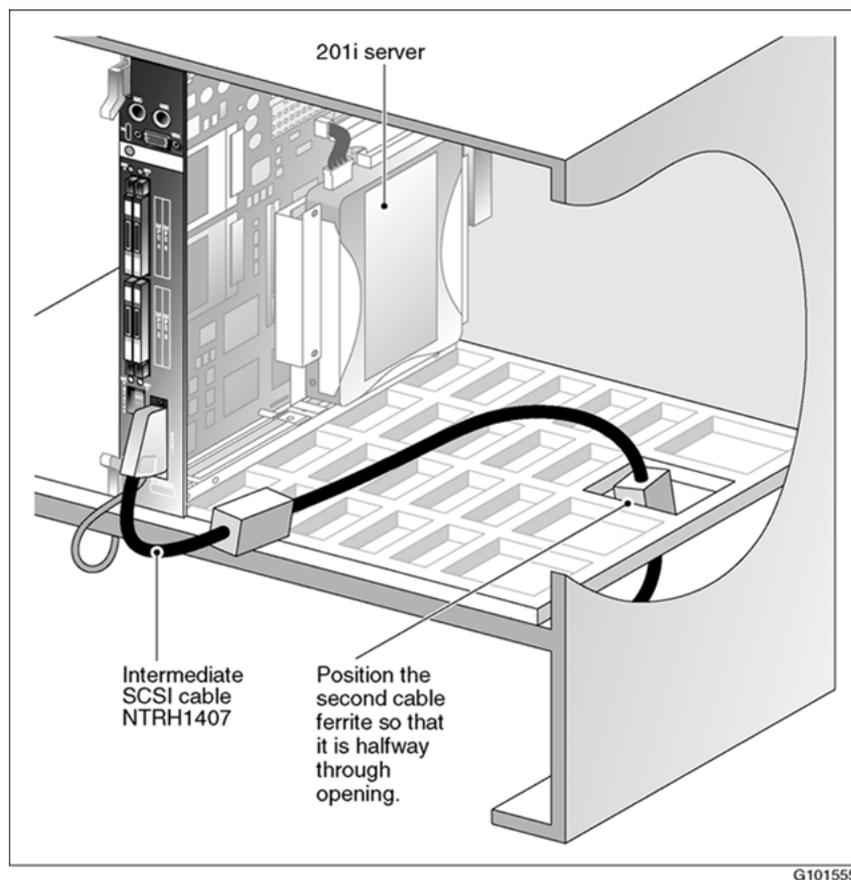

- 5 Replace all cabling and hardware that you removed in [Step 1](#).
- 6 Restore any services that you took out of service in [Step 1](#).

—End—

What is next?

Prepare the modem, CD-ROM drive, and tape drive for connection to the 201i server. For instructions, see [Chapter 7 "Preparing peripheral devices" \(page 89\)](#).

Section B: Installing Option 11C Mini cables

In this section

["Installing the NTRH3502 SCSI cable for Option 11C Mini" \(page 63\)](#)

["Installing cables on the back of the Option 11C Mini cabinet" \(page 68\)](#)

Installing the NTRH3502 SCSI cable for Option 11C Mini

Introduction


Before you can connect a CD-ROM or tape drive to the 201i server, you must install the NTRH3502 SCSI cable. The NTRH3502 SCSI cable routes the SCSI connection away from the 201i server faceplate so that an external SCSI device can remain permanently connected.

If the Option 11C Mini is equipped with a Fiber Routing Guide (consisting of a spool and mounting bracket), you must remove it before you can install the NTRH3502 SCSI cable, and then reinstall it when you are finished.

For detailed instructions on removing and installing the Fiber Routing Guide, refer to the *Option 11C and Option 11C Mini Expansion Guide*

What the completed installation looks like

The following diagram shows how the intermediate SCSI cable, CD-ROM drive, and tape drive are connected to the Option 11C Mini. In the diagram, the CD-ROM drive is the first device. The tape drive is the last device.

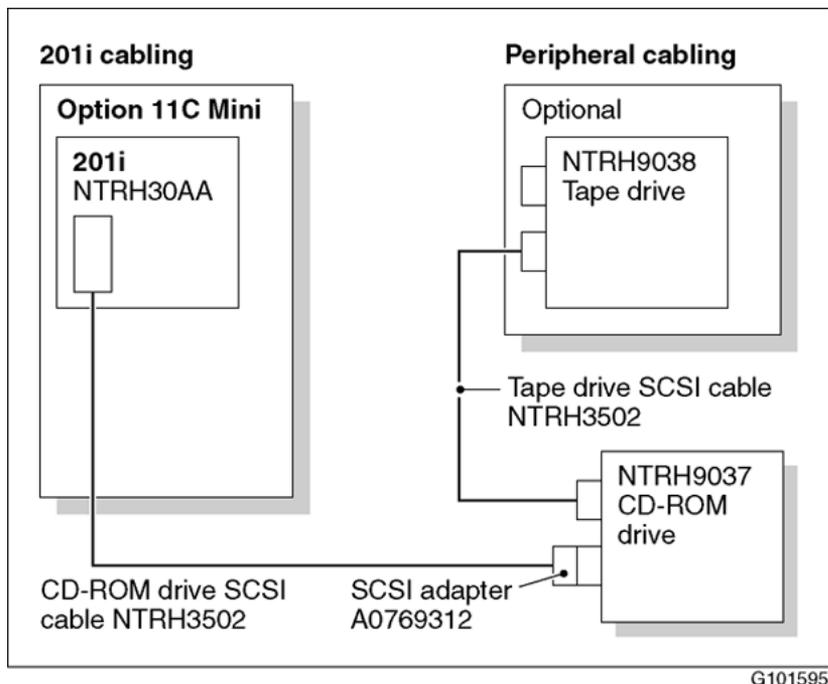

Note: Alternate SCSI device connection scenarios are supported, but are not depicted in this guide. If you want to use a connection scenario that is not described in this guide, ensure that you use appropriate cabling for each SCSI device.

Before you begin

1. Before you install the SCSI devices in a daisy chain, you must configure the SCSI device IDs and DIP switches.

For instructions, see [Chapter 7 "Preparing peripheral devices" \(page 89\)](#).

To install the NTRH3502 SCSI cable

Step	Action
------	--------



CAUTION


Risk of equipment damage

You must power off the 201i server before connecting or disconnecting SCSI cables.


- 1 If your Option 11C Mini is equipped with a Fiber Routing Guide, temporarily remove it.

Note: For detailed instructions, refer to the *Option 11C and Option 11C Mini Expansion Guide*

See the following diagram:

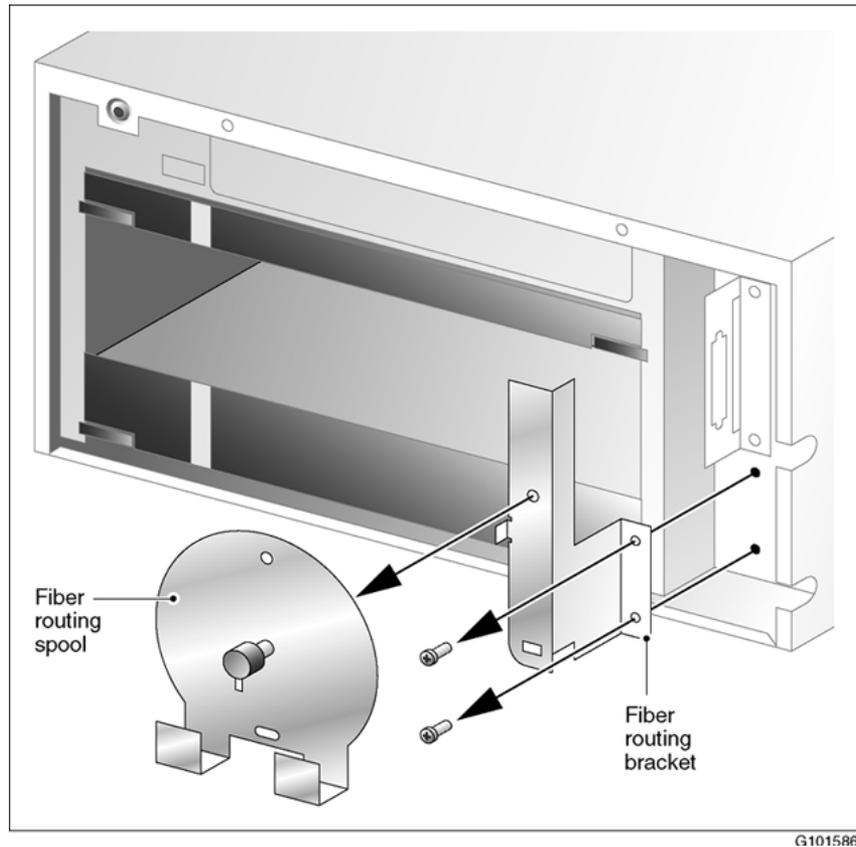


- 2 Remove the inner SCSI bracket from the inside of the cabinet.
See the following diagram:

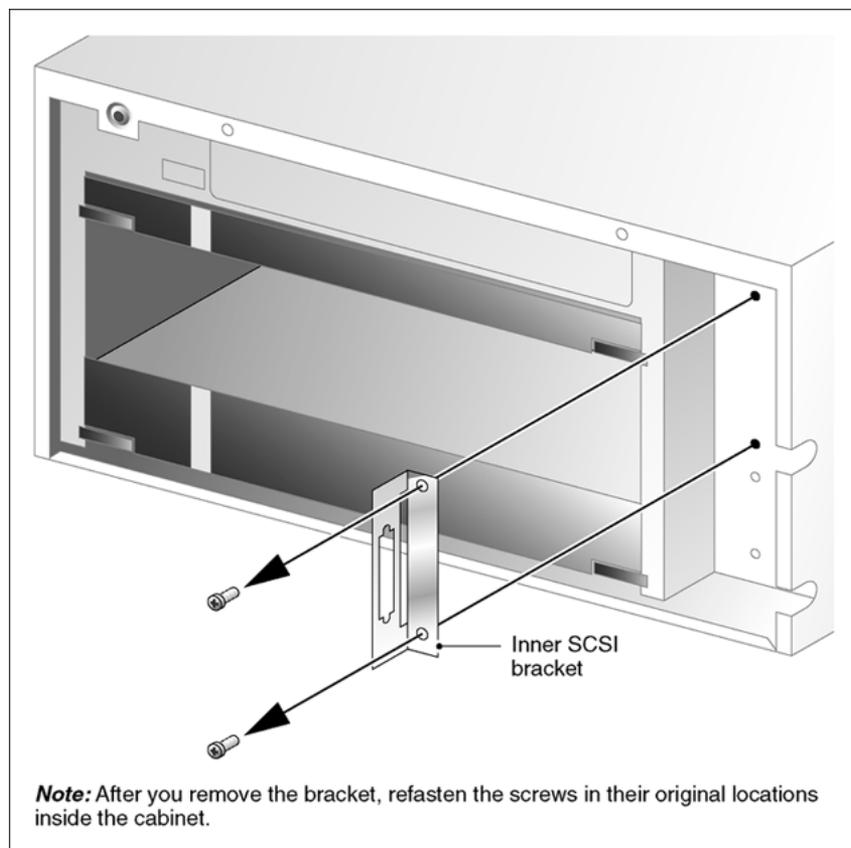

G101587

- 3 Refasten the inner SCSI bracket screws in their original locations inside the cabinet.
You will use the top screw later to fasten the NTRH3502 SCSI cable drain wire.
- 4 Connect the low-profile right-angle SCSI connector on the NTRH3502 cable to the SCSI connector on the 201i server faceplate.
- 5 Fasten the SCSI cable drain wire to the top screw that previously held the inner SCSI bracket in place.

SCSI cable installation to accommodate the Fiber Routing Guide

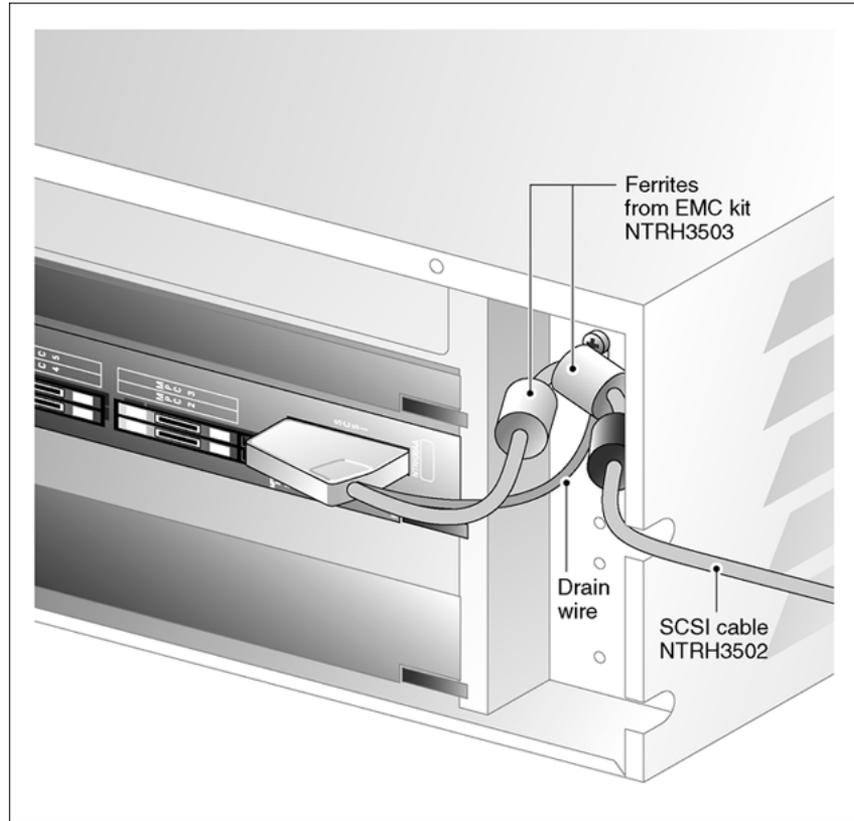


G101590

- 6 If required, reinstall the Fiber Routing Guide.

Note: For detailed instructions, refer to the *Option 11C and Option 11C Mini Expansion Guide*

See the following diagram:

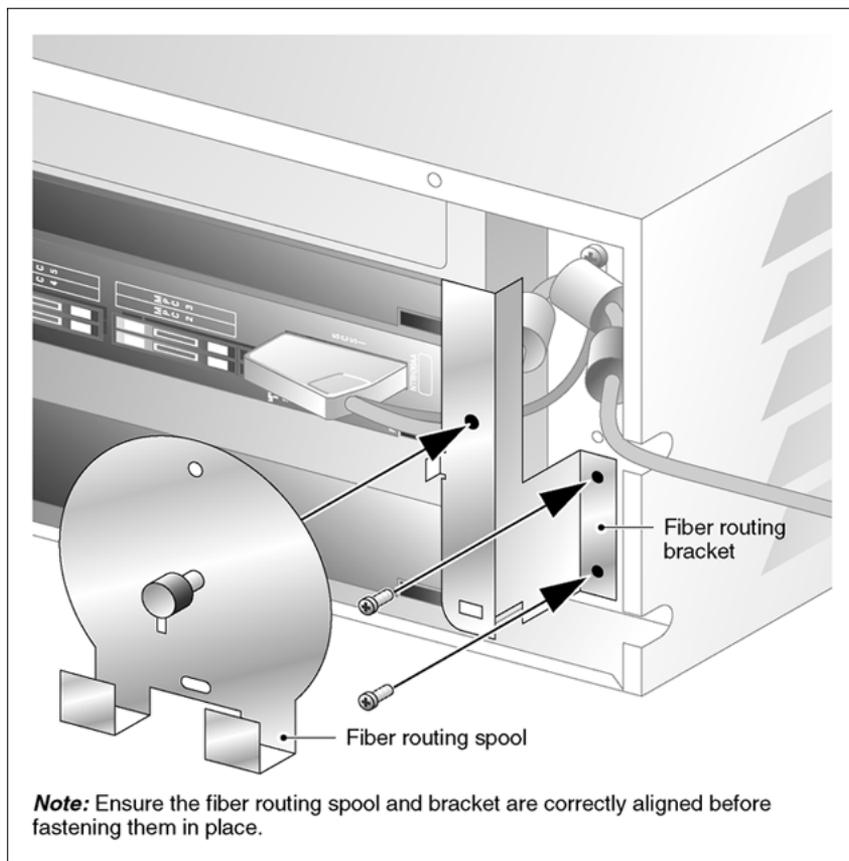

G101591

7 Replace the cabinet cover.

—End—

What is next?

Continue with ["Installing cables on the back of the Option 11C Mini cabinet" \(page 68\)](#).

Installing cables on the back of the Option 11C Mini cabinet

Introduction

The following items connect to the back of the Option 11C Mini cabinet:


- multi I/O cable (NTRH0912)
- Option 11C Mini power cord with two ferrites

You must connect the multi I/O cable first before connecting the power cord, because the power cord routes over the multi I/O cable connection.

To connect the cables


Step	Action
1	On the rear of the Option 11C Mini cabinet, locate the connector associated with the first slot occupied by the 201i server.
2	Connect the NTRH0912 multi I/O cable as follows: <ol style="list-style-type: none"> Loosen the connector's Velcro fastening strap. Connect the amphenol connector on the NTRH0912 multi I/O cable to the connector on the back of the Option 11C Mini cabinet. Secure the connection by tightening the retaining screw and Velcro fastening strap of the connector.

The following diagram shows how to secure the multi I/O cable connection:

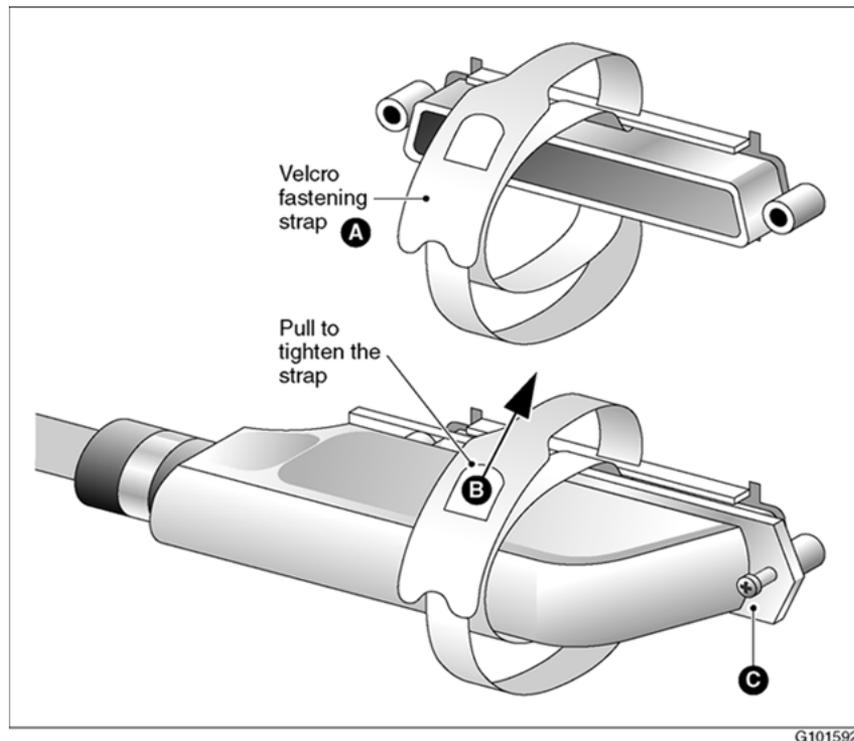

G101592

- Attach the multi I/O cable drain wire to a screw on the cabinet. See the diagram in step 4.
- Connect the power cord to the Option 11C Mini cabinet. See the following diagram:

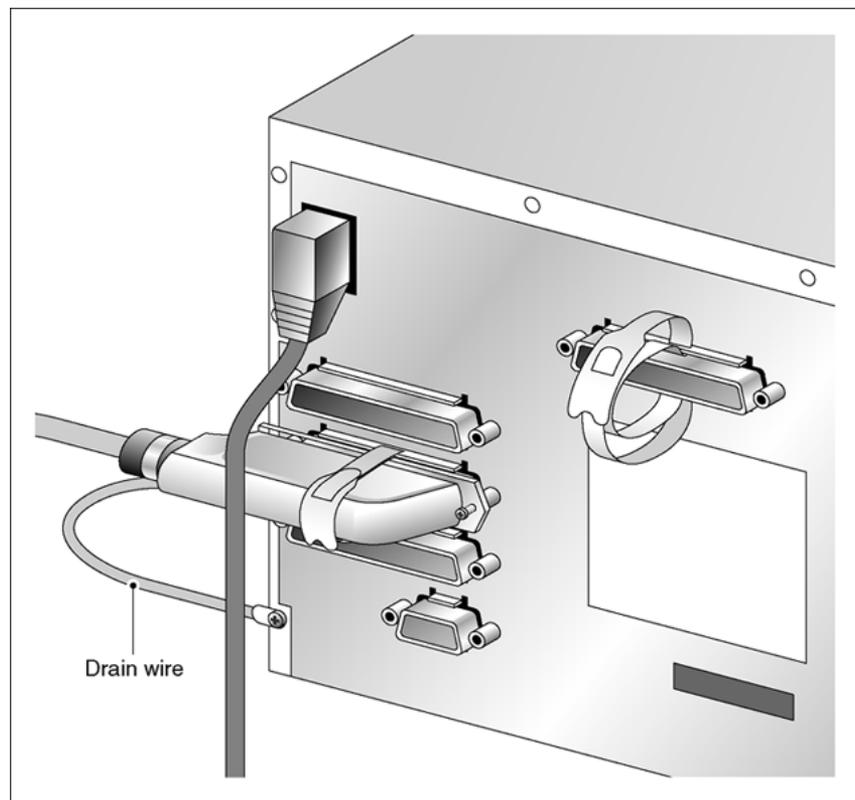

—End—

What is next?

Prepare the modem, CD-ROM drive, and tape drive for connection to the 201i server. For instructions, see [Chapter 7 "Preparing peripheral devices"](#) (page 89).

Chapter 6

Installing the 201i server in the Communication Server 1000 system

In this chapter

"Communication Server 1000 description" (page 71)

"Removing the Media Gateway or Media Gateway Expansion cover" (page 75)

"Installing the 201i server" (page 77)

"Installing the NTRH3502 SCSI cable for Communication Server 1000" (page 80)

"Replacing the Media Gateway or Media Gateway Expansion cover" (page 82)

"Connecting cables to the Communication Server 1000 system" (page 85)

Communication Server 1000 description

Introduction

The Communication Server 1000 system is an IP PBX that provides telephony and data capabilities over an IP network. The Communication Server 1000 system consists of the following major components:

- Call Server
- Media Gateway
- Media Gateway Expansion

Call Server


The Call Server provides telephony services and call processing.

It supports up to four Media Gateways and four Media Gateway Expansions when the Small System Controller (SSC) card inside the unit is fully populated with two dual-port 100BaseT daughterboards.

The following connectors are located on the back of the Call Server:

- four 100Base-T connectors for connecting Media Gateways using one of the following:
 - for connections over the LAN customer-supplied standard 100Base-T CAT5 Ethernet cables
 - for point-to-point connections (Nortel-supplied crossover Ethernet cables)
- one 10Base-T Ethernet connector that
 - provides the ELAN subnet interface to management software applications, such as Optivity Telephony Manager and CallPilot
 - accepts an industry-standard Medium Access Unit (MAU)
- one SDI connector that interfaces with three TTY ports using a three-port SDI cable
- one AC power cord connector and On/Off switch

The following diagram shows the Call Server:

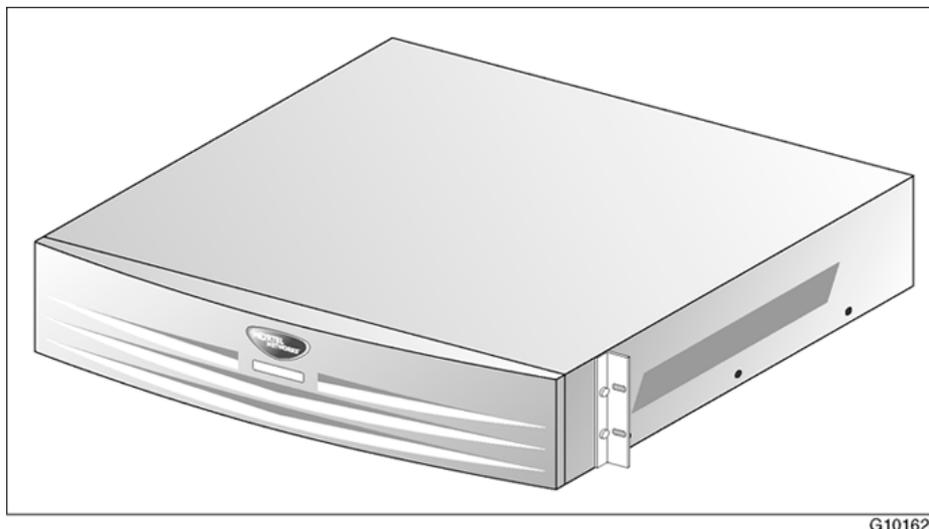

Media Gateway and Media Gateway Expansion

The Media Gateway and Media Gateway Expansion provide the interface for analog or digital trunks, i2004 Internet telephones, analog telephones, and applications such as CallPilot.

A Media Gateway Expansion can be connected to the Media Gateway to increase system capacity.

Card slots

The 201i server occupies physical and electrical slots. You must install the 201i server in a pair of consecutive slots in the Media Gateway or Media Gateway Expansion.

The following table identifies the Media Gateway and Media Gateway Expansion slots into which you can install the CallPilot 201i server:

Unit	The 201i server can be installed in	Ineligible slots
Media Gateway	Slots 1 and 2	Slot 0 is dedicated to the SSC card.
	Slots 2 and 3	
	Slots 3 and 4	
Media Gateway Expansion	Slots 7 and 8	Slot 10 is a double-wide slot. The second half of this slot does not have a backplane connector.
	Slots 8 and 9	
	Slots 9 and 10	

For more information about cards and slots, refer to the *Communication Server 1000 Planning and Installation Guide*

Back panel connectors


The following table describes the connectors that are located on the back of each Media Gateway and Media Gateway Expansion, and how they relate to CallPilot:

Connector	Media Gateway	Media Gateway Expansion
Four 50-pin amphenol connectors that interface with the cross-connect terminal.	yes	yes

The CallPilot 201i server multi I/O cable must be connected to the connector that is associated with the first slot that the 201i server occupies. This is described in ["Connecting cables to the Communication Server 1000 system"](#) (page 85).

Connector	Media Gateway	Media Gateway Expansion
One auxiliary (AUX) connector	yes	no
One SDI connector	yes	no
One 10Base-T Ethernet connector that	yes	no
<ul style="list-style-type: none"> provides the ELAN subnet interface to management software applications such as Optivity Telephony Manager and CallPilot accepts an industry-standard Medium Access Unit (MAU) 		
DS30X and CE-MUX connectors for connecting the Media Gateway and Media Gateway Expansions together	yes	yes
Power connector	yes	yes

The following diagram shows the Media Gateway:

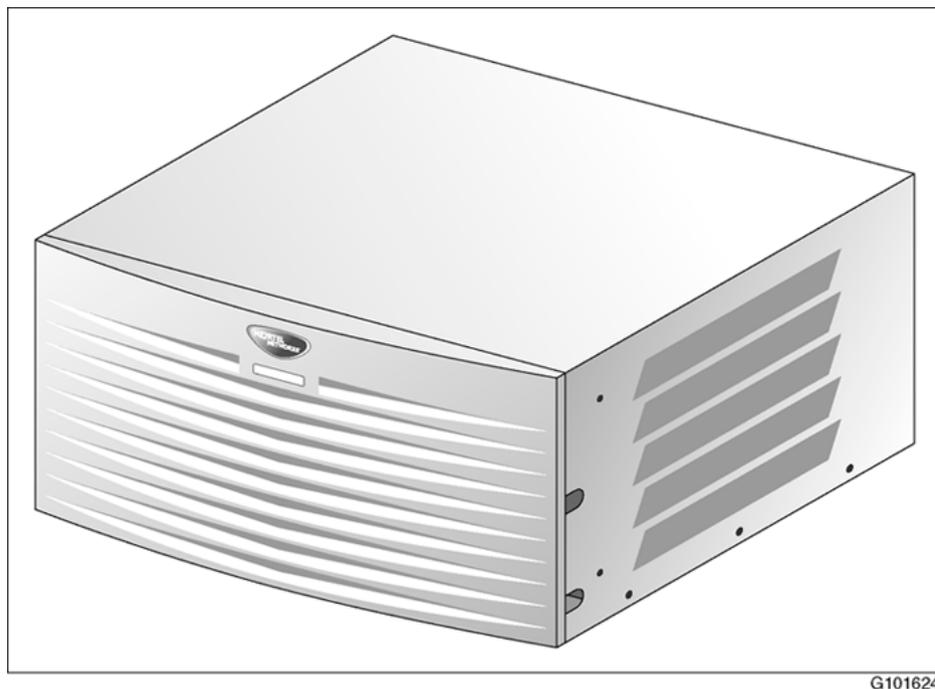

G101624

Note: Except for the back panel connectors, the Media Gateway Expansion is similar in external appearance to the Media Gateway.

Communication Server 1000 software

For the 201i server, the Communication Server 1000 system must be running Communication Server Release 3.00 (or later) software.

The Media Gateways and Media Gateway Expansions are centrally configured from the Call Server. This allows for a single point of management. Configuration required for correct CallPilot operation is, therefore, performed on the Call Server.

Administration software

The Communication Server 1000 system interfaces with Optivity Telephony Manager Release 1.1 (or later). Optivity Telephony Manager is an integrated suite of system management tools. You can use Optivity Telephony Manager to configure, control, and manage your Communication Server 1000 system. Optivity Telephony Manager operates on a platform that is compatible with a standard Windows PC.

Refer to the Optivity Telephony Manager documentation for information about the Optivity Telephony Manager application, its requirements, and how to install it.

Communication Server 1000 documentation

If you need to refer to the following Communication Server 1000 technical documents, they are stored on the Customer Documentation Library CD-ROM (NTLH80BA), provided with your Communication Server 1000 system:

- *Communication Server 1000 Planning and Installation Guide*

Note: This guide is also provided in printed format with your Communication Server 1000 system.

- *Communication Server 1000 Input/Output X21 Administration*
- *Communication Server 1000 Input/Output X21 Maintenance*

You can search the entire suite of documentation online, or you can print part or all of a guide.

Removing the Media Gateway or Media Gateway Expansion cover

Introduction

To access the interior of the Media Gateway or Media Gateway Expansion, you must remove the front bezel and inside front cover plate.

To remove the front bezel and inside front cover plate

Step	Action
------	--------




WARNING

Risk of eye injury

Nortel recommends that you operate the Media Gateway and Media Gateway Expansion with their front bezels installed. When the blue LEDs inside these units are lit, they are very bright.

- 1 Remove the front bezel from the Media Gateway or Media Gateway Expansion as shown in the diagram on the next page.

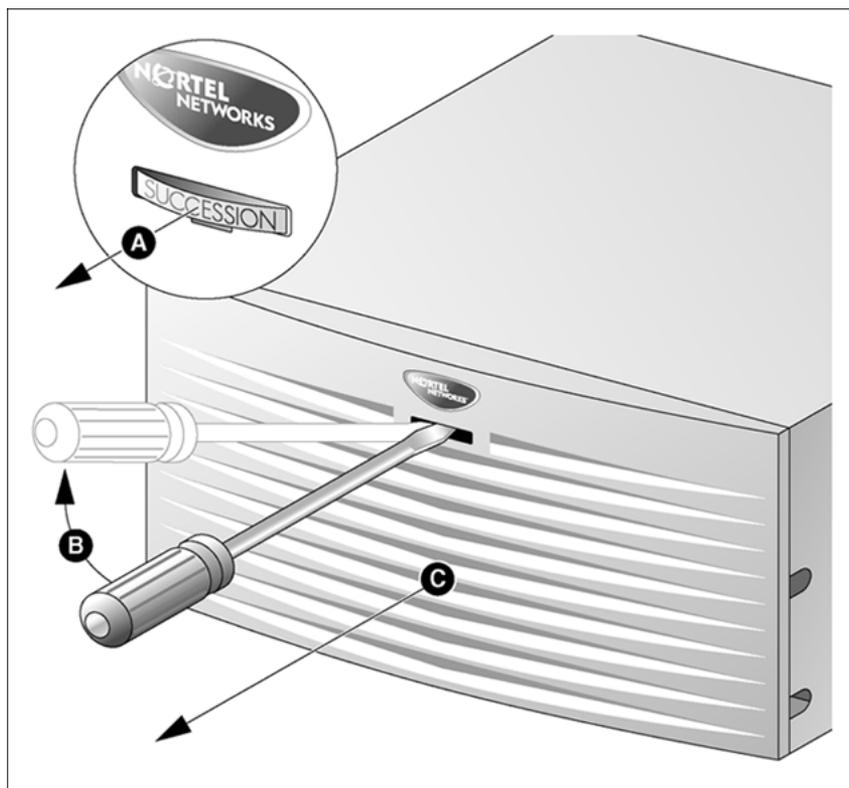


- a. Use a slot screwdriver to gently pry off the label.
- b. Insert the screwdriver approximately 2 cm (0.75 in.) into the open slot, and then gently lift the screwdriver handle, thus applying downward pressure on the tab inside the bezel.

At the same time, gently pull the bezel away from the chassis (approximately 2 cm [0.75 in.]) until the inside tab has cleared the catch.

- c. Grasp the bezel by both sides and carefully pull it straight away from the Media Gateway or Media Gateway Expansion.

2 Remove the inside front cover plate as follows:

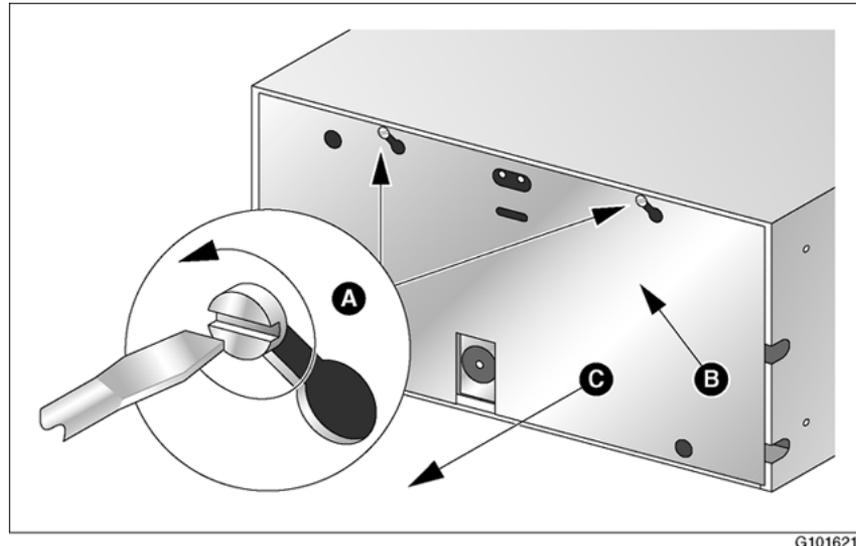

- a. Use a screwdriver to loosen each screw on the top of the inside front cover plate by three turns.

ATTENTION

Do not remove the screws.

- b. Apply pressure and slide the inside front cover plate upward to the left until the screw holes are aligned with the screw heads.
- c. Pull the inside front cover plate away from the Media Gateway or Media Gateway Expansion.

—End—

What is next?

Continue with "[Installing the 201i server](#)" (page 77).

Installing the 201i server

Introduction

This section describes how to install the 201i server inside the Media Gateway or Media Gateway Expansion.

Before you begin

Determine which pair of consecutive slots are to contain the 201i server. The following table identifies the Media Gateway and Media Gateway Expansion slots into which the CallPilot 201i server can be installed:

Unit	The 201i server can be installed in	Ineligible slots
Media Gateway	Slots 1 and 2	Slot 0 is dedicated to the SSC card.
	Slots 2 and 3	Slot 4 (includes slots 5 and 6) is not used.
Media Gateway Expansion	Slots 7 and 8	Slot 10 is a double-wide slot. The second half of this slot does not have a backplane connector.
	Slots 8 and 9	
	Slots 9 and 10	

Note: The 201i server will not function properly when installed in slots 3 and 4.

For more information about card slots, refer to the *Communication Server 1000 Planning and Installation Guide*

For the logical slot numbers that you must use when you configure the Communication Server 1000 system, see "[Card slots](#)" (page 73).

To install the 201i server inside the Media Gateway or Media Gateway Expansion

Step	Action
------	--------

- | | |
|---|--|
| 1 | Ensure that no cables are connected to the slots in which you are installing the 201i server. |
| 2 | Open the lock latches at the top and bottom of the 201i server faceplate.

Note: When you open the top lock latch, it breaks the yellow backplane warning label if it has not been removed. The label is not relevant for Communication Server 1000. Remove the label and continue with this procedure. |
| 3 | Slide the 201i server into an unoccupied pair of slots.

Ensure that the 201i server is positioned correctly between the slots. |


Installing the NTRH3502 SCSI cable for Communication Server 1000

Introduction

Before you can connect a CD-ROM or tape drive to the 201i server, you must install the NTRH3502 SCSI cable. The NTRH3502 SCSI cable has a low profile right-angle connector that allows the cable to be connected to the 201i server faceplate when the Media Gateway or Media Gateway Expansion cover is installed. This allows the external SCSI device to remain permanently connected to the 201i server.

CD-ROM and tape drive cabling diagram

The following diagram shows how the intermediate SCSI cable, CD-ROM drive, and tape drive are connected to the 201i server. The CD-ROM drive is the first device. The tape drive is the last device:

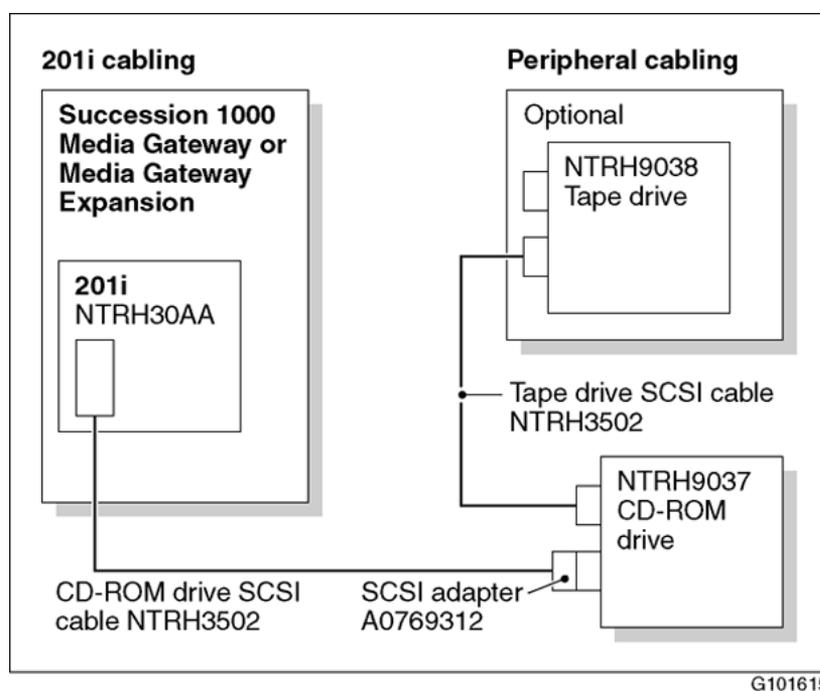

Note: Alternate connection scenarios are supported, but are not depicted in this guide. If you want to use a connection scenario that is not described in this guide, ensure that you use appropriate cabling for each device.

Before you begin

1. Before you install the SCSI devices in a daisy chain, you must configure the SCSI device IDs and DIP switches. For instructions, see [Chapter 7 "Preparing peripheral devices"](#) (page 89).

To install the NTRH3502 cable

Step	Action
------	--------




CAUTION

Risk of equipment damage

You must power off the 201i server before connecting or disconnecting SCSI cables.

- 1 Remove the inner SCSI bracket from the inside of the Media Gateway or Media Gateway Expansion.

See following diagram.

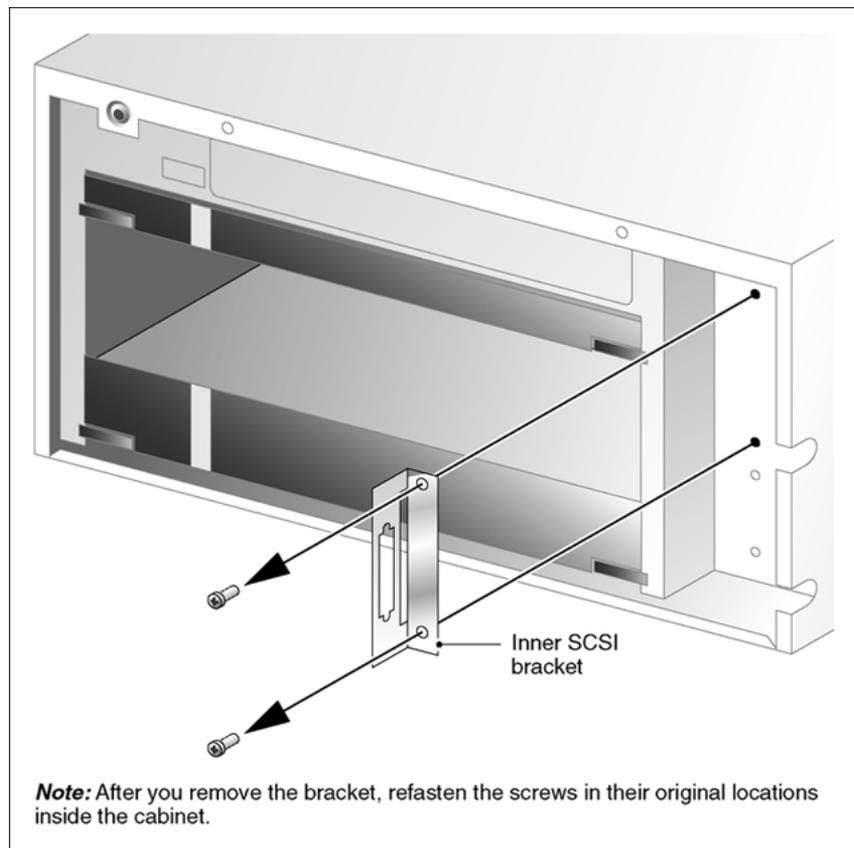

G101587

- 2 Refasten the inner SCSI bracket screws in their original locations inside the Media Gateway or Media Gateway Expansion.

You will use one of the screws later to fasten the NTRH3502 SCSI cable drain wire.

- 3 Connect the low profile right-angle SCSI connector on the NTRH3502 cable to the SCSI connector on the 201i server faceplate.
- 4 Fasten the SCSI cable drain wire to one of the screws that previously held the inner SCSI bracket in place.

Notes:

- Use the screw that is the most convenient.
- Press firmly on the drain wire Y-connector until it snaps into place around the screw post.

- 5 Replace the inside front cover plate.

For instructions, see ["To replace the inside front cover plate"](#) (page 82).

ATTENTION

Ensure that the tabs on the bottom and right side of the inside front cover plate are positioned inside the Media Gateway or Media Gateway Expansion.

- 6 Replace the front bezel.

For instructions, see ["To replace the front bezel"](#) (page 83).

—End—

What is next?

Continue with ["Connecting cables to the Communication Server 1000 system"](#) (page 85).


Replacing the Media Gateway or Media Gateway Expansion cover

Introduction

This section describes how to replace the front bezel and inside front cover plate on the Media Gateway or Media Gateway Expansion.

To replace the inside front cover plate

The following diagram provides an overview of how to install the inside front cover plate:

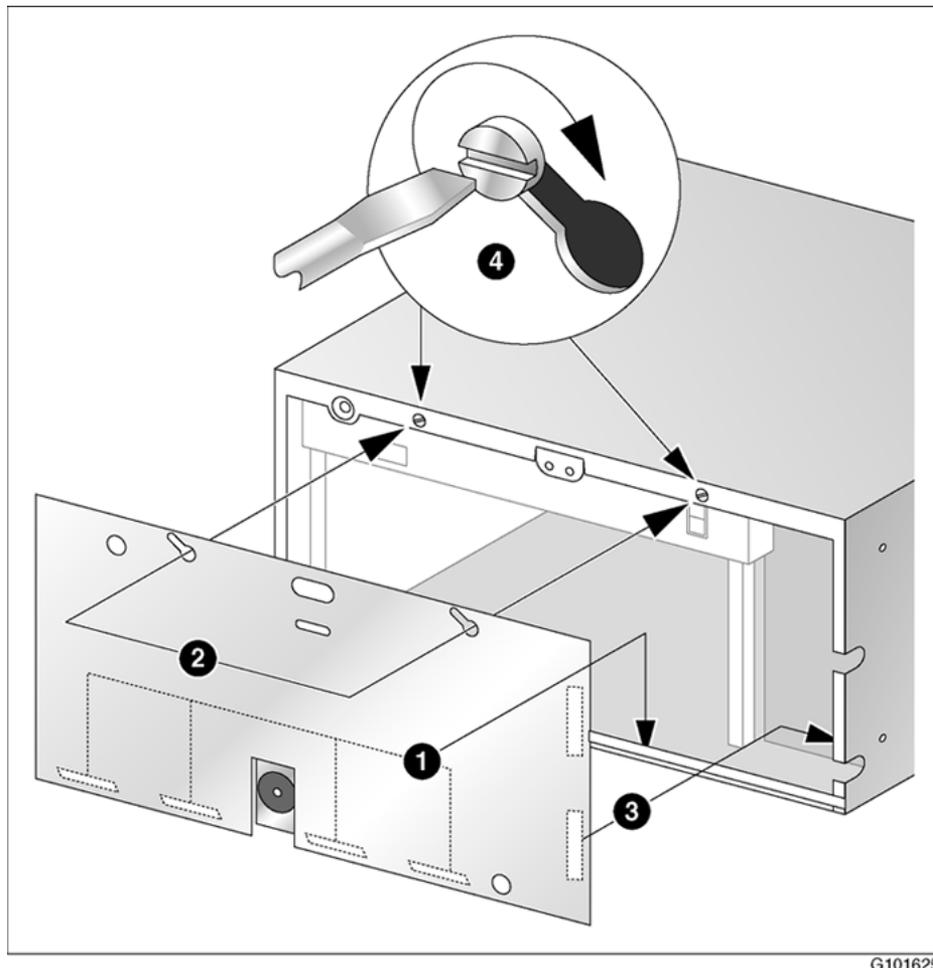

Step	Action
1	Insert the bottom tabs of the front cover plate inside the bottom rail.
2	Align the screw holes on the front cover plate over the screw heads on the Media Gateway or Media Gateway Expansion.
3	Slide the front cover plate downward to the right, ensuring that the side tabs slide behind the side rail.
4	Tighten the screws to secure the front cover plate.
5	Continue with " To replace the front bezel " (page 83)," below.

—End—

To replace the front bezel

Step	Action
------	--------




WARNING

Risk of eye injury

Nortel recommends that you operate the Media Gateway and Media Gateway Expansion with their front bezels installed. When the blue LEDs inside these units are lit, they are very bright.

- 1 Align the two posts and the locking tab on the rear of the front bezel with the slots on the inside front cover plate.

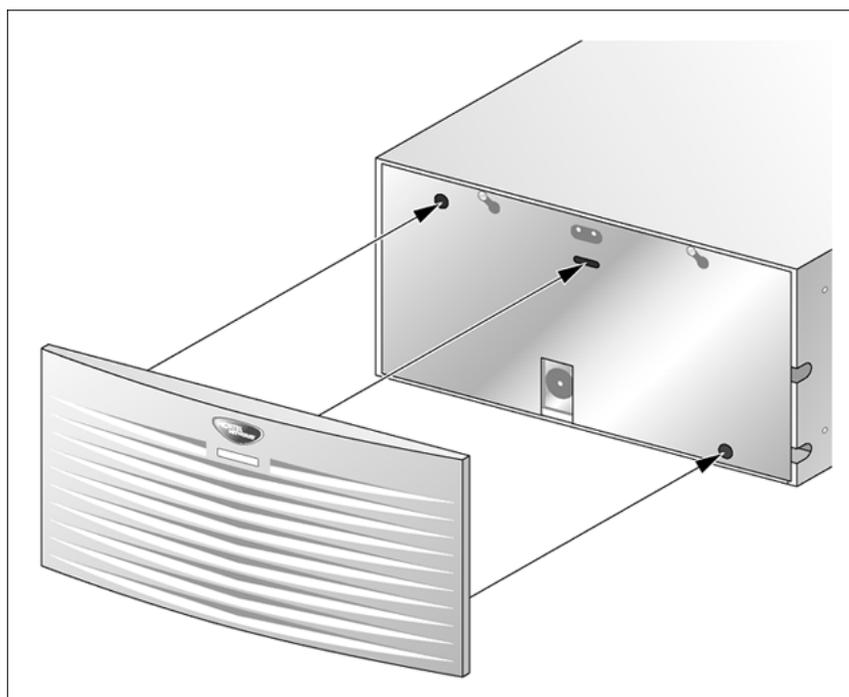

G101622

- 2 Push the bezel toward the Media Gateway or Media Gateway Expansion until it snaps into place.
- 3 Replace the label.

—End—

What is next?

Continue with "Connecting cables to the Communication Server 1000 system" (page 85).

Connecting cables to the Communication Server 1000 system

Introduction


The following items are connected to the back of the Media Gateway or Media Gateway Expansion:

- multi I/O cable (NTRH0912)
 - This cable establishes the connection to the modem, ELAN subnet , and Nortel server subnet.
- Media Gateway or Media Gateway Expansion power cord with two ferrites

You must connect the multi I/O cable first before connecting the power cord, because the power cord routes above the multi I/O cable connection.


To connect the cables

Step	Action
1	On the rear of the Media Gateway or Media Gateway Expansion, locate the connector associated with the first slot occupied by the 201i server.
2	Connect the NTRH0912 multi I/O cable as follows: <ol style="list-style-type: none"> a. Loosen the connector's Velcro fastening strap. b. Connect the amphenol connector on the NTRH0912 multi I/O cable to the connector on the back of the Media Gateway or Media Gateway Expansion. c. Secure the connection by tightening the retaining screw and Velcro fastening strap of the conductor. <p>The following diagram shows how to secure the multi I/O cable connection:</p>

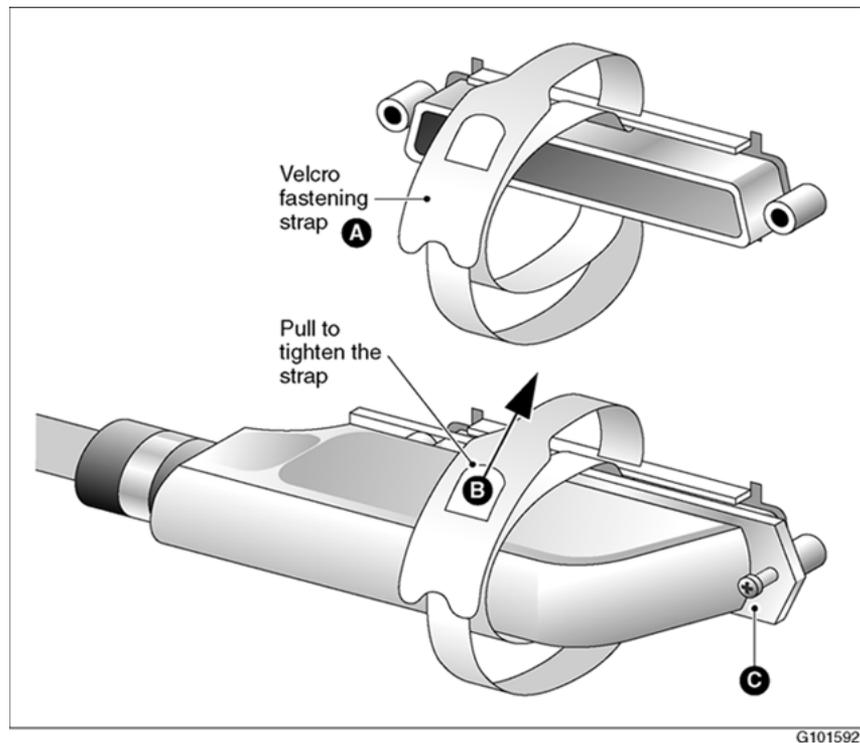

G101592

- 3 Attach the multi I/O cable drain wire to a screw on the Media Gateway or Media Gateway Expansion.
See the diagram in step 4.
- 4 Connect the power cord to the Media Gateway or Media Gateway Expansion.

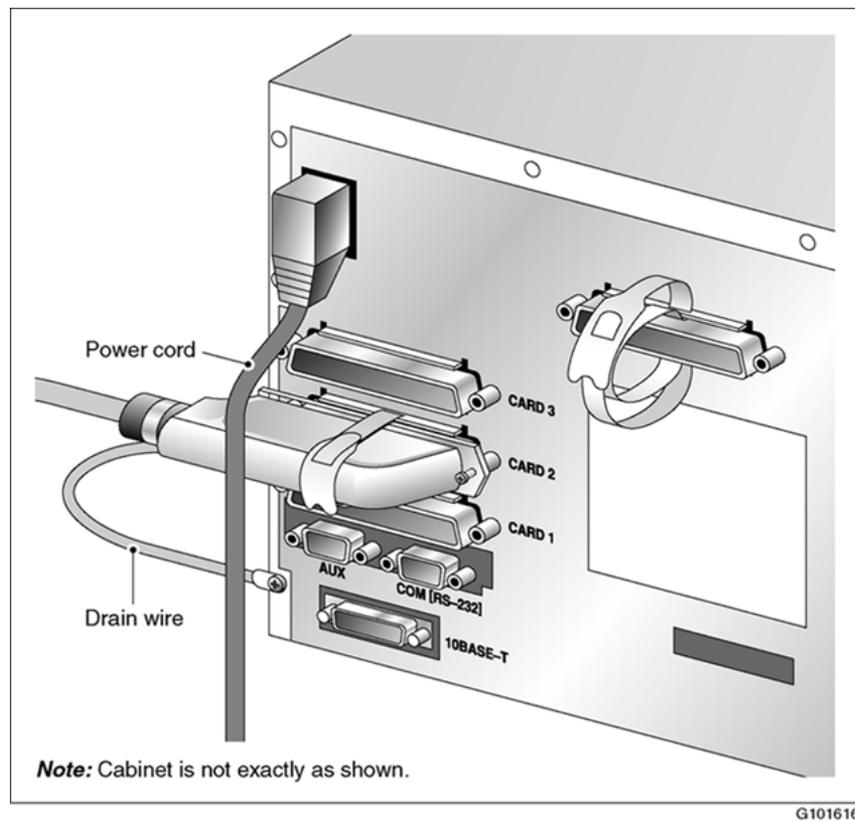

—End—

What is next?

Prepare the modem, CD-ROM drive, and tape drive for connection to the 201i server. For instructions, see [Chapter 7 "Preparing peripheral devices"](#) (page 89).

Chapter 7

Preparing peripheral devices

In this chapter

"Overview" (page 89)

"Setting the modem DIP switches" (page 90)

"Setting the CD-ROM drive SCSI ID and DIP switches" (page 92)

"Setting the tape drive SCSI ID" (page 94)

"Setting SCSI device termination" (page 95)

Overview

Introduction

You can connect a modem and one or more SCSI devices to the 201i server.

The modem is connected to the 201i server multi I/O cable.

The SCSI devices are connected to the 201i server intermediate SCSI cable. If there is more than one SCSI device, the devices are daisy chained together. Each device on the SCSI bus must have a unique SCSI ID, and only the last device in the chain is terminated.

Supported SCSI devices

You need an external CD-ROM drive to upgrade, reinstall, and configure the 201i server. Since the CD-ROM drive is an external device, it requires its own AC power source.

You can use an external SCSI tape drive to back up and restore data. Since the tape drive is an external device, it also requires its own AC power source.

**CAUTION****Risk of equipment damage**

The CD-ROM and tape drives are not hot-pluggable. You must power off the 201i server before you connect or disconnect either drive.

Note: You can optionally use the hard drive on an administration PC instead of a tape drive to perform and store backups.

This section discusses the following drives:

- CD-ROM (NTRH9037): external SCSI CD-ROM drive
- tape drive (NTRH9038): Tandberg SLR5 tape drive

Note: This is currently the only supported tape drive.

DIP switches, SCSI ID, and SCSI device termination settings

For correct operation with the 201i server, you must set the following:

- DIP switches on the modem and CD-ROM drive
- SCSI ID and device termination on the CD-ROM and tape drives

Setting the modem DIP switches**Introduction**

Set the modem DIP switches to their default settings. This section describes how to set the modem DIP switches if they have been changed from the default settings.

To set the modem DIP switches

Ensure that the DIP switches are set as described in the following table. Use a pair of tweezers or small screwdriver to set the DIP switches.

Note: The DIP switches are located on the back of the modem. ON is down. OFF is up.

DIP	Default	Function
-----	---------	----------

DIP switch	Default setting	Function
1	OFF	Data Terminal Ready (DTR) override <ul style="list-style-type: none"> • OFF: Normal DTR operations (The computer must provide a DTR signal for the modem to accept commands. When DTR is dropped, the call is terminated.) • ON: Modem ignores DTR (override)
2	OFF	Verbal/numeric result codes <ul style="list-style-type: none"> • OFF: Displays verbal (word) results • ON: Displays numeric results
3	ON	Result code display <ul style="list-style-type: none"> • OFF: Suppresses result codes • ON: Enables result codes
4	OFF	Command mode local echo suppression <ul style="list-style-type: none"> • OFF: Displays keyboard commands • ON: Suppresses echo
5	ON	Auto answer suppression <ul style="list-style-type: none"> • OFF: Modem answers on first ring, or higher if specified in NVRAM • ON: Disables auto answer

DIP switch	Default setting	Function
6	OFF	Carrier Detect (CD) override <ul style="list-style-type: none"> • OFF: Modem sends CD signal when it connects with another modem; drops CD on disconnect • ON: CD is always ON (override)
7	OFF	Power-on and ATZ reset software defaults <ul style="list-style-type: none"> • OFF: Loads Y or Y1 configuration from user-defined nonvolatile memory (NVRAM) • ON: Loads &F0-Generic template from read-only memory (ROM)
8	ON	AT command set recognition <ul style="list-style-type: none"> • OFF: Disables command recognition (dumb mode) • ON: Enables recognition (smart mode)

Setting the CD-ROM drive SCSI ID and DIP switches

Introduction

This section describes how to set the CD-ROM drive SCSI ID and DIP switches.

ATTENTION


You must power down the CD-ROM drive before changing the SCSI ID and DIP switches.

Note: The CD-ROM drive discussed in this section is the external SCSI CD-ROM drive (NTRH9037).

To set the CD-ROM drive SCSI ID

The SCSI ID setting is located on the back of the CD-ROM drive. (See the diagram that follows.)

To change the SCSI ID, use the blade of a screwdriver to rotate the SCSI ID dial arrow to 3.

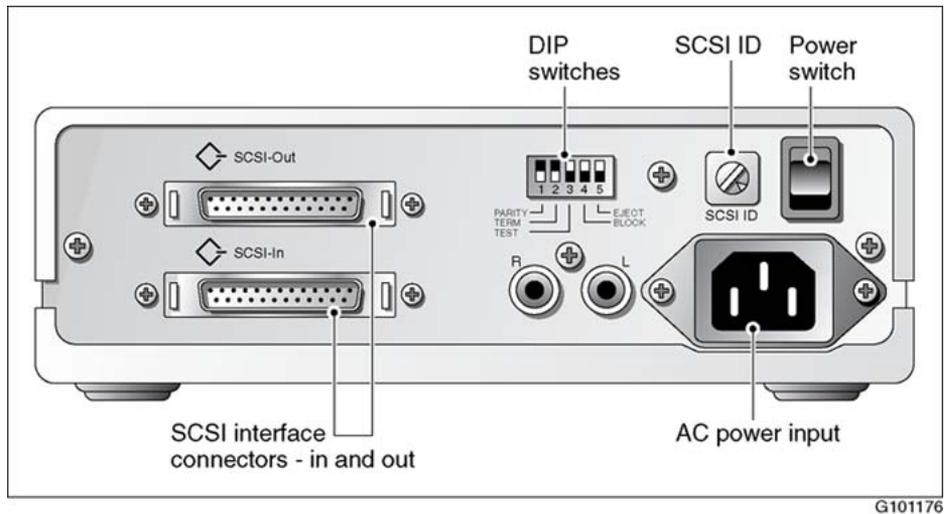

To set the CD-ROM drive DIP switches

Set the CD-ROM drive DIP switches as described in the following table:

DIP switch	Description	Setting
1	Parity	ON
2	Termination	Note: For more information about daisy chaining SCSI devices, see " Setting SCSI device termination " (page 95).
		If the CD-ROM drive is the first and only device, set this switch to ON.
		If the CD-ROM drive is the first device and daisy chained with the tape drive, set this switch to OFF.
3	Test	OFF (for factory use only)

DIP switch	Description	Setting
4	Block	OFF
5	Eject	OFF

Note: If this switch is set to ON, the eject button on the CD-ROM drive is disabled. To eject the CD-ROM from the drive, a software eject command must be sent over the SCSI bus.

What is next?

If you are also installing a tape drive, set the tape drive SCSI ID (see ["Setting the tape drive SCSI ID" \(page 94\)](#)); otherwise, set the CD-ROM drive device termination (see ["Setting SCSI device termination" \(page 95\)](#)).

Setting the tape drive SCSI ID

Introduction

This section describes how to set the tape drive SCSI ID.

ATTENTION

You must power down the tape drive before changing the SCSI ID.


Note: The tape drive discussed in this section is the Tandberg SLR5 tape drive (NTRH9038). This is currently the only supported tape drive.

To set the tape drive SCSI ID

The SCSI ID setting is located on the back of the tape drive. See the following diagram.

Note: The appearance and size of the tape drive cabinet is subject to change. The diagram is an example of the key components.

To change the SCSI ID, use the blade of a screwdriver to press either the plus (+) or minus (-) button on the SCSI ID switch. Set the SCSI ID to 5.

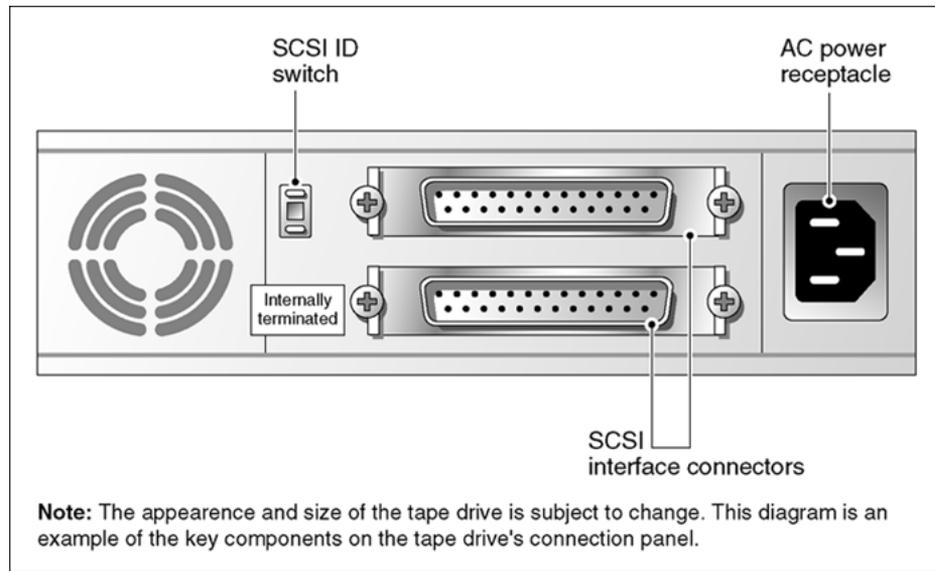

Setting SCSI device termination

Introduction

If you want to connect SCSI devices in a daisy chain, the last device in the daisy chain must be terminated. This section describes how to terminate the SCSI devices.

ATTENTION

Ensure that the CD-ROM and tape drives are powered down before changing the device termination.


Supported daisy chain connection scenarios

The first device in a SCSI device daisy chain can be either the tape drive or the CD-ROM drive. However, because the Tandberg SLR5 tape drive is already internally terminated at the factory, Nortel recommends that you connect the tape drive as the last device.

The following diagrams show the supported daisy chain and SCSI cable connections for your switch. The CD-ROM drive is the first device in the daisy chain. The tape drive is the last device.

Meridian 1


For more information about the cabling requirements, see ["Installing the SCSI cables for Meridian 1"](#) (page 49).

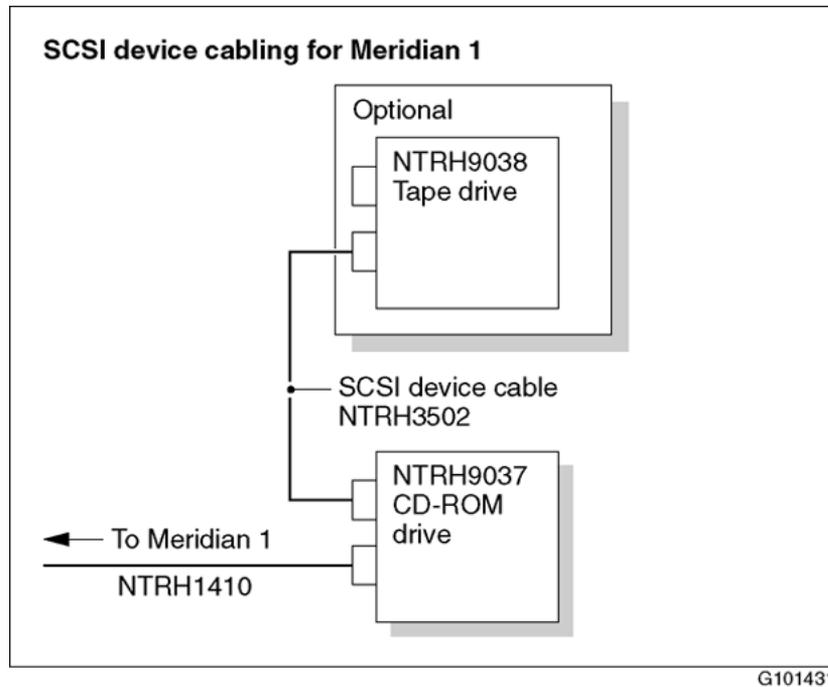

Option 11C, Option 11C Mini


For more information about the cabling requirements, see one of the following:

- ["Installing the intermediate SCSI cable for Option 11C" \(page 58\)](#)
- ["Installing the NTRH3502 SCSI cable for Option 11C Mini" \(page 63\)](#)

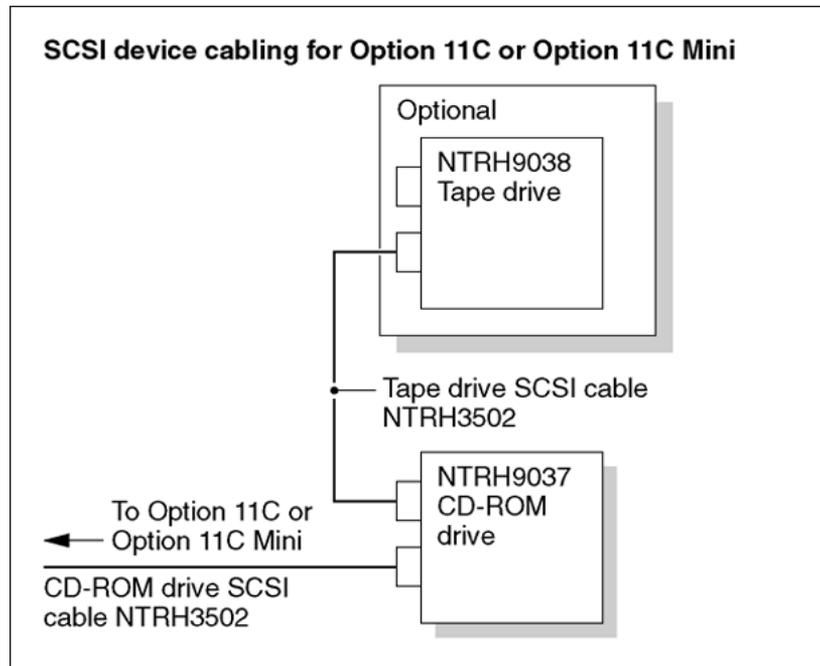

Communication Server 1000

For more information about the cabling requirements, see ["Installing the NTRH3502 SCSI cable for Communication Server 1000"](#) (page 80).

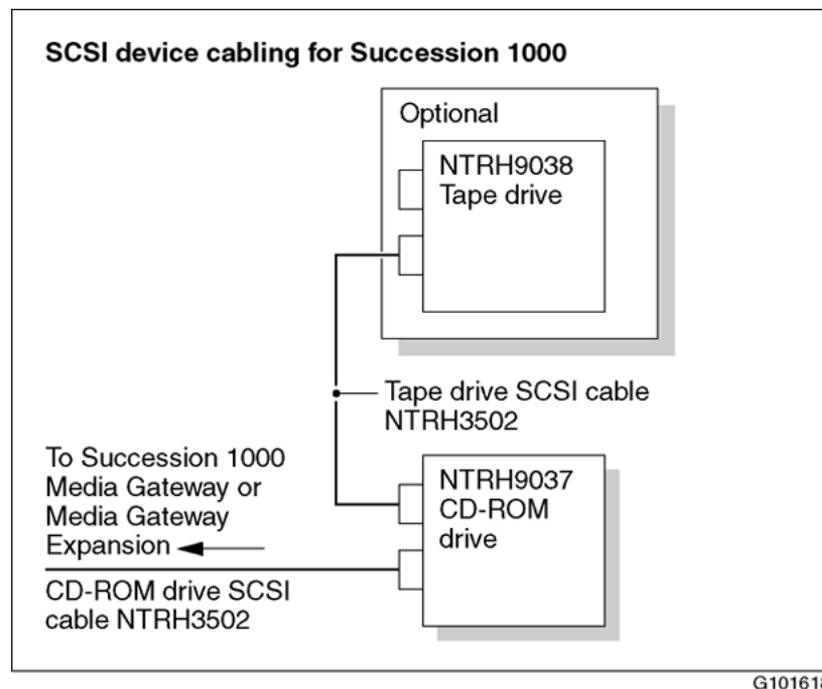

To set device termination

Terminate the SCSI devices as described in the following table:

IF you are connecting	THEN
a CD-ROM drive only	set DIP switch 2 on the back of the CD-ROM drive to ON. This terminates the drive.
a tape drive only	do nothing. External termination is not required because the drive is already internally terminated. This is indicated by a label on the back or front of the tape drive.
both a CD-ROM drive and a tape drive (the tape drive is the last device)	set DIP switch 2 on the back of the CD-ROM drive to OFF. The tape drive is internally terminated. External termination is not required.

What is next?

Complete the 201i server installation in the switch. See [Chapter 8 "Connecting peripheral devices to the 201i server"](#) (page 99).

Chapter 8

Connecting peripheral devices to the 201i server

In this chapter

"Overview" (page 99)

"Installing the MPCs" (page 102)

"Installing the monitor, keyboard, and mouse" (page 104)

"Connecting the CD-ROM and tape drives" (page 105)

"Connecting the 201i server to the switch, ELAN subnet , and Nortel server subnet" (page 113)

"Connecting the modem" (page 116)

"Completing the installation" (page 118)

Overview

Introduction

This section describes installing the 201i server in the switch, connecting peripheral devices, and starting the 201i server.

Connecting the 201i server to the network

The switch, ELAN subnet , Nortel server subnet, and modem connections are established by using the 201i server multi I/O cable.

The switch connector is a 50-pin amphenol connector.

The RJ-45 CLAN and ELAN connectors support the following network protocols:

- ELAN: 10Base-T Ethernet

- CLAN: 10/100Base-T Ethernet

The modem connector is a 9-pin male RS-232 connector. To connect this cable to the modem, you also need a 25-pin male to 9-pin female shielded serial cable (A0601464, supplied with the modem).

Connecting peripheral devices

MPC cards

Two MPC-8 cards are preinstalled at the factory. This section describes how to install additional cards, if required.

CD-ROM and tape drives

Before you connect CD-ROM and tape drives, ensure that you have set the SCSI ID, termination, and DIP switches as described in [Chapter 7 "Preparing peripheral devices" \(page 89\)](#).

Monitor, keyboard, and mouse

Connect the monitor, keyboard, and mouse to the 201i server faceplate so that you can:

- observe the 201i server startup process.
- run the Configuration Wizard.
- perform initial administration after installation.

The 201i server is not intended to operate with permanent monitor, keyboard, and mouse connections. Once you have successfully started and configured the 201i server, remove the monitor, keyboard, and mouse. For day-to-day administration, use a web browser on a PC that is connected to the ELAN subnet or Nortel server subnet.


Modem

The modem must be connected to the 201i server if:

- you want to administer the 201i server from a remote location that does not have access to the Nortel server subnet.
- you need assistance from Nortel technical support.

201i server faceplate and peripheral device connectors

The following diagram identifies the peripheral device connectors and slots on the 201i server faceplate:

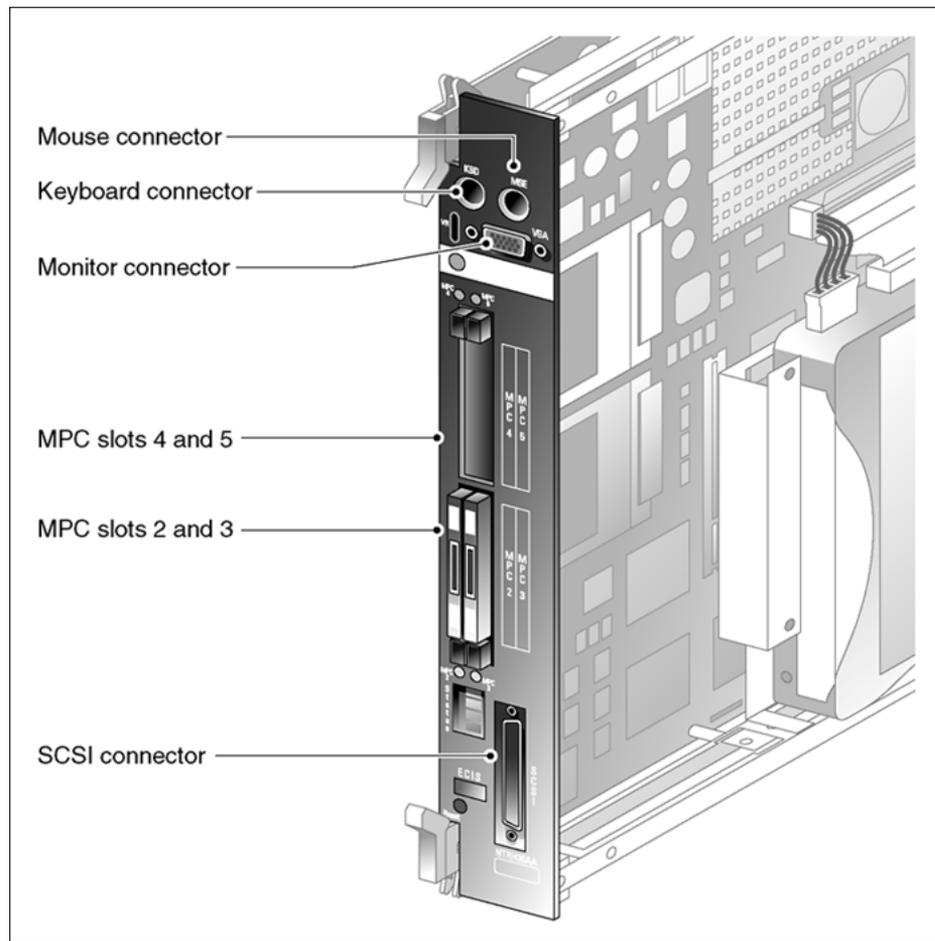

G101444

Starting the 201i server

When you lock the 201i into position against the switch backplane, the server starts automatically. You can observe the startup process on both the monitor and the 201i server faceplate.

ATTENTION

Ensure that all peripheral devices are connected before you lock the 201i server in position against the backplane.

The 201i server receives power and starts when the connection with the backplane is established.

Before you begin

Before you connect the peripheral devices, ensure that you have completed the following tasks:

1. Set the DIP switches on the external fax modem. See ["Setting the modem DIP switches"](#) (page 90).

2. Prepare the SCSI CD-ROM and tape drives. See the following:
 - "Setting the CD-ROM drive SCSI ID and DIP switches" (page 92)
 - "Setting the tape drive SCSI ID" (page 94)
 - "Setting SCSI device termination" (page 95)

Installing the MPCs

Introduction

Two MPCs are preinstalled at the factory. This section describes how to install additional cards, if required.

Correct card insertion

The MPC-8 card is keyed so that it fits only one way into the slot on the 201i server faceplate. If the card is inserted incorrectly, the card does not go all the way into the slot.



CAUTION


Risk of equipment damage

If you force the card into the slot incorrectly, you can damage the MPC-8 card and 201i server.

To install the MPCs

Step	Action						
1	Do one of the following:						
	<table border="1"> <thead> <tr> <th>IF</th> <th>THEN</th> </tr> </thead> <tbody> <tr> <td>MPCs are already installed</td> <td>ensure that they are firmly seated in their slots.</td> </tr> <tr> <td>you want to install additional MPCs</td> <td>continue with the rest of this procedure.</td> </tr> </tbody> </table>	IF	THEN	MPCs are already installed	ensure that they are firmly seated in their slots.	you want to install additional MPCs	continue with the rest of this procedure.
IF	THEN						
MPCs are already installed	ensure that they are firmly seated in their slots.						
you want to install additional MPCs	continue with the rest of this procedure.						
2	Ensure that the MPC-8 card label is facing one of the following ways: <ul style="list-style-type: none"> • facing up if the 201i server is lying horizontally on a flat surface, with the top lock latch on the left • facing to the right if the 201i server is inserted into the 201i shelf (see the following diagram) 						

- facing up if the 201i server is lying horizontally on a flat surface, with the top lock latch on the left
- facing to the right if the 201i server is inserted into the 201i shelf (see the following diagram)

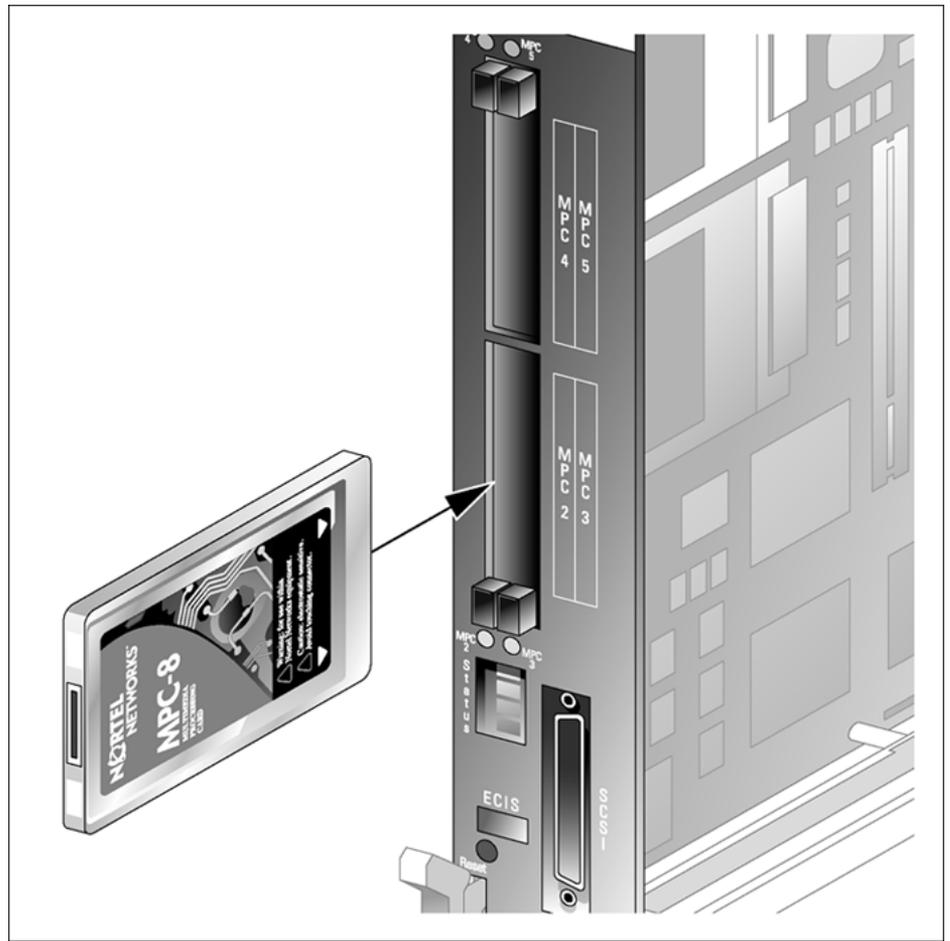

G101541

- 3 Insert the card into the slot, and gently push it until it is firmly in place and the ejector button pops back out.

Note: Populate MPC slots in numerical order as listed on the 201i server faceplate.

—End—

What is next?

Continue with "Installing the monitor, keyboard, and mouse" (page 104).

Installing the monitor, keyboard, and mouse

Introduction

You must connect the monitor, keyboard, and mouse to the 201i server so that you can:

- observe the 201i server startup process.
- run the Configuration Wizard.
- perform initial administration after installation.

Note: The 201i server is not intended to operate with permanent monitor, keyboard, and mouse connections. Once you have successfully started and configured the 201i server, remove the monitor, keyboard, and mouse. For day-to-day administration, use a web browser on a PC that is connected to the ELAN subnet or Nortel server subnet.

Hardware requirement



CAUTION


Risk of equipment damage

The mouse connector on the 201i faceplate is a PS/2 connector. If you plan to use a USB mouse with USB-to-PS/2 converter, you must also use the Nortel-supplied 4-inch PS/2 extension cable (A0855616).

Without the extension cable, the USB-to-PS/2 mouse connector is partially blocked by the monitor connector.

PS/2 extension cable

The following diagram shows the PS/2 extension cable connected between the 201i server and the USB mouse with USB-to-PS/2 converter.

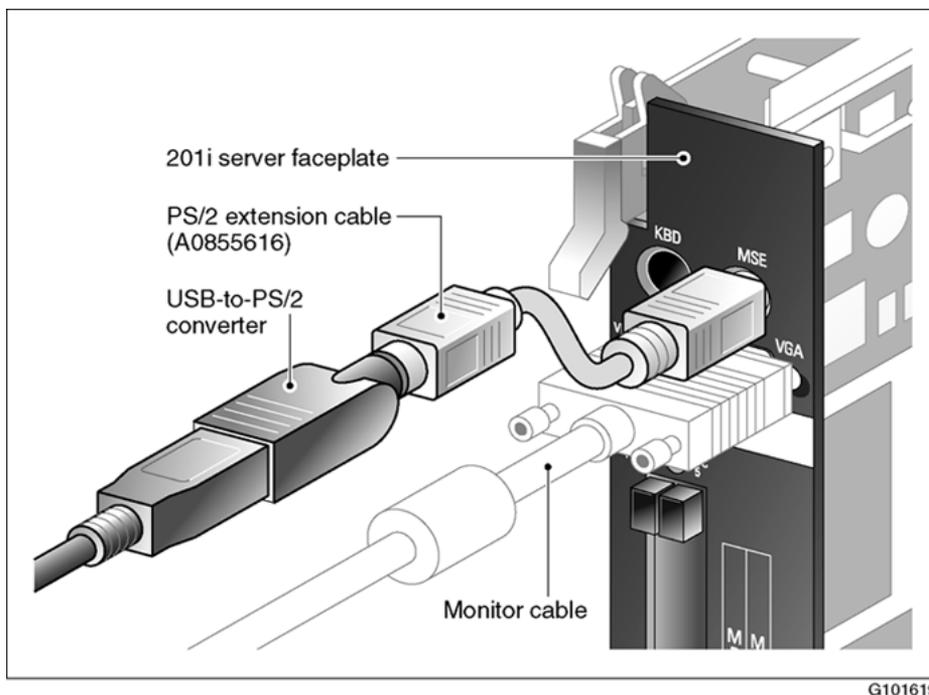

G101619

To connect the monitor, keyboard, and mouse

Step	Action
1	Connect the monitor to the 201i server faceplate using a DB-15 cable.
2	Connect the monitor power cord, and then power up the monitor.
3	Connect the keyboard and mouse to the 201i server faceplate using standard PS/2 connectors.

—End—

What is next?

Continue with ["Connecting the CD-ROM and tape drives" \(page 105\)](#).

Connecting the CD-ROM and tape drives

Introduction

You can connect the CD-ROM, tape drive, or both to the intermediate SCSI cable that you installed earlier.

Before you begin

Before you can connect the CD-ROM or tape drive, ensure that you have completed the following tasks:

1. Install the intermediate SCSI cable.

For	See
Meridian 1	"Installing the SCSI cables for Meridian 1" (page 49).
Option 11C	"Installing the intermediate SCSI cable for Option 11C" (page 58).
Option 11C Mini	"Installing the NTRH3502 SCSI cable for Option 11C Mini" (page 63).
Communication Server 1000	"Installing the NTRH3502 SCSI cable for Communication Server 1000" (page 80).

2. Set the SCSI ID and device termination settings as described in
 - "Setting the CD-ROM drive SCSI ID and DIP switches" (page 92)
 - "Setting SCSI device termination" (page 95)


Selecting the procedure for your switch

IF you are working with	THEN see
a large Meridian 1 switch (such as Option 51)	"To connect the CD-ROM and tape drives to the 201i server (Meridian 1)" (page 106).
Option 11C	"To connect the CD-ROM and tape drives to the 201i server (Option 11C)" (page 108).
Option 11C Mini	"To connect the CD-ROM and tape drives to the 201i server (Option 11C Mini)" (page 110).
Communication Server 1000	"To connect the CD-ROM and tape drives to the 201i server (Communication Server 1000)" (page 112).

To connect the CD-ROM and tape drives to the 201i server (Meridian 1)

Note: If you are connecting the SCSI devices to the Option 11C, go to "To connect the CD-ROM and tape drives to the 201i server (Option 11C)" (page 108). If you are connecting the SCSI devices to the Option 11C Mini, go to "To connect the CD-ROM and tape drives to the 201i server (Option 11C Mini)" (page 110).

Step	Action						
1	Connect the first SCSI device.						
2	Follow instructions below: <table border="1" data-bbox="510 409 1406 903"> <thead> <tr> <th>IF the first device is the</th> <th>THEN</th> </tr> </thead> <tbody> <tr> <td>CD-ROM drive</td> <td>connect the CD-ROM drive to the NTRH1410 cable that you connected earlier to the Meridian 1 I/O panel.</td> </tr> <tr> <td>tape drive</td> <td>do the following: <ul style="list-style-type: none"> a. Attach the A0769312 SCSI adapter to the tape drive. b. Connect the SCSI adapter to the NTRH1410 cable that you connected earlier to the Meridian 1 I/O panel. </td> </tr> </tbody> </table>	IF the first device is the	THEN	CD-ROM drive	connect the CD-ROM drive to the NTRH1410 cable that you connected earlier to the Meridian 1 I/O panel.	tape drive	do the following: <ul style="list-style-type: none"> a. Attach the A0769312 SCSI adapter to the tape drive. b. Connect the SCSI adapter to the NTRH1410 cable that you connected earlier to the Meridian 1 I/O panel.
IF the first device is the	THEN						
CD-ROM drive	connect the CD-ROM drive to the NTRH1410 cable that you connected earlier to the Meridian 1 I/O panel.						
tape drive	do the following: <ul style="list-style-type: none"> a. Attach the A0769312 SCSI adapter to the tape drive. b. Connect the SCSI adapter to the NTRH1410 cable that you connected earlier to the Meridian 1 I/O panel. 						
3	Connect the low-profile right-angle SCSI cable connector to the SCSI connector on the 201i server faceplate.						
4	Connect an additional device in a daisy chain, if required, using either the SCSI cable supplied with the device or an NTRH3502 cable. The following diagram shows cable connections, where the CD-ROM is the first device:						

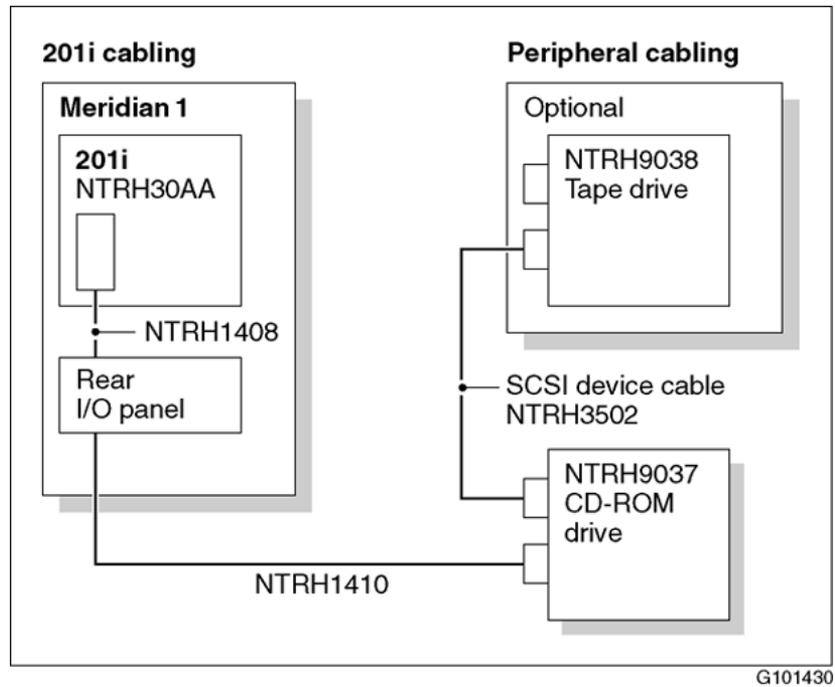

Note: Alternate SCSI device connection scenarios are supported, but are not depicted in this guide. If you want to use a connection scenario that is not described in this guide, ensure that you use appropriate cabling for each SCSI device.

- 5 Connect the power cord for each device.
- 6 Power up the devices.
- 7 Continue with "What is next?" (page 113).

—End—

To connect the CD-ROM and tape drives to the 201i server (Option 11C)

Step	Action
------	--------

- | | |
|---|--------------------------------|
| 1 | Connect the first SCSI device. |
|---|--------------------------------|


2 Follow instructions below:

IF the first device is the	THEN
CD-ROM drive	connect the NTRH3502 SCSI cable from the CD-ROM drive to the SCSI connector that is located on the intermediate SCSI cable bracket assembly (NTRH1407) on the Option 11C.
tape drive	do the following: <ul style="list-style-type: none"> a. Attach the A0769312 SCSI adapter to the tape drive. b. Connect the NTRH3502 SCSI cable from the adapter to the SCSI connector that is located on the intermediate SCSI cable bracket assembly (NTRH1407) on the Option 11C.

3 Connect the low-profile right-angle SCSI cable connector to the SCSI connector on the 201i server faceplate.

4 Connect an additional device in a daisy chain, if required, using either the SCSI cable supplied with the device or an NTRH3502 cable.

The following diagram shows cable connections, where the CD-ROM drive is the first device:

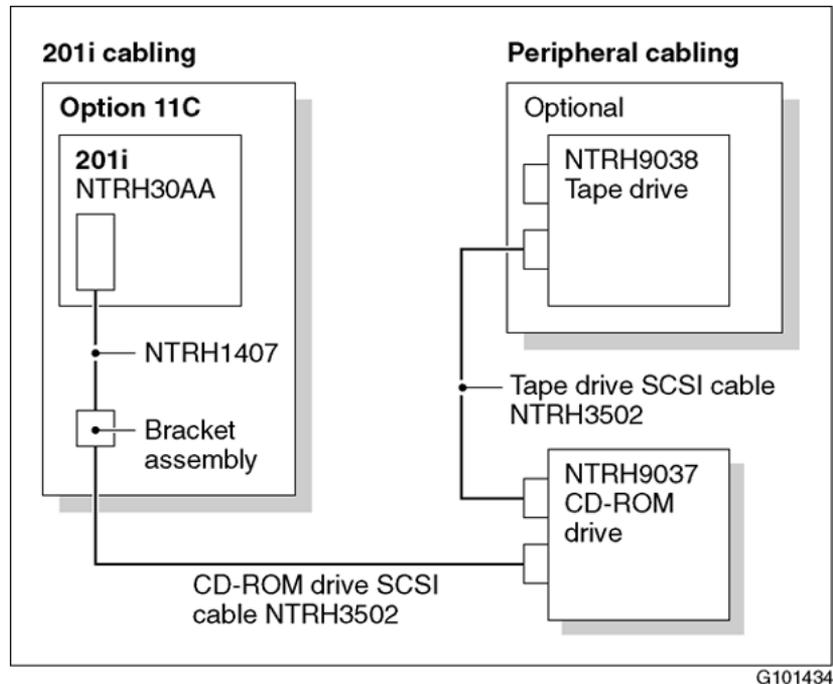

Note: Alternate SCSI device connection scenarios are supported, but are not depicted in this guide. If you want to use a connection scenario that is not described in this guide, ensure that you use appropriate cabling for each SCSI device.

- 5 Connect the power cord for each device.
- 6 Power up the devices.
- 7 Continue with "What is next?" (page 113).

—End—

To connect the CD-ROM and tape drives to the 201i server (Option 11C Mini)

Step	Action
------	--------

- | | |
|---|--------------------------------|
| 1 | Connect the first SCSI device. |
|---|--------------------------------|

2 Follow instructions below.

IF the first device is the**THEN**

CD-ROM drive

do the following:

a. Attach the A0769312 SCSI adapter to the CD-ROM drive.

b. Connect the NTRH3502 SCSI cable that you installed earlier on the Option 11C Mini to the SCSI adapter on the CD-ROM drive.


tape drive

connect the NTRH3502 SCSI cable that you installed earlier on the Option 11C Mini to the tape drive.

3 Connect the low-profile right-angle SCSI cable connector to the SCSI connector on the 201i server faceplate.

4 Connect an additional device in a daisy chain, if required, using either the SCSI cable supplied with the device or an NTRH3502 cable.

The following diagram shows cable connections, where the CD-ROM drive is the first device:

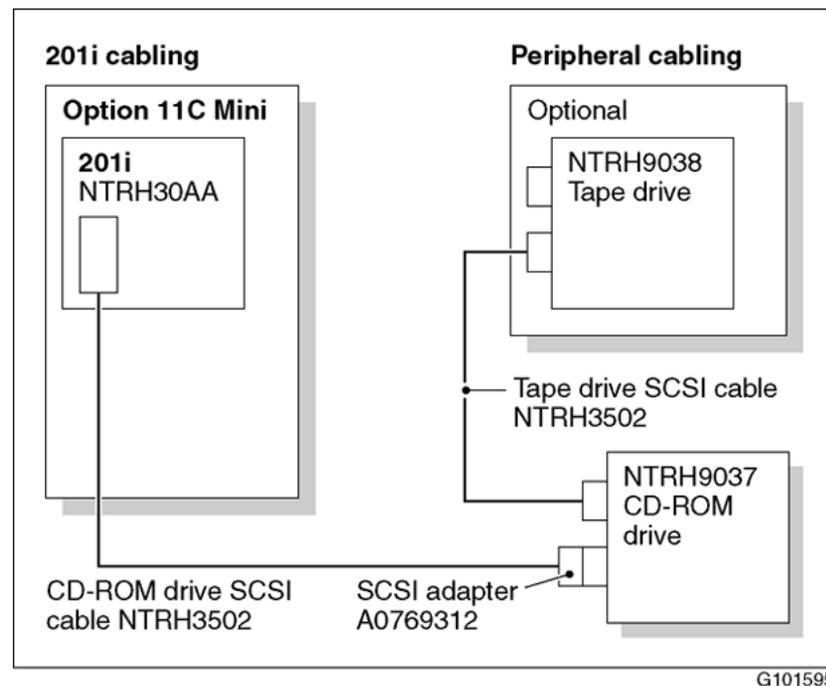


Note: Alternate SCSI device connection scenarios are supported, but are not depicted in this guide. If you want to use a connection scenario that is not described in this guide, ensure that you use appropriate cabling for each SCSI device.

- 5 Connect the power cord for each device.
- 6 Power up the devices.
- 7 Continue with "What is next?" (page 113).

—End—

To connect the CD-ROM and tape drives to the 201i server (Communication Server 1000)

Step	Action						
1	Connect the first SCSI device.						
2	Follow instructions below:						
	<table border="1"> <thead> <tr> <th style="text-align: left;">IF the first device is the</th> <th style="text-align: left;">THEN</th> </tr> </thead> <tbody> <tr> <td>CD-ROM drive</td> <td>do the following: <ul style="list-style-type: none"> a. Attach the A0769312 SCSI adapter to the CD-ROM drive. b. Connect the NTRH3502 SCSI cable that you installed earlier on the Option 11C Mini to the SCSI adapter on the CD-ROM drive. </td> </tr> <tr> <td>tape drive</td> <td>connect the NTRH3502 SCSI cable that you installed earlier on the Option 11C Mini to the tape drive.</td> </tr> </tbody> </table>	IF the first device is the	THEN	CD-ROM drive	do the following: <ul style="list-style-type: none"> a. Attach the A0769312 SCSI adapter to the CD-ROM drive. b. Connect the NTRH3502 SCSI cable that you installed earlier on the Option 11C Mini to the SCSI adapter on the CD-ROM drive. 	tape drive	connect the NTRH3502 SCSI cable that you installed earlier on the Option 11C Mini to the tape drive.
IF the first device is the	THEN						
CD-ROM drive	do the following: <ul style="list-style-type: none"> a. Attach the A0769312 SCSI adapter to the CD-ROM drive. b. Connect the NTRH3502 SCSI cable that you installed earlier on the Option 11C Mini to the SCSI adapter on the CD-ROM drive. 						
tape drive	connect the NTRH3502 SCSI cable that you installed earlier on the Option 11C Mini to the tape drive.						
3	Connect an additional device in a daisy chain if required, using either the SCSI cable supplied with the device or an NTRH3502 cable. The following diagram shows cable connections, where the CD-ROM drive is the first device:						

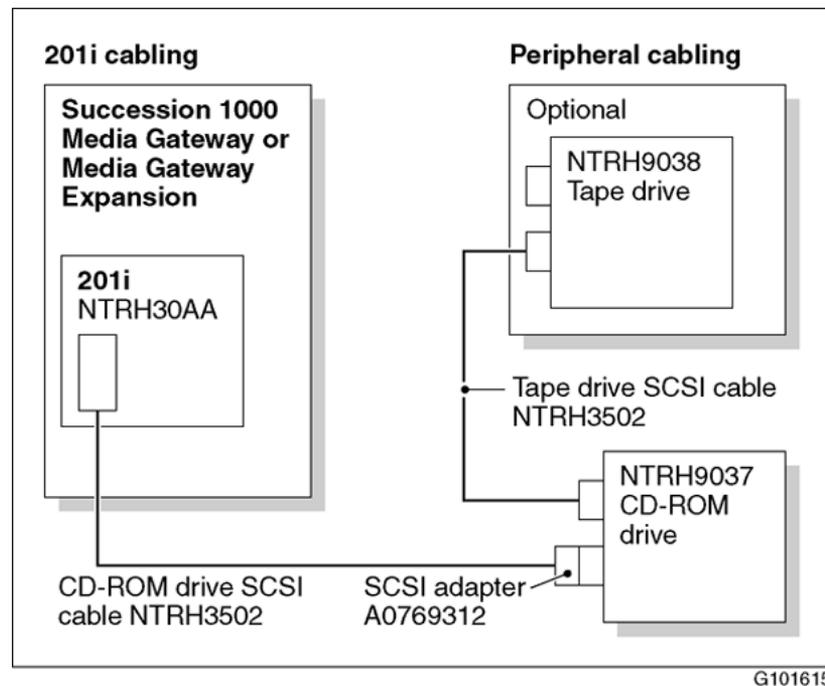

Note: Alternate SCSI device connection scenarios are supported, but are not depicted in this guide. If you want to use a connection scenario that is not described in this guide, ensure that you use appropriate cabling for each SCSI device.

- 4 Connect the power cord for each device.
- 5 Power up the devices.

—End—

What is next?

Continue with "[Connecting the 201i server to the switch, ELAN subnet , and Nortel server subnet](#)" (page 113).

Connecting the 201i server to the switch, ELAN subnet , and Nortel server subnet

Introduction

The Nortel server subnet and ELAN subnet connections are established by using the 201i server multi I/O cable.

ATTENTION

For important considerations about using the ELAN in your network, see the *CallPilot Installation and Configuration Task List*.

To establish the switch and network connections


Step	Action								
1	Do one of the following:								
	<table border="1"> <thead> <tr> <th>IF you are installing the 201i server in a</th> <th>THEN</th> </tr> </thead> <tbody> <tr> <td>large Meridian 1 (for example, Option 51C)</td> <td>ensure that the 50-pin amphenol connector on the multi I/O cable (NTRH0912) is connected to the newly installed backplane cable (NTRH3501) on the I/O panel at the rear of the switch.</td> </tr> <tr> <td>Option 11C</td> <td>connect the 50-pin amphenol connector on the multi I/O cable (NTRH0912) to the high-density connector associated with the left slot occupied by the 201i server.</td> </tr> <tr> <td>Option 11C Mini or Communication Server 1000</td> <td>ensure that the 50-pin amphenol connector on the multi I/O cable (NTRH0912) is connected to the high-density connector associated with the left slot occupied by the 201i server.</td> </tr> </tbody> </table>	IF you are installing the 201i server in a	THEN	large Meridian 1 (for example, Option 51C)	ensure that the 50-pin amphenol connector on the multi I/O cable (NTRH0912) is connected to the newly installed backplane cable (NTRH3501) on the I/O panel at the rear of the switch.	Option 11C	connect the 50-pin amphenol connector on the multi I/O cable (NTRH0912) to the high-density connector associated with the left slot occupied by the 201i server.	Option 11C Mini or Communication Server 1000	ensure that the 50-pin amphenol connector on the multi I/O cable (NTRH0912) is connected to the high-density connector associated with the left slot occupied by the 201i server.
IF you are installing the 201i server in a	THEN								
large Meridian 1 (for example, Option 51C)	ensure that the 50-pin amphenol connector on the multi I/O cable (NTRH0912) is connected to the newly installed backplane cable (NTRH3501) on the I/O panel at the rear of the switch.								
Option 11C	connect the 50-pin amphenol connector on the multi I/O cable (NTRH0912) to the high-density connector associated with the left slot occupied by the 201i server.								
Option 11C Mini or Communication Server 1000	ensure that the 50-pin amphenol connector on the multi I/O cable (NTRH0912) is connected to the high-density connector associated with the left slot occupied by the 201i server.								

Note: Ensure that the cable is securely fastened.

2 If you have not already done so, connect the amphenol connector drain wire as follows:


- Option 11C or Meridian 1 to the nearest backplane grounding bolt on the switch

The following diagram shows drain wire connection on the Option 11C.

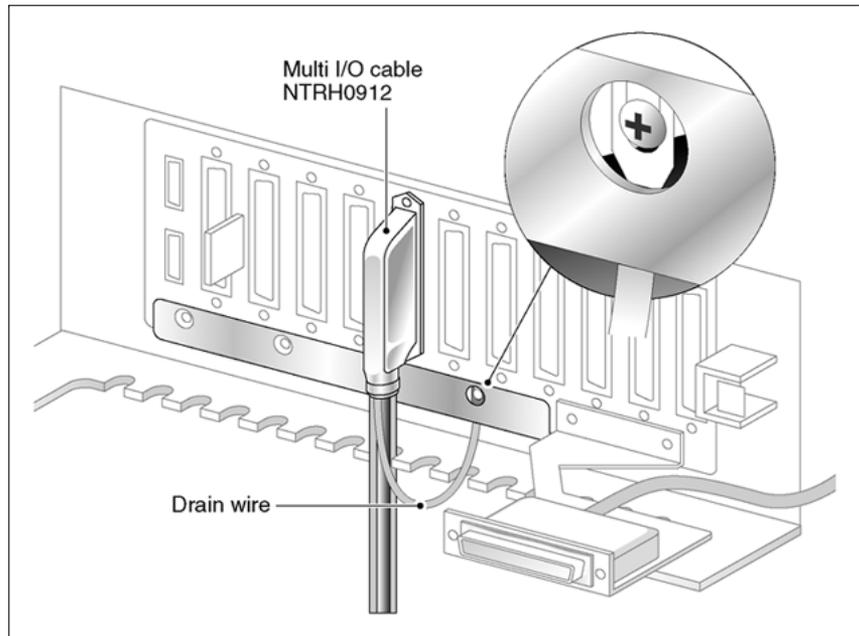

G101552

- Option 11C Mini or Communication Server 1000 to a screw on the back of the cabinet

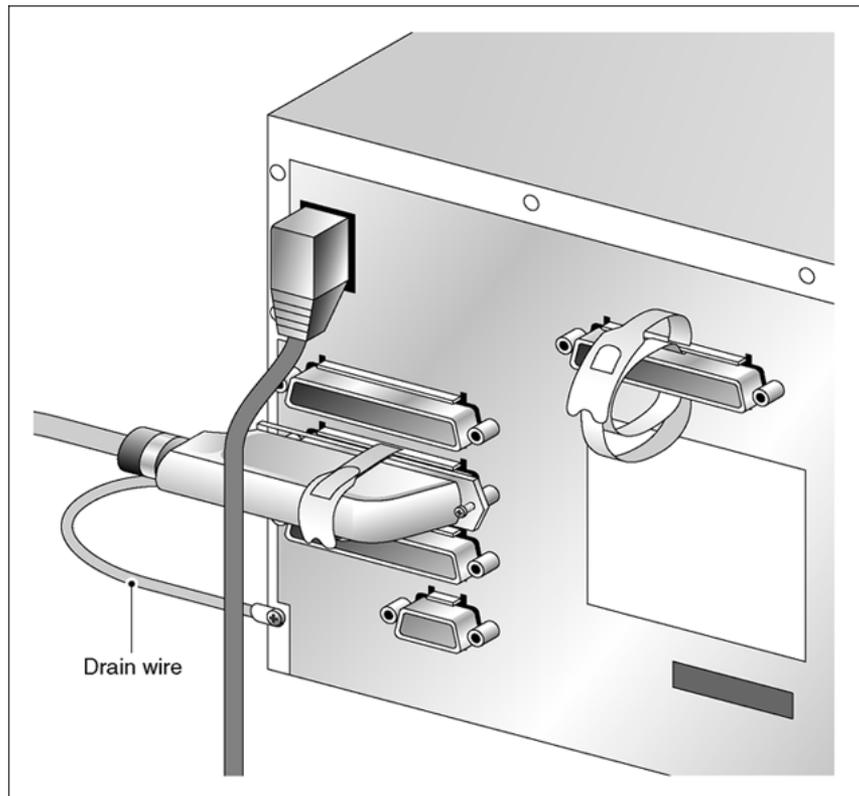

G101593

- 3 Connect the connector on the multi I/O cable that is labeled as ELAN to the switch network hub or switch.
- 4 If Nortel server subnet is required, connect the connector on the multi I/O cable that is labeled as CLAN to the CLAN 10- or 100Base-T-compliant network hub or switch.

—End—

What is next?

Continue with ["Connecting the modem" \(page 116\)](#).

Connecting the modem

Introduction

You must connect the modem to the 201i server if:

- you want to administer the 201i server from a remote location that does not have access to the Nortel server subnet.
- you need assistance from Nortel technical support.

Required equipment

To install the modem, you need the following items:

- analog external modem that includes
 - RJ-11 analog phone cord
 - power adapter cord
 - 56 kbps modem (NTRH9078)
- 25-pin male to 9-pin female shielded serial cable (A0601464)
- two 0.25-inch nuts for installation between the following:
 - RS-232 connector thumbscrews on the multi I/O cable; maximum length 15 m (50 ft)
 - 9-pin connector thumbscrews on the 25-pin male to 9-pin female shielded serial cable
- analog line jack

To connect the modem

Step	Action
------	--------

- | | |
|---|---|
| 1 | Ensure that the DIP switches are set as described in "Setting the modem DIP switches" (page 90) . |
|---|---|


- 2 Attach the serial cable as follows:
 - a. Connect the 25-pin male end of the serial cable to the modem.
 - b. Attach the 0.25-inch nuts to the thumbscrews on the 9-pin female connector on the serial cable.
 - c. Connect the 9-pin female connector to the RS-232 COM1 connector on the multi I/O cable and tighten the nuts.
- 3 Connect one end of the RJ-11 phone cord to the line jack on the modem and the other end to an analog jack.

**CAUTION****Risk of equipment damage**

Connect the modem to an analog line only. The use of a non-analog line (for example, digital or Multiline) can damage the modem.

- 4 Plug the power cord into an electrical outlet with an isolated ground.
- 5 Plug the other end of the power cord into the modem power connector.

Result: The back of the modem appears similar to the following:

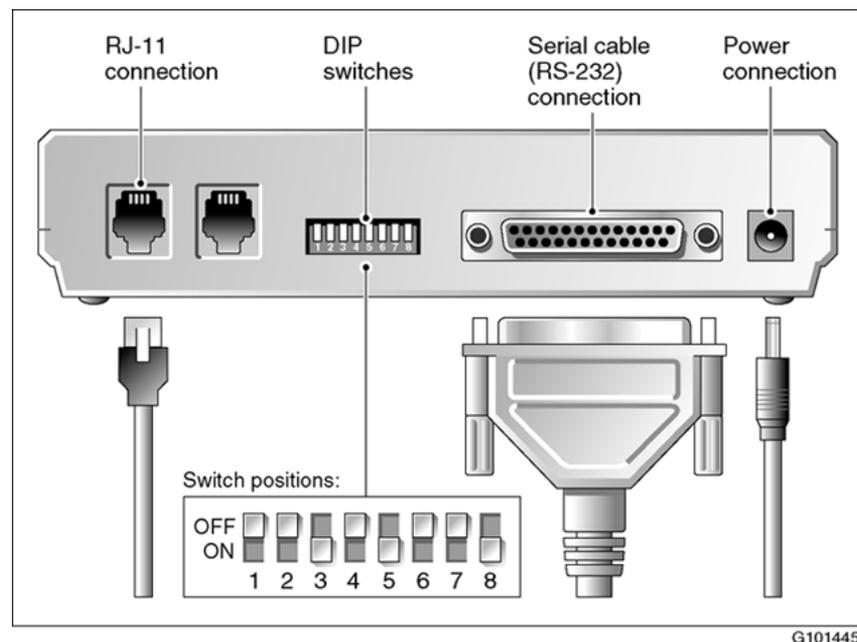

- 6 Power on the modem.

Note: Ensure that the modem is receiving power by checking that at least one LED on its front panel is lit.

- 7 Place the modem in an area where it cannot be accidentally damaged or where people cannot trip over attached cords.

—End—

What is next?

Continue with "[Completing the installation](#)" (page 118).

Completing the installation

Introduction

To complete the installation of the 201i server, lock the 201i into position. The server starts up automatically.

ATTENTION

When connecting the optional Nortel server subnet, do not power up unless your antivirus programs and Nortel security updates are installed first.

To complete the installation and start the 201i server

Note: Ensure that the switch in which the 201i is installed is powered on.

Step	Action
------	--------

1	Ensure that all peripheral devices are powered up (including the 201i shelf).
---	---

2	Push the 201i server gently but firmly until it is flush with the backplane.
---	--

Result: The 201i server beeps for three seconds to indicate that power is being received.

3	Close the lock latches to secure the 201i server to the backplane.
---	--

4	Ensure that the power status LED is lit.
---	--

5	Watch the HEX display on the 201i server.
---	---

The HEX display shows T:01 through T:08, and then HOST. This takes about 13 seconds.

Result: The operating system boot sequence begins, and communication with the switch occurs. The HEX display shows NT (for about 30 seconds), followed by OK.

Note 1: The system reboots more than once. The HEX display repeats with each reboot.

Note 2: Before OK appears, one of the following messages can appear, but not for more than one second: CDLN, C:01, or C:02. This is normal operation.

If OK does not appear, refer to the CallPilot server maintenance and diagnostics guide for your server for troubleshooting instructions.

- 6 Ensure that the operating system logon window appears on the monitor.

If the logon window does not appear, refer to the CallPilot <server model> *Server Maintenance and Diagnostics* guide for your server for troubleshooting instructions.

—End—

What is next?

Proceed with the *CallPilot <switch model> and CallPilot Server Configuration* guide for your switch and server to connect and configure the server and switch.

Index

Symbols/Numerics

201i server

- Communication Server 1000 card slots 73, 78
- components, diagram 13
- damaged, what to do 33
- faceplate
 - connections 23
 - description 15, 17
 - diagram 14, 100
- inspecting 32
- installation
 - checklist 28, 31
 - prerequisites 33
- installing
 - Communication Server 1000 78
 - large Meridian 1 systems 43
 - Option 11C 56
 - Option 11C Mini 56
- motherboard, description 13
- network setup
 - Communication Server 1000 19
 - Meridian 1 18
- peripheral device connectors, diagram 100
- primary components 13
- relative humidity 18
- reset button 17
- starting 101, 118, 119
- temperatures 18
- unpacking 32

A

administration software 75

attention

- CD-ROM drive and settings 92, 94, 95
- tape drive and settings 92, 94, 95
- telephony equipment and their services 61

B

backplane cable (tip and ring) 38, 47

- establishing connections 48
- removing from Meridian 1 46

backplane connector, secondary

- description 38, 39
- diagram 39
- installing for Meridian1 40, 42
- reason for moving 39
- required tools 40

booting the server 101, 118, 119

C

cable, backplane (tip and ring) 38, 47

- establishing connections 48
- removing from Meridian 1 46

cable, multi I/O

- connections, establishing
 - modem 116
 - network 113
 - switch 113
- connectors
 - CLAN 22
 - ELAN 22

- RS-232 22
 - switch 21
- diagram 21
- installing
 - Communication Server 1000 114
 - large Meridian 1 system 114
 - Option 11C 114
 - Option 11C Mini 69, 114
- cable, SCSI 80
 - Communication Server 1000, installing 81, 82
 - Meridian 1 38, 50
 - connections, establishing 52
 - installing 51
 - NTRH1407, diagram 58
 - Option 11C 58
 - bracket assembly, installing 61
 - connections, establishing 62
 - installing 60
 - Option 11C Mini 63
 - installing 64, 68
- cabling, SCSI devices
 - Communication Server 1000 97
 - Meridian 1 95
 - Option 11C 96
 - Option 11C Mini 96
- card slots
 - Communication Server 1000 73
 - configuring 73
 - MPC 17
- cards, MPC-8
 - inserting correctly 102
 - installing 102, 103
- cautions
 - backplane connector 38
 - modem and telephone line 117
 - MPC card 102
- CD-ROM drive
 - back panel, diagram 93
 - connecting
 - Communication Server 1000 112
 - Meridian 1 106
 - Option 11C 108
 - Option 11C Mini 110
 - description 24
 - device termination, setting 98
 - DIP switches, setting 93
 - installation, attention 92, 94, 95
 - SCSI ID, setting 92
 - checklist, installation 28, 31
 - CLAN
 - LED 17
 - COM1 connector, multi I/O cable 22
 - Communication Server 1000
 - card slots 78
 - configuring 73
 - covers, replacing 82, 84
 - documentation 75
 - multi I/O cable, installing 85, 86
 - network setup 19
 - power cable
 - installing 86
 - SCSI cable 80
 - slot requirements 33
 - system description 71
 - Call Server 71
 - Media Gateway 72
 - Media Gateway and Media Gateway expansion 72
 - software requirements 75
 - connecting 201i server to
 - CD-ROM drive
 - Communication Server 1000 112
 - Meridian 1 106
 - Option 11C 108
 - Option 11C Mini 110
 - keyboard 105
 - modem 116
 - monitor 105
 - mouse 105
 - network 114, 116
 - switch 114, 116
 - tape drive
 - Communication Server 1000 112
 - Meridian 1 106
 - Option 11C 108
 - Option 11C Mini 110
 - connection requirements, Meridian 1 34, 37
 - connector, secondary backplane
 - description 38, 39
 - diagram 39
 - installing for Meridian 1 40, 42
 - reason for moving 39
- connectors

- 201i server faceplate 23
 - CLAN, multi I/O cable 22
 - COM1, multi I/O cable 22
 - ELAN, multi I/O cable 22
 - keyboard 15, 23
 - monitor 16, 23
 - mouse 15, 23
 - SCSI 23
 - SCSI device 17
 - switch, multi I/O cable 21
 - cover, removing
 - Communication Server 1000 76, 77
 - small Meridian 1 systems 56
 - covers, replacing Communication Server 1000 82, 84
- D**
- daisy chaining SCSI devices
 - Communication Server 1000 97
 - Meridian 1 95
 - Option 11C 96
 - Option 11C Mini 96
 - damaged server, what to do 33
 - device termination, setting
 - CD-ROM drive 98
 - devices, peripheral
 - CD-ROM drive 24
 - Ethernet hub 24
 - keyboard 25
 - modem 24
 - monitor 25
 - mouse 25
 - tape drive 24
 - devices, SCSI
 - cabling diagrams
 - Communication Server 1000 80, 112
 - large Meridian 1 systems 50, 107
 - Option 11C 59, 109
 - Option 11C Mini 63, 112
 - supported 89
 - diagrams
 - 201i server
 - components 13
 - faceplate 14, 100
 - backplane (tip and ring) cable 47
 - connections, establishing 48
 - removing from Meridian 1 46
 - cable installation
 - NTRH1408 51
 - NTRH1410 52
 - NTRH3502 67, 82
 - CD-ROM drive back panel 93
 - Communication Server 1000 system
 - Call Server 72
 - Media Gateway 74
 - Media Gateway Expansion 74
 - cover removal
 - Communication Server 1000 76, 77
 - small Meridian 1 systems 56
 - cover replacement, Communication Server 1000 82, 84
 - drain wire, connecting
 - Communication Server 1000 115
 - Option 11C 114
 - Option 11C Mini 115
 - modem connections 117
 - mouse, connecting 104
 - MPC-8 card, correct installation 102
 - multi I/O cable 21
 - NTRH3501 cable 47
 - power cord installation
 - Communication Server 1000 86
 - SCSI cable
 - Communication Server 1000 82
 - large Meridian 1 systems 50, 52
 - Option 11C 58, 61, 62
 - Option 11C Mini 67
 - SCSI device cabling
 - Communication Server 1000 80, 112
 - large Meridian 1 systems 50, 107
 - Option 11C 59, 109
 - Option 11C Mini 63, 112
 - secondary backplane connector 39
 - tape drive, back panel 94
 - DIP switches, setting
 - CD-ROM drive 93
 - modem 90
 - documentation, Communication Server 1000 75
 - drain wire, connecting

Communication Server 1000 115
 Option 11C 114
 Option 11C Mini 115

E

ejector buttons, MPCs 16
 ELAN
 LED 17
 ELAN subnet
 requirements 20, 35
 environmental specifications
 humidity 18
 temperatures 18
 Ethernet hub 24

F

faceplate, 201i server
 connections 23
 description 15, 17
 diagram 14, 100
 peripheral device connectors 100
 fax modem
 connecting 116
 DIP switches, setting 90

G

ground, single point 27

H

hard drive LED 17
 hexadecimal (HEX) display 17
 humidity, 201i server 18

I

IDs, setting SCSI
 CD-ROM drive 92
 tape drive 94
 infrared port 15
 inspecting the 201i server 32
 installing
 201i server
 Communication Server 1000
 system 78
 large Meridian 1 systems 43
 overview 28, 31

 prerequisites 33
 small Meridian 1 systems 56
 unpacking 32
 MPC cards 102, 103
 NTRH3501 backplane (tip and ring)
 cable 48
 SCSI cable
 Communication Server 1000 81,
 82
 Meridian 1 51
 Option 11C 60
 Option 11C Mini 64, 68
 secondary backplane connector for
 Meridian 1 40, 42
 intermediate SCSI cable
 diagrams
 Meridian 1 connections,
 establishing 52
 Option 11C 61, 62
 installing
 on Meridian 1 51
 Option 11C 60

K

keyboard 23
 connecting 105
 connector 15
 description 25

L

latches, lock 15
 LEDs
 CLAN 17
 ELAN 17
 hard drive 17
 MPC status 16
 power status 16
 SCSI drive 17
 lock latches 15

M

Meridian 1
 backplane (tip and ring) cable
 existing cables, removing 44
 NTRH3501, installing 48
 connection requirements 34

- I/O panel connections 37
- network setup 18
- SCSI cables, installing 51
- slot requirements 33
- modem 24
 - connecting 116
 - connections diagram 117
 - DIP switches, setting 90
- monitor 23
 - connecting 105
 - connector 16
 - description 25
- motherboard, 201i server
 - description 13
- mouse 23
 - connecting 105
 - connection requirements 104
 - connector 15
 - description 25
- MPC
 - card slots 17
 - ejector buttons 16
 - status LEDs 16
- MPC-8 card 23
 - caution 102
 - inserting correctly 102
 - diagram 102
 - installing 102, 103
- multi I/O cable 21
 - connections
 - modem 116
 - network 114, 116
 - switch 114, 116
 - description
 - CLAN connector 22
 - ELAN connector 22
 - RS-232 connector 22
 - switch connector 21
 - installing
 - Communication Server 1000 85, 86
 - large Meridian 1 system 114
 - Option 11C 114
 - Option 11C Mini 69

N

- network
 - connections, establishing with multi I/O cable 114, 116
 - protocols, supported 20
 - requirements 20, 33
- Nortel server subnet
 - requirements 20, 35
- NTRH0912 cable 21
 - connections, establishing
 - network 114, 116
 - switch 114, 116
 - installing 69
 - Communication Server 1000 85, 86
 - large Meridian 1 system 114
 - Option 11C 114
- NTRH1407 cable 58
 - diagram 58
 - installation diagram 61, 62
 - installing 60
- NTRH1408 cable 43
 - diagram 50
 - installation diagram 51
 - installing 51
- NTRH1410 cable 50
 - installation diagram 52
 - installing 52
- NTRH3501 cable 43
 - diagram 47
 - installing 48
- NTRH3502 cable 63, 80
 - installation diagrams
 - Communication Server 1000 82
 - Option 11C Mini 67
 - installing
 - Communication Server 1000 81, 82
 - Option 11C Mini 64, 68

O

- Option 11C Mini
 - multi I/O cable, installing 69
 - power cable
 - installing 69
 - SCSI cable 63

Option 11C, installing intermediate SCSI
cable 60

P

part numbers

CD-ROM drive 24
Ethernet hub 24
keyboard 25
modem 24
monitor 25
mouse 25
tape drive 24

peripheral devices

CD-ROM drive 24
Ethernet hub 24
keyboard 25
modem 24
monitor 25
mouse 25
tape drive 24

power status LED, description 16

protocols, supported network 20

R

relative humidity, 201i server 18

removing the backplane (tip and ring)
cables 44

reset button, description 17

RS-232 connector, multi I/O cable 22

S

SCSI cable 38, 80

Communication Server 1000 81, 82
Meridian 1 50

connections, establishing 52
installing 51

NTRH1407, diagram 58

Option 11C 58
bracket assembly, installing 61
installing 60

Option 11C Mini 63
installing 64

SCSI connectors 17, 23

SCSI devices

cabling diagrams

Communication Server 1000 80,
112

large Meridian 1 systems 50, 107

Option 11C 59, 109

Option 11C Mini 63, 112

daisy chain scenarios

Communication Server 1000 97

Meridian 1 95

Option 11C 96

Option 11C Mini 96

installation, attention 92, 94, 95

supported 89

SCSI drive LED 17

SCSI IDs, setting

CD-ROM drive 92

tape drive 94

secondary backplane connector

description 38, 39

diagram 39

installing for Meridian 1 40, 42

reason for moving 39

required tools 40

server, 201i

components, diagram 13

damaged, what to do 33

faceplate 14, 100

inspecting 32

installation

checklist 28, 31

prerequisites 33

installing

Communication Server 1000 78

large Meridian 1 systems 43

Option 11C 56

Option 11C Mini 56

network setup

Communication Server 1000 19

Meridian 1 18

peripheral device connectors,
diagram 100

primary components 13

starting 101, 118, 119

unpacking 32

setting

CD-ROM drive DIP switches 93

device termination

CD-ROM drive 98

- tape drive 98
- modem DIP switches 90
- SCSI IDs
 - CD-ROM 92
 - tape drive 94
- single-point ground 27
- slot configuration, Communication Server 1000 73
- slot requirements 33
 - Communication Server 1000 73, 78
 - small Meridian 1 systems 55
- software
 - administration 75
 - Communication Server 1000 requirements 75
- switch
 - connection, establishing with multi I/O cable 114, 116
 - connector, multi I/O cable 21
 - requirements 33
- switches, setting DIP
 - CD-ROM drive 93
 - modem 90

T

- tape drive
 - back panel, diagram 94
 - connecting
 - Communication Server 1000 112
 - Meridian 1 106
 - Option 11C 108
 - Option 11C Mini 110
 - description 24
 - device termination, setting 98
 - installation, attention 92, 94, 95
 - setting SCSI ID 94
- temperatures, 201i server 18
- tip and ring cable 38, 47
 - establishing connections 48
 - installing NTRH3501 48
 - removing 44
 - removing from Meridian 1 46

W

- warning, working with the switch backplane 44

Nortel CallPilot

201i Server Hardware Installation

Copyright © 2007, Nortel Networks
All Rights Reserved.

Publication: NN44200-301
Document status: Standard
Document version: 01.01
Document date: 15 February 2007

To provide feedback or report a problem in this document, go to www.nortel.com/documentfeedback.

Sourced in Canada

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

Nortel, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

*Microsoft, MS, MS-DOS, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

All other trademarks and registered trademarks are the property of their respective owners.

