

**BELL SYSTEM PRACTICES**  
**Teletypewriter and Data Stations**

**SECTION P34.350**  
**Issue 2, December, 1962**  
**AT&TCo Standard**

## **28LA ELECTRICAL SERVICE UNIT**







### **WIRING DIAGRAM**

#### **1. GENERAL**

1.01 This section shows the wiring for the 28LA electrical service unit which mounts in a 28LA teletypewriter cabinet.

1.02 This section is reissued to remove the fuse holder (FB) and its associated wiring.

**28LA ELECTRICAL**  
**SERVICE**  
**UNIT**  
**WIRING**  
**DIAGRAM**

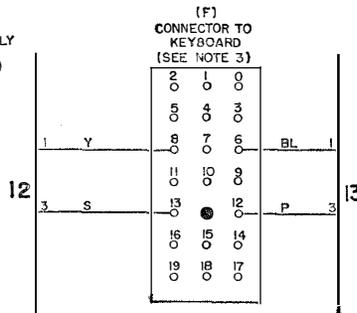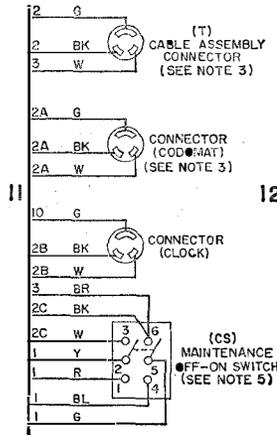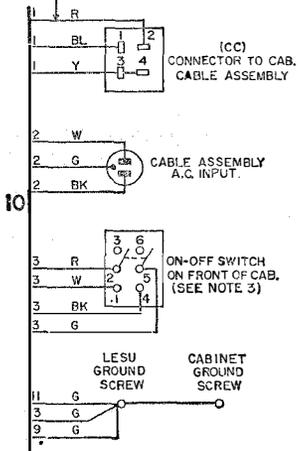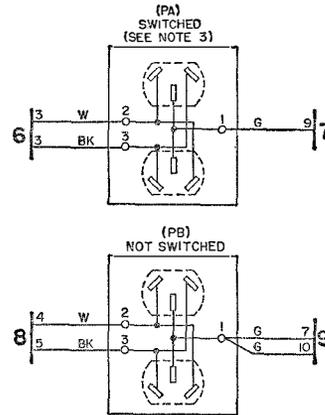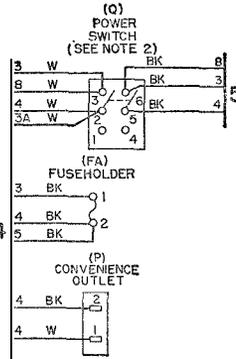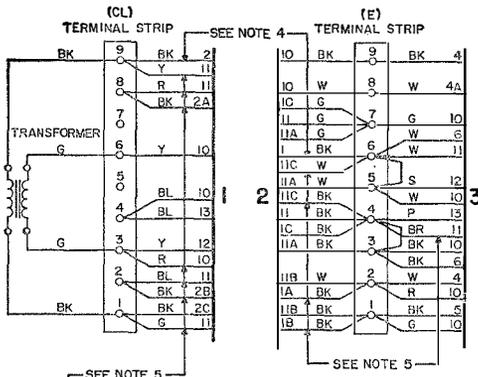

**NOTES:**

- UNIT WIRED FOR 115 VOLTS, 60 CYCLE A.C. POWER INPUT ONLY.
- SWITCH Q CONTROLS ALL OF ELECTRICAL SERVICE UNIT AND RELATED OUTGOING CABLES EXCEPT FOR CONVENIENCE OUTLET (P).
- SWITCH ON FRONT OF CABINET CONTROLS F, T & CODOMAT CABLES AND PA OUTLETS.
- WHEN END OF LINE INDICATOR LAMP IS FURNISHED WITHOUT COPYRIGHTS.
- WHEN END OF LINE INDICATOR LAMP IS FURNISHED WITH COPYRIGHTS.