
DMS-100* FAMILY

ALL PRODUCT COMPUTING-MODULE LOADS

Volume 10 of 15

ACTIVE BUILDING BLOCK
ENGINEERING MANUALS

97Q4

Standard 05.03

December 1997

NAV CONTROLLER BAY

PEC CODE: NTZZ51AB
CPC CODE: B0242317
RATING: Standard
REPLACES: Not Applicable
REPLACED BY: Not Applicable
ABBREVIATION NAME: CONT

ENGINEERING DESCRIPTION: The NAV Controller Bay is a C28 cabinet with doors front and rear for EMI compliance. Cables may enter either at the top for cable trough configurations or from the bottom for raised floor configurations. The NAV Controller Bay can be configured with two (2) different controller types: Operations and Service. Modem Shelves can also be mounted in the NAV Controller Bay.

REFERENCE DOCUMENTATION: ADFX55BB 01 08
ISFX55BB 01 06
MSFX55BB 01 07
SLFX55BB 01 05
SLZZ51AB 00 01

MARKETS: Applicable markets:
Canada
US
Wireless

ISSUE AUTHOR: NTI: Otis Gibbs Dept. 3471 (PPK)

MAIN CONTACT: NTI: Otis Gibbs Dept. 3471 (PPK)

NTZZ51AB EMB19-04-003 CHANGE HISTORY

Engineering Manual Section Change History		
DATE	DOCUMENT	REASON
95 12 07	ECM 699 01	Initial Release.
96 06 05	ECM 699 02	<p>PER EC 018-48057</p> <ul style="list-style-type: none"> - INTEGRATED SERVICE CONTROLLER Removed Integrated Service Controller as a valid product offering. - OPERATIONS CONTROLLER MD NTZZ51DB. Replaced by NTZZ51DE. SCSI Terminator and Disk/DAT now AP SCSI Cable now always required. Removed NTFX75BA and NTFX76BA as valid OC MSP Processors. NTFX76BA MD. Removed SCSI-II Terminator. Changed MSP rule to show it as always required. Reduced number of possible VME SCSI from 3 to 1. Removed FDDI Routing Kit Hardware, NTFX5505 and added to NTZZ51PA as AP. Changed Filler CP and TM locations. Removed NTFX30DA, NTFX61EA and NTFX61FA SCSI disk options. Changed SCSI Terminator rules. Expanded IOC RS232 rule. - UNIX-BASED SERVICE CONTROLLER Renamed by adding UNIX-Based. MD NTZZ51EB. Replaced by NTZZ51EC. Serv. Proc. TM MSP, NTFX91BA is now AP Added AS and NVAS application labels. Changed SP, TM RSP, SCSI Jumper Cable, & SCSI Cable locations. MD NTFX76BA. MD NTFX30DA and NTFX61DA SCSIs. Changed VME Disk TM Kit locations. Added FDDI slot location 7. Changed IOC V.35 locations from 3-16 to 3-5,7,9,11,13,15. Changed SCSI-II Terminator location rule from 10 to 11R. Expanded IOC RS232 and DTL rules. Changed number of BRI provisionable from 12 to 6 and expanded BRI rule. Changed BRI, OSP, and NME CP locations

Engineering Manual Section Change History		
DATE	DOCUMENT	REASON
96 12 03	ECM 699 04	<p>Changed Filler CP and TM locations.</p> <ul style="list-style-type: none"> - MODEM SHELF Removed Modem Shelf Side Cover from NTZZ51GA and made it provisionable. - PERIPHERAL EQUIPMENT Added NTFY10AA, NTFY10AD, NTFY10AE, and NTFY10AF kits and MD Peripheral Building Blocks. Added rule for provisioning Modem 9600 Dial-Up independently from a Remote Dialup X.11 Term. Kit due to application requirements. Added VT320 Terminal and Iso. Kit. Removed Local X.11 Terminal rule as it connects directly to LAN Bay HUB. - OTHER Removed NTRX2567, NTRX2568, NTRX55BA, and NTRX2523 since they are provisioned on NTRX25AA EMS. Added Notes 2 - 4. Added NTRX40BA as AP-02 item. Added requirement for Modem Shelf to always be provisioned in the same bay as the OC. PER EC 018-49303 - NAV Bay changes: Change Blank Bulkhead Plate locations in equipment list and Rul 2.6. - Operation Controller Shelf changes: Add PEC codes in rules per request from manufacturing. Flag 9 Pin Cover Plate and Mounting Screws as non-provisioned. Add reference to Note 6 in rule 4. - Service Controller Shelf changes: Add PEC codes in rules per request from manufacturing. Flag NT0X98AC cable in equipment list. This cable shall be provided per information in the CAFX50BA cable drawing. Add NTFX82CA IOC V.35 TM to UNIX base Controller equipment list. Flag 9 and 25 Pin Cover Plates and

Engineering Manual Section Change History		
DATE	DOCUMENT	REASON
97 03 23	ECM 699 05	<p>Mounting Screws as non-provisioned. Correct SCSI Jumper Cable terminations to CP POS 2R, 3R, 6R, 7R, 8R and 12R. Add VT320 Terminal and Isolation kit to equipment list as referenced in rule 6. Add reference to Note 6 in rule 5.</p> <ul style="list-style-type: none"> - Per EC 018-48646 MD SC shelf Generic labels. - Modem Shelf changes: Add PEC codes in rules per request from manufacturing. Flag NT0X98AJ cable in equipment list. This cable shall be provided per information in the CAFX50BA cable drawing. Flag 25 Pin Cover Plate and Mounting Screws as non-provisioned. <p>Changes to this issue include:</p> <ul style="list-style-type: none"> - Update EMS for NAVB005 hardware per EC 06-29644: - OC Shelf changes: Add NTZZ51DG OC Building Block. Add 5.0GB SCSI PEC to equipment list. Added note D regarding the OC shelf building blocks. - SC Shelf changes: Add ADAS Plus SC labels. Add AIX SC shelf equipment list. Re-assigned RUL 2.X numbers to add AIX info. - Modem Shelf changes: Added Universal 64k modem to equipment list. Flagged A0609601 Universal modem. Added NTFY01AA Universal 64k modem equipment list and updated RUL 7 with provisioning info. Added note G. - Peripheral Eqpt. changes: Updated notes A and C regarding stand-alone modems. Added Added A0376839 VT520 Terminal to equip. list and MD'ed A0345171 VT320 Terminal. <p>Other changes:</p>

Engineering Manual Section Change History		
DATE	DOCUMENT	REASON
97 06 20	ECM 699 06	<p>Added BIX panel information to notes.</p> <ul style="list-style-type: none"> - OC Shelf changes: Corrected NTFX30FA PEC description. Added configuration ID #'s to OC rules. - SC Shelf changes: Removed all equipment references to NTFX75BA processors. Added configuration ID #'s to SC rules. Corrected NTFX30FA PEC description. Corrected NTFX76DA and NTFX91RA slot locations. Changed NTFX29AA TM slot locations. - Peripheral Eqpt. changes: Updated note F regarding interbay cabling. <p>Changes to this issue include:</p> <ul style="list-style-type: none"> - OC Shelf changes: Clarified SCSI notes. - SC Shelf changes: Corrected label name for ADAS Plus. Clarified SCSI notes. Updated Rules to include VME SCSI positioning and cabling. Changed max. OSP quantity. Updated UNIX based SC shelf and AIX based SC shelf abbreviations to reflect USC and ASC respectively. - Modem Shelf changes: Added abbreviation (DSM) to modem shelf as requested by Can. SAE group. - Peripheral Eqpt. changes: Added new information regarding the rollup terminal and cabling. - Other changes: Added note 7 to list the new hardware that is introduced as part of NAVB005

Engineering Manual Section Change History		
DATE	DOCUMENT	REASON
97 08 15	ECM 699 07	<p>to help users distinguish between NAVB003 and NAVB005 hardware. Added new NAV shelf power redundancy information to include modem shelves and updated existing information for OC and SC shelf power redundancy.</p> <p>Changes to this issue include:</p> <ul style="list-style-type: none"> - OC Shelf changes: <p>Removed reference to NTFX67AA filler TM in Rul4.5. This item is supported by Rul4.8.</p> <ul style="list-style-type: none"> - UNIX SC Shelf changes: <p>Per EC 018-51232, MD'ed NTZZ51MA.</p> <p>Removed reference to NTFX67AA filler TM in Rul5.4, Rul5.5, and Rul5.6. This item is supported by Rul5.18.</p> <p>Add NAV Base 002 SC shelf equipment and rules to EMS to allow NAV Base 002 SC shelf extensions. ECM 697 and EMSs NTFX55BA and NTZZ51AA have been MD'ed. ECM 699, EMS NTFX55BB and NTZZ51AB will support NAV Base 002 SCs for shelf extensions only.</p> <ul style="list-style-type: none"> - AIX SC Shelf changes: <p>Removed reference to NTFX67AA filler TM in Rul6.3, Rul6.4, and Rul6.5. This item is supported by Rul6.9.</p> <ul style="list-style-type: none"> - Other changes <p>Removed reference to the NTFX77DA PowerPlus Processor. This processor will NOT be introduced with NAVB005.</p>
97 09 22	ECM 699 08	<p>Changes to this issue include:</p>

Engineering Manual Section Change History		
DATE	DOCUMENT	REASON
97 10 03	ECM 699 09	<p>Per EC 018-51480, the NTFX75BA and the NTFX75CA processor cards have been manufactured discontinued. The NTFX76CA processor card replaces the NTFX75BA and the NTFX75CA for NAV Base 003 and up.</p> <ul style="list-style-type: none"> - Other changes <p>Clarified slot reference in Rule 6 for the NTFX77UA and NTFX77VA PowerPC processors.</p> <p>Changes to this issue include:</p> <ul style="list-style-type: none"> - Per EC 018-51518, the NTFX86AA SS7 CP, NTFX89AA SS7 TM and associated cables NTFX8990/91 are being removed as orderable items from the controller bay NTFX55BB. These items will be orderable as part of the NTFX55CA NAV SS7 Server Bay. - Removed reference to SS7 equipment in Rules 6 and 7. - Added WVAD labels to equipment list. - Removed NTFX76CA as an orderable processor for the NAV Base 2 SC shelf. This processor is not supported by the NAV Base design team for use with NAV Base 2.

The NAV Controller Bay is comprised of the following:

EQUIPMENT	PEC	ABBR	QTY	SHF POS	CP POS	RULE
NAV Controller Bay Cabinet Assembly	NTFX55BB		1			AP
Power Bulkhead	NTRX25AA		1			AP-01
Controller Bay Bulkhead	NTFX5516		1	TOP		AP-01
Blank Bulkhead Plate	NTFX5515		1			AP-01
	P0725637			50LE, 37LE		RUL2
				18LE, 5LE		
Modular Supervisory Panel	NTFX5510		1	63		AP
Modular Supervisory Panel	NTRX40BA			63		AP-02
Cooling Shelf Assembly	NTFX5805		1	27		AP-01
Cooling Module	NTFX58AB		3	27	1, 2, 3	AP
Door Label Top-Latch	P0800785					RUL1
Door Label Center-Latch	P0725505					RUL1
Cabinet Door Label (Left)	P0725507					RUL1
Bay Number Label	P0739060					RUL1
Shelf Designation Label	P0800786					RUL1

INTEGRATED CONTROLLER: DO NOT PROVISION. THIS OPTION HAS BEEN REMOVED FROM THE NAV BASE 3 AND UP PRODUCT.

THE FOLLOWING INFORMATION IS RETAINED FOR HISTORICAL PURPOSES ONLY. DO NOT PROVISION A INTEGRATED CONTROLLER SHELF.

# Integrated Controller Shelf	NTZZ51FB	IC		50		RUL2
# Intg. Contr. SH Front Label	P0823126			50		RUL2
# Intg. Contr. SH Rear Label	P0823127			50		RUL2

OPERATIONS CONTROLLER:

# Operations Controller Shelf	NTZZ51DB	OC		50		RUL2
# Operations Controller Shelf	NTZZ51DE	OC		50		RUL2
Operations Controller Shelf	NTZZ51DG	OC		50		RUL2
# Service Proc. 33MHz/64MByte	NTFX75CA			50	1	RUL4
# Service Proc. 50MHz/32MByte	NTFX76BA			50	1	RUL4
Service Proc. 50MHz/64MByte	NTFX76CA			50	1	RUL4

EQUIPMENT	PEC	ABBR	QTY	SHF POS	CP POS	RULE
Service Proc. 50MHz/128MByte	NTFX76DA			50	1	RUL4
# VME SCSI 1.2GB Dual Disk	NTFX30DA			50	4	RUL4
VME SCSI 2.4GB Dual Disk	NTFX30EA			50	4	RUL4
VME SCSI 4.0GB Dual Disk	NTFX30FA			50	4	RUL4
# VME Disk TM Kit	NTZZ51QA			50	6R	RUL4
VME Disk TM Kit	NTZZ51QB			50	6R	RUL4
SCSI Cable	NTFX8586			50		RUL4
FDDI Kit	NTZZ51PA			50	3	RUL4
FDDI Filler Plate	P0806649			50	50LE	RUL4
Tapping Screw	P0556309			50	50LE	RUL4
Lock Washer	P0567201			50	50LE	RUL4
Nut	P0298849			50	50LE	RUL4
I/O Controller RS232	NTZZ42LA			50	10,15 13,11	RUL4
9-25 Pin Adapter Cable	NTFX8550			50	10R	RUL4
Filler CP	NTFX66AA			50	2-21	RUL4
Filler TM	NTFX67AA			50	2R-16R	RUL4
# 9 Pin Filler Plate	P0736021			50		RUL4
# Mounting Screws	P0670923			50		RUL4
2.4GB Disk/DAT	NTFX61BA			50	22	RUL4
5.0GB/2.0GB Disk/DAT	NTFX61GA			50	22	RUL4

UNIX-BASED SERVICE CONTROLLER:

# Service Controller Shelf	NTZZ51EB	SC		50,37, 15,02		RUL2
Service Controller Shelf	NTZZ51EC	USC		50,37, 15,02		RUL2
# Serv. Contr. SH Front Label	P0725513			XX		RUL2
# Serv. Contr. SH Rear Label	P0725514			XX		RUL2
AS Front Shelf Label	P0840178			XX		RUL2
AS Rear Shelf Label	P0814666			XX		RUL2
ADAS Plus SC Front Label	P0867862			XX		RUL2
ADAS Plus SC Rear Label	P0867863			XX		RUL2
ADAS Plus Backup Shelf Front Label	P0867864			XX		RUL2
ADAS Plus Backup Shelf Rear Label	P0867873			XX		RUL2
ADS Msg. Contr. Front Label	P0818357			XX		RUL2
ADS Msg. Contr. Rear Label	P0818358			XX		RUL2
ADS Att. Contr. Front Label	P0818359			XX		RUL2
ADS Att. Contr. Rear Label	P0818360			XX		RUL2

EQUIPMENT	PEC	ABBR	QTY	SHF POS	CP POS	RULE
ADS Database Front Label	P0818361			XX		RUL2
ADS Database Rear Label	P0818362			XX		RUL2
NVAS SC Front Label	P0834745			XX		RUL2
NVAS SC Rear Label	P0834746			XX		RUL2
NVAS App. Front Label	P0804147			XX		RUL2
NVAS App. Rear Label	P0804148			XX		RUL2
# Service Proc. 33MHz/64MByte	NTFX75CA			XX	1, 2, 3, 7	RUL5
# Service Proc. 50MHz/32MByte	NTFX76BA			XX	1, 2, 3, 7	RUL5
Service Proc. 50MHz/64MByte	NTFX76CA			XX	1, 2, 3, 7	RUL5
Service Proc. 50MHz/128MByte	NTFX76DA			XX	1, 2, 7	RUL5
SCSI Cable	NTFX8586			XX		RUL5
Service Proc. TM RSP	NTFX91RA			XX	2R, 3R, 7R	RUL5
SCSI Jumper Cable	NTFX8587			XX	2R, 3R 7R	RUL5
# SCSI Terminator	A0333595			XX		RUL5
SCSI Terminator	A0664610			XX		RUL5
SCSI Terminator Screws	P0667972			XX		RUL5
SCSI-II Terminator	A0634485			XX		RUL5
# VME SCSI 1.2GB Dual Disk	NTFX30DA			XX	4, 7, 10	RUL5
VME SCSI 2.4GB Dual Disk	NTFX30EA			XX	4, 7, 10	RUL5
VME SCSI 4.0GB Dual Disk	NTFX30FA			XX	4, 7, 10	RUL5
# VME Disk TM Kit	NTZZ51QA			XX	6R, 9R, 12R	RUL5
VME Disk TM Kit	NTZZ51QB			XX	6R, 9R, 12R	RUL5
FDDI Kit	NTZZ51PA			XX	3, 4, 7, 13	RUL5
FDDI Adapter Plate	P0806647			XX	3R, 4R, 7R, 13R	RUL5
FDDI Screws #4	P0670923			XX	3R, 4R 7R, 13R	RUL5
# I/O Controller V.35	NTZZ42KB			XX	3-5, 7, 9 11, 13, 15	RUL5
I/O Controller V.35	NTZZ42KD			XX	3-5, 7, 9 11, 13, 15	RUL5
I/O Controller V.35	NTZZ42KC			XX	3-5, 7, 9 11, 13, 15	RUL5
I/O Controller RS232	NTZZ42LA			XX	3, 4, 5, 17-13	RUL5
9-25 Pin Adapter Cable	NTFX8550			XX	4R, 5R 17R-13R	RUL5
Standard DTL Kit	NTZZ51HA			XX	5-16	RUL5
# Basic Rate Interface	NTZZ51MA			XX	9-14	RUL5
Multi-Channel Tel Link 56MHz	NTFX64BA			XX	20-5	RUL5

EQUIPMENT	PEC	ABBR	QTY	SHF POS	CP POS	RULE
Open Signal Processor	NTFX88AA			XX	19-5	RUL5
Network Media Engine	NTFX92AA			XX	19-5	RUL5
Speech Recognition Processor	NTFX78AA			XX	3-20	RUL5
Time Slot Interchange	NTFX65AA			XX	21	RUL5
Filler CP	NTFX66AA			XX	2-21	RUL5
Filler TM	NTFX67AA			XX	2R-17R	RUL5
# 9 Pin Cover Plate	P0736021			XX		RUL5
# 25 Pin Cover Plate	P0686749			XX		RUL5
# Mounting Screws	P0670923			XX		RUL5
# 1.2GB/1.2GB Dual Disk	NTFX61DA			XX	22	RUL5
2.4GB/2.4GB Dual Disk	NTFX61EA			XX	22	RUL5
5.0GB/5.0GB Dual Disk	NTFX61FA			XX	22	RUL5
Filler Disk Module	NTFX61ZA			XX	22	RUL5

AIX-Based SERVICE CONTROLLER:

Service Controller Shelf	NTZZ51EC	ASC		50,37, 15,02		RUL2
Service Proc. 100MHz/64MB	NTFX77UA			XX	1	RUL6
Service Proc. 100MHz/128MB	NTFX77VA			XX	1	RUL6
SCSI Cable	NTFX8586			XX	1R	RUL6
2.4GB/2.4GB Dual Disk	NTFX61EA			XX	22	RUL6
5.0GB/5.0GB Dual Disk	NTFX61FA			XX	22	RUL6
Filler Disk Module	NTFX61ZA			XX	22	RUL6
SCSI Terminator	A0664610			XX		RUL6
SCSI Terminator Screws	P0667972			XX		RUL6
SCSI-II Terminator	A0634485			XX		RUL6
VME SCSI 2.4GB Dual Disk	NTFX30EA			XX	4,7,10	RUL6
VME SCSI 4.0GB Dual Disk	NTFX30FA			XX	4,7,10	RUL6
# VME Disk TM Kit	NTZZ51QA			XX	6R, 9R,12R	RUL6
VME Disk TM Kit	NTZZ51QB			XX	6R, 9R,12R	RUL6
FDDI Kit	NTZZ51PA			XX	3	RUL6
FDDI Adapter Plate	P0806647			XX	3R	RUL6
FDDI Screws #4	P0670923			XX	3R	RUL6
Filler CP	NTFX66AA			XX	2-21	RUL6
Filler TM	NTFX67AA			XX	2R-17R	RUL6

NAVB002 SERVICE CONTROLLER: ORDER ONLY AS AN EXTENSION TO AN EXISTING NTFX55BA NAV CONTROLLER BAY.

EQUIPMENT	PEC	ABBR	QTY	SHF POS	CP POS	RULE
# Service Controller Shelf	NTZZ51EA	SC		50,37, 15,2		RUL2
Service Controller Shelf	NTZZ51ED	SC		50,37, 15,2		RUL2
# Serv. Contr. SH Front Label	P0725513			XX		RUL2
# Serv. Contr. SH Rear Label	P0725514			XX		RUL2
ACMS Shelf Front Label	P0804338			XX		RUL2
ACMS Shelf Rear Label	P0804678			XX		RUL2
ADAS+ Shelf Front Label	P0748569			XX		RUL2
ADAS+ Shelf Rear Label	P0748570			XX		RUL2
ADAS+ Redundancy Fr Sh Lbl	P0748572			XX		RUL2
ADAS+ Redundancy Rr Sh Lbl	P0748573			XX		RUL2
ADAS+ Backup Fr Shelf Label	P0748575			XX		RUL2
ADAS+ Backup Rr Shelf Label	P0748576			XX		RUL2
ADS Msg. Contr. Front Label	P0818357			XX		RUL2
ADS Msg. Contr. Rear Label	P0818358			XX		RUL2
ADS Att. Contr. Front Label	P0818359			XX		RUL2
ADS Att. Contr. Rear Label	P0818360			XX		RUL2
ADS Database Front Label	P0818361			XX		RUL2
ADS Database Rear Label	P0818362			XX		RUL2
AS Shelf Front Label	P0814665			XX		RUL2
AS Shelf Rear Label	P0814666			XX		RUL2
NVAS SC Front Label	P0804145			XX		RUL2
NVAS SC Rear Label	P0804146			XX		RUL2
NVAS App. Front Label	P0804147			XX		RUL2
NVAS App. Rear Label	P0804148			XX		RUL2
# Service Proc. 33MHz/32MByte	NTFX75BA			XX	1-2	RUL7
# Service Proc. 33MHz/64MByte	NTFX75CA			XX	1-2	RUL7
# Service Proc. TM	NTFX91AA			50	1R	RUL7
SCSI Cable	NTFX8586			XX		RUL7
Service Proc. TM RSP	NTFX91RA			XX	2R	RUL7
SCSI Jumper Cable	NTFX8587			XX	2R	RUL7
I/O Controller V.35	NTZZ42KB			XX	5-16	RUL7
I/O Controller RS232	NTZZ42LA			XX	3,4, 17-13	RUL7
9-25 Pin Adapter Cable	NTFX8550			XX	3R, 17R-13R	RUL7
Standard DTL Kit	NTZZ51HA			XX	5-16	RUL7
Redundant DTL Kit	NTZZ51KA			XX	5-16	RUL7
Backup DTL Kit	NTZZ51LA			XX	5-16	RUL7
# Multi-Channel Tel Link 33MHz	NTFX64AA			XX	20-5	RUL7
Multi-Channel Tel Link 56MHz	NTFX64BA			XX	20-5	RUL7
Speech Recognition Processor	NTFX78AA			XX	3-20	RUL7

EQUIPMENT	PEC	ABBR	QTY	SHF POS	CP POS	RULE
Filler CP	NTFX66AA			XX	2-20	RUL7
Filler TM	NTFX67AA			XX	2R-17R	RUL7
9 Pin Filler Plate	P0736021			XX		RUL7
25 Pin Cover Plate	P0686749			XX		RUL7
Mounting Screws	P0670923			XX		RUL7
2.4GB Disk/DAT	NTFX61BA			XX	22	RUL7
# 1.2GB/1.2GB Dual Disk	NTFX61DA			XX	22	RUL7
2.4GB/2.4GB Dual Disk	NTFX61EA			XX	22	RUL7

MODEM SHELF:

Modem Shelf Assembly	NTZZ51GA	DSM		40,18,5		RUL2
Modem Shelf Side Cover	P0806648			40,18,5		RUL2
Modem Shelf Air Plenum	NTFX5511			46,36,24, 14,12,01		RUL8
Shelf Mounting Hardware Kit	NTFX5501			46,36,24, 14,12,01		RUL8
Modem Shelf Power Kit	NTFX5522			40,18,5		RUL8
Modem Power Jumper Cable	NTFX8526			18R,5R		RUL8
# Universal Modem Kit	NTZZ51NA			40,18,5	1-16	RUL8
# RS232 Interbay Cable	NT0X98AJ			40,18,5	1-16	RUL8
# Universal Modem 4-Wire	A0609601			40,18,5	1-16	RUL8
64 Kb/sec Rackmount Modem	NTFY01AA			40,18,5	1-16	RUL8
Modem to Bulkhead Cable	NTFX8563			40,18,5	1R-16R	RUL8
Modem 9600 Dial-Up	A0600472			40,18,5	1-16	RUL8
# Modem Filler Card	A0385011			40,18,5	1-16	RUL8
Modem Filler Card	A0650426			40,18,5	1-16	RUL8
# 25 Pin Cover Plate	P0686749			40,18,5		RUL8
# Mounting Screw	P0670923			40,18,5		RUL8

PERIPHERAL EQUIPMENT:

# Local X.11 Terminal	NTZZ42VB					RUL8
Local X.11 Terminal Kit	NTFY10AA					RUL8
# Remote Dial-Up X.11 Terminal	NTZZ42WA					RUL8
Remote Dialup X.11 Term. Kit	NTFY10AD					RUL8
# Remote Dedicated X.11 Term.	NTZZ42XA					RUL8
Modem Conn. X.11 Term. Kit	NTFY10AE					RUL8
# Printer	NTZZ42YA					RUL8
Desktop Matrix Printer Kit	NTFY10AF					RUL8

EQUIPMENT	PEC	ABBR	QTY	SHF POS	CP POS	RULE
# VT320 White Display Terminal	A0345171					RUL8
VT520-GA VDU Kit, White	A0376839					RUL8
NT1320 Isolation Kit	A0388012					RUL8
<hr/>						
NAV Shelf Air Plenum	NTFX5605			37,15,02		RUL9
C28 Cabinet Mechanicals	NTRX25AA					NOTE1

EQUIPMENT FLAGGED '#':

PEC	RATING	REPLACED BY PEC
NTZZ51FB	MD	None
NTZZ51DB	MD	NTZZ51DE
NTZZ51EB	MD	NTZZ51EC
NTZZ51EA	MD	NTZZ51ED
NTZZ42VB	MD	NTFY10AA
NTZZ42WA	MD	NTFY10AD
NTZZ42XA	MD	NTFY10AE
NTZZ42YA	MD	NTFY10AF
NTFX76BA	MD	None
NTFX91AA	MD	NTFX91BA
NTFX30DA	MD	None
NTFX61DA	MD	None
A0385011	MD	A0650426
NTZZ42KB (Note A/B)	STD	NTZZ42KD
NT0X98AJ	STD	NONE
P0736021	STD	NONE
P0686749	STD	NONE
P0670923	STD	NONE
P0725513	MD	NONE
P0725514	MD	NONE
NTZZ51DE (Note D)	STD	NTZZ51DG
NTZZ51NA (Note C)	STD	NTFY01AA
A0609601 (Note C)	STD	NTFY01AA
NTZZ51QA (Note E)	STD	NTZZ51QB
A0333595	MD	A0664610
A0345171	MD	A0376839
NTZZ51MA	MD	NONE
NTFX75BA (Note F)	MD	NTFX76CA
NTFX75CA (Note F)	MD	NTFX76CA

DEV - DEVELOPMENT. These products are in the development phase. Please contact NPPM prior to ordering.

A&M - ADDITIONS & MAINTENANCE. These products can only be ordered if they are already in use in that office.

MD - MANUFACTURED DISCONTINUED. These products are no longer manufactured and cannot be ordered.

NOTE A) The NTZZ42KB IOC V.35 building block has been replaced with the NTZZ42KD IOC V.35 building block for NAV Base 003 applications. The NTZZ42KB is still valid for NAV Base 002 applications.

NOTE B) The NTZZ42KB and NTZZ42KD building blocks contain the NTFX82BA IOC V.35 transition module. The NTFX82BA will be manufactured discontinued once existing stock has been depleted. It will be replaced with the NTFX82CA. The NTZZ42KB and NTZZ42KD will be replaced with the NTZZ42KC building block at that time.

NOTE C) The A0609601, Universal rack-mounted modem will be replaced by the NTFY01AA 64kbit/s rack-mounted modem once existing stock has been exhausted. In cases where modems are required for SS7 applications, the NTFY01AA modems must be ordered. Do not order the NTZZ51NA Building Block for use with SS7 applications.

NOTE D) The NTZZ51DE Building Block contains the NTFX61BA SCSI DISK/DAT. The NAVB005 introduces the optional NTFX61GA SCSI Disk/DAT. This makes the SCSI Disk/DAT an option for the OC shelf. The NTZZ51DG Building Block provides the OC shelf without a SCSI Disk/DAT. Both Building Blocks are available; however, the NTZZ51DE will be MD'ed once NAVB005 reaches a Gate 2A status.

NOTE E) The NTZZ51QA Building Block will be MD'ed once NAVB005 reaches a Gate 2A status. For VME SCSI Disk Kit ordering, order the NTZZ51QB Functional Block.

NOTE F) The NTFX75BA and NTFX75CA processors have been manufactured discontinued. The NTFX76CA replaces these processors for NAV Base 3 applications and above. This means that for NAV Base 2 SC shelf extensions there is no qualified processor available. NAV Base 2 sites should be upgraded to NAV Base 5 to align with the latest NAV Base hardware baseline.

NOTES:

- 1) The NTZZ51AB has system level provisionable items covering the following.
 - * Seismic Zone provisioning
 - * Grounding options provisioning
 - * Cable routing options provisioning
 - * Cabinet door provisioning

For details of the above refer to the Modular Structure Document MSRX25AA, C28 Cabinet Mechanical Assembly.
- 2) If the lineup has an OC shelf, then the size and configuration of the lineup is limited by the following three factors:
 - * The total number of controller and LAN bays plus SC shelves should not exceed 32.
 - * The maximum RS-232 cable length from OC to termination is 9.1 m (30 ft).
 - * The maximum number of shelves is 24 service controller shelves and 1 operations controller shelf.
- 3) RS-232 IOC notes:
 - * Every bay requires one RS-232 link for its RSL link.
 - * Every shelf requires one RS-232 link for its console port.
 - * Printers and dial-up terminals require one RS-232 link for each port.
- 4) 9 and 25 pin Cover Plates are to be installed by manufacturing to fill any empty positions in the Bulkhead Connector Plates and do not need to be job engineered.
- 5) A BIX panel (A0321335) and at least two df blocks (customer's preference) are required for each NAV office. Reference cable drawing CAFX50BA for termination information.
- 6) Some NAV circuit packs require specific configurations depending on the slot location. Circuit pack ID #'s are pro-

vided in the NAV provisioning rules where applicable. Engineering shall reference these circuit pack configuration ID #'s in the COEO documentation that is forwarded to the Installation group. Installation will use this information for NAV software commissioning.

7) The following hardware items have been added to this EMS as part of NAVB005 (NAV Base):

- * NTFX61GA - 5.0/2.0 GB disk/DAT module
- * NTFX77UA - PowerPC service processor
- * NTFX77VA - PowerPC service processor

All other items listed in the EMS equipment list are part of the NAVB003 hardware unless otherwise noted (ie. NAVB002 SC shelf). NAVB003 and NAVB005 hardware are used together to provide NAVB005 functions. The rules provided in this EMS will allow the user to determine when to use items specific to NAVB002 and NAVB005.

RULES:

- AP 1) When PEC NTZZ51AB is ordered, these items are provided.
- AP-01 1) When a NTFX55BB NAV Controller Bay is ordered these items are Always Provided.
- AP-02 1) When a NTFX5510 Modular Supervisory Panel is ordered these items are Always Provided.
- RUL1 1) Provide two (2) each Door Labels, either Center-Latch (P0725505) or Top-Latch (P0800785) for each NAV Controller Bay. Center-Latch Doors and Labels should be used for bays in new line-ups. Top-Latch Doors and Labels should only be used on bays installed in existing line-ups that already have top-latch doors. The Doors themselves are provisioned per NTRX25AA Eng. Manual Section.

For Grey Doors, provide two (2) each of the following labels:

Cabinet Door Label (Left) (P0725507)
Bay Number Label (P0739060)
Shelf Designation Label (P0800786)

Brown Doors on the NAV Controller Bay are presently not available as an option.

RUL2 1) Provide a maximum of four (4) shelves in each NAV Controller Bay. Provide the appropriate amount of shelves and labels based on the valid shelf positions shown below:

- * Operations Controller (SH POS. 50)
- * Service Controller, UNIX or AIX based, (SH POS. 50,37,15,02)
- * Service Controller (NAVB002) EXTENSIONS ONLY (SH POS. 50,37,15,02)
- * Modem Shelf (SH POS. 05,18,40)

If two redundant Service Controller shelves are in the same bay, they must be in either shelf positions 1 and 4 or 2 and 3. In this way, each shelf of the redundant pair will use a different power feed and a different breaker. If redundant Service Controller shelves are in more than one bay, they must be provisioned evenly across power feed A and power feed B. This rule does not apply to NAV Base 2 configurations.

To ensure power redundancy, controller shelves and modem shelves must be assigned in the following sequence in each NAV cabinet equipped with an OC shelf:

- * OC shelf = shelf 1 (50 inches from floor)
- * modem shelf #1 = shelf 4 (2 inches from floor)
- * modem shelf #2 = shelf 3 (15 inches from floor)
- * modem shelf #3 = shelf 2 (37 inches from floor)
- * NAV SC shelf #1 = shelf 2 (37 inches from floor)
- * NAV SC shelf #2 = shelf 3 (15 inches from floor)
- * NAV SC shelf #3 = shelf 4 (2 inches from floor)

Unused shelf positions must be filled with NAV air plenums.

This power redundancy rule does not apply to NAV Base 2 configurations.

Note: The OC shelf is always located in position 50" of first controller bay.

For NAV cabinets that are not equipped with an OC shelf, controller shelves and modem shelves must be assigned in the following sequence:

- * NAV SC shelf #1 = shelf 1 (50 inches from floor)
- * NAV SC shelf #2 = shelf 4 (2 inches from floor)
- * NAV SC shelf #3 = shelf 2 (37 inches from floor)
- * NAV SC shelf #4 = shelf 3 (15 inches from floor)
- * modem shelf #1 = shelf 4 (2 inches from floor)
- * modem shelf #2 = shelf 3 (15 inches from floor)
- * modem shelf #3 = shelf 2 (37 inches from floor)

Unused shelf positions must be filled with NAV air plenums.

This power redundancy rule does not apply to NAV Base 2 configurations.

- 2) The Integrated Controller is no longer a valid offering; DO NOT ORDER.
- 3) An Operations Controller (OC) shelf is always required in a single- or multi-application lineup. Provide the following items for each Operations Controller:

QTY (1) Operations Controller Shelf Building Block
(NTZZ51DG)

- 4) Provide the following items for each UNIX Based Service Controller:

QTY (1) NAV Service Controller Shelf Building Block
(NTZZ51EC)

Provide the following labels for each Service Controller based on its application:

QTY (1) AS Shelf Front Label (P0840178)

-for AS Shelf
 QTY (1) AS Shelf Rear Label (P0814666)
 -for AS Shelf
 QTY (1) ADAS Plus SC Front Label (P0867862)
 -for ADAS Plus Shelf
 QTY (1) ADAS Plus SC Rear Label (P0867863)
 -for ADAS Plus Shelf
 QTY (1) ADAS Plus Backup Shelf
 Front Label (P0867864)
 -for ADAS Plus Backup Shelf
 QTY (1) ADAS Plus Backup Shelf
 Rear Label (P0867873)
 -for ADAS Plus Backup Shelf
 QTY (1) ADS Msg. Contr. Front Label (P0818357)
 -for ADS Shelf
 QTY (1) ADS Msg. Contr. Rear Label (P0818358)
 -for ADS Shelf
 QTY (1) ADS Att. Contr. Front Label (P0818359)
 -for ADS Shelf
 QTY (1) ADS Att. Contr. Rear Label (P0818360)
 -for ADS Shelf
 QTY (1) ADS Database Front Label (P0818361)
 -for ADS Shelf
 QTY (1) ADS Database Rear Label (P0818362)
 -for ADS Shelf
 QTY (1) NVAS SC Front Label (P0834745)
 -for NVAS Shelf
 QTY (1) NVAS SC Rear Label (P0834746)
 -for NVAS Shelf
 QTY (1) NVAS App. Front Label (P0804147)
 -for NVAS Shelf
 QTY (1) NVAS App. Rear Label (P0804148)
 -for NVAS Shelf
 QTY (1) WVAD SC Front Label (P0874791)
 -for WVAD Shelf
 QTY (1) WVAD SC Rear Label (P0874792)
 QTY WVAD Shelf

- 5) Provide the following items for each AIX Based Service Controller:

QTY (1) NAV Service Controller Shelf Building Block
 (NTZZ51EC)

- 6) NAVB002 Service Controllers can be configured as Standard, Redundant, or Backup. A Backup Service Controller must be mounted directly beneath the Redundant Service Controller it is paired with. Provide the following items for each NAVB002 Service Controller:

QTY (1) NAV Shelf Assembly
 QTY (1) Serv. Contr. SH ID Label
 QTY (1) Serv. Contr. Cable Kit
 QTY (1) Shelf Mounting Hardware Kit
 QTY (1) Service Proc. TM MSP (Slot 01R)
 QTY (1) SCSI Terminator at Connector P4
 of PWR SCSI Backpanel on SC Shelf.
 QTY (2) SCSI Terminator Screws
 QTY (1) Time Slot Interchange (Slot 21)
 QTY (1) Power Converter (Slot 23)

Provide the following labels for each Service Controller based on its application:

QTY (1) ACMS Shelf Front Label (for ACMS Shelf)
 QTY (1) ACMS Shelf Rear Label (for ACMS Shelf)
 QTY (1) ADAS+ Database Front Label (for ADAS+ Shelf)
 QTY (1) ADAS+ Database Rear Label (for ADAS+ Shelf)
 QTY (1) ADAS+ Redundancy Fr Sh Lbl (for ADAS+ Shelf)
 QTY (1) ADAS+ Redundancy Rr Sh Lbl (for ADAS+ Shelf)
 QTY (1) ADAS+ Backup Fr Shelf Label (for ADAS+ Shelf)
 QTY (1) ADAS+ Backup Rr Shelf Label (for ADAS+ Shelf)
 QTY (1) ADS Msg. Contr. Front Label (for ADS Shelf)
 QTY (1) ADS Msg. Contr. Rear Label (for ADS Shelf)
 QTY (1) ADS Att. Contr. Front Label (for ADS Shelf)
 QTY (1) ADS Att. Contr. Rear Label (for ADS Shelf)
 QTY (1) ADS Database Front Label (for ADS Shelf)
 QTY (1) ADS Database Front Label (for ADS Shelf)
 QTY (1) ADS Database Rear Label (for ADS Shelf)
 QTY (1) AS Shelf Front Label (for AS Shelf)
 QTY (1) AS Shelf Rear Label (for AS Shelf)
 QTY (1) NVAS SC Front Label (for NVAS Shelf)
 QTY (1) NVAS SC Rear Label (for NVAS Shelf)
 QTY (1) NVAS App. Front Label (for NVAS Shelf)
 QTY (1) NVAS App. Rear Label (for NVAS Shelf)

Note. A NAVB002 Service Controller Shelf can ONLY be ordered as an EXTENSION to an existing NAV Base 002 Controller Bay (NTFX55BA). DO NOT order an NAVB002 SC shelf as part of a NAV Base 003 or 005 Controller Bay (NTFX55BB). The power redundancy rules listed above may not be applicable to the NAVB002 SC or the NAV Base 002 Controller Bay. However, whenever possible, the extension shelf or shelves should be provisioned evenly across the power feeds.

7) Provide the following items for each Modem Shelf:

QTY (1) Modem Shelf Building Block (NTZZ51GA)

QTY (2) Modem Shelf Side Cover (P0806648)
 QTY (2) Modem Shelf Air Plenums (NTFX5511)
 QTY (2) Shelf Mounting Hardware Kit (NTFX5501)

- 8) Provide a Blank Bulkhead Plate (P0725637) for each shelf position not occupied by a NAV shelf or a modem shelf. Bulkhead locations are specified as 50LE, 37LE, 15LE, and 02LE.

RUL3 1) The Integrated Controller is no longer a valid offering. Do not provision.

RUL4 1) Always provision one Operations Controller Shelf (NTZZ51DG) for each single- or multi-application lineup. The Operations Controller Shelf has (21) slots in front for cards and (17) slots in rear for transition modules. These cards and transition modules shall be assigned in the following priority order: MSP, SCSI, VME SCSI, FDDI, IOC RS232, Filler.

Fill each slot (front and rear if applicable) in priority order. If a slot is already provisioned use the next available slot for that item.

- 2) The MSP is the Master Service Processor for the shelf. Always provide one (1) per shelf in Slot 01. Provide the following items for each MSP required:

QTY (1) Service Proc. 50MHz/64MB (NTFX76CA) or
 50MHz/128MB (NTFX76DA)
 (slot 1 for 1-slot MSP)
 (slot 1-2 for 2-slot MSP)

The Service Proc. 50MHz/128MByte (NTFX76DA) requires two card slots (01 and 02), all other Service Processors require only one.

The MSP for the OC shelf shall use configuration ID #1.

The FDDI for the OC shelf shall use configuration ID #1.

When FDDI CP in slot position 3 is not ordered, provide (2) FDDI Filler Plate (P0806649), (4) Tapping Screw (P0556309), (4) Lock Washer (P0567201), and (4) Nut (P0298849). These items shall be mounted in the the associated OC shelf FDDI bulkhead locations by manufacturing per instructions in the ADFX55BB assembly drawing.

- 7) The IOC RS232 supports eight (8) RS232 interfaces at up to 19.2 Kbit/s. One IOC (RS-232) kit is always provided on the OC shelf, slot 17, for maintenance links, controller shelf console ports, and modem links. Additional IOC RS232 may be provisioned, up to a maximum of four (4) per shelf in Slots 10, 15, 13, and 11. The always provided IOC RS232 (slot 17) and the IOC RS232 provisionable in slots 15, 13, and 11 have their associated cables terminate on the bulkhead. The IOC RS232 that is provisionable in slot 10 must be terminated to a modem shelf in the same bay.

When provisioning an IOC (RS-232) kit in an Operations Controller for printers and terminals, determine where the modem shelf will reside. If the modem shelf resides in the same bay as the OC shelf, then install the IOC card and IOC TM card in slot 10 and provision eight (8) 9-25 Pin Adapter Cables (NTFX8550). Otherwise, install the IOC card and IOC TM cards in slot 15. The IOC (RS232) card in slot 17 then becomes the printers and terminals controller. Provide the following items for each IOC RS232 required:

QTY (1) I/O Controller RS232 Building Block (NTZZ42LA)

The configuration ID #'s for IOC RS-232 located in the OC shelf are:

Slot 10 shall use ID #1
Slot 17 shall use ID #2
Slot 15 shall use ID #3
Slot 13 shall use ID #4
Slot 11 shall use ID #5

Note. If slot 10 is not populated with an IOC card, then slot 17 shall use ID #1, slot 15 shall use ID #2, slot 13 shall use ID #3 and slot 11 shall use slot ID #4.

The IOC kits that are wired to the bulkhead can perform all functions: shelf console links, bay RSL links, and printer/terminal functionality. However, doing so requires interbay cabling for the modem shelf (cabling for a shelf

The MSP for the UNIX SC shelf shall use configuration ID #1.

- 3) The RSP is the Real-Time Service Processor for the shelf. Provide zero, one or two double-slot RSPs per shelf in Slots 2-3 and 7-8. A combination of single-slot and double-slot RSPs can be used; however, double-slot RSPs have a higher provisioning priority. Reference RUL5.1. The maximum number of RSPs (single-slot, double-slot or a combination of single and double slot) allowed is two (2). Rules for provisioning single-slot RSPs are provided in RUL5.9.

If a double-slot MSP is provisioned in slots 1 & 2, a RSP can NOT be provisioned in slot 2.

Provide the following items for each double-slot RSP required:

QTY (1) Service Proc. 50MHz/128MB (NTFX76DA)
(slot 2-3, 7-8 for 2-slot RSP)

QTY (1) Service Proc. TM RSP (NTFX91RA)
(Slot 2R,7R for 2-slot RSP)

The Service Proc. 50MHz/128MByte (NTFX76DA) requires two card slots, all other Service Processors require only one.

The first RSP provisioned for the SC shelf shall use configuration ID #2. The second RSP shall use configuration ID #3.

Also, provide one (1) SCSI Jumper Cable (NTFX8587) for the first RSP provisioned. Multiple RSPs do not require additional SCSI Jumper Cables. This is provided for Fast File System (FFS) Functionality. The possible terminations of this cable are:

* 1R (bottom connector) to 2R (top connector) if a RSP is provisioned in slot 2.

* 6R (bottom connector) to 7R (top connector) if the first RSP is provisioned in slot 7 and a VME SCSI Disk is provisioned.

- 4) If 3 SCSI units are needed, provide the following:

QTY (1) Filler Disk Module (NTFX61ZA)
(slot 22)

QTY (1) SCSI Cable (NTFX8586)
(See below for terminations)

QTY (1) VME SCSI Disk 2.4GB Dual Disk (NTFX30EA)
or
4.0GB Dual Disk (NTFX30FA)
(slots 4-6)

QTY (1) VME Disk TM Kit (NTZZ51QB)
(See below for locations)

QTY (1) SCSI Terminator (A0664610)
(at Connector P4 of the
PWR SCSI Backpanel
on the SC shelf)

QTY (2) SCSI Terminator (P0667972)
Screws (at Connector P4)

The VME SCSI gets its power from the NAV backplane. A VME SCSI Disk occupies three (3) consecutive slots. The VME SCSI TM occupies two (2) consecutive slots.

One end of the SCSI Cable (NTFX8586) connects to Connector P5 of the PWR SCSI Backpanel on the SC Shelf. To minimize the length of the SCSI bus, the other end terminates on whichever of the following devices is closest to the P5 Connector: RSP (NTFX76CA, NTFX76DA), or VME SCSI (NTFX30EA/FA). The possible terminations of the SCSI Cable are:

- * Slot 6R (VME SCSI TM bottom connector) if a RSP is not in slot 7.
- * Slot 7R (bottom connector) if the first RSP is provisioned in slot 7.

When used in this application on the SC shelf the contents of the VME Disk TM Kit are located as follows:

- * The VME SCSI TM (NTFX29AA) occupies slots 6R-5R.

The terminations of the SCSI Jumper Cables (NTFX8587) are dependent upon the VME SCSI and the RSP slot locations. (Remember that a NTFX8587 may have been ordered as part of a previous provisioning rule regarding RSPs). The possible jumper cable terminations are:

The terminations of the SCSI Jumper Cables (NTFX8587) are dependent upon the VME SCSI slot locations. The possible jumper cable terminations are:

- * The FIRST jumper cable may connect from 12R (top connector) to 7R (bottom connector) if the first RSP is provisioned in slot 7 and the second VME SCSI is provisioned in slots 10-12.
- * OR, the FIRST jumper cable may connect from 9R (top connector) to 6R (bottom connector) if VME SCSIs are provisioned in slots 7-9 and 4-6.
- * The SECOND jumper cable will connect from 7R (top connector) to 6R (bottom connector) if a RSP is provisioned in slot 7.
- * One end of the LAST jumper cable will connect to 6R (top connector). The possible terminations of the other end of this SCSI Jumper cable are:
 - Slot 1R if the first RSP is provisioned in slot 7 and not in slots 2 or 3.
 - Slot 2R if the first RSP is provisioned in slot 2.
 - Slot 3R if the first RSP provisioned is in slot 3.

7) If 1 SCSI unit is needed, provide the following:

QTY (1) SCSI Disk	2.4GB/2.4GB Dual Disk (NTFX61EA) or 5.0GB/5.0GB Dual Disk (NTFX61FA) (slot 22)
QTY (1) SCSI Cable	(NTFX8586) (See below for terminations)
QTY (1) SCSI Terminator	(A0644610) (at Connector P4 of the PWR SCSI Backpanel on the SC shelf)
QTY (2) SCSI Terminator Screws	(P0667972) (at Connector P4)

One end of the SCSI Cable (NTFX8586) connects to Connector P5 of the PWR SCSI Backpanel on the SC Shelf. To minimize the length of the SCSI bus, the other ends terminates on whichever of the following devices is closest to the P5 Connector: MSP (NTFX76CA or NTFX76DA) or RSP (NTFX76CA or

NTFX76DA). The possible terminations of the SCSI Cable are:

- * Slot 1R if a RSP is NOT provisioned.
 - * Slot 2R if a RSP is provisioned in slot 2.
 - * Slot 3R if the first single-slot RSP (NTFX76CA or NTFX76DA) is provisioned in slot 3.
 - * Slot 7R if the first RSP is provisioned in slot 7.
- 8) IOC RS-232s CABLED TO BULKHEAD (EXTERNAL RS-232) - For External RS-232 interface, provide zero or one I/O Controller (IOC) RS232 in slots 3 or 5. Provide the following items when an External IOC RS232 required:

QTY (1) I/O Controller RS232 Building Block (NTZZ42LA)

The External RS-232 interface card in slot 3 or 5 shall always use configuration ID #1.

An External IOC RS232 provisioned in slot 3 or 5 has its eight cable ends terminated on the bulkhead plate.

- 9) If single-slot RSPs are needed, Provide zero, one or two single-slot RSPs per shelf in Slots 2, 3, or 7. A combination of single-slot and double-slot RSPs can be used; however, double-slot RSPs have a higher provisioning priority. Reference RUL5.1. The maximum number of RSPs (single-slot, double-slot or a combination of single and double slot) allowed is two (2). Rules for provisioning double-slot RSPs are provided in RUL5.3.

If a double-slot MSP is provisioned in slots 1 & 2, a RSP can NOT be provisioned in slot 2.

Provide the following items for each single-slot RSP required:

QTY (1) Service Proc. 50MHz/64MB (NTFX76CA)
(slot 2,3, 7 for 1-slot RSP)

QTY (1) Service Proc. TM RSP (NTFX91RA)
(Slot 2R,3R,7R for 1-slot RSP)

The first RSP provisioned for the SC shelf shall use configuration ID #2. The second RSP shall use configuration ID #3.

Also, provide one (1) SCSI Jumper Cable (NTFX8587) for the FIRST RSP provisioned. Multiple RSPs do not require additional SCSI Jumper Cables. A SCSI Jumper Cable may have already been provided if a double-slot RSP (NTFX76DA) was previously provided. This cable is provided for Fast File System (FFS) Functionality. The possible terminations of this cable are:

- * 1R (bottom connector) to 2R (top connector) if a RSP is provisioned in slot 2.
 - * 1R (bottom connector) to 3R (top connector) if the first single-slot RSP (NTFX76CA) is provisioned in slot 3.
 - * 1R (bottom connector) to 7R (top connector) if the first RSP is provisioned in slot 7 and a VME SCSI Disk is NOT provisioned.
 - * 6R (bottom connector) to 7R (top connector) if the first RSP is provisioned in slot 7 and a VME SCSI Disk is provisioned.
- 10) The FDDI supports fiber digital distribution interface. If needed, provide a maximum of one (1) per shelf in Slot 3, 4, 7 or 13. Provide the following items for each FDDI required:
- QTY (1) FDDI Kit (NTZZ51PA)
 - QTY (2) FDDI Adapter Plate (P0806647)
 - QTY (4) FDDI Screws #4 (P0670923)

The FDDI shall use configuration ID #1.

If an IOC RS-232 is required to go to the bulkhead, it must be provisioned in slot 3, and if a FDDI is to be provisioned, it must be mounted in slot 4, 7 or 13.

- 11) The IOC V.35 supports two (2) external V.35 ports. If needed, provide a maximum of eight (8) per shelf in Slots 3,4,5,7,9,11,13 and 15. When the IOC V.35 is assigned to slots 5,7,9,11,13 or 15 the next even-numbered slot is unavailable for DTL provisioning. Provide the following items for each IOC V.35 required:

QTY (1) I/O Controller V.35 Building Block (NTZZ42KD
or NTZZ42KC)

The configuration ID #'s for IOC V.35 cards located in the SC shelf should be set as follows:

- * the card with the lowest slot number shall use ID #1
- * the next card in ascending order of slot number shall use ID #2
- * the next card shall use ID #3 and so on until all IOC V.35 cards have been configured.

If an IOC RS-232 has been previously provisioned in slot 3 then an IOC V.35 cannot be provisioned in slot 3. If an IOC RS-232 has been previously provisioned in slot 5 then an IOC V.35 cannot be provisioned in slot 5.

If a FDDI card is provisioned in slot 3 or 7, then no IOC V.35 can be provisioned in slot 3. If a FDDI card is provisioned in slot 4 or 13, then no IOC V.35 can be provisioned in slot 4.

The NTZZ42KB is replaced with the NTZZ42KD for NAV Base 003 applications. The NTZZ42KD building block will be replaced by the NTZZ42KC building block at a future date. The NTFX82CA (provided in the NTZZ42KC building block) is used only in NAV controller shelves running the SRV4 UNIX operating system. The NTFX82CA detects when the cable connected to it is damaged or unplugged. The NTFX82CA is the preferred I/O Controller TM for UNIX base Controller shelves and will replace the NTFX82BA (provided in the NTZZ42KD building block). The NTFX82BA will be manufactured discontinued in 1997.

- 12) IOC RS-232 CABLED TO MODEM (INTERNAL RS-232) - The I/O Controller (IOC) RS232 supports eight (8) RS232 interfaces at up to 19.2 Kbit/s. If needed, provide a maximum of six (6) IOC RS-232 per shelf in Slots 4, 17-13. Provide the following items for each IOC RS232 required:

QTY (1) I/O Controller RS232 Building Block (NTZZ42LA)

The configuration IDs for these cards shall be set as follows:

- * The card with the lowest provisioning order (slot 4) shall use ID #1 (unless an External IOC RS-232 was pro-

visioned in slots 3 or 5, then the IOC RS-232 card shall use ID #2.)

- * the next card in ascending order (slot 17) shall use ID #2 (or #3)
- * the next card in ascending order (slot 16) shall use ID #3 (or #4) and so on until all provisioned IOC RS-232 cards have been configured.

IOC RS232s in slots 4, 17-13 have their eight cable ends terminated on modems in the same bay. One modem shelf supports up to two IOC RS-232s in a cabinet.

Provide eight (8) 9-25 Pin Adapter Cables (NTFX8550) for EACH IOC RS232 mounted in Slots 4, 17-13. (One is connected to each of the 9-pin ends of the OA&M Telemetry Cable (NTFX8514). Each of these 8 cable ends will then be connected to one 25-pin connector on the modem shelf back-panel, 4 on the left side and 4 on the right side.)

- 13) The Standard DTL supports one (1) T1 to voice-bus interface. If needed, provide a maximum of twelve (12) per shelf in Slots 5-16. Provide the following items for each Standard DTL required:

QTY (1) Standard DTL Kit (NTZZ51HA)

If an IOC V.35 card was provisioned in slots 5, 7, 9, 11, 13, or 15 then a DTL can not be provisioned in slots 6, 8, 10, 12, 14, or 16 respectively.

- 14) Reserved for future use. This item originally contained information pertaining to the NAV BRI circuit pack. The BRI was manufactured discontinued per EC 018-51232.
- 15) The MTL (NTFX64BA) supports connectivity to thirty-two (32) voice bus channels. If needed, provide a maximum of sixteen (16) per shelf in Slots 20-5.
- 16) The OSP (NTFX88AA) supports open signal processing. If needed, provide zero or one per shelf. The OSP can be provisioned in Slots 19-5.
- 17) The NME (NTFX92AA) supports network media. If needed, provide a maximum of fifteen (15) per shelf in Slots 19-5.

- 18) The SRP (NTFX78AA) supports speech recognition processing. If needed, provide a maximum of sixteen (16) per shelf in Slots 3-20.

The configuration ID #'s for SRP cards located in the SC shelf should be set as follows:

- * the card with the lowest slot number shall use ID #1
 - * the next card in ascending order of slot number shall use ID #2
 - * the next card shall use ID #3 and so on until all SRP cards have been configured.
- 19) Provide one (1) Time Slot Interchange (TSI) (NTFX65AA) in Slot 21 of the Service Controller Shelf when any of the following is selected for the configuration: DTL, MTL, OSP, NME.
- 20) Provide one (1) Filler CP (NTFX66AA) for every Slot 02-21 of the UNIX Service Controller Shelf not filled by cards, and provide one (1) Filler TM (NTFX67AA) for every Slot 02R-17R of the Service Controller Shelf not filled by transition modules.
- 21) Reserved for future use. This item originally contained information pertaining to the cover plates and mounting screws used to fill empty bulkhead positions. Manufacturing now provides this material for all empty bulkhead positions on NAV bays.

RUL6 1) The AIX-Based Service Controller Shelf, NTZZ51EC, (software name = General Controller (GC)) has (21) slots in front for cards and (17) slots in rear for transition modules. These cards and transition modules shall be assigned in the following priority order: MSP, SCSI, VME SCSI, FDDI, Filler.

- 2) The MSP is the Master Service Processor for the shelf. Always provide one (1) per shelf in Slot 01. Provide the following items for each MSP required:

QTY (1) Service Proc. 100MHz/64MB (NTFX77UA) or
100MHz/128MB (NTFX77VA) or

(slot 1-2)

QTY (1) Service Proc. (NTFX91BA) TM MSP (Slot 01R)

QTY (1) SCSI Disk 2.4GB/2.4GB Dual Disk (NTFX61EA)
or
5.0GB/5.0GB Dual Disk (NTFX61FA)
(slot 22)

QTY (1) SCSI Cable (NTFX8586)
(See below for terminations)

QTY (1) VME SCSI Disk 2.4GB Dual Disk (NTFX30EA)
or
4.0GB Dual Disk (NTFX30FA)
(slots 4-6)

QTY (1) VME Disk TM Kit (NTZZ51QB)
(See below for locations)

QTY (1) SCSI Terminator (A0664610)
(at Connector P4 of the
PWR SCSI Backpanel
on the SC shelf)

QTY (2) SCSI Terminator (P0667972)
Screws (at Connector P4)

The VME SCSI gets its power from the NAV backplane. A VME SCSI Disk occupies three (3) consecutive slots. The VME SCSI TM occupies two (2) consecutive slots.

When used in this application on the SC shelf the contents of the VME Disk TM Kit are located as follows:

- * The VME SCSI TM (NTFX29AA) occupies slots 6R-5R.
- * The SCSI Jumper Cable (NTFX8587) connects to the VME SCSI TM (slot 6R) top connector. The other end terminates on slot 1R (bottom connector).

One end of the SCSI Cable (NTFX8586) connects to Connector P5 of the PWR SCSI Backpanel on the SC Shelf. The other end terminates on the VME SCSI TM (Slot 6R) bottom connector.

- 5) If 2 SCSI units are needed and all of the SCSIs must be VME SCSIs, provide the following:

QTY (1) Filler Disk Module (NTFX61ZA)
(Slot 22)

QTY (2) VME SCSI Disk 2.4GB Dual Disk (NTFX30EA)

QTY (1) SCSI Terminator (A0644610)
(at Connector P4 of the
PWR SCSI Backpanel on
the SC shelf)

QTY (2) SCSI Terminator (P0667972) at Connector P4
Screws (at Connector P4)

One end of the SCSI Cable (NTFX8586) connects to Connector P5 of the PWR SCSI Backpanel on the SC Shelf. The other end terminates on slot 1R (bottom connector).

- 7) The FDDI supports fiber digital distribution interface. If needed, provide a maximum of one (1) per shelf in Slot 3. Provide the following items for each FDDI required:

QTY (1) FDDI Kit (NTZZ51PA)
QTY (2) FDDI Adapter Plate (P0806647)
QTY (4) FDDI Screws #4 (P0670923)

The FDDI shall use configuration ID #1.

- 8) Reserved for future use. This item originally contained information pertaining to the SS7 circuit pack, TM and cables. These items are now ordered for the NTFX55CA NAV SS7 Server Bay.

- 9) Provide one (1) Filler CP (NTFX66AA) for every Slot 02-21 of the AIX Service Controller Shelf not filled by cards, and provide one (1) Filler TM (NTFX67AA) for every Slot 02R-17R of the Service Controller Shelf not filled by transition modules.

- RUL7 1) The NAVB002 Service Controller Shelf has (21) slots in front for cards and (17) slots in rear for transition modules. These cards and transition modules shall be assigned in the following priority order: MSP, RSP, SCSI, IOC V.35, IOC RS232, DTL, MTL, SRP, TSI, Filler.

Fill each slot (front and rear if applicable) in priority order. If a slot is already provisioned use the next available slot for that item.

- 2) The MSP is the Master Service Processor for the shelf. Always provide one (1) per shelf in Slot 01. Provide the following items for each MSP required:

QTY (1) Service Proc. 33MHz/32-64MB (NTFX75BA or NTFX75CA)

- 3) The RSP is the Real-Time Service Processor for the shelf. If needed, provide a maximum of one (1) per shelf in Slot 02. Provide the following items for each RSP required:

QTY (1) Service Proc. 33MHz/32-64MB (NTFX75BA or NTFX75CA)
QTY (1) Service Proc. TM RSP (Slot 02R)
QTY (1) SCSI Jumper Cable (Slot 02R)

The terminations of the SCSI Jumper Cable are 1R (bottom connector) to 2R (top connector).

This is provided for Fast File System Functionality.

- 4) The I/O Controller (IOC) V.35 supports two (2) external V.35 ports. If needed, provide a maximum of six (6) per shelf in Slots 5, 7, 9, 11, 13, 15. When the IOC Controller V.35 is assigned to these slots, the associated even-numbered slot (n+1) is unavailable for DTL provisioning. Provide the following items for each IOC V.35 required:

QTY (1) I/O Controller V.35 Building Block

- 5) The I/O Controller (IOC) RS232 supports eight (8) RS232 interfaces at up to 19.2Kbaud. Provide a maximum of seven (7) per shelf in Slots 3, 4, 17-13. Provide the following items for each IOC RS232 required:

QTY (1) I/O Controller RS232 Building Block

Also, provide eight (8) 9-25 Pin Adapter Cables for each IOC RS232 mounted in Slots 3, 17-13. (One is connected to each of the 9-pin ends of the OA&M Telemetry Cable. Each of these 8 cable ends will then be connected to one 25-pin connector on the modem shelf backpanel - 4 on the left side and 4 on the right side.)

If an IOC RS232 is provisioned in slot 4, all eight ends of the OA&M Telemetry Cable terminate on the bulkhead connector plate.

- 6) Always provide at least one (1) Standard, Redundant, or Backup DTL, depending on the SCs usage. It is required to get T1 onto the Voice Bus (i.e. a Voice Controller application).

The Standard DTL supports one (1) T1 to voice-bus interface. A maximum of twelve (12) per shelf may be provided.

sioned in Slots 5-16. Provide the following items when a Standard DTL is required:

QTY (1) Standard DTL Kit Building Block (NTZZ51HA)

The Redundant DTL Kit is provisioned for Service Controller shelves used as redundant controllers. The Redundant DTL Kit supports one (1) T1 to voice-bus interface. Provide a maximum of twelve (12) per shelf in Slots 5-16.

Provide the following items when a Redundant DTL is required:

QTY (1) Redundant DTL Kit Building Block (NTZZ51KA)

The Backup DTL Kit supports one (1) T1 to voice-bus interface. If needed, provide a maximum of twelve (12) per shelf in Slots 5-16. The Backup DTL Kit is provisioned for Service Controller shelves used as backup controllers. Provide the following items when a Backup DTL is required:

QTY (1) Backup DTL Kit Building Block (NTZZ51LA)

- 7) The Multi-Channel Tel Link (MTL) supports connectivity to thirty-two (32) voice bus channels. If needed, provide a maximum of sixteen (16) per shelf in Slots 20-5.
- 8) The Speech Recognition Processor (SRP) supports speech recognition processing. If needed, provide a maximum of eighteen (18) per shelf in Slots 3-20.
- 9) Provide one (1) Filler CP for every Slot 02-20 of the Service Controller Shelf not filled by cards, and provide one (1) Filler TM for every Slot 02R-17R of the Service Controller Shelf not filled by transition modules.
- 10) Always provide one (1) SCSI Device in Slot 22 of the Service Controller Shelf. Select one of the following: 2.4GB Disk/DAT or 2.4GB/2.4GB Dual Disk.
- 11) Always provide one (1) SCSI Cable since a SCSI Disk is always required for the SC shelf. One end connects to Connector P5 of the PWR SCSI Backpanel on the SC Shelf. To minimize the length of the SCSI bus, the other ends terminates on whichever of the following devices is closest to the P5 Connector: MSP or RSP. The possible terminations of the other end of the SCSI Cable are

- * Slot 1R (bottom connector) on the TM MSP if an RSP is NOT provisioned.
 - * Slot 2R (bottom connector) on the TM RSP if an RSP is provisioned.
- 12) Provide (8) 9 Pin Filler Plate and (16) Mounting Screws on the SC bulkhead connector plate per SC shelf if position 4R is not equipped.
 - 13) Provide (1) 25 Pin Cover Plate and (2) Mounting Screws on the SC bulkhead connector plate for each unequipped SC shelf CP position 3R- 17R.
- RUL8
- 1) Provide two (2) Modem Shelf Air Plenum (NTFX5511) for each modem shelf. One above and one below. Provide two (2) Shelf Mounting Hardware Kits (NTFX5501) per Modem Shelf to mount the air plenums.
 - 2) Provide one (1) Modem Shelf Power Kit (NTFX5522) for the FIRST modem shelf in the NAV Controller Bay. Provide two (2) Modem Power Jumper Cables (NTFX8526) for each ADDITIONAL modem shelf in the NAV Controller Bay. The modem shelf comes equipped with two power converters.
 - 3) Each OC can support as many remote dial-up X.11 terminals and dedicated X.11 terminals as required.

Provide the following items when a Modem Connected X.11 Terminal is required to be connected to a modem in a Controller Bay:

QTY (1) Modem Connected X.11 Terminal Kit (NTFY10AE)

Each Modem Connected X.11 Terminal Kit requires one (1) Universal Modem 4-Wire (A0609601), configured as an RS-232, to be located in Slots 1 or 9 of the FIRST Modem Shelf, if the modem shelf is located in the same Controller Bay as the OC shelf.

If the modem shelf is located in a Controller Bay other than the one containing the OC shelf, provide one (1) Universal Modem 4- Wire (A0609601), configured as a RS-232, to be located in Slots 1 or 9 of the FIRST Modem Shelf and one (1) Modem to Bulkhead Cable (NTFX8563) for each Modem Connected X.11 Terminal Kit.

If the modem shelf is to be located in a LAN Bay, refer to the LAN Bay provisioning documents.

Some applications may require a Universal Modem 4-Wire modem (A0609601) to be provisioned with them. If a modem has been provisioned with the application, and the customer is not providing their own access terminal or printer to use with it, the first Modem Connected X.11 Terminal Kit (NTFY10AE) may use the previously provisioned modem unless a Printer Kit (NTFY10AF) has already been provisioned to use it.

- 4) Provide a maximum of four (4) Printer Kits for each NAV Node. Provide the following items when a Printer is required to be connected to a modem in a Controller Bay:

QTY (1) Desktop Matrix Printer Kit (NTFY10AF)

Each Printer Kit requires one (1) Universal Modem 4-Wire (A0609601), configured as RS-232, to be located in Slots 2, 3, 10, or 11 of the FIRST modem shelf, if the modem shelf is located in the same bay as the OC shelf.

If the modem shelf is not located in the same bay as the OC shelf, provide one (1) Universal Modem 4-Wire (A0609601), configured as a RS-232, to be located in Slots 2, 3, 10, or 11 of the FIRST modem shelf and one (1) Modem to Bulkhead Cable (NTFX8563).

Some applications may require a Universal Modem 4- Wire modem (A0609601) to be provisioned with them. If a modem has been provisioned with the application, and the customer is not providing their own access terminal or printer to use with it, the Printer Kit (NTFY10AF) may use the previously provisioned modem unless a Modem Connected X.11 Terminal Kit (NTFY10AE) has already been provisioned to use it.

- 5) Provide a maximum of two (2) Remote Dialup X.11 Terminal Kits for each NAV Node. Provide the following items when a Remote Dialup X.11 Terminal is required to be connected to a modem in a Controller Bay:

QTY (1) Remote Dialup X.11 Terminal Kit (NTFY10AD)

Each Remote Dialup X.11 Terminal Kit (NTFY10AD) requires one (1) Modem 9600 Dial-Up (A0600472) to be located in Slots 4 or 12 of the FIRST modem shelf, if the modem shelf is located in the same bay as the OC shelf.

If the modem shelf is not located in the same bay as the OC shelf, provide one (1) Modem 9600 Dial-Up (A0600472) to be

located in Slots 4 or 12 of the FIRST modem shelf and one (1) Modem to Bulkhead Cable (NTFX8563) for each Remote Dialup X.11 Terminal Kit.

Some applications may require a 9600 Dial-Up modem (A0600472) to be provisioned with them. If a modem has been provisioned with the application, and the customer is not providing their own access terminal to use with it, the first Remote Dialup X.11 Terminal Kit (NTFY10AD) may use the previously provisioned modem.

- 6) Reserved for future use. This item originally contained information pertaining to a Local X.11 Terminal (NTFY10AA). This Terminal connects directly to an Ethernet HUB and is there for provisioned with the LAN Bay, not the Controller Bay.
- 7) V.35 MODEM - The use of Universal 64k modem replaces Universal modem items. The new modems provide higher bandwidth (64 kbaud) compared to the existing universal modems (56 kbaud). The 64k modems (NTFY01AA) will be generally available for all applications once the existing 56k modem (A0609601) stock is exhausted.

The Universal Modem 4-Wire (A0609601) may be provisioned by itself or as part of the Universal Modem Building Block Kit (NTZZ51NA), as explained below. The Universal 64k modem (NTFY01AA) is provisioned by itself and not as part of a Building Block.

Universal Modems provisioned in slots 1-4 or 9-12 of the first modem shelf (shelf position 40) that is provisioned in the same bay as an OC shelf do not require any additional cabling. (This is because these positions are equipped with NTFX8550 cables going to the OC shelf.) Provision the Universal Modem 4-Wire (A0609601) by itself.

For Universal Modems provisioned in slots 5-8 or 13-16 of the first modem shelf (shelf position 40) provisioned in the same bay as an OC shelf, additional cabling to the bulkhead is required. Provision the Universal Modem Kit Building Block (NTZZ51NA) if the Universal Modem 4-Wire (A0609601) is used.

If the Universal 64k modems (NTFY01AA) is required, provision (1) Modem to Bulkhead Cable (NTFX8563) with each modem.

For Universal Modems provisioned in any slot on any shelf besides the first modem shelf (shelf position 40) provisioned in the same bay as an OC shelf, additional cabling to the bulkhead is required. Provision the Universal Modem Kit Building Block (NTZZ51NA) if the Universal Modem 4-Wire (A0609601) is used.

If the Universal 64k modem (NTFY01AA) is required, provision (1) Modem to Bulkhead Cable (NTFX8563) with each Universal 64k modem provided.

- 8) RS232 MODEM - When a RS232 modem is required for interbay configurations, provide one (1) Universal Modem 4-Wire (A0609601). Configure the modem for RS-232. This is the type modem required for Modem Connected X.11 Terminal and Printer connectivity. The Universal Modem 4-Wire may be provisioned by itself or as part of the Universal Modem Kit Building Block (NTZZ51NA), as explained below.

Universal Modems 4-Wire (A0609601) provisioned in slots 1-4 or 9-12 of the first modem shelf (shelf position 40) that is provisioned in the same bay as an OC shelf do not require any additional cabling. (This is because these positions are equipped with NTFX8550 cables going to the OC shelf.) Provision the Universal Modem 4-Wire (A0609601) by itself.

For Universal Modems 4-Wire provisioned in slots 5-8 or 13-16 of the first modem shelf (shelf position 40) that is provisioned in the same bay as an OC shelf, provision the Universal Modem Kit Building Block (NTZZ51NA).

For Universal Modems 4-Wire provisioned in any slot on any shelf besides the first modem shelf (shelf position 40) that is provisioned in the same bay as an OC shelf, additional cabling is required. Provision the Universal Modem Kit Building Block (NTZZ51NA).

- 9) DIAL-UP MODEM - If a modem is required for dialup modem access, provide one (1) Modem 9600 Dial-Up (A0600472) to be located in Slot 4 or 12 of the FIRST Modem Shelf in the NAV node, if the modem shelf is located in the same bay as the OC shelf. A maximum of two (2) may be provisioned. The first modem goes in slot 4, the second in slot 12.

If the modem shelf is not located in the same bay as the OC shelf, provide one (1) Modem 9600 Dial-Up (A0600472), and one (1) Modem to Bulkhead Cable (NTFX8563) to be located in

Slot 4 or 12 of the FIRST Modem Shelf in the NAV node. A maximum of two (2) modems may be provisioned. The first modem goes in slot 4, the second in slot 12.

If a second modem is required, it also requires one (1) Modem to Bulkhead Cable (NTFX8563).

The customer may provide their own peripheral dialup access terminal equipment to connect to this modem. If they wish Nortel to supply a dialup access terminal, then provision a Remote Dialup X.11 Terminal Kit (NTFY10AD) per its rule.

- 10) Provide one (1) Modem Filler Card (A0650426) for each position not provisioned with a modem. Each modem shelf has 16 modem positions.
- 11) Reserved for future use. This item originally contained information pertaining to the cover plates and mounting screws used to fill empty bulkhead positions. Manufacturing now provides this material for all empty bulkhead positions on NAV bays.
- 12) One modem shelf supports up to two IOC (RS-232) kits in a cabinet.
- 13) A roll-up terminal is required at each NAV site. A roll-up terminal is an ASCII (text-based) terminal on wheels primarily used for installation. It should be capable of at least recognizing the VT-100 page formatting protocol. Furthermore, it can only be connected to NAV shelves or NAV hubs using ground isolated RS-232 cables, such as with the RS-232 ISO cable assembly (NT3M20BE). If the terminal and ground isolated cable are already available at the site, there is no need to order a new one.

If a new roll-up terminal is required, provision (1) VT520 White Display Terminal (A0376839) and (1) NT1320 (NT3M20BE) Isolation Kit (A0388012).

- RUL9 1) Provide one (1) NAV Shelf Air Plenum (NTFX5605) for each shelf location, 37, 15 and 02, not provisioned with a NAV Shelf.

LISTING BY PRODUCT ENGINEERING CODE

<u>PEC</u>	<u>EQUIPMENT NAME</u>	<u>SECTION #</u>
A0205202	1 1/3 amp fuse	EMB16-02-010 EMB2-06-ZZ37AB EMB2-14-FSP-1 EMB2-14-FSP-2 EMB9-03-DSP-1 EMB16-02-000 EMB2-09-CPE-2 EMB2-09-CPE-3 EMB2-06-ZZ37AC
A0205203	QFF1B 2 AMP FUSE	EMB11-01-KSS-1
A0205204	QFF1C 3 AMP FUSE	EMB11-01-KSS-1 EMB2-02-ISM-2 EMB2-02-ISM-1
A0205205	Fuse 5amp Green	EMB2-02-ISM-2 EMB2-02-ISM-1
A0205207	QFF1F 1/4 AMP FUSE	EMB11-01-KSS-1
A0205209	QFF1H 3/4 AMP FUSE	EMB11-01-KSS-1 EMB13-01-005
A0205210	QFF3A DUMMY FUSE	EMB11-01-KSS-1 EMB16-02-FP-1 EMB2-02-ISM-2 EMB13-05-010 EMB2-02-ISM-1 EMB13-01-005
A0277744	Magnetic Tape Drive Assembly	EMB5-03-002 EMB10-13-001
A0279319	D-Sub Connector Retainers	EMB2-16-CAB-3 EMB4-05-009 EMB4-05-004 EMB4-05-001
A0285591	Line Drawer Cutoff Strap	EMB2-07-LCM-1 EMB2-09-LCM-1 EMB2-09-LCM-2 EMB2-14-ILCM EMB2-19-LCME-1 EMB2-19-LCMI-1
A0286407	10 Amp Fuse	EMB16-02-010 EMB16-02-000
A0288192	Hardware Lugs	EMB5-02-000
A0292996	Terminal Ring	EMB2-02-ISM-2 EMB2-20-DDU EMB2-20-DDU-1 EMB2-20-IOC-3

		EMB5-03-IOC-2
		EMB5-03-IOC-3
		EMB2-02-ISM-1
A0302484	Heater	EMB2-13-004
A0315462	10A Fuse	EMB9-03-DSP-1
		EMB13-05-010
A0316594	Filter Adapter	EMB13-08-CDA-1
		EMB13-08-CDA-10
		EMB13-08-CDA-2
		EMB13-08-CDA-3
		EMB13-08-CDA-4
		EMB13-08-CDA-5
		EMB13-08-CDA-6
		EMB13-08-CDA-7
		EMB13-08-CDA-8
		EMB13-08-CDA-9
		EMB2-20-DPP
		EMB5-03-DPP
		EMB5-03-DP1
		EMB5-03-001
		EMB5-03-DPP-2
		EMB13-01-005
A0316598	37 Pin Filter Adapter	EMB2-01-MTM-10
		EMB2-01-MTM-6
		EMB2-01-MTM-7
		EMB2-01-MTM-8
		EMB2-01-MTM-9
		EMB2-01-TM8-2
		EMB2-01-TM8-3
		EMB2-01-T8A-1
		EMB2-01-T8B-1
		EMB2-20-AXU-1
		EMB2-20-DRA
		EMB2-20-MTM
		EMB2-20-TM8
		EMB2-20-T8A
		EMB2-25-AXU-3
		EMB2-25-AXU-4
		EMB2-25-AXU-5
		EMB2-25-DRA
		EMB2-25-MTM
		EMB2-25-TM8
		EMB2-02-ISM-1
A0316599	37 Pin Filter Adapter	EMB2-20-IOC-3
		EMB2-20-ROS-1
		EMB2-20-ROS-3
		EMB2-20-ROS-4
		EMB5-03-IOC-2
		EMB5-03-IOC-3

		EMB5-03-ST1
		EMB5-03-ST2
		EMB2-02-ISM-1
		EMB13-01-005
A0317073	Desktop Printer (110V)	EMB19-03-PRT-1
A0317136	Screws	EMB13-08-CDA-1
		EMB13-08-CDA-10
		EMB13-08-CDA-2
		EMB13-08-CDA-3
		EMB13-08-CDA-4
		EMB13-08-CDA-5
		EMB13-08-CDA-6
		EMB13-08-CDA-7
		EMB13-08-CDA-8
		EMB13-08-CDA-9
		EMB2-16-CAB-2
		EMB2-16-CAB-3
		EMB2-20-AXU-1
		EMB2-20-DPP
		EMB2-20-DRA
		EMB2-20-IOC-3
		EMB2-20-MTM
		EMB2-20-ROS-1
		EMB2-20-ROS-3
		EMB2-20-ROS-4
		EMB2-20-TM8
		EMB2-20-T8A
		EMB2-25-AXU-5
		EMB2-25-DRA
		EMB2-25-MTM
		EMB2-25-TM8
		EMB5-03-DPP
		EMB5-03-DP1
		EMB5-03-IOC-2
		EMB5-03-IOC-3
		EMB5-03-ST1
		EMB5-03-ST2
		EMB19-04-001
		EMB2-02-ISM-1
		EMB5-03-001
		EMB5-03-DPP-2
		EMB13-01-005
A0320894	CASE/DATATEL Adapter Plug	EMB13-01-005
A0323869	HOOD	EMB2-20-DPP
		EMB5-03-DPP
		EMB5-03-DP1
		EMB5-03-001
A0323985	YUASA BATTERIES	EMB2-13-BSP
A0324131	TB Jumper	EMB2-01-000

A0326502	Magnetic Tape Drive Assembly	EMB5-02-000
A0326932	Filter Line EMI Feedthru	EMB5-03-002
		EMB2-20-DDU-1
		EMB2-20-ROS-3
		EMB2-20-ROS-4
A0329731	LEVELLING FEET	EMB8-01-ASY-3
A0333595	SCSI Terminator	EMB19-04-000
A0336653	Filter Adapter	EMB2-16-CAB-2
A0336796	D-Sub Filter Connector	EMB2-16-CAB-3
		EMB2-25-AXU-3
		EMB2-25-AXU-4
A0344127	9 Pin Filter Adapter	EMB2-20-AXU-1
		EMB2-25-AXU-3
		EMB2-25-AXU-4
		EMB2-25-AXU-5
		EMB2-02-ISM-1
		EMB13-01-005
A0344310	DC Redundant Modem Shelf	EMB13-01-000
		EMB19-04-MM-1
		EMB19-04-002
		EMB13-05-000
		EMB13-01-005
		EMB13-01-003
A0351642	CASE/DATATEL Modem	EMB13-01-005
A0351816	Maint Modem (GDC DC596)	EMB8-02-003
		EMB8-02-004
		EMB8-02-006
A0352086	CASE/DATATEL Modem	EMB13-01-005
A0352180	MPX Key Cap Kit 2CT55438	EMB8-02-002
A0352268	Fiber Optic Cable	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
A0352269	Cable Assembly	EMB4-06-NET-1
A0355018	Modular (Teledapt) Adapter	EMB8-01-000
A0355254	RM4200 Modem Shelf 115VAC	EMB13-05-000
A0355255	CASE/DATATEL 829 Data Aux.	EMB13-01-005
A0355258	CASE/DATATEL Modem	EMB13-01-005
A0355259	CASE/DATATEL Modem	EMB13-01-005
A0360825	UDS 224AT/D Modem Card	EMB19-03-UDS-2
A0361490	Secondary Protectors	EMB13-01-005
A0361663	CONNECTOR	EMB2-20-DPP
		EMB5-03-DPP
		EMB5-03-DP1
		EMB5-03-001
A0361743	TELLABS 4201 Terminating Set	EMB13-01-005
A0367245	External Generator Connector	EMB2-13-004
		EMB2-13-005
A0367433	LaMarche Inverter	EMB5-02-000
		EMB13-05-000

		EMB13-01-005
		EMB13-01-003
A0367994	CASE/DATATEL Modem	EMB13-01-005
A0367996	CASE/DATATEL Modem	EMB13-01-005
A0368391	Terminal Block Hardware	EMB2-20-006
A0368392	FSP Term Block Cover Ass.	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB3-01-NET-5
		EMB3-01-NET-6
		EMB4-05-009
		EMB2-16-007
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
		EMB4-05-001
		EMB4-06-011
A0368911	FC 1133 Token Ring Card	EMB8-02-003
A0369235	CASE/DATATEL Adapter Plug	EMB13-01-005
A0369236	CASE/DATATEL Adapter Plug	EMB13-01-005
A0369273	FC 6401 RTIC Card	EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
A0370071	Female Screw Locks 24-Pin	EMB19-04-MM-1
A0377580	Cooling Unit	EMB19-01-000
		EMB19-01-001
A0377761	YUASA Batteries	EMB2-13-004
A0377837	Filter	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
A0379066	Pylon RG-2 Ring Generator	EMB13-01-005
A0379341	Keycap Removal Tool	EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
A0379486	CABLE ASSEMBLY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
A0380973	GDC DS-6 Modem Shelf	EMB13-01-000
		EMB13-05-003
		EMB13-05-000

		EMB13-01-005
		EMB13-01-003
A0383332	12-Port 10BaseT Ethernet Hub	EMB11-01-004
		EMB11-01-005
		EMB19-04-HUB1
A0383333	10BaseT Ethernet Transceiver	EMB11-01-004
		EMB11-01-005
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
A0384166	DS-6 Mounting Adapter	EMB13-01-000
		EMB13-05-000
		EMB13-01-003
A0384296	Straight Blade Power Strip	EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
A0384297	Twist-lock Power Strip	EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
A0384362	Line Drawer Cutoff Strap	EMB2-19-LCME-3
		EMB2-09-LCM-4
		EMB2-09-LCM-3
		EMB2-14-IILCM-2
		EMB2-07-LCM-2
A0385011	Modem Filler Card	EMB19-04-000
		EMB19-04-001
A0385558	UDS 19.2K/9.6K Baud Modem	EMB19-03-UDS-1
A0385644	T.R. Data Cbl, Posn-Junc Box	EMB8-02-MPX-10
		EMB8-02-MPX-11
		EMB8-02-006
		EMB8-02-MPX-12
A0386144	GNB Batteries	EMB2-13-004
A0386201	Eagle-Picher Batteries	EMB2-13-004
A0386311	Cable 10-14 Gauge (Lug)	EMB16-02-003
A0397416	RTP 9-Track Tape Drive	EMB9-03-MTD-1
A0600061	US Robotics 0094-00 Modem	EMB11-01-004
		EMB11-01-005
A0600137	Filter Adapter 24-Pin	EMB19-04-MM-1
A0600278	HP 710 Workstation	EMB11-01-004
A0600472	Modem 9600 Dial-Up	EMB19-04-000
		EMB19-04-001
A0600589	CASE/DATATEL Modem	EMB13-01-005
A0600741	Cable, 25P Male - 25P Female	EMB8-02-003
		EMB8-02-004
		EMB8-02-006
A0600770	RM4200 Modem Shelf -48V DC	EMB13-05-000
		EMB13-01-005
A0601464	Patching Modem to	EMB11-01-004

		EMB11-01-005
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
A0601999	CMIS DANTEL Digital Alarm	EMB13-01-005
A0602029	GDC DT500N 56K DSU	EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
A0602526	69X8138 Token Ring CP	EMB8-02-MPX-10
		EMB8-02-MPX-11
		EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
A0609601	Universal Modem 4-Wire	EMB19-04-000
		EMB19-04-UM
		EMB19-04-001
A0609602	UDS 56K DSU	EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
		EMB19-02-RDED
		EMB19-02-PRT
A0614959	Cable 6 Gauge (Lug)	EMB16-02-003
A0614961	Cable 8 Gauge (Lug)	EMB16-02-003
A0615939	Token Ring Card (Europe)	EMB8-02-006
A0615940	RTIC Card (Europe)	EMB8-02-006
A0616226	DSU (GDC DT500N 56K 220V)	EMB8-02-006
A0616372	HP 712 Workstation	EMB11-01-005
A0617131	Power Strip 220V	EMB8-02-006
A0618649	Power Cord (use w/ A0617131)	EMB8-02-006
A0619543	ISA Token Ring Card	EMB8-02-006
		EMB8-02-MPX-12
A0619552	ISA RTIC Card	EMB8-02-006
A0624408	TELLABS 1014U Universal	EMB13-01-005
A0630023	DS512 IML AP/FP Fiber Link	EMB4-06-011
A31-500-48V-A6	LaMarche 500W Inverter	EMB13-01-000
BB-TAB-A	Table A - Trunk Module Provisionab	EMB14-01-000
BC16E-10FT	RS-232 SLAVE CABLE (10 FT.)	EMB11-01-PRT-4
		EMB11-01-PRT-5
BC16E-25FT	RS-232 SLAVE CABLE (25 FT.)	EMB11-01-PRT-4
		EMB11-01-PRT-5
BC16E-50FT	RS-232 SLAVE CABLE (50 FT.)	EMB11-01-PRT-4
		EMB11-01-PRT-5
BN19P-1K	POWER CORD	EMB11-01-PRT-4
		EMB11-01-PRT-5
CRP14FSKR750	Female Screw Lock	EMB19-02-IOC-3
CT220R	COLORTREND CT220R VDU	EMB11-01-VDU-3

C0054642	CORR TOOL CARRYING POUCH	EMB2-13-OPMT
C1007A	Amber Video Display Unit	EMB13-08-DTH-1
C1007G	Green Video Display Unit	EMB13-08-DTH-1
C1007W	White Video Display Unit	EMB13-08-DTH-1
C2501313	Paper Catch Tray	EMB19-03-PRT-1
ED1T53-02	Rear Panel E/Q & Universal	EMB2-07-000
		EMB2-07-004
		EMB2-07-003
EK-LA424	USERS GUIDE	EMB11-01-PRT-5
EK-LA75-UG	USERS GUIDE	EMB11-01-PRT-4
ER210HFCA4464	CAMEL LIGHT CHAIR W/ARMS	EMB11-01-001
FCP01F25NH50G	Connector 25-pin EMI Filter	EMB19-02-IOC-3
H8671-A	RS232 CONNECTION ADAPTER	EMB11-01-PRT-4
H8671-D	RS232 CONNECTION ADAPTER	EMB11-01-PRT-5
H8673-AC	20 MA CURRENT LOOP ADAPTER	EMB11-01-PRT-4
		EMB11-01-PRT-5
IBM_DA_AOSS	TOPS MPX IBM DA AOSS Position Equi	EMB8-02-002
ITEM-101	TI-820 KSR PRINTER	EMB11-01-PRT-3
ITEM-311	TI-820 20 MA CUR LP OPTION	EMB11-01-PRT-3
ITEM-610	TI-820 TERMINAL STAND	EMB11-01-PRT-3
ITEM-611	TI-820 STAND MTD PAPER TRAY	EMB11-01-PRT-3
ITEM-856	TI-820 SPARE RIBBONS	EMB11-01-PRT-3
KX-T1235D	AUTODIALER 30B TELSET	EMB11-01-KSS-1
LAXX-KB	DEC LA120 PAIR OF CASTERS	EMB11-01-PRT-1
LAXX-NC	DEC LA120 PAPER BASKET	EMB11-01-PRT-1
LAXXR-12	DEC LA120 SPARE RIBBONS	EMB11-01-PRT-1
LAXXS-DA	DEC STAND & PAPER CATCHER	EMB11-01-PRT-4
LAXXS-DS	DEC STAND & PAPER CATCHER	EMB11-01-PRT-4
LA12X-AL	DEC LA120 20MA CL OPTION	EMB11-01-PRT-1
LA120-DA	DEC LA120 KSR PRINTER	EMB11-01-PRT-1
LA24X-PS	DEC STAND & PAPER CATCHER	EMB11-01-PRT-5
LA42R-KA	DEC RIBBON CARTRIDGE	EMB11-01-PRT-5
LA424-CA	DEC LA424 PRINTER	EMB11-01-PRT-5
LA75R-KA	DEC RIBBON CARTRIDGE	EMB11-01-PRT-4
LA75S-AA	DEC LA75S PRINTER	EMB11-01-PRT-4
LWJRX33AA	Wiring Instructions	EMB2-20-006
		EMB5-03-001
LWJRX33DA	Wiring Instructions	EMB5-03-002
LWJ0X43BA	Wiring Drawing	EMB5-02-000
MPX_IWS	TOPS MPX IWS Position Equipment	EMB8-02-004
MPX_IWS_R2	TOPS MPX IWS Position Equipment	EMB8-02-006
MS0X60AA	Door and eqp. labels	EMB13-09-004
		EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-09-TME-1
		EMB2-09-TME-3
		EMB2-09-CPE-2
		EMB2-09-CPE-3

		EMB13-09-005
		EMB2-02-ISM-1
		EMB5-03-002
		EMB13-01-005
		EMB16-02-003
		EMB2-09-LCE-6
M1-1063-901	Pylon RG-2 Ringing Generator	EMB13-01-ALM-1
NE-D100QA-87	LOGIC 20 LINE CORD	EMB11-01-MTS-1
NE-D3BN-87	5'6" TRANSFORMER CORD	EMB11-01-MTS-2
NE-P4QDG	PORTABLE DATA CORD	EMB11-01-VDU-3
NE-P4QFP	PORTABLE DATA CORD	EMB11-01-VDU-1
NE-2012B-03	HANDSFREE UNIT TRANSFORM	EMB11-01-MTS-2
NPS50368L2	Paper Catch Tray	EMB19-02-PRT
NPS50457L1	Desktop Matrix Printer	EMB19-02-PRT
NPS50457L6	Pedestal Stand	EMB19-03-PRT-1
		EMB19-02-PRT
NPS50731-01L2	VT320 White Display Terminal	EMB19-02-ROLL
NPS51074-11L1	Standalone Dial-up Modem	EMB19-02-RDIAL
NPS51151-01L3	HUB 12-port	EMB19-02-RSTORE
NPS51151-01L4	HUB 48-port	EMB19-02-HUB2
NPS51151-02L2	Media Access Unit IEEE 802.3	EMB19-02-RSTORE
		EMB19-02-STORE
NPS51205-01L2	X Window Terminal 19 inch	EMB19-02-MISC
		EMB19-02-LOCAL
		EMB19-02-RDIAL
		EMB19-02-RDED
NPS51238-01L1	600 MB Tandem Integrity S2	EMB19-02-STORE
NP154	TOPS Adjustable Desk	EMB8-01-000
NT_DA_AOSS	TOPS MPX NT DA AOSS POSITION EQUIP	EMB8-02-003
NTAN10AA	RTU-AMH 4-Trunk (for CALRS)	EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NTAN11AA	RTU-AMH 16-Trunk (for CALRS)	EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NTAN60AA	DRTU-AMH (for CALRS)	EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NTAX74AA	ICP Metro (CAP)	EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ37AC
		EMB2-24-RCC-15
		EMB2-24-RCC-12
NTAX75AA	DICP Cabinet	EMB9-03-DRS-G
		EMB9-03-DRS-B
NTAX75ZB	CAP XPM Plus Upgrade Kit	EMB10-21-MCTMI
		EMB10-20-MCTMI
NTAX75ZC	Fiber Upgrade Kit	EMB9-03-DRS-G
		EMB9-03-DRS-B

NTAX7521	DS30A Cable	EMB9-03-DSP-1
NTAX7524	DS-30 Cables	EMB9-03-DRS-G EMB9-03-DRS-B
NTAX7525	DS-30 Cables	EMB9-03-DRS-G EMB9-03-DRS-B
NTAX7601	DSP Shelf	EMB9-03-DSP-1 EMB9-03-DSP-2 EMB9-15-000 EMB9-15-MDSP-1 EMB9-15-MDSP-2
NTAX77AA	DSP Cooling Unit	EMB9-15-000 EMB9-03-DRS-G EMB9-03-DRS-B
NTAX78AA	Enhanced Time Switch CP	EMB2-06-DTC-4 EMB2-06-DTC-5 EMB2-18-CPC-3 EMB2-99-ISDN-2 EMB10-20-000 EMB10-08-000 EMB10-08-001 EMB9-03-DRS-G EMB9-03-DRS-B EMB10-21-MCTMI EMB10-20-MCTMI
NTAX78AB	Enhanced Time Switch CP	EMB2-06-SMA-16
NTAX79AA	Backplane Terminator	EMB9-03-DSP-1 EMB9-03-DSP-2 EMB9-03-DSP-3 EMB9-15-000 EMB9-15-MDSP-1 EMB9-15-MDSP-2
NTAX80AA	DSP Control Processor	EMB9-03-DSP-1 EMB9-03-DSP-2 EMB9-03-DSP-3 EMB9-15-000 EMB9-15-MDSP-1 EMB9-15-MDSP-2
NTAX81AA	DSP Card	EMB9-15-000 EMB9-03-DRS-G EMB9-03-DRS-B
NTAX82AA	MDSP Cabinet	EMB9-15-000 EMB9-15-MDSP-1 EMB9-15-MDSP-2
NTAX8213	DS30A Cable	EMB9-15-000
NTAX84AA	Remote Mod Data Buffer	EMB9-10-ICRM-3 EMB9-10-ICRM-4
NTAX86AA	ICRM with FSP	EMB9-10-ICRM-1 EMB9-10-ICRM-2
NTAX86AC	ICRM shelf w/o FSP	EMB9-10-ICRM-3

NTAX88AA	Rem Mod Time Switch	EMB9-10-ICRM-4 EMB9-10-ICRM-1 EMB9-10-ICRM-2
NTAX89AA	Rem Mod Controller	EMB9-10-ICRM-1 EMB9-10-ICRM-2
NTAX90AB	Remote Mod FSP	EMB9-10-ICRM-1 EMB9-10-ICRM-2
NTAX91AA	Remote Mod TCM PAD	EMB9-10-ICRM-1 EMB9-10-ICRM-2
NTAX92AA	Remote Mod Alarm Card	EMB9-10-ICRM-1 EMB9-10-ICRM-2
NTBX01AA	ISDN Signaling Pre-processor	EMB2-15-RCCI-1 EMB2-18-CPC-2 EMB2-18-CPC-3 EMB2-99-XPM-5 EMB9-03-ICP-1 EMB2-06-ZZ41DA EMB2-06-ZZ37AC
NTBX01AB	ISDN Pre-Processor	EMB2-06-DTX EMB2-06-LGX EMB2-06-LTX EMB2-06-SMU-7 EMB2-06-ZZ37AB EMB2-15-RCCI-2 EMB2-18-004 EMB9-03-ICP-3 EMB9-03-DRS-G EMB9-03-DRS-B EMB9-03-ICP-2 EMB2-06-ZZ41DA EMB2-06-ZZ37AC
NTBX01AC	ISDN Signal Proc (CAP Only)	EMB9-03-DRS-G EMB9-03-DRS-B EMB2-06-ZZ41DA EMB2-06-ZZ37AC
NTBX01BA	ISDN Pre-Processor	EMB2-06-DTP EMB2-06-LGC-7 EMB2-06-LGP EMB2-06-LTC-7 EMB2-06-LTP EMB2-06-SMA-12 EMB2-06-SMA-14 EMB2-06-SMA-16 EMB2-06-SMU-11 EMB2-06-SMU-15 EMB2-06-UPI EMB2-18-CPC-5 EMB2-99-XPM-5 EMB2-24-RCC-27

		EMB2-24-RCC-28
		EMB2-06-SMA-17
		EMB9-03-ICP-3
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB9-03-ICP-1
		EMB9-03-ICP-2
		EMB2-06-ZZ41DA
		EMB2-06-ZZ37AC
NTBX02AA	ISDN D-channel Handler CP	EMB2-06-ZZ37AB
		EMB2-18-DCH-1
		EMB2-06-ZZ41DA
NTBX02BA	Enh ISDN D-chan Handler CP	EMB2-06-ZZ37AB
		EMB2-19-DCH-2
		EMB2-06-ZZ41DA
		EMB2-06-ZZ37AC
NTBX30AB	ISDN Line Conc Equip Frame	EMB2-19-005
		EMB2-19-002
NTBX3010	Filler Grille Assy	EMB2-19-005
		EMB2-19-002
NTBX31AB	LCMI Filler Kit	EMB2-09-LCE-4
		EMB2-19-005
		EMB2-24-RCC-28
		EMB2-19-002
		EMB2-09-LCE-6
NTBX31AC	LCMI Common CP	EMB2-19-LCMI-1
NTBX31BA	LCME Common CP	EMB2-24-RCC-28
NTBX31BB	Enhanced ISDN LCM Common CP	EMB2-19-LCME-1
NTBX31BD	LCME Circuit Packfill	EMB2-19-LCME-3
NTBX3104	ISDN Line Conc Arr Shf Assy	EMB2-19-005
		EMB2-19-002
NTBX3118	ISDN LCA Shelf Assy	EMB2-09-LCE-4
		EMB2-24-RCC-28
		EMB2-09-LCE-6
NTBX32AA	ISDN Line Drawer	EMB2-19-LCMI-1
NTBX32BA	ISDN Enhanced Line Drawer	EMB2-19-LCME-1
		EMB2-24-RCC-28
		EMB2-19-LCME-3
NTBX3201	ISDN Line Drawer Assy	EMB2-19-LCMI-1
NTBX3204	ISDN Enh. Line Drawer Assy	EMB2-19-LCME-1
		EMB2-19-LCME-3
NTBX34AB	LCMI Processor CP	EMB2-19-LCMI-1
NTBX34BC	LCME Processor CP	EMB2-19-LCME-1
NTBX34CB	ISDN Enhanced LCM Proc CP	EMB2-19-LCME-3
NTBX35AA	LCMI Digroup Control CP	EMB2-19-LCME-1
		EMB2-19-LCMI-1
NTBX35CA	ISDN LCM Digroup Control CP	EMB2-19-LCME-3
NTBX36AA	ISDN Line Drawer BIC	EMB2-19-LCMI-1
NTBX36BA	ISDN Enh. LCME BIC	EMB2-19-LCME-1

NTBX37AB	LCEI Frame Supervisory Pnl	EMB2-19-LCME-3 EMB2-19-005 EMB2-19-002
NTBX63AA	D.C. Fan Unit	EMB2-19-005 EMB2-19-002
NTBX71AA	ISDN Enh. Line Drawer PUPS	EMB2-19-LCME-1 EMB2-19-LCME-3
NTBX72AA	LCME Battery & Ring. Router	EMB2-19-LCME-1 EMB2-19-LCME-3
NTCX50AA	Echo Cancllr Ctrl Paddle Bd	EMB2-06-ZZ41AA
NTDX15AA	POWER CONVERTER +/-5V	EMB4-04-AP-1 EMB4-04-AP-2 EMB4-04-FP-1 EMB4-04-FP-2 EMB4-06-001
NTDX15AB	Power Converter +/-5V	EMB4-04-APL EMB4-04-APR EMB4-04-FPL EMB4-04-FPR EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010
NTDX16AA	Power Converter CP	EMB2-16-CNV-RD EMB2-16-CV-RD EMB4-04-APC-4 EMB4-04-APC-7
NTEX01AB	Enhanced Multipurpose Cab.	EMB2-16-007
NTEX0120	Composite Clock Cable Assy	EMB2-16-FLIU-2
NTEX20AA	F-Bus A Terminator PB	EMB2-16-FLIU-2 EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB4-06-ENI-2 EMB4-06-LIS-60V EMB4-04-APC-4 EMB4-04-APC-7
NTEX20BA	F-Bus B Terminator PB	EMB2-16-FLIU-2 EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB4-06-ENI-2 EMB4-06-LIS-60V

NTEX22AA	INTEGRATED PROC & FBUS I/F	EMB4-04-APC-4
NTEX22BB	IPF Proc and F-bus I/F	EMB4-04-APC-7
		EMB2-99-FIU
		EMB2-16-APU-1
		EMB2-16-EIU-3
		EMB2-16-FIU-2
		EMB2-16-LI-20
		EMB2-16-LI-21
		EMB2-16-LIU-9
		EMB2-16-NIU
		EMB2-16-VPU-1
		EMB2-99-FIU
		EMB2-16-LIU-12
		EMB2-16-LIU-10
		EMB4-04-APC-4
		EMB4-04-APC-7
NTEX25AA	CHANNEL BUS CONTROL UNIT:0	EMB2-16-NIU
NTEX25BA	CHANNEL BUS CONTROL UNIT:1	EMB2-16-NIU
NTEX26AA	Channel Access Bus I/F PB	EMB2-16-LI-20
		EMB2-16-LI-21
NTEX28AA	DS30 LINK I/F PADDLEBOARD	EMB2-16-NIU
NTEX30AA	FRAME RELAY T1 ACCESS	EMB2-16-FIU-2
NTEX31AA	FRAME RELAY ACCESS PROC	EMB2-99-FIU
NTEX31BA	FRAME RELAY ACCESS PROC	EMB2-16-FIU-2
		EMB2-99-FIU
NTEX5001	OVERHEAD POWER BLOCK KIT	EMB4-08-000
NTEX5009	DS30 I/F Ca Assy (Mer)	EMB4-05-001
NTEX5011	DS30 I/F Ca Assy (Mer)	EMB4-05-001
NTEX5013	DS30 I/F Ca Assy (Mer)	EMB4-05-001
NTEX5015	DS30 I/F Ca Assy (Mer)	EMB4-05-001
NTEX5022	Inter-MS DS-30 Cable Assy	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTEX5023	Inter-MS DS-30 Cable Assy	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTEX5025	Bulkhead Conn Cover Plate	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB2-16-007
		EMB4-04-APC-4

		EMB4-04-APC-7
		EMB4-06-011
NTEX5026	MS0-MS1 CABLE ASSEMBLY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NTEX5070	Bulkhead Cover Plate	EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
		EMB4-06-011
NTFX09AA	CBUS INTERFACE PADDLEBOARD	EMB2-16-LIU-9
NTFX10AA	HDLG FRAME PROCESSOR	EMB2-16-LIU-9
NTFX40AA	Integrated Services Module	EMB2-02-ISM-1
NTFX40BA	Integrated Services Module	EMB2-02-ISM-2
NTFX40DA	DS-30 Cable Assy	EMB2-02-ISM-1
NTFX40DB	MDF Cable Assembly	EMB2-02-ISM-1
NTFX40DC	ISM DS-30 Cable Assy	EMB2-02-ISM-1
NTFX40DD	OAU/AXU Cable Assy.	EMB2-02-ISM-2
		EMB2-02-ISM-1
NTFX40DE	ISM Test Access Cable Assy	EMB2-02-ISM-2
		EMB2-02-ISM-1
NTFX40DF	Shorting Plug	EMB2-02-ISM-2
		EMB2-02-ISM-1
NTFX40DG	ISM MDF Cable Assy.	EMB2-02-ISM-1
NTFX40DJ	AXU/MDF T/R Cable Assy.	EMB2-02-ISM-1
NTFX40DN	CISM Ext. Power Filter Kit	EMB2-02-ISM-1
NTFX40DS	AXU/ISM2 Cable Assy.	EMB2-02-ISM-2
		EMB2-02-ISM-1
NTFX40DT	ISM/OAU to MDF Cable Assy.	EMB2-02-ISM-1
NTFX40DU	ISM Test Access Cable Assy	EMB2-02-ISM-2
NTFX40DV	AXU/Bulkhd Cable Assy	EMB2-02-ISM-1
NTFX40DW	ISM/ILTA Cable Assy.	EMB2-02-ISM-2
		EMB2-02-ISM-1
NTFX40DX	ISM/VER-90 Cable Assy.	EMB2-02-ISM-2
		EMB2-02-ISM-1
NTFX4010	Modular Supervisory Panel	EMB2-02-ISM-2
NTFX4011	Modular Supervisory Panel	EMB2-02-ISM-1
NTFX4015	ISM Test Access Cable Assy	EMB2-02-ISM-1
NTFX4101	ISM Shelf Assembly	EMB2-02-ISM-2
		EMB2-02-ISM-1
NTFX5103	48 Port (V.35) Cable Kit	EMB19-02-MC-3
NTFX5104	24 Port (V.35) Cable Kit	EMB19-02-MC-1
NTFX5105	48 Port (T1) Cable Kit	EMB19-02-MC-8

NTFX5106	24 Port (T1) Cable Kit	EMB19-02-MC-6
NTFX5107	Attendant Shf (V.35) Cab Kit	EMB19-02-AC-2
NTFX52BA	NAV LAN Bay	EMB19-04-001
NTFX5210	Hub 10BaseT Cable Assembly	EMB19-04-001
NTFX5302	Operations Shelf Cable Kit	EMB19-02-OP-1
		EMB19-04-OC-1
NTFX54BA	NAV Spares Bay	EMB19-04-002
NTFX55BA	NAV Controller Bay	EMB19-04-000
NTFX5501	Shelf Mounting Hardware Kit	EMB19-04-OC-1
		EMB19-04-SC-1
		EMB19-04-IC-1
		EMB19-04-MM-1
		EMB19-04-AUX-1
NTFX5504	Modem Bulkhead Hardware Kit	EMB19-04-MM-1
NTFX5510	Modular Supervisory Panel	EMB19-04-000
		EMB19-04-001
NTFX5511	Modem Shelf Air Plenum	EMB19-04-000
NTFX5515	Controller Bay Bulkhead	EMB19-04-000
NTFX5516	Power Bulkhead	EMB19-04-000
		EMB19-04-001
NTFX5517	LAN Bay Bulkhead	EMB19-04-001
NTFX5520	Intg. Contr. Cable Kit	EMB19-04-IC-1
NTFX5521	Serv. Contr. Cable Kit	EMB19-04-SC-1
NTFX5522	Modem Shelf Power Kit	EMB19-04-000
NTFX56AA	NAV Shelf Assembly	EMB19-02-AC-2
		EMB19-02-MC-1
		EMB19-02-MC-3
		EMB19-02-MC-6
		EMB19-02-MC-8
		EMB19-02-OP-1
		EMB19-04-OC-1
		EMB19-04-SC-1
		EMB19-04-IC-1
NTFX5605	NAV Shelf Air Plenum	EMB19-04-000
NTFX57AA	Auxiliary Shelf Assembly	EMB19-04-AUX-1
		EMB19-04-002
NTFX58AB	Cooling Module	EMB19-04-000
NTFX5805	Cooling Shelf Assembly	EMB19-04-000
NTFX5811	Cooling Cage Assembly	EMB19-04-002
NTFX60AA	Power Converter	EMB19-02-AC-2
		EMB19-02-MC-1
		EMB19-02-MC-3
		EMB19-02-MC-6
		EMB19-02-MC-8
		EMB19-02-OP-1
		EMB19-04-OC-1
		EMB19-04-SC-1
		EMB19-04-IC-1
NTFX61BA	2.4GB Disk/DAT	EMB19-04-000

NTFX61DA	1.2 GB Disk Disk CP	EMB19-02-AC-2 EMB19-02-MC-1 EMB19-02-MC-3 EMB19-02-MC-6 EMB19-02-MC-8 EMB19-02-OP-1 EMB19-04-000
NTFX61EA	2.4GB/2.4GB Dual Disk	EMB19-04-000
NTFX62AA	Digital Trunk Link	EMB19-02-MC-1 EMB19-02-MC-3 EMB19-02-MC-6 EMB19-02-MC-8 EMB19-04-SDTL EMB19-04-RDTL EMB19-04-BDTL
NTFX63AA	Digital Trunk Link TM	EMB19-02-MC-1 EMB19-02-MC-3 EMB19-02-MC-6 EMB19-02-MC-8
NTFX63BA	DTL TM	EMB19-04-SDTL EMB19-04-RDTL EMB19-04-BDTL
NTFX64AA	Multichannel Telecom Link	EMB19-02-MC-1 EMB19-02-MC-3 EMB19-02-MC-6 EMB19-02-MC-8 EMB19-04-000
NTFX64BA	Multi-Channel Tel Link 56MHz	EMB19-04-000
NTFX65AA	Time Slot Interchange	EMB19-02-MC-1 EMB19-02-MC-3 EMB19-02-MC-6 EMB19-02-MC-8 EMB19-04-000
NTFX66AA	Filler Faceplate (front)	EMB19-02-AC-2 EMB19-02-MC-1 EMB19-02-MC-3 EMB19-02-MC-6 EMB19-02-MC-8 EMB19-02-OP-1 EMB19-04-000
NTFX67AA	Filler Faceplate (rear)	EMB19-02-AC-2 EMB19-02-MC-1 EMB19-02-MC-3 EMB19-02-MC-6 EMB19-02-MC-8 EMB19-02-OP-1 EMB19-04-000
NTFX75AA	Master Service Processor	EMB19-02-MC-1 EMB19-02-MC-3

NTFX75BA	Master Service Processor	EMB19-02-AC-2 EMB19-02-MC-6 EMB19-02-MC-8 EMB19-04-000
NTFX75CA	System Processor 33MHZ 64MB	EMB19-02-MC-1 EMB19-02-MC-3 EMB19-02-MC-6 EMB19-02-MC-8 EMB19-02-OP-1 EMB19-04-000
NTFX78AA	Speech Recognition Proc	EMB19-02-MC-1 EMB19-02-MC-3 EMB19-02-MC-6 EMB19-02-MC-8 EMB19-04-000
NTFX79AA	Input Output Contr (RS232)	EMB19-02-OP-1 EMB19-04-OC-1 EMB19-04-IC-1 EMB19-02-IOC-2
NTFX80AA	Input Output Contr (RS232)TM	EMB19-02-OP-1 EMB19-04-OC-1 EMB19-04-IC-1 EMB19-02-IOC-2
NTFX81AA	Input Output Cont (X.25)	EMB19-02-MC-1 EMB19-02-MC-3
NTFX81BA	Input Output Cont (X.25)	EMB19-02-AC-2 EMB19-02-IOC-3
NTFX82AA	Input Output Cont (X.25) TM	EMB19-02-MC-1 EMB19-02-MC-3
NTFX82BA	Input Output Cont (X.25) TM	EMB19-02-AC-2 EMB19-02-IOC-3
NTFX8511	DTL Cable Standard	EMB19-04-SDTL
NTFX8514	OA&M Telemetry Cable	EMB19-02-IOC-2
NTFX8525	Modem Alarm Cable	EMB19-04-MM-1
NTFX8526	Modem Power Jumper Cable	EMB19-04-000
NTFX8532	Modem Power Cable	EMB19-04-MM-1
NTFX8539	SCSI Jumper Cable	EMB19-04-AUX-1
NTFX8542	HUB 10BaseT Cable	EMB19-02-HUB2
NTFX8550	9-25 Pin Adapter Cable	EMB19-04-000
NTFX8551	Aux. Power Jumper Cable	EMB19-04-AUX-1
NTFX8557	Terminal I/F Cable	EMB19-04-HUB1 EMB19-02-HUB2
NTFX8558	DTL Cable	EMB19-04-RDTL
NTFX8563	V.35 Modem Cable	EMB19-04-UM
NTFX8564	Modem Cable 50-Pin	EMB19-04-MM-1
NTFX8565	TM Modem Cable	EMB19-02-IOC-3
NTFX8580	SCSI Cable	EMB19-04-000
NTFX91AA	Service Processor TM	EMB19-02-AC-2 EMB19-02-MC-1

		EMB19-02-MC-3
		EMB19-02-MC-6
		EMB19-02-MC-8
		EMB19-02-OP-1
		EMB19-04-000
		EMB19-04-OC-1
NTGX01AA	Service Peripheral Cabinet	EMB19-01-000
		EMB19-01-001
NTGX0105	Modem T&R Backup Cable Assy	EMB19-01-000
		EMB19-01-001
NTGX0201	Electronics Shelf Assembly	EMB19-01-000
		EMB19-01-001
NTGX0301	Disk Shelf Assembly	EMB19-01-000
		EMB19-01-001
NTGX04AA	MMAIL Bus Term Trans Mod PB	EMB19-01-000
		EMB19-01-001
NTGX04BA	MMAIL Bus Ext Trans Mod PB	EMB19-01-000
		EMB19-01-001
NTGX05AA	68K Main CP	EMB19-01-CP-1
		EMB19-01-CP-3
		EMB19-01-000
		EMB19-01-001
NTGX06AA	68K Transition Module PB	EMB19-01-CP-1
		EMB19-01-CP-3
		EMB19-01-000
		EMB19-01-001
NTGX07AA	Modem Transition Module PB	EMB19-01-CP-1
		EMB19-01-CP-3
		EMB19-01-000
		EMB19-01-001
NTGX08AA	T1 Main Circuit Pack	EMB19-01-CP-1
		EMB19-01-CP-3
		EMB19-01-000
		EMB19-01-001
NTGX09AA	T1 Transition Module PB	EMB19-01-CP-1
		EMB19-01-CP-3
		EMB19-01-000
		EMB19-01-001
NTGX10AA	Bus Controller Main CP	EMB19-01-000
		EMB19-01-001
NTGX11AA	Bus Cntr Transition Mod PB	EMB19-01-000
		EMB19-01-001
NTGX12AA	VP12 Circuit Pack	EMB19-01-CP-1
		EMB19-01-000
NTGX12AB	VP12 With 57 MHz DSPS CP	EMB19-01-CP-3
		EMB19-01-001
NTGX14AA	1200MB DISK MODULE ASSY	EMB19-01-HRS-1
		EMB19-01-000
		EMB19-01-001

NTGX14BA	DUAL 1200MB DISK MOD ASSY	EMB19-01-HRS-3
NTGX15AA	Disk Tape Module Assy	EMB19-01-000
		EMB19-01-001
NTMX1657	Inverter Frame Ground Kit	EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NTMX1658	Lamarche Jumper Ground Kit	EMB13-01-000
		EMB13-01-003
NTMX1665	Lamarche Frame Isolation Kit	EMB13-01-000
		EMB5-02-000
		EMB13-05-000
		EMB13-01-003
NTMX40ZA	MNET to MCTMI conversion kit	EMB10-08-000
		EMB10-08-001
NTMX4723	V.35 Cable Ass'y	EMB10-17-MCEX-1
		EMB10-17-001
NTMX4724	RS232 (EMPC) Cable Ass'y	EMB10-17-MCEX-1
		EMB10-17-001
NTMX4725	RS232 (HDLC) Cable Ass'y	EMB10-17-MCEX-1
		EMB10-17-001
NTMX4726	RS232 or Current Loop	EMB10-17-MCEX-1
		EMB10-17-001
NTMX70AA	Wiring Paddleboard Kit	EMB2-06-SMS-7
NTMX70AB	XPM+ Paddleboard Kit	EMB2-15-005
		EMB2-06-ZZ41DA
NTMX70AC	3P XPM Plus Paddlecard Kit	EMB2-06-ZZ41AA
NTMX71AA	Terminator Card	EMB2-06-DTC-5
		EMB2-06-DTC-6
		EMB2-06-DTP
		EMB2-06-LGC-2
		EMB2-06-LGC-3
		EMB2-06-LGC-6
		EMB2-06-LGC-7
		EMB2-06-LGP
		EMB2-06-LTC-2
		EMB2-06-LTC-3
		EMB2-06-LTC-6
		EMB2-06-LTC-7
		EMB2-06-LTP
		EMB2-06-SMA-12
		EMB2-06-SMA-14
		EMB2-06-SMA-16
		EMB2-06-SMS-5
		EMB2-06-SMS-7
		EMB2-06-SMS-8
		EMB2-06-SMSR-3
		EMB2-06-SMSR-5
		EMB2-06-SMU-11
		EMB2-06-SMU-14

		EMB2-06-SMU-15
		EMB2-06-SMU-2
		EMB2-06-SMU-9
		EMB2-06-UPI
		EMB2-15-RCCI-2
		EMB2-15-005
		EMB2-15-015
		EMB2-18-CPC-5
		EMB2-99-XPM-5
		EMB2-06-ZZ37BB
		EMB9-03-ICP-3
		EMB2-06-ZZ41DA
		EMB2-06-ZZ43AA
		EMB2-06-ZZ37AC
NTMX71BA	XPM+ Terminator Paddleboard	EMB2-06-ZZ41AA
NTMX72AA	Power Converter	EMB2-24-RCC-9
		EMB2-06-SMA-17
		EMB2-24-RCC-15
		EMB2-24-RCC-12
NTMX73AA	PCM Signalling Processor	EMB2-24-RCC-9
		EMB2-24-RCC-15
		EMB2-24-RCC-12
NTMX73AB	Signaling Circuit Pack	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX73BA	Signaling Processor	EMB2-06-SMA-17
NTMX74AA	DS30A Interface CP	EMB2-24-RCC-12
NTMX74AB	DS30A Interface CP	EMB2-24-RCC-9
		EMB2-24-RCC-15
		EMB2-24-RCC-12
NTMX75AA	Enhanced Matrix CP	EMB2-24-RCC-9
		EMB2-24-RCC-15
		EMB2-24-RCC-12
NTMX75BA	Enhanced Matrix CP	EMB2-06-SMA-17
NTMX76AA	EDC Messaging Pack	EMB2-06-LGC-3
		EMB2-06-LTC-3
		EMB2-06-MPT-3
		EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX76BA	MSG and CSM CP	EMB2-06-SMA-17
NTMX77AA	Unified Processor	EMB2-06-DTC-5
		EMB2-06-DTC-6
		EMB2-06-DTP
		EMB2-06-LGC-2
		EMB2-06-LGC-3
		EMB2-06-LGC-6
		EMB2-06-LGC-7
		EMB2-06-LGP
		EMB2-06-LTC-2
		EMB2-06-LTC-3

		EMB2-06-LTC-6
		EMB2-06-LTC-7
		EMB2-06-LTP
		EMB2-06-SMA-12
		EMB2-06-SMA-14
		EMB2-06-SMA-16
		EMB2-06-SMS-5
		EMB2-06-SMS-7
		EMB2-06-SMS-8
		EMB2-06-SMSR-3
		EMB2-06-SMSR-5
		EMB2-06-SMU-11
		EMB2-06-SMU-14
		EMB2-06-SMU-15
		EMB2-06-SMU-2
		EMB2-06-SMU-9
		EMB2-06-UPI
		EMB2-15-RCCI-2
		EMB2-15-005
		EMB2-15-015
		EMB2-18-CPC-5
		EMB2-99-XPM-5
		EMB2-06-ZZ37BB
		EMB2-24-RCC-9
		EMB9-03-ICP-3
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ43AA
		EMB2-06-ZZ37AC
NTMX77AB	Unified Processor	EMB2-06-SMA-17
NTMX81AA	Dual DS1 Packlet	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX82AA	Dual PCM30 Packlet	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX83AA	Filler Face Plate	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX8501	RCC2 CPM Shelf	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX87AA	Quad Carrier	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX89FA	Enhanced CRSC/LCM Kit	EMB2-24-RCC-27
NTMX89FB	Enhanced CRSC/ISDN Kit	EMB2-24-RCC-28
NTMX89KA	CRSC RCC2/RMM (TwistPr) Kit	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX89KG	CRSC/ISDN VF I/O Kit	EMB2-24-RCC-28
NTMX89KH	CRSC/LCM VF I/O Kit	EMB2-24-RCC-27
NTMX89KJ	CRSC/LCM MSP Kit	EMB2-24-RCC-27
NTMX89KK	CRSC/ISDN MSP Kit	EMB2-24-RCC-28
NTMX89KM	Internal Power Kit (Horiz.)	EMB2-24-RCC-27

		EMB2-24-RCC-28
NTMX89LA	RMM Repowering Kit	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX8903	Base Cabinet Kit	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX8904	External Power Kit (Vert.)	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX8909	Bulkhead 05 CPM Conn Plate	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX8950	C01/C02 to ALM1/2 Cable	EMB2-16-CAB-2
NTMX8967	Bulkhead 19 CPM Conn Plate	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTMX8969	Blkhd 33 Connector Plate	EMB2-24-RCC-27
NTMX8978	Blkhd 33 Connector Plate	EMB2-24-RCC-28
NTMX8982	Blkhd 47 Connector Plate	EMB2-24-RCC-27
NTMX8983	Blkhd 47 Connector Plate	EMB2-24-RCC-28
NTMX8998	BAMD Alarm/Power Cable	EMB2-16-CAB-3
NTMX97AA	Recording/Announcement	EMB2-16-VPU-1
NTMX99AA	Multi Channel C-Bus	EMB2-16-VPU-1
NTNX1113	ESD Modem Faceplate Kit	EMB13-05-000
NTNX1601	Power Cable Assembly	EMB2-20-AXU-1
		EMB2-20-DRA
		EMB2-20-MTM
		EMB2-25-AXU-5
		EMB2-25-DRA
		EMB2-25-MTM
NTNX1620	IOC/FSP Cable	EMB2-20-IOC-3
		EMB5-03-IOC-3
NTNX1621	IOC/FSP Cable	EMB2-20-IOC-3
		EMB5-03-IOC-3
NTNX1697	Stratum/FSP Cable	EMB2-20-ROS-1
		EMB5-03-ST1
		EMB5-03-ST2
NTNX22AA	Meridian Spare Storage Cab.	EMB10-14-000
		EMB10-14-001
		EMB10-14-MCSS-2
NTNX2201	Spare Storage Shelf Assy	EMB13-09-004
		EMB13-09-005
		EMB10-14-000
		EMB10-14-001
		EMB10-14-MCSS-2
NTNX2203	Spare Storage Shelf Assy	EMB13-09-004
		EMB13-09-005
NTNX24BA	Power Dist'n Panel	EMB10-12-000
		EMB10-12-MCAM-1
		EMB10-12-MCAM-2
NTNX24CB	Power Distribution Panel	EMB8-01-AAE
NTNX25AA	Meridian Cabinet Assy	EMB10-20-000
		EMB10-14-000

		EMB10-14-001
		EMB10-08-000
		EMB10-08-001
		EMB10-13-001
		EMB10-12-000
		EMB10-14-MCSS-2
		EMB10-17-MCEX-1
		EMB10-17-001
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB10-12-MCAM-1
		EMB10-12-MCAM-2
		EMB10-13-MCGM-1
		EMB10-13-MCGM-2
NTNX25BA	SL-100 Cabinet	EMB8-01-AAE
		EMB8-01-PCE
NTNX2513	Rt. Front/Rear Door (Grey)	EMB19-03-HDW-2
		EMB9-15-000
		EMB10-20-000
		EMB10-14-000
		EMB10-08-000
		EMB10-12-000
		EMB9-03-DRS-G
		EMB10-17-MCEX-1
		EMB10-20-MCTMI
		EMB10-12-MCAM-1
		EMB10-13-MCGM-1
		EMB9-15-MDSP-1
NTNX2515	Lt. Front/Rear Door (Grey)	EMB19-03-HDW-2
		EMB9-15-000
		EMB10-20-000
		EMB10-14-000
		EMB10-08-000
		EMB10-12-000
		EMB9-03-DRS-G
		EMB10-17-MCEX-1
		EMB10-20-MCTMI
		EMB10-12-MCAM-1
		EMB10-13-MCGM-1
		EMB9-15-MDSP-1
NTNX2517	Right End Panel (Grey)	EMB19-03-LEC-2
		EMB9-15-000
		EMB10-12-000
		EMB9-03-DRS-G
NTNX2518	Left End Panel (Grey)	EMB19-03-LEC-2
		EMB9-15-000
		EMB10-12-000
		EMB9-03-DRS-G
NTNX2519	Frame and Logic Ground Kit	EMB2-20-007

NTNX2527	Right Rear Door Assy	EMB3-07-000 EMB8-01-AAE EMB8-01-PCE
NTNX2529	Left Rear Door Assy	EMB8-01-AAE EMB8-01-PCE
NTNX2531	Right End Panel (Brown)	EMB19-03-LEC-1 EMB8-01-AAE EMB8-01-000 EMB9-15-000
NTNX2532	Left End Panel (Brown)	EMB19-03-LEC-1 EMB8-01-AAE EMB8-01-000 EMB9-15-000
NTNX2536	Right Front Door Assy	EMB8-01-AAE EMB8-01-PCE
NTNX2538	Left Front Door Assy	EMB8-01-AAE EMB8-01-PCE
NTNX2540	Earthquake Mounting Kit	EMB9-15-000 EMB10-20-000 EMB10-14-000 EMB10-14-001 EMB10-08-000 EMB10-08-001 EMB10-13-001 EMB10-12-000 EMB9-03-DRS-G EMB9-03-DRS-B EMB10-14-MCSS-2 EMB10-17-MCEX-1 EMB10-17-001 EMB10-21-MCTMI EMB10-20-MCTMI
NTNX2544	Adjacent Frame Attach H/W	EMB8-01-000
NTNX2545	EMI Contact H/W Kit	EMB19-03-AIK-1 EMB8-01-000
NTNX2546	End Panel Right - Brown	EMB9-03-DRS-B
NTNX2550	Lt. Front/Rear Door (Brown)	EMB19-03-HDW-1 EMB10-14-001 EMB10-08-001 EMB10-13-001 EMB9-03-DRS-B EMB10-14-MCSS-2 EMB10-17-001 EMB10-21-MCTMI EMB10-12-MCAM-2 EMB10-13-MCGM-2 EMB9-15-MDSP-2
NTNX2552	Rt. Front/Rear Door (Brown)	EMB19-03-HDW-1 EMB10-14-001

		EMB10-08-001
		EMB10-13-001
		EMB9-03-DRS-B
		EMB10-14-MCSS-2
		EMB10-17-001
		EMB10-21-MCTMI
		EMB10-12-MCAM-2
		EMB10-13-MCGM-2
		EMB9-15-MDSP-2
NTNX2553	End Panel Left - Brown	EMB9-03-DRS-B
NTNX2556	Cable Duct Cover Kit (Top)	EMB9-03-DRS-G
		EMB9-03-DRS-B
NTNX2557	Cable Duct Cover Kit (Bot.)	EMB9-03-DRS-G
		EMB9-03-DRS-B
NTNX2578	Earthquake Mounting Kit	EMB9-15-000
		EMB10-20-000
		EMB10-14-000
		EMB10-14-001
		EMB10-08-000
		EMB10-08-001
		EMB10-13-001
		EMB10-12-000
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB10-14-MCSS-2
		EMB10-17-MCEX-1
		EMB10-17-001
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX2579	Frame Mounting Kit	EMB9-15-000
		EMB10-20-000
		EMB10-14-000
		EMB10-14-001
		EMB10-08-000
		EMB10-08-001
		EMB10-13-001
		EMB10-12-000
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB10-14-MCSS-2
		EMB10-17-MCEX-1
		EMB10-17-001
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX2580	Frame Mounting Kit	EMB9-15-000
		EMB10-20-000
		EMB10-14-000
		EMB10-14-001
		EMB10-08-000

		EMB10-08-001
		EMB10-13-001
		EMB10-12-000
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB10-14-MCSS-2
		EMB10-17-MCEX-1
		EMB10-17-001
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX26CA	Frame Supervisory Panel	EMB8-01-PCE
NTNX26GA	Frame Supervisory Panel	EMB9-15-000
		EMB9-03-DRS-G
		EMB9-03-DRS-B
NTNX26HA	Frame Supervisory Panel	EMB9-15-MDSP-1
		EMB9-15-MDSP-2
NTNX26MA	Frame Supervisory Panel	EMB2-20-006
		EMB5-03-001
		EMB10-13-001
		EMB10-13-MCGM-1
		EMB10-13-MCGM-2
NTNX26NA	Frame Supv Panel	EMB10-20-000
		EMB10-08-000
		EMB10-08-001
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX2656	Power Cable Assembly	EMB16-02-010
		EMB16-02-019
		EMB16-02-000
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NTNX27BA	Cooling Unit	EMB8-01-PCE
NTNX27CA	Cooling Unit	EMB2-20-006
		EMB2-20-007
		EMB3-07-000
		EMB5-03-001
		EMB9-15-000
		EMB10-20-000
		EMB10-08-000
		EMB10-08-001
		EMB10-13-001
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB10-13-MCGM-1
		EMB10-13-MCGM-2

		EMB9-15-MDSP-1
		EMB9-15-MDSP-2
NTNX29AB	STM DRAM Wiring Option	EMB10-13-001
		EMB10-12-000
NTNX29AC	STM CODEC Wiring Option	EMB10-13-001
		EMB10-12-000
NTNX2911	Bus Bar Assembly	EMB13-01-005
NTNX32AA	MCEX Cabinet	EMB10-17-MCEX-1
		EMB10-17-001
NTNX32PA	Mag Tape Drive Wiring Kit	EMB10-17-MCEX-1
		EMB10-17-001
NTNX33CA	MCTM - ISDN Cabinet	EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX33CP	37 Pin cover plate	EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX33DS	DS30A Fiber Interface	EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX33DT	DS30A Fiber Interface	EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX33DU	DS30A Fiber Interface	EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX33DV	DS1 Link Interface	EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX33EE	External DS-30 Cable Kit	EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX33SD	DS-512 Fiber Interface	EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX33TS	ICP Module Wiring Kit	EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX33ZA	XPM Plus Upgrade Kit	EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX3309	CII/DS1/M20/PCM30 Backplane	EMB2-06-ZZ37AC
NTNX3310	to Bulkhead Cable Assemblies	EMB2-06-ZZ37AC
NTNX3401	Dual I/O Equipment Shelf	EMB10-13-001
		EMB10-17-MCEX-1
		EMB10-17-001
NTNX36AE	Cable Assembly	EMB2-06-ZZ37AC
NTNX3601	ECC Cable Assembly	EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
NTNX37AB	MCAM Cabinet	EMB10-12-000
		EMB10-12-MCAM-1
		EMB10-12-MCAM-2

NTNX37ED	EDRAM Wiring Option Kit	EMB10-12-000
NTNX37NH	MCAM Common CP (PTM sh. 47)	EMB10-12-000
NTNX37WA	MTM Wiring Option Kit	EMB9-03-PTM-1
		EMB10-12-000
NTNX40AA	Meridian Net/Cont Module	EMB10-08-000
		EMB10-08-001
NTNX4005	Temperature Sensor	EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTNX47AG	MCGM MTM Hardware Kit	EMB10-13-001
NTNX47AH	MCGM MTM Hardware Kit	EMB10-13-001
NTNX47AJ	MCGM MTM Hardware Kit	EMB10-13-001
NTNX47AK	MCGM DDU Hardware Kit	EMB10-13-001
NTNX47AN	MCGM Modem Hardware Kit	EMB10-13-001
NTNX47AS	MCGM ROS Hardware Kit	EMB10-13-001
NTNX47BA	MCGM Cabinet	EMB10-13-001
		EMB10-13-MCGM-1
		EMB10-13-MCGM-2
NTNX47BC	MCGM DIO Hardware Kit	EMB10-13-001
NTNX47BD	MCGM STM Hardware Kit	EMB10-13-001
NTNX47BE	MCGM STM Hardware Kit	EMB10-13-001
NTNX47BF	MCGM STM Hardware Kit	EMB10-13-001
NTNX47BG	MCGM STM Hardware Kit	EMB10-13-001
NTNX47BH	MCGM MTM/DRA Hardware Kit	EMB10-13-001
NTNX47BJ	MCGM MTM/DRA Hardware Kit	EMB10-13-001
NTNX47BK	MCGM MTM/DRA Hardware Kit	EMB10-13-001
NTNX47BL	DIO/Modem hardware Kit (1pr)	EMB10-13-001
NTNX47BM	DIO/Modem hardware Kit (2pr)	EMB10-13-001
NTNX4740	Network Port Cable (PL0)	EMB10-13-001
NTNX4741	Network Port Cable (PL1)	EMB10-13-001
NTNX4757	MTD Cable (READ)	EMB10-13-001
NTNX4758	MTD Cable (WRITE)	EMB10-13-001
NTNX4759	MTD Cable (CONTROL)	EMB10-13-001
NTNX51BD	TOPS MPX Digital Audio Card	EMB8-02-MPX-10
		EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
NTNX51BE	TOPS MPX Digital Audio Card	EMB8-02-MPX-11
		EMB8-02-006
NTNX51HA	Keyboard, Engl IBM DA AOSS	EMB8-02-002
NTNX51HB	TOPS MPX Keybd, Combined Eng	EMB8-02-003
		EMB8-02-004
		EMB8-02-006
NTNX51HC	Keycap Upgrade Kit	EMB8-02-003
		EMB8-02-004
		EMB8-02-006
NTNX51HD	TOPS MPX Keybd, Combined Fre	EMB8-02-003
		EMB8-02-004

NTNX51HE	Keycap Upgrade Kit	EMB8-02-006 EMB8-02-003 EMB8-02-004 EMB8-02-006
NTNX51KD	80 MB Hard Drive Kit	EMB8-02-004 EMB8-02-006
NTNX51KG	4 Meg Memory Kit for 386	EMB8-02-004 EMB8-02-006
NTNX51KH	106 or 212 MB Hd Dr for 386	EMB8-02-004 EMB8-02-006
NTNX51LA	Color Monitor 8512	EMB8-02-003
NTNX51LC	Color Monitor 9518	EMB8-02-002 EMB8-02-003 EMB8-02-004 EMB8-02-006
NTNX51LD	Color Monitor 9524	EMB8-02-MPX-10 EMB8-02-MPX-11 EMB8-02-002 EMB8-02-003 EMB8-02-004 EMB8-02-006
NTNX51LF	15" Color Monitor	EMB8-02-006
NTNX51LG	17" Color Monitor	EMB8-02-006
NTNX51NB	TOPS MPX ISA Position	EMB8-02-MPX-12
NTNX51PB	TOPS MPX Position	EMB8-02-MPX-10 EMB8-02-MPX-11 EMB8-02-MPX-10 EMB8-02-MPX-11
NTNX5122	Cbl Mgmt Brkt Model 57	EMB8-02-006 EMB8-02-002 EMB8-02-003 EMB8-02-004 EMB8-02-006
NTNX5154	Data Set Unit (GDC 56K)	EMB8-02-002 EMB8-02-003 EMB8-02-004 EMB8-02-006
NTNX52BC	ISA Audio Card	EMB8-02-006 EMB8-02-MPX-12
NTNX5305	Ground Bar	EMB8-01-000
NTNX5308	HEADSET JACK ASSEMBLY	EMB8-02-JA-2
NTNX5309	HEADSET JACK ASSEMBLY	EMB8-02-JA-3
NTNX54BA	Aluminum Shield CP	EMB8-01-PCE EMB8-02-TPC
NTNX55AA	Cable Trough (Brown)	EMB19-03-000 EMB19-03-001 EMB19-03-002 EMB19-03-003 EMB19-03-006 EMB19-03-007 EMB8-01-000 EMB9-03-DRS-B
NTNX5511	Cable Trough (Grey)	EMB19-03-000

		EMB19-03-001
		EMB19-03-002
		EMB19-03-003
		EMB19-03-006
		EMB19-03-007
		EMB2-20-006
		EMB2-20-007
		EMB3-07-000
		EMB3-08-000
		EMB3-09-000
		EMB5-03-001
		EMB9-03-DRS-G
NTNX56AA	Raised Flr. Anchor Assembly	EMB19-03-AIK-1
		EMB8-01-000
NTNX56BA	Furniture Concrete Flr Anchr	EMB8-01-000
NTNX56CA	Furniture Raised Flr Anchor	EMB8-01-000
NTNX57AC	Auxiliary Access Equipment	EMB8-01-AAE
NTNX57AD	MOUNTING HARDWARE KIT	EMB8-01-MSA
NTNX5707	Hazard Plate Assembly	EMB8-01-AAE
NTNX5708	AAE Bulkhead Assy	EMB8-01-AAE
NTNX5717	PC Kit for Dual HSDA	EMB8-01-AAE
NTNX60AA	Pos'n Controller Equipment	EMB8-01-PCE
NTNX6022	PCE EMI Bulkhead Assy	EMB8-01-PCE
NTNX61AF	TPC Pack Fill	EMB8-02-TPC
NTNX6101	TPC Shelf Assy	EMB8-01-PCE
NTNX62AB	HIGH SPEED LINE ACCESS CP	EMB8-02-HSLA
NTNX63AB	4 Megabyte Memory CP	EMB8-02-TPC
NTNX64AB	Single Board Computer CP	EMB8-02-TPC
NTNX65BA	Parallel Input/Output CP	EMB8-02-TPC
NTNX66AA	HIGH SPEED DATA ACCESS CP	EMB8-02-HSDA
NTNX67BA	TOPS EMI Shield/Load CP	EMB8-02-TPC
NTNX68CA	Floppy Disk and Control CP	EMB8-02-TPC
NTNX68DA	Hard Drive and Control CP	EMB8-02-TPC
NTNX69AA	Cassy, HSDA/GDC 56K Modems	EMB5-01-DPP-3
NTNX69AB	CABLE ASSEMBLY 35"	EMB2-20-DPP
		EMB5-03-DPP
		EMB5-03-DP1
NTNX69AC	CABLE ASSEMBLY	EMB2-20-DPP
		EMB5-03-DPP
		EMB5-03-DP1
NTOJ14EA	26" Rack-mount Adapter	EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NTOX50AA	Filler Face Plate	EMB10-13-001
NTRX01AK	Connector Plate Assy Return	EMB4-05-BUL
NTRX01AM	Connector Plate Assy Feed	EMB4-05-BUL
NTRX02CA	CB Shelf Assy (30A)	EMB13-05-003
		EMB16-02-003
NTRX02CD	CB Shelf Assy(S/DMS)	EMB16-02-003

NTRX0232	Shelf Busbar Kit	EMB16-02-003
NTRX0245	Shelf Busbar Kit	EMB13-05-003
NTRX07AB	END PANEL ASSY KIT (GREY)	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NTRX07AE	END PANEL ASSY KIT (BROWN)	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NTRX1670	POWER AND RETURN CABLE ASSY	EMB2-16-CAB-1
		EMB13-01-005
NTRX25AA	C28B Mechanical Assembly	EMB13-09-004
		EMB2-06-ZZ37AB
		EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-09-TME-1
		EMB2-09-TME-3
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB19-04-000
		EMB19-04-001
		EMB19-04-002
		EMB2-09-CPE-2
		EMB2-09-CPE-3
		EMB13-05-003
		EMB13-09-005
		EMB2-02-ISM-1
		EMB5-03-002
		EMB13-01-005
		EMB16-02-003
		EMB2-06-ZZ37AC
		EMB2-09-LCE-6
NTRX25AG	Ringin Gen Shelf Assy	EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB2-09-LCE-6
NTRX25AK	Ringin Generator Filler	EMB2-09-LCE-4
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB2-09-LCE-6
NTRX2513	EMI Ready Door Kit	EMB2-20-006
		EMB2-20-007

		EMB3-07-000
		EMB3-08-000
		EMB3-09-000
		EMB5-03-001
NTRX2516	EMI Kit (EMI Doors)	EMB2-20-006
		EMB2-20-007
		EMB3-07-000
		EMB5-03-001
NTRX2517	EMI KIT (EMI DOORS)	EMB3-08-000
		EMB3-09-000
NTRX2518	FRAME GROUND KIT	EMB3-08-000
		EMB3-09-000
NTRX2520	Frame/Logic Gnd Cluster Kit	EMB2-20-006
		EMB5-03-002
		EMB5-03-001
NTRX2523	Leveling Foot Kit	EMB2-06-ZZ37AB
		EMB2-20-006
		EMB2-20-007
		EMB3-07-000
		EMB3-08-000
		EMB3-09-000
		EMB19-04-000
		EMB19-04-001
		EMB19-04-002
		EMB5-03-001
NTRX2549	EMI Shielding Kit	EMB2-09-CPE-2
NTRX2551	Bulkhead-RH	EMB2-09-LCE-4
		EMB2-09-LCE-6
NTRX2567	Door Kit Grey Top-Latch	EMB19-04-000
		EMB19-04-001
		EMB19-04-002
NTRX2568	Door Kit Center Latch, Gray	EMB2-06-ZZ37AB
		EMB2-09-TME
		EMB3-01-001
		EMB19-04-000
		EMB19-04-001
		EMB19-04-002
NTRX2572	Spare Fuse Holder	EMB16-02-003
NTRX2573	Spare Fuse Card	EMB13-05-003
NTRX30CA	Cab. Line Conc. Equip. Frame	EMB2-09-LCE-2
		EMB2-09-LCE-3
NTRX30DA	Cabinetized LCE ISDN Model B	EMB2-09-LCE-4
		EMB2-09-LCE-6
NTRX30JA	MTA Filter Kit	EMB2-09-LCE-4
		EMB2-09-LCE-6
NTRX30PC	Internal Horizontal Pwr Kit	EMB2-09-LCE-4
		EMB2-09-LCE-6
NTRX30PG	External Power Filter Kit	EMB2-09-LCE-4
		EMB2-09-LCE-6

NTRX30PH	External Power Filter Kit	EMB2-09-LCE-2 EMB2-09-LCE-3
NTRX30PJ	Horizontal Power Kit	EMB2-09-LCE-2 EMB2-09-LCE-3
NTRX3082	MSP Kit	EMB2-09-LCE-4 EMB2-09-LCE-6
NTRX3084	MSP Kit	EMB2-09-LCE-2 EMB2-09-LCE-3
NTRX31CA	Cab. Power Distrib. Center	EMB16-02-003
NTRX31CJ	Lamarche Inverter Kit	EMB13-05-003 EMB16-02-003
NTRX31CQ	Shelf End Busbar Insulators	EMB16-02-003
NTRX31CW	Cabinet Busbar Assembly	EMB16-02-003
NTRX31CY	Inverter Filler Kit	EMB16-02-003
NTRX31DH	500VA AC 500W Inverter	EMB13-01-000 EMB5-02-000 EMB19-02-INV EMB13-05-003 EMB13-05-000 EMB13-01-005 EMB13-01-003 EMB16-02-003
NTRX31DJ	500VA AC Inverter Kit	EMB13-05-003 EMB16-02-003
NTRX31EA	CRME CABINET	EMB13-05-003
NTRX31EB	CRME MISC Fuse Card Kit	EMB13-05-003
NTRX3132	Shelf Power Cable	EMB13-05-003
NTRX3133	Cover, Top-Kit	EMB13-01-005
NTRX3134	Cover, Bottom- Kit	EMB13-05-003 EMB13-01-005 EMB16-02-003
NTRX3135	CPDC MSP Kit	EMB16-02-003
NTRX3137	EAS Alarm Cable Assy	EMB16-02-003
NTRX3143	Bottom Feed Cable Bracket	EMB13-05-003
NTRX3145	CRME MSP Kit	EMB13-05-003
NTRX3148	Power Kit	EMB13-05-003
NTRX3151	EAS Alarm Harness	EMB13-05-003
NTRX3164	Inverter Cable Assembly	EMB13-05-003
NTRX32CA	Cabinetized Trunk Module	EMB2-09-TME EMB2-09-TME-1 EMB2-09-TME-3
NTRX32CC	Ext Power Filter Cable Kit	EMB2-09-TME EMB2-09-TME-1 EMB2-09-TME-3
NTRX32CD	Horizontal Power Kit	EMB2-09-TME-1 EMB2-09-TME-3
NTRX32DA	Bulkhead Cabling	EMB2-01-MTM-10 EMB2-01-MTM-6 EMB2-01-MTM-7

		EMB2-01-MTM-8
		EMB2-01-MTM-9
		EMB2-25-AXU-3
		EMB2-25-AXU-4
NTRX32DB	Bulkhead Cabling	EMB2-01-MTM-10
		EMB2-01-MTM-6
		EMB2-01-MTM-7
		EMB2-01-MTM-8
		EMB2-01-MTM-9
NTRX32DC	Bulkhead Cabling	EMB2-01-MTM-10
		EMB2-01-MTM-7
		EMB2-01-MTM-8
NTRX32DD	AXU Bulkhead Cabling	EMB2-25-AXU-3
		EMB2-25-AXU-4
NTRX32DG	AXU Bulkhead Cabling	EMB2-25-AXU-3
		EMB2-25-AXU-4
NTRX32DT	Bulkhead Cabling	EMB2-09-TME
		EMB2-09-TME-1
		EMB2-09-TME-3
NTRX32DU	TM8 Local Cable Assy	EMB2-01-TM8-2
		EMB2-01-TM8-3
		EMB2-01-T8A-1
		EMB2-01-T8B-1
NTRX32DV	Bulkhead Cabling	EMB2-09-TME
		EMB2-09-TME-1
		EMB2-09-TME-3
NTRX32DW	Bulkhead Cabling	EMB2-09-TME
		EMB2-09-TME-1
		EMB2-09-TME-3
NTRX32DX	Bulkhead Cabling	EMB2-09-TME
		EMB2-09-TME-1
		EMB2-09-TME-3
NTRX32DY	Bulkhead Cabling	EMB2-09-TME
		EMB2-09-TME-1
		EMB2-09-TME-3
NTRX32DZ	Bulkhead Cabling	EMB2-09-TME
		EMB2-09-TME-1
		EMB2-09-TME-3
NTRX32EA	37-Pin D-Sub Conn (TM to	EMB2-01-TM8-2
		EMB2-01-TM8-3
		EMB2-01-T8A-1
		EMB2-01-T8B-1
		EMB2-09-TME
NTRX32EB	AXU Bulkhead Cabling	EMB2-20-AXU-1
		EMB2-25-AXU-3
		EMB2-25-AXU-4
		EMB2-25-AXU-5
NTRX32EC	AXU Bulkhead Cabling	EMB2-20-AXU-1
		EMB2-25-AXU-3

NTRX32ED	AXU Bulkhead Cabling	EMB2-25-AXU-4 EMB2-25-AXU-5 EMB2-20-AXU-1 EMB2-25-AXU-3 EMB2-25-AXU-4 EMB2-25-AXU-5 EMB2-02-ISM-1
NTRX32EE	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-3 EMB2-25-AXU-4 EMB2-25-AXU-5 EMB2-02-ISM-1
NTRX32EF	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-3 EMB2-25-AXU-4 EMB2-25-AXU-5 EMB2-02-ISM-1
NTRX32EG	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-3 EMB2-25-AXU-4 EMB2-25-AXU-5 EMB2-02-ISM-1
NTRX32EH	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-3 EMB2-25-AXU-4 EMB2-25-AXU-5 EMB2-02-ISM-1
NTRX32EJ	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-3 EMB2-25-AXU-4 EMB2-25-AXU-5 EMB2-02-ISM-1
NTRX32EK	AXU Bulkhead Cabling	EMB2-25-AXU-3 EMB2-25-AXU-4
NTRX32EL	CTME MSP Kit (Cab 00)	EMB2-01-MSP-1 EMB2-01-MSP-4
NTRX32EM	CTME MSP Kit (Cab 01)	EMB2-01-MSP-2 EMB2-01-MSP-5
NTRX32EN	CTME MSP Kit (Cab 02-nn)	EMB2-01-MSP-3 EMB2-01-MSP-6
NTRX32EP	AXU Bulkhead Cabling	EMB2-25-AXU-3 EMB2-25-AXU-4
NTRX32EQ	AXU Bulkhead Cabling	EMB2-25-AXU-3 EMB2-25-AXU-4
NTRX32ER	AXU Bulkhead Cabling	EMB2-25-AXU-3 EMB2-25-AXU-4
NTRX32WA	EDRAM Wiring List	EMB2-09-TME EMB2-09-TME-1 EMB2-09-TME-3

NTRX32WX	CTME WIRING KIT (MTM-00)	EMB2-01-MSP-1 EMB2-01-MSP-4
NTRX32WY	CTME WIRING KIT (MTM-01)	EMB2-01-MSP-2 EMB2-01-MSP-5
NTRX32WZ	CTME Wiring Kit (MTM-02)	EMB2-01-MSP-3 EMB2-01-MSP-6
NTRX3220	OAU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-20-DRA EMB2-20-MTM EMB2-25-AXU-5 EMB2-25-DRA EMB2-25-MTM
NTRX3221	Bulkhead Cabling	EMB2-20-DRA EMB2-20-MTM EMB2-25-DRA EMB2-25-MTM
NTRX3222	Bulkhead Cabling	EMB2-20-MTM EMB2-25-MTM
NTRX3223	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-5
NTRX3224	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-5
NTRX3225	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-5
NTRX3226	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-5
NTRX3227	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-5
NTRX3228	AXU Bulkhead Cabling	EMB2-20-AXU-1 EMB2-25-AXU-5
NTRX3232	TM8 Bulkhead Cable Assembly	EMB2-20-TM8 EMB2-20-T8A EMB2-25-TM8
NTRX3242	AXU-OAU Cabling	EMB2-20-AXU-1 EMB2-25-AXU-3 EMB2-25-AXU-4 EMB2-25-AXU-5
NTRX3243	AXU-OAU Cabling	EMB2-20-AXU-1 EMB2-25-AXU-3 EMB2-25-AXU-4 EMB2-25-AXU-5
NTRX3244	AXU-OAU Cabling	EMB2-20-AXU-1 EMB2-25-AXU-3 EMB2-25-AXU-4 EMB2-25-AXU-5
NTRX3253	Filter Adapter Mounting Kit	EMB2-01-MTM-10 EMB2-01-MTM-6 EMB2-01-MTM-7 EMB2-01-MTM-8

		EMB2-01-MTM-9
		EMB2-01-TM8-2
		EMB2-01-TM8-3
		EMB2-01-T8A-1
		EMB2-01-T8B-1
		EMB2-25-AXU-3
		EMB2-25-AXU-4
NTRX3255	Fan Mgmt Unit Pwr Module Kit	EMB2-01-MSP-1
		EMB2-01-MSP-2
		EMB2-01-MSP-3
		EMB2-01-MSP-4
		EMB2-01-MSP-5
		EMB2-01-MSP-6
		EMB2-09-TME
		EMB2-09-TME-1
NTRX3256	37-Pin Cover Plate Kit	EMB2-06-ZZ37AB
		EMB2-09-TME
		EMB2-09-TME-1
		EMB2-09-TME-3
NTRX3257	Stud Cover Kit	EMB2-01-MTM-10
		EMB2-01-MTM-6
		EMB2-01-MTM-7
		EMB2-01-MTM-9
		EMB2-25-AXU-3
		EMB2-25-AXU-4
NTRX3258	Stud Cover Kit TM8	EMB2-01-TM8-2
		EMB2-01-TM8-3
		EMB2-01-T8A-1
		EMB2-01-T8B-1
NTRX33AA	Cabinetized I/O Equipment	EMB2-20-006
		EMB5-03-001
NTRX33DA	Cabinetized I/O Equipment	EMB5-03-002
NTRX33DY	CIOE Horizontal Cabling Kit	EMB5-03-002
NTRX33DZ	CIOE Ext. Power Filter Kit	EMB5-03-002
NTRX33EA	Stratum/Bulkhead Cable	EMB2-20-ROS-3
		EMB2-20-ROS-4
NTRX33EB	Stratum/Bulkhead Cable	EMB2-20-ROS-3
		EMB2-20-ROS-4
NTRX33EC	DPP/Bulkhead Cable	EMB5-03-DPP-2
NTRX33ED	DPP/Bulkhead Cable	EMB5-03-DPP-2
NTRX33EE	DPP/Bulkhead Cable	EMB5-03-DPP-2
NTRX33EF	DPP/Bulkhead Cable	EMB5-03-DPP-2
NTRX33EH	IOC/Bulkhead Cable	EMB5-03-002
NTRX33FG	IOC/Bulkhead Cable	EMB2-20-IOC-3
		EMB5-03-IOC-2
		EMB5-03-IOC-3
NTRX33FH	IOC/Bulkhead Cable	EMB2-20-IOC-3
		EMB5-03-IOC-2
		EMB5-03-IOC-3

NTRX33FJ	IOC/Bulkhead Cable	EMB5-03-002 EMB2-20-IOC-3 EMB5-03-IOC-2 EMB5-03-IOC-3
NTRX33FK	IOC/Bulkhead Cable	EMB2-20-IOC-3 EMB5-03-IOC-2 EMB5-03-IOC-3
NTRX33MB	Power & Control Cassy	EMB5-03-IOC-2
NTRX33MC	Power Cable Assembly	EMB5-03-MTD-2 EMB5-03-MTD-3 EMB5-03-002
NTRX33MD	Power & Control Cassy	EMB5-03-002
NTRX33ME	Power & Control Cassy	EMB5-03-002
NTRX33MF	Power & Control Cassy	EMB5-03-002
NTRX33MG	Power & Control Cassy	EMB5-03-002
NTRX33WA	Wiring Option	EMB2-20-IOC-3 EMB5-03-001
NTRX33WB	Wiring Option	EMB2-20-IOC-3 EMB5-03-001
NTRX33WC	Even CIOE, IOC Power Feed	EMB5-03-002
NTRX33WD	Odd CIOE, IOC Power Feed	EMB5-03-002
NTRX3320	MTD CABLE ASSEMBLY 79" BLK	EMB2-20-MTD EMB5-03-MTD
NTRX3321	MTD CABLE ASSEMBLY 79" RED	EMB2-20-MTD EMB5-03-MTD
NTRX3325	Stratum/Bulkhead Cable	EMB2-20-ROS-1 EMB5-03-ST1 EMB5-03-ST2
NTRX3326	Stratum/Bulkhead Cable	EMB2-20-ROS-1 EMB5-03-ST1 EMB5-03-ST2
NTRX3330	DPP/BULKHEAD CABLE	EMB2-20-DPP EMB5-03-DPP EMB5-03-DP1 EMB5-03-001
NTRX3331	DPP/BULKHEAD CABLE	EMB2-20-DPP EMB5-03-DPP EMB5-03-DP1 EMB5-03-001
NTRX3332	DPP/BULKHEAD CABLE	EMB2-20-DPP EMB5-03-DPP EMB5-03-DP1 EMB5-03-001
NTRX3333	DPP/BULKHEAD CABLE	EMB2-20-DPP EMB5-03-DPP EMB5-03-DP1 EMB5-03-001
NTRX3365	Stratum Interlock Cassy	EMB2-20-ROS-3 EMB2-20-ROS-4

NTRX3373	Modular Supervisory Panel Kit	EMB5-03-002
NTRX34DS	CMIS Conn Plate Bulkhead	EMB13-01-005
NTRX34DT	CMIS Connect Plate Bulkhead	EMB13-01-005
NTRX34FO	115 V ac Power Cable Assy	EMB13-01-005
NTRX34LA	480 Pin Terminal Block Assy	EMB13-01-005
NTRX34LF	Power Cable	EMB13-08-CDA-1
		EMB13-08-CDA-10
		EMB13-08-CDA-2
		EMB13-08-CDA-3
		EMB13-08-CDA-4
		EMB13-08-CDA-5
		EMB13-08-CDA-6
		EMB13-08-CDA-7
		EMB13-08-CDA-8
		EMB13-08-CDA-9
NTRX34MV	Cable Assembly (Chan 1-4)	EMB13-08-CDA-1
		EMB13-08-CDA-10
		EMB13-08-CDA-2
		EMB13-08-CDA-3
		EMB13-08-CDA-4
		EMB13-08-CDA-5
		EMB13-08-CDA-6
		EMB13-08-CDA-7
		EMB13-08-CDA-8
		EMB13-08-CDA-9
NTRX34MW	Cable Assembly (Chan 5-8)	EMB13-08-CDA-10
		EMB13-08-CDA-2
		EMB13-08-CDA-7
		EMB13-08-CDA-8
		EMB13-08-CDA-9
NTRX34MX	Grounding Cable	EMB13-08-CDA-1
		EMB13-08-CDA-10
		EMB13-08-CDA-2
		EMB13-08-CDA-3
		EMB13-08-CDA-4
		EMB13-08-CDA-5
		EMB13-08-CDA-6
		EMB13-08-CDA-7
		EMB13-08-CDA-8
		EMB13-08-CDA-9
NTRX34WF	DTH/ROTL Wiring	EMB13-08-DTH-1
NTRX35AA	Cabinet Dual Shelf Network	EMB2-20-007
		EMB3-07-000
NTRX35CA	Cabinet Dual Shelf Network	EMB3-01-001
NTRX35MG	External Filter Power Kit	EMB3-01-001
NTRX3523	Network Shelf Cables	EMB2-20-007
		EMB3-07-NCK-2
NTRX3524	Network Shelf Cables	EMB2-20-007
		EMB3-07-NCK-2

NTRX3531	Power & Ground Cover Kit	EMB2-20-007
NTRX3536	CDSN Transmit Cable Assy	EMB3-01-001
NTRX3537	CDSN Receive Cable Assy	EMB3-01-001
NTRX3541	C28 English Label Kit	EMB13-09-004
		EMB2-06-ZZ37AB
		EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-09-TME
		EMB2-09-TME-1
		EMB2-09-TME-3
		EMB3-01-001
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB2-09-CPE-2
		EMB2-09-CPE-3
		EMB13-05-003
		EMB13-09-005
		EMB2-02-ISM-1
		EMB5-03-002
		EMB13-01-005
		EMB16-02-003
		EMB2-06-ZZ37AC
		EMB2-09-LCE-6
NTRX3542	C28 German Label Kit	EMB2-06-ZZ37AB
		EMB13-09-005
		EMB2-06-ZZ37AC
		EMB2-09-LCE-6
NTRX3546	CDSN Mod Supervisory Panel	EMB3-01-001
NTRX36BA	Cab. Common Periph. Equip.	EMB2-09-CPE-2
		EMB2-09-CPE-3
NTRX36KA	External Power kit	EMB2-09-CPE-2
		EMB2-09-CPE-3
NTRX36KB	Internal Horizontal Power	EMB2-09-CPE-2
		EMB2-09-CPE-3
NTRX36NI	Jumper Kit for Base	EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
		EMB10-20-000
		EMB10-08-000
		EMB10-08-001
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTRX3612	DS30A Inter Cable Assembly	EMB2-06-ZZ37AC
NTRX3652	COVER PLATE KIT	EMB2-26-FIL
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTRX3654	COVER PLATE KIT	EMB2-26-FIL
		EMB2-09-CPE-2

NTRX3656	Modular Supervisory Pnl Kit	EMB2-09-CPE-3
		EMB2-09-CPE-2
NTRX3660	Copper Interface Kit	EMB2-09-CPE-3
		EMB2-09-CPE-2
NTRX3662	SMS-R Cable Kit	EMB2-09-CPE-3
		EMB2-09-CPE-2
NTRX37AA	SPEECH LINK CONN CABINET	EMB2-09-CPE-3
NTRX3720	NJC TO BLKHD CA ASSY	EMB3-09-000
		EMB3-08-000
		EMB3-09-NSL
NTRX3721	PSL TO BLKHD CA ASSY	EMB3-09-000
		EMB3-09-NSL
NTRX3722	NJC to BLKHD CA ASSY	EMB3-09-000
		EMB3-09-NJC
NTRX3723	PSL to BLKHD CA ASSY	EMB3-09-NSL-1
NTRX38AA	DGTL NET CONN CABINET	EMB3-09-PSL
NTRX40AA	Modular Supervisory Panel	EMB3-08-000
		EMB2-01-MSP-4
		EMB2-01-MSP-5
		EMB2-01-MSP-6
		EMB2-09-LCE-4
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB2-09-CPE-2
		EMB2-09-CPE-3
		EMB13-05-003
		EMB5-03-002
		EMB13-01-005
		EMB16-02-003
NTRX4001	MSP Card Storage Chassis	EMB2-09-LCE-6
		EMB13-09-004
		EMB19-04-002
		EMB13-09-005
NTRX4002	Alarm Backpanel	EMB16-02-003
NTRX4052	MSP Cable Assembly	EMB2-09-LCE-4
		EMB2-09-LCE-6
NTRX4067	EAS Jumper Cable	EMB13-05-003
NTRX41AA	Alarm Module	EMB2-01-MSP-1
		EMB2-01-MSP-2
		EMB2-01-MSP-3
		EMB2-01-MSP-4
		EMB2-01-MSP-5
		EMB2-01-MSP-6
		EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB2-09-CPE-2

		EMB2-09-CPE-3
		EMB13-05-003
		EMB5-03-002
		EMB13-01-005
		EMB16-02-003
		EMB2-09-LCE-6
NTRX41BA	Power Alarm Module	EMB13-05-003
		EMB16-02-003
NTRX41CA	EAS MSP Module	EMB13-05-003
NTRX41DA	EAS Alarm Card Kit	EMB13-05-003
		EMB16-02-003
NTRX41EA	ABS Module	EMB13-05-003
		EMB16-02-003
NTRX4105	Power Alarm Backpanel PCP	EMB13-05-003
		EMB16-02-003
NTRX42AA	Breaker Module (10A)	EMB2-01-MSP-1
		EMB2-01-MSP-2
		EMB2-01-MSP-3
		EMB2-01-MSP-4
		EMB2-01-MSP-5
		EMB2-01-MSP-6
		EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB13-05-003
		EMB5-03-002
		EMB13-01-005
		EMB16-02-003
NTRX42BA	MSP Breaker Card (15A)	EMB2-09-CPE-2
		EMB2-09-CPE-3
NTRX42CA	Breaker Module (20A)	EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB13-01-005
NTRX42EA	Breaker Module 10/20A	EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-09-LCE-6
NTRX43AA	Thermal Breaker Module	EMB2-01-MSP-1
		EMB2-01-MSP-2
		EMB2-01-MSP-3
		EMB2-01-MSP-4
		EMB2-01-MSP-5
		EMB2-01-MSP-6
		EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-24-RCC-27
		EMB2-24-RCC-28

		EMB2-09-CPE-2
		EMB2-09-CPE-3
		EMB13-05-003
		EMB5-03-002
		EMB13-01-005
		EMB16-02-003
		EMB2-09-LCE-6
NTRX44AA	Talk Battery Filter	EMB2-01-MSP-1
		EMB2-01-MSP-2
		EMB2-01-MSP-3
		EMB2-01-MSP-4
		EMB2-01-MSP-5
		EMB2-01-MSP-6
		EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB5-03-002
		EMB13-01-005
		EMB2-09-LCE-6
NTRX46CA	CIPE	EMB2-06-ZZ37AB
		EMB2-06-ZZ37AC
NTRX46CC	Ext. Power Filter Cable Kit	EMB2-06-ZZ37AB
		EMB2-06-ZZ37AC
NTRX46CD	Horizontal Power Cable Kit	EMB2-06-ZZ37AB
		EMB2-06-ZZ37AC
NTRX46CE	CIPE Common Packfill	EMB2-06-ZZ37AC
NTRX46CF	CIPE Common Packfill	EMB2-06-ZZ37AC
NTRX46WA	PCM-30 2x8 PCB Wiring List	EMB2-06-ZZ37CB
		EMB2-06-ZZ37CC
		EMB2-06-ZZ37CS
		EMB2-06-ZZ37CT
NTRX46WC	Wiring List (Non-ISDN)	EMB2-06-ZZ37AB
		EMB2-06-ZZ37AC
NTRX46YA	CII/CMI/DS1 Link H/W Kit	EMB2-06-ZZ37AC
NTRX46YB	M20/PCM30 Link H/W Kit	EMB2-06-ZZ37AC
NTRX4614	PCM-30 (Send) Cable Assy	EMB2-06-ZZ37CB
		EMB2-06-ZZ37CC
		EMB2-06-ZZ37CS
		EMB2-06-ZZ37CT
NTRX4615	PCM-30 (Receive) Cable Assy	EMB2-06-ZZ37CB
		EMB2-06-ZZ37CC
		EMB2-06-ZZ37CS
		EMB2-06-ZZ37CT
NTRX4616	CIPE PCM30 Coaxial PCB Assy	EMB2-06-ZZ37CC
NTRX4617	CIPE PCM30 Coaxial PCB Assy	EMB2-06-ZZ37CC
NTRX4618	CIPE PCM30 Coaxial PCB Assy	EMB2-06-ZZ37CB
NTRX4619	CIPE PCM30 Coaxial PCB Assy	EMB2-06-ZZ37CB

NTRX4625	DS30A I/F 6-Port (0P0) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4626	DS30A I/F 6-Port (0P1) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4627	DS30A I/F 6-Port (0P2) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4628	DS30A I/F 6-Port (0P3) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4629	DS30A I/F 4-Port (0P4) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4630	DS30A I/F 4-Port (0P5) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4631	DS30A I/F 4-Port (0P6) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4632	DS30A I/F 4-Port (0P7) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4633	DS30A I/F 6-Port (1P0) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4634	DS30A I/F 6-Port (1P1) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4635	DS30A I/F 6-Port (1P2) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4636	DS30A I/F 6-Port (1P3) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4637	DS30A I/F 4-Port (1P4) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4638	DS30A I/F 4-Port (1P5) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4639	DS30A I/F 4-Port (1P6) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4640	DS30A I/F 4-Port (1P7) Cable	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4650	CIPE MSP Kit	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4653	N5 Signalling Upgrade kit	EMB2-06-ZZ37AC
NTRX4654	PCM-30 Twist Pair I/F Assy	EMB2-06-ZZ37CD EMB2-06-ZZ37CE
NTRX4655	PCM-30 Twist Pair I/F Assy	EMB2-06-ZZ37CD EMB2-06-ZZ37CE
NTRX4656	Coax PCM-30 PCB Kit	EMB2-06-ZZ37AB EMB2-06-ZZ37CS EMB2-06-ZZ37CT
NTRX4657	Coax PCM-30 Cover Kit	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTRX4665	DS30 Interface Cable Assy	EMB2-06-ZZ37AB EMB2-06-ZZ37CP EMB2-06-ZZ37AC
NTRX4666	DS30 Interface Cable Assy	EMB2-06-ZZ37AB EMB2-06-ZZ37CP

NTRX4667	DS30 Interface Cable Assy	EMB2-06-ZZ37AC EMB2-06-ZZ37AB EMB2-06-ZZ37CN
NTRX4668	DS30 Interface Cable Assy	EMB2-06-ZZ37AC EMB2-06-ZZ37AB EMB2-06-ZZ37CN EMB2-06-ZZ37AC
NTRX49BA	Cabinetized Misc Spare	EMB13-09-004 EMB13-09-005
NTRX50DA	VME SDM06	EMB13-01-003
NTRX50EB	Main Chassis	EMB2-26-SDM-1 EMB2-26-SDM-2
NTRX50FK	CPUset w/128MB DRAM	EMB2-26-SDM-1
NTRX50FL	CPUset w/256MB DRAM	EMB2-26-SDM-2
NTRX50FS	LANPM	EMB2-26-SDM-1 EMB2-26-SDM-2
NTRX50GN	MFIO w/4MM DAT & 4GB DD	EMB2-26-SDM-1 EMB2-26-SDM-2
NTRX50JP	VME Proc Card	EMB13-01-003
NTRX50JQ	VME Proc Card	EMB13-01-003
NTRX50JR	VME Proc Card	EMB13-01-003
NTRX50JS	VME Proc Card	EMB13-01-003
NTRX50JT	1GB SCSI-II Disk Drive	EMB13-01-003
NTRX50JU	2GB SCSI-II Disk Drive	EMB13-01-003
NTRX50JV	Ethernet Controller Card	EMB13-01-003
NTRX50JW	Ethernet Transition Card	EMB13-01-003
NTRX53AA	MSP C-Feed Card	EMB2-09-CPE-2 EMB2-09-CPE-3
NTRX54AA	FAN Pwr Control Mod (-48 V)	EMB13-01-005 EMB2-09-LCE-6
NTRX54BA	Fan Power control	EMB2-06-ZZ37AB EMB2-09-LCE-2 EMB2-09-LCE-3 EMB2-09-LCE-4 EMB3-01-001 EMB2-24-RCC-27 EMB2-24-RCC-28 EMB2-09-CPE-2 EMB2-09-CPE-3 EMB2-02-ISM-1 EMB5-03-002 EMB13-01-005 EMB2-06-ZZ37AC EMB2-09-LCE-6
NTRX55BA	Cable Trough Assembly	EMB19-04-000 EMB19-04-001 EMB19-04-002
NTRX56AA	Opt. MISC Equipment Cabinet	EMB13-01-005
NTRX56CA	CMIS External Power Filter	EMB13-01-005

NTRX56CB	CMIS Horizontal Cabling Kit	EMB13-01-005
NTRX56CE	Breaker Module Kit (20 Amp)	EMB13-01-005
NTRX56CF	Talk Battery Mod Kit (B)	EMB13-01-005
NTRX56CG	Talk Battery Mod Kit (A)	EMB13-01-005
NTRX56FA	Right Hand Bulkhead Kit	EMB13-01-005
NTRX5610	CMIS Mod. Supervisory Panel	EMB13-01-005
NTRX5623	CMIS Alarm and Power Cable	EMB2-24-RMM-3
NTRX59AB	CMIS Lamarche Inverter Kit	EMB13-01-005
NTRX59AC	CMIS DTH-ROTL KIT	EMB13-01-005
NTRX59AD	CMIS Audible/Visual Alarm	EMB13-01-005
NTRX59AE	CMIS Pylon RG-2 Ring Gen	EMB13-01-005
NTRX59AF	CMIS Inactive System Timing	EMB13-01-005
NTRX59AG	Common EQPT Shelf (115VAC) Kit	EMB13-01-005
NTRX59AH	CMIS Audible Alarm Cutoff	EMB13-01-005
NTRX59AJ	CMIS MLT Applique Shelf Kit	EMB13-01-005
NTRX59AK	CMIS CASE/DATATEL RM4200	EMB13-01-005
NTRX59AL	CMIS DANTEL Digital Alarm	EMB13-01-005
NTRX59AM	CMISC GDC Shelf Modem Kit	EMB13-05-003
NTRX59AN	CMISC Cook DA Shelf Hardware	EMB13-05-003
		EMB13-01-005
NTRX59AP	CMISC Alarm Ext. Kit	EMB13-05-003
		EMB13-01-005
NTRX59AS	CMIS GDC Modem Shelf Kit	EMB13-01-005
NTRX59AU	RMM Kit	EMB2-24-RMM-3
NTRX59AV	CMIS UDS RM16-23DC Modem Kit	EMB13-01-005
NTRX59AW	CMIS ESTU/ITM KIT	EMB13-01-005
NTRX59AX	TELLABS 1014U Universal	EMB13-01-005
NTRX59AY	CMIS Inactive System Timing	EMB13-01-005
NTRX59AZ	CMIS 500VA AC Inverter Kit	EMB13-01-005
NTRX59BJ	CMIS MLT Applique Shelf Kit	EMB13-01-005
NTRX73AC	EMI Skin Panel	EMB4-05-BUL
NTRX73AF	Mid Line-Up EMI Panel	EMB4-05-BUL
NTRX73AL	Streamline Exterior skin	EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
NTRX73AM	Streamline Exterior skin	EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
NTRX91AA	Cooling Unit, 10"	EMB2-24-RCC-27
		EMB2-24-RCC-28
NTRX92AA	Cooling Unit Kit (10")	EMB2-06-ZZ37AB
		EMB2-09-TME
		EMB2-09-TME-1
		EMB2-09-TME-3
		EMB3-01-001
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB2-09-CPE-2
		EMB2-09-CPE-3

		EMB2-02-ISM-1
		EMB5-03-002
		EMB13-01-005
		EMB2-06-ZZ37AC
NTRX93AA	Cooling Unit	EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-09-LCE-6
NTZX16CA	Cabinet Power and Grounding	EMB13-09-004
		EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-09-TME-1
		EMB2-09-TME-3
		EMB2-09-CPE-2
		EMB2-09-CPE-3
		EMB13-09-005
		EMB2-02-ISM-1
		EMB5-03-002
		EMB13-01-005
		EMB16-02-003
		EMB2-09-LCE-6
NTZZ01BB	SLM COMMON CP	EMB4-02-SLM-2
		EMB4-05-009
		EMB4-05-004
NTZZ01BC	SLM Common Module	EMB4-05-001
NTZZ01CA	4 PORT NETWORK & IOC I/F	EMB4-03-IF-1
		EMB4-05-004
NTZZ01CB	4 PORT NETWORK & IOC I/F FOR	EMB4-03-004
		EMB4-05-009
		EMB4-05-001
NTZZ01DA	4 PORT LIM/LPP INTERFACE	EMB4-03-IF-2
		EMB4-05-004
NTZZ01DB	4 PORT LIM/LPP INTERFACE - BCS34 &	EMB4-03-005
		EMB4-05-009
		EMB4-05-001
NTZZ01EA	I/F FILLER FACE PLATE	EMB4-03-FFP-1
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTZZ01EJ	CSDM Main Chassis w/256MB CPUset	EMB2-26-SDM-2
NTZZ01EK	CSDM Main Chassis w/128MB CPUset	EMB2-26-SDM-1
NTZZ01FA	Supernode Series 10 CPU CP	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTZZ01FE	EMPTY SHELF FILLER CP FILL FOR SPM	EMB19-01-CP-2
		EMB19-01-000
		EMB19-01-001
NTZZ01GA	Supernode Series 20 CPU CP	EMB4-05-009

		EMB4-05-004
		EMB4-05-001
NTZZ01HA	SUPERNODE SERIES 30 CPU	EMB4-03-CPU-3
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTZZ01JA	Supernode Series 40 CPU CP	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTZZ01KA	6 MBYTE MEMORY	EMB4-03-MEM-1
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTZZ01LA	24 MBYTE MEMORY	EMB4-03-MEM-2
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTZZ01MA	FILLER FACE PLATE	EMB4-03-FFP-2
		EMB4-05-009
		EMB4-05-004
NTZZ01NA	INITIAL ENHANCED NETWORK INTERFACE	EMB4-03-IF-3
		EMB4-05-009
		EMB4-05-004
NTZZ01NB	Initial ENET I/F	EMB4-05-001
NTZZ01NM	Initial ENET I/F - 128 Port	EMB4-05-009
		EMB4-05-001
NTZZ01NN	INITIAL ENHANCED NETWORK INTERFACE	EMB4-03-IF-10
		EMB4-05-009
		EMB4-05-001
NTZZ01PA	INTERMEDIATE ENHANCED NETWORK INTE	EMB4-03-IF-4
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTZZ01QA	FINAL ENHANCED NETWORK INTERFACE	EMB4-03-IF-5
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTZZ01QM	FINAL ENHANCED NETWORK INTERFACE -	EMB4-03-IF-8
		EMB4-05-009
		EMB4-05-001
NTZZ01RF	SUPERNODE S/DMS - BCS34 & ABOVE	EMB4-05-009
NTZZ01RG	SUPERNODE CABINET (C42)	EMB4-05-001
NTZZ01RN	SuperNode in C42(S/DMS) Cabinet BC	EMB4-05-004
NTZZ01SB	SUPERNODE BRISC 50/60 CPU	EMB4-03-CPU-6
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
		EMB4-06-011
NTZZ01SC	BRISC 50/50MX/60 CPU	EMB4-05-009

		EMB4-05-001
		EMB4-03-CPU-8
		EMB4-06-011
NTZZ01SM	Supernode BRISC 70 CPU	EMB4-05-009
		EMB4-05-001
		EMB4-03-CPU-7
		EMB4-06-011
NTZZ01SP	SN/SNSE BRISC 70EM CPU	EMB4-05-001
		EMB4-06-011
NTZZ01TM	16M MS Processor & RTIF	EMB4-05-001
NTZZ01UA	4 PORT NETWORK & IOC I/F FOR CABIN	EMB4-03-IF7
		EMB4-05-004
NTZZ01UB	4 PORT NET.& IOC I/F FOR CAB. DMS	EMB4-03-006
		EMB4-05-009
		EMB4-05-001
NTZZ01VA	4 PORT LIM/LPP INTERFACE FOR CABIN	EMB4-03-IF8
		EMB4-05-004
NTZZ01VB	4 PORT LIM/LPP I/F FOR CAB. DMS -	EMB4-03-007
		EMB4-05-009
		EMB4-05-001
NTZZ01WA	DMS-100 Mail Service Peripheral Mo	EMB19-01-000
NTZZ01WB	DMS-100 Mail Service Peripheral Mo	EMB19-01-001
NTZZ01XA	Secondary Electronics Shelf CP Fil	EMB19-01-CP-1
		EMB19-01-000
NTZZ01XB	Secondary Electronics Shelf CP Fil	EMB19-01-CP-3
		EMB19-01-001
NTZZ01YA	75 HOURS PER NODE SHADOWED OR	EMB19-01-HRS-1
		EMB19-01-000
		EMB19-01-001
NTZZ01YC	150 HOURS PER NODE SHADOWED SPN DI	EMB19-01-HRS-3
		EMB19-01-000
		EMB19-01-001
NTZZ01ZA	LINK INTERFACE FOR FLIS	EMB4-03-IF-6
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NTZZ02AA	4 DS30 NETWORK INTERFACES	EMB2-06-NIF-4
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ02AD	DS30 Network Interface CP	EMB2-06-ZZ41DA
NTZZ02BA	Line Group Controller	EMB2-06-LGC-1
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ02CA	Line Trunk Controller	EMB2-06-LTC-1
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3

NTZZ02DA	2 DS-1 P-SIDE EFF INTERFACES	EMB2-06-DS1-2 EMB2-15-002 EMB2-15-005 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02EA	CLASS Modem Resource	EMB2-06-CMR-1 EMB2-15-002 EMB2-15-005 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02FA	Universal Tone Receiver	EMB2-06-ZZ37AC EMB2-15-005 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3 EMB2-06-UTR-1 EMB10-20-000 EMB10-08-000 EMB10-08-001
NTZZ02FB	Universal Tone Receiver	EMB2-15-005 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3 EMB2-06-UTR-2 EMB10-21-MCTMI EMB10-20-MCTMI
NTZZ02FC	30 Global Tone Rcvr Ccts	EMB2-06-ZZ41DA EMB2-06-ZZ41AA
NTZZ02GA	16 DS30 NETWORK INTERFACES	EMB2-06-NIF-1 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3 EMB10-20-000 EMB10-08-000 EMB10-08-001 EMB9-03-DRS-G EMB9-03-DRS-B EMB10-21-MCTMI EMB10-20-MCTMI
NTZZ02GB	DS30 NT6X40AC CP's & labels	EMB2-06-ZZ41DA EMB2-06-ZZ41AA
NTZZ02GC	DS30 NT6X40AD CP's & labels	EMB2-06-ZZ41DA EMB2-06-ZZ37AC
NTZZ02HB	DS-512 Network Interface	EMB10-20-000 EMB10-08-000 EMB10-08-001 EMB10-21-MCTMI

NTZZ02HM	DS512 Network Interface	EMB10-20-MCTMI EMB2-06-NIF-6 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3 EMB10-21-MCTMI EMB10-20-MCTMI EMB2-06-ZZ41DA EMB2-06-ZZ41AA
NTZZ02HN	DS512 Network Interface	EMB2-06-ZZ41DA EMB2-06-ZZ37AC
NTZZ02JA	DS-30A LCM Intrfc. Bld. Blk.	EMB2-15-002 EMB2-09-CPE-3
NTZZ02KA	10 DS30A LCM Interfaces	EMB2-06-LIF-1 EMB2-15-005 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3 EMB10-20-000 EMB10-08-000 EMB10-08-001 EMB9-03-DRS-G EMB9-03-DRS-B EMB10-21-MCTMI EMB10-20-MCTMI EMB2-06-ZZ41AA
NTZZ02NA	FILLER FACE PLATE KIT	EMB2-26-FIL
NTZZ02PA	LTC Module Common Circuit Packs wi	EMB2-06-LTC-2 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02PH	LTC+ ADSI/SCWID Common CP	EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02PJ	LINE TRUNK CONTROLLER COMMON CP	EMB2-06-LTC-6 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02PM	LTC+ Module with EDC	EMB2-06-LTC-3 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02QA	LGC Module Common Circuit Packs wi	EMB2-06-LGC-2 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02QH	LGC+ ADSI/SCWID Common CP	EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3

NTZZ02QJ	LINE GROUP CONTROLLER COMMON CP	EMB2-06-LGC-6 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02QM	LGC+ Module with EDC	EMB2-06-LGC-3 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02RA	Message Protocol and Tone Circuits	EMB2-06-MPT-1 EMB2-15-005 EMB2-06-004
NTZZ02RB	Message Protocol and Tone Circuits	EMB2-06-MPT-2 EMB2-15-005 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02RC	Message Protocol and Tone Circuits	EMB2-06-MPT-3 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02SA	Ring/Pad Circuits	EMB2-06-RPC-1 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02SB	Ring/Pad Circuits, Frequency Selec	EMB2-06-RPC-2 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02TA	Host Link Formatter CPs	EMB2-15-HLF-1 EMB2-15-005
NTZZ02UA	XPM Peripheral Loader CP	EMB2-06-XPL-1 EMB2-15-005 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ02UB	Peripheral Loader BB	EMB2-24-RCC-27 EMB2-24-RCC-28 EMB2-24-RCC-31
NTZZ03AC	Enhanced Processor CP BB	EMB2-06-ZZ37AC
NTZZ03BB	SMS Common CP	EMB2-06-004 EMB2-09-CPE-2
NTZZ03BE	SUBSCRIBER MODULE FOR SLC-96 W/XPM	EMB2-06-SMS-5 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ03BG	Subscriber Module for SLC-96	EMB2-06-SMS-3 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3

NTZZ03BH	SMS+ COMMON CP (ON NT6X01AA)	EMB2-06-SMS-7
NTZZ03BR	SMS+ ADSI/SCWID Common CP	EMB2-06-004
		EMB2-09-CPE-2
NTZZ03BS	SUBSCRIBER MODULE SLC-96 COMMON CP	EMB2-06-SMS-8
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ03CA	SMR Common CP	EMB2-06-004
		EMB2-09-CPE-2
NTZZ03DA	SMU Common CP	EMB2-06-004
		EMB2-09-CPE-2
NTZZ03DB	SMU+ Common CP	EMB2-06-004
		EMB2-09-CPE-2
NTZZ03DE	Subscriber Module for DMS-1U with	EMB2-06-SMU-9
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ03DH	SMU+ ADSI/SCWID Common CP	EMB2-06-004
		EMB2-09-CPE-2
NTZZ03DJ	SMU+ ADSI/SCWID Common CP	EMB2-06-004
		EMB2-09-CPE-2
NTZZ03DK	SUBSCRIBER MODULE DMS-1U COMMON CP	EMB2-06-SMU-14
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ03DL	SMU+ COMMON CP (ON NT6X01AA)	EMB2-06-SMU-2
NTZZ03DM	Subscriber Module For DMS-1 Urban	EMB2-06-SMU-16
		EMB2-06-004
NTZZ03EA	SMS-R Common CP	EMB2-06-004
		EMB2-09-CPE-2
NTZZ03ED	REMOTE SUBSCRIBER MODULE FOR SLC-9	EMB2-06-SMSR-3
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ03EF	Subscriber Carrier Module-100S Rem	EMB2-06-SMS-4
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ03EG	SMS-R+ COMMON CP (ON NT6X01AA)	EMB2-06-SMSR-5
NTZZ03FA	2 SCM DS-1 INTERFACES	EMB2-06-DS1-3
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ03GA	SCM DS-1 Interface CP	EMB2-06-DS1-1
		EMB2-15-005
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ03MA	SMUI Common CP	EMB2-06-004

NTZZ03MB	ISDN Subs Module For DMS-1 Urban C	EMB2-09-CPE-2 EMB2-06-SMU-7 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ03PA	SMA Common CP	EMB2-06-004 EMB2-09-CPE-2
NTZZ03QA	SMA Common CP (BCS-36/MVI)	EMB2-06-004 EMB2-09-CPE-2
NTZZ03RA	SMUI+ Common CP	EMB2-06-004 EMB2-09-CPE-2
NTZZ03RB	ISDN Subscriber Module for DMS-1 U	EMB2-06-SMU-11 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ03RH	SMUI+ ADSI/SCWID Common CP	EMB2-06-004 EMB2-09-CPE-2
NTZZ03RJ	SMUI+ ADSI/SCWID Common CP	EMB2-06-004
NTZZ03RK	ISDN SUBSCRIBER MOD DMS-1U COMMON	EMB2-06-SMU-15 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ03SA	SMA Common CP	EMB2-06-004
NTZZ03SB	SMA Common CP (BCS-36/MVI)	EMB2-06-004
NTZZ03SC	SMA Common CP (NA003)	EMB2-06-004
NTZZ03SD	SMA Common CP (BCS-36/MVI)	EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ03SE	SMA Common CP (BCS-36/MVI)	EMB2-06-004
NTZZ03SJ	SMA Common CP (BCS-36/MVI)	EMB2-06-004
NTZZ03SK	SMA Common CP (BCS-36/MVI)	EMB2-06-004
NTZZ03SP	SMA Common CP (BCS-35)	EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ03SQ	SMA Common CP (BCS-35)	EMB2-06-004
NTZZ03SR	SMA PACKFILL, MULTIVENDOR I/F, BCS	EMB2-06-SMA-12 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ03ST	SMA PACKFILL, ACCESSNODE I/F, BCS-	EMB2-06-SMA-14 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ03SV	SMA PACKFILL, MULTIVENDOR I/F, BCS	EMB2-06-SMA-16 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ03SX	SMA2 COMMON CP PACKFILL	EMB2-06-SMA-17
NTZZ04AA	DS0A INTERFACE CP	EMB2-06-DTC-2

		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ04BA	DTC Common CP	EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
		EMB2-06-DTC-1
		EMB10-20-000
		EMB10-08-000
		EMB10-08-001
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTZZ04BB	Digital Trunk Controller for DWS	EMB2-06-DTC-4
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ04CA	CONTINUITY TONE DETECTOR	EMB2-06-CTD-1
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ04EA	XPM PC KIT FOR NT6X02AA	EMB2-99-XPM-1
NTZZ04GA	XPM PC KIT FOR NT6X02AC	EMB2-99-XPM-2
NTZZ04HA	DTC+ Common CP	EMB2-06-004
NTZZ04HB	DTC Module Common Circuit Packs wi	EMB2-06-DTC-6
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ04KA	DTC Module with XPM+ for DWS	EMB2-06-DTC-5
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ05DA	CCS7 SIG TERMINAL I/F WITH TERMINA	EMB2-11-STI-2
NTZZ05FA	CCS7 SIG TERMINAL I/F	EMB2-11-STI-1
NTZZ05GA	CCS7 ST FILLER FACEPLATES	EMB2-11-FFP-1
NTZZ06AA	Trunk Module Equipment	EMB2-01-000
NTZZ06AM	MTM Tone Gen (US)	EMB2-01-000
NTZZ06BA	Maintenance Trunk Module	EMB2-01-MTM-3
		EMB2-01-000
NTZZ06BM	International Maint. Trunk Mod. (E	EMB2-01-INT-9
		EMB2-01-000
NTZZ06CA	Maintenance Trunk Module for DRA	EMB2-01-MTM-5
		EMB2-01-000
NTZZ06DA	LINE TEST UNIT	EMB2-01-MTU-2
NTZZ06EA	MULTILINE TEST UNIT	EMB2-01-MTU-1
NTZZ06FA	TRANSMISSION TEST UNIT	EMB2-01-TTU-1
NTZZ06GA	TRANSMISSION TEST TRUNK	EMB2-01-TTT-1
NTZZ06HA	4 TOPS/ATT.CON.S MODEM CCTS	EMB2-01-MOD-1
NTZZ06JA	CLASS/CMS ENGLISH PHASE I	EMB2-01-CMS-1
NTZZ06KA	CLASS PHASE II	EMB2-01-CMS-7
NTZZ06LA	CLASS/CMS ENGLISH PHASE II (1)	EMB2-01-CMS-2

NTZZ06MA	CLASS/CMS ENGLISH PHASE II (2)	EMB2-01-CMS-3
NTZZ06NA	Maintenance Trunk Module	EMB2-01-MTM-1 EMB2-01-000
NTZZ06NM	International Maint. Trunk Mod. (A	EMB2-01-INT-7 EMB2-01-000
NTZZ06PA	TME Strapping Option 1	EMB2-01-000
NTZZ06QA	TME Strapping Option 2	EMB2-01-000
NTZZ06RA	Trunk Module 8 Wire	EMB2-01-TM8-1 EMB2-01-000
NTZZ06RB	Trunk Module 8-Wire, with WTA inte	EMB2-01-TM8-4 EMB2-01-000
NTZZ06RM	International 8 wire TM8 (Eur/Asia	EMB2-01-INT-8 EMB2-01-000
NTZZ06SA	Maintenance Trunk Module for DRA	EMB2-01-MTM-2 EMB2-01-000
NTZZ06TA	CMS FRENCH PHASE I	EMB2-01-CMS-4
NTZZ06UA	CMS FRENCH PHASE II (2)	EMB2-01-CMS-6
NTZZ06VA	AOSS VOICE RESPONSE ENGLISH	EMB2-01-AOSS-1
NTZZ06WA	AOSS VOICE RESPONSE FRENCH	EMB2-01-AOSS-2
NTZZ06XA	CMS FRENCH PHASE II (1)	EMB2-01-CMS-5
NTZZ07AA	Double Shelf Network Equipment Fra	EMB3-01-000
NTZZ07AD	Refurbished DSNE	EMB3-01-701
NTZZ07AG	Refurbished DSN Module	EMB3-01-701
NTZZ07AH	DSN Faceplates	EMB3-01-701
NTZZ07BA	Double Shelf Network	EMB3-01-NET-1 EMB3-01-000 EMB10-08-000 EMB10-08-001
NTZZ07CA	NET CLOCK INTERFACE NT-40	EMB3-01-CLK-1 EMB3-01-000
NTZZ07DA	NET CLOCK INTERFACE SUPERNODE	EMB3-01-CLK-2 EMB3-01-000 EMB10-08-000 EMB10-08-001
NTZZ07FA	CABINETIZED DUAL SHELF NETWORK	EMB3-07-000
NTZZ07GA	Network Common CP KIT	EMB3-07-NCK-1 EMB3-07-000
NTZZ07JA	Network Common CP KIT	EMB3-07-NCK-2 EMB3-07-000
NTZZ07MA	NETWORK PORT CP	EMB3-01-PORT-1 EMB3-01-000
NTZZ07NA	DSN Common CP	EMB3-01-NET-2 EMB3-01-000
NTZZ07QA	Double Shelf Network W/O Network P	EMB3-01-NET-3 EMB3-01-000
NTZZ07RA	Network Common CP (48V)	EMB3-01-001 EMB3-07-NCK-3
NTZZ07SA	Network Common CP (48V Intl)	EMB3-01-001 EMB3-07-NCK-4

NTZZ08AA	Line Concentrating Equipment	EMB2-07-000
NTZZ08AB	Line Concentrating Equipment	EMB2-07-004
NTZZ08BA	Line Concentrating Module	EMB2-07-LCM-1
NTZZ08BB	LCM For Cabinetized LCE Model B	EMB2-09-LCM-1
NTZZ08BC	LCM	EMB2-09-LCE-2
		EMB2-09-LCM-4
NTZZ08BD	LCM	EMB2-07-000
		EMB2-07-004
		EMB2-07-003
		EMB2-07-LCM-2
NTZZ08EB	Cabinetized Line Concentrating Equ	EMB2-09-LCE-3
NTZZ08FT	Ringin Gen (North America)	EMB2-09-LCE-6
NTZZ08GT	Ringin Gen (UK)	EMB2-09-LCE-6
NTZZ08HT	Ringin Gen (China/Aus)	EMB2-09-LCE-6
NTZZ08MA	LCM	EMB2-09-LCE-3
		EMB2-09-LCM-2
NTZZ08MB	LCM for CLCE International Model B	EMB2-09-LCM-3
NTZZ09AA	Input/Output Equipment Frame	EMB5-01-000
NTZZ09BB	DUAL DISK DRIVE UNIT SHELF	EMB5-01-DDU-1
		EMB5-01-000
NTZZ09CA	I/O Controller Module	EMB5-01-000
NTZZ09CB	I/O Controller Module	EMB5-01-000
NTZZ09CC	Input/Output Controller Module	EMB5-01-IOC-4
		EMB5-01-000
NTZZ09DA	I/O TERMINAL CONTROLLER CP	EMB5-01-TC-1
		EMB14-02-000
NTZZ09EA	I/O TERM CONT WITH AUTO DIALBACK	EMB5-01-TC-2
		EMB14-02-000
NTZZ09GA	Multi-Protocol Cont	EMB14-02-000
NTZZ09HA	9 Track Tape Ctrl C	EMB14-02-000
NTZZ09JA	DISK DRIVE CONTROLLER	EMB5-01-DDC-1
		EMB14-02-000
NTZZ09KA	Enhanced MPC	EMB14-02-000
NTZZ09LA	DISTRIBUTED PROCESSING PERIPHERAL	EMB5-01-DPP-1
		EMB5-01-000
NTZZ09MA	Stratum II Rmt Osc. Shelf	EMB5-01-000
NTZZ09NA	Stratum 2.5 Rmt Osc. Shelf	EMB5-01-000
NTZZ09PA	Osc. (DMS-Core) & I/F CP	EMB2-20-ROS-3
		EMB5-03-ST1
NTZZ09QA	Osc. (DMS-Core) & I/F CP	EMB2-20-ROS-1
		EMB2-20-ROS-4
		EMB5-03-ST2
NTZZ09RA	Distributed Processing Peripheral	EMB5-01-DPP-2
		EMB5-03-002
		EMB5-01-000
NTZZ09SA	Distributed Processing Peripheral	EMB5-01-DPP-3
		EMB5-03-002
		EMB5-01-000
NTZZ09UA	228 MB Disk Drive	EMB2-20-DDU-1

		EMB5-01-DDU-1
		EMB5-03-DDU
		EMB5-03-001
		EMB5-01-DDU-2
NTZZ09VA	I/O Controller Module (NT40)	EMB5-01-000
NTZZ09VB	I/O Controller Module (NT40)	EMB5-01-000
NTZZ09XA	DPP SHELF	EMB5-01-DPP-4
		EMB5-01-000
NTZZ09YA	DPP SHELF (COMPRESSION)	EMB5-01-DPP-5
		EMB5-01-000
NTZZ10BA	Network Shelf Assy Pkg	EMB3-01-NET-5
		EMB3-06-000
NTZZ10BB	Network Shelf Assy Pkg	EMB3-01-NET-6
		EMB3-05-NET-2
		EMB3-06-001
NTZZ10CC	ENET 8M CPU	EMB4-06-011
NTZZ10CD	ENET 16M CPU	EMB4-06-011
NTZZ10CU	C42 FSP/Cooling Unit -48V	EMB4-04-APC-7
		EMB4-05-001
		EMB4-06-011
NTZZ10CW	C42 FSP/Cooling Unit -60V	EMB4-04-APC-7
		EMB4-05-001
		EMB4-06-011
NTZZ10DA	96 DS-30 Bulkhead Assembly	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-BKH-1
		EMB3-06-000
		EMB3-06-001
NTZZ10EA	224 DS-30 Bulkhead Assembly	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-BKH-2
		EMB3-06-000
		EMB3-06-001
NTZZ10FA	Fiber Bulkhead Assembly	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-BKH-3
		EMB3-06-000
		EMB3-06-001
NTZZ10GA	DS-30 Interface Assembly	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-IF-1
		EMB3-06-000
		EMB3-06-001
NTZZ10HA	Quad DS-512 Fiber I/F PB	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-IF-2
		EMB3-06-000
		EMB3-06-001
NTZZ10JA	16K x 16K Chan Term Xpt CP	EMB3-01-NET-5

		EMB3-01-NET-6
		EMB3-05-XPT-1
		EMB3-06-000
		EMB3-06-001
NTZZ10KA	16K x 16K Chan Xpt CP	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-XPT-2
		EMB3-06-000
		EMB3-06-001
NTZZ10LA	ENET in C42(S/DMS) CABINET	EMB3-01-NET-5
NTZZ10LB	ENET in C42(S/DMS) CABINET	EMB3-01-NET-6
NTZZ10MA	3 DS-512/16 DS-30 I/F PB	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-IF-3
		EMB3-06-000
		EMB3-06-001
NTZZ10NA	64K ENHANCED NETWORK	EMB3-06-000
NTZZ10NB	64K ENHANCED NETWORK	EMB3-06-001
NTZZ10PA	Streamline Bulkhead Assy	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-BKH-4
		EMB3-06-000
		EMB3-06-001
NTZZ10QA	ENET Plane 0 Shelf Labels	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-01-NET-8
		EMB3-05-NET-2
		EMB3-06-000
		EMB3-06-001
NTZZ10RA	ENET Plane 1 Shelf Labels	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-01-NET-9
		EMB3-05-NET-2
		EMB3-06-000
		EMB3-06-001
NTZZ11EA	ST FILLER FACE PLATE	EMB2-12-FFP-1
NTZZ12BB	REMOTE MAINTENANCE MODULE (RMM)	EMB2-15-RMM-4
		EMB2-15-005
NTZZ12CC	CUSTOM REMOTE MAINTENANCE MODULE	EMB2-15-RMC-1
		EMB2-15-005
NTZZ12DA	DS-1 W/O EFF C-Side CP	EMB2-15-DS1-1
		EMB2-15-005
NTZZ12EA	DS-1 C-SIDE EFF INTERFACE	EMB2-15-DS1-2
		EMB2-15-005
NTZZ12GA	RME Power Distrib. Module	EMB13-05-000
NTZZ12HD	Remote Controller Equipment Frame	EMB2-15-005
NTZZ12JA	STANDARD REMOTE MAINTENANCE MODULE	EMB2-24-RMM-1
NTZZ12KA	Extension Shelf Right Filler Kit	EMB2-24-RCC-2
NTZZ12KJ	CPM2 Shelf Filler Faceplate Kit	EMB2-06-MVI-1

NTZZ12MA	ISDN Remote Controller Equipment F	EMB2-15-002
NTZZ12NA	ISDN Remote Cluster Controller Com	EMB2-15-RCCI-1 EMB2-15-002
NTZZ12NB	ISDN XPM Plus Cluster	EMB2-15-RCCI-2 EMB2-15-002
NTZZ12PA	RMM for Sh.65 Building Blk.	EMB2-15-002
NTZZ12PB	RMM Shelf RCEI Frame (65)	EMB2-15-RMM-5 EMB2-15-002
NTZZ12UA	Class Modem Resource BB	EMB2-24-RCC-27 EMB2-24-RCC-28 EMB2-24-CMR-1
NTZZ12VA	UNIVERSAL TONE RECEIVER (RSC-S)	EMB2-24-UTR-1 EMB2-24-RCC-27 EMB2-24-RCC-28
NTZZ12VB	UTR (NT6X92BC)	EMB2-24-RCC-27 EMB2-24-RCC-28 EMB2-06-UTR-4
NTZZ12WA	Extension Shelf Left Filler Kit	EMB2-24-RCC-3
NTZZ12XB	RCC2 Packfill (w/o EISP)	EMB2-24-RCC-27 EMB2-24-RCC-28 EMB2-24-RCC-9
NTZZ12XC	RCC2 Packfill (BITS)	EMB2-24-RCC-27 EMB2-24-RCC-28
NTZZ12XF	REMOTE CLUSTER CONTROLLER 2 SHELF	EMB2-24-RCC-15
NTZZ12XP	REMOTE CLUSTER CONTROLLER 2 SHELF	EMB2-24-RCC-12
NTZZ12YB	RCC Common CP Fill (MP/SP)	EMB2-15-005
NTZZ12YD	RCC Common CP Fill (MP/SP)	EMB2-15-005
NTZZ12YE	RCC Common CP Fill (MP/SP)	EMB2-15-005
NTZZ12YF	RCC Common CP Fill (MP/SP)	EMB2-15-005
NTZZ12YG	RCC Common CP Fill (MP/SP)	EMB2-15-005 EMB2-15-014
NTZZ13CA	A AND B FUSE PANELS	EMB16-02-FP-2 EMB16-02-019 EMB16-02-020 EMB16-02-022
NTZZ13EA	Power Distribution Centre	EMB16-02-000
NTZZ13FA	FUSE PANEL "A/B" FEED	EMB16-02-FP-1 EMB16-02-010 EMB16-02-000
NTZZ13GA	FILLER PANEL ASSEMBLY A/B	EMB16-02-FFP-1 EMB16-02-010 EMB16-02-019 EMB16-02-000 EMB16-02-020 EMB16-02-022
NTZZ13MA	SuperNode Bulkhead Panel Assy	EMB4-05-BUL
NTZZ13RD	PDC TOP-FEED (U.L. LISTED)	EMB16-02-019
NTZZ13RE	PDC Top-Feed (U.L. Listed)	EMB16-02-020
NTZZ13TE	PDC Top-Feed Fully-Equipped (U.L.	EMB16-02-021

NTZZ13UB	PDC Bottom-Feed	EMB16-02-010
NTZZ13VE	PDC BOTTOM-FEED (U.L. LISTED)	EMB16-02-022
NTZZ13WE	PDC BOTTOM-FEED FULLY-EQUIPPED (U.	EMB16-02-023
NTZZ14BA	MAP FURNITURE WITH JACKS	EMB11-01-001
NTZZ14CA	MAINTENANCE AND ADMINISTRATION POS	EMB11-01-VDU-1
NTZZ14EA	MAINTENANCE AND ADMINISTRATION POS	EMB11-01-PRT-1
NTZZ14EB	MAP PRINTER (DEC LA75S)	EMB11-01-PRT-4
NTZZ14EC	MAP PRINTER (DEC LA424)	EMB11-01-PRT-5
NTZZ14GA	TCS 1800 1A2 KEY SERVICE SYSTEM	EMB11-01-KSS-1
		EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NTZZ14HA	LaMarche 500W Inverter	EMB13-01-000
		EMB13-05-000
NTZZ14KA	INTECOLOR COLORTREND 200R VDU	EMB11-01-VDU-3
NTZZ14MA	MAP KSR PRINTER (TI-820)	EMB11-01-PRT-3
NTZZ14NA	MAP TELEPHONE SET	EMB11-01-KSS-1
		EMB11-01-MTS-1
NTZZ14PA	COMPANION 3 HANDSFREE	EMB11-01-KSS-1
		EMB11-01-MTS-2
NTZZ14UA	Simplex Workstation	EMB11-01-004
NTZZ14VA	Simplex Workstation	EMB11-01-005
NTZZ15BA	Remote Miscellaneous Equipment Fra	EMB13-05-000
NTZZ15CB	RME Power Dist. Mod non-EAS	EMB13-05-000
NTZZ15CC	RME Power Distrib. Module	EMB13-05-000
NTZZ15CD	RME Power Dist Mod non-EAS	EMB13-05-000
NTZZ15CE	RME Power Dist. Mod (EAS)	EMB13-05-000
		EMB13-05-010
		EMB13-01-003
NTZZ16AE	Remote Line Concentrating Module	EMB2-14-004
NTZZ16BA	RLCM Frame Supervisory Panel W/O P	EMB2-14-FSP-1
		EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
NTZZ16CA	RLCM Frame Supervisory Panel E/W P	EMB2-14-FSP-2
		EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
NTZZ16DB	RLCM ESA CP Package	EMB2-14-ESA-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
NTZZ16FA	Remote Maint Mod - Standard	EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
NTZZ16FB	REMOTE MAINTENANCE MODULE - STANDA	EMB2-14-RMM-4
		EMB2-14-006

NTZZ16HA	Remote Maint Mod - US	EMB2-14-IRM-5 EMB2-14-RMM-2 EMB2-14-004 EMB2-14-006
NTZZ16LD	Remote Line Concentrating Module W	EMB2-14-IRM-5
NTZZ16MA	Remote Maint Mod - China	EMB2-14-IRM-2 EMB2-14-MMR-4
NTZZ16NB	Remote Line Concentrating Module	EMB2-14-006
NTZZ17AT	Common Peripheral Controller Equip	EMB2-06-004
NTZZ17BA	D Channel Handler Bld. Blk.	EMB2-15-002 EMB2-18-DCH-1 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ17BB	Enhanced D-Channel Handler	EMB2-19-DCH-2 EMB2-24-RCC-27 EMB2-24-RCC-28 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ17CA	ISDN Common Peripheral Controller	EMB2-18-004 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ17DA	ISDN CPCI Common Peripheral Contro	EMB2-18-CPC-3 EMB2-06-004
NTZZ17EB	ISDN Line Concentrating Equipment	EMB2-19-002
NTZZ17FA	ISDN AMI Line Concentrating Module	EMB2-19-LCMI-1
NTZZ17GB	ISDN Common Peripheral Control Mod	EMB2-18-CPC-2 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ17GC	ISDN Common Peripheral Controller	EMB2-06-UPI EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ17GH	CPCI+ ADSI/SCWID Common CP	EMB2-06-004 EMB2-09-CPE-2
NTZZ17GJ	ISDN COMMON PERIPH CNTRL COMMON CP	EMB2-18-CPC-5 EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NTZZ17HA	ISDN 2B1Q Line Conc. Module	EMB2-09-LCE-4 EMB2-19-LCME-1 EMB2-19-005 EMB2-24-RCC-28
NTZZ17HB	ISDN 2B1Q Line Conc Module	EMB2-19-002 EMB2-09-LCE-6
NTZZ17HC	ISDN 2B1Q Line Conc Module	EMB2-19-002

		EMB2-09-LCE-6
		EMB2-19-LCME-3
NTZZ17KK	Universal Connector Bracket	EMB2-18-006
NTZZ17PB	ISDN LCE (Universal Frame)	EMB2-19-005
NTZZ17QA	ISDN XPM LTC	EMB2-06-LTX
		EMB2-06-004
NTZZ17QM	ISDN XPM Plus LTC	EMB2-06-LTP
		EMB2-06-004
NTZZ17QS	ISDN LINE TRUNK CONTROLLER COMMON	EMB2-06-LTC-7
NTZZ17RA	ISDN XPM LGC	EMB2-06-LGX
		EMB2-06-004
NTZZ17RM	ISDN XPM Plus LGC	EMB2-06-LGP
		EMB2-06-004
NTZZ17RS	ISDN LINE GROUP CONTROLLER COMMON	EMB2-06-LGC-7
NTZZ17SA	ISDN XPM DTC	EMB2-06-DTX
		EMB2-06-004
NTZZ17SM	ISDN XPM Plus DTC	EMB2-06-DTP
		EMB2-06-004
NTZZ17TM	DTCI+ w/DWS Common CP	EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ18AA	Miscellaneous Equipment Frame	EMB13-01-000
NTZZ18AB	Miscellaneous Equipment Frame - MI	EMB13-01-003
NTZZ18BA	Inverter	EMB13-01-000
		EMB13-05-000
NTZZ18CA	METALLIC TEST ACCESS UNIT	EMB13-01-MTA-1
		EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NTZZ18DA	Alarm Extension	EMB13-01-ALM-1
		EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NTZZ18EA	Remote Office Test Line	EMB13-01-000
NTZZ18FA	TELLABS 292BR CONFERENCE/ALERTING	EMB13-01-TL-1
		EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NTZZ18GA	TELLABS 292 LINE EXP. SHELF	EMB13-01-TL-1
		EMB13-01-TL-2
		EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NTZZ18HA	Digital Test Head ROTL	EMB13-01-000
NTZZ18PB	DTT Ready DTH-ROTL Unit	EMB13-08-DTH-1
NTZZ19MA	OPM MAINTENANCE TOOLS	EMB2-13-OPMT
		EMB2-13-004
		EMB2-13-005
NTZZ19NA	BATTERY STRING PAIR	EMB2-13-BSP

NTZZ19PC	Outside Plant Module (640)	EMB2-13-005
NTZZ19QB	OPM ESA CP PACKAGE	EMB2-13-ESA
		EMB2-13-004
NTZZ20AA	Digital Network Connecting Frame	EMB3-03-000
NTZZ20CA	DIGITAL NETWORK INTERCONNECT CABIN	EMB3-08-000
NTZZ21AA	Speech Link Connecting Frame	EMB3-02-000
NTZZ21CA	SPEECH LINK CONNECTING CABINET	EMB3-09-000
NTZZ21EA	NSL/PSL PANEL AND CABLE KIT	EMB3-09-NSL
		EMB3-09-000
NTZZ21EM	NSL Panel and Cable Kit	EMB3-09-NSL-1
NTZZ21FA	PSL Panel and Cable Kit	EMB3-09-PSL
NTZZ21FM	NJC Panel and Cable Kit	EMB3-09-NJC
NTZZ23MA	Cook Digital Announcer	EMB13-08-CDA-1
NTZZ23NA	Cook Digital Announcer	EMB13-08-CDA-2
NTZZ23PA	Cook Digital Announcer	EMB13-08-CDA-3
NTZZ23QA	Cook Digital Announcer	EMB13-08-CDA-4
NTZZ23RA	Cook Digital Announcer	EMB13-08-CDA-5
NTZZ23SA	Cook Digital Announcer	EMB13-08-CDA-6
NTZZ23TA	Cook Digital Announcer	EMB13-08-CDA-7
NTZZ23UA	Cook Digital Announcer	EMB13-08-CDA-8
NTZZ23VA	Cook Digital Announcer	EMB13-08-CDA-9
NTZZ23WA	Cook Digital Announcer	EMB13-08-CDA-10
NTZZ24AA	Modem Equipment Frame	EMB5-02-000
NTZZ24BA	Rack Mount Low Speed	EMB5-02-DRS-1
		EMB5-02-000
NTZZ25AA	CENTRAL CONTROL COMPLEX (DOUBLE BA	EMB4-01-000
NTZZ25BA	CMC PERIPHERAL INTERFACE	EMB4-01-CMC-1
		EMB4-01-000
		EMB4-01-001
NTZZ25CA	I/O MESSAGE CONTROLLER	EMB4-01-IOMC-1
		EMB4-01-000
		EMB4-01-001
NTZZ25DA	1-MEGAWORD MEMORY	EMB4-01-MEM-1
		EMB4-01-000
		EMB4-01-001
NTZZ25EA	REMOTE CONTROL	EMB4-01-PM-1
		EMB4-01-000
		EMB4-01-001
NTZZ25FA	LOCAL PROCESSOR	EMB4-01-PM-2
		EMB4-01-000
		EMB4-01-001
NTZZ25GA	CENTRAL CONTROL COMPLEX (DOUBLE BA	EMB4-01-001
NTZZ27BA	MAINTENANCE SPARE STORAGE FRAME	EMB13-02-000
NTZZ27CA	SUPERNODE SPARE STORAGE CABINET	EMB13-06-000
NTZZ27FA	Cabinetized Misc Spare Storage - M	EMB13-09-004
NTZZ27FB	Cabinetized Misc Spare Storage - M	EMB13-09-005
NTZZ29AA	Position Controller Equipment Cabi	EMB8-01-PCE
		EMB8-01-000
NTZZ29BA	Auxiliary Access Equipment Cabinet	EMB8-01-AAE

		EMB8-01-000
NTZZ29CA	Modular TOPS Position	EMB8-01-000
NTZZ29CB	MODULAR TOPS POSITION	EMB8-01-MTP
		EMB8-01-000
NTZZ29DA	Integrated TOPS Posn Monitor	EMB8-01-000
NTZZ29EA	CABLE TROUGH COVER PLATES	EMB8-01-CTCP
		EMB8-01-000
NTZZ29FA	CABLE TROUGH END PLATES	EMB8-01-CTEP
		EMB8-01-000
NTZZ29GA	CAB CONCR FLR E/Q ZONE 1-3 ANCHOR	EMB8-01-ASY-1
		EMB8-01-000
NTZZ29HA	CAB CONCR FLR E/Q ZONE 4-7 ANCHOR	EMB8-01-ASY-2
		EMB8-01-000
NTZZ29JA	CABINET CONCR FLR NON-E/Q ANCHOR A	EMB8-01-ASY-3
		EMB8-01-000
NTZZ29KA	COMPUTER-BASED TRAINING SYSTEM	EMB8-01-CBT
		EMB8-01-000
NTZZ29LA	4 Operator TPC Shelf	EMB8-01-PCE
NTZZ29MA	UDS Modem Shelf Assembly	EMB8-01-AAE
		EMB8-01-MSA
NTZZ29NA	Modem Filler Assembly	EMB8-01-AAE
		EMB8-01-MFA
NTZZ29TA	High Speed Data Access	EMB8-01-PCE
		EMB8-02-HSDA
NTZZ29UA	High Speed Line Access	EMB8-01-PCE
		EMB8-02-HSLA
NTZZ29VA	4 Operator TPC Shelf (SCS1)	EMB8-01-PCE
		EMB8-02-TPC
NTZZ29WA	TI RO Printer	EMB8-01-000
NTZZ29ZA	Headset Jack Assy 6.5 Ft	EMB8-01-000
NTZZ30AM	LIU7 E-DS0A	EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-007
		EMB4-06-009
		EMB4-06-010
		EMB2-16-007
		EMB2-16-LIU-10
		EMB4-06-011
NTZZ30BA	LIU7 DS0A	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NTZZ30BM	LIU7 E/HC-DS0A	EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-007
		EMB4-06-009
		EMB4-06-010

NTZZ30CA	LIU7 E-DS0A	EMB4-06-011 EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB2-16-007
NTZZ30CM	LIU7 V.35	EMB2-17-LPP-48V EMB2-17-LPP-60V EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB2-16-007 EMB2-16-LIU-12 EMB4-06-011
NTZZ30CN	CCS7 8 Meg LIU (V.35)-ISG	EMB4-06-011
NTZZ30CP	CCS7 32 Meg LIU (V.35)-ISG	EMB4-06-011
NTZZ30DA	LIU7 V.35	EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB2-16-007
NTZZ30DM	FLIS Power Converter (48V)	EMB2-16-CV-48V EMB2-16-007
NTZZ30EA	EIU	EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V
NTZZ30EB	EIU	EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V
NTZZ30EC	Ethernet I/F Unit for BCS34 and Ab	EMB2-16-EIU-3 EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB4-06-011
NTZZ30ED	Ethernet I/F Unit	EMB4-06-011

NTZZ30EM	FLIS Power Converter (48V/60V)	EMB2-16-CV-RD EMB2-16-007
NTZZ30FA	FRIU	EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V
NTZZ30GA	FILLER FACE PLATES (2 SLOT)	EMB2-16-FFP-1 EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V
NTZZ30HA	#Fiberized LIU Shelf Assembly	EMB2-16-007
NTZZ30HB	Fiberized LIU Shelf Assembly	EMB2-16-FLIU-2 EMB2-16-007
NTZZ30JA	MISCELLANEOUS H/W GREY	EMB4-06-001
NTZZ30KA	MISCELLANEOUS H/W BROWN	EMB4-06-001
NTZZ30LA	ESF FRAME RELAY INTERFACE UNIT	EMB2-16-FIU-2 EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB4-06-011
NTZZ30MA	NIU	EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-16-NIU EMB2-17-LPP-48V EMB2-17-LPP-60V EMB4-06-007 EMB4-06-009 EMB4-06-010 EMB2-16-007 EMB4-06-011
NTZZ30MB	NIU with 32Meg ASU Proc.	EMB4-06-011
NTZZ30NA	X.25/X.75 LINK INTERFACE UNIT	EMB2-16-LIU-9 EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB4-06-007

		EMB4-06-009
		EMB4-06-010
		EMB2-16-007
		EMB4-06-011
NTZZ30NB	XLIU with 32Meg ASU Proc.	EMB4-06-011
NTZZ30PM	Single Shelf LPP(FLIS) in C42 Cabi	EMB2-16-007
NTZZ30QB	CABLE KIT (CABINETIZED)	EMB2-16-CAB-1
NTZZ30TA	LIU7 DS0A	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-001
NTZZ30TB	CCS7 8MEG LIU (FAULT-SEC.)	EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NTZZ30TC	CCS7 32Meg LIU (E/HC-DS0A)	EMB4-06-011
NTZZ30UA	LIU7 E-DS0A	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-001
		EMB4-06-008
		EMB2-16-007
NTZZ30VA	LIU7 E/HC-DS0A	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-001
		EMB4-06-008
NTZZ30WA	LIU7 V.35	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-001
		EMB2-16-007
NTZZ31BB	Office Alm X-Conn/Primary Alm Unit	EMB2-25-AXU-5
NTZZ31CA	Trunk Module 8 Wire Building Block	EMB2-25-TM8

NTZZ31CM	Trunk Module 8 Wire Building Block	EMB2-01-TM8-2 EMB2-09-TME EMB2-09-TME-1 EMB2-09-TME-3
NTZZ31DA	Maintenance Trunk Module	EMB2-25-MTM
NTZZ31DM	Maintenance Trunk Module	EMB2-01-MTM-7 EMB2-09-TME EMB2-09-TME-1 EMB2-09-TME-3
NTZZ31EA	Maintenance Trunk Module for DRA	EMB2-25-DRA
NTZZ31EM	Maintenance Trunk Module for DRA	EMB2-01-MTM-6 EMB2-09-TME EMB2-09-TME-1 EMB2-09-TME-3
NTZZ31FA	Modular Supervisory Panel	EMB2-01-MSP-1 EMB2-09-TME EMB2-09-TME-1
NTZZ31FB	Modular Supervisory Panel	EMB2-01-MSP-4 EMB2-09-TME-3
NTZZ31GA	Modular Supervisory Panel.	EMB2-01-MSP-2 EMB2-09-TME EMB2-09-TME-1
NTZZ31GB	Modular Supervisory Panel.	EMB2-01-MSP-5 EMB2-09-TME-3
NTZZ31HA	Modular Supervisory Panel	EMB2-01-MSP-3 EMB2-09-TME EMB2-09-TME-1
NTZZ31HB	Modular Supervisory Panel	EMB2-01-MSP-6 EMB2-09-TME-3
NTZZ31JA	Office Alm X-Conn/Prim Alm	EMB2-09-TME EMB2-09-TME-1
NTZZ31JB	Office Alm X-Conn/Prim Alm	EMB2-09-TME-3 EMB2-25-AXU-3
NTZZ31KA	International CTME MTM Shelf	EMB2-01-MTM-8 EMB2-09-TME-1
NTZZ31KB	International CTME MTM Shelf	EMB2-01-MTM-10 EMB2-09-TME-3
NTZZ31LA	International CTME TM8 Package	EMB2-01-TM8-3 EMB2-09-TME-1 EMB2-09-TME-3
NTZZ31MA	International CTME DRA Shelf	EMB2-01-MTM-9 EMB2-09-TME-1 EMB2-09-TME-3
NTZZ31NA	International CTME T8A Package	EMB2-01-T8A-1 EMB2-09-TME-1 EMB2-09-TME-3
NTZZ31PA	Trunk Module 8 Shelf	EMB2-01-T8B-1 EMB2-09-TME EMB2-09-TME-1

		EMB2-09-TME-3
NTZZ31QB	Cabinetized Remote Miscellaneous E	EMB13-05-003
NTZZ31SB	Office Alm X-Conn/Prim Alm	EMB2-09-TME-3
		EMB2-25-AXU-4
NTZZ32AA	Cabinetized Input/Output Equipment	EMB5-03-001
NTZZ32BA	MAGNETIC TAPE DRIVE ASSEMBLY	EMB5-03-MTD
		EMB5-03-001
NTZZ32BM	Magnetic Tape Drive Assembly	EMB5-03-002
NTZZ32BN	Magnetic Tape Drive Assembly (-48V	EMB5-03-MTD-2
		EMB5-03-002
NTZZ32CA	380 MBYTE DPP ASSEMBLY	EMB5-03-DPP
		EMB5-03-001
NTZZ32DA	760 MBYTE DPP ASSEMBLY	EMB5-03-DP1
		EMB5-03-001
NTZZ32DM	760 MByte DPP Assembly	EMB2-20-DPP-2
		EMB5-03-002
NTZZ32EA	Controller Module Package	EMB5-03-001
NTZZ32EB	I/O CONTROLLER MODULE PACKAGE	EMB5-03-IOC-3
		EMB5-03-001
NTZZ32EM	I/O Controller Module Pkg.	EMB5-03-002
NTZZ32EN	I/O Controller Module	EMB5-03-IOC-2
		EMB5-03-002
NTZZ32FA	Disk Drive Unit Shelf Package	EMB5-03-DDU
		EMB5-03-001
NTZZ32FM	Disk Drive Unit Shelf Package	EMB2-20-DDU-1
		EMB5-03-002
NTZZ32GA	228 MB Disk Drive	EMB5-03-DDU
NTZZ32HA	Int. CIOE Stratum II ROS Pkg	EMB2-20-006
		EMB5-03-ST1
		EMB5-03-001
NTZZ32HM	Stratum II RMT Osc. Shelf (-48V)	EMB2-20-ROS-3
		EMB5-03-002
NTZZ32JA	STRATUM 2.5 RMT OSC. SHELF	EMB5-03-ST2
		EMB5-03-001
NTZZ32JM	Stratum 2.5 RMT Osc. Shelf	EMB2-20-ROS-4
		EMB5-03-002
NTZZ32LA	Mag Tape Drive Int. Market	EMB5-03-002
NTZZ32LB	Magnetic Tape Drive Assembly	EMB5-03-MTD-3
		EMB5-03-002
NTZZ32NA	140 MByte DPP Assembly	EMB2-20-DPP-3
		EMB5-03-002
NTZZ32NM	140 MByte DPP Assembly	EMB2-20-DPP-4
		EMB5-03-002
NTZZ32PA	380 MByte DPP w/56K/Compr.	EMB5-03-002
NTZZ32PM	380 MByte DPP Assembly	EMB2-20-DPP-5
		EMB5-03-002
NTZZ32QA	DPP Mounting Hdwr CIOE B	EMB5-03-002
NTZZ32QB	DPP Mounting Hdwr CIOE B	EMB5-03-002
		EMB5-03-DPP-2

NTZZ34AB	DMS SUPERNODE SE	EMB4-06-001
NTZZ34AF	DMS SuperNode SE	EMB4-06-007
NTZZ34AG	DMS SuperNode SE	EMB4-06-009
NTZZ34AH	DMS SuperNode SE	EMB4-06-011
NTZZ34BA	SUPERNODE SE ENI COMMON CP	EMB4-06-001
NTZZ34BB	DMS SNSE ENI Common CP	EMB4-06-007
		EMB4-06-009
NTZZ34CA	DMS SuperNode SE	EMB4-06-IF-1
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NTZZ34DA	DMS SuperNode SE	EMB4-06-IF-2
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NTZZ34EA	DMS SUPERNODE SE	EMB4-06-001
NTZZ34EB	DMS SNSE LIS Common CP	EMB4-06-007
		EMB4-06-009
NTZZ34EC	DMS SNSE LIS Common CP	EMB4-06-011
NTZZ34FA	DMS SuperNode SE	EMB4-06-NET-1
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
NTZZ34FB	DMS SNSE 4K ENET	EMB4-06-011
NTZZ34GA	DMS SuperNode SE	EMB4-06-ENI-2
		EMB4-06-001
NTZZ34GB	DMS SNSE ENI F-Bus Common CP	EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NTZZ34JA	DMS SuperNode SE	EMB4-06-IF-3
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NTZZ34JB	System Load Module 1A	EMB4-06-011
NTZZ34JC	System Load Module III	EMB4-06-011
NTZZ34JD	Combined Clock CP	EMB4-06-011

NTZZ34JE	SNSE SE 20 Processor	EMB4-06-011
NTZZ34JF	MS Processor	EMB4-06-011
NTZZ34KA	DMS SNSE ENI Common CP	EMB4-06-008
		EMB4-06-010
NTZZ34LA	DMS SuperNode SE LIS Common CP (-6	EMB4-06-LIS-60V
NTZZ34LB	DMS SNSE LIS Common CP	EMB4-06-008
		EMB4-06-010
NTZZ34MD	DMS SuperNode SE Combined Cabinet:	EMB4-06-008
NTZZ34ME	DMS SuperNode SE Combined Cabinet:	EMB4-06-010
NTZZ34PA	Global +5V Power Converter	EMB4-05-001
		EMB4-06-011
NTZZ34PB	Redundant Power Converter	EMB4-06-011
NTZZ34PC	Global -5V Power Converter	EMB4-05-001
		EMB4-06-011
NTZZ34PE	Global +5V/-5V Power Conv	EMB4-06-011
NTZZ34PF	Global +5V/+12V Power Conv	EMB4-06-011
NTZZ35BA	APC APPLICATION PROCESSOR LEFT	EMB4-04-AP-1
NTZZ35CA	APC FILE PROCESSOR LEFT	EMB4-04-FP-1
		EMB4-08-000
NTZZ35DA	APC APPLICATION PROCESSOR RIGHT	EMB4-04-AP-2
NTZZ35EA	APC FILE PROCESSOR RIGHT	EMB4-04-FP-2
		EMB4-08-000
NTZZ35FA	APC STORAGE DEVICE LEFT	EMB4-04-SD-1
		EMB4-08-000
NTZZ35GA	APC STORAGE DEVICE RIGHT	EMB4-04-SD-2
		EMB4-08-000
NTZZ35HA	APC STORAGE DEVICE (FULL SHELF)	EMB4-04-SD-3
NTZZ35JA	APC Pack Fill Right	EMB4-04-FP-3
		EMB4-08-000
		EMB4-04-APC-6
		EMB4-04-APC-4
NTZZ35KA	STORAGE DEVICE PACK FILL RIGHT WIT	EMB4-04-SD-4
NTZZ35MB	APC (C/42) -48V	EMB4-04-APC-4
NTZZ35PB	APC (C/42) -60V	EMB4-04-APC-6
NTZZ35QA	APC AP LEFT (C/42)	EMB4-04-APL
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
NTZZ35RA	APC FP LEFT (C/42)	EMB4-04-FPL
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
NTZZ35SA	APC AP Right (C/42)	EMB4-04-APR
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
NTZZ35TA	APC FP Right (C/42)	EMB4-04-FPR
		EMB4-04-APC-6
		EMB4-04-APC-4

		EMB4-04-APC-7
NTZZ35UA	APC SD LEFT(C/42)	EMB4-04-APC-4
NTZZ35VA	APC SD RIGHT	EMB4-04-APC-4
NTZZ35WA	APC SD (FULL SHELF-C/42)	EMB4-04-APC-4
NTZZ35XA	APC SD LEFT(C/42)	EMB4-04-APC-6
		EMB4-04-APC-7
NTZZ35YA	APC SD RIGHT	EMB4-04-APC-6
		EMB4-04-APC-7
NTZZ35ZA	APC SD (FULL SHELF-C/42)	EMB4-04-APC-6
		EMB4-04-APC-7
NTZZ36AA	Headset Jack Assy 10 Ft	EMB8-01-000
		EMB8-02-JA-2
NTZZ36EA	TOPS MPX HEADSET JACK ASSEMBLY	EMB8-02-JA-3
		EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
NTZZ36FA	TOPS MPX Posn BB w/ NTN51GB	EMB8-02-003
NTZZ36GA	TOPS MPX Posn w/ NTN51FB	EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
NTZZ36GB	TOPS MPX Posn w/ NTN51FB	EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
NTZZ36GC	TOPS MPX POSITION BB W/ NTN51PB	EMB8-02-MPX-10
		EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
NTZZ36GD	TOPS MPX POSITION BB W/ NTN51PB &	EMB8-02-MPX-11
		EMB8-02-006
NTZZ36GE	TOPS MPX ISA Pos. W/O Mon.	EMB8-02-006
		EMB8-02-MPX-12
NTZZ37AB	Cabinetized International Peripher	EMB2-06-ZZ37AB
NTZZ37AC	Cabinetized International Peripher	EMB2-06-ZZ37AC
NTZZ37AM	International CIOE	EMB2-20-006
NTZZ37BA	CIPE Common CP	EMB2-06-ZZ37AB
		EMB2-20-CP-1
		EMB2-06-ZZ41DA
NTZZ37BB	CIPE Common CP XPM+	EMB2-06-ZZ37AB
		EMB2-06-ZZ37BB
		EMB2-06-ZZ41DA
NTZZ37BC	Int. XPM Non-ISDN 48V Cmn CP	EMB2-06-ZZ41AA
NTZZ37BD	Int. XPM+ Non-ISDN 48V Cm CP	EMB2-06-ZZ41AA
NTZZ37BM	INTERNATIONAL CIOE MTD PACKAGE	EMB2-20-MTD
		EMB2-20-006
NTZZ37CB	PCM-30 Enh I/F H/W Kit Upper	EMB2-06-ZZ37AB

NTZZ37CC	PCM-30 Enh I/F H/W Kit Lower	EMB2-06-ZZ37CB EMB2-06-ZZ37AB EMB2-06-ZZ37CC
NTZZ37CD	PCM-30 Bas I/F H/W Kit Upper	EMB2-06-ZZ37AB EMB2-06-ZZ37CD EMB2-06-ZZ37AC
NTZZ37CE	PCM-30 Bas I/F H/W Kit Lower	EMB2-06-ZZ37AB EMB2-06-ZZ37CE EMB2-06-ZZ37AC
NTZZ37CH	DS512 Network Interface Kit	EMB2-06-ZZ41DA EMB2-06-ZZ41AA
NTZZ37CJ	PCM-30 Enh I/F H/W Kit Upper	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTZZ37CK	PCM-30 Enh I/F H/W Kit Lower	EMB2-06-ZZ37AB EMB2-06-ZZ37AC
NTZZ37CL	Personality Plates Lo-Kit	EMB2-06-ZZ37AC
NTZZ37CM	Int. CIOE IOC Package	EMB2-20-006
NTZZ37CN	DS30 Network Interface Upper Modul	EMB2-06-ZZ37CN
NTZZ37CP	DS30 Network Interface Lower Modul	EMB2-06-ZZ37CP
NTZZ37CQ	DS512 Network Interface	EMB2-06-ZZ37AB EMB2-06-ZZ37CQ EMB2-06-ZZ37AC
NTZZ37CR	International CIOE IOC Package	EMB2-20-IOC-3 EMB2-20-006
NTZZ37CS	CIPE PCM-30 Enhanced I/F H/W Kit,	EMB2-06-ZZ37CS EMB2-06-ZZ37AC
NTZZ37CT	CIPE PCM-30 Enhanced I/F H/W Kit,	EMB2-06-ZZ37CT EMB2-06-ZZ37AC
NTZZ37CU	Personality Plates Up-Kit	EMB2-06-ZZ37AC
NTZZ37DM	INTERNATIONAL CIOE DPP PACKAGE	EMB2-20-DPP EMB2-20-006
NTZZ37EM	International CIOE DDU Package	EMB2-20-DDU EMB2-20-006
NTZZ37FM	International CIOE Stratum 2.5 ROS	EMB2-20-ROS-1 EMB2-20-006
NTZZ37GM	Int. CIOE Stratum II ROS Pkg	EMB2-20-006
NTZZ37RB	International CTME AXU/OAU Package	EMB2-20-AXU-1
NTZZ37SA	International CTME DRA Package	EMB2-20-DRA
NTZZ37TA	International CTME MTM Package	EMB2-20-MTM
NTZZ37VA	International CTME T8A Package	EMB2-20-T8A
NTZZ37WA	International CTME TM8 Package	EMB2-20-TM8
NTZZ37XA	International CDSN	EMB2-20-007
NTZZ37YA	INTERNATIONAL CDSN COMMON CP	EMB2-20-CP-3 EMB2-20-007
NTZZ38AA	ICRM - DUPLEX	EMB9-10-ICRM-1
NTZZ38AM	MTXD - I/O Basic (Universal)	EMB10-13-001 EMB10-17-MCEX-1 EMB10-17-001 EMB9-03-IOE-1

NTZZ38BA	ICRM - Simplex	EMB9-10-ICRM-2
NTZZ38BM	MDSP (GREY)	EMB9-15-000
NTZZ38CA	ICRM EXP SHELF - DUPLEX	EMB9-10-ICRM-3
NTZZ38CM	MTXD - DDU Assembly	EMB10-17-MCEX-1
		EMB10-17-001
NTZZ38DA	ICRM EXP SHELF - SIMPLEX	EMB9-10-ICRM-4
NTZZ38DM	MTXD - MTD Assembly	EMB9-03-MTD-1
		EMB10-17-MCEX-1
		EMB10-17-001
NTZZ38EA	MCTM - ISDN (GREY)	EMB10-20-000
NTZZ38EM	MTXD - Filler Panel Assy Kit	EMB10-13-001
		EMB10-17-MCEX-1
		EMB10-17-001
		EMB9-03-CGM-1
NTZZ38FM	MCSS (GREY)	EMB10-14-000
NTZZ38HM	MTXD - PTM	EMB9-03-PTM-1
		EMB10-12-000
NTZZ38JA	MCEX (BROWN)	EMB10-17-001
NTZZ38JM	MCSS (BROWN)	EMB10-14-001
NTZZ38KM	MNET (GREY)	EMB10-08-000
NTZZ38LA	DICP - DSPM SHELF KIT	EMB9-03-DSP-1
		EMB9-03-DRS-G
		EMB9-03-DRS-B
NTZZ38LM	MNET (BROWN)	EMB10-08-001
NTZZ38MA	MDSP - DSPM SHELF KIT	EMB9-03-DSP-2
		EMB9-15-000
NTZZ38PA	MCGM (BROWN)	EMB10-13-001
NTZZ38QA	FILLER FACE PLATE PACKAGE	EMB9-03-FFP
		EMB9-03-DRS-G
		EMB9-03-DRS-B
NTZZ38RA	MTX - DSPM COMMON CP	EMB9-03-DSP-3
		EMB9-15-000
		EMB9-03-DRS-G
		EMB9-03-DRS-B
NTZZ38SA	DICP - Gray Cabinet	EMB9-03-DRS-G
NTZZ38TA	DICP - Brown Cabinet	EMB9-03-DRS-B
NTZZ38UA	MCAM (GRAY)	EMB10-12-000
NTZZ38WA	MTX-ICP Common CP (< BCS32+)	EMB10-20-000
		EMB10-08-000
		EMB10-08-001
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB9-03-ICP-1
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTZZ38XA	MTX-ICP Common CP (>=BCS32+)	EMB10-20-000
		EMB10-08-000
		EMB10-08-001
		EMB9-03-DRS-G

		EMB9-03-DRS-B
		EMB9-03-ICP-2
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTZZ38YA	MTX - ICP Common CP	EMB9-03-ICP-3
		EMB10-20-000
		EMB10-08-000
		EMB10-08-001
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NTZZ40AA	INTEGRATED SERVICES MODULE EQUIPME	EMB2-02-ISM-2
NTZZ41AA	International Frame LGE/DTE Non-IS	EMB2-06-ZZ41AA
NTZZ41AM	Internat. Metallic Test Unit	EMB2-01-IMT-1
		EMB2-01-IMT-4
		EMB2-01-INT-7
		EMB2-01-INT-9
NTZZ41BA	Int. XPM Non-ISDN 48V Cmn CP	EMB2-06-ZZ41AA
		EMB2-06-ZZ41BA
NTZZ41CA	30 UNIVERSAL TONE RCVR CCTS, INTER	EMB2-06-UTR-3
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
NTZZ41CM	Int. Trans. Test Unit(A-Law)	EMB2-01-IMT-1
		EMB2-01-IMT-5
		EMB2-01-INT-7
		EMB2-01-INT-9
NTZZ41DA	International Common Peripheral Eq	EMB2-06-ZZ41DA
NTZZ41DM	Int. Trans. Test Trk (A-Law)	EMB2-01-IMT-1
		EMB2-01-IMT-6
		EMB2-01-INT-7
		EMB2-01-INT-9
NTZZ41EA	International XPM ISDN 48VDC Commo	EMB2-06-ZZ41EA
		EMB2-06-ZZ41DA
NTZZ41JA	Line Concentrating Equipment	EMB2-07-003
NTZZ41KA	Remote Maint Mod - UK	EMB2-14-IRM-2
		EMB2-14-MMR-1
NTZZ41PA	International Double Shelf Network	EMB3-01-NET-4
		EMB3-01-000
NTZZ41RB	International Remote Line Concentr	EMB2-14-IRM-2
NTZZ41SA	Remote Maint Mod - TURKEY	EMB2-14-IRM-2
		EMB2-14-MMR-2
NTZZ41TA	Remote Maint Mod - CEP	EMB2-14-IRM-2
		EMB2-14-MMR-3
NTZZ41UA	ESA CP PACKAGE (CHINA)	EMB2-14-IES-1
		EMB2-14-IRM-2
NTZZ41VA	ESA CP PACKAGE (CEP)	EMB2-14-IES-2
		EMB2-14-IRM-2
NTZZ41WA	ESA CP PACKAGE (UK)	EMB2-14-IES-3

NTZZ41WT	Ringing Generator CP(N.A.)	EMB2-14-IRM-2 EMB2-07-003 EMB2-19-002
NTZZ41XA	International Maintenance Trunk Mo	EMB2-01-IMT-1 EMB2-01-000
NTZZ41XT	RINGING GENERATOR (UK)	EMB2-07-IRG-1 EMB2-07-003
NTZZ41YA	International Maintenance Trunk Mo	EMB2-01-IMT-2 EMB2-01-000
NTZZ41YT	RINGING GENERATOR (CHINA)	EMB2-07-IRG-2 EMB2-07-003 EMB2-19-002
NTZZ41ZA	INTERNATIONAL 8 WIRE TME	EMB2-01-IMT-3 EMB2-01-000
NTZZ41ZT	RINGING GENERATOR (AUSTRALIA)	EMB2-07-IRG-3 EMB2-07-003
NTZZ42AA	MDS Messaging Controller Shelf	EMB19-02-MC-1
NTZZ42AM	MDS Remote Storage Node Miscellane	EMB19-02-RSTORE EMB19-02-STORE
NTZZ42BB	MDS Messaging Controller Shelf	EMB19-02-MC-6
NTZZ42CA	MDS Messaging Controller Shelf	EMB19-02-MC-3
NTZZ42CM	Hub Unit 48-Port	EMB19-04-001 EMB19-02-HUB2
NTZZ42DB	MDS Messaging Controller Shelf	EMB19-02-MC-8
NTZZ42EB	MDS Attendant Controller Shelf (V.	EMB19-02-AC-2
NTZZ42GB	MDS Operations Controller Shelf	EMB19-02-OP-1
NTZZ42KB	I/O Controller V.35	EMB19-04-000 EMB19-02-IOC-3
NTZZ42LA	I/O Controller RS232	EMB19-04-000 EMB19-02-IOC-2
NTZZ42MA	Inverter 48V 500VA	EMB19-04-001 EMB19-02-INV
NTZZ42TB	MDS Storage Node	EMB19-02-STORE
NTZZ42UB	MDS Miscellaneous Equipment	EMB19-02-MISC
NTZZ42VB	Local X.11 Terminal	EMB19-04-000 EMB19-04-001 EMB19-02-LOCAL
NTZZ42WA	Remote Dial-Up X.11 Terminal	EMB19-04-000 EMB19-04-001 EMB19-02-RDIAL
NTZZ42XA	Remote Dedicated X.11 Term.	EMB19-04-000 EMB19-04-001 EMB19-02-RDED
NTZZ42YA	Printer	EMB19-04-000 EMB19-04-001 EMB19-02-PRT
NTZZ42ZA	MDS Rollup Terminal Bld Blk	EMB19-02-MISC EMB19-02-ROLL
NTZZ43AA	Int. XPM+ ISDN 48V Common CP	EMB2-06-ZZ41DA

		EMB2-06-ZZ43AA
NTZZ43CA	RINGING GENERATOR (SL100 UK)	EMB2-14-IRG-1
		EMB2-14-IRM-2
NTZZ43CF	RINGING GENERATORS, AUSTRALIA	EMB2-14-IRG-5
		EMB2-14-IRM-2
NTZZ43DA	RINGING GENERATOR (CHINA)	EMB2-14-IRG-2
		EMB2-14-IRM-2
NTZZ43EA	Ringing Generator Turkey/CEP	EMB2-14-IRM-2
NTZZ43EB	Ringing generator (Turkey/CEP)	EMB2-14-IRG-4
		EMB2-14-IRM-2
NTZZ43MA	International Line Concentrating M	EMB2-14-ILCM
NTZZ43MB	International LCM	EMB2-07-003
		EMB2-14-ILCM-2
NTZZ44AA	Application Processing Unit	EMB2-16-APU-1
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NTZZ44BA	VPU	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-16-VPU-1
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NTZZ44CM	36 Link LPP -48V Brwn, BCS33 & BEL	EMB2-16-LPP-1
NTZZ44CP	36 Link LPP -48V, BCS34 and ABOVE	EMB2-17-LPP-48V
NTZZ44DA	LIU7 w Channel Bus I/F (CBI)	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
NTZZ44DB	CCS7 8Meg E-LIU (CBI)	EMB2-16-LI-20
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-011
NTZZ44DC	CCS7 E-LIU (CBI)	EMB4-06-011
NTZZ44EA	LIU7 (Japan ISUP with CBI)	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
NTZZ44EB	CCS7 8Meg E-LIU (JAPAN ISUP with C	EMB2-16-LI-21
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NTZZ44FM	36 Link LPP -48V Gray, BCS33 & BEL	EMB2-16-LPP-3
NTZZ44GM	36 Link LPP -60V Gray, BCS33 & BEL	EMB2-16-LPP-4
NTZZ44GP	36 Link LPP -60V, BCS34 and ABOVE	EMB2-17-LPP-60V
NTZZ44HA	Non Cabinetized Bulkhead and cable	EMB2-16-BLK-4

		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NTZZ44JA	Cabinetized Bulkhead and cable ass	EMB2-16-BLK-3
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NTZZ44KM	36 Link LPP -48V, Non-Cabinetized,	EMB2-16-LPP-2
NTZZ44LA	Power Converter (48V/60V) (BCS36	EMB2-16-CNV-RD
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NTZZ44MA	Power Converter (60V)	EMB2-16-CNV-60V
		EMB2-17-LPP-60V
NTZZ44NA	Power Converter (48V)	EMB2-16-CNV-48V
		EMB2-17-LPP-48V
NTZZ44NP	Enh. DMS-Bus System Clock	EMB4-06-011
NTZZ45MA	CMIS MSP B-Feed Filtered Battery F	EMB16-04-BFK-2
NTZZ45MM	CMIS MSP B-Feed Filtered Battery F	EMB16-04-BFK-3
NTZZ45PA	Remote Maintenance Module	EMB2-24-RMM-3
		EMB13-01-005
NTZZ46EB	RCC Common CP Fill (XPM+)	EMB2-15-005
NTZZ46EC	RCC Common CP Fill (XPM+)	EMB2-15-005
NTZZ46ED	RCC Common CP Fill (XPM+)	EMB2-15-005
NTZZ46EF	RCC Common CP Fill (XPM+)	EMB2-15-005
NTZZ46EG	RCC Common CP Fill (ADSI)	EMB2-15-005
NTZZ46EH	RCC Common CP Fill (XPM+)	EMB2-15-005
		EMB2-15-015
NTZZ46FA	C01/C02 to Aisle ALM1/2 Cable Asse	EMB2-16-CAB-2
NTZZ46GA	BAMD Alarm/Power Cable Assembly	EMB2-16-CAB-3
NTZZ47AB	Cabinetized Line Concentrating Equ	EMB2-09-LCE-2
NTZZ47BB	Cabinetized Line Module ISDN	EMB2-09-LCE-4
NTZZ47BC	Cabinetized Line Module ISDN	EMB2-09-LCE-6
NTZZ47CB	Power Distribution Center (CPDC)	EMB16-02-003
NTZZ47DA	Cabinetized Trunk Module Equipment	EMB2-09-TME
NTZZ47DB	Cabinetized Trunk Module Equipment	EMB2-09-TME-1
NTZZ47DC	Cabinetized Trunk Module Equipment	EMB2-09-TME-3
NTZZ47EC	Cabinetized Input/Output	EMB5-03-002
NTZZ47FA	Cabinetized Dual Shelf Network	EMB3-01-001
NTZZ47GC	Cabinetized Common Peripheral Equi	EMB2-09-CPE-2
NTZZ47GD	Cabinetized Common Peripheral Equi	EMB2-09-CPE-3
NTZZ47PC	Model B Miscellaneous Equipment Ca	EMB13-01-005
NTZZ47QD	Remote Switching Center - SONET	EMB2-24-RCC-27
NTZZ47RQ	Remote Switching Center - SONET	EMB2-24-RCC-28
NTZZ47XA	CABINETIZED INTEGRATED SERVICES MO	EMB2-02-ISM-1
NTZZ50AA	MS-1 Operations Conference Node Ca	EMB19-03-000
NTZZ50AM	MS-1 Operations Node Cabinet	EMB19-03-001
NTZZ50BA	MS-1 Conference Node Cabinet	EMB19-03-002
NTZZ50BM	Meridian Auxiliary Cabinet-Overhea	EMB19-03-003
NTZZ50CA	Meridian Auxiliary Cabinet - Raise	EMB19-03-004
NTZZ50CM	MS-1 DATANET Building Block	EMB19-03-DNET-1
		EMB19-03-000

		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NTZZ50DA	Meridian Applications Cabinet Hard	EMB19-03-HDW-1
		EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-003
		EMB19-03-004
		EMB19-03-006
		EMB19-03-007
NTZZ50DM	Meridian Applications Cabinet Hard	EMB19-03-HDW-2
		EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-003
		EMB19-03-004
		EMB19-03-006
		EMB19-03-007
NTZZ50EA	Meridian Applic. Cab. Cable Trough	EMB19-03-CTCP-1
NTZZ50EM	Meridian Applic. Cab. Cable Trough	EMB19-03-CTEC-1
NTZZ50FA	Meridian Applic. Cab. Lineup End C	EMB19-03-LEC-1
NTZZ50FM	Meridian Applic. Cab. Lineup End C	EMB19-03-LEC-2
NTZZ50GA	Meridian Applic. Cab. Anchoring an	EMB19-03-AIK-1
		EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-003
		EMB19-03-004
		EMB19-03-006
		EMB19-03-007
NTZZ50GM	MS-1 M4120 Voice and Data Terminal	EMB19-03-VDT-1
NTZZ50HA	MS-1 Serial Printer Building Block	EMB19-03-PRT-1
NTZZ50JA	MS-1 19.2K/9.6K UDS Modem Building	EMB19-03-UDS-1
		EMB19-03-003
		EMB19-03-004
NTZZ50KA	MS-1 Alarm Interface Building Bloc	EMB19-03-ALM-1
		EMB19-03-003
		EMB19-03-004
NTZZ50KM	MS-1 CN 48-Port Expansion	EMB19-03-002
		EMB19-03-48PE
NTZZ50LA	MS-1 UDS 224AT/D Dialup Access Bui	EMB19-03-UDS-2
		EMB19-03-003
		EMB19-03-004
NTZZ50MA	Operations Node - Conference Node	EMB19-03-OCEX-1
		EMB19-03-001
NTZZ50MM	MS-1 Operations Conference Node Ca	EMB19-03-006
NTZZ50NA	MS-1 Operations Node Cabinet	EMB19-03-007

NTZZ50NM	MS-1 M4110 Data Terminal	EMB19-03-VDT-2
NTZZ50PA	MS-1 Gateway Link Hardware	EMB19-03-MGW-1
		EMB19-03-006
		EMB19-03-007
NTZZ50PM	Operations Node - Conference Node	EMB19-03-OCEX-2
		EMB19-03-007
NTZZ51AA	NAV Controller Bay	EMB19-04-000
NTZZ51DA	Operations Controller Shelf	EMB19-04-000
		EMB19-04-OC-1
NTZZ51EA	Service Controller Shelf	EMB19-04-000
		EMB19-04-SC-1
NTZZ51FA	Integrated Controller Shelf	EMB19-04-000
		EMB19-04-IC-1
NTZZ51GA	Modem Shelf	EMB19-04-000
		EMB19-04-MM-1
		EMB19-04-001
NTZZ51HA	Standard DTL Kit	EMB19-04-000
		EMB19-04-SDTL
NTZZ51JA	Auxiliary Shelf	EMB19-04-000
		EMB19-04-AUX-1
NTZZ51KA	Redundant DTL Kit	EMB19-04-000
		EMB19-04-RDTL
NTZZ51LA	Backup DTL Kit	EMB19-04-000
		EMB19-04-BDTL
NTZZ51NA	Universal Modem Kit	EMB19-04-000
		EMB19-04-UM
		EMB19-04-001
NTZZ52AA	NAV Lan Bay	EMB19-04-001
NTZZ52BA	NAV Spares Bay	EMB19-04-002
NTZZ52CA	Hub Unit 12-Port	EMB19-04-001
		EMB19-04-HUB1
NTZZ60AA	MDSP (GREY)	EMB9-15-MDSP-1
NTZZ60BA	MCTM - ISDN (GREY)	EMB10-20-MCTMI
NTZZ60CA	MCTM - ISDN (BROWN)	EMB10-21-MCTMI
NTZZ60EA	MCEX (GREY)	EMB10-17-MCEX-1
NTZZ60FA	MCSS (BROWN)	EMB10-14-MCSS-2
NTZZ60JA	MCGM (GREY)	EMB10-13-MCGM-1
NTZZ60KA	MDSP (BROWN)	EMB9-15-MDSP-2
NTZZ60LA	MCGM (BROWN)	EMB10-13-MCGM-2
NTZZ60MA	MCAM (GRAY)	EMB10-12-MCAM-1
NTZZ60NA	MCAM (BROWN)	EMB10-12-MCAM-2
NTZZ97AA	CLASS Modem Resource	EMB2-06-CMR-2
		EMB2-15-002
		EMB2-15-005
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
		EMB2-06-ZZ41DA
		EMB2-06-ZZ37AC

NTZZ99AB	17GA TO 17GB CHANGE KIT	EMB2-99-ISDN-1
NTZZ99AE	NIF SMS PRODUCT CHANGE KIT	EMB2-99-SMS-2
NTZZ99AF	PC Kit (NTZZ19QA to QB)	EMB2-13-004
		EMB2-99-OPM-1
NTZZ99AG	UNIV 5.25 DDU UPGRADE KIT	EMB2-99-DDU-1
NTZZ99AK	FRIU Upgrade Kit	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB2-99-FIU
NTZZ99AM	PRODUCT CHANGE KIT	EMB2-99-ISDN-2
		EMB2-06-004
NTZZ99AN	XPM to XPM PLUS Product Change Kit	EMB2-99-XPM-5
		EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NTZZ99AP	486 Upgrade for C/D Series	EMB8-02-003
		EMB8-02-004
		EMB8-02-006
NTZZ99AR	Series 60 Upgrade Kit From Series	EMB4-03-KIT-2
		EMB4-05-009
NTZZ99AT	486 Upgrade for C/D Series	EMB8-02-003
		EMB8-02-004
		EMB8-02-006
NTZZ99AV	Series 60 Upgrade Kit	EMB4-03-KIT-3
		EMB4-05-009
NT0C25AD-35	LOGIC DIALER COLOUR-ASH	EMB11-01-MTS-1
NT0J04BA	3703 Local Test Cabinet Ash	EMB13-01-000
		EMB13-05-000
NT0J04BB	3703 Local Test Cab. Brown	EMB13-01-000
		EMB13-05-000
NT0J04DD	26" Mounting Adapters	EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NT0J04EA	Dig Rmt Test Unit (DRTU) Ash	EMB13-05-000
NT0J04EB	DRTU XFM	EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NT0J42BA	ESTU Master Module (EMM)	EMB13-01-000
		EMB13-05-000
		EMB13-01-005
		EMB13-01-003
NT0J43AA	ISDN Test Module (ITM)	EMB13-01-000
		EMB13-05-000
		EMB13-01-005
		EMB13-01-003
NT0J6_BA	LTC Mainframe Brown	EMB13-05-000

NT0J62BA	LTC 4 Trunk 3 Wire	EMB13-01-000 EMB13-01-003
NT0J63BA	LTC 4 Trunk 4 Wire	EMB13-01-000 EMB13-01-003
NT0J64BA	LTC 16 Trunk 4 Wire	EMB13-01-000 EMB13-01-003
NT0M36AA	French Universal Keyboard	EMB8-01-000
NT0M36AE	English Universal Keyboard	EMB8-01-000
NT0M36AF	Change Kit	EMB8-01-000
NT0M36AH	English IBM DA Keyboard	EMB8-01-000
NT0M36AK	Change Kit	EMB8-01-000
NT0M90PA	M4110 Data Controller	EMB19-03-VDT-2
NT0M90QA	M4120 IVD Controller	EMB19-03-VDT-1
NT0M90SA	TOPS MP TERMINAL BASE UNIT	EMB8-01-MTP
NT0M91BA	M4120 Keyboard	EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M91CA	MS-1 Keycap Kit	EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M92DA	M4120 Monochrome Monitor	EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M92FA	MONITOR	EMB8-01-MTP
NT0M96CA	Teledapt Cable (3 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96CB	Teledapt Cable (7 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96CC	Teledapt Cable (14 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96CD	Teledapt Cable (25 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96CE	Teledapt Cable (37 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96CF	Teledapt Cable (50 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96DQ	Cable M4000 Ser 10ft BELDEN	EMB19-02-RDIAL EMB19-02-RDED EMB19-02-PRT
NT0M96DS	Serial Printer Cable (50 ft)	EMB19-03-PRT-1
NT0M96DT	Serial Printer Cable (10 ft)	EMB19-03-PRT-1
NT0M96DU	Serial Printer Cable (25 ft)	EMB19-03-PRT-1
NT0M96FC	Straight Blade Power Cord	EMB8-01-000
NT0M96QE	Change Kit	EMB8-01-000
NT0M96RB	Teledapt Cable (200 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1

NT0M96SD	ALIU-FSP Cable	EMB19-03-VDT-2 EMB19-03-003 EMB19-03-004
NT0M96SH	RS232 Modem Cable (2.5 ft)	EMB19-03-UDS-1 EMB19-03-UDS-2
NT0M96SR	Teledapt Cable (3 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96SS	Teledapt Cable (7 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96ST	Teledapt Cable (14 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96SU	Teledapt Cable (25 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96SV	Teledapt Cable (37 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96SW	Teledapt Cable (50 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96SX	Teledapt Cable (200 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96TF	Teledapt Cable (100 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96TG	Teledapt Cable (100 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96TH	Teledapt Cable (150 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0M96TJ	Teledapt Cable (150 ft.)	EMB19-03-MGW-1 EMB19-03-VDT-1 EMB19-03-VDT-2
NT0R82AB	Voice Cbl, Posn-Junc Box	EMB19-03-VDT-2 EMB8-02-MPX-10 EMB8-02-MPX-11 EMB8-02-006 EMB8-02-MPX-12
NT0X0004	Grounding Kit	EMB19-03-AIK-1
NT0X0008	LOGIC RETURN CABLE ASSEMBLY	EMB4-01-000 EMB4-01-001
NT0X0009	Logic Cable Return Assy	EMB2-15-002 EMB2-15-005 EMB5-02-000 EMB2-06-004

NT0X0012	LOGIC RETURN CABLE ASSEMBLY	EMB2-06-ZZ41DA EMB4-01-000 EMB4-01-001
NT0X0013	ISOLATION MOUNTING H/W	EMB11-01-KSS-1 EMB13-01-000 EMB13-05-000 EMB13-01-003
NT0X02AB	Miscellaneous Equip. Frame	EMB13-01-000 EMB13-05-000 EMB13-01-003
NT0X0202	Power Pnl Misc Material Assy	EMB13-05-010
NT0X07AU	AC Hardware Mounting Plate	EMB13-05-000
NT0X10AA	Misc Scanner	EMB14-05-000 EMB2-13-004 EMB2-14-MMR-1 EMB2-14-MMR-2 EMB2-14-MMR-3 EMB2-14-MMR-4 EMB2-14-RMM-2 EMB2-15-RMC-1 EMB2-15-RMM-4 EMB2-15-RMM-5 EMB2-15-005 EMB2-24-RMM-1 EMB9-03-PTM-1 EMB2-24-RCC-27 EMB2-24-RCC-28 EMB10-13-001 EMB10-12-000 EMB2-14-RMM-4 EMB14-01-000
NT0X18CA	Dgtl Net Junctor Cntg Pnl	EMB3-03-000
NT0X18CB	Dgtl Net Intercon Frame	EMB3-03-000
NT0X18CC	Dgtl Net Junctor Cntg Pnl	EMB3-03-000
NT0X18DB	Dgtl Net Junctor Cntg Pnl	EMB3-03-000
NT0X18DC	Dgtl Net Junctor Cntg Pnl	EMB3-03-000
NT0X18DD	Dgtl Net Junctor Cntg Pnl	EMB3-03-000 EMB3-08-000 EMB3-09-NJC
NT0X19AC	OPM Cabinet Assy Maple Brown	EMB2-13-004 EMB2-13-005
NT0X19AD	OPM Cabinet Assy Grey-Green	EMB2-13-004 EMB2-13-005
NT0X19AE	OPM Cabinet Assy Ivory	EMB2-13-004 EMB2-13-005
NT0X1929	Mounting Plate Assembly	EMB2-13-004 EMB2-13-005
NT0X1934	Mounting Template	EMB2-13-004 EMB2-13-005

NT0X1935	Mounting Hardware Kit	EMB2-13-004 EMB2-13-005
NT0X1978	NT Fiber Sh FMT-150B Mtg Kit	EMB2-13-004
NT0X1979	AT&T Fib Sh DDM-1000 Mtg Kit	EMB2-13-004
NT0X1980	DE-4E Mtg Kit 4Pin-Stubless	EMB2-13-004
NT0X1981	DE-4E Mtg Kit 5Pin-Stubless	EMB2-13-004
NT0X1982	DE-4E Mtg Kit 5Pin-50ft Stub	EMB2-13-004
NT0X1989	Single FMT-6 Kit	EMB2-13-004
NT0X1990	Dual FMT-6 Kit	EMB2-13-004
NT0X2005	Right Hand Col Maple Brn	EMB2-13-004
NT0X2056	BATTERY TRAY ASSEMBLY	EMB2-13-BSP EMB2-13-004
NT0X21AH	SHIMS	EMB8-01-ASY-1 EMB8-01-ASY-2
NT0X21AV	for Earthquake Zone 1-2	EMB19-03-AIK-1 EMB8-01-ASY-1 EMB8-01-ASY-3
NT0X21AW	for Earthquake Zone 3-4	EMB19-03-AIK-1 EMB8-01-ASY-2
NT0X24BD	Blank Shelf Assembly	EMB3-01-NET-5 EMB3-01-NET-6 EMB4-08-000 EMB3-06-000 EMB3-06-001 EMB2-16-007 EMB4-04-APC-6 EMB4-04-APC-4 EMB4-04-APC-7
NT0X24BH	CABLE TROUGH (BROWN)	EMB4-06-001
NT0X24BT	Frame Fail Lamp (Brown)	EMB19-01-000 EMB19-01-001 EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB3-01-NET-5 EMB3-01-NET-6 EMB4-08-000 EMB3-06-000 EMB3-06-001
NT0X24CN	Frame Fail Lamp (Grey)	EMB19-01-000 EMB19-01-001 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB3-01-NET-5 EMB3-01-NET-6 EMB4-08-000

		EMB3-06-000
		EMB3-06-001
NT0X2430	KICK PLATE ASSY (BROWN)	EMB4-08-000
NT0X25AA	Common Framework (U.S.)	EMB2-15-002
NT0X25AH	Universal Framework	EMB13-01-000
		EMB13-02-000
		EMB16-02-010
		EMB16-02-019
		EMB2-01-000
		EMB2-02-ISM-2
		EMB2-07-000
		EMB2-07-004
		EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-15-002
		EMB2-15-005
		EMB2-19-005
		EMB3-01-000
		EMB3-02-000
		EMB3-03-000
		EMB4-01-000
		EMB4-01-001
		EMB5-02-000
		EMB16-02-000
		EMB2-06-004
		EMB13-05-000
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
		EMB5-01-000
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB13-01-003
		EMB2-14-006
		EMB2-07-003
		EMB3-01-701
		EMB2-19-002
NT0X25AV	Universal Framework	EMB13-01-000
		EMB2-15-002
NT0X25AX	CABLE TROUGH (GRAY)	EMB4-06-001
NT0X25AY	SUPERNODE SPARE STORAGE SHLF	EMB13-06-000
NT0X2516	KICK PLATE ASSEMBLY (GREY)	EMB4-08-000
NT0X28AF	FRAME SUPERVISORY PANEL	EMB4-01-000
		EMB4-01-001
		EMB5-02-000
NT0X28AK	Frame Supervisory Panel	EMB3-01-000
NT0X28AL	Frame Supervisory Panel	EMB5-01-000

NT0X28AM	ILGC/IDTC Fr Supervisory Pnl	EMB2-06-ZZ41AA
NT0X28AS	Remote Cntrl Eqpt Fr Panel	EMB2-15-005
NT0X28EB	Frame Supervisory Panel	EMB2-06-004
		EMB2-06-ZZ41DA
NT0X28EC	Remote Cntrl Eqpt Fr Panel	EMB2-15-002
NT0X35CC	Cabinet Cable Turning Sect.	EMB3-06-000
		EMB3-06-001
NT0X36AB	Power Control & Alarm CP	EMB5-01-000
NT0X40AB	Frame Supervisory Panel	EMB16-02-010
		EMB16-02-000
NT0X40UA	Frame Supervisory Panel	EMB16-02-019
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X40UB	Frame Supervisory Panel	EMB16-02-019
		EMB13-05-010
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X42AA	Power Distribution Centre Fr	EMB16-02-010
		EMB16-02-000
NT0X42AB	FUSE PANEL "A" FEED	EMB16-02-FP-1
		EMB16-02-010
		EMB16-02-000
NT0X42AC	FUSE PANEL "B" FEED	EMB16-02-FP-1
		EMB16-02-010
		EMB16-02-000
NT0X42AD	FILLER PANEL ASSEMBLY	EMB16-02-FFP-1
NT0X42AG	Filter Panel	EMB16-02-010
		EMB16-02-000
NT0X42AH	Filler Panel	EMB16-02-010
		EMB16-02-019
		EMB16-02-000
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X42AJ	10 Amp Fuse	EMB13-05-010
NT0X42AK	20A Power Distribution Fuse	EMB16-02-010
		EMB16-02-019
		EMB16-02-000
		EMB13-05-010
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X42AM	Ground Panel (5.5")	EMB13-05-010

NT0X42AN	05 Amp Fuse	EMB13-05-010
NT0X42AS	30 Amp Fuse	EMB13-05-010
NT0X42AT	ISG/EMI Logical Return	EMB16-02-019
		EMB16-02-000
		EMB16-02-020
NT0X42AU	ISDN Fuse Panel Assy	EMB16-02-010
		EMB16-02-019
		EMB16-02-000
		EMB16-02-020
		EMB16-02-022
NT0X42UA	U.L. PDC Frame	EMB16-02-019
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X42UB	U.L. FUSE PANEL "A" FEED	EMB16-02-FP-2
		EMB16-02-019
		EMB13-05-010
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X42UC	U.L. FUSE PANEL "B" FEED	EMB16-02-FP-2
		EMB16-02-019
		EMB13-05-010
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X42UE	Ground Panel - Top Feed	EMB16-02-019
		EMB16-02-000
		EMB16-02-020
		EMB16-02-021
NT0X42UF	Ground Panel - Bottom Feed	EMB16-02-010
		EMB16-02-022
		EMB16-02-023
NT0X42UG	Filter Panel	EMB16-02-019
		EMB13-05-010
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X42XA	ISG Auxiliary Battery	EMB16-02-019
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X42XB	Non-ISG Auxiliary Battery	EMB16-02-019
		EMB16-02-020

		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X42XC	Enhanced Alarm Service	EMB16-02-010
		EMB16-02-019
		EMB16-02-000
		EMB13-05-000
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X42XE	PDC Battery Return Kit	EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X4203	FUSE PANEL ASSY "A" FEED	EMB16-02-FP-1
NT0X4204	Cable Assy.	EMB16-02-019
		EMB16-02-000
		EMB16-02-020
		EMB16-02-021
NT0X4206	Cable Assembly	EMB16-02-010
		EMB16-02-022
		EMB16-02-023
NT0X4208	Cable Assy.	EMB16-02-019
		EMB16-02-000
		EMB16-02-020
		EMB16-02-021
NT0X4235	EAS Cable Assembly	EMB16-02-019
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X4236	EAS Cable Assembly	EMB16-02-019
		EMB16-02-020
		EMB16-02-021
		EMB16-02-022
		EMB16-02-023
NT0X43AD	IOE Frame	EMB5-01-000
NT0X43BA	Modem Equipment Frame	EMB5-02-000
NT0X43WC	Wiring: Stratum II/2.5	EMB5-01-000
NT0X43WD	Wiring: Stratum II/2.5	EMB5-01-000
NT0X43XD	IOE Inverter ISG Kit	EMB13-01-000
		EMB5-02-000
		EMB13-05-000
		EMB13-01-003
NT0X4301	POWER CABLE	EMB5-01-DDU-1
		EMB5-01-000
NT0X4302	POWER CABLE	EMB5-01-DDU-1
		EMB5-01-000

NT0X4303	Connector & Housing Assy	EMB5-02-000
NT0X4304	Local Cable Assembly	EMB5-02-000
NT0X4306	Local Cable Assembly	EMB5-02-000
NT0X4307	Power Cable Assembly	EMB5-02-000
NT0X4308	Power Cable Assembly	EMB5-02-000
NT0X4309	Power Cable Assembly	EMB5-02-000
NT0X4310	Power Cable Assembly	EMB5-02-000
NT0X4311	Cable Assembly	EMB5-02-000
NT0X4312	Power Cable Assembly	EMB5-02-000
NT0X4313	Power Cable Assembly	EMB5-02-000
NT0X4314	Power Cable Assembly	EMB5-02-000
NT0X4315	Power Cable Assembly	EMB5-02-000
NT0X4316	Power Cable Assembly	EMB5-02-000
NT0X4317	Power Cable Assembly	EMB5-02-000
NT0X44AB	MAG TAPE DRIVE UNIT (COOK)	EMB5-03-MTD EMB5-03-MTD-2 EMB5-01-000
NT0X44AD	Magnetic Tape Drive Hardware	EMB5-03-002 EMB10-13-001 EMB9-03-MTD-1
NT0X44BB	MAG TAPE DRIVE UNIT (COOK)	EMB2-20-MTD EMB2-20-006 EMB5-03-MTD-3
NT0X46AB	Trunk Module Equip Frame	EMB2-01-000
NT0X46XA	EAS Change Kit	EMB2-01-000
NT0X50AA	Filler Face Plate 0.875	EMB2-01-IMT-1 EMB2-01-IMT-2 EMB2-01-INT-7 EMB2-01-INT-9 EMB2-01-MTM-1 EMB2-01-MTM-2 EMB2-01-MTM-3 EMB2-01-MTM-5 EMB2-06-DTC-4 EMB2-06-DTC-5 EMB2-06-DTC-6 EMB2-06-DTP EMB2-06-DTX EMB2-06-LGC-1 EMB2-06-LGC-2 EMB2-06-LGC-3 EMB2-06-LGC-6 EMB2-06-LGC-7 EMB2-06-LGP EMB2-06-LGX EMB2-06-LTC-1 EMB2-06-LTC-2 EMB2-06-LTC-3 EMB2-06-LTC-6

EMB2-06-LTC-7
EMB2-06-LTP
EMB2-06-LTX
EMB2-06-SMA-12
EMB2-06-SMA-14
EMB2-06-SMA-16
EMB2-06-SMS-3
EMB2-06-SMS-4
EMB2-06-SMS-5
EMB2-06-SMS-7
EMB2-06-SMS-8
EMB2-06-SMSR-3
EMB2-06-SMSR-5
EMB2-06-SMU-11
EMB2-06-SMU-14
EMB2-06-SMU-15
EMB2-06-SMU-16
EMB2-06-SMU-2
EMB2-06-SMU-7
EMB2-06-SMU-9
EMB2-06-UPI
EMB2-06-ZZ37AB
EMB2-06-ZZ41EA
EMB2-11-FFP-1
EMB2-13-004
EMB2-14-IRM-2
EMB2-14-IRM-5
EMB2-14-MMR-1
EMB2-14-MMR-2
EMB2-14-MMR-3
EMB2-14-MMR-4
EMB2-14-004
EMB2-15-RCCI-1
EMB2-15-RCCI-2
EMB2-15-RMM-4
EMB2-15-002
EMB2-15-005
EMB2-15-014
EMB2-15-015
EMB2-18-CPC-2
EMB2-18-CPC-3
EMB2-18-CPC-5
EMB2-18-004
EMB2-20-CP-1
EMB2-20-CP-3
EMB2-20-IOC-3
EMB2-20-007
EMB2-24-RMM-1
EMB2-24-RMM-3

EMB2-99-ISDN-1
EMB2-99-XPM-1
EMB2-99-XPM-2
EMB2-99-XPM-5
EMB3-01-NET-1
EMB3-01-NET-2
EMB3-01-NET-3
EMB3-01-NET-4
EMB3-01-001
EMB3-07-NCK-1
EMB3-07-NCK-2
EMB3-07-NCK-3
EMB3-07-NCK-4
EMB3-07-000
EMB5-01-IOC-4
EMB5-03-IOC-2
EMB5-03-IOC-3
EMB8-01-PCE
EMB8-02-TPC
EMB9-03-DSP-1
EMB9-03-DSP-2
EMB9-03-FFP
EMB9-10-ICRM-2
EMB9-10-ICRM-3
EMB9-10-ICRM-4
EMB9-03-PTM-1
EMB2-06-MVI-1
EMB2-24-RCC-3
EMB2-24-RCC-2
EMB2-24-RCC-27
EMB2-24-RCC-28
EMB2-06-ZZ37BB
EMB2-06-004
EMB2-09-CPE-2
EMB2-09-CPE-3
EMB2-06-SMA-17
EMB2-06-DTC-1
EMB9-03-ICP-3
EMB9-15-000
EMB10-20-000
EMB10-13-001
EMB10-12-000
EMB9-03-DRS-G
EMB9-03-DRS-B
EMB9-03-ICP-1
EMB9-03-ICP-2
EMB10-21-MCTMI
EMB10-20-MCTMI
EMB2-06-ZZ41DA

NT0X50AC

Filler Face Plate 0.875

EMB2-06-ZZ41AA
 EMB2-14-006
 EMB2-06-ZZ43AA
 EMB2-06-ZZ41BA
 EMB2-06-ZZ37AC
 EMB2-01-IMT-1
 EMB2-01-IMT-2
 EMB2-01-IMT-3
 EMB2-01-INT-7
 EMB2-01-INT-8
 EMB2-01-INT-9
 EMB2-01-MTM-1
 EMB2-01-MTM-10
 EMB2-01-MTM-2
 EMB2-01-MTM-3
 EMB2-01-MTM-5
 EMB2-01-MTM-6
 EMB2-01-MTM-7
 EMB2-01-MTM-8
 EMB2-01-MTM-9
 EMB2-01-TM8-1
 EMB2-01-TM8-2
 EMB2-01-TM8-3
 EMB2-01-TM8-4
 EMB2-01-T8A-1
 EMB2-13-004
 EMB2-14-IRM-2
 EMB2-14-IRM-5
 EMB2-14-004
 EMB2-15-RMM-4
 EMB2-15-002
 EMB2-15-005
 EMB2-20-AXU-1
 EMB2-20-DRA
 EMB2-20-MTM
 EMB2-20-TM8
 EMB2-20-T8A
 EMB2-24-RMM-3
 EMB2-25-AXU-5
 EMB2-25-DRA
 EMB2-25-MTM
 EMB2-25-TM8
 EMB9-03-PTM-1
 EMB2-24-RCC-3
 EMB2-24-RCC-2
 EMB2-24-RCC-27
 EMB2-24-RCC-28
 EMB10-13-001
 EMB10-12-000

NT0X50AE	Filler Face Plate	EMB2-14-006 EMB2-14-IRM-2 EMB2-14-IRM-5 EMB2-14-004 EMB5-01-DDU-1 EMB8-01-PCE EMB9-03-FFP EMB9-10-ICRM-2 EMB9-10-ICRM-4 EMB9-15-000 EMB10-12-000 EMB2-14-006
NT0X50AF	Filler Face Plate	EMB2-06-MVI-1
NT0X50AG	Filler Face Plate	EMB2-13-004 EMB2-14-IRM-2 EMB2-14-IRM-5 EMB2-14-004 EMB2-24-RCC-27 EMB2-24-RCC-28 EMB10-13-001 EMB10-12-000 EMB2-14-006
NT0X50AH	Filler Face Plate	EMB2-14-IRM-2
NT0X50AJ	Filler Face Plate	EMB2-13-004 EMB2-14-IRM-2 EMB2-14-IRM-5 EMB2-14-004 EMB2-14-006
NT0X50BA	Filler Face Plate 1.72	EMB2-20-ROS-3 EMB4-01-PM-2 EMB4-01-000 EMB4-01-001 EMB5-03-ST1 EMB10-13-001 EMB10-17-MCEX-1 EMB10-17-001
NT0X50BE	Filler Face Plate 2.62	EMB2-20-ROS-1 EMB2-20-ROS-3 EMB2-20-ROS-4 EMB4-01-000 EMB4-01-001 EMB5-03-ST1 EMB5-03-ST2 EMB2-24-RCC-27 EMB2-24-RCC-28 EMB10-13-001 EMB10-17-MCEX-1 EMB10-17-001
NT0X50BF	Filler Face Plate 1.72	EMB2-20-ROS-1

		EMB2-20-ROS-3
		EMB2-20-ROS-4
		EMB4-01-000
		EMB4-01-001
		EMB5-03-ST1
		EMB5-03-ST2
		EMB10-13-001
		EMB10-17-MCEX-1
		EMB10-17-001
NT0X56AA	Speech Link Conn Frame	EMB3-02-000
NT0X56AB	Network Speech Link Panel	EMB3-02-000
NT0X56AC	Peripheral Speech Link Pnl	EMB3-02-000
NT0X56BB	Network Speech Link Panel	EMB3-02-000
		EMB3-09-NSL
		EMB3-09-NSL-1
		EMB3-09-000
NT0X56BC	Peripheral Speech Link Panel	EMB3-02-000
		EMB3-09-NSL
		EMB3-09-PSL
		EMB3-09-000
NT0X57AB	MAP FURNITURE CTR SECT WITH	EMB11-01-001
NT0X57AC	MAP FURNITURE COUNTER SECT	EMB11-01-001
NT0X57AD	MAP FURNITURE SHELF SECT	EMB11-01-001
NT0X58AD	Maintenance Tool Kit	EMB2-15-005
NT0X63AC	Remote Alarm Panel	EMB2-15-005
NT0X67AA	I/O Control Terminator	EMB2-20-IOC-3
		EMB5-01-IOC-4
		EMB5-03-IOC-2
		EMB5-03-IOC-3
		EMB9-03-IOE-1
NT0X70AA	International Trunk Mod CP	EMB2-01-INT-7
		EMB2-01-INT-8
		EMB2-01-MTM-3
		EMB2-01-MTM-5
		EMB10-12-000
NT0X70AC	Trunk Mod Proc 32k	EMB2-01-INT-9
		EMB10-13-001
		EMB10-12-000
NT0X70BA	International Trunk Mod CP	EMB2-01-IMT-1
		EMB2-01-IMT-2
		EMB10-12-000
NT0X82AB	Periph Fr Supervisory Panel	EMB2-01-000
NT0X82WA	FSP Strapping Information	EMB2-01-000
NT0X82WB	FSP Strapping Information	EMB2-01-000
NT0X8211	Cable Assembly	EMB2-01-000
NT0X84AA	Filler Panel	EMB2-09-TME
		EMB2-09-TME-1
		EMB2-09-TME-3
		EMB2-13-004

		EMB2-20-006
		EMB4-01-000
		EMB4-01-001
		EMB5-03-002
		EMB5-03-001
		EMB9-15-000
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB10-17-MCEX-1
		EMB10-17-001
		EMB9-03-CGM-1
NT0X85AA	MAINTENANCE SPARE STORAGE FR	EMB13-02-000
NT0X8501	COMMON CP CAGE ASSY	EMB13-02-000
		EMB13-05-000
NT0X8503	CP Storage Shelf Assy	EMB13-05-000
		EMB13-01-003
NT0X87AA	Inverter Unit (200W)	EMB5-02-000
NT0X88AF	20A Filt MIS Frame Supv Pnl	EMB13-01-000
		EMB13-05-000
		EMB13-01-003
NT0X8849	Cable Assembly	EMB5-02-000
NT0X91AA	Alarm & Conv Drive Card	EMB2-14-FSP-1
		EMB2-14-FSP-2
		EMB8-01-AAE
NT0X91AE	Conv Drive & Protect Ckt	EMB2-14-FSP-1
		EMB2-14-FSP-2
NT0X91AG	Alarm CP (for Dual HSDA)	EMB8-01-AAE
NT0X95BA	Power Cable	EMB5-01-000
NT0X95BD	Power Cable	EMB5-01-000
NT0X95BF	Power Cable	EMB5-01-000
NT0X95BG	Power Cable	EMB5-01-000
NT0X95BJ	Power Cable	EMB5-01-000
NT0X95BK	Power Cable	EMB5-01-000
NT0X95BU	Cable Assembly	EMB16-02-010
		EMB16-02-022
		EMB16-02-023
NT0X95BW	AXU Ground Cable	EMB2-20-AXU-1
		EMB2-25-AXU-3
		EMB2-25-AXU-4
		EMB2-25-AXU-5
NT0X95BY	Ground Cable Assy	EMB2-02-ISM-2
		EMB2-02-ISM-1
NT0X95CE	Power Cable	EMB5-01-000
NT0X95CL	Cabling Assembly	EMB2-01-000
NT0X95CN	POWER CABLE	EMB5-01-DDU-1
NT0X95CP	POWER CABLE	EMB5-01-DDU-1
NT0X9501	DDU Cable Braid Assembly	EMB2-20-DDU
		EMB5-03-DDU
NT0X9504	Ground Material Assembly	EMB13-01-000

NT0X9537	Cable Braid Assembly	EMB13-05-000 EMB2-20-AXU-1 EMB2-20-DDU EMB2-20-DRA EMB2-20-MTM EMB2-20-TM8 EMB2-20-T8A EMB2-25-AXU-5 EMB2-25-DRA EMB2-25-MTM EMB2-25-TM8 EMB5-03-DDU
NT0X9538	DDU Cable Braid Assembly	EMB2-20-DDU-1
NT0X9548	Ground Material Assembly	EMB13-01-000 EMB13-05-000
NT0X9551	Stratum/Bulkhead Cable	EMB2-20-ROS-1 EMB2-20-ROS-3 EMB2-20-ROS-4 EMB5-03-ST1 EMB5-03-ST2
NT0X9594	Ground Material Assembly	EMB13-01-000 EMB13-05-000 EMB13-01-003
NT0X9595	Vertical Ground Bar Assy	EMB2-24-RCC-27 EMB2-24-RCC-28
NT0X96AA	MTD Cable (Read)	EMB5-03-002
NT0X96AB	MTD Cable (Write)	EMB5-03-002
NT0X96AC	MTD Cable (Control)	EMB5-03-002
NT0X96DB	DPP Control Cables	EMB5-01-000
NT0X96DC	DPP Control Cables	EMB5-01-000
NT0X96DD	DPP Control Cables	EMB5-01-000
NT0X96GY	MTD Cable (Read)	EMB5-03-002 EMB5-01-000
NT0X96GZ	MTD Cable (Write)	EMB5-03-002 EMB5-01-000
NT0X96HA	MTD Cable (Control)	EMB5-03-002 EMB5-01-000
NT0X96HD	DPP Control Cables	EMB5-01-000
NT0X96HE	DPP Control Cables	EMB5-01-000
NT0X96HF	DPP Control Cables	EMB5-01-000
NT0X97AJ	Duplex Fiber Cable	EMB9-03-DRS-G EMB9-03-DRS-B
NT0X98AA	10 BaseT Cable	EMB19-02-MISC EMB19-02-STORE EMB19-02-LOCAL
NT0X98AC	V.35 Interbay Cable	EMB19-02-IOC-3
NT0X98AJ	RS232 Interbay Cable	EMB19-04-000 EMB19-04-001
NT1M40AE	LANLink to Bulkhead Cable	EMB19-03-MGW-1

		EMB19-03-000
		EMB19-03-001
		EMB19-03-006
		EMB19-03-007
NT1M40AK	Prime Proc. to FSP Cable	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT1M40AM	DATANET SRU-Blkhd Cable	EMB19-03-DNET-1
NT1M41AB	Meridian Aux Cab -Overhead	EMB19-03-003
NT1M41AC	LIU Shelf	EMB19-03-003
		EMB19-03-004
NT1M41AD	1/4 Wide SRU Filler	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT1M41AE	1/2 Wide SRU Filler	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT1M41AF	LIU Option Card	EMB19-03-003
		EMB19-03-004
NT1M41AN	Double Shelf Assembly	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-003
		EMB19-03-004
		EMB19-03-006
		EMB19-03-007
NT1M41AT	Right Front Door (Brown)	EMB19-03-HDW-1
NT1M41AU	Left Front Door (Brown)	EMB19-03-HDW-1
NT1M41AV	Right Front Door (Grey)	EMB19-03-HDW-2
NT1M41AW	Left Front Door (Grey)	EMB19-03-HDW-2
NT1M41BA	UDS 16 Slot Modem Shelf	EMB19-03-003
		EMB19-03-004
NT1M41BC	Frame Fail Lamp (Brown)	EMB19-03-HDW-1
NT1M41BJ	Bulkhd to Modem Shelf Cable	EMB19-03-003
		EMB19-03-004
NT1M41BL	Meridian Aux Cab -Raised Flr	EMB19-03-004
NT1M41BM	Bulkhead to ALIU Cable	EMB19-03-ALM-1
NT1M41BN	LanLink/BIX-Bulkhead Cable	EMB19-03-003
		EMB19-03-004
NT1M41BP	BIX-Bulkhead Cable	EMB19-03-003
		EMB19-03-004
NT1M41BW	ALIU Option Card	EMB19-03-ALM-1
		EMB19-03-003

		EMB19-03-004
NT1M41BZ	BIX Panel (Pre-wired)	EMB19-03-003
		EMB19-03-004
NT1M41CG	Merid Applic Cab Bay 1	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT1M41CK	LANLink to FSP/Blkhd Cable	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT1M41DT	BIX Panel (Blank)	EMB19-03-003
		EMB19-03-004
NT1M41DW	DTL to Bulkhead Cable	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-48PE
NT1M4104	Frame Fail Lamp (Grey)	EMB19-03-HDW-2
NT1M4113	Lower Cooling Unit	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-003
		EMB19-03-004
		EMB19-03-006
		EMB19-03-007
NT1M4114	Upper Cooling Unit	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-003
		EMB19-03-004
		EMB19-03-006
		EMB19-03-007
NT1M4116	Frame Supervisory Panel	EMB19-03-003
		EMB19-03-004
NT1M4137	Frame Supervisory Panel	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT1X00AA	102 Test (milliwatt)	EMB14-01-000
NT1X00AB	Two 102 milliwatt test ccts	EMB9-03-PTM-1
		EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT1X00AC	ROH Tone Generator	EMB14-01-000
NT1X00AD	ROH Tone Generator	EMB14-01-000

NT1X00AE	102 Test mw -20 db Int'l	EMB10-12-000 EMB14-01-000
NT1X00AF	102 Test mw -20 db	EMB10-12-000 EMB14-01-000
NT1X00AG	ROH Tone 102/20db Tst T	EMB14-01-000
NT1X00AH	ROH Tone 102/15db Tst T	EMB14-01-000
NT1X00KA	102 Test Trunk (China)	EMB14-01-000
NT1X31AA	3-Port Conference Circu	EMB14-01-000
NT1X33BA	CMC PROCESSOR INTERFACE CP	EMB4-01-000 EMB4-01-001
NT1X34BA	CMC OUTGOING CONTROLLER CP	EMB4-01-000 EMB4-01-001
NT1X35BA	CMC INCOMING CONTROLLER CP	EMB4-01-000 EMB4-01-001
NT1X36BB	CMC PERIPHERAL I/F CP	EMB4-01-CMC-1 EMB4-01-000 EMB4-01-001
NT1X37BA	CMC COMMON CONTROL CP	EMB4-01-000 EMB4-01-001
NT1X42AA	E2A TELEMETRY SERIAL I/F CP	EMB4-01-PM-1
NT1X43DA	PROC PROG STORE PORT CP	EMB4-01-000
NT1X44DA	PROCESSOR STACK 4KW CP	EMB4-01-000
NT1X45DA	PROCESSOR ALF CP	EMB4-01-000
NT1X46DA	PROCESSOR 8KW ROM CP	EMB4-01-000
NT1X47DA	PROC TIMING AND CONTROL CP	EMB4-01-000
NT1X48CA	REM CONT PROCESSOR MAINT CP	EMB4-01-PM-1
NT1X48DA	PROCESSOR MAINTENANCE CP	EMB4-01-PM-2
NT1X49DA	UNBAL DATA PORT EXT 40 MHZ	EMB4-01-000
NT1X51DA	CMC I/F (40 MHZ) CP	EMB4-01-000
NT1X54AA	Jack Ended Trunk	EMB9-03-PTM-1 EMB10-13-001 EMB10-12-000 EMB14-01-000
NT1X55DA	MSD DDU CTRL CP	EMB5-01-DDC-1 EMB10-13-001
NT1X55FA	SCSI Disk Drive Uni	EMB14-02-000 EMB10-17-MCEX-1 EMB10-17-001
NT1X61AD	I/O Controller Module	EMB2-20-006
NT1X61AG	I/O Controller Module	EMB2-20-IOC-3 EMB2-20-006 EMB5-01-IOC-4 EMB5-03-IOC-2 EMB5-03-IOC-3
NT1X6113	I/O Shelf Assembly	EMB2-20-IOC-3 EMB5-01-IOC-4 EMB5-03-IOC-2 EMB5-03-IOC-3
NT1X62BB	I/O MESSAGE CONTROLLER CP	EMB4-01-IOMC-1

NT1X62CB	I/O Message Controller CP	EMB2-20-IOC-3 EMB5-01-IOC-4 EMB5-03-IOC-2 EMB5-03-IOC-3 EMB9-03-IOE-1
NT1X67BC	I/O TERMINAL CONTROLLER CP	EMB5-01-TC-1 EMB10-13-001 EMB10-17-MCEX-1 EMB10-17-001
NT1X67BD	I/O TERMINAL CONTROLLER CP	EMB5-01-TC-2 EMB10-13-001 EMB10-17-MCEX-1 EMB10-17-001
NT1X67FA	SMDI Interface	EMB14-02-000
NT1X68BC	9 Track Tape Ctrl C	EMB14-02-000 EMB10-13-001 EMB9-03-MTD-1 EMB10-17-MCEX-1 EMB10-17-001
NT1X75AA	DIG. Recorded Ann Cont	EMB14-01-000
NT1X75BA	Enh Dig Rec Ann Controller	EMB2-01-MTM-2 EMB10-13-001 EMB10-12-000 EMB14-01-000
NT1X75DA	Enh Dig Rec Ann Controller	EMB2-01-IMT-2 EMB10-13-001 EMB14-01-000
NT1X76AA	DRA Standard Ann-Englis	EMB14-01-000
NT1X76AB	U.S. Bell Standard Ann	EMB14-01-000
NT1X76AE	ACTS DRA CP	EMB14-01-000
NT1X76AF	AOSSVR ANN ENGLISH (PART 1)	EMB2-01-AOSS-1 EMB14-01-000
NT1X76AG	AOSSVR ANN ENGLISH (PART 2)	EMB2-01-AOSS-1 EMB14-01-000
NT1X76AH	CCC Standard English An	EMB14-01-000
NT1X76AJ	CLASS PH I ENGLISH ANN 1	EMB2-01-CMS-1 EMB14-01-000
NT1X76AK	CLASS PH I ENGLISH ANN 2	EMB2-01-CMS-1 EMB14-01-000
NT1X76AM	Call Forward Remote	EMB14-01-000
NT1X76AP	CLASS PH II ENGLISH	EMB2-01-CMS-2 EMB14-01-000
NT1X76AQ	CLASS PH II ENGLISH	EMB2-01-CMS-2 EMB14-01-000
NT1X76AR	CLASS PH II ENGLISH	EMB2-01-CMS-2 EMB14-01-000
NT1X76AS	CLASS PH II ENGLISH	EMB2-01-CMS-2 EMB14-01-000
NT1X76AT	CLASS PH II ENGLISH	EMB2-01-CMS-3

NT1X76AU	CLASS PH II ENGLISH	EMB14-01-000 EMB2-01-CMS-3 EMB14-01-000
NT1X76AV	CLASS PH II ENGLISH	EMB2-01-CMS-3 EMB14-01-000
NT1X76AW	CLASS Phase 2 English	EMB14-01-000
NT1X76BA	DRA Standard Ann-French	EMB14-01-000
NT1X76BF	AOSSVR ANN FRENCH (PART 1)	EMB2-01-AOSS-2 EMB14-01-000
NT1X76BG	AOSSVR ANN FRENCH (PART 2)	EMB2-01-AOSS-2 EMB14-01-000
NT1X76BH	CCC Standard French Ann	EMB14-01-000
NT1X76BJ	CMS PHASE I FRENCH ANN CP 1	EMB2-01-CMS-4 EMB14-01-000
NT1X76BK	CMS PHASE I FRENCH ANN CP 2	EMB2-01-CMS-4 EMB14-01-000
NT1X76BP	CLASS PH II FRENCH	EMB2-01-CMS-5 EMB14-01-000
NT1X76BQ	CLASS PH II FRENCH	EMB2-01-CMS-5 EMB14-01-000
NT1X76BR	CLASS PH II FRENCH	EMB2-01-CMS-5 EMB14-01-000
NT1X76BS	CLASS PH II FRENCH	EMB2-01-CMS-5 EMB14-01-000
NT1X76BT	CLASS PH II FRENCH	EMB2-01-CMS-6 EMB14-01-000
NT1X76BU	CLASS PH II FRENCH	EMB2-01-CMS-6 EMB14-01-000
NT1X76BV	CLASS PH II FRENCH	EMB2-01-CMS-6 EMB14-01-000
NT1X76BW	CLASS PH II FRENCH	EMB2-01-CMS-6 EMB14-01-000
NT1X76CA	MCCS Std Announcement C	EMB14-01-000
NT1X76GA	CLASS PH II ENGLISH ANN 1	EMB2-01-CMS-7 EMB14-01-000
NT1X76GB	CLASS PH II ENGLISH ANN 2	EMB2-01-CMS-7 EMB14-01-000
NT1X76GC	CLASS PH II ENGLISH ANN 3	EMB2-01-CMS-7 EMB14-01-000
NT1X76GE	CLASS Phase 2 U.S. Cust	EMB14-01-000
NT1X76GF	CLASS Phase 2 U.S. Cust	EMB14-01-000
NT1X76GG	CLASS Phase 2 U.S. Cust	EMB14-01-000
NT1X76GH	CLASS Phase 2 U.S. Cust	EMB14-01-000
NT1X76GJ	CLASS Phase 2 U.S. Cust	EMB14-01-000
NT1X76GK	CLASS Phase 2 U.S. Cust	EMB14-01-000
NT1X76GL	CLASS Phase 2 U.S. Cust	EMB14-01-000
NT1X76GM	CLASS Phase 2 U.S. Cust	EMB14-01-000
NT1X76HC	CCC Standard English An	EMB14-01-000
NT1X76HD	CCC Standard French Ann	EMB14-01-000

NT1X76JA	Automatic Recall Date/T	EMB14-01-000
NT1X76JB	Automatic Recall Date/T	EMB14-01-000
NT1X77AA	Dram Memory CP	EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT1X78AA	Pwr Conv. (+-5V,+12V,+24V)	EMB2-20-DDU
		EMB2-20-DDU-1
		EMB2-20-ROS-1
		EMB2-20-ROS-3
		EMB2-20-ROS-4
		EMB5-01-DDU-1
		EMB5-03-DDU
		EMB5-03-ST1
		EMB5-03-ST2
		EMB10-13-001
NT1X79AA	MCCS/ACTS Custom Ann. C	EMB14-01-000
NT1X80AA	EDRAM CP	EMB10-12-000
		EMB14-01-000
NT1X80BA	Enhanced Digital Record	EMB14-01-000
NT1X81AA	Conference Trunk Module	EMB14-01-000
NT1X89BA	Enhanced Multi Protocol CP	EMB10-13-001
		EMB10-17-MCEX-1
		EMB10-17-001
NT1X89BB	Enhanced MPC	EMB14-02-000
		EMB10-17-MCEX-1
		EMB10-17-001
NT1X90AA	TEST SIGNAL GENERATOR	EMB2-01-TTT-1
		EMB9-03-PTM-1
		EMB10-12-000
		EMB14-01-000
NT1X90BA	TEST SIGNAL GEN. (A-LAW)	EMB2-01-IMT-6
		EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT2X01AA	AIOD Trunk CP	EMB14-01-000
NT2X06AB	Pwr Converter Comm Feat.	EMB2-13-004
		EMB2-14-MMR-1
		EMB2-14-MMR-2
		EMB2-14-MMR-3
		EMB2-14-MMR-4
		EMB2-15-RMM-4
		EMB2-15-005
		EMB2-24-RMM-1
		EMB2-24-RMM-3
NT2X06BB	POWER CONVERTER (5V/40A)	EMB4-01-000
		EMB4-01-001
NT2X09AA	Multi Output Power Converter	EMB2-01-IMT-1
		EMB2-01-IMT-2
		EMB2-01-IMT-3

		EMB2-01-INT-7
		EMB2-01-INT-8
		EMB2-01-INT-9
		EMB2-01-MTM-1
		EMB2-01-MTM-2
		EMB2-01-MTM-3
		EMB2-01-MTM-5
		EMB2-01-TM8-1
		EMB2-01-TM8-4
		EMB2-13-004
		EMB2-14-MMR-1
		EMB2-14-MMR-2
		EMB2-14-MMR-3
		EMB2-14-MMR-4
		EMB2-15-RMM-4
		EMB2-15-005
		EMB2-24-RMM-1
		EMB2-24-RMM-3
		EMB9-03-PTM-1
		EMB10-13-001
NT2X10AB	Line Test Unit Analog C	EMB14-05-000
		EMB2-01-MTU-2
NT2X10AC	Line Test Unit Analog C	EMB14-01-000
		EMB14-05-000
NT2X10BA	Multi-line Test Unit	EMB14-01-000
		EMB14-05-000
		EMB2-01-MTU-1
		EMB2-13-004
		EMB2-14-RMM-2
		EMB2-15-RMM-4
		EMB2-15-005
		EMB2-24-RMM-1
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB2-14-RMM-4
		EMB14-01-000
NT2X11AA	Line Tst Unit Digital C	EMB14-01-000
NT2X11AC	Line Tst Unit Digital C	EMB14-01-000
NT2X11AD	Line Test Unit Digital	EMB14-05-000
		EMB2-01-MTU-2
		EMB14-01-000
NT2X11BA	Line Test Unit Digital	EMB14-05-000
		EMB2-01-MTU-1
		EMB2-13-004
		EMB2-14-RMM-2
		EMB2-15-RMM-4
		EMB2-15-005
		EMB2-24-RMM-1
		EMB2-24-RCC-27

		EMB2-24-RCC-28
		EMB2-14-RMM-4
		EMB14-01-000
NT2X43AB	Office Alarm circuit #3	EMB14-01-000
NT2X45AB	Trunk Module I/F CP	EMB2-01-MTM-3
		EMB2-01-MTM-5
		EMB10-13-001
NT2X45BA	Trunk Module Interface CP	EMB2-01-IMT-1
		EMB2-01-IMT-2
		EMB2-01-IMT-3
		EMB2-01-INT-7
		EMB2-01-INT-8
		EMB2-01-INT-9
		EMB10-12-000
NT2X46AB	METALLIC TEST ACCESS UNIT	EMB13-01-MTA-1
NT2X47AB	TRMSN TST MOD CON SIG G	EMB14-01-000
NT2X47AC	TRMSN TST MOD CON SIG G	EMB14-01-000
NT2X47AD	TRANSM TEST UNIT CONTROLLER	EMB2-01-TTU-1
		EMB9-03-PTM-1
		EMB10-12-000
		EMB14-01-000
NT2X47BA	TRANSMISSION TST CRTL(A-LAW)	EMB2-01-IMT-5
		EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT2X48AA	DGTL 4 Channel MF RCVR	EMB14-01-000
NT2X48AB	DGTL 4 Chan Digitone RC	EMB14-05-000
		EMB2-13-004
		EMB2-14-ESA-2
		EMB14-01-000
NT2X48BA	4 Ch MF Rcvr CP	EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT2X48BB	4 Ch DTMF Rcvr CP	EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT2X48CA	MF Receiver - A Law	EMB14-01-000
NT2X48CB	DTMF Receiver (British	EMB14-01-000
NT2X48CC	4 CHAN DIGITONE RECEIVER	EMB2-14-IES-1
		EMB2-14-IES-2
		EMB2-14-IES-3
		EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT2X50AB	Minibar Driver	EMB14-01-000
NT2X52AG	Trunk Module 8 Wire	EMB2-01-000
NT2X52AK	Trunk Module 8 Wire	EMB2-01-TM8-1
		EMB2-01-TM8-4
NT2X52AS	8-Wire TM Shelf Packfill	EMB2-01-TM8-2

NT2X52AT	T8A Circuit Packfill	EMB2-25-TM8
NT2X52AV	Trunk Module 8 Wire Shelf	EMB2-01-T8B-1
		EMB2-01-TM8-1
		EMB2-01-TM8-4
		EMB2-01-000
NT2X52BB	Trunk Module 8 Wire Shelf	EMB2-01-INT-8
NT2X52CA	Trunk Mod 8 Wire Common CP	EMB2-01-INT-8
		EMB2-01-TM8-3
		EMB2-20-TM8
NT2X52CB	TM8A DMS300 TRUNK SHELF	EMB2-01-IMT-3
		EMB2-01-T8A-1
		EMB2-20-T8A
NT2X52CC	DMS 300 8WIRE TRUNK SHELF	EMB2-01-IMT-3
NT2X5221	8W Trunk Shelf Assembly	EMB2-01-TM8-1
NT2X5224	Trunk Module Shelf	EMB2-01-INT-8
NT2X5226	DMS-300 TRUNK SHELF ASSY	EMB2-01-IMT-3
NT2X5229	Trunk Module 8 Wire	EMB2-01-TM8-2
		EMB2-25-TM8
NT2X5231	International T8A Shelf	EMB2-01-T8A-1
		EMB2-20-T8A
NT2X5232	International TM8 Shelf	EMB2-01-TM8-3
		EMB2-20-TM8
NT2X5233	Trunk Module 8 Shelf	EMB2-01-T8B-1
NT2X5234	8W Trunk Shelf Assembly	EMB2-01-TM8-4
NT2X53AA	TM Control Card CP	EMB2-01-IMT-1
		EMB2-01-IMT-2
		EMB2-01-IMT-3
		EMB2-01-INT-7
		EMB2-01-INT-8
		EMB2-01-INT-9
		EMB2-01-MTM-3
		EMB2-01-MTM-5
		EMB10-13-001
		EMB10-12-000
NT2X55AA	SD Card II	EMB14-01-000
NT2X56AA	TRMSN TST MOD Dig. Filt	EMB14-01-000
NT2X56AB	TRANSMISSION TEST FILTER	EMB2-01-TTU-1
		EMB9-03-PTM-1
		EMB10-12-000
		EMB14-01-000
NT2X56BA	TRANSMISSION TST FILT(A-LAW)	EMB2-01-IMT-5
		EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT2X57AA	SD Card I	EMB14-05-000
		EMB2-14-MMR-1
		EMB2-14-MMR-2
		EMB2-14-MMR-3
		EMB2-14-MMR-4

		EMB2-14-RMM-2
		EMB2-15-RMM-4
		EMB2-15-005
		EMB2-24-RMM-1
		EMB9-03-PTM-1
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB10-13-001
		EMB10-12-000
		EMB2-14-RMM-4
		EMB14-01-000
		EMB14-01-000
NT2X57AB	SD Card I with OAU MON	EMB2-01-MTM-1
NT2X58AL	MTM Shelf	EMB2-01-MTM-2
NT2X58AM	MTM for DRA Shelf	EMB2-01-MTM-1
NT2X58AP	MTM Common CP	EMB2-01-MTM-2
		EMB2-01-INT-1
NT2X58AT	Int MTM Shelf	EMB2-01-INT-7
		EMB2-01-INT-9
		EMB2-01-INT-2
NT2X58AU	MTM Shelf for DRA	EMB2-01-MTM-6
NT2X58AX	MTM Common CP	EMB2-01-MTM-7
		EMB2-25-DRA
		EMB2-25-MTM
NT2X58AY	Int'l MTM Common CCT Pack	EMB2-01-INT-1
		EMB2-01-INT-2
		EMB2-01-MTM-10
		EMB2-01-MTM-8
		EMB2-20-AXU-1
		EMB2-20-DRA
		EMB2-20-MTM
		EMB2-25-AXU-4
		EMB10-13-001
		EMB10-12-000
NT2X58AZ	MTM Common CP Fill	EMB2-01-MTM-3
		EMB2-01-MTM-5
		EMB2-01-MTM-6
		EMB2-01-MTM-7
		EMB2-25-AXU-3
		EMB2-25-AXU-5
		EMB2-25-DRA
		EMB2-25-MTM
NT2X58BB	Scopedial MTM Common CP	EMB2-01-INT-7
		EMB2-01-MTM-10
		EMB2-01-MTM-8
		EMB2-01-MTM-9
		EMB2-20-AXU-1
		EMB2-20-DRA
		EMB2-20-MTM

NT2X58BC	IMTM Shelf	EMB2-01-MTM-10 EMB2-01-MTM-8 EMB2-20-AXU-1 EMB2-20-MTM EMB2-25-AXU-4
NT2X58BD	IMTM for IDRA Shelf	EMB2-01-MTM-9 EMB2-20-DRA
NT2X58CA	Maintenance Trunk Module	EMB2-01-MTM-3 EMB2-01-MTM-7 EMB2-25-AXU-3 EMB2-25-AXU-5 EMB2-25-MTM EMB10-13-001 EMB10-12-000 EMB10-12-MCAM-1 EMB10-12-MCAM-2
NT2X58CB	Maintenance Trunk Module	EMB2-01-MTM-5 EMB2-01-MTM-6 EMB2-25-DRA EMB10-13-001
NT2X58CL	IMTM Common CP	EMB2-01-MTM-10 EMB2-01-MTM-8 EMB2-20-AXU-1 EMB2-20-DRA EMB2-20-MTM EMB2-25-AXU-4
NT2X58CN	MTM Common CP	EMB2-01-MTM-6 EMB2-01-MTM-7 EMB2-25-DRA EMB2-25-MTM
NT2X58CP	MTM Common CP	EMB2-01-MTM-6 EMB2-01-MTM-7 EMB2-25-DRA EMB2-25-MTM
NT2X58DB	Int. CP Fill (Mercury 250)	EMB2-01-INT-9 EMB2-01-MTM-10 EMB2-01-MTM-8 EMB2-20-AXU-1 EMB2-20-DRA EMB2-20-MTM EMB2-25-AXU-4
NT2X58DC	Trunk Module Common CP Fill	EMB2-25-AXU-4
NT2X5824	International MTM Shf Assy	EMB2-01-IMT-1 EMB2-01-INT-7 EMB2-01-INT-9 EMB2-01-IMT-2
NT2X5825	DRA Shelf Assembly	EMB2-01-IMT-2
NT2X5828	Maint Trk Mod Sh Assy	EMB2-01-MTM-3
NT2X5830	DRA Shelf Assembly	EMB2-01-MTM-5
NT2X5839	MTM Shelf Assembly	EMB2-01-MTM-1

NT2X5841	DRA Shelf Assembly	EMB2-01-MTM-2
NT2X59AA	TM Group Codec CP	EMB2-01-MTM-1
		EMB2-01-MTM-2
		EMB2-01-MTM-3
		EMB2-01-MTM-5
		EMB2-01-TM8-1
		EMB2-01-TM8-4
		EMB2-13-004
		EMB2-15-RMM-4
		EMB2-15-005
		EMB2-24-RMM-1
		EMB2-24-RMM-3
		EMB9-03-PTM-1
		EMB10-13-001
		EMB10-12-000
NT2X59BA	A-Law Codec and CP	EMB2-01-IMT-1
		EMB2-01-IMT-2
		EMB2-14-MMR-2
		EMB2-14-MMR-4
		EMB10-12-000
NT2X59CA	A-Law Codec and CP	EMB2-01-INT-7
		EMB2-01-INT-8
		EMB2-14-MMR-1
		EMB10-12-000
NT2X59CB	A-LAW TM CODEC DMS-300	EMB2-01-IMT-3
NT2X59DA	A-LAW TM CODE WITH BT TONES	EMB2-14-MMR-3
		EMB10-12-000
NT2X59EA	Group Codec Mercury CP	EMB2-01-INT-9
NT2X65AA	CAMA Pos Sign Trk	EMB14-01-000
NT2X66AA	CAMA CW Susp LP Trk	EMB14-01-000
NT2X70AC	TRUNK MODULE PROCESSOR CP	EMB2-01-IMT-3
NT2X70AE	Power Converter +-5V 50A CP	EMB2-06-ZZ41EA
		EMB2-15-RCCI-1
		EMB2-15-RCCI-2
		EMB2-15-002
		EMB2-15-005
		EMB2-15-014
		EMB2-15-015
		EMB2-20-CP-1
		EMB2-20-CP-3
		EMB2-99-XPM-1
		EMB3-01-NET-1
		EMB3-07-NCK-3
		EMB3-07-NCK-4
		EMB4-01-000
		EMB4-01-001
		EMB9-03-DSP-1
		EMB9-03-DSP-2
		EMB9-03-PTM-1

NT2X70AF

Power Converter +/- 5V, 12V

- EMB2-06-ZZ37BB
- EMB2-06-DTC-1
- EMB9-03-ICP-3
- EMB9-15-000
- EMB10-20-000
- EMB10-13-001
- EMB10-12-000
- EMB9-03-ICP-1
- EMB9-03-ICP-2
- EMB10-21-MCTMI
- EMB10-20-MCTMI
- EMB2-06-ZZ43AA
- EMB2-06-ZZ37AC
- EMB2-01-IMT-1
- EMB2-01-IMT-2
- EMB2-01-INT-7
- EMB2-01-INT-9
- EMB2-01-MTM-1
- EMB2-01-MTM-10
- EMB2-01-MTM-2
- EMB2-01-MTM-3
- EMB2-01-MTM-5
- EMB2-01-MTM-6
- EMB2-01-MTM-7
- EMB2-01-MTM-9
- EMB2-06-DTC-4
- EMB2-06-DTC-5
- EMB2-06-DTC-6
- EMB2-06-DTP
- EMB2-06-DTX
- EMB2-06-LGC-1
- EMB2-06-LGC-2
- EMB2-06-LGC-3
- EMB2-06-LGC-6
- EMB2-06-LGC-7
- EMB2-06-LGP
- EMB2-06-LGX
- EMB2-06-LTC-1
- EMB2-06-LTC-2
- EMB2-06-LTC-3
- EMB2-06-LTC-6
- EMB2-06-LTC-7
- EMB2-06-LTP
- EMB2-06-LTX
- EMB2-06-SMA-12
- EMB2-06-SMA-14
- EMB2-06-SMA-16
- EMB2-06-SMS-3
- EMB2-06-SMS-4

EMB2-06-SMS-5
EMB2-06-SMS-7
EMB2-06-SMS-8
EMB2-06-SMSR-3
EMB2-06-SMSR-5
EMB2-06-SMU-11
EMB2-06-SMU-14
EMB2-06-SMU-15
EMB2-06-SMU-16
EMB2-06-SMU-2
EMB2-06-SMU-7
EMB2-06-SMU-9
EMB2-06-UPI
EMB2-06-ZZ41EA
EMB2-13-004
EMB2-14-IRM-2
EMB2-14-IRM-5
EMB2-14-004
EMB2-15-005
EMB2-15-014
EMB2-15-015
EMB2-18-CPC-2
EMB2-18-CPC-3
EMB2-18-CPC-5
EMB2-18-004
EMB2-20-AXU-1
EMB2-20-CP-1
EMB2-20-DRA
EMB2-20-IOC-3
EMB2-20-MTM
EMB2-25-AXU-3
EMB2-25-AXU-4
EMB2-25-AXU-5
EMB2-25-DRA
EMB2-25-MTM
EMB3-01-NET-1
EMB3-01-NET-2
EMB3-01-NET-3
EMB3-01-NET-4
EMB3-07-NCK-1
EMB3-07-NCK-2
EMB5-01-IOC-4
EMB5-03-IOC-2
EMB5-03-IOC-3
EMB8-02-TPC
EMB9-03-DSP-1
EMB9-03-DSP-2
EMB9-03-PTM-1
EMB2-06-ZZ37BB

		EMB2-06-DTC-1
		EMB9-03-ICP-3
		EMB9-03-ICP-1
		EMB9-03-ICP-2
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB9-15-MDSP-1
		EMB9-15-MDSP-2
		EMB9-03-IOE-1
		EMB2-14-006
		EMB3-01-701
		EMB2-06-ZZ43AA
		EMB2-06-ZZ41BA
		EMB2-06-ZZ37AC
NT2X70AY	NT2X70AF Upgrade Kit	EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT2X70BA	POWER CONVERTER	EMB4-01-000
		EMB4-01-001
NT2X70CA	Power Converter	EMB9-10-ICRM-1
		EMB9-10-ICRM-2
		EMB9-10-ICRM-3
		EMB9-10-ICRM-4
NT2X70KA	Power Converter -60V	EMB2-06-ZZ37AC
NT2X71AA	Trans'n Term Trunk	EMB10-12-000
		EMB14-01-000
NT2X72AA	4W E&M Type D1 600 I/F	EMB14-01-000
NT2X72AB	4W E&M Type D1 600 E SU	EMB14-01-000
NT2X72AC	4W E&M 600 L GN E SUPR	EMB14-01-000
NT2X72BA	4W DC5A Tie Trunk	EMB14-01-000
NT2X72BB	4W CAIA 600 ohm Trunk	EMB14-01-000
NT2X75AA	Loop Around Test Line	EMB10-12-000
		EMB14-01-000
NT2X75BA	Loop Around TST LN A-LAW	EMB10-12-000
NT2X76CB	WIRING: SYNC OFF W/O EXT MFR	EMB4-01-000
		EMB4-01-001
NT2X7606	CM & I/O DEVICE CTL SH ASS	EMB4-01-000
		EMB4-01-001
NT2X77AA	Daughter Board	EMB2-13-004
		EMB2-14-MMR-1
		EMB2-14-MMR-2
		EMB2-14-MMR-3
		EMB2-14-RMM-2
		EMB2-15-RMM-4
		EMB2-15-005
		EMB2-24-RMM-1
		EMB9-03-PTM-1

		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB10-12-000
		EMB14-01-000
NT2X77AB	Compromise Balance Net.	EMB14-01-000
NT2X77AC	Balanced Network	EMB2-14-MMR-4
		EMB14-01-000
NT2X77AD	Compromise Balance Net.	EMB14-01-000
NT2X77BA	Compromise Balance Net.	EMB14-01-000
NT2X77BB	Compromise Balance Net.	EMB14-01-000
NT2X78AA	4W INC/OG (2600 Hz) MF/	EMB14-01-000
NT2X80AA	Precision Bal. Net.-H88	EMB14-01-000
NT2X81AA	2W E&M 900 2WY INC/OG M	EMB14-01-000
NT2X81AB	2W E&M 600 2WY INC/OG M	EMB14-01-000
NT2X81BA	2W DC5A Tie Trunk	EMB14-01-000
NT2X82AA	2W LP 900 INC REV BAT M	EMB14-01-000
NT2X83AA	2W LP 900 OG REV BAT MF	EMB14-01-000
NT2X84BA	Earth Calling Trunk	EMB14-01-000
NT2X85AA	RCDG COMPL TRK H-L Coin	EMB14-01-000
NT2X86AA	Toll SW 3RD W Coin FX R	EMB14-01-000
NT2X88AA	4W INC/OG 600 E&M MF/DP	EMB14-01-000
NT2X90AA	2W INC from NE-14 LTD 9	EMB14-01-000
NT2X90AB	INC/OG TST TRK	EMB14-01-000
NT2X90AC	INC/OG TEST TRK	EMB14-05-000
		EMB14-01-000
NT2X90AD	INC/OG TEST TRK	EMB14-05-000
		EMB2-13-004
		EMB2-14-MMR-1
		EMB2-14-MMR-2
		EMB2-14-MMR-3
		EMB2-14-MMR-4
		EMB2-14-RMM-2
		EMB2-15-RMM-4
		EMB2-15-005
		EMB2-24-RMM-1
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB10-12-000
		EMB2-14-RMM-4
		EMB14-01-000
NT2X92AA	2W LP 900 OG REV BAT MF	EMB14-01-000
NT2X95AA	2WY PBX TRK DID/DOD	EMB14-01-000
NT2X95BA	Direct Dial Inward Trun	EMB14-01-000
NT2X95BB	2W JUSMAG 600 ohm DDO T	EMB14-01-000
NT2X96AA	PCM LEVEL METER	EMB2-01-TTT-1
		EMB9-03-PTM-1
		EMB10-12-000
		EMB14-01-000
NT2X96BA	PCM LEVEL METER (A-LAW)	EMB2-01-IMT-6

		EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT2X98AA	2W INC 900 DP RB SLV CO	EMB14-01-000
NT2159CA	A-Law TM Codec e/w BT Tone	EMB2-01-INT-8
NT3E19AA	Single-Mode Pigtail	EMB2-13-004
NT3E44AA	Multi-Mode Pigtail	EMB2-13-004
NT3J00AA	TOPS Tone and Scramble Cage	EMB13-01-000
		EMB13-01-003
NT3J00AB	TOPS Tone and Scramble CP	EMB13-01-000
		EMB13-01-003
NT3J00BA	MLT Applique Shelf	EMB13-01-000
		EMB13-01-005
		EMB13-01-003
NT3J00BB	MLT Applique Ckt Pack	EMB13-01-005
NT3J00BE	Signature Off Hook Routing	EMB13-01-005
NT3M20BE	NT1320 Isolation Kit	EMB19-02-ROLL
NT3M56AG	Desktop Printer (240V)	EMB19-03-PRT-1
NT3X02AA	TOPS CONTROLLER PROCESSOR	EMB2-01-MOD-1
		EMB14-01-000
NT3X02BA	Dial up Auto/TOPS Cont	EMB14-01-000
NT3X03AA	TOPS DIGITAL SIG PROCESSOR	EMB2-01-MOD-1
		EMB14-01-000
NT3X04AA	INC Test Trunk AE #1 LT	EMB14-05-000
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB14-01-000
NT3X05AA	Digital Data Line Card	EMB14-01-000
NT3X05AB	Digital Data Line Card	EMB14-01-000
NT3X05AC	Digital Data Line Card	EMB14-01-000
NT3X06AA	2W OGT TRK to AE/3CL CO	EMB14-01-000
NT3X07AA	2W INC TRK to AE/3CL CO	EMB14-01-000
NT3X08AA	Coin Detection Circuit	EMB14-01-000
NT3X08AB	Coin Detection Circuit	EMB14-01-000
NT3X09AA	4X4 Metallic Test Acces	EMB14-05-000
		EMB2-13-004
		EMB14-01-000
NT3X09BA	8X8 Metallic Test Acces	EMB14-05-000
		EMB2-13-004
		EMB2-14-RMM-2
		EMB2-15-RMM-4
		EMB2-15-005
		EMB2-24-RMM-1
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB10-12-000
		EMB2-14-RMM-4
		EMB14-01-000
NT3X14BC	SYNC MASTER CLOCK CONT	EMB4-01-000

NT3X15BB	SYNC CLOCK MASTER OSC	EMB4-01-001 EMB4-01-000 EMB4-01-001
NT3X16AB	Osc. (DMS-Core) & I/F CP	EMB2-20-ROS-3 EMB5-03-ST1
NT3X16BB	Osc. (DMS-Core) & I/F CP	EMB2-20-ROS-1 EMB2-20-ROS-4 EMB5-03-ST2
NT3X25AA	Common Equipment Shelf	EMB13-01-000 EMB5-02-000 EMB13-05-000 EMB13-01-005 EMB13-01-003
NT3X25BA	Terminal Block Assembly	EMB13-01-000 EMB13-05-000 EMB13-01-003
NT3X3209	16MW DATA STORE SHF ASSY	EMB4-01-000 EMB4-01-001
NT3X37BC	SINGLE ENDED MEM BUS I/F CP	EMB4-01-000 EMB4-01-001
NT3X4106	CENTRAL PROC & MEM SHF ASSY	EMB4-01-000 EMB4-01-001
NT3X4303	PROCESSOR BP TERMINATOR	EMB4-01-000 EMB4-01-001
NT3X4304	CMC/IOC BP TERMINATOR CP	EMB4-01-000 EMB4-01-001
NT3X4307	PS CONTROLLER BP TERMINATOR	EMB4-01-000 EMB4-01-001
NT3X4309	16MW MEMORY BP TERMINATOR	EMB4-01-000 EMB4-01-001
NT3X45ED	CCC COMMON CIRCUIT PACKS	EMB4-01-000 EMB4-01-001
NT3X45EH	ENHANCED CPU CAP COMMON CP	EMB4-01-000 EMB4-01-001
NT3X45EJ	CCC COMMON CIRCUIT PACKS	EMB4-01-000 EMB4-01-001
NT3X45EV	CCC COMMON CIRCUIT PACKS	EMB4-01-000 EMB4-01-001
NT3X45EW	CENTRAL CNTRL COMPLEX FRAME	EMB4-01-000 EMB4-01-001
NT3X55AA	LINE CARD STOR CHASSIS ASSY	EMB13-02-000 EMB13-05-000
NT3X55BA	LINE CARD STOR CHASSIS ASSY	EMB13-02-000 EMB13-09-004 EMB13-05-000 EMB13-09-005 EMB13-01-003
NT3X67AA	6 Port Conf CP	EMB10-12-000 EMB14-01-000
NT3X67BA	6 Pt Conf CP	EMB10-13-001

		EMB10-12-000
		EMB14-01-000
NT3X67BB	6 Party Conf Ckt A-Law	EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT3X68AA	TONE GEN: PRMT/PST/CONF	EMB14-01-000
NT3X68AB	TONE GEN: DTMF Tone	EMB14-01-000
NT3X68AC	TONE GEN: CALL WAITING	EMB14-01-000
NT3X68BA	Conference Tone Gen. A-Law	EMB10-12-000
		EMB14-01-000
NT3X68BB	MF Dual Tone	EMB10-12-000
		EMB14-01-000
NT3X68BC	Call Waiting Tone Gen.	EMB10-12-000
		EMB14-01-000
NT3X74BB	NET CONTROL PROC	EMB2-20-CP-3
		EMB3-01-NET-1
		EMB3-01-NET-2
		EMB3-01-NET-3
		EMB3-01-NET-4
		EMB3-07-NCK-1
		EMB3-07-NCK-2
		EMB3-07-NCK-3
		EMB3-07-NCK-4
		EMB3-01-701
NT3X75BA	Network P-Side Msg Proc	EMB2-20-007
		EMB3-01-NET-1
		EMB3-01-NET-2
		EMB3-01-NET-3
		EMB3-01-NET-4
		EMB3-01-001
		EMB3-07-NCK-1
		EMB3-07-NCK-2
		EMB3-01-701
NT3X75BB	Network P-Side Msg Proc FRSC	EMB2-20-007
		EMB3-01-001
NT3X76AA	NETWORK CLOCK I/F (NT-40)	EMB3-01-CLK-1
NT3X76AC	NET CLOCK CP	EMB2-20-CP-3
		EMB3-01-CLK-2
		EMB3-07-NCK-1
		EMB3-07-NCK-2
		EMB3-07-NCK-3
		EMB3-07-NCK-4
		EMB3-01-701
NT3X82AA	Dead Sys Alm w/Unique Aud	EMB10-13-001
		EMB14-01-000
NT3X82AB	OAU Dead sys w/Comm audible	EMB9-03-PTM-1
		EMB10-13-001
		EMB10-12-000
		EMB14-01-000

NT3X82AC	OAS Dead SYS w Unique A	EMB14-01-000
NT3X82AD	OAS Dead SYS w Common A	EMB14-01-000
NT3X83AA	OAU Alarm transfer cct.	EMB9-03-PTM-1
		EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT3X84AA	OAS Alarm Sending	EMB14-01-000
NT3X85AA	OAS Alarm Grouping	EMB14-01-000
NT3X85AB	OAS Alarm Grouping	EMB14-01-000
NT3X89AA	Alarm X-Connect Unit	EMB2-01-000
		EMB2-20-AXU-1
		EMB2-25-AXU-5
NT3X89AB	Alarm X-Connect Unit for EAS	EMB2-01-000
		EMB2-25-AXU-3
		EMB2-25-AXU-4
NT3X89CA	Office Alarm X-Conn for EAS	EMB2-01-000
		EMB2-02-ISM-2
		EMB2-20-AXU-1
		EMB2-25-AXU-5
		EMB2-02-ISM-1
NT3X8906	Data Link Cntlr. (-48V)	EMB2-01-000
NT3X8907	Data Link Cntlr. (-60V)	EMB2-01-000
NT3X90AC	Cooling Inverter Fan Unit	EMB2-15-002
		EMB2-15-005
		EMB3-01-000
		EMB4-01-000
		EMB4-01-001
		EMB2-06-004
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB3-01-701
NT3X91AA	REM OFF. TST Line I/F T	EMB14-01-000
NT3X95AA	Strat II Rem Osc Shelf	EMB10-13-001
NT3X95AB	Stratum II Rmt Osc. Shelf	EMB2-20-ROS-3
		EMB2-20-006
		EMB5-03-ST1
		EMB5-01-000
NT3X95BB	Stratum 2.5 Rmt Osc. Shelf	EMB2-20-ROS-1
		EMB2-20-ROS-4
		EMB2-20-006
		EMB5-03-ST2
		EMB5-01-000
		EMB10-13-001
NT3X9507	Remote Osc. Shelf Assy	EMB2-20-ROS-1
		EMB2-20-ROS-3
		EMB2-20-ROS-4
		EMB5-03-ST1
		EMB5-03-ST2
NT4G09AE	SCSI/SCSI Cable (2 ft.)	EMB19-03-OCEX-1

		EMB19-03-OCEX-2
		EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT4G14DB	LANLink SRU	EMB19-03-MGW-1
		EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT4G16EF	6MB SCSI Prime Processor	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT4G20QB	#160 MByte SCSI Disk/Tape	EMB19-03-OCEX-1
		EMB19-03-000
		EMB19-03-001
NT4G20VA	160 MByte SCSI Disk/Tape	EMB19-03-OCEX-1
		EMB19-03-OCEX-2
		EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT4G22DA	Network Service Module	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
NT4G23EA	Digital Trk Link SRU	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-48PE
NT4G24DA	3 MB Conf Serv SRU	EMB19-03-000
		EMB19-03-002
		EMB19-03-006
		EMB19-03-48PE
NT4G25CD	App. Processor 68010-3	EMB19-03-001
NT4G25GB	App. Processor 68020-10	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT4G26DB	7 MByte File Processor SRU	EMB19-03-OCEX-1
		EMB19-03-OCEX-2
		EMB19-03-000

		EMB19-03-001
		EMB19-03-006
		EMB19-03-007
NT4G27CA	Voice Interface SRU	EMB19-03-000
		EMB19-03-002
		EMB19-03-006
NT4G46BD	Gateway DVLink Card	EMB19-03-MGW-1
NT4G49CA	Dig Tone Recvr SRU	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
NT4G50FA	Rack Converter SRU	EMB19-03-000
		EMB19-03-001
		EMB19-03-002
		EMB19-03-006
		EMB19-03-007
NT4G54BA	DATANET SRU	EMB19-03-DNET-1
NT4X00AF	Disk Drive Unit Shelf	EMB2-20-DDU
		EMB2-20-DDU-1
		EMB2-20-006
		EMB5-01-DDU-1
		EMB5-03-DDU
		EMB10-13-001
		EMB10-17-MCEX-1
		EMB10-17-001
NT4X00AG	5.25" DDU (228.7 MB)	EMB2-20-DDU
		EMB5-01-DDU-2
		EMB10-13-001
NT4X0023	Disk Drive Unit Assembly	EMB2-20-DDU
		EMB2-20-DDU-1
		EMB5-01-DDU-1
		EMB5-03-DDU
NT4X0036	POWER CABLE	EMB2-99-DDU-1
NT4X0038	Mercury Disk Hardware Kit	EMB2-20-DDU
		EMB5-01-DDU-2
		EMB10-13-001
NT4X0045	POWER CABLE	EMB2-99-DDU-1
NT4X0048	SHIELDED RIBBON CA.	EMB2-99-DDU-1
NT4X23AA	DTU BERT Unit CP	EMB14-01-000
NT4X25BH	Data Unit RackMount Shelf	EMB13-01-000
NT4X25DH	Data Unit RackMount Shelf	EMB13-01-000
		EMB5-02-DRS-1
		EMB13-01-003
NT4X2591	Data Unit Ground & Mount HW	EMB5-02-DRS-1
NT4X45AA	Enhanced Digital Test U	EMB14-01-000
NT4X65AB	TM Control Card CP	EMB2-01-MTM-1
		EMB2-01-MTM-2
		EMB2-01-TM8-1
		EMB2-01-TM8-4

		EMB9-03-PTM-1
		EMB10-13-001
		EMB10-12-000
NT4X79AA	16MW MEMORY CONTROL CP	EMB4-01-000
		EMB4-01-001
NT4X80AA	1MW MEMORY CP	EMB4-01-MEM-1
NT4X81DA	Keyboard (English TA only)	EMB8-01-000
NT4X81EA	Keyboard (TELMEX DA)	EMB8-01-000
NT4X81EB	Change Kit	EMB8-01-000
NT4X97AA	MTU Controller	EMB2-01-IMT-4
		EMB2-14-MMR-1
		EMB2-14-MMR-2
		EMB2-14-MMR-3
		EMB2-14-MMR-4
		EMB2-24-RCC-28
		EMB14-01-000
NT4X98BA	MTU Analog (Internation	EMB14-01-000
NT4X98BB	MTU Analog	EMB2-01-IMT-4
		EMB2-14-MMR-1
		EMB2-14-MMR-2
		EMB2-14-MMR-3
		EMB2-14-MMR-4
		EMB2-24-RCC-28
		EMB14-01-000
NT4X98BC	MTU Analog (Internation	EMB14-01-000
NT5C90DB	Rectifier	EMB2-13-004
NT5M02CB	2 Chan 26" 1M RR/TRK FIXED	EMB13-08-CDA-3
NT5M02CC	2Chan 26" 1M RR/RTA FIXED	EMB13-01-005
NT5M04DP	4 Chan 26" 2M RR/TRK BASIC	EMB13-08-CDA-4
NT5M04DQ	4 Chan 26" 2M RR/TRK FIXED	EMB13-08-CDA-5
NT5M04DR	4 Chan 26" 1M RR/TRK SP/DMD	EMB13-08-CDA-6
NT5M04DT	4 Chan 26" 2M RR/TRK MUSR	EMB13-08-CDA-1
NT5M04DU	4Chan 26" 2M RR/RTA FIXED	EMB13-01-005
NT5M04DV	4Chan 26" 1M RR/RTA SP/DMD	EMB13-01-005
NT5M06CA	6 Chan 26" 3M RR/TRK FIXED	EMB13-08-CDA-7
NT5M06CB	6Chan 26" 3M RR/RTA FIXED	EMB13-01-005
NT5M08CB	8 Chan 26" 4M RR/TRK BASIC	EMB13-08-CDA-8
NT5M08CC	8 Chan 26" 4M RR/TRK FIXED	EMB13-08-CDA-10
		EMB13-01-005
NT5M08CD	8 Chan 26" 1M RR/TRK SP/DMD	EMB13-08-CDA-9
NT5M08CF	8 Chan 26" 4M RR/TRK MUSR	EMB13-08-CDA-2
NT5M08CH	8Chan 26" 1M RR/RTA SP/DMD	EMB13-01-005
NT5X03AA	CCITT R1 Trk, 101 Tst L	EMB14-01-000
NT5X04AA	CCITT #5 Trk	EMB14-01-000
NT5X04AB	CCITT #5 Trk	EMB14-01-000
NT5X06AA	CCITT #6 Trk	EMB14-01-000
NT5X09AA	Data Set (Modem) Shelf	EMB5-02-000
		EMB13-01-003
NT5X09BA	DS-5R Modem Shelf	EMB10-13-001

NT5X25AA	1WY CO TRK OG GRD ST or	EMB14-01-000
NT5X29AB	Audio Tone Detector CP	EMB10-13-001
NT5X29AC	Auto Service Observing CP	EMB10-13-001
NT5X29BA	Audio Tone Det (UK A-Law)	EMB10-12-000
NT5X30AA	101 Communication Line	EMB9-03-PTM-1
		EMB10-13-001
		EMB10-12-000
		EMB14-01-000
NT5X30BA	101 Comm Test Line UK	EMB14-01-000
NT5X69AA	Inactive System Timing Cct	EMB13-05-000
		EMB13-01-005
		EMB13-01-003
NT5X72AB	Central Alarm Applique Cct	EMB13-01-000
		EMB13-01-003
NT5X85AA	AUD & Visual ALM. EXT CKT	EMB13-01-ALM-1
		EMB13-01-005
NT5X86AA	AUD Alarm Cutoff Cntrl Unit	EMB13-01-000
		EMB13-01-005
		EMB13-01-003
NT6M09AB	ERROR CONTROL JUMPER	EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M48AA	56K CROSSOVER CP	EMB2-20-DPP
		EMB2-20-DPP-2
		EMB2-20-DPP-4
		EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-5
		EMB5-03-DPP
		EMB5-03-DP1
NT6M54AL	56K CONN CP	EMB2-20-DPP
		EMB2-20-DPP-2
		EMB2-20-DPP-4
		EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-5
		EMB5-03-DPP
		EMB5-03-DP1
NT6M56AD	FAN FILTER CP	EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M59AA	Keyed Status Panel Assy	EMB2-20-DPP-2
		EMB2-20-DPP-3

		EMB2-20-DPP-4
		EMB2-20-DPP-5
		EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M59AB	Keyless Status Panel Assy	EMB2-20-DPP-2
		EMB2-20-DPP-3
		EMB2-20-DPP-4
		EMB2-20-DPP-5
		EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M59BB	Filler Panel Assy, rover	EMB2-20-DPP-2
		EMB2-20-DPP-3
		EMB2-20-DPP-4
		EMB2-20-DPP-5
		EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M60BA	QUAD SIO	EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M62BA	CPU/DMA CP	EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M63CJ	EPROM (BCS29) CP	EMB2-20-DPP
		EMB2-20-DPP-2
		EMB2-20-DPP-4
		EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-5
		EMB5-03-DPP
		EMB5-03-DP1
NT6M63CL	EPROM (BCS21-29) CP	EMB2-20-DPP-3
		EMB2-20-DPP-5
		EMB5-01-DPP-4
NT6M64AA	EXTENDED MEMORY	EMB5-01-DPP-1
		EMB5-01-DPP-2

		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M65AA	ERROR CONTROL II	EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M66AH	Disk Drive I/F CP	EMB2-20-DPP-5
		EMB5-01-DPP-4
NT6M66AL	Disk Drive I/F CP	EMB2-20-DPP-3
		EMB5-01-DPP-4
NT6M66BA	SCSI DISK DRIVE I/F CP	EMB2-20-DPP
		EMB2-20-DPP-2
		EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-5
		EMB5-03-DPP
		EMB5-03-DP1
NT6M66BC	SCSI Disk Drive 140 I/F CP	EMB2-20-DPP-4
		EMB5-01-DPP-5
NT6M68AA	BUS TERMINATOR	EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M70AC	DATA STREAM I/F	EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M71AB	POWER SUPPLY ASSY	EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT6M72AE	Disk X-Over CP	EMB2-20-DPP-3
		EMB2-20-DPP-5
		EMB5-01-DPP-4
NT6M72BA	140 MByte Disk Drive	EMB2-20-DPP-3
		EMB5-01-DPP-4
NT6M72DA	380 MByte Disk Drive	EMB2-20-DPP-5
		EMB5-01-DPP-4
NT6M72DD	380 MBYTE DISK DRIVE	EMB2-20-DPP
		EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-5
		EMB5-03-DPP

NT6M72DE	140 MByte Disk Drive	EMB2-20-DPP-4 EMB5-01-DPP-5
NT6M72EA	760 MBYTE DISK DRIVE	EMB2-20-DPP EMB2-20-DPP-2 EMB5-01-DPP-1 EMB5-01-DPP-3 EMB5-01-DPP-5 EMB5-03-DP1
NT6M73AJ	56K I/F XOVER A CABLE ASSY	EMB2-20-DPP EMB2-20-DPP-2 EMB2-20-DPP-4 EMB5-01-DPP-1 EMB5-01-DPP-2 EMB5-01-DPP-3 EMB5-01-DPP-5 EMB5-03-DPP EMB5-03-DP1
NT6M73AK	56K I/F XOVER B CABLE ASSY	EMB2-20-DPP EMB2-20-DPP-2 EMB2-20-DPP-4 EMB5-01-DPP-1 EMB5-01-DPP-2 EMB5-01-DPP-3 EMB5-01-DPP-5 EMB5-03-DPP EMB5-03-DP1
NT6M84BA	PWR/ALARM COMM CP	EMB5-01-DPP-1 EMB5-01-DPP-2 EMB5-01-DPP-3 EMB5-01-DPP-4 EMB5-01-DPP-5
NT6M85AA	4-CHANNEL COMMUNICATION CP	EMB5-01-DPP-1 EMB5-01-DPP-2 EMB5-01-DPP-3 EMB5-01-DPP-4 EMB5-01-DPP-5
NT6M85CA	56K I/F CONN CABLE ASSY	EMB2-20-DPP EMB2-20-DPP-2 EMB2-20-DPP-4 EMB5-01-DPP-1 EMB5-01-DPP-2 EMB5-01-DPP-3 EMB5-01-DPP-5 EMB5-03-DPP EMB5-03-DP1
NT6M93AA	SCSI DISK X-OVER CP	EMB2-20-DPP EMB2-20-DPP-2 EMB2-20-DPP-4 EMB5-01-DPP-1

		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-5
		EMB5-03-DPP
		EMB5-03-DP1
NT6M94AA	56 KBPS I/F CP	EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
NT6M94BA	56 KBPS COMPRESSION I/F CP	EMB2-20-DPP
		EMB2-20-DPP-2
		EMB2-20-DPP-4
		EMB5-01-DPP-5
		EMB5-03-DPP
		EMB5-03-DP1
NT6X01AC	Int. Frame LGE/DTE ISDN	EMB2-06-ZZ41DA
NT6X01AD	Common Peripheral Frame	EMB2-06-004
NT6X01BA	Int. Frame LGE/DTE Non-ISDN	EMB2-06-ZZ41AA
NT6X01WA	Cont. Tone Detector & wiring	EMB2-06-ZZ41AA
NT6X01WC	Wiring Strap Option	EMB2-06-004
NT6X01WD	LGC/DTC Wiring for NT6X01AC	EMB2-06-ZZ41DA
NT6X01WE	Wiring List XPM Plus	EMB2-06-ZZ41DA
NT6X01WF	Echo Canceller Wiring List	EMB2-06-ZZ41AA
NT6X01WG	CCITT N5 Wiring List	EMB2-06-ZZ41AA
NT6X01WH	Wiring List	EMB2-06-ZZ41AA
NT6X01WJ	Wiring List	EMB2-06-ZZ41AA
NT6X01WK	Wiring List Without XPM+	EMB2-06-ZZ41AA
		EMB2-06-ZZ41BA
NT6X01WL	Wiring List With XPM+	EMB2-06-ZZ41AA
NT6X01XE	XPM+ Upgrade Kit	EMB2-06-ZZ41AA
NT6X01XG	XPM+ Echo Canceller Kit	EMB2-06-ZZ37AC
NT6X01XJ	ECC Cable Support Brkt Kit	EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
NT6X01XK	XPM PLUS Echo Canceller Kit	EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
NT6X01ZA	CPC Coax Panel	EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
NT6X01ZD	ICPC Coax Panel	EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
NT6X01ZE	CPC Coax Panel (BT43 Conn)	EMB2-06-ZZ41AA
NT6X01ZF	ICPC Coax Panel	EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
NT6X0126	Coax Cable Kit (02)	EMB2-06-ZZ41AA
NT6X0127	Coax Cable Kit (01)	EMB2-06-ZZ41AA
NT6X02AB	CPC Filler Faceplate	EMB2-06-ZZ37AB
		EMB2-20-007
		EMB2-26-FIL
		EMB3-01-001
		EMB3-07-000
		EMB2-06-004

		EMB2-09-CPE-2
		EMB2-09-CPE-3
		EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT6X02BU	FIBER I/F H/W ASSEMBLY	EMB2-99-SMS-2
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
NT6X02CT	SMR Common CP	EMB2-06-004
NT6X02DU	SMS Common CP	EMB2-06-SMS-3
		EMB2-06-SMS-5
		EMB2-06-SMS-7
		EMB2-06-SMS-8
NT6X02EP	SMU Common CP	EMB2-09-CPE-2
		EMB2-09-CPE-3
NT6X02ER	XPM PC KIT	EMB2-99-XPM-1
		EMB2-99-XPM-2
NT6X02ES	SMUI Common CP	EMB2-06-SMU-11
		EMB2-06-SMU-15
		EMB2-06-SMU-7
NT6X02ET	SMU Common CP	EMB2-06-SMU-14
		EMB2-06-SMU-16
		EMB2-06-SMU-2
		EMB2-06-SMU-9
NT6X02IG	DTC Common Packfill	EMB2-06-DTC-1
NT6X02IH	DTC Common Packfill	EMB2-06-DTC-4
		EMB2-06-DTC-6
		EMB2-06-DTC-1
NT6X02LC	LGC Common CP	EMB2-06-LGC-1
		EMB2-06-LGC-2
		EMB2-06-LGC-6
NT6X02MC	LTC Common CP	EMB2-06-LTC-1
		EMB2-06-LTC-2
		EMB2-06-LTC-3
		EMB2-06-LTC-6
NT6X02NA	CPCE Common CP	EMB2-06-DTP
		EMB2-06-DTX
		EMB2-06-LGC-7
		EMB2-06-LGP
		EMB2-06-LGX
		EMB2-06-LTC-7
		EMB2-06-LTP
		EMB2-06-LTX
		EMB2-06-UPI
		EMB2-18-CPC-2
		EMB2-18-CPC-3

			EMB2-18-CPC-5
			EMB2-18-004
NT6X02PK	SMS-R Common CP		EMB2-06-SMS-4
			EMB2-06-SMSR-3
NT6X02TH	SMA Packfill		EMB2-06-SMSR-5
			EMB2-06-SMA-12
			EMB2-06-SMA-14
NT6X02UB	LGCI/DTCI Offshore Cpmmon CP		EMB2-06-SMA-16
			EMB9-03-DRS-G
			EMB9-03-DRS-B
			EMB10-21-MCTMI
NT6X02UF	Universal Connector Bracket		EMB10-20-MCTMI
			EMB2-06-ZZ37AB
			EMB2-18-006
			EMB2-06-004
			EMB2-09-CPE-2
			EMB2-09-CPE-3
			EMB9-03-DRS-G
			EMB9-03-DRS-B
			EMB10-21-MCTMI
			EMB10-20-MCTMI
			EMB2-06-ZZ41DA
			EMB2-06-ZZ41AA
			EMB2-06-ZZ37AC
NT6X02WB	NT6X69AD Change Kit		EMB2-06-004
			EMB2-09-CPE-2
			EMB2-09-CPE-3
NT6X02WC	NT6X86AB Change Kit		EMB2-06-004
			EMB2-09-CPE-2
			EMB2-09-CPE-3
NT6X02WE	NT6X80BB Product Change Kit		EMB2-06-004
			EMB2-09-CPE-2
			EMB2-09-CPE-3
NT6X02WF	NT7X05AA Product Change Kit		EMB2-06-ZZ41DA
			EMB2-06-ZZ41AA
NT6X02WG	NT6X80BB/86AB Change Kit		EMB2-06-004
			EMB2-09-CPE-2
			EMB2-09-CPE-3
NT6X02XA	XPM Plus Change Kit		EMB2-06-ZZ41DA
NT6X02XB	XPM Plus Change Kit		EMB2-06-ZZ41DA
NT6X02XF	XPM Plus Change Kit		EMB2-06-ZZ41DA
NT6X02XG	XPM+ Packfill Kit		EMB2-06-SMS-7
			EMB2-06-SMSR-5
			EMB2-06-SMU-2
			EMB2-15-005
			EMB2-06-ZZ41DA
NT6X02XH	3P XPM Plus Change Kit		EMB2-06-ZZ41AA
NT6X02ZL	WIRING KIT		EMB2-99-XPM-1
			EMB2-99-XPM-2

NT6X0205	SMS-R Product Change Kit	EMB2-06-SMSR-3 EMB2-06-SMSR-5 EMB2-09-CPE-2 EMB2-09-CPE-3
NT6X0211	Controller Array Shf Assy	EMB2-06-ZZ41AA
NT6X0215	Com Periph Proc Shelf Assy	EMB10-08-000 EMB10-08-001 EMB9-03-DRS-G EMB9-03-DRS-B
NT6X0216	Cntr Arry Shlf Assy	EMB2-06-ZZ41DA
NT6X0223	Offshore CPC Shelf Assy	EMB2-06-ZZ37AB EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3 EMB10-20-000 EMB10-21-MCTMI EMB10-20-MCTMI EMB2-06-ZZ37AC
NT6X0241	Offshore CPC Shelf Assy	EMB2-06-ZZ37AC
NT6X0250	Universal Ground Point	EMB2-18-006 EMB2-06-004 EMB2-06-ZZ41DA EMB2-06-ZZ41AA
NT6X0251	Fiber Cable Kit	EMB2-06-NIF-6 EMB2-06-ZZ41DA EMB2-06-ZZ37CQ EMB2-06-ZZ41AA
NT6X03AA	LCE Frame	EMB2-07-000 EMB2-07-004 EMB2-07-003
NT6X03DD	Option Slot Upg. Kit for 3P	EMB2-06-ZZ41AA
NT6X03DE	Enhanced 3P XPM+ Upg. Kitt	EMB2-06-ZZ41AA
NT6X0325	Cable (DDU/Stratum to FSP)	EMB2-20-DDU EMB2-20-ROS-1 EMB5-03-DDU EMB5-03-ST1 EMB5-03-ST2
NT6X0329	Cable (DDU to FSP)	EMB2-20-DDU EMB5-03-DDU
NT6X0338	Ring Return Straps	EMB2-07-000 EMB2-07-004 EMB2-07-003
NT6X0342	FSP Busbars	EMB2-07-000 EMB2-07-004 EMB2-07-003
NT6X0371	Line Con. Array Shelf Assy	EMB2-07-000 EMB2-07-004 EMB2-07-003
NT6X0377	LCE FSP Busbar Kit	EMB2-07-003

NT6X04AC	LCM Common CP	EMB2-07-LCM-1
NT6X04AD	LCM Common CP	EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
		EMB2-07-003
		EMB2-07-LCM-2
NT6X04AE	LCM Common CP	EMB2-14-006
NT6X04AX	LCM Filler Kit	EMB2-07-000
		EMB2-07-004
		EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-24-RCC-27
		EMB2-07-003
NT6X04BB	LCM Common CP International	EMB2-14-ILCM
NT6X04BC	International LCM Common CP	EMB2-14-IRM-2
		EMB2-14-ILCM-2
NT6X04FA	QFFI Fuse Assembly	EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-24-RCC-27
NT6X04MB	CLCE LCM Common CP	EMB2-09-LCM-1
NT6X04MD	LCM Packfill	EMB2-24-RCC-27
		EMB2-09-LCM-4
NT6X04NB	CLCE LCM Common CP (Int.)	EMB2-09-LCM-2
NT6X04ND	CLCE LCM Common CP (Int.)	EMB2-09-LCM-3
NT6X04ZX	LCM Upgrade Kit	EMB2-14-006
NT6X0401	Line Conc. Array Shf Assy	EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
NT6X0442	Line Con. Array Shelf Assy	EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-24-RCC-27
NT6X05AA	Line Drawers	EMB2-07-LCM-1
		EMB2-09-LCM-1
		EMB2-13-004
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-24-RCC-27
		EMB2-14-006
		EMB2-07-003
		EMB2-09-LCM-4
		EMB2-07-LCM-2
NT6X05AX	Line Drawer Filler Kit	EMB2-09-LCE-4
		EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-24-RCC-28
		EMB2-14-006
		EMB2-07-003
		EMB2-19-002

NT6X05BA	Line Drawer (International)	EMB2-09-LCE-6 EMB2-09-LCM-2 EMB2-14-ILCM EMB2-14-IRM-2 EMB2-09-LCM-3 EMB2-14-ILCM-2
NT6X05DA	ISDN Line Drawer	EMB2-14-006 EMB2-07-003
NT6X05EA	LCM Line Drawer,	EMB2-07-003
NT6X10AB	Remote Control Eqpt Kit	EMB2-15-002
NT6X10AC	Remote Controller Eqpt Fr	EMB2-15-005
NT6X10AD	ISDN Remote Cntrl. Equip.	EMB2-15-002
NT6X10AH	RMM CARD CAGE	EMB2-15-RMC-1 EMB2-15-005
NT6X10AJ	Remote Control Equipment Kit	EMB2-15-RMM-5
NT6X1022	RCC to RCCI Change Kit	EMB2-15-005
NT6X1025	Power Alarm Cable Assembly	EMB2-15-002
NT6X1029	26AWG Ca Assy(RMM Pwr Mon)	EMB2-15-005
NT6X11BB	HIE CP Turkey/CEP	EMB2-14-IRM-2
NT6X11BC	HIE CP Turkey/CEP	EMB2-14-IRM-2
NT6X11EB	HIE CP SL100/UK	EMB2-14-IRM-2
NT6X11KA	HIE CP China	EMB2-14-IRM-2
NT6X1108	Host Interface Equip Assy	EMB2-13-004 EMB2-14-IRM-2 EMB2-14-IRM-5 EMB2-14-004 EMB2-14-006
NT6X12AN	Rmt Clster Cntrl Cmmn CP	EMB2-15-005 EMB2-15-014 EMB2-15-015
NT6X12DC	RCCI Packfill	EMB2-15-RCCI-1 EMB2-15-002
NT6X12DE	RCCI XPM Plus Common CP	EMB2-15-002
NT6X12ZE	RCCI XPM Plus Change Kit	EMB2-15-002
NT6X12ZG	Dual RCC Product Change Kit	EMB2-15-005
NT6X12ZJ	RCC PC Kit NT6X12AL TO AN	EMB2-15-005
NT6X1201	Remote Cntrl Array Sh Assy	EMB2-15-005
NT6X1206	Remote Cntrl Array Sh Assy	EMB2-15-002
NT6X13AB	RMM Common CP	EMB2-13-004 EMB2-14-IRM-5 EMB2-14-RMM-2 EMB2-14-004 EMB2-15-RMM-4 EMB2-15-RMM-5 EMB2-15-002 EMB2-15-005 EMB2-24-RMM-1 EMB2-24-RMM-3 EMB2-24-RCC-27

		EMB2-24-RCC-28
		EMB2-14-RMM-4
		EMB2-14-006
NT6X13BA	RMT MAINTENANCE MODULE-CUST	EMB2-14-MMR-2
		EMB2-14-MMR-4
NT6X13DA	RMT MAINTENANCE MODULE-CUST	EMB2-14-MMR-3
NT6X13EA	Rmt Maintenance Module-CUST	EMB2-14-MMR-1
		EMB2-24-RCC-27
		EMB2-24-RCC-28
NT6X1301	Remote Mtce Mod Shelf Assy	EMB2-15-002
NT6X1306	RMT Maint Mod Shf Assy	EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-15-005
		EMB2-24-RMM-3
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB2-14-006
NT6X14AA	RLCM Frame	EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
NT6X14WA	ABS Batt Supply (NT6X25BA)	EMB2-14-FSP-2
NT6X14WB	ESA PC Kit	EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
NT6X1402	Baffle Assembly	EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-19-005
		EMB13-01-003
		EMB2-14-006
		EMB2-19-002
NT6X1429	RLCM Interconnect Cable	EMB2-14-FSP-1
NT6X1430	RLCM Interconnect cable	EMB2-14-FSP-2
NT6X1435	RMM CABLE ASSY MTU PWR	EMB2-15-RMM-4
NT6X1438	-48V SP Batt Supply Cable	EMB2-14-MMR-1
		EMB2-14-MMR-2
		EMB2-14-MMR-3
		EMB2-14-MMR-4
		EMB2-15-002
		EMB2-15-005
NT6X25AA	Frame Supervisory Panel	EMB2-14-FSP-1
NT6X25AG	Ringin Gen Shelf Assy	EMB2-09-LCE-2
NT6X25BA	Frame Supervisory Panel	EMB2-14-FSP-2
NT6X25BC	Frame Supervisory Panel	EMB2-13-004
NT6X2501	RLCM FSP Assy	EMB2-14-FSP-1
NT6X2520	RLCM FSP Assy	EMB2-14-FSP-2
NT6X2537	Cable	EMB2-14-FSP-2

NT6X27AB	PCM 30 Interface	EMB2-14-IRM-2
NT6X27BB	PCM-30 Trunk Interface CP	EMB2-06-ZZ37AB
		EMB2-14-IRM-2
		EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT6X27JA	PCM30 Interface CP(Japan)	EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ37AC
NT6X28AA	PCM-30 Signalling CP	EMB2-06-ZZ37AB
		EMB2-06-ZZ41EA
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ43AA
		EMB2-06-ZZ41BA
		EMB2-06-ZZ37AC
NT6X28AC	PCM30 Signalling CP	EMB10-21-MCTMI
		EMB10-20-MCTMI
NT6X30AA	Ringng Generator CP	EMB2-07-000
NT6X30AB	RINGING GENERATOR CP	EMB2-07-IRG-1
NT6X30AE	RINGING GENERATOR CP	EMB2-07-IRG-3
NT6X30CA	Ringng Generator CP	EMB2-07-004
		EMB2-19-005
NT6X30DA	RINGING GENERATOR CP	EMB2-07-IRG-2
NT6X30EA	Ringng Generator	EMB2-09-LCE-3
		EMB2-09-LCE-4
NT6X30GA	Ringng Generator (UK)	EMB2-09-LCE-3
		EMB2-09-LCE-4
NT6X30HA	Ringng Generator	EMB2-09-LCE-2
		EMB2-09-LCE-3
		EMB2-09-LCE-4
		EMB2-24-RCC-27
		EMB2-24-RCC-28
NT6X3005	Ringng Generator Filler	EMB2-19-002
NT6X35AA	LCE Frame Supervisory Panel	EMB2-07-000
		EMB2-07-004
		EMB2-07-003
NT6X36AA	FSP Alarm Card	EMB2-14-FSP-1
		EMB2-14-FSP-2
		EMB8-01-PCE
NT6X36AC	Fan Sensor Alarm CP	EMB8-01-PCE
NT6X36AE	Alarm Card CP	EMB2-13-004
NT6X40AC	DS30 NETWORK INTERFACE CP	EMB2-06-NIF-1
		EMB2-06-ZZ37AB

		EMB2-06-ZZ37CN
		EMB2-06-ZZ37CP
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT6X40AD	DS30 Network Interface CP	EMB2-06-ZZ37AC
NT6X40BA	DS30 NETWORK INTERFACE CP	EMB2-06-NIF-4
		EMB2-99-SMS-2
NT6X40CA	XPM DS512 Link Control CP	EMB2-06-ZZ37AC
NT6X40DA	XPM DS512 Link Control CP	EMB2-06-ZZ37AC
NT6X40FA	DS512 Network Interface CP	EMB2-06-NIF-6
		EMB2-99-SMS-2
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB2-06-ZZ41DA
		EMB2-06-ZZ37CQ
		EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT6X40FB	DS-512 XPM Interface CP	EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT6X40GA	DS512 Paddle Board	EMB2-06-NIF-6
		EMB2-99-SMS-2
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB2-06-ZZ41DA
		EMB2-06-ZZ37CQ
		EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT6X41AA	Speech Bus Formatter	EMB2-06-DTC-4
		EMB2-06-DTC-5
		EMB2-06-DTC-6
		EMB2-06-DTP
		EMB2-06-DTX
		EMB2-06-LGC-1
		EMB2-06-LGC-2
		EMB2-06-LGC-3
		EMB2-06-LGC-6
		EMB2-06-LGC-7
		EMB2-06-LGP
		EMB2-06-LGX
		EMB2-06-LTC-1
		EMB2-06-LTC-2
		EMB2-06-LTC-3
		EMB2-06-LTC-6
		EMB2-06-LTC-7
		EMB2-06-LTP
		EMB2-06-LTX
		EMB2-06-SMA-12

		EMB2-06-SMA-14
		EMB2-06-SMA-16
		EMB2-06-SMS-3
		EMB2-06-SMS-4
		EMB2-06-SMS-5
		EMB2-06-SMS-7
		EMB2-06-SMS-8
		EMB2-06-SMSR-3
		EMB2-06-SMSR-5
		EMB2-06-SMU-11
		EMB2-06-SMU-14
		EMB2-06-SMU-15
		EMB2-06-SMU-16
		EMB2-06-SMU-2
		EMB2-06-SMU-7
		EMB2-06-SMU-9
		EMB2-06-UPI
		EMB2-18-CPC-2
		EMB2-18-CPC-3
		EMB2-18-CPC-5
		EMB2-18-004
		EMB2-06-DTC-1
		EMB9-03-ICP-3
		EMB9-03-ICP-1
		EMB9-03-ICP-2
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NT6X41AB	Speech Bus Formatter CP	EMB2-06-ZZ41EA
		EMB2-20-CP-1
		EMB2-06-ZZ37BB
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ43AA
		EMB2-06-ZZ41BA
NT6X41AC	SPEECH BUS FORMATTER	EMB2-06-ZZ37AC
NT6X42AA	Channel Supervision Msg.	EMB2-06-DTC-4
		EMB2-06-DTC-5
		EMB2-06-DTC-6
		EMB2-06-DTP
		EMB2-06-DTX
		EMB2-06-LGC-1
		EMB2-06-LGC-2
		EMB2-06-LGC-3
		EMB2-06-LGC-6
		EMB2-06-LGC-7
		EMB2-06-LGP
		EMB2-06-LGX
		EMB2-06-LTC-1
		EMB2-06-LTC-2

		EMB2-06-LTC-3
		EMB2-06-LTC-6
		EMB2-06-LTC-7
		EMB2-06-LTP
		EMB2-06-LTX
		EMB2-06-SMA-12
		EMB2-06-SMA-14
		EMB2-06-SMA-16
		EMB2-06-SMS-3
		EMB2-06-SMS-4
		EMB2-06-SMS-5
		EMB2-06-SMS-7
		EMB2-06-SMS-8
		EMB2-06-SMSR-3
		EMB2-06-SMSR-5
		EMB2-06-SMU-11
		EMB2-06-SMU-14
		EMB2-06-SMU-15
		EMB2-06-SMU-16
		EMB2-06-SMU-2
		EMB2-06-SMU-7
		EMB2-06-SMU-9
		EMB2-06-UPI
		EMB2-06-ZZ41EA
		EMB2-18-CPC-2
		EMB2-18-CPC-3
		EMB2-18-CPC-5
		EMB2-18-004
		EMB2-20-CP-1
		EMB2-06-ZZ37BB
		EMB2-06-DTC-1
		EMB9-03-ICP-3
		EMB10-20-000
		EMB9-03-ICP-1
		EMB9-03-ICP-2
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ43AA
		EMB2-06-ZZ41BA
		EMB2-06-ZZ37AC
NT6X42CA	CSM and CCITT N5 Splitter CP	EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT6X44AA	Time Switch CP	EMB2-06-DTC-6
		EMB2-06-DTP
		EMB2-06-DTX
		EMB2-06-LGC-1
		EMB2-06-LGC-2

- EMB2-06-LGC-3
- EMB2-06-LGC-6
- EMB2-06-LGC-7
- EMB2-06-LGP
- EMB2-06-LGX
- EMB2-06-LTC-1
- EMB2-06-LTC-2
- EMB2-06-LTC-3
- EMB2-06-LTC-6
- EMB2-06-LTC-7
- EMB2-06-LTP
- EMB2-06-LTX
- EMB2-06-SMA-14
- EMB2-06-SMS-3
- EMB2-06-SMS-4
- EMB2-06-SMS-5
- EMB2-06-SMS-7
- EMB2-06-SMS-8
- EMB2-06-SMSR-3
- EMB2-06-SMSR-5
- EMB2-06-UPI
- EMB2-15-RCCI-1
- EMB2-15-RCCI-2
- EMB2-15-005
- EMB2-15-014
- EMB2-15-015
- EMB2-18-CPC-2
- EMB2-18-CPC-5
- EMB2-18-004
- EMB2-99-ISDN-2
- EMB2-06-DTC-1
- EMB10-20-000
- EMB10-08-000
- EMB10-08-001
- EMB9-03-DRS-G
- EMB9-03-DRS-B
- EMB9-03-ICP-1
- EMB10-21-MCTMI
- EMB10-20-MCTMI
- EMB10-21-MCTMI
- EMB10-20-MCTMI
- EMB2-06-SMA-12
- EMB2-06-SMU-11
- EMB2-06-SMU-14
- EMB2-06-SMU-15
- EMB2-06-SMU-16
- EMB2-06-SMU-2
- EMB2-06-SMU-7
- EMB2-06-SMU-9

NT6X44AB Time Switch

NT6X44CA Time Switch CP

NT6X44EA	Universal Time Switch CP	EMB2-06-ZZ41EA EMB2-20-CP-1 EMB2-06-ZZ37BB EMB10-20-000 EMB10-21-MCTMI EMB10-20-MCTMI EMB2-06-ZZ41DA EMB2-06-ZZ41AA EMB2-06-ZZ43AA EMB2-06-ZZ41BA EMB2-06-ZZ37AC
NT6X45--	XPM Processor CP	EMB2-99-XPM-5
NT6X45AF	XPM PROCESSOR CP	EMB2-13-ESA EMB2-14-ESA-2 EMB2-14-IES-1 EMB2-14-IES-2 EMB2-14-IES-3
NT6X45BA	XPM Processor CP	EMB2-06-DTC-4 EMB2-06-DTX EMB2-06-LGC-1 EMB2-06-LGX EMB2-06-LTC-1 EMB2-06-LTX EMB2-06-SMS-3 EMB2-06-SMS-4 EMB2-06-SMU-16 EMB2-06-SMU-7 EMB2-06-ZZ41EA EMB2-18-CPC-2 EMB2-18-CPC-3 EMB2-18-004 EMB2-20-CP-1 EMB2-06-DTC-1 EMB10-20-000 EMB9-03-ICP-1 EMB9-03-ICP-2 EMB10-21-MCTMI EMB10-20-MCTMI EMB2-06-ZZ41DA EMB2-06-ZZ41AA EMB2-06-ZZ41BA EMB2-06-ZZ37AC
NT6X45BC	LGC/DTC Processor CP	EMB2-15-RCCI-1
NT6X45BD	LGC/DTC Processor CP	EMB2-15-005 EMB2-15-014
NT6X46--	Signaling Processor	EMB2-99-XPM-5
NT6X46BA	Signal Processor Memory	EMB2-06-004
NT6X46BB	Sig Proc Memory Plus CP	EMB2-06-DTC-4 EMB2-06-DTX

		EMB2-06-LGC-1
		EMB2-06-LGX
		EMB2-06-LTC-1
		EMB2-06-LTX
		EMB2-06-SMS-3
		EMB2-06-SMS-4
		EMB2-06-SMU-16
		EMB2-06-SMU-7
		EMB2-06-ZZ41EA
		EMB2-15-RCCI-1
		EMB2-15-002
		EMB2-15-005
		EMB2-15-014
		EMB2-18-CPC-2
		EMB2-18-CPC-3
		EMB2-18-004
		EMB2-20-CP-1
		EMB2-99-ISDN-1
		EMB2-99-XPM-1
		EMB2-99-XPM-2
		EMB2-06-DTC-1
		EMB10-20-000
		EMB9-03-ICP-1
		EMB9-03-ICP-2
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ41BA
		EMB2-06-ZZ37AC
NT6X47--	MP Memory Plus CP	EMB2-99-XPM-5
NT6X47AB	MP MEMORY PLUS CP	EMB2-99-OPM-1
NT6X47AC	Mast Proc Memory Plus CP	EMB2-06-DTC-4
		EMB2-06-DTX
		EMB2-06-LGC-1
		EMB2-06-LGX
		EMB2-06-LTC-1
		EMB2-06-LTX
		EMB2-06-SMS-3
		EMB2-06-SMS-4
		EMB2-06-SMU-16
		EMB2-06-SMU-7
		EMB2-06-ZZ41EA
		EMB2-13-ESA
		EMB2-14-ESA-2
		EMB2-14-IES-1
		EMB2-14-IES-2
		EMB2-14-IES-3
		EMB2-15-RCCI-1

		EMB2-15-002
		EMB2-15-005
		EMB2-15-014
		EMB2-18-CPC-2
		EMB2-18-CPC-3
		EMB2-18-004
		EMB2-20-CP-1
		EMB2-99-ISDN-1
		EMB2-99-OPM-1
		EMB2-99-XPM-1
		EMB2-99-XPM-2
		EMB2-06-DTC-1
		EMB10-20-000
		EMB9-03-ICP-1
		EMB9-03-ICP-2
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ41BA
		EMB2-06-ZZ37AC
NT6X48AA	DS30A LCM Interface CP	EMB2-06-LIF-1
		EMB2-06-ZZ37AB
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
NT6X50AA	DS-1 Interface CP	EMB2-06-ZZ37AC
		EMB2-06-DS1-1
		EMB2-13-004
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-15-DS1-1
		EMB2-14-006
NT6X50AB	DS-1 INTERFACE CP	EMB2-06-DS1-2
		EMB2-13-004
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-15-DS1-2
		EMB2-15-RCCI-1
		EMB2-15-RCCI-2
		EMB9-10-ICRM-1
		EMB9-10-ICRM-2
		EMB10-20-000
		EMB10-08-000
		EMB10-08-001
		EMB9-03-DRS-G
		EMB9-03-DRS-B
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-14-006

NT6X50EC	DS-1 P-Side Echo Cancel.	EMB2-06-ZZ37AC
NT6X51AB	Extended LCM Processor	EMB2-06-004
		EMB2-07-LCM-1
		EMB2-09-LCM-1
		EMB2-09-LCM-2
		EMB2-13-004
NT6X51AC	Extended LCM Processor	EMB2-09-LCM-4
		EMB2-09-LCM-3
		EMB2-07-LCM-2
NT6X52AA	Digroup Controller	EMB2-07-LCM-1
		EMB2-09-LCM-1
		EMB2-13-004
		EMB2-09-LCM-4
		EMB2-07-LCM-2
NT6X52AB	Digroup Controller (Int.)	EMB2-09-LCM-2
		EMB2-09-LCM-3
NT6X53AA	Power Converter	EMB2-07-LCM-1
		EMB2-09-LCM-1
		EMB2-09-LCM-2
		EMB2-13-004
		EMB2-09-LCM-4
		EMB2-09-LCM-3
		EMB2-07-LCM-2
NT6X53BA	Power Converter	EMB2-19-LCMI-1
NT6X53CA	LCME Power Converter	EMB2-19-LCME-1
		EMB2-19-LCME-3
NT6X53EA	Power Converter	EMB2-19-LCMI-1
NT6X55AB	DS0A INTERFACE CP	EMB2-06-DTC-2
NT6X55JA	DTC CII/CMI Interface(Japan)	EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ37AC
NT6X60AB	RINGING GENERATOR CP	EMB2-14-IRG-1
NT6X60AE	Ringing Generator, Australia	EMB2-14-IRG-5
NT6X60CA	Ringing Generator	EMB2-13-004
		EMB2-14-IRG-4
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
NT6X60DA	RINGING GENERATOR CP	EMB2-14-IRG-2
NT6X62AA	Specialized Tone Rcvr	EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NT6X62AB	Specialized Tone Rcvr	EMB2-06-004
		EMB2-09-CPE-2
		EMB2-09-CPE-3
NT6X62DA	CCITT N5 Tone Receiver CP	EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT6X68AC	STI	EMB2-11-STI-1
NT6X68AD	STI WITH TERM	EMB2-11-STI-2

NT6X69AC	CPP Msg Protocol & Tone CP	EMB2-06-DTC-4
		EMB2-06-DTC-5
		EMB2-06-DTC-6
		EMB2-06-DTP
		EMB2-06-DTX
		EMB2-06-LGC-1
		EMB2-06-LGC-2
		EMB2-06-LGP
		EMB2-06-LGX
		EMB2-06-LTC-1
		EMB2-06-LTC-2
		EMB2-06-LTP
		EMB2-06-LTX
		EMB2-06-MPT-1
		EMB2-06-SMS-3
		EMB2-06-SMS-4
		EMB2-06-SMS-5
		EMB2-06-SMS-7
		EMB2-06-SMSR-3
		EMB2-06-SMSR-5
		EMB2-06-SMU-11
		EMB2-06-SMU-16
		EMB2-06-SMU-2
		EMB2-06-SMU-7
		EMB2-06-SMU-9
		EMB2-06-UPI
		EMB2-15-RCCI-1
		EMB2-15-RCCI-2
		EMB2-15-002
		EMB2-18-CPC-2
		EMB2-18-CPC-3
		EMB2-18-004
		EMB2-99-ISDN-1
		EMB2-99-XPM-1
		EMB2-99-XPM-2
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB2-06-DTC-1
		EMB9-03-ICP-3
		EMB9-03-ICP-1
		EMB9-03-ICP-2
		EMB10-21-MCTMI
		EMB10-20-MCTMI
NT6X69AD	CPP Msg Protocol & Tone CP	EMB2-06-LGC-6
		EMB2-06-LGC-7
		EMB2-06-LTC-6
		EMB2-06-LTC-7
		EMB2-06-MPT-2
		EMB2-06-SMS-8

		EMB2-06-SMU-14
		EMB2-06-SMU-15
		EMB2-18-CPC-5
		EMB2-24-RCC-27
		EMB2-24-RCC-28
NT6X69LA	Msg Prot & Download Tones CP	EMB10-21-MCTMI
		EMB10-20-MCTMI
NT6X69LB	Msg Prot & Download Tones CP	EMB2-06-ZZ41EA
		EMB2-20-CP-1
		EMB2-06-ZZ37BB
		EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ43AA
		EMB2-06-ZZ41BA
		EMB2-06-ZZ37AC
NT6X70AA	CONTINUITY TONE DETECTOR CP	EMB2-06-CTD-1
		EMB2-06-ZZ37AB
		EMB10-20-000
		EMB10-08-000
		EMB10-08-001
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT6X72AB	Host Link Formatter CP	EMB2-15-HLF-1
		EMB2-15-RCCI-1
		EMB2-15-RCCI-2
NT6X73AA	Link Control CP	EMB2-13-004
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
NT6X74AB	RMM Control Card	EMB2-13-004
		EMB2-14-MMR-1
		EMB2-14-MMR-2
		EMB2-14-MMR-3
		EMB2-14-MMR-4
		EMB2-15-RMM-4
		EMB2-15-005
		EMB2-24-RMM-1
		EMB2-24-RMM-3
NT6X75AA	ESA CLOCK AND TONE CP	EMB2-13-ESA
		EMB2-14-ESA-2
NT6X75DA	ESA CLOCK AND TONE CP	EMB2-14-IES-2
NT6X75EA	ESA CLOCK AND TONE CP	EMB2-14-IES-3
NT6X75KA	ESA CLOCK AND TONE CP	EMB2-14-IES-1

NT6X78AA	CLASS Modem Resource CP	EMB2-06-ZZ37AB EMB2-06-ZZ41DA EMB2-06-ZZ37AC
NT6X78AB	CLASS Modem Resource CP	EMB2-06-CMR-1 EMB2-06-CMR-2 EMB2-24-CMR-1 EMB2-06-ZZ41DA EMB2-06-ZZ41AA EMB2-06-ZZ37AC
NT6X80AA	Ring/Pad CP	EMB2-06-RPC-1
NT6X80BA	Ring/Pad Ckt	EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NT6X80BB	Ring/Pad CP	EMB2-06-RPC-2 EMB2-06-SMS-3 EMB2-06-SMS-4 EMB2-06-SMU-11 EMB2-06-SMU-14 EMB2-06-SMU-15 EMB2-06-SMU-16 EMB2-06-SMU-2 EMB2-06-SMU-7 EMB2-06-SMU-9
NT6X85AB	SCM DS-1 INTERFACE CP	EMB2-06-DS1-3
NT6X85AC	DS-1 Interface CP	EMB2-06-004 EMB2-09-CPE-2 EMB2-09-CPE-3
NT6X86AA	A-Bit Message Card CP	EMB2-06-SMS-3 EMB2-06-SMS-4
NT6X86AB	A-Bit Message Card CP	EMB2-06-SMS-5 EMB2-06-SMS-7 EMB2-06-SMS-8 EMB2-06-SMSR-3 EMB2-06-SMSR-5
NT6X91BA	NEMAS Circuit Pack	EMB10-17-MCEX-1 EMB10-17-001
NT6X91BB	X25LAPB Link Cont CP	EMB10-13-001 EMB10-17-MCEX-1 EMB10-17-001
NT6X92BB	Domestic Universal Tone Rcvr	EMB2-15-RCCI-1 EMB2-15-RCCI-2 EMB2-24-UTR-1 EMB2-24-RCC-27 EMB2-24-RCC-28 EMB9-03-ICP-3 EMB2-06-UTR-1 EMB9-03-ICP-1 EMB9-03-ICP-2
NT6X92BC	Universal Tone Receiver	EMB2-06-UTR-4

		EMB9-03-ICP-3
		EMB2-06-UTR-2
		EMB9-03-ICP-1
		EMB9-03-ICP-2
NT6X92CA	Universal Tone Receiver CP	EMB2-06-UTR-3
		EMB2-06-ZZ37AB
		EMB2-24-RCC-27
		EMB2-24-RCC-28
		EMB10-20-000
		EMB10-21-MCTMI
		EMB10-20-MCTMI
		EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT6X92EA	Global Tone Receiver CP	EMB2-06-ZZ41DA
		EMB2-06-ZZ41AA
		EMB2-06-ZZ37AC
NT7F15AA	DTH Bracket/Switch Assembly	EMB13-08-DTH-1
NT7F18AB	Digital Test Head ROTL	EMB13-01-000
NT7F18AD	Digital Test Head ROTL	EMB13-01-000
		EMB13-08-DTH-1
		EMB13-01-005
		EMB13-01-003
NT7F18BA	DTH-DTT Shelf	EMB13-01-000
		EMB13-01-003
NT7F18CA	DTH ROTL/DTT	EMB13-01-000
		EMB13-01-003
NT7F19AC	DTH-ROTL Spares Kit	EMB13-08-DTH-1
		EMB13-01-005
NT7F27BA	DTH-ROTL Cable Kit	EMB13-08-DTH-1
NT7M00CC	1-Chan 19" 32S RTA STB	EMB13-05-000
NT7M00DB	1-Chan 26" 32S RR/RTA BRN	EMB13-05-000
NT7M00DC	1-Chan 26" 32S RTA BRN	EMB13-05-000
NT7X05AA	XPM Peripheral Loader CP	EMB2-06-XPL-1
		EMB2-24-RCC-31
NT7X3004	Service Trunk Module	EMB10-13-001
		EMB10-12-000
		EMB10-12-MCAM-2
NT7X34AA	Frame Supervisory Panel	EMB2-20-007
		EMB3-07-000
		EMB10-12-000
		EMB10-17-MCEX-1
		EMB10-17-001
		EMB10-12-MCAM-1
		EMB10-12-MCAM-2
NT7X3406	Cabling Assembly	EMB2-01-000
NT7X76AA	WTA Panel	EMB13-05-000
NT7X80AA	Bus Shorter CP	EMB2-06-ZZ41AA
NT8M04_A	BMC Redund SMDR BSC Pseudo	EMB5-01-000

NT8M04_C	BMC Redund LSSGR BSC Pseudo	EMB5-01-000
NT8M04_D	BMC Redund LSSGR HDLC Lap B	EMB5-01-000
NT8M04_E	BMC Redund LSSGR BX.25	EMB5-01-000
NT8M04_F	BMC Redund LSSGR HDLC ADU	EMB5-01-000
NT8M04_J	BMC Redund NT HDLC ADU	EMB5-01-000
NT8M04_L	BMC Deuce SMDR ASCII	EMB5-01-000
NT8M04_M	Redundant BMC SMDR/NT ASCII	EMB5-01-000
NT8M04AG	BMC Deuce e/w 72MB Disk Dr	EMB5-01-000
NT8M04BG	BMC Deuce e/w 140MB DDU	EMB5-01-000
NT8M59BB	Filler Panel Assy	EMB2-20-DPP-2
		EMB2-20-DPP-3
		EMB2-20-DPP-4
		EMB2-20-DPP-5
		EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT8M99AB	CA, EMERGENCY ACCESS TERM.	EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
NT8M99AG	Cassy, Modem BMC/DPP	EMB5-01-DPP-2
NT8M99AL	Power Cable Assembly	EMB5-03-001
		EMB5-01-000
NT8M99AQ	Molded Cable Assembly	EMB5-03-001
NT8M99AR	Moulded Cable Assembly	EMB5-03-002
		EMB5-03-DPP-2
NT8T5055	Rear Panels (Eq & Universal)	EMB2-07-000
		EMB2-07-004
		EMB2-07-003
NT8W0138	Installers Assy Kit (5Pin)	EMB2-13-004
		EMB2-13-005
NT8W0142	Cable Assy EP Bat String #0	EMB2-13-004
NT8W0143	Cable Assy EP Bat String #4	EMB2-13-004
NT8W0144	Cable Assy EP Bat String #1	EMB2-13-004
NT8W0145	Cable Assy EP Bat String #5	EMB2-13-004
NT8W0146	Cable Assy EP Bat String #0	EMB2-13-004
NT8W0147	Cable Assy EP Bat String #4	EMB2-13-004
NT8W0148	Cable Assy EP Bat String #2	EMB2-13-004
NT8W0149	Cable Assy EP Bat String #1	EMB2-13-004
NT8W0150	Cable Assy EP Bat String #6	EMB2-13-004
NT8W0151	Cable Assy EP Bat String #5	EMB2-13-004
NT8W0152	Cable Assy EP Bat String #2	EMB2-13-004
NT8W0153	Cable Assy EP Bat String #6	EMB2-13-004
NT8W0154	OPM Battery H/W Kit	EMB2-13-004
NT8W0156	Cable Assy GN Bat String #0	EMB2-13-004
NT8W0157	Cable Assy GN Bat String #4	EMB2-13-004

NT8W0158	Cable Assy GN Bat String #1	EMB2-13-004
NT8W0159	Cable Assy GN Bat String #5	EMB2-13-004
NT8W0160	Cable Assy GN Bat String #0	EMB2-13-004
NT8W0161	Cable Assy GN Bat String #4	EMB2-13-004
NT8W0162	Cable Assy GN Bat String #2	EMB2-13-004
NT8W0163	Cable Assy GN Bat String #1	EMB2-13-004
NT8W0164	Cable Assy GN Bat String #6	EMB2-13-004
NT8W0165	Cable Assy GN Bat String #5	EMB2-13-004
NT8W0166	Cable Assy GN Bat String #2	EMB2-13-004
NT8W0167	Cable Assy GN Bat String #6	EMB2-13-004
NT8W0168	OPM Battery H/W Kit (GNB)	EMB2-13-004
NT8X01AC	OPM-640 Cabinet	EMB2-13-005
NT8X01BC	OPM-256 Cabinet	EMB2-13-004
NT8X01ZA	FMT6 PC Kit (Single To Dual)	EMB2-13-004
NT8X0126	CABLE ASSEMBLY	EMB2-13-BSP
		EMB2-13-004
NT8X0128	Cable Assy YU Bat String #6	EMB2-13-004
NT8X0129	Cable Assy YU Bat String #3	EMB2-13-004
NT8X0140	Cable Assy YU Bat String #5	EMB2-13-004
NT8X0143	Cable Assy YU Bat String #0	EMB2-13-004
NT8X0144	Cable Assy YU Bat String #1	EMB2-13-004
NT8X0145	Cable Assy YU Bat String #2	EMB2-13-004
NT8X0147	Cable Assy YU Bat String #4	EMB2-13-004
NT8X0148	Cable Assy YU Bat String #5	EMB2-13-004
NT8X0150	Cable Assy YU Bat String #7	EMB2-13-004
NT8X0151	Cable Assy YU Bat String #0	EMB2-13-004
NT8X0152	Cable Assy YU Bat String #1	EMB2-13-004
NT8X0153	Cable Assy YU Bat String #2	EMB2-13-004
NT8X0154	Cable Assy YU Bat String #3	EMB2-13-004
NT8X0155	Cable Assy YU Bat String #4	EMB2-13-004
NT8X0157	Cable Assy YU Bat String #6	EMB2-13-004
NT8X0158	Cable Assy YU Bat String #7	EMB2-13-004
NT8X0176	Installers Assy Kit (4Pin)	EMB2-13-004
		EMB2-13-005
NT8X02AB	Battery Control CP	EMB2-13-004
NT8X03AC	Battery Charger Common CP	EMB2-13-004
NT8X0301	Battery Charging Unit Assy	EMB2-13-004
NT8X04BA	LCM-C Common CP	EMB2-13-004
NT8X0404	Line Concentration Array Shf	EMB2-13-004
NT8X0415	Remote Maintenance Mod Assy	EMB2-13-004
NT8X05AA	Power Control Unit	EMB2-13-004
NT8X06AB	Environmental Control Unit	EMB2-13-004
		EMB2-13-004
NT8X06BA	Booster Fan Unit	EMB2-13-004
NT8X08BB	Prt Schm 4Pin-Stubless (256)	EMB2-13-004
NT8X08BE	Prt Schm 5Pin 50ft Stub(256)	EMB2-13-004
NT8X08BF	Prt Schm 5Pin-Stubless (256)	EMB2-13-004
NT8X0804	Cable Stub 50ft 100-Pair	EMB2-13-004
NT8X09AA	LRS Test Head Mtg Kit	EMB2-13-004

NT8X09AB	320 Line UG W/4Pin-Stubless	EMB2-13-004
NT8X09AC	320 Line UG W/5Pin-50ft Stub	EMB2-13-004
NT8X09AD	320 Line UG W/5Pin-Stubless	EMB2-13-004
NT8X10AA	Double Shelf Net Equip Fr	EMB3-01-000
		EMB3-01-701
NT8X1001	Cable Assembly	EMB2-20-007
		EMB3-01-000
		EMB3-01-001
		EMB3-07-000
NT8X1002	Cable Assembly	EMB2-20-007
		EMB3-01-000
		EMB3-01-001
		EMB3-07-000
NT8X11AB	Double Shelf Network Assy	EMB3-01-000
		EMB3-01-701
NT8X11AD	Network Common CP	EMB3-01-NET-1
		EMB3-01-NET-2
		EMB3-01-NET-3
		EMB3-07-NCK-1
		EMB3-07-NCK-2
		EMB3-07-NCK-3
		EMB3-01-701
NT8X11BB	NETWORK COMMON CP	EMB2-20-CP-3
		EMB3-01-NET-4
		EMB3-07-NCK-4
NT8X1101	Network Module Shelf Assy	EMB2-20-007
		EMB3-01-000
		EMB3-01-001
		EMB3-07-000
		EMB10-08-000
		EMB10-08-001
NT8X1104	Cable Assembly	EMB2-20-007
		EMB3-01-000
		EMB3-01-001
		EMB3-07-000
		EMB10-08-000
		EMB10-08-001
NT8X12AA	NETWORK PORT CP	EMB2-20-CP-3
		EMB2-20-007
		EMB3-01-NET-1
		EMB3-01-NET-2
		EMB3-01-NET-3
		EMB3-01-NET-4
		EMB3-01-PORT-1
		EMB3-01-001
		EMB3-07-NCK-1
		EMB3-07-NCK-2
		EMB3-07-NCK-3
		EMB3-07-NCK-4

		EMB3-07-000
		EMB3-01-701
NT8X13AA	Crosspoint CP	EMB3-01-NET-1
		EMB3-01-NET-2
		EMB3-01-NET-3
		EMB3-07-NCK-1
		EMB3-07-NCK-2
		EMB3-07-NCK-3
NT8X13BA	CROSSPOINT CP	EMB2-20-CP-3
		EMB3-01-NET-4
		EMB3-07-NCK-4
NT8X14AA	TEST CODE CP	EMB2-20-CP-3
		EMB3-01-NET-1
		EMB3-01-NET-2
		EMB3-01-NET-3
		EMB3-01-NET-4
		EMB3-07-NCK-1
		EMB3-07-NCK-2
		EMB3-07-NCK-3
		EMB3-07-NCK-4
NT8X18BA	SMS-R DS-30A C-Side I/F CP	EMB2-06-SMS-4
		EMB2-06-SMSR-3
		EMB2-06-SMSR-5
NT8X47BA	Rem Mod Digital Port	EMB9-10-ICRM-1
		EMB9-10-ICRM-2
NT8X48AD	DIST. PROCESSOR PERIPHERAL	EMB2-20-DPP
		EMB2-20-DPP-2
		EMB2-20-DPP-3
		EMB2-20-DPP-4
		EMB2-20-DPP-5
		EMB2-20-006
		EMB5-01-DPP-1
		EMB5-01-DPP-2
		EMB5-01-DPP-3
		EMB5-01-DPP-4
		EMB5-01-DPP-5
		EMB5-03-DPP
		EMB5-03-DP1
NT8X48BD	Dist. Processor Peripheral	EMB5-03-002
		EMB5-03-001
		EMB5-01-000
NT8X4801	Cable Assembly	EMB5-02-000
NT8X4802	Cable Assembly	EMB5-02-000
NT9X01FA	SUPERNODE SPARE STORAGE CAB	EMB13-06-000
NT9X01FB	Filler Packfill	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB4-08-000
		EMB3-06-000
		EMB3-06-001

		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-004
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
		EMB4-05-001
		EMB4-06-011
NT9X01JB	Dual Plane Com Core Cab	EMB4-05-009
		EMB4-05-004
NT9X01MB	DMS SUPERNODE SE CORE CABNT	EMB4-05-001
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X0100	LMS DS-30 Cable Assembly	EMB2-16-BLK-3
		EMB2-16-LPP-1
		EMB2-16-LPP-3
		EMB2-16-LPP-4
NT9X0101	COMMON CABINET EQUIP	EMB4-08-000
NT9X0107	LMS DS-30 Cable Assembly	EMB2-16-BLK-3
		EMB2-16-LPP-1
		EMB2-16-LPP-3
		EMB2-16-LPP-4
NT9X0145	LMS DS-30 Cable Assembly	EMB2-16-BLK-4
		EMB2-16-LPP-2
		EMB4-03-IF-1
		EMB4-03-IF-2
		EMB4-03-004
		EMB4-03-005
NT9X0146	END OF AISLE LAMP CABLE	EMB4-08-000
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X0160	E/W 2-25 PIN CABLE ASSEMBLY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X0167	CM P-Bus EXTN Cable	EMB4-02-SLM-2
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009

		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X0170	Composite Clock Cable Assy	EMB4-06-IF-1
NT9X0171	LMS DS-30 X-Link Cable Assy	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NT9X0172	END OF AISLE LAMP CABLE	EMB4-08-000
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X0180	DS30 I/F Ca Assy (Mer)	EMB4-05-001
NT9X0182	DS30 Cable Assembly	EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-001
		EMB4-06-011
NT9X0184	DS30 I/F Ca Assy (Mer)	EMB4-05-001
NT9X0186	DS30 I/F Ca Assy (Mer)	EMB4-05-001
NT9X0190	DS0A Cable Assembly	EMB2-16-EIU-3
		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X0191	FRIU CABLE ASSEMBLY	EMB2-16-FIU-2
NT9X0193	V.35 Cable Assembly	EMB2-16-LIU-12
		EMB2-16-LIU-10
NT9X0196	RS232C & CURR LOOP CA ASSY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
		EMB4-06-011
NT9X03AA	Frame Supervisory Panel	EMB19-01-000
		EMB19-01-001
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-17-LPP-48V
		EMB3-01-NET-5
		EMB3-01-NET-6
		EMB4-06-001
		EMB3-06-000
		EMB3-06-001

		EMB4-06-007
		EMB4-06-009
		EMB4-05-009
		EMB4-05-004
		EMB2-16-007
NT9X03BA	Frame Super. Panel (-60V)	EMB4-04-APC-4
		EMB2-16-LPP-4
		EMB2-17-LPP-60V
		EMB4-06-008
		EMB4-06-010
NT9X0314	FSP Shorting Plug	EMB4-04-APC-6
		EMB19-01-000
		EMB19-01-001
		EMB4-04-FP-3
		EMB4-06-001
		EMB4-08-000
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X0324	ESP Ground Terminator Assy	EMB19-01-000
		EMB19-01-001
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB3-01-NET-5
		EMB3-01-NET-6
		EMB4-06-007
		EMB4-05-009
		EMB4-05-004
		EMB2-16-007
		EMB4-05-001
		EMB4-06-011
NT9X04AL	MS Common CP	EMB4-05-001
NT9X0433	IML DS30 CABLE ASSEMBLY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X0434	DS30 CABLE ASSEMBLY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X0436	MS CLOCK CABLE ASSEMBLY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010

NT9X0437	MS CLOCK CABLE ASSEMBLY	EMB4-06-011 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0438	CABLE ASSEMBLY	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0440	Msg Sw Shelf Assembly	EMB4-05-009 EMB4-05-004 EMB4-05-001
NT9X0470	MESSAGE SWITCH SHELF ASSY	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0474	DS30 CABLE ASSEMBLY	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0475	IML DS30 CABLE ASSEMBLY	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0477	DS30 CABLE ASSEMBLY	EMB4-06-001
NT9X0478	IML IOC0 CABLE ASSEMBLY	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0479	IML IOC1 CABLE ASSEMBLY	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0480	IML IOC0 CABLE ASSEMBLY	EMB4-06-001
NT9X0481	IML IOC1 CABLE ASSEMBLY	EMB4-06-001

NT9X0483	DS30 CABLE ASSEMBLY	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0487	6 port DS30 cable assembly	EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0488	DS30 IML DS30 Cable Ass.	EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0489	DS30 IML DS30 Cable Ass.	EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X05AC	S/DMS Enhanced Network Cab.	EMB3-01-NET-5 EMB3-01-NET-6
NT9X05AD	Enhanced Net. Duplex Cab.	EMB3-06-000 EMB3-06-001
NT9X0520	DS-30 Cable Assembly	EMB3-05-IF-1 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0524	DS-512/DS-30 CABLE ASSEMBLY	EMB3-05-IF-3 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0530	V-Bus Cable Assembly	EMB3-05-NET-2
NT9X0540	CABLE ASSEMBLY	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0542	CABLE ASSEMBLY	EMB4-06-001 EMB4-06-007 EMB4-06-009

		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X0544	CABLE ASSY (STREAMLINE, SLC)	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X0545	CABLE ASSY (STREAMLINE, SLC)	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X0546	CABLE ASSY (STREAMLINE, XPM)	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X0547	CABLE ASSY (STREAMLINE, XPM)	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X06AD	Comp Mod Duplex Comm CP	EMB4-05-009
		EMB4-05-004
NT9X06AF	Comp Mod Duplex Comm CP	EMB4-05-001
NT9X0605	Comp Mod Duplex Sh Assy	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X0610	CMP MOD SYS LOAD MOD SH ASSY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X07AB	SLM Common CP	EMB4-02-SLM-2
NT9X0702	CM SLM Ext Shelf Assy	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X0757	CM P-Bus EXTN Cable	EMB4-02-SLM-2
NT9X0810	ENI SHELF ASSEMBLY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010

NT9X0813	BULKHEAD ASSEMBLY	EMB4-06-011 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0815	CABLE ASSEMBLY (MERIDIAN)	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0817	CABLE ASSEMBLY (MERIDIAN)	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X0818	Network Shelf Assy	EMB3-01-NET-5 EMB3-01-NET-6 EMB3-05-NET-2 EMB3-06-000 EMB3-06-001
NT9X10AA	33 MHz BRISC CPU CP	EMB4-03-KIT-3 EMB4-03-CPU-6 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-03-CPU-8
NT9X10BA	#BRISC Processor (SE 70) CP	EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-03-CPU-7
NT9X12AB	CPU Port CP	EMB4-03-KIT-3
NT9X12AC	CPU PORT CP	EMB4-06-001
NT9X12AD	CPU Port CP	EMB4-02-SLM-2 EMB4-03-KIT-3 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-05-009 EMB4-05-004 EMB4-05-001 EMB4-06-011
NT9X13BA	CPU Processor CP	EMB4-05-004

NT9X13BB	CPU Processor CP	EMB4-05-004
NT9X13BC	CPU Processor CP	EMB4-03-KIT-3
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X13DB	CPU 16 MHZ CP	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NT9X13DC	CPU 16 MHZ CP(4 MB)	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X13DD	CPU 16 MHz CP	EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-05-009
		EMB4-05-001
NT9X13FA	CPU CP	EMB3-01-NET-5
		EMB4-06-NET-1
		EMB3-06-000
NT9X13GA	CPU 68030 Series 30 CP	EMB4-03-CPU-3
		EMB4-03-KIT-3
		EMB4-05-009
		EMB4-05-001
NT9X13HB	CPU 40MHz Proc CP	EMB4-03-KIT-3
		EMB4-05-009
		EMB4-05-001
NT9X13JA	CPU Processor CP	EMB4-03-KIT-3
NT9X13KA	CPU CP	EMB3-01-NET-6
		EMB3-05-NET-2
		EMB3-06-001
NT9X13LA	CPU (68030) 40MHZ CP	EMB4-04-AP-1
		EMB4-04-AP-2
		EMB4-04-APL
		EMB4-04-APR
		EMB4-04-FP-1
		EMB4-04-FP-2
		EMB4-04-FPL
		EMB4-04-FPR
NT9X13MA	CM PROCESSOR CP	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
NT9X13MB	CM PROCESSOR CP	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
NT9X13NA	MS PROCESSOR CP	EMB4-06-001

		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
NT9X14BB	Memory 6 Meg	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-03-KIT-3
		EMB4-03-MEM-1
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X14DB	24Mb Memory CP	EMB2-16-APU-1
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-03-KIT-3
		EMB4-03-MEM-2
		EMB4-06-001
		EMB4-08-000
		EMB4-03-KIT-2
		EMB4-06-007
		EMB4-06-009
		EMB4-05-009
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
		EMB4-05-001
		EMB4-06-011
NT9X14EA	96Mb Memory CP	EMB4-03-KIT-3
		EMB4-06-001
		EMB4-03-KIT-2
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-001
		EMB4-06-011
NT9X15AA	Mapper CP	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-001
		EMB4-06-007

		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
		EMB4-06-011
NT9X17AA	Message Switch 4 Port CP	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB4-03-IF-1
		EMB4-03-IF-2
		EMB4-03-IF7
		EMB4-03-IF8
		EMB4-05-004
NT9X17AD	Message Switch 4 Port CP	EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-03-IF-6
		EMB4-03-004
		EMB4-03-005
		EMB4-03-006
		EMB4-03-007
		EMB4-06-IF-3
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
		EMB4-05-009
		EMB4-05-001
		EMB4-06-011
NT9X17BB	32-Port MS I/F CP	EMB4-06-IF-2
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X17CA	MS 128-Port CP	EMB4-03-IF-10
		EMB4-03-IF-8
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X17DA	MS 64-PORT CP	EMB4-03-IF-3
		EMB4-03-IF-4
		EMB4-03-IF-5

NT9X19AA

Front Filler Faceplate

EMB4-06-001
 EMB4-06-007
 EMB4-06-009
 EMB4-06-008
 EMB4-06-010
 EMB4-06-011
 EMB19-01-CP-1
 EMB19-01-CP-2
 EMB19-01-CP-3
 EMB19-01-000
 EMB19-01-001
 EMB2-12-FFP-1
 EMB2-16-FFP-1
 EMB2-16-LPP-1
 EMB2-16-LPP-2
 EMB2-16-LPP-3
 EMB2-16-LPP-4
 EMB2-17-LPP-48V
 EMB2-17-LPP-60V
 EMB3-01-NET-5
 EMB3-01-NET-6
 EMB3-05-NET-2
 EMB4-02-SLM-2
 EMB4-03-FFP-1
 EMB4-03-FFP-2
 EMB4-03-KIT-3
 EMB4-04-AP-1
 EMB4-04-AP-2
 EMB4-04-APL
 EMB4-04-APR
 EMB4-04-FP-1
 EMB4-04-FP-2
 EMB4-04-FP-3
 EMB4-04-FPL
 EMB4-04-FPR
 EMB4-04-SD-1
 EMB4-04-SD-2
 EMB4-04-SD-3
 EMB4-04-SD-4
 EMB4-06-001
 EMB4-08-000
 EMB4-03-KIT-2
 EMB3-06-000
 EMB3-06-001
 EMB4-06-007
 EMB4-06-009
 EMB4-06-008
 EMB4-06-010
 EMB4-05-009

NT9X19BA

PB FILLER FACE PLATE

- EMB2-16-007
- EMB4-04-APC-6
- EMB4-04-APC-4
- EMB4-04-APC-7
- EMB4-05-001
- EMB4-06-011
- EMB2-12-FFP-1
- EMB2-16-APU-1
- EMB2-16-FFP-1
- EMB2-16-FLIU-2
- EMB2-16-LPP-1
- EMB2-16-LPP-2
- EMB2-16-LPP-3
- EMB2-16-LPP-4
- EMB2-17-LPP-48V
- EMB2-17-LPP-60V
- EMB3-01-NET-5
- EMB3-01-NET-6
- EMB3-05-NET-2
- EMB4-02-SLM-2
- EMB4-04-AP-1
- EMB4-04-AP-2
- EMB4-04-APL
- EMB4-04-APR
- EMB4-04-FP-1
- EMB4-04-FP-2
- EMB4-04-FP-3
- EMB4-04-FPL
- EMB4-04-FPR
- EMB4-04-SD-1
- EMB4-04-SD-2
- EMB4-04-SD-3
- EMB4-06-NET-1
- EMB4-06-001
- EMB3-06-000
- EMB3-06-001
- EMB4-06-007
- EMB4-06-009
- EMB4-06-008
- EMB4-06-010
- EMB4-05-009
- EMB4-05-004
- EMB2-16-007
- EMB4-04-APC-4
- EMB4-04-APC-7
- EMB4-05-001
- EMB4-06-011
- EMB19-01-CP-1
- EMB19-01-CP-2

NT9X19BB

Paddle Board Filler Faceplt

		EMB19-01-CP-3
		EMB19-01-000
		EMB19-01-001
NT9X19BC	Disk Sh Rear Filler (5-slot)	EMB19-01-000
		EMB19-01-001
NT9X19CA	FILLER FACE PLATE	EMB19-01-CP-2
		EMB19-01-000
		EMB19-01-001
		EMB4-04-FP-3
		EMB4-06-001
		EMB4-04-APC-7
NT9X19EA	STP Power Filler CP	EMB2-16-CNV-48V
		EMB2-16-CNV-60V
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-LIS-60V
		EMB4-06-011
NT9X20AA	DS-512 PB	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X20BB	DS-512 I/F ENET/MS PB	EMB4-03-IF-3
NT9X20BC	ENET/MS Fiber Interface PB	EMB4-03-IF-10
NT9X21AA	CM BUS Terminator PB	EMB4-02-SLM-2
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X21AB	BUS TERMINATOR PB	EMB4-04-AP-1
		EMB4-04-AP-2
		EMB4-04-APL
		EMB4-04-APR
		EMB4-04-FP-1
		EMB4-04-FP-2
		EMB4-04-FPL
		EMB4-04-FPR
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X22CA	CM Subsys Clock PB	EMB4-02-SLM-2
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X23AA	4XDS-30 PB	EMB4-03-IF-1

		EMB4-03-IF7
		EMB4-03-004
		EMB4-03-006
		EMB4-06-IF-3
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X23BA	DS-30 4 Port	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-03-IF-2
		EMB4-03-IF8
		EMB4-03-005
		EMB4-03-007
NT9X25AA	MS PORT EXPANDER PB	EMB4-03-IF-4
		EMB4-06-001
NT9X25BA	MS PORT EXP/TERMINATOR PB	EMB4-03-IF-5
		EMB4-03-IF-8
		EMB4-06-001
		EMB4-06-011
NT9X26AB	Rem Term Intf	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-NET-2
		EMB4-03-CPU-3
		EMB4-03-KIT-3
		EMB4-06-NET-1
		EMB4-06-001
		EMB4-08-000
		EMB3-06-000
		EMB3-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-004
		EMB4-04-APC-6

		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X26DA	Remote Term I/F CL	EMB4-03-KIT-2
NT9X26DB	BRISC RTIF PB	EMB4-03-KIT-3
		EMB4-03-KIT-2
		EMB4-03-CPU-6
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
NT9X26DC	BRISC RTIF PB	EMB4-03-CPU-8
NT9X26EA	#RTIF PB for SE 70	EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
NT9X27AA	CM BUS Extender	EMB4-03-CPU-7
NT9X27BA	CM BUS Extension PB	EMB4-02-SLM-2
NT9X2825	Power Interface Unit	EMB4-02-SLM-2
		EMB2-16-CNV-RD
		EMB2-16-CV-RD
		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X30AA	+5V Power Converter CP	EMB2-16-CNV-48V
		EMB2-16-CV-48V
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-17-LPP-48V
		EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-NET-2
		EMB4-02-SLM-2
		EMB4-06-001
		EMB3-06-000
		EMB3-06-001
		EMB4-05-009
		EMB4-05-004
		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X30AB	+5V Power Converter CP	EMB2-16-CNV-60V
		EMB2-16-LPP-4
		EMB2-17-LPP-60V
		EMB4-06-LIS-60V
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
NT9X31AA	-5V Power Converter CP	EMB2-16-CV-48V
		EMB3-01-NET-5

		EMB3-01-NET-6
		EMB3-05-NET-2
		EMB4-06-001
		EMB3-06-000
		EMB3-06-001
		EMB4-05-009
		EMB4-05-004
		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X31AB	-5V Global Power Converter	EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
NT9X32AA	MS LOADING PADDLE BOARD	EMB4-03-FFP-1
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X35BA	16K X 16K CHAN XPT CP	EMB3-05-XPT-2
NT9X35CA	16K x 16K Chan Term Xpt CP	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-NET-2
		EMB3-05-XPT-1
		EMB3-06-000
		EMB3-06-001
NT9X35FA	8K Crosspoint CP	EMB4-06-NET-1
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X36BA	Network Clock & Msg CP	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-NET-2
		EMB4-06-NET-1
		EMB3-06-000
		EMB3-06-001
NT9X40BA	4-PORT DS512 FIBER I/F PB	EMB4-06-001
NT9X40BB	Quad DS-512 Fiber I/F PB	EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-05-IF-2
		EMB3-05-NET-2
		EMB4-06-NET-1
		EMB3-06-000
		EMB3-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010

NT9X41BA	DS-30 Interface PB	EMB4-06-011 EMB3-05-IF-1 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X44AB	System Load Module II	EMB4-05-009 EMB4-05-004 EMB4-05-001
NT9X44AC	SYSTEM LOAD MODULE 1A	EMB4-06-001 EMB4-06-007 EMB4-06-008
NT9X44AD	System Load Module III	EMB4-06-009 EMB4-06-010 EMB4-05-009 EMB4-05-001
NT9X45BA	3 DS-512/16 DS-30 ENET I/F PB	EMB3-05-IF-3 EMB4-06-NET-1 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X46AA	Parallel Port I/F PB	EMB4-02-SLM-2 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X47AA	+12V Power Converter	EMB4-02-SLM-2 EMB4-05-001
NT9X47AB	+12V Power Converter (-60V)	EMB4-05-001
NT9X49CA	Message Switch P-Bus Term.	EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4
NT9X49CB	MS P-Bus Terminator CP	EMB4-05-009 EMB4-05-004 EMB4-05-001
NT9X49CC	Message Switch P-Bus Term.	EMB2-17-LPP-48V EMB2-17-LPP-60V EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008

NT9X52AA	T-Bus Access CP	EMB4-06-010
		EMB4-06-011
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
EMB4-05-004		
NT9X53AA	Message Switch Clock	EMB4-05-001
		EMB4-06-011
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
NT9X53AB	MS Ext System Clock I/F CP	EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NT9X53AC	COMBINED CLOCK CP	EMB4-05-009
		EMB4-05-001
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X53AD	DMS-Bus System Clock CP	EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-001
NT9X54AC	SUBSYSTEM CLOCK PB (EXT I/F)	EMB4-06-007
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-004
NT9X54AD	Subsystem Clock PB (Japan)	EMB4-05-001
		EMB4-06-011
		EMB4-05-001

NT9X62AA	2-PORT SUBRATE DS-512 PB	EMB4-04-AP-1 EMB4-04-AP-2 EMB4-04-APL EMB4-04-APR EMB4-04-FP-1 EMB4-04-FP-2 EMB4-04-FPL EMB4-04-FPR EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X62BA	SR512 Fiber Paddleboard	EMB4-03-IF-6 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X62CA	2-LINK SR512 PB	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X6503	I/F PANEL RIGHT FIBER ASSY	EMB3-05-BKH-3 EMB4-08-000 EMB4-04-APC-6 EMB4-04-APC-4 EMB4-04-APC-7
NT9X6506	I/F PANEL LEFT FIBER ASSY	EMB3-05-BKH-3 EMB4-08-000 EMB4-04-APC-6 EMB4-04-APC-4 EMB4-04-APC-7
NT9X6509	Filtered DS-30 Blkhd (left)	EMB2-16-BLK-4 EMB2-16-LPP-2
NT9X6520	FILT BULKH PNL LEFT, 48 DS30	EMB3-05-BKH-1 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X6521	FILT BULKH PNL RGT, 48 DS30	EMB3-05-BKH-1 EMB4-06-001 EMB4-06-007 EMB4-06-009

		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X6530	FLT BULKH PNL LFT, 112 DS30	EMB3-05-BKH-2
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X6531	FLT BULKH PNL RGT, 112 DS30	EMB3-05-BKH-2
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X6534	Bulkhead Assembly Left	EMB2-16-FLIU-2
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-LIS-60V
		EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-04-APC-4
		EMB4-04-APC-7
		EMB4-06-011
NT9X6536	Filtered DS-30 Blkhd (right)	EMB2-16-BLK-4
		EMB2-16-LPP-2
		EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X6539	Cable Bulkhead (right)	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X6540	Cable Bulkhead (left)	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X6544	DS30 I/F CA ASSY	EMB4-03-IF7
		EMB4-03-IF8
		EMB4-03-006
		EMB4-03-007
		EMB4-06-001

		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X6545	DS30 Blkhd I/F (Right)(DMS)	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X6546	DS30 Blkhd I/F (Left) (DMS)	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X6550	MS BULKHEAD ASSEMBLY (LEFT)	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X6551	MS BULKHEAD ASSEMBLY (RIGHT)	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X6552	ENET/W-CM BULKHEAD ASSEMBLY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X6553	CM/SLM BULKHEAD ASSEMBLY	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X6556	MS Blkhd I/F (Left)	EMB4-05-009
		EMB4-05-004
		EMB4-05-001
NT9X6560	MS BULKHEAD ASSEMBLY (LEFT)	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X6561	MS BULKHEAD ASSEMBLY (RIGHT)	EMB4-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010

NT9X6567	STREAMLINE BULKHEAD (LEFT)	EMB4-06-011 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X6568	STREAMLINE BULKHEAD (RIGHT)	EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X6569	Non-Fltd DS-30 Blkhd (left)	EMB2-16-BLK-3 EMB2-16-LPP-1 EMB2-16-LPP-3 EMB2-16-LPP-4
NT9X6570	Non-Fltd DS-30 Blkhd (right)	EMB2-16-BLK-3 EMB2-16-LPP-1 EMB2-16-LPP-3 EMB2-16-LPP-4
NT9X6580	Bulkhead Assembly Right	EMB2-16-FLIU-2 EMB4-04-APC-4 EMB4-04-APC-7
NT9X69BA	16-Link DS30 PB	EMB4-06-IF-2 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X70BB	Link Interface Module Cab	EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V
NT9X7020	DS30 CABLE TO BULKHEAD	EMB2-16-NIU
NT9X7021	INTER CBC CABLE	EMB2-16-NIU
NT9X7025	LMS DS-30 X-Link Cable Assy	EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V
NT9X7101	Local Msg Switch Shf Assy	EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4

NT9X7204	Link Interface Shelf Assy	EMB2-17-LPP-48V EMB2-17-LPP-60V EMB2-16-FLIU-2 EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-04-APC-4 EMB4-04-APC-7 EMB4-06-011
NT9X7210	F-BUS Cab Assy 3-shelf (LE)	EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X7211	F-BUS Cab Assy 2-shelf (LE)	EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X7212	F-BUS Cab Assy 3-shelf (RI)	EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X7213	F-BUS Cab Assy 2-shelf (RI)	EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X7214	Power Interface Kit	EMB2-17-LPP-48V EMB2-17-LPP-60V
NT9X73BA	LMS F-Bus Rate Adapter CP	EMB2-16-LPP-1 EMB2-16-LPP-2 EMB2-16-LPP-3 EMB2-16-LPP-4 EMB2-17-LPP-48V EMB2-17-LPP-60V EMB4-06-IF-1
NT9X74CA	F-Bus Repeater CP	EMB4-06-ENI-2 EMB4-06-LIS-60V
NT9X74DA	FBus Repeater CP	EMB2-16-LPP-1

		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
NT9X76AA	STP Signaling Terminal I/F	EMB2-16-LI-20
		EMB2-16-LIU-12
		EMB2-16-LIU-10
NT9X76CA	ISUP Signaling Terminal I/F	EMB2-16-LI-21
NT9X77AB	V.35 I/F PB	EMB2-16-LIU-12
NT9X78BA	E-DS0A I/F PB	EMB2-16-LIU-10
NT9X79AA	F-Bus Extender PB	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X79BA	F-Bus Ext CP W/Term	EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB4-06-ENI-2
		EMB4-06-IF-1
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-06-011
NT9X80BA	APPLICATION PROCESSOR CABINET	EMB4-08-000
NT9X80CA	Application Processor Cab.	EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X8101	APPLICATION PROCESSOR SHELF	EMB4-08-000
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X8301	APC STORAGE DEVICE SHELF	EMB4-08-000
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X84AA	Ethernet I/F	EMB2-16-EIU-3
		EMB4-04-APC-4

NT9X85AA	Ethernet I/F PB	EMB4-04-APC-7 EMB2-16-EIU-3 EMB4-04-APC-4 EMB4-04-APC-7
NT9X86AA	DUAL PORT MSG CONTROLLER CP	EMB4-04-AP-1 EMB4-04-AP-2 EMB4-04-APL EMB4-04-APR EMB4-04-FP-1 EMB4-04-FP-2 EMB4-04-FPL EMB4-04-FPR EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X86AB	Dual Port Msg Controller CP	EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010 EMB4-06-011
NT9X87AA	DUAL ACCESS BUFFER MEMORY CP	EMB4-04-FP-1 EMB4-04-FP-2 EMB4-04-FPL EMB4-04-FPR
NT9X88AA	DUAL SCSI INTERFACE PROC PB	EMB4-04-FP-1 EMB4-04-FP-2 EMB4-04-FPL EMB4-04-FPR
NT9X89AA	SCSI DEVICE I/F (SHELF) PB	EMB4-04-SD-3
NT9X89BA	SCSI DEV I/F (HALF SHELF) PB	EMB4-04-SD-1 EMB4-04-SD-2
NT9X8909	Streamline Bulkhead Assy	EMB3-05-BKH-4 EMB4-06-001 EMB4-06-007 EMB4-06-009 EMB4-06-008 EMB4-06-010
NT9X90AA	600 MB DISK STORAGE UNIT	EMB4-08-000 EMB4-04-APC-6 EMB4-04-APC-4 EMB4-04-APC-7
NT9X90AB	2 GB Disk Storage Unit	EMB4-04-APC-6 EMB4-04-APC-4 EMB4-04-APC-7
NT9X90BA	1.3 GBYTE DAT STORAGE UNIT	EMB4-08-000 EMB4-04-APC-6

		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X91AA	STORAGE DEVICE POWER CONV	EMB4-04-SD-1
		EMB4-04-SD-2
		EMB4-04-SD-3
		EMB4-06-001
NT9X91AB	+5V/+12V Power Converter CP	EMB19-01-CP-1
		EMB19-01-CP-3
		EMB19-01-000
		EMB19-01-001
NT9X91AC	+5V/+12V Global Power Conv	EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
NT9X95BA	C42 Cabinet Mechanical Assy	EMB19-01-000
		EMB19-01-001
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB3-01-NET-5
		EMB3-01-NET-6
		EMB3-06-000
		EMB3-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-004
		EMB2-16-007
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
		EMB4-05-001
		EMB4-06-011
NT9X95CU	Cooling Unit	EMB19-01-000
		EMB19-01-001
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-17-LPP-48V
		EMB3-01-NET-5
		EMB3-01-NET-6
		EMB4-06-001
		EMB3-06-000
		EMB3-06-001

		EMB4-06-007
		EMB4-06-009
		EMB4-05-009
		EMB4-05-004
		EMB2-16-007
NT9X95GU	Cooling Unit (-60V)	EMB4-04-APC-4
		EMB2-16-LPP-4
		EMB2-17-LPP-60V
		EMB4-06-008
		EMB4-06-010
		EMB4-04-APC-6
NT9X9531	Horizontal Power Cabling Kit	EMB19-01-000
		EMB19-01-001
		EMB2-16-CAB-1
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB3-01-NET-5
		EMB3-01-NET-6
		EMB4-06-001
		EMB3-06-000
		EMB3-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-004
		EMB2-16-007
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
		EMB4-05-001
		EMB4-06-011
NT9X9532	Standalone Power Cabling Kit	EMB19-01-000
		EMB19-01-001
		EMB2-16-LPP-1
		EMB2-16-LPP-2
		EMB2-16-LPP-3
		EMB2-16-LPP-4
		EMB2-17-LPP-48V
		EMB2-17-LPP-60V
		EMB3-01-NET-5
		EMB3-01-NET-6
		EMB4-06-001
		EMB3-06-000

		EMB3-06-001
		EMB4-06-007
		EMB4-06-009
		EMB4-06-008
		EMB4-06-010
		EMB4-05-009
		EMB4-05-004
		EMB2-16-007
		EMB4-04-APC-6
		EMB4-04-APC-4
		EMB4-04-APC-7
		EMB4-05-001
		EMB4-06-011
NT9X96AA	LIS F-Bus Controller CP	EMB2-16-FLIU-2
		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X98AA	LIS Fiber INTF Paddle Board	EMB2-16-FLIU-2
		EMB4-04-APC-4
		EMB4-04-APC-7
NT9X9820	FLIS Cable Assembly	EMB2-16-FLIU-2
P0613827	Des Card line pr 1-600	EMB2-13-004
P0613828	Des Card line pr 601-1200	EMB2-13-004
P0613829	Des Card line pr 1201-1800	EMB2-13-004
P0626878	Desig Label for NT6X50AA	EMB2-13-004
P0631765	Designation Labels (LSG)	EMB2-13-004
P0653639	Design Strip NT6X13AB	EMB2-13-004
P0660990	Des Label ECU:000 - 104	EMB2-13-004
P0660991	Des Label ECU:105 - 209	EMB2-13-004
P0660992	Des Label ECU:210 - 314	EMB2-13-004
P0660993	Des Label ECU:315 - 399	EMB2-13-004
P0660994	Des Label BCU:000 - 104	EMB2-13-004
P0660995	Des Label BCU:105 - 199	EMB2-13-004
P0660996	Des Label OPE 00 0 - 43 0	EMB2-13-004
P0660997	Des Label OPE 44 0 - 87 0	EMB2-13-004
P0660998	Des Label OPE 88 0 - 99 0	EMB2-13-004
P0660999	Des Label LCM 00 0 - 99 0	EMB2-13-004
P0661200	Des Label LCM 00 1 - 99 1	EMB2-13-004
P0661201	Des Label OPE 88 1 - 99 1	EMB2-13-004
P0661767	Des Label OPE 00 1 - 43 1	EMB2-13-004
P0661768	Des Label OPE 44 1 - 87 1	EMB2-13-004
P0664827	Desig Label For Batteries	EMB2-13-004
P0678472	OPM Warning Label	EMB2-13-004
P0685441	Caution Label (French)	EMB2-13-004
P0685442	Warning Label (French)	EMB2-13-004
P0685443	OPM Caution Label	EMB2-13-004
P0686456	Batt Warning Label (U.S.)	EMB2-13-004
P0686878	Warning Label (French)	EMB2-13-004
P0688741	Battery Label Plate (U.S.)	EMB2-13-004
P0690976	Desig Label for NT6X50AB	EMB2-13-004

P0701836	Desig Strip for HIE	EMB2-13-004
P0702395	Desig. Label 4-Pin (256)	EMB2-13-004
P0713151	Desig. Label 5-Pin (256)	EMB2-13-004
P0726429	Desig Strip For NT8X04BA	EMB2-13-004
P0726700	Design Label NT8X02AB	EMB2-13-004
P0728301	Filler Panel	EMB2-13-004
P0728600	Non-UL 4-Pin Label (256)	EMB2-13-004
P0739144	UL 5-Pin Label (256)	EMB2-13-004
P0740625	LC Warning Label 5-Pin	EMB2-13-004
P0740744	Desig Label for NT6X60CA	EMB2-13-004
P0809960	Desig Label for NT2X70AF	EMB2-13-004
P097F813	Screw	EMB2-13-004
QCBE1B	25-Pair Bix Connector	EMB2-13-004
QFF1A	Spare 1-1/3 Amp Fuse	EMB13-05-010
QMP11A5	Prt Mod Sld St 4Pin W/O Heat	EMB2-13-004
QMP12A4	Prt Mod Sld St 4Pin W/ Heat	EMB2-13-004
QPP519	Fault Loc/Order Wire Access	EMB2-13-004
QPP519A	Fault Loc & Order Wire Acc	EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
QPP519B	Fault Loc & Order Wire Acc	EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
QRE3A	Green BIX Retainer	EMB2-13-004
QRY18	Office Repeater	EMB2-13-004
		EMB2-14-IRM-2
		EMB2-14-IRM-5
		EMB2-14-004
		EMB2-14-006
QSR2F	HEAD SET IVORY COLOR	EMB11-01-MTS-1
QTBIX16A	CORR TOOL (BIX) QTBIX16A	EMB2-13-OPMT
QTH56A	LINE CARD INSERT/RMVL TOOL	EMB2-13-OPMT
QTH57A	LINE CARD REMOVAL TOOL	EMB2-13-OPMT
QTH58A	DBL SLOT LC INSERT/REMOVAL	EMB2-13-OPMT
QUS1C2-35	COMPANION 3 HANDSFREE	EMB11-01-MTS-2
RUL14	Inactive System Timing Cct	EMB13-01-000
R0108329	Black Wire 22 Gauge	EMB16-02-010
		EMB16-02-000
		EMB16-02-020
		EMB16-02-022
R0109478	Wiring for DSP	EMB9-03-DRS-G
		EMB9-03-DRS-B
R0109636	24 AWG Solid Wire (Green)	EMB13-01-005
R0109836	Hook-up wire (5M)	EMB2-15-RCCI-2
		EMB3-01-000
		EMB5-01-DDU-1
		EMB5-01-IOC-4

R0113096	Hook-up wire (1M)	EMB2-15-RCCI-2
R0115495	Touch-Up Paint Maple Brown	EMB2-13-004
		EMB2-13-005
R0115496	Touch-Up Paint Grey-Green	EMB2-13-004
		EMB2-13-005
R0115497	Touch-Up Paint Ivory	EMB2-13-004
		EMB2-13-005
T_IOC_BB_CP	Table B - I/O Controller Module Pr	EMB14-02-000
T_RMM_CARDS	REMOTE MAINTENANCE MODULE PROVISIO	EMB14-05-000
TOPS_MP	TOPS Multi-Purpose Position System	EMB8-01-000
VARIOUS	GDC Modems	EMB13-05-003
		EMB13-05-000
VT320-JA	DEC VT320 AMBER VDU W/KEYBD	EMB11-01-VDU-1
WDOX43BA	Wiring Drawing	EMB5-02-000
049M037-011	9600SP BD Modem Card	EMB10-13-001
049P026-004	9600 Bd Modem Card	EMB10-13-001
051P006-002	4800 Bd Modem Card	EMB10-13-001
105121	COLORTREND CT220R KEYBOARD	EMB11-01-VDU-3
1800A-1	1A2 LINE CARD SHELF TCS	EMB11-01-KSS-1
1800AA-1	1A2 LINE CARD TCS	EMB11-01-KSS-1
1800AB-1	PWR & INTERRUPTER CARD TCS	EMB11-01-KSS-1
1800AC-1	RINGING GENERATOR 20 HZ TCS	EMB11-01-KSS-1
1800C-1	10V AC POWER SUPPLY TCS	EMB11-01-KSS-1
1800M-1	TCS 1800 CUST. MANUAL TCS	EMB11-01-KSS-1
20000019-01	C.B.T. SYSTEM	EMB8-01-CBT
213360	Handset with Jack & Cord	EMB13-08-CDA-1
		EMB13-08-CDA-10
		EMB13-08-CDA-2
		EMB13-08-CDA-3
		EMB13-08-CDA-4
		EMB13-08-CDA-5
		EMB13-08-CDA-6
		EMB13-08-CDA-7
		EMB13-08-CDA-8
		EMB13-08-CDA-9
21340431	Prerecorded MSGS Cass Tape	EMB13-05-000
2202-HWR-35-35-	LOGIC 20 TELSET - ASH	EMB11-01-MTS-1
232CL2R	B & B RS232 CL ADAPTER	EMB11-01-VDU-1
292BR-1	TELLABS 292BR-1 CONF SYSTEM	EMB13-01-TL-1
292DR	TELLABS 292 LINE EXP. SHELF	EMB13-01-TL-2
303M-08S1GA	Prt Mod Gas Tube 5Pin	EMB2-13-004
303M-11A1G0	Prt Mod Sld St 5Pin W/O Heat	EMB2-13-004
303M-12A1GA	Prt Mod Sld St 5Pin W/ Heat	EMB2-13-004
50-4001	TELLABS BYPASS PLUG	EMB13-01-TL-1
6072	1-DIGIT DTMF DIAL DECODER	EMB13-01-TL-1
6073	1-DIGIT DTMF DIAL DECODER	EMB13-01-TL-1
62005220	UDS Modem Shelf	EMB8-01-AAE
		EMB8-01-MSA
62125086	UDS 212A Modem Card	EMB8-01-AAE

64565005	Data Set Unit (UDS D56)	EMB8-02-002
		EMB8-02-003
		EMB8-02-004
		EMB8-02-006
64565007	UDS D56 Modem Card	EMB8-01-AAE
65001860	UDS Modem SH Spare Power Sup	EMB8-01-AAE
80-5033	291R/292R COMMON EQPT SHELF	EMB13-01-TL-1
80-5034	292 10-LINE STATION SHELF	EMB13-01-TL-1
8211D-19-063	NT-Mercury 8" Disk Drive	EMB10-13-001
9003A	TELAB 292 RINGING INTERRUPT	EMB13-01-TL-1
9021	TELLABS 291/292 FUSE MODULE	EMB13-01-TL-1
		EMB13-01-TL-2
905-5098-001	RM70 Modem Card Cage 120V	EMB13-01-000
		EMB13-01-003
905-5118-001	RM80 Modem Card Cage -48V	EMB13-01-000
		EMB13-01-003
905-5139-001	RM90 Modem Card Cage 125V	EMB13-01-000
		EMB13-01-003
905-5222-001	RM4200 Data Set Module 115V	EMB13-01-000
		EMB13-01-003
905-5222-003	RM4200 Data Set Module -48V	EMB13-01-000
		EMB13-01-003
9121	TELLABS 291/292 TONE SUPPLY	EMB13-01-TL-1
9132	TELLABS 291/292 RING TIMER	EMB13-01-TL-1
9133	TELLABS 292 LONG TIMER	EMB13-01-TL-1
9291	TELLABS 291/292 LINE CKT	EMB13-01-TL-1
		EMB13-01-TL-2
9293	2W ARD CONF ORIG LINE CKT	EMB13-01-TL-1
9294	2W CONF AMPLIFIER MODULE	EMB13-01-TL-1
9296	2W ARD CONF TRK ACCESS CKT	EMB13-01-TL-1
940-001-001T	C.B.T. CABINET	EMB8-01-CBT
999458	CT220R PROGRAMMERS MANUAL	EMB11-01-VDU-3

DMS-100 Family
North American DMS-100
ALL PRODUCTS COMPUTING-MODULE LOADS Vol 10 of 15

CR 1997 NORTEL
ALL RIGHTS RESERVED

NORTEL CONFIDENTIAL: The information contained in this document is the property of NORTEL. Except as specifically authorized in writing by NORTEL, the holder of this document shall keep the information contained herein confidential and shall protect same in whole or in part from disclosure and dissemination to third parties and use same for evaluation, operation, and maintenance purposes only.

Information is subject to change without notice. NORTEL reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant.

DMS, DMS SuperNode, Map, and NT are trademarks of NORTEL.
Publication number: PLN-8991-103
Product release: LEC and up
Document release: 05.03
Date: 09 December 1997
Printed in the United States of America