


DNS-1200-05

Version 1.0

**ShareCenter Pro**<sup>™</sup>

 **User Manual**

**Business Class Networking**

# Table of Contents

<b>Product Overview.....</b>	<b>1</b>	Disk Management .....	42
Introduction .....	1	Volume .....	43
Package Contents .....	2	iSCSI Target.....	53
System Requirements .....	2	Virtual Volume .....	56
Features.....	3	Disk Diagnostic.....	58
Hardware Overview .....	4	Account Management.....	62
Front Panel .....	4	Admin Password .....	63
Rear Panel (Connections).....	5	Users.....	64
Using the OLED .....	6	Groups .....	78
<b>Installation .....</b>	<b>7</b>	Share Folders.....	81
Hardware Setup .....	7	System Management .....	88
<b>Configuration.....</b>	<b>11</b>	Network.....	89
Easy Search Utility .....	11	Time and Date.....	93
Getting Started.....	12	System Settings.....	94
Web UI .....	15	Power Management .....	95
Homepage .....	20	Email Alerts .....	97
System Wizard.....	21	Firmware Upgrade.....	98
Create User.....	31	Log Settings.....	99
Create Share Folder.....	36	Network Services .....	101
My Favorites.....	38	File Sharing .....	102
Status .....	39	Dynamic DNS .....	110
System Status .....	40	SNMP .....	111
Hard Drive Status .....	41	Network Discovery Services .....	112

Applications..... 113

    Web File Manager..... 114

    Download Manager..... 115

Backup..... 118

    Volume Snapshot ..... 119

    Local Backup..... 123

    Remote Backup ..... 126

    External Backup..... 133

Extension Pack..... 134

    Extension Pack..... 135

**Knowledge Base ..... 136**

    What is RAID? ..... 136

    Mapping a Drive ..... 139

    USB Print Server ..... 142

    iSCSI Drive Mapping..... 150

**Hot-Swap Function..... 159**

**Storing non-English Character Files ..... 160**

**Contacting Technical Support ..... 161**

**Warranty..... 162**

**Registration ..... 167**

# Product Overview

## Introduction

The D-Link ShareCenter® Pro 1200 (DNS-1200-05) Unified network storage addresses the ever-growing data storage requirements for SMB users. The need for data consolidation and data sharing make this enclosure an ideal solution. Small and medium businesses looking for a central storage location for sharing or backing up data. SMBs will appreciate the ease of use of the NAS file server feature as well as the fast access performance of iSCSI. The ShareCenter® Pro 1200 is a hybrid NAS/iSCSI storage enclosure, which offers concurrent NAS/iSCSI functionality. In addition, the ShareCenter® Pro 1200 has a rich set of SMB features for the small and medium business-minded user.

The included CD contains D-Link's Easy Search Utility. This utility allows you to locate the ShareCenter on the network and map drives to your computer. Backup software is also included on the CD. This software allows you to backup your files from a computer to the ShareCenter manually, by a schedule, or in real-time. Real-time backups are a great way to safeguard against unfortunate accidents that may result in the loss of important files.

Combining ease of use with rich set of SMB features, the ShareCenter® Pro 1200 is a great solution for any small and medium business environment. Centralize and manage your data the way you want, and keep it safe with the ShareCenter Pro 1200 Unified network storage!



# Package Contents

- D-Link ShareCenter® Pro 1200
- CD-ROM with Manual and Software
- Quick Installation Guide
- Power Cord
- CAT5 Ethernet Cable
- Front Panel Lock Key



Note: Using a power supply with a different voltage than the one included with the ShareCenter will cause damage and void the warranty for this product.

Note: The ShareCenter® Pro 1200 should only be maintained by the authorized server manager or IT administrator. The ShareCenter Pro 1200 should be locked using the Front Panel Key. Only certified staff who have the Key are allowed to unlock it.

***If any of the above items are missing, please contact your reseller.***

# System Requirements

For best results, the following minimum requirements are recommended on any system used to configure and use the ShareCenter:

- Computer with: 1GHz processor / 512 MB RAM / 200 MB available space / CD-ROM drive
- Internet Explorer version 6.0 or Mozilla Firefox 1.0 and above
- Windows® XP (with Service Pack 2) or Vista®
- 3.5" SATA Hard Drive(s)


# Features

The ShareCenter® Pro 1200 Unified network SMB packed with a wide variety of features geared toward the small and medium business environment. Some of these features are listed below:

- Five 3.5" SATA standard drive bays with capacity support up to 2 TB
- 2 Gigabit Ethernet ports
- 2 USB 2.0 ports
  - UPS, printer, and external storage support
- Concurrent iSCSI/NAS: Offering solutions for supporting both file sharing by NAS function and access performance by iSCSI block device
- Data Protection: Supports RAID 0/1/5/5+Spare/6/ JBOD and S.M.A.R.T. disk diagnostic.
- Ease of Use: iSCSI targets appear as a local drive on your client PC. Access NAS files via the easy-to-use web file manager.
- Accessibility: Share files across the network or over the Internet via FTP or the web file manager.
- Security: Create users, groups, and iSCSI targets with password authentication.
- Account management: Manage users/groups and Read/Write permission
- iSNS
- Virtual Disks
- Thin-provisioning
- DDNS
- Volume Snapshot
- Up to 64 iSCSI Targets
- SNMP (D-View 6.0 compatible)
- CHAP
- Link Aggregation
- Fail-over/Fail-back
- VLAN tag Support
- DFS Support
- AES Support
- FTP / FXP w/ TLS/SSL
- NFS
- ADS support
- Backup
  - Remote backup
  - Local backup
  - External backup
  - PC client to NAS backup
- Web File Manager
- Print server
- Scheduled downloads from web or FTP sites.
- Power management to conserve energy and extend hard drive life.
  - Schedule power on/off
  - Hard disk hibernation
  - SMART for hard disk health scan
  - D-Link Green Ethernet


# Hardware Overview

## Front Panel

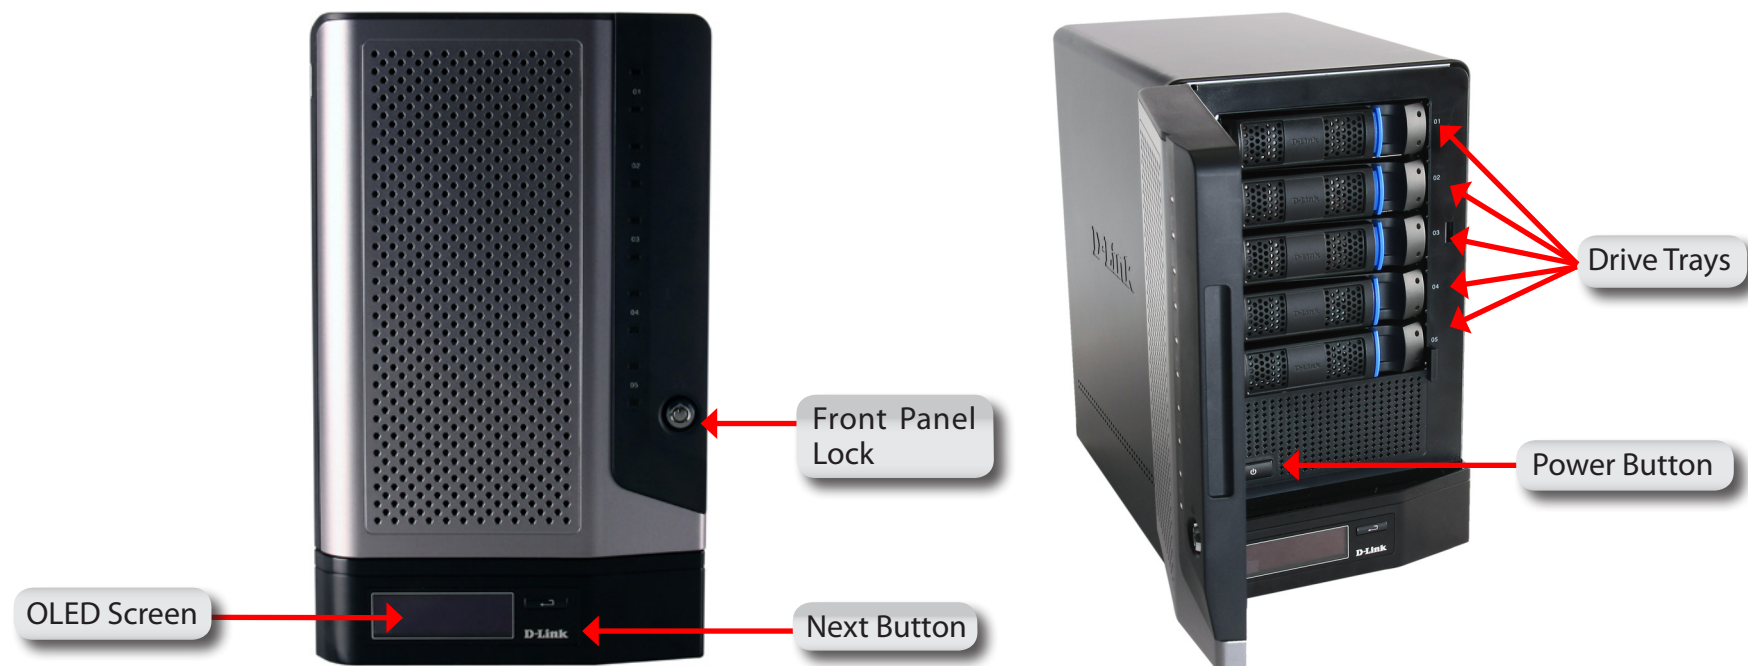

COMPONENT	DESCRIPTION
Front Panel Lock	Turn key to up position to unlock. Turn key to left position to lock.
OLED Screen	This screen displays detailed information about the following: System Information, HD Volume Information and Error Messages.
Next Button	Use this button to display the System Information, HD Volume Information, and Error Messages on the OLED. Press the button once to alternate between the different Status screens.
Drive Trays	Use the screws to fasten the SATA hard drives with the trays and insert to the ShareCenter.
Power Button	Use this button to switch the device on or off. To switch on the device press the button once. To switch off the device hold the button down for 5 seconds.

## Rear Panel (Connections)

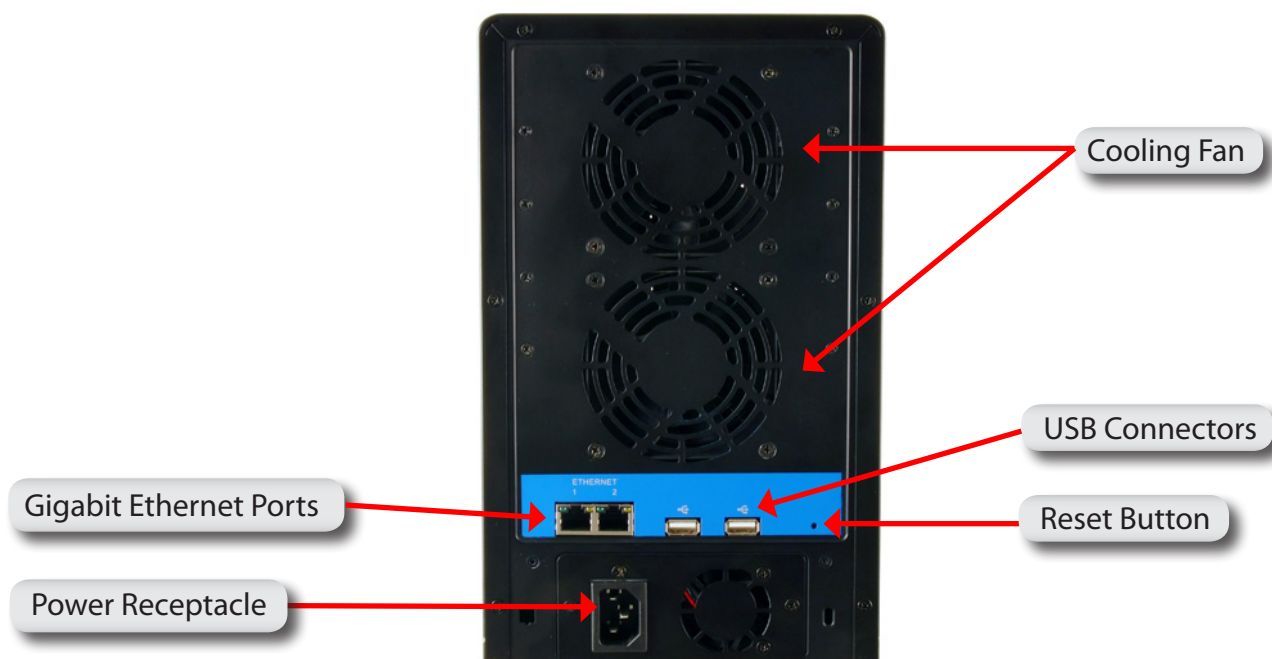

COMPONENT	DESCRIPTION
Gigabit Ethernet Port	Use the Gigabit Ethernet Port to connect the ShareCenter to the local network.
Power Receptacle	Connect the supplied power cord to the receptacle.
USB Connector	Two USB 2.0 (Type A) connectors. The USB Host ports are for Print Servers, USB memory disks or USB UPS monitoring.
Reset Button	Press this button for more than 5 seconds to reset the unit to factory defaults.
Cooling Fan	The cooling fan is used to cool the hard drives and feature speed control. When the unit is first powered on the fans rotate at a low speed and rotate at a high speed when the temperature rises above 36 °C.

# Using the OLED

The ShareCenter features an OLED that enables the administrator to easily view information about the ShareCenter. The OLED display screen displays the system information, hard drive volume information and error messages. The OLED has three different screens:

- **System Information**- This screen shows the following information:
  - The hostname of the ShareCenter
  - The IP address of the ShareCenter
  - The hard drive slots information
- **Hard Drive Volume information**- This screen shows the following information:
  - The percentage of space used on the hard drives.
- **Error Messages**- This screen shows error messages when there is any system failure.

Press the  button once to alternate between the different **Status** screens.

## LED Indicator Lights

On each hard drive tray there are 2 LED indicator lights. The meaning of the LED colors are shown below:

Hard Drive Tray LED Lights	Color	Status	Description
Top LED	Blue	Static	Disk is powered on and operational
Bottom LED	Green	Blinking	Disk is being accessed
	Red	Static	Disk has failed or is offline

# Installation

## Hardware Setup

Follow the instructions below to install a hard drive, connect to the network and power on the ShareCenter. Open the shipping carton for the ShareCenter and carefully remove and unwrap its contents. Follow the instructions below to setup the ShareCenter. If this is the first time using the ShareCenter or if a new hard disk is installed, use the Easy Search utility located on the Installation CD and follow the instructions for setting up, configuring and formatting the new drive.

To install ShareCenter on your local network, refer to the steps below:

1. Put a 3.5" SATA hard drive into a drive tray and use screws to fasten the hard drive with the tray. There are four holes for fastening the screws. Two holes are circled in red in the image, and the other two holes are on the other side of the drive tray.



2. Open the faceplate to access the drive bays.



3. Insert the tray into a bay.



4. Depress the blue button to lock it into place.





5. Connect an Ethernet cable to the available Ethernet port. This cable should connect the ShareCenter to your local network via a router or switch, or directly to a computer for configuration.





6. Connect the supplied power adapter to the power receptacle.



# Configuration

## Easy Search Utility

When first powered on, during the initial boot sequence, the ShareCenter will wait to be assigned an IP address via DHCP. If it does not receive a DHCP assigned IP address, by default it will have a self-assigned IP address in the range of 169.254.0.0 to 169.254.255.255. It is recommended to use the included D-Link Easy Search Utility when accessing and configuring the ShareCenter for the first time. If you want to change the IP address before logging in or are unable to connect to the ShareCenter IP address, you can use the Easy Search Utility provided on the product CD to locate the device on your network and make any needed changes.

**Network Storage Device:** The Easy Search Utility displays any ShareCenter devices it detects on the network here.

**Refresh:** Click **Refresh** to refresh the device list.

**Configuration:** Click **Configuration** to access the Web based configuration of the ShareCenter.

**LAN:** Configure the LAN Settings for the ShareCenter here.

**Apply:** Click **Apply** to save changes to the LAN Settings.

**iSCSI Drive Mapping:** Displays the available iSCSI targets on ShareCenter.

**Connect:** Click **Connect** to connect to the iSCSI target.

**Management:** Click **Management** to edit the information.

**Drive Mapping:** Volumes available for mapping are displayed here.

**Available Drive Letters:** Choose an available drive letter. Click **Connect** to map the selected volume. Click **Disconnect** to disconnect the selected mapped volume.

**About:** Click **About** to view the software version of the Easy Search Utility.

**Exit:** Click **Exit** to close the utility.

The screenshot shows the 'D-Link's DNS-1200-05 EZSearch' utility window. It features a blue title bar and a main content area with several sections. The 'Network Storage Device' section contains a table with columns for Name, IP, Netmask, and Gateway, and buttons for Refresh and Configuration. The 'LAN' section includes input fields for IP, Netmask, and Gateway, a 'Receive DHCP' dropdown menu set to 'Disable', and an 'Apply' button. The 'iSCSI Drive Mapping' section has a table with columns for Name and Active, and buttons for Connect and Management. The 'Drive Mapping' section includes a table with columns for Volume Name and Location, an 'Available Drive Letters' dropdown menu set to 'Z:', and buttons for Connect and Disconnect. At the bottom of the window are 'About' and 'Exit' buttons.

# Getting Started

To run the Easy Search Utility, insert the ShareCenter CD into your CD-ROM drive:



Select the listed ShareCenter and click the **Configuration** button. This will launch the computer's default web browser and direct it to the IP address listed for the device. Make sure the browser is not configured to use a proxy server.

**Note:** The computer used to access the ShareCenter web-based configuration manager must be on the same subnet as the ShareCenter. If your network is using a DHCP server and the computer receives IP settings from DHCP server, the ShareCenter will automatically be in the same subnet.

**D-Link's DNS-1200-05 EZSearch**

Network Storage Device

Name	IP	Netmask	Gateway
dlink-570412	192.168.0.32	255.255.255.0	192.168.0.1

Refresh Configuration

LAN

IP: 192 . 168 . 0 . 32 Receive DHCP: Disable

Netmask: 255 . 255 . 255 . 0

Gateway: 192 . 168 . 0 . 1

Apply

iSCSI Drive Mapping

Name	Active
dlink-570412:iscsi	NO

Connect Management

Page: 1

Drive Mapping

Volume Name	Location
recycleBin	

Available Drive Letters : Z:


Connect Disconnect

Page: 1

About Exit

The Login screen will appear:

Select **System Administrator** and leave the password field blank.

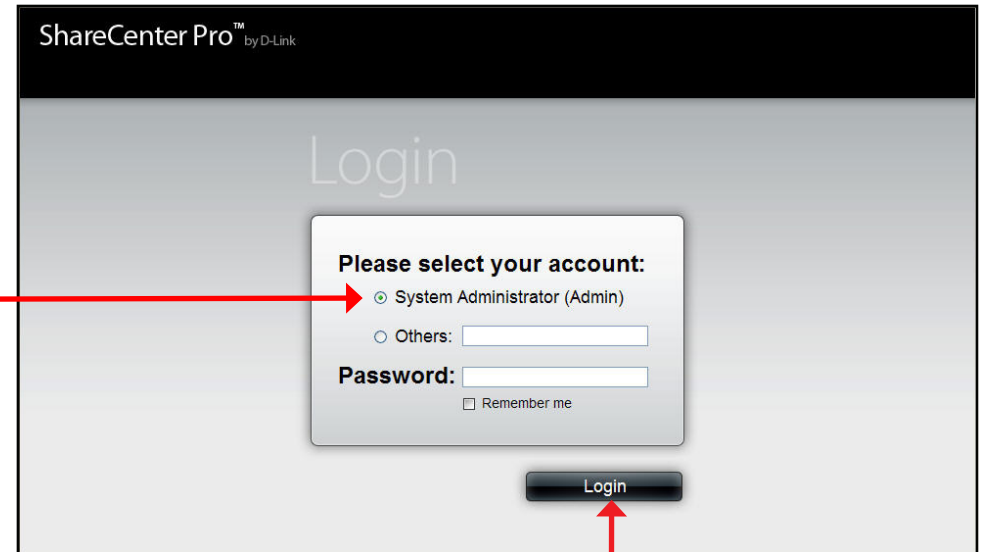

The image shows the ShareCenter Pro login interface. At the top, it says "ShareCenter Pro™ by D-Link". Below that, the word "Login" is displayed in a large, light font. In the center, there is a white box with a grey border containing the following elements: the text "Please select your account:", a radio button selected next to "System Administrator (Admin)", an unselected radio button next to "Others:" followed by a text input field, a "Password:" label followed by a text input field, and a "Remember me" checkbox. Below this box is a dark grey "Login" button. A red arrow points from the text box on the left to the "System Administrator (Admin)" radio button. Another red arrow points from a text box at the bottom to the "Login" button.


Click **Login**.

**Note:** The computer, used to access the ShareCenter web-based configuration, manager must be on the same subnet as the ShareCenter. If your network is using a DHCP server and the computer receives IP settings from DHCP, the ShareCenter will automatically be in the same subnet.

# Web UI

The ShareCenter Web UI defaults to the Create Volume page, if no volume has been created. Once a volume has been created, the web UI defaults to the Homepage (🏠). The main categories for configuration are located in the folders at the left of the page. Click the folder icon to see the categories of the folder. The categories available for configuration include:

- **Homepage-** Contains the System Wizard, Create User, Create Share Folder and My Favorites.
- **Status-** Contains the System Status and Hard Drive Status.
- **Disk Management-** Allows the ShareCenter administrator to create/configure a Volume, iSCSI Target, Virtual Volume, and perform Disk Diagnostic.
- **Account Management-** Allows the ShareCenter administrator to configure Admin Password, Users, Groups and Share Folders
- **System Management-** Contains Network, Time and Date, System Settings, Power Management, Email Alerts, Firmware Upgrade and Logs.
- **Network Services-** Contains File Sharing, Dynamic DNS, SNMP and Network Discovery Services.
- **Applications-** Contains Web File Manager and Download Management.
- **Backup-** Contains Volume Snapshot, Local Backup, Remote Backup and External Backup.
- **Extension Pack-** Allows the ShareCenter administrator to add more applications to the device.

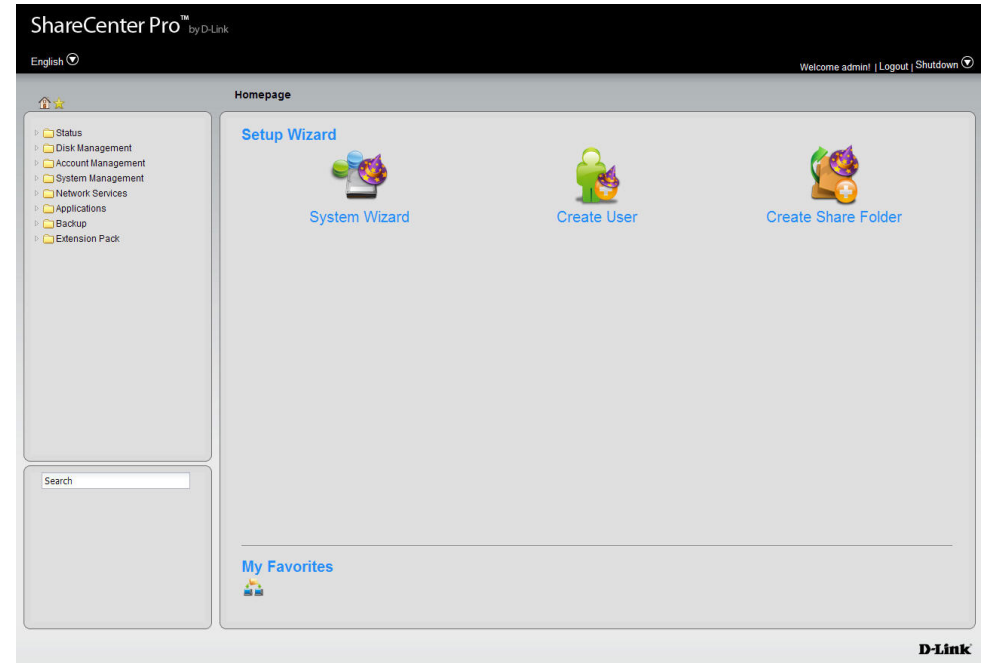

These pages and their configuration options will be discussed in detail in the following pages of this manual.

**Note:** After logging in to the ShareCenter for the first time it is recommended to add a password to the admin account.

When prompted to create a volume:

Select the configuration type of the volume, **Standard**, **JBOD**, **RAID 0**, **RAID1**, **RAID5** or **RAID 6**.

Click the corresponding check box to select the hard disk(s) in the array and spare.

Create Volume

RAID Level

☐ Standalone
 

Single hard drive.

☐ JBOD
 

Concatenate hard drives.

☐ RAID 0
 

Disk array with best performance.

☐ RAID 1
 

Mirror disk array.

☐ RAID 5
 

Disk array with single fault tolerance.

☒ RAID 6
 

Disk array with double fault tolerance.

Disk(s)

RAID 6 requires a minimum of 4 disks in the array.

Array	Spare	Disk	Size
<input type="checkbox"/>	<input type="checkbox"/>	Disk 1	596.17 GB
<input type="checkbox"/>	<input type="checkbox"/>	Disk 2	465.76 GB
<input type="checkbox"/>	<input type="checkbox"/>	Disk 3	279.46 GB
<input type="checkbox"/>	<input type="checkbox"/>	Disk 4	465.76 GB

Previous

Next

Cancel

Click **Next** to continue.


D-Link ShareCenter Pro 1200 User Manual

16

Select to enable or disable the auto-rebuild function of RAID 1, RAID 5, or RAID 6.

Click the **Enable** radio button to encrypt the volumes. Enter a password in the **Password** and **Confirm Password** fields.

Click the **Auto Unlock** check box to automatically unlock the volume when the system starts. Click the **USB Key** check box to save the password to a USB drive.

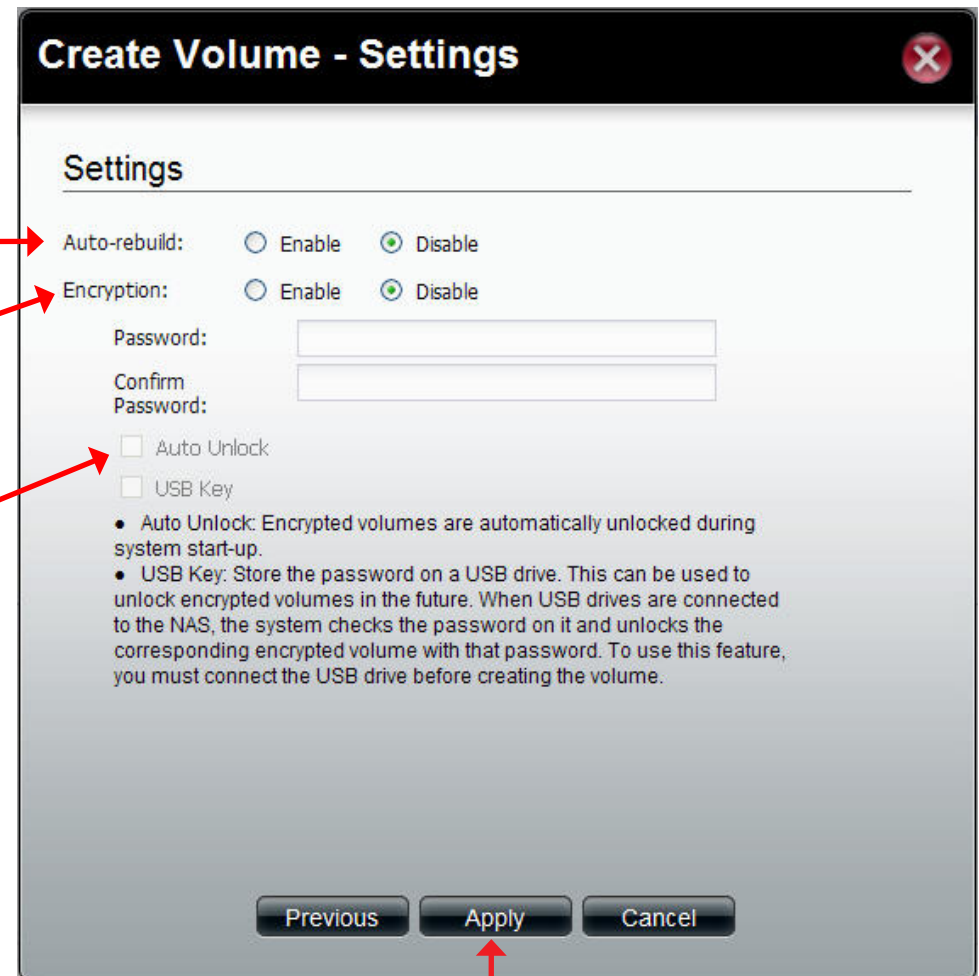

The image shows a 'Create Volume - Settings' dialog box with a title bar containing a close button (X). The dialog is divided into a 'Settings' section and a bottom area with buttons. The 'Settings' section includes:


- Auto-rebuild:** Two radio buttons, 'Enable' and 'Disable'. The 'Disable' button is selected.
- Encryption:** Two radio buttons, 'Enable' and 'Disable'. The 'Disable' button is selected.
- Password:** A text input field.
- Confirm Password:** A text input field.
- Auto Unlock:** An unchecked checkbox.
- USB Key:** An unchecked checkbox.
- Help Text:**
  - **Auto Unlock:** Encrypted volumes are automatically unlocked during system start-up.
  - **USB Key:** Store the password on a USB drive. This can be used to unlock encrypted volumes in the future. When USB drives are connected to the NAS, the system checks the password on it and unlocks the corresponding encrypted volume with that password. To use this feature, you must connect the USB drive before creating the volume.

At the bottom of the dialog are three buttons: 'Previous', 'Apply', and 'Cancel'.

Click **Apply** to continue.




A warning message appears before starting to create the volume.

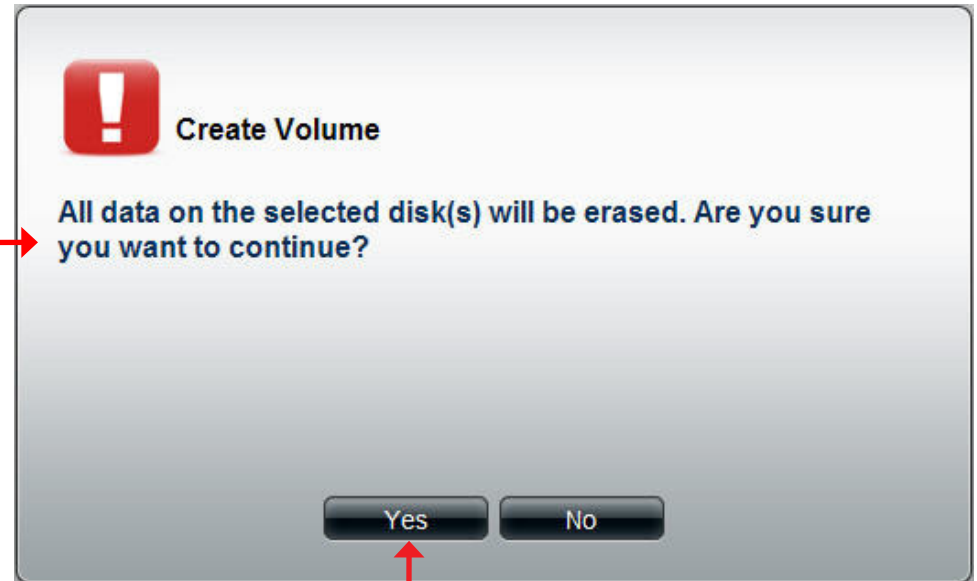


Click **Yes** to continue.

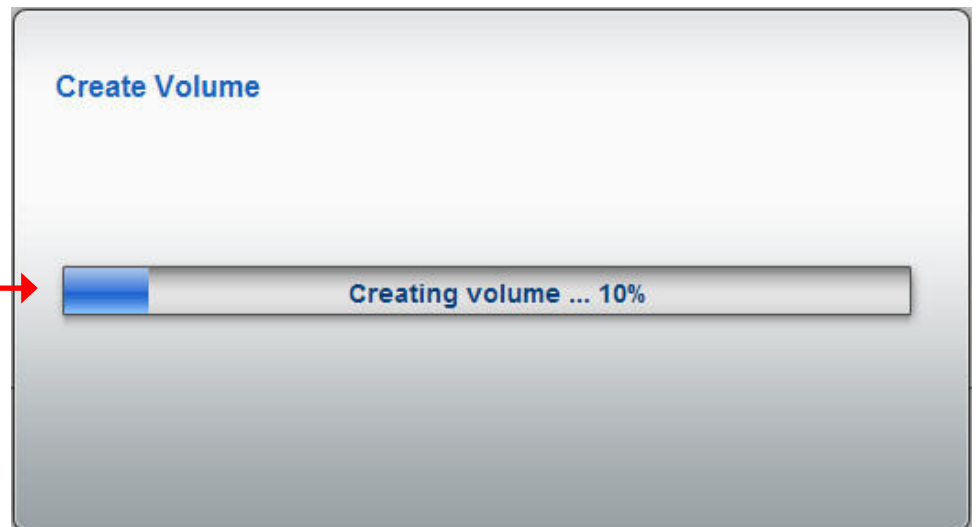

The volume is being created. The status bar displays the percentage of completion in real time.

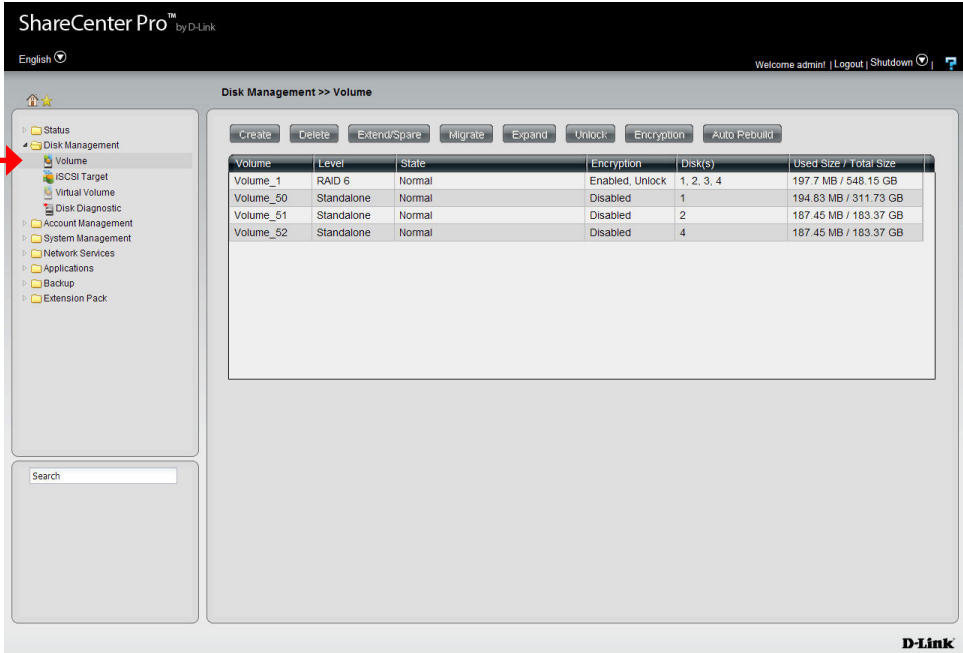


Once the volume is created, the Volume page opens to show the information.



# Homepage

This page contains the System Wizard, Create User, Create Share Folder and My Favorite. Click the  (Homepage) icon to see the subcategories. This window provides quick access to the Setup Wizard and the My Favorites section. Users can add the most frequently used functions to My Favorites and quickly access these functions by clicking the icon or selecting from the  (My Favorites) drop-down list.

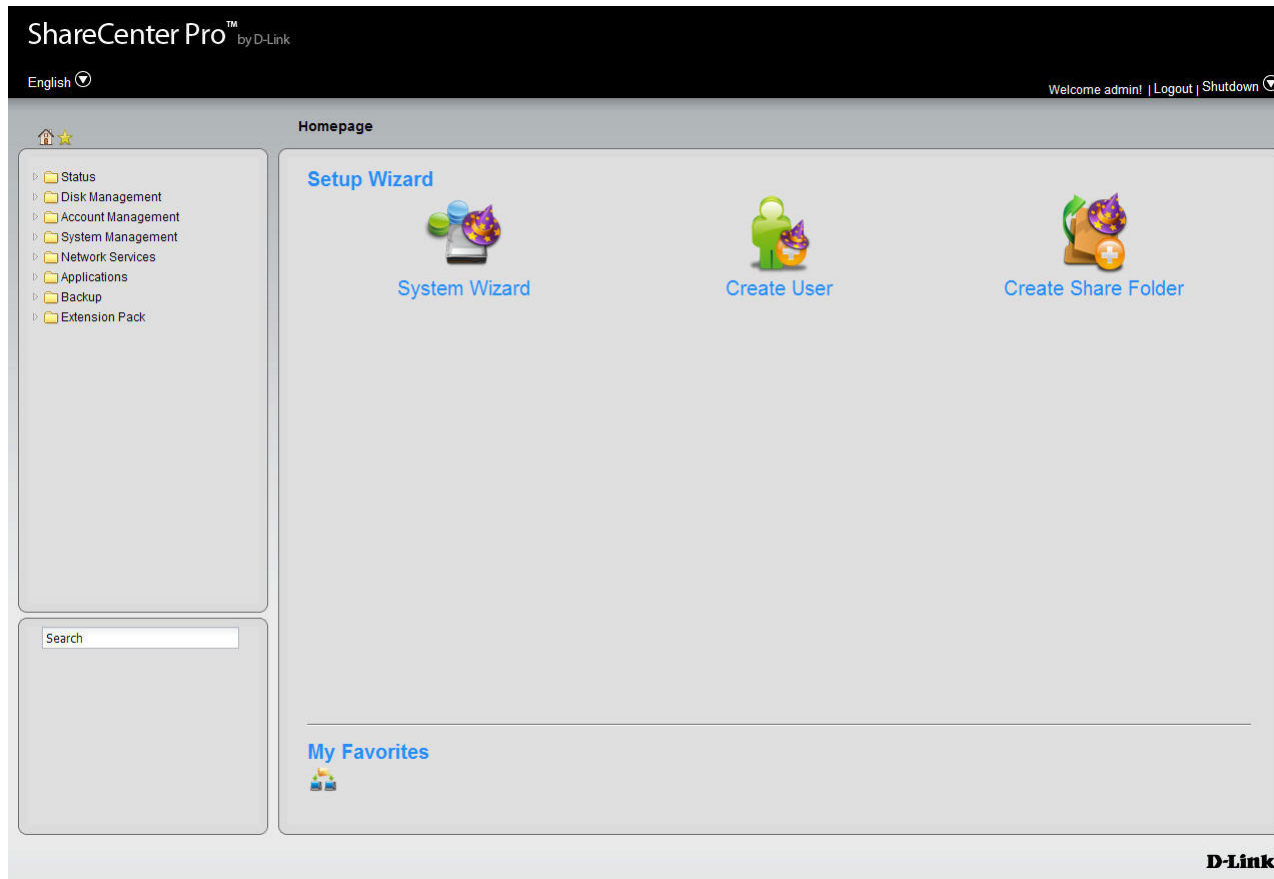

## System Wizard


The ShareCenter has a System Wizard that allows you to quickly configure some of the basic device settings. Click the **System Wizard** icon to start the Setup Wizard.

When running the ShareCenter System Wizard, the welcome screen details the five steps of the wizard.



Click **Next** to continue.

This window can configure the LAN 1 settings.

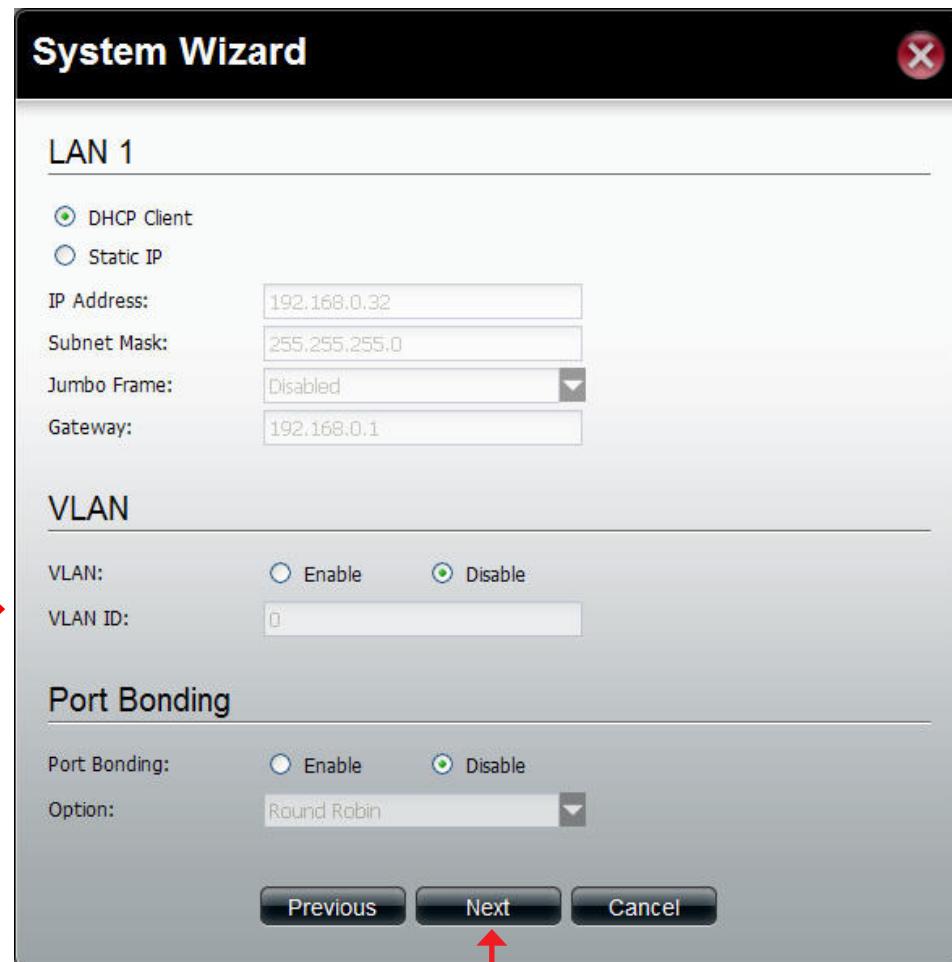

The System Wizard dialog box is titled "System Wizard" and features a close button (X) in the top right corner. It is divided into three sections: "LAN 1", "VLAN", and "Port Bonding".

**LAN 1**

- ☒ DHCP Client
- ☐ Static IP
- IP Address: 192.168.0.32
- Subnet Mask: 255.255.255.0
- Jumbo Frame: Disabled (dropdown menu)
- Gateway: 192.168.0.1

**VLAN**

- VLAN: ☐ Enable ☒ Disable
- VLAN ID: 0


**Port Bonding**

- Port Bonding: ☐ Enable ☒ Disable
- Option: Round Robin (dropdown menu)

At the bottom, there are three buttons: "Previous", "Next", and "Cancel".

Click **Next** to continue.

This window can configure the LAN 2 settings.

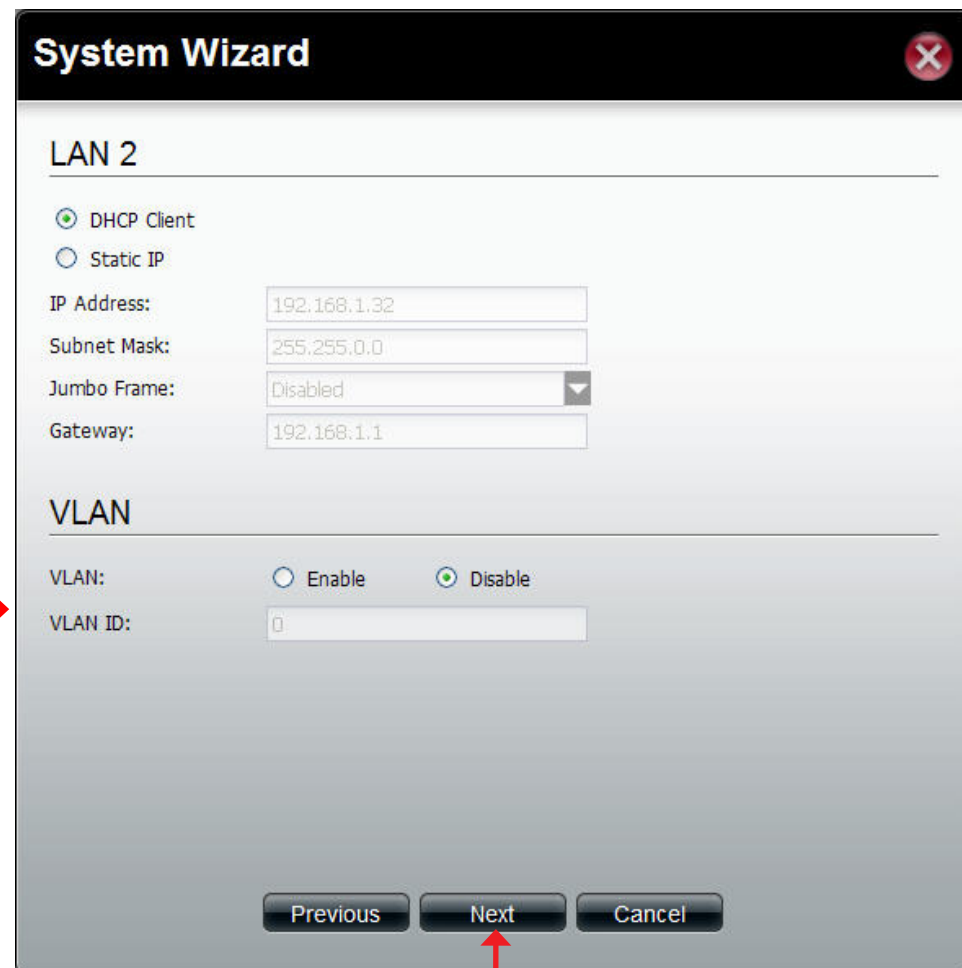

The image shows a 'System Wizard' window with a title bar containing a close button. The window is divided into two sections: 'LAN 2' and 'VLAN'. In the 'LAN 2' section, there are two radio buttons: 'DHCP Client' (which is selected) and 'Static IP'. Below these are four text input fields: 'IP Address' (containing '192.168.1.32'), 'Subnet Mask' (containing '255.255.0.0'), 'Jumbo Frame' (a dropdown menu set to 'Disabled'), and 'Gateway' (containing '192.168.1.1'). The 'VLAN' section has a 'VLAN:' label followed by 'Enable' and 'Disable' radio buttons, with 'Disable' selected. Below this is a 'VLAN ID:' label followed by a text input field containing '0'. At the bottom of the window are three buttons: 'Previous', 'Next', and 'Cancel'. A red arrow points from the 'Next' button to a callout box below the window.

**System Wizard**

**LAN 2**

☒ DHCP Client  
☐ Static IP

IP Address: 192.168.1.32  
Subnet Mask: 255.255.0.0  
Jumbo Frame: Disabled  
Gateway: 192.168.1.1

**VLAN**

VLAN: ☐ Enable ☒ Disable  
VLAN ID: 0

Previous Next Cancel

Click **Next** to continue.

Enter the host name of the ShareCenter.

Enter the primary and secondary DNS server address in the fields.

Use the drop-down menu to select the LAN interface.



The image shows a 'System Wizard' window with a black title bar and a close button. It contains three sections: 'Host Name', 'DNS Server', and 'Default Gateway'. The 'Host Name' section has a text field with 'dlink-570412'. The 'DNS Server' section has a 'Primary DNS' field with '192.168.69.1' and an empty 'Secondary DNS' field. The 'Default Gateway' section has a 'Gateway' dropdown menu showing 'LAN 1'. At the bottom are 'Previous', 'Next', and 'Cancel' buttons. Red arrows point from the instructions on the left to the corresponding fields in the wizard.

**System Wizard**

**Host Name**

Host Name:

**DNS Server**

Primary DNS:


Secondary DNS:

**Default Gateway**

Gateway:

Click **Next** to continue.

This window can enable or disable various the file sharing method.

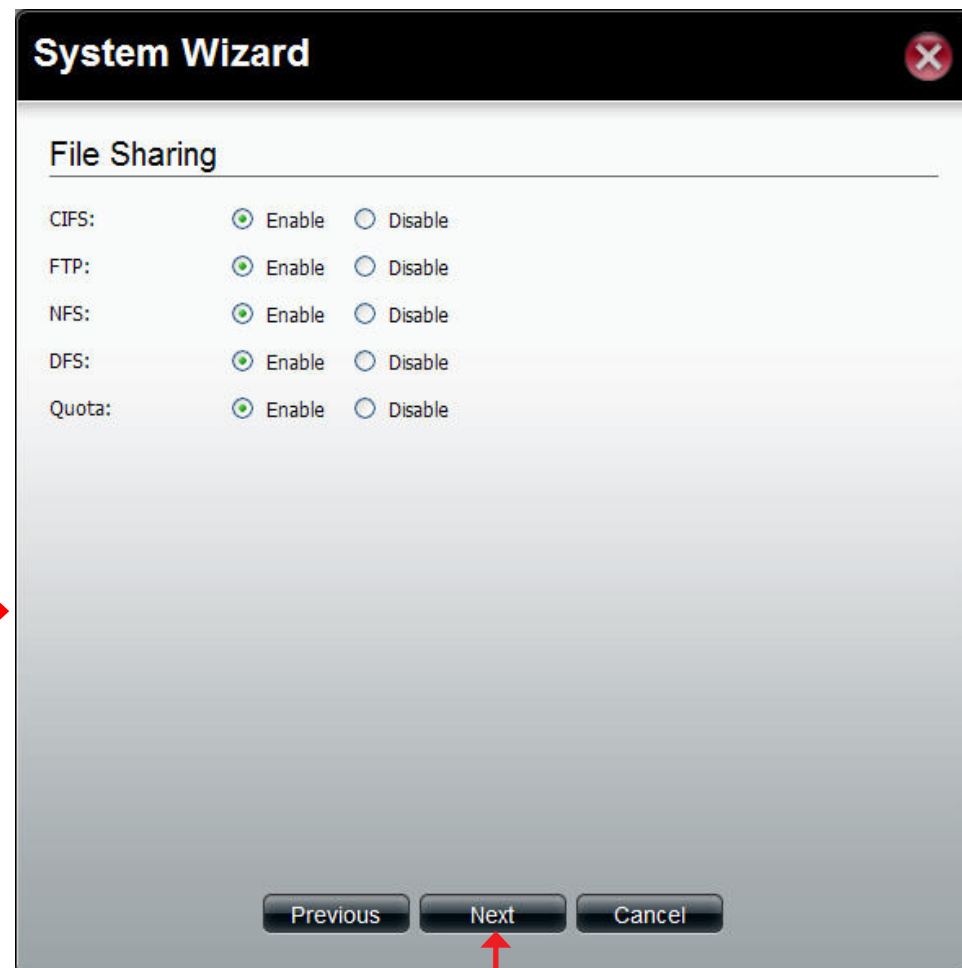

The image shows a 'System Wizard' window with a 'File Sharing' section. It contains five rows of configuration options, each with an 'Enable' radio button (selected) and a 'Disable' radio button. At the bottom are 'Previous', 'Next', and 'Cancel' buttons. A red arrow points from the explanatory text on the left to the window, and another red arrow points from the 'Click Next to continue.' text to the 'Next' button.

Protocol	Enable	Disable
CIFS:	<input checked="" type="radio"/>	<input type="radio"/>
FTP:	<input checked="" type="radio"/>	<input type="radio"/>
NFS:	<input checked="" type="radio"/>	<input type="radio"/>
DFS:	<input checked="" type="radio"/>	<input type="radio"/>
Quota:	<input checked="" type="radio"/>	<input type="radio"/>

Previous Next Cancel

Click **Next** to continue.



Select the configuration type of the volume, **Standard**, **JBOD**, **RAID 0**, **RAID1**, **RAID5** or **RAID 6**.

Click the corresponding check box to select the hard disk(s) in the array and spare.

### System Wizard

#### RAID Level

☐ Standalone  
 Single hard drive.

☐ JBOD  
 Concatenate hard drives.

☐ RAID 0  
 Disk array with best performance.

☐ RAID 1  
 Mirror disk array.

☒ RAID 5  
 Disk array with single fault tolerance.

☐ RAID 6  
 Disk array with double fault tolerance.

#### Disk(s)

RAID 5 requires a minimum of 3 disks in the array.

Array	Spare	Disk	Size
<input type="checkbox"/>	<input type="checkbox"/>	Disk 1	596.17 GB
<input type="checkbox"/>	<input type="checkbox"/>	Disk 2	465.76 GB
<input type="checkbox"/>	<input type="checkbox"/>	Disk 3	279.46 GB
<input type="checkbox"/>	<input type="checkbox"/>	Disk 4	465.76 GB

Click **Next** to continue.

The screenshot shows the 'System Wizard' window with the 'Settings' tab selected. Three instructional callouts on the left point to specific settings in the wizard:

- Callout 1:** 'Select to enable or disable the auto-rebuild function of RAID 1, RAID 5, or RAID 6.' Points to the 'Auto-rebuild' section where the 'Disable' radio button is selected.
- Callout 2:** 'Click the **Enable** radio button to encrypt the volumes. Enter a password in the **Password** and **Confirm Password** fields.' Points to the 'Encryption' section where the 'Enable' radio button is selected, and the 'Password' and 'Confirm Password' text fields.
- Callout 3:** 'Tick the **Auto Unlock** check box to automatically unlock the volume when the system starts. Tick the **USB Key** check box to save the password to a USB drive.' Points to the 'Auto Unlock' and 'USB Key' checkboxes, which are currently unchecked.

The 'Settings' window includes the following elements:

- Auto-rebuild:** Radio buttons for 'Enable' and 'Disable' (selected).
- Encryption:** Radio buttons for 'Enable' and 'Disable' (selected).
- Password:** A text input field.
- Confirm Password:** A text input field.
- Auto Unlock:** An unchecked checkbox.
- USB Key:** An unchecked checkbox.
- Help Text:**
  - **Auto Unlock:** Encrypted volumes are automatically unlocked during system start-up.
  - **USB Key:** Store the password on a USB drive. This can be used to unlock encrypted volumes in the future. When USB drives are connected to the NAS, the system checks the password on it and unlocks the corresponding encrypted volume with that password. To use this feature, you must connect the USB drive before creating the volume.
- Navigation Buttons:** 'Previous', 'Next', and 'Cancel' buttons at the bottom.

A final callout at the bottom right points to the 'Next' button: 'Click **Next** to continue.'

This window displays the information you configured in System Wizard.



The System Wizard window displays the configuration for two LANs. LAN 1 is configured with a Static IP, and LAN 2 is configured as a DHCP Client. Both LANs have a Subnet Mask of 255.255.255.0 and Jumbo Frame size of 1500. The Gateway for LAN 1 is 192.168.0.1, and for LAN 2 it is 192.168.1.1. VLAN and Port Bonding are disabled for both. The Global Settings section at the bottom includes buttons for Previous, Apply, and Cancel.

LAN 1	
Network Type:	Static IP
IP Address:	192.168.0.32
Subnet Mask:	255.255.255.0
Jumbo Frame:	1500
Gateway:	192.168.0.1
VLAN:	Disable
Port Bonding:	Disable

LAN 2	
Network Type:	DHCP Client
IP Address:	192.168.1.32
Subnet Mask:	255.255.255.0
Jumbo Frame:	1500
Gateway:	192.168.1.1
VLAN:	Disable

Global Settings


Previous Apply Cancel

Click **Apply** to continue.


A warning message appears before starting to create the volume.



The volume is being created. The status bar displays the percentage of completion in real time.

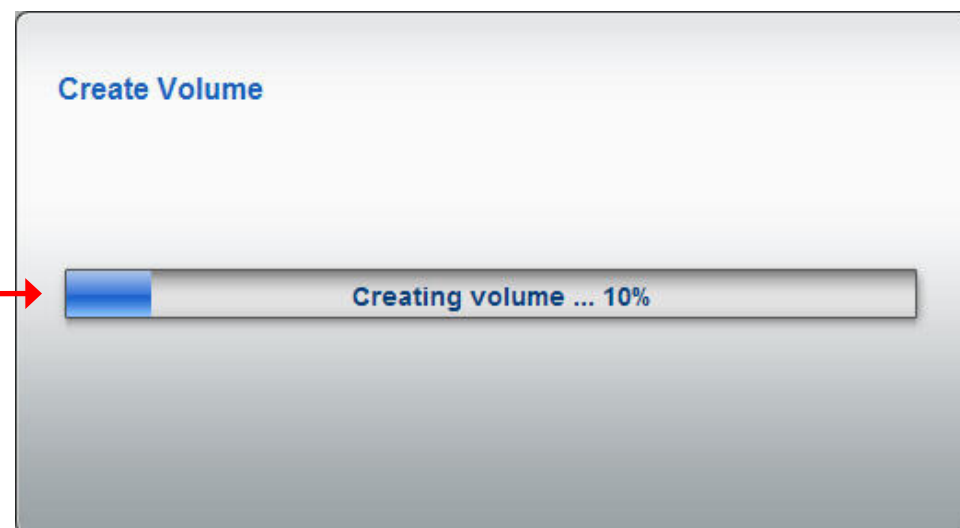


The ShareCenter is saving the settings. After saving the settings, the home window will appear.

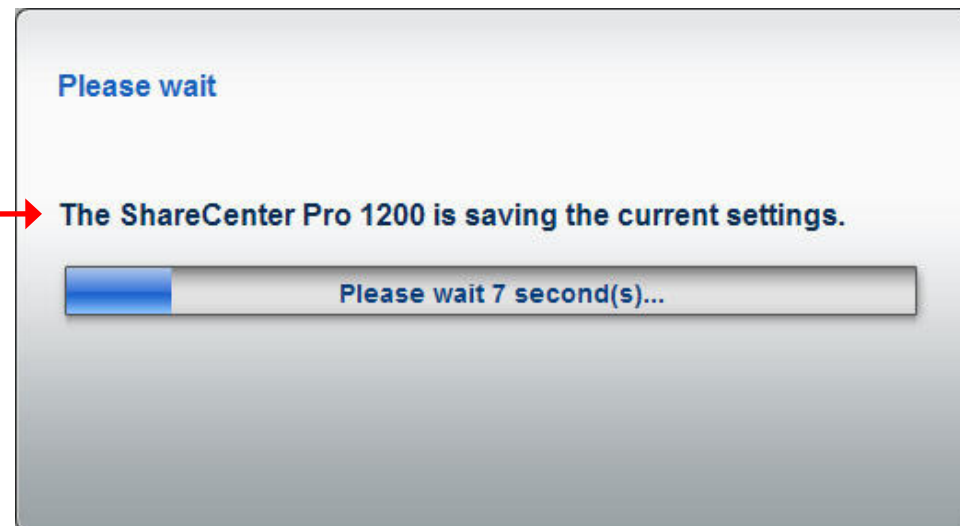

## Create User

The Create User wizard icon directly links to the Create User function.


Click the Create User icon in the Homepage window and the Create User window appears.

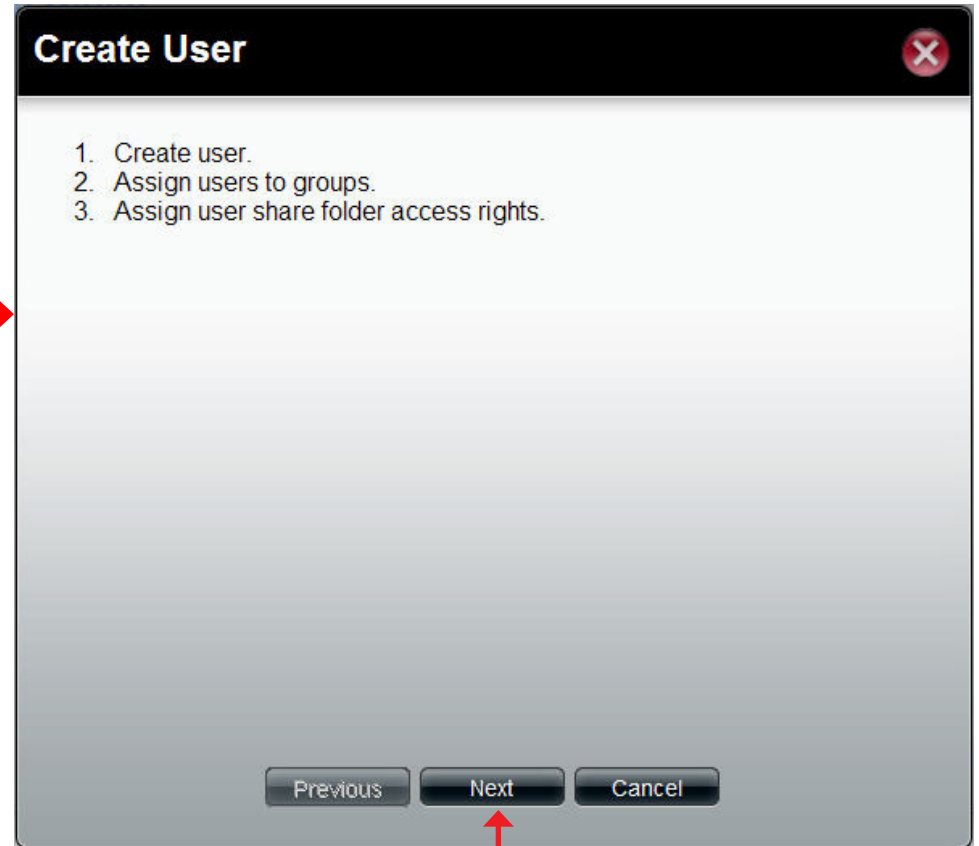

Click **Next** to continue.

Enter a name in **User Name**, and a password in **Password** and **Confirm Password**.


If setting a specific storage quota for the user, click the **Set Quota** check box and enter the storage quota in megabyte (MB).



The 'Create User' dialog box is shown with a black title bar and a close button (X) in the top right corner. It contains two sections: 'User Information' and 'Quotas'. The 'User Information' section has three input fields: 'User Name:', 'Password:', and 'Confirm Password:'. The 'Quotas' section has a checkbox labeled 'Set Quota' and a text input field labeled 'Quotas:' followed by 'MB'. At the bottom, there are three buttons: 'Previous', 'Next', and 'Cancel'. A red arrow points from the 'Next' button to a callout box below it.

Click **Next** to continue.

Select a group from the list. If there is no entry in the list, you can go to Account Management > User to update the information after a group has been created.

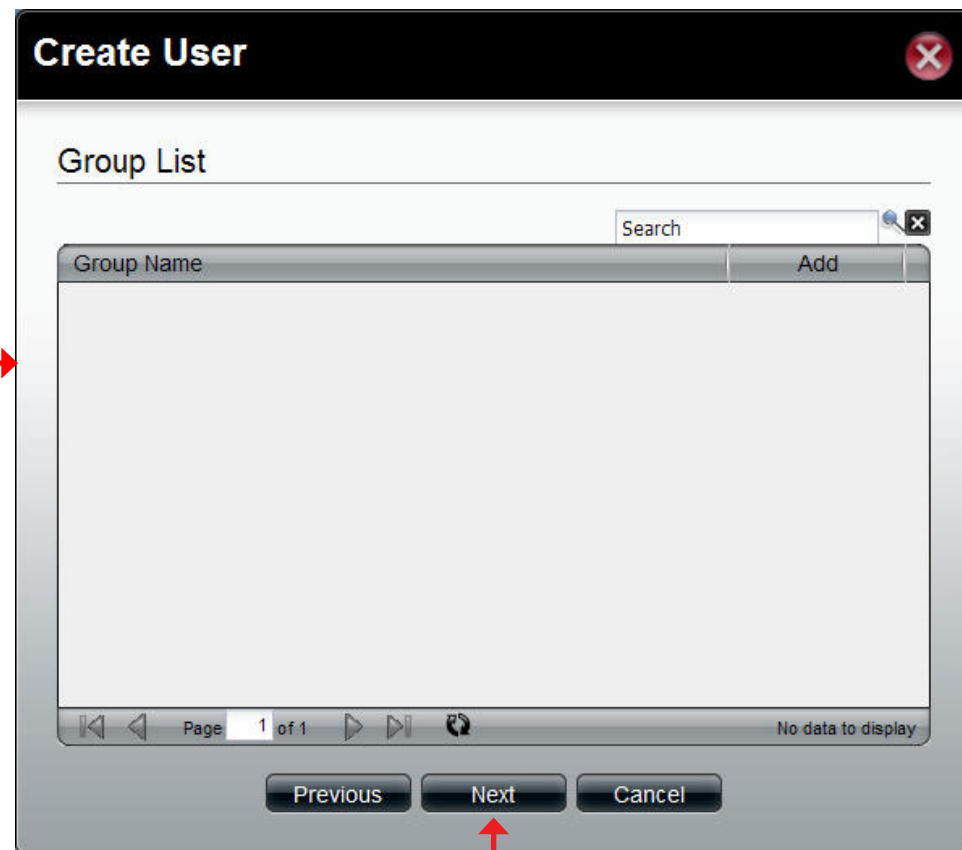

The 'Create User' dialog box features a 'Group List' section. It includes a search bar and a table with a single header 'Group Name' and an 'Add' button. The table is currently empty, displaying 'No data to display' at the bottom right. Navigation buttons 'Previous', 'Next', and 'Cancel' are located at the bottom of the dialog. A red arrow points from the 'Next' button to a callout box below it.

Group Name
------------

Page 1 of 1


No data to display

Previous Next Cancel

Click **Next** to continue.



Select a share folder from the list. If there is no entry in the list, you can go to **Account Management** > **User** to update the information after a share folder is created.

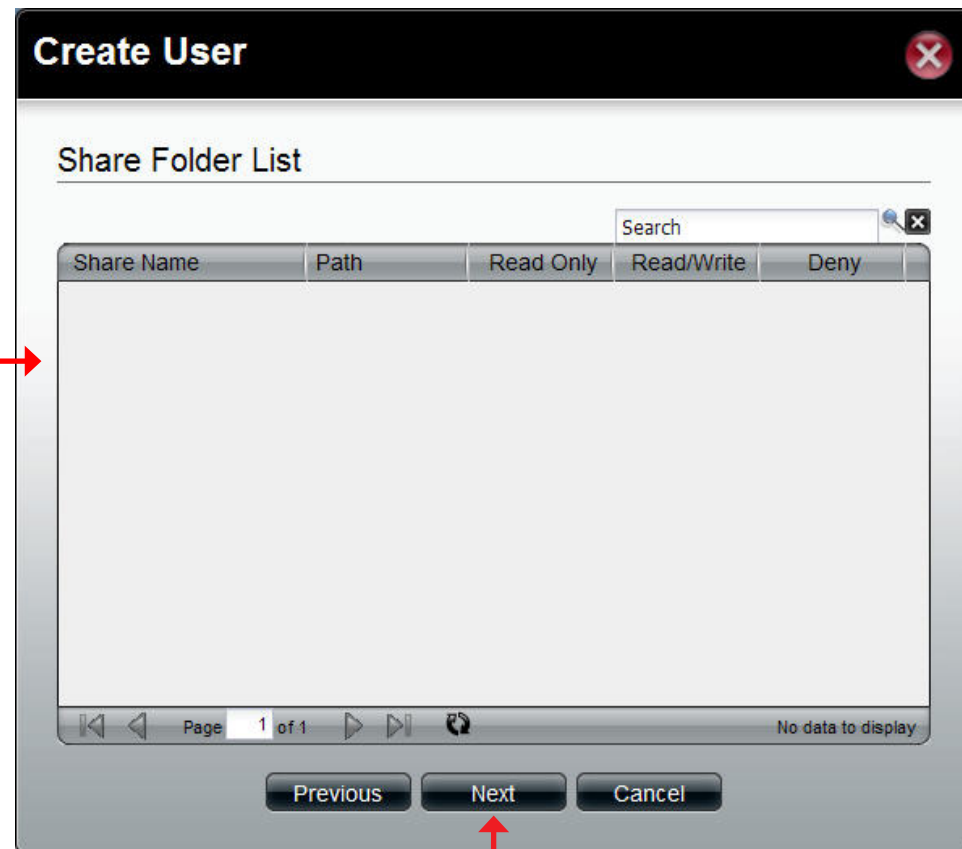

**Create User**

Share Folder List

Search

Share Name	Path	Read Only	Read/Write	Deny
------------	------	-----------	------------	------

Page 1 of 1 No data to display

Previous Next Cancel

Click **Next** to continue.

This window displays the information that has been configured.

Create User

Summary

Options	Settings
User Name	users
Group Name	
Quotas	800 MB
Share Folder (RO)	
Share Folder (RW)	
Share Folder (Deny)	

Previous

Apply

Cancel

Click **Apply** to save the settings.

## Create Share Folder

The Create Share Folder wizard icon directly links to the Create Share Folder function.

Click the Create Share Folder icon in the Homepage window and the Create Share Folder window appears.




Click **Next** to continue.

Click the **Select Path** field to choose the path of a folder.

Click the radio buttons to configure the folder options.

If setting a specific storage quota for the share folder, click the **Set Quota** check box and enter the storage quota in megabyte (MB).

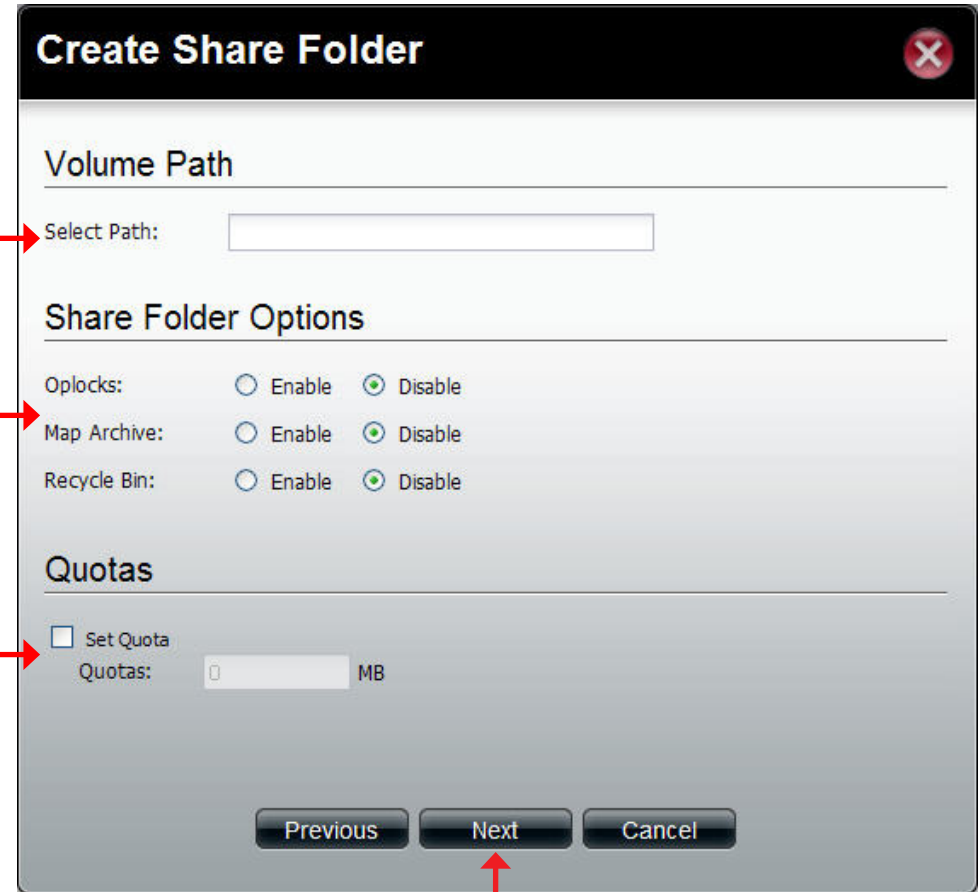

The 'Create Share Folder' dialog box is shown with three sections: 'Volume Path', 'Share Folder Options', and 'Quotas'. The 'Volume Path' section has a 'Select Path:' text box. The 'Share Folder Options' section has three rows of radio buttons: 'Oplocks:' (Enable, Disable), 'Map Archive:' (Enable, Disable), and 'Recycle Bin:' (Enable, Disable). The 'Quotas' section has a 'Set Quota' checkbox and a 'Quotas:' text box followed by 'MB'. At the bottom are 'Previous', 'Next', and 'Cancel' buttons. Red arrows point from the instructional text boxes to the 'Select Path' field, the 'Disable' radio buttons, the 'Set Quota' checkbox, and the 'Next' button.

**Create Share Folder**

Volume Path

Select Path:

Share Folder Options

Oplocks: ☐ Enable ☒ Disable

Map Archive: ☐ Enable ☒ Disable

Recycle Bin: ☐ Enable ☒ Disable

Quotas

☐ Set Quota


Quotas:  MB

Previous Next Cancel

Click **Next** to continue.


# My Favorites

Click the 🏠 (Homepage) icon to see the My Favorites field at the lower half of the window. To add a category in My Favorites, click an arrow key next to a folder icon to display all categories within the folder in the left window, and drag the category to the My Favorites field. To delete a category in My Favorites, drag the category in My Favorites field to the left window. Once the category is added to My Favorites, click the ⭐ icon to see the category in the list. Click to directly link to the window of the category.

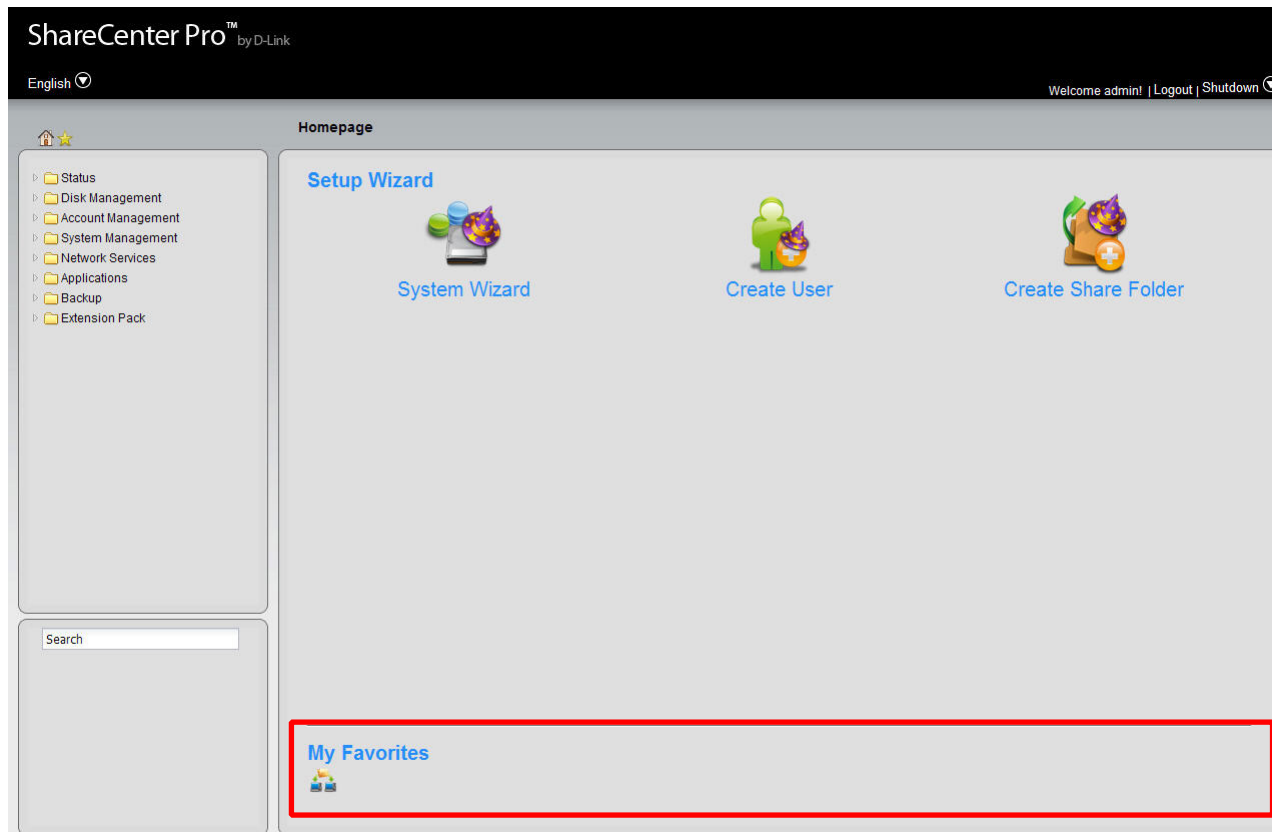

# Status

This folder contains the System Status and Hard Drive Status. Click the folder to display the subcategories.

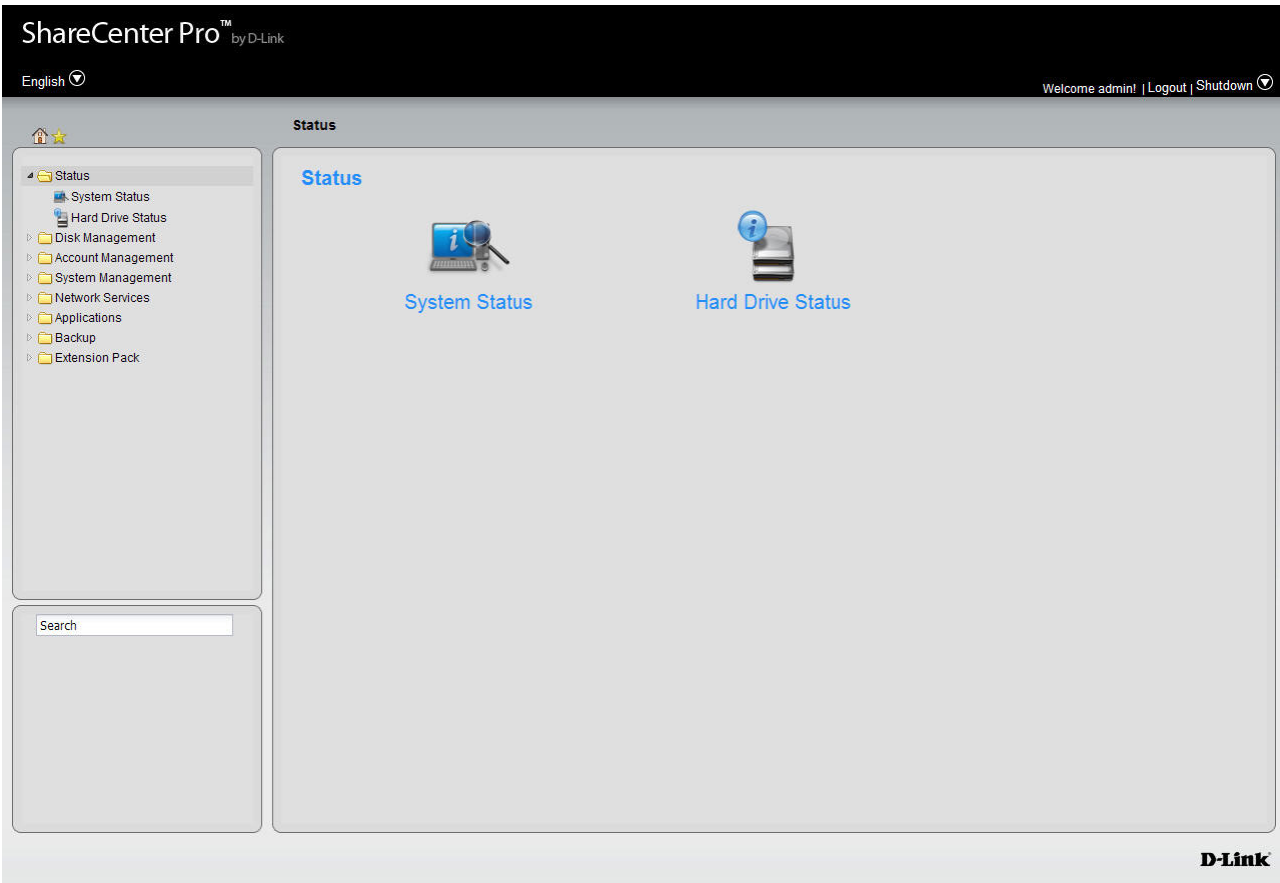

## System Status

Click the System Status icon in the Status window or the System Status link in the left window to view System Status.

- Basic Information:** Displays the model name, current firmware version and current temperature of the ShareCenter.
- LAN Info:** Displays the local network settings of the ShareCenter
- Network Settings:** Displays the host name, and DNS information of the ShareCenter
- Date and Time:** Displays the current date and time settings of the ShareCenter.
- USB Disk Information:** Displays information for a connected USB printer, memory disk or UPS. Click the **Unmount** button to remove the device from the ShareCenter.

Basic Information	
Model Name:	ShareCenter Pro 1200
Current Firmware Version:	1.00b12
System Temperature:	28°C/82°F
LAN 1 Information	
MAC Address:	00:60:42:57:04:12
IP Address:	192.168.0.32
Subnet Mask:	255.255.255.0
Gateway:	192.168.0.1
LAN 2 Information	
MAC Address:	00:60:42:57:04:13
IP Address:	192.168.1.32
Subnet Mask:	255.255.255.0
Gateway:	192.168.1.1
Network Settings	
Host Name:	dlink-570412
Primary DNS:	192.168.69.1
Secondary DNS:	
Default Gateway:	192.168.0.1
Date and Time	
Current Time:	01:19:27 02/01/2010
Current Time Zone:	(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London
Up Time:	0 day(s) 2 hour(s) 30 minute(s)
USB Disk Information (Right Port)	
Manufacturer:	USB 2.0
Product:	Flash Disk
Size:	0.98 GB
Detail:	USBDisk1_1 File System: VFAT Unused size: 181.05 MB

Unmount

## Hard Drive Status

This window displays the Vendor, Model name, Temperature, and Size of the Hard Disks installed in the ShareCenter, along with the slot they are installed in. You can view the S.M.A.R.T. information for each hard disk installed in the ShareCenter (if the hard disk supports the S.M.A.R.T. feature).

**Hard Drive Status:** To see the S.M.A.R.T. information of a hard disk, select a hard disk and click the **Details** button.

Details				
Slot	Vendor	Model	Temperature (*C/*F)	Size
1	Western Digital	WDC WD6402AAEX...	28/82	596.17 GB
2	Hitachi	Hitachi HDP725050...	27/81	465.76 GB
3	Western Digital	WDC WD3000HLFS...	24/75	279.46 GB
4	Western Digital	WDC WD5000AVJS...	28/82	465.76 GB
5	-	-	-	-

**S.M.A.R.T. Information:** The S.M.A.R.T. test results for the selected hard drive is displayed. Click the **Close** button to go back to the Hard Drive Status window.


S.M.A.R.T. Information				
Name	Now	Worst	Thresh	Value
Raw Read Error Rate	200	200	41	0
Spin Up Time	175	173	17	4208
Start Stop Count	100	100	0	185
Reallocated Sector Ct	200	200	140	0
Seek Error Rate	200	200	0	0
Power On Hours	100	100	0	297
Spin Retry Count	100	100	0	0
Calibration Retry Count	100	253	0	0
Power Cycle Count	100	100	0	95
Power-Off Retract Count	200	200	0	85
Load Cycle Count	200	200	0	99
Temperature Celsius	91	85	0	56
Reallocated Event Count	200	200	0	0
Current Pending Sector	200	200	0	0
Offline Uncorrectable	200	200	0	0
UDMA CRC Error Count	200	200	0	0
Multi Zone Error Rate	200	200	0	0

Close



# Disk Management

This folder contains the Volume, iSCSI Target, Virtual Volume and Disk Diagnostic. Click the folder to see the subcategories.

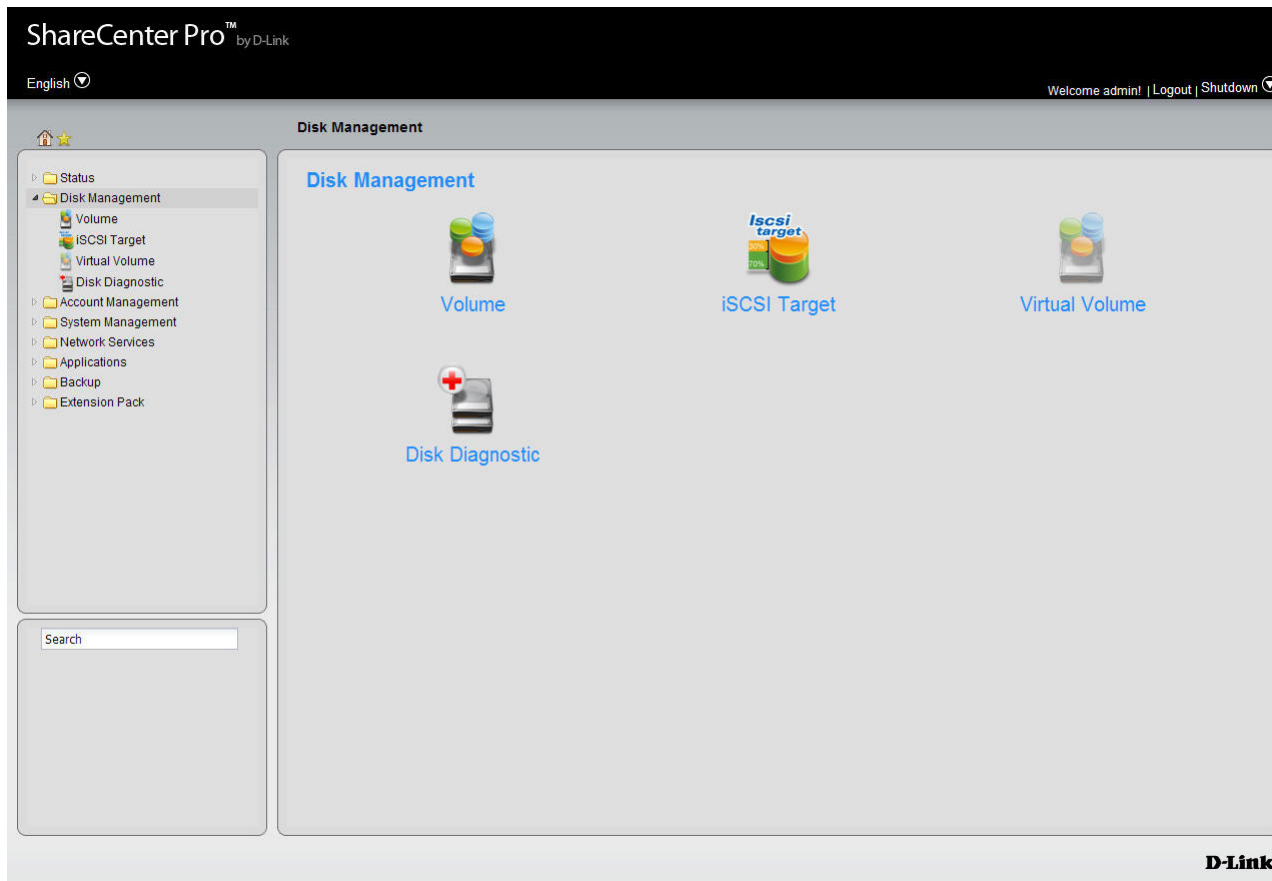

# Volume

Click the **Volume** icon in the Disk Management window or the Volume link in the left window to view and edit the volumes.

The ShareCenter supports six different volume configuration types: Standalone, JBOD, RAID 0, RAID 1, RAID 5 and RAID 6.

**Create:** Click this button to create a new volume.

**Delete:** Click this button to delete a volume.

**Extend/Spare:** Click to enlarge a volume by replacing one of the existing hard drives with a larger capacity hard drive, or set a spare for a volume

**Migrate:** Click to change the RAID level of a volume.

**Expand:** Click to enlarge a volume by replacing one of the existing hard drive with a larger capacity hard drive.

**Unlock:** Click to unlock an encrypted volume

**Encryption:** Click to configure the encryption settings of the volume.

**Auto Rebuild:** Click to enable or disable the auto-rebuild function.

Create	Delete	Extend/Spare	Migrate	Expand	Unlock	Encryption	Auto Rebuild
Volume	Level	State	Encryption	Disk(s)	Used Size / Total Size		
Volume_1	RAID 5	Normal	Enabled, Unlock	1, 2, 3, <a href="#">Spare (4)</a>	197.7 MB / 548.15 GB		
Volume_50	Standalone	Normal	Disabled	1	194.83 MB / 311.73 GB		
Volume_51	Standalone	Normal	Disabled	2	187.45 MB / 183.37 GB		

## Create a new Volume

Click the **Create** button to see the following window.

**Standalone:** Standalone requires only one hard drive in the array. Each hard drive is its own volume.

**JBOD:** JBOD requires a minimum of two hard drives, concatenates the hard drives in a linear fashion, and creates one large volume geared towards maximum available space.

**RAID 0:** RAID requires a minimum of two hard drives. The data is stored in a striped fashion and geared towards maximum available space and performance. CAUTION: RAID 0 does not provide data redundancy.

**RAID 1:** RAID 1 requires a minimum of two hard drives and mirrors the hard drives for data redundancy.

**RAID 5:** RAID 5 requires a minimum of three hard drives and provides data striping with distributed parity.

**RAID 6:** RAID 6 requires a minimum of four hard drives, and stripes data and double-parity information across all of the member drives.

**Array:** Click the check box to select the corresponding hard drive to be part of the volume.

**Spare:** Click the check box to select the corresponding hard drive as a spare for the volume.

**Create Volume**

**RAID Level**

- ☐ Standalone Single hard drive.
- ☐ JBOD Concatenate hard drives.
- ☐ RAID 0 Disk array with best performance.
- ☐ RAID 1 Mirror disk array.
- ☐ RAID 5 Disk array with single fault tolerance.
- ☒ RAID 6 Disk array with double fault tolerance.

**Disk(s)**

RAID 6 requires a minimum of 4 disks in the array.


Array	Spare	Disk	Size
<input type="checkbox"/>	<input type="checkbox"/>	Disk 1	596.17 GB
<input type="checkbox"/>	<input type="checkbox"/>	Disk 2	465.76 GB
<input type="checkbox"/>	<input type="checkbox"/>	Disk 3	279.46 GB
<input type="checkbox"/>	<input type="checkbox"/>	Disk 4	465.76 GB

Previous Next Cancel

Click **Next** to continue.

- Auto-rebuild:** Click the radio buttons to enable or disable auto-rebuild setting. Only RAID 1, RAID 5 and RAID 6 can configure this setting.
- Encryption:** Click the radio buttons to enable or disable encryption settings.
- Password:** When encryption is enabled, enter a password in the field. A minimum of 5 digits is required.
- Confirm Password:** Retype the password in the field.
- Auto Unlock:** Click the check box to automatically unlock the volume when the system starts.
- USB Key:** Click the check box to save the password to a USB drive.

Click **Apply** to continue.

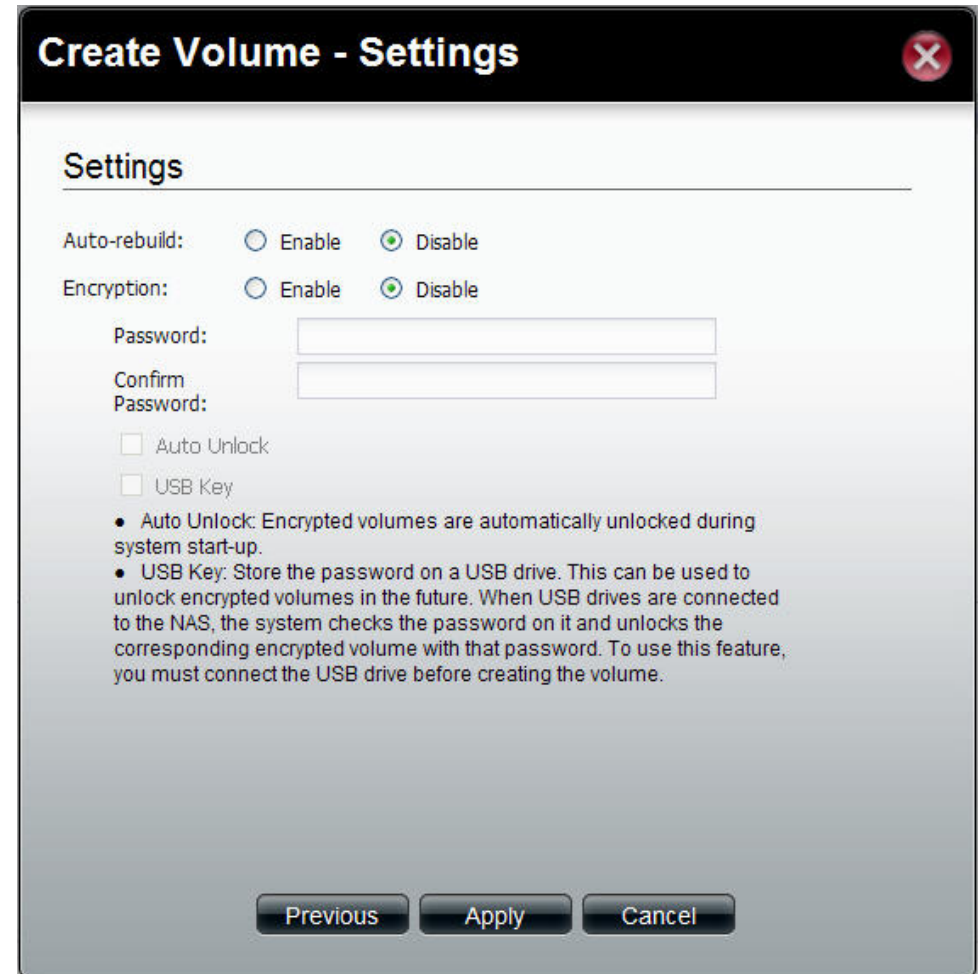

The image shows a 'Create Volume - Settings' dialog box. It has a title bar with a close button (X). The main area is titled 'Settings' and contains the following options:

- Auto-rebuild:** Two radio buttons, 'Enable' and 'Disable'. 'Disable' is selected.
- Encryption:** Two radio buttons, 'Enable' and 'Disable'. 'Disable' is selected.
- Password:** A text input field.
- Confirm Password:** A text input field.
- Auto Unlock:** A checkbox, currently unchecked.
- USB Key:** A checkbox, currently unchecked.

Below the checkboxes, there is a list of bullet points:

- **Auto Unlock:** Encrypted volumes are automatically unlocked during system start-up.
- **USB Key:** Store the password on a USB drive. This can be used to unlock encrypted volumes in the future. When USB drives are connected to the NAS, the system checks the password on it and unlocks the corresponding encrypted volume with that password. To use this feature, you must connect the USB drive before creating the volume.


At the bottom of the dialog, there are three buttons: 'Previous', 'Apply', and 'Cancel'.

A warning message appears before starting to create the volume.

Click **Yes** to continue.



The volume is being created. The status bar displays the percentage of completion in real time. Once the volume is created successfully, the Volume window appears.

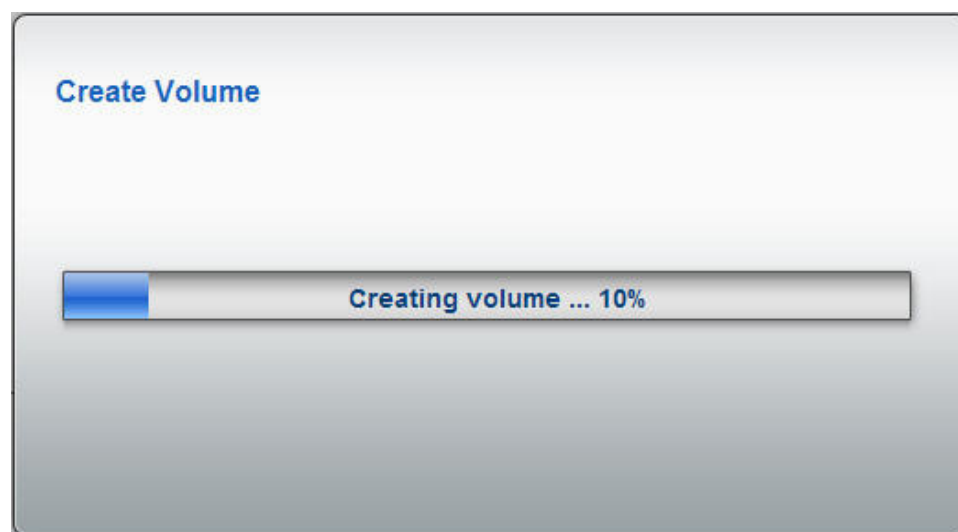


## Extend/Spare a Volume

Click a volume and the **Extend/Spare** button to see the following window.

- Array:** Click the check box to extend the volume.
- Spare:** Click the check box to select the disk to be a spare disk.
- Disk:** Displays the configured disk number.
- Size:** Displays the size of the hard disk.

Click **Apply** to save the settings.

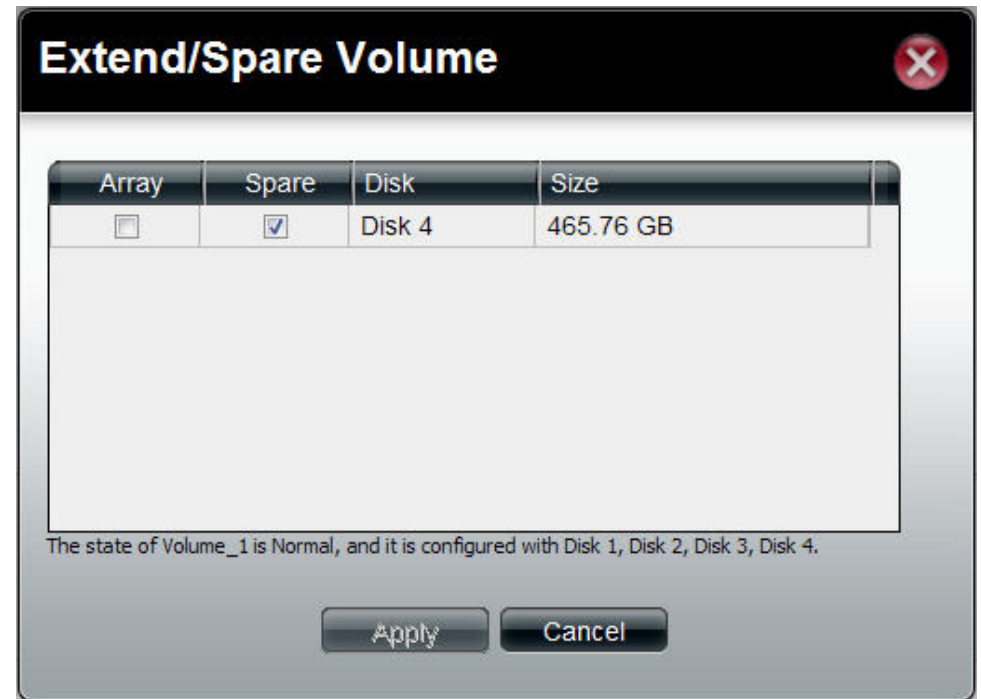

### Migrate a Volume

Click a volume and the **Migrate** button to see the following window.

The windows allows you to change the RAID level of the volume. Select a RAID level and select the hard disks to be used in the migration.

Click **OK** to save the settings.

Migrate Volume

RAID Level

☐ JBOD

Concatenate hard drives.

☐ RAID 0

Disk array with best performance.

☐ RAID 1

Mirror disk array.

☐ RAID 5

Disk array with single fault tolerance.

☐ RAID 6

Disk array with double fault tolerance.

Disk(s)

Array	Disk	Size
<input checked="" type="checkbox"/>	Disk 1	279.46 GB
<input type="checkbox"/>	Disk 2	596.17 GB
<input type="checkbox"/>	Disk 3	465.76 GB
<input type="checkbox"/>	Disk 4	465.76 GB


OK

Cancel


## Expand a Volume

Click the **Expand** button to see the following window.

Click **Yes** to continue.

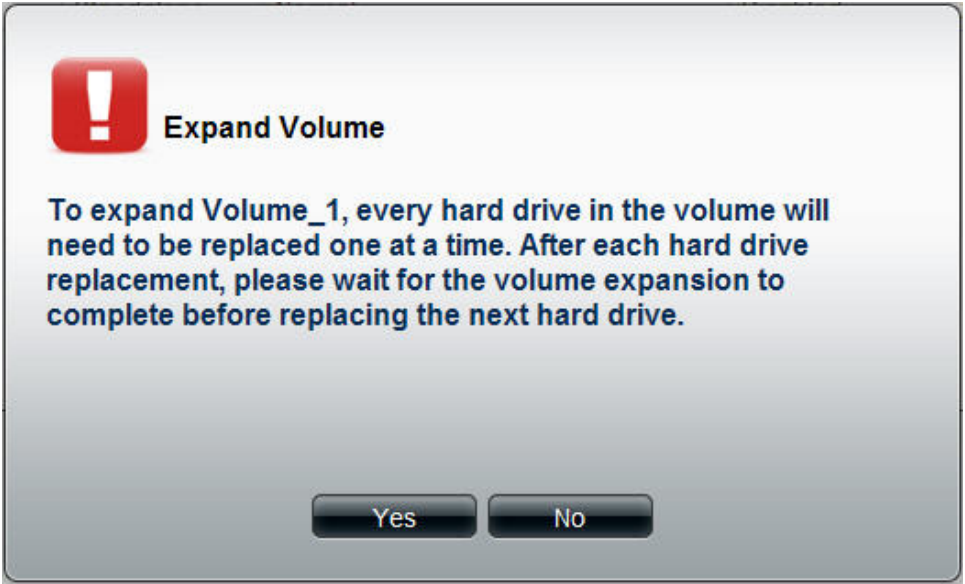

Follow the instruction in the State column to expand the volume.

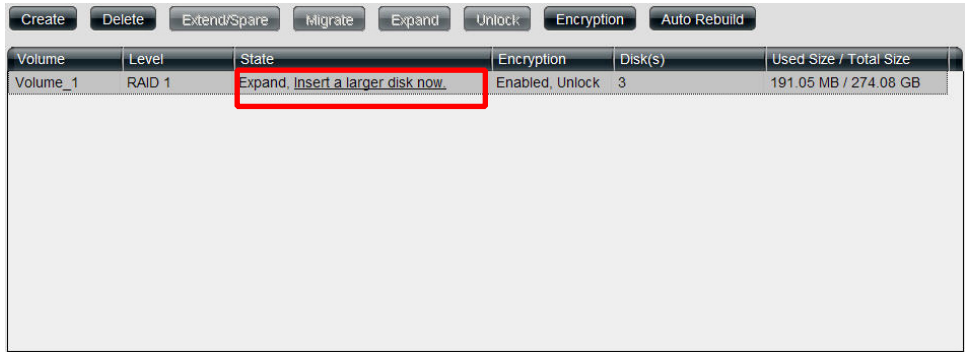



## Change the Encryption Settings

Click the **Encryption** button to see the following window.

The Encryption window appears and there are four tabs in the window. This window displays the settings in the **Change** tab.

**Change Password:** Click the check box and enter the new password in **New Password** and **Confirm Password** fields.

**Auto Unlock:** Click the check box to automatically unlock the volume when the system starts.

**USB Key:** Click the check box to save the password to a USB drive.

Click **Apply** to save the settings.



This window displays the setting in the **Save** tab.

Click **Save** to save the password to local.



This window displays the settings in the **Load** tab.

**Load password from local:** Click the **Browse** button to locate the path of the password that is saved to the local computer.

Click the **Load** button to get the password from local.



This window displays the setting in the **Mail** tab.

Click **Mail** to send the password to administrator.



## iSCSI Target

Click the **iSCSI Target** icon in the Disk Management window or the iSCSI Target link in the left window to configure the iSCSI target.

## iSCSI Manager


Click the **iSCSI Manager** tab to see the following window.

**Enable iSCSI Target:** Click the check box to enable the iSCSI function.

**Enable iSNS:** Click the check box to enable the Internet Storage Name Service function.

**iSNS Server IP:** Enter the iSNS server IP address in the field.


Click **Apply** to save the settings.

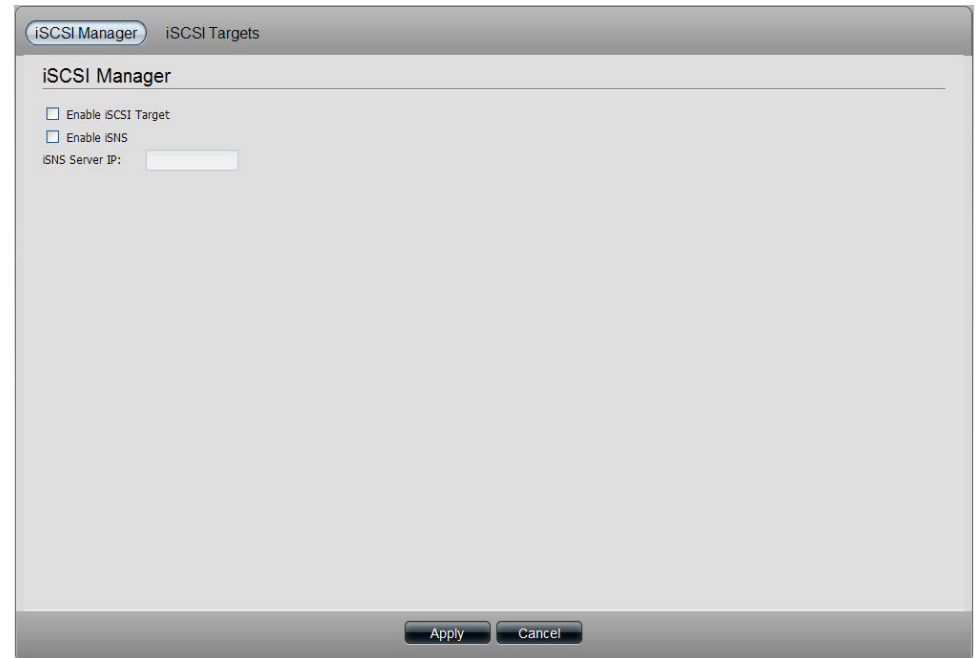

## iSCSI Targets

Click the **iSCSI Targets** tab to see the following window. An iSCSI target shares its storage capacity with the iSCSI initiator.

- Create:** Click the button to add a new target.
- Edit:** Select a target and click the button to change the settings.
- Delete:** Select a target and click the button to remove the target from the list.

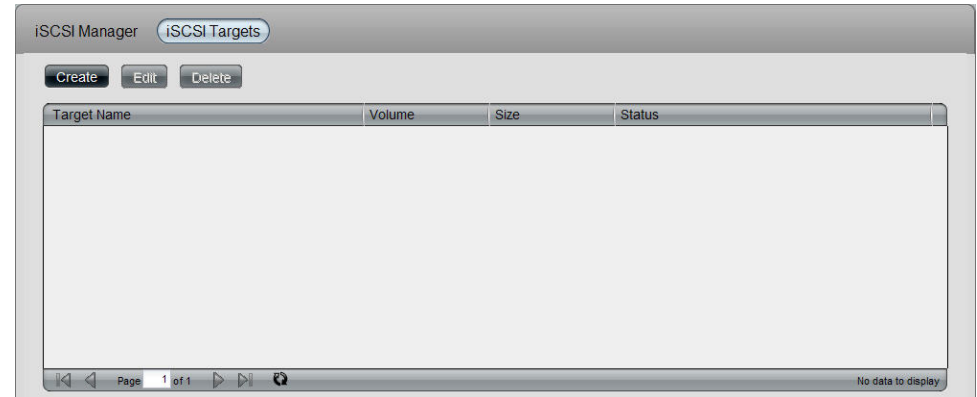

Click the **Create** button to see this window.

- Pre-allocate:** Click the **Yes** radio button to reserve a certain amount of capacity on the target in advance. Click **No** that enables thin provisioning to provide just enough storage space for immediate use.
- Name:** Enter a name in the text box to identify the new iSCSI Target.
- Volume:** Use the drop-down list to select the volume for the target.
- Size:** Specify the size of the iSCSI target in gigabytes.

Click **Next** to continue.


The CHAP Settings window appears.

**Enable:** If the iSCSI initiator supports Challenge Handshake Authentication Protocol, click the **Yes** radio button. Click the **No** radio button to disable.

**Name:** If enabling CHAP, enter the CHAP username in the field.

**Password:** If enabling CHAP, enter the CHAP password in the field.

Click **Apply** to save the settings.

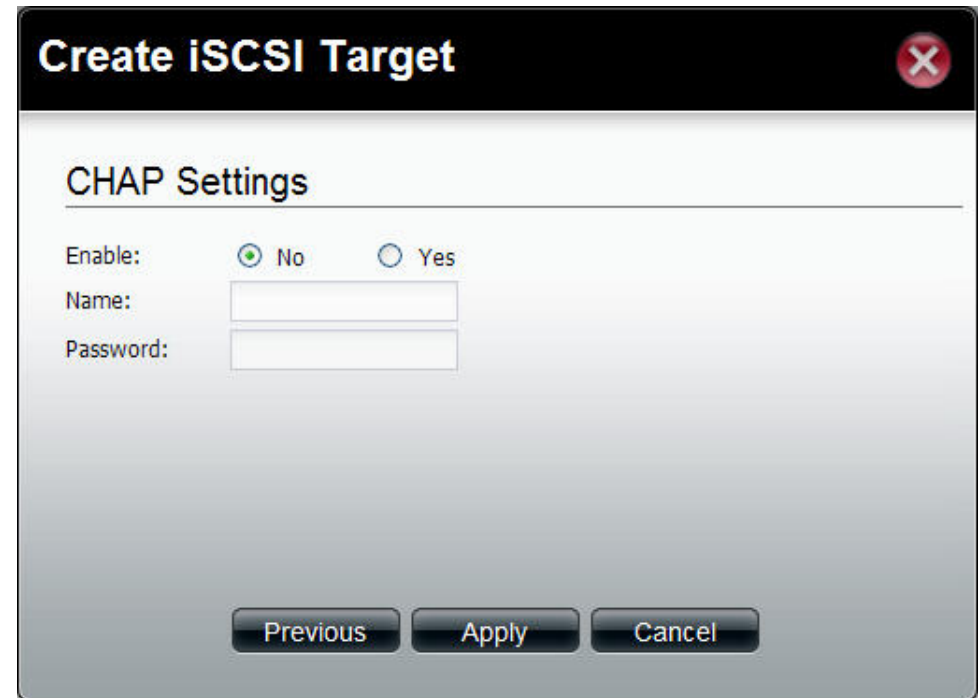


The image shows a screenshot of a software window titled "Create iSCSI Target". The window has a dark header bar with the title and a red close button. Below the header, the section "CHAP Settings" is displayed. It includes three labels: "Enable:", "Name:", and "Password:". The "Enable:" label is followed by two radio buttons: "No" (which is selected) and "Yes". The "Name:" and "Password:" labels are followed by empty text input fields. At the bottom of the window, there are three buttons: "Previous", "Apply", and "Cancel".

# Virtual Volume

Click the **Virtual Volume** icon in the Disk Management window or the Virtual Volume link in the left window to configure the virtual volume. The Virtual Volume allows the ShareCenter to expand its iSCSI capacity. By utilizing the built-in iSCSI initiator, the ShareCenter will be able to connect to other iSCSI targets on the network and convert them into virtual volumes. These virtual volumes are seen as multiple single volumes on the ShareCenter. Up to 8 virtual volumes can be stacked. The ShareCenter Pro acts as the storage stack master server. Virtual Volumes can be used to store and backup data, just like a local volume.

- Create:** Click the button to add a virtual volume.
- Edit:** Select a target and click the button to change the settings.
- Delete:** Select a target and click the button to remove the virtual volume from the list.
- Format:** When using the virtual volume for the first time, the volume must be formatted before mounting to the ShareCenter.
- Connect/Disconnect:** Click **Connect** to link to a virtual volume. Click **Disconnect** to terminate the connection.

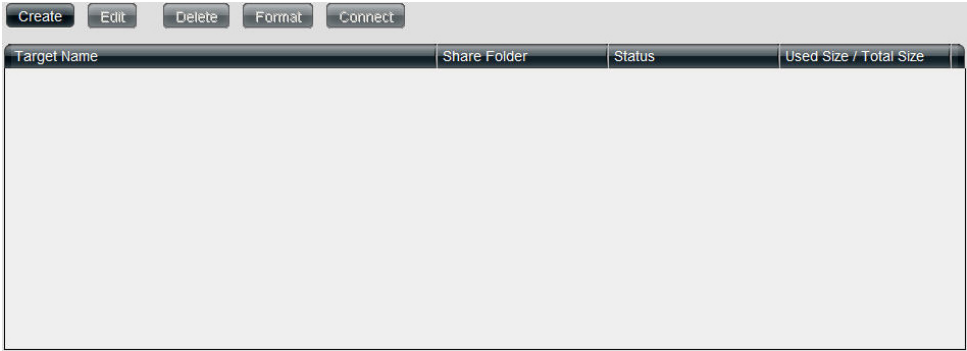

## Create a Virtual Volume

Click the **Create** button to see this window.

**Device IP:** Enter the IP address of the device.

**Port:** Enter the port for the device.

**Search:** Click the button to search for the iSCSI targets on the network.

**Targets:** Displays the available iSCSI targets.


**Share Folder:** Enter a name for the share folder to access.

**Authentication:** Click the **Yes** radio button to enable the authentication function.

**User Name:** Enter the user name for authentication.

**Password:** Enter the password for authentication.

Click **Apply** to save the settings.

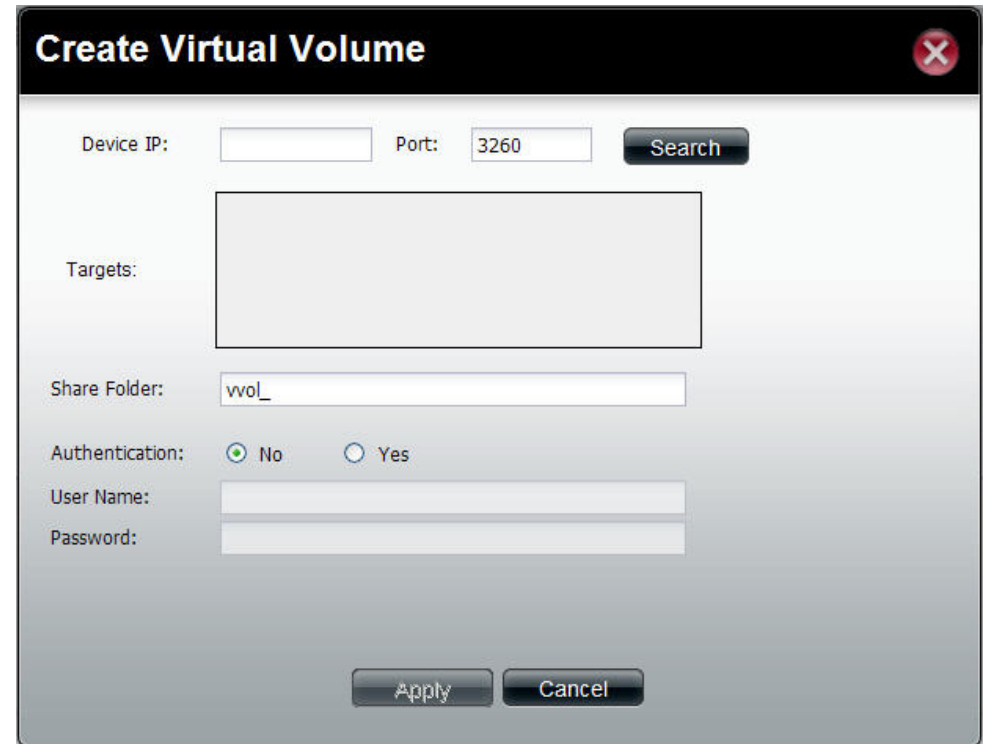

The screenshot shows a 'Create Virtual Volume' dialog box with a dark title bar and a red close button. The main area is light gray. It contains the following fields and controls:

- Device IP:** A text input field.
- Port:** A text input field containing the value '3260'.
- Search:** A dark button with white text.
- Targets:** A large, empty rectangular box.
- Share Folder:** A text input field containing the value 'wvol\_'.
- Authentication:** Two radio buttons, 'No' (selected) and 'Yes'.
- User Name:** A text input field.
- Password:** A text input field.
- Apply:** A dark button with white text.
- Cancel:** A dark button with white text.



# Disk Diagnostic

Click the **Disk Diagnostic** icon in the Disk Management window or the Disk Diagnostic link in the left window to configure the Disk Diagnostic. This window is used to run a SMART (Self-Monitoring Analysis, and Reporting Technology) or Scan test. The hard drive is grayed out if it does not support SMART.

- Quick Test:** Click to run a quick SMART test. The test checks the electrical mechanical, and read performance of the hard drive.
- Extended Test:** Click to run an extended SMART test. This takes longer time, but checks more thoroughly and complete than the quick test.
- Schedule:** Click to configure a scheduled test for the selected hard drive.
- Stop:** Click to stop a test
- Scan:** Click to scan if there are any errors or if there is any corruption on the file system.
- Format:** Click to format a volume. All data on the volume will be deleted.

Quick test   Extended test   Schedule   Stop   Scan   Format					
Slot	Manufacturer	Model	Schedule	Progress	Result
1	Western Digital	WDC WD6402AAEX...	None	-	Pass
2	Hitachi	Hitachi HDP725050...	None	-	
3	Western Digital	WDC WD3000HLFS...	None	-	Pass
4	Western Digital	WDC WD5000AVJS...	None	-	Pass
5	-	-	-	-	

## Schedule Disk Diagnostic

Click the **Schedule** button to see this window.

**Schedule:** Use the drop-down menu to select the frequency of the self-test schedule.


**Type:** Click the radio buttons to select the type of the test.

**Time:** Use the drop-down menu to select hour and minute of the day.

**Weekday:** Use the drop-down menu to select which day of the week.

**Date:** Use the drop-down menu to select a date.

Click **OK** to save the settings.

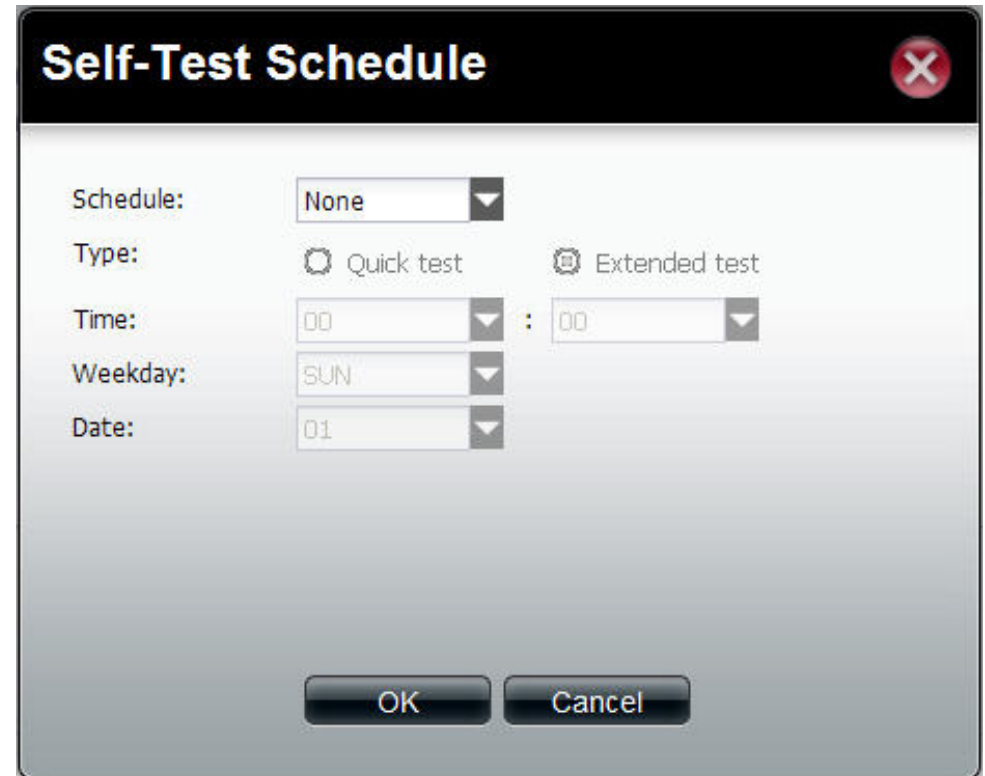


The image shows a 'Self-Test Schedule' dialog box with a black title bar and a red close button. The dialog contains the following fields and controls:

- Schedule:** A drop-down menu currently set to 'None'.
- Type:** Two radio buttons: 'Quick test' (selected) and 'Extended test'.
- Time:** Two drop-down menus for hour and minute, both set to '00'.
- Weekday:** A drop-down menu set to 'SUN'.
- Date:** A drop-down menu set to '01'.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom.

# Scan a Volume

Click the **Scan** button to see this window.


Select a volume and click **Scan** to start to check the file system.

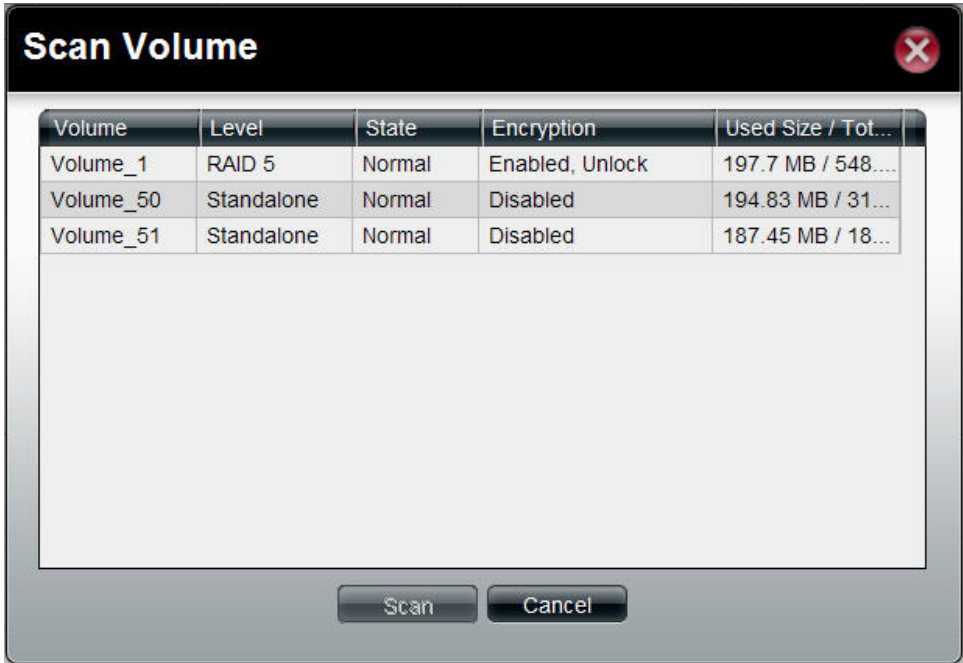


## Format a Volume

Click the **Format** button to see this window.

Select a volume and click **Format** to format the volume.

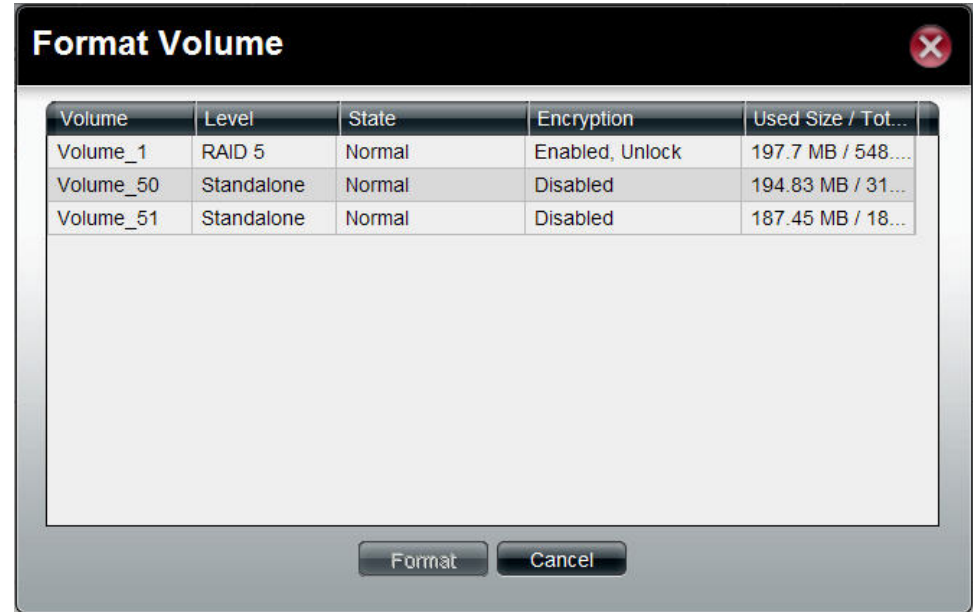


A warning message appears to double confirm if the formatting will proceed. Click **Yes** to proceed.

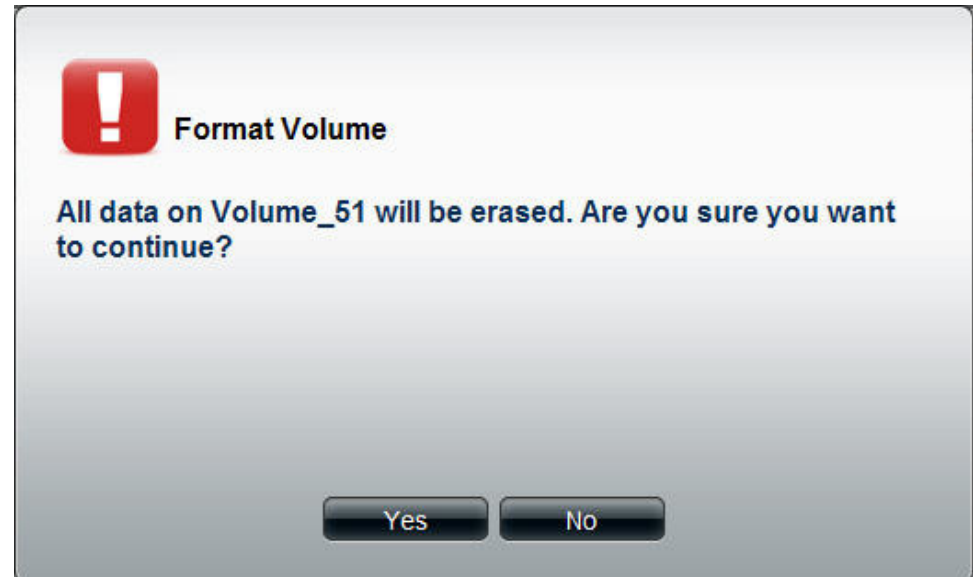

# Account Management

This folder contains the Admin Password, Users, Groups and Share Folders. Click the folder to see the subcategories.

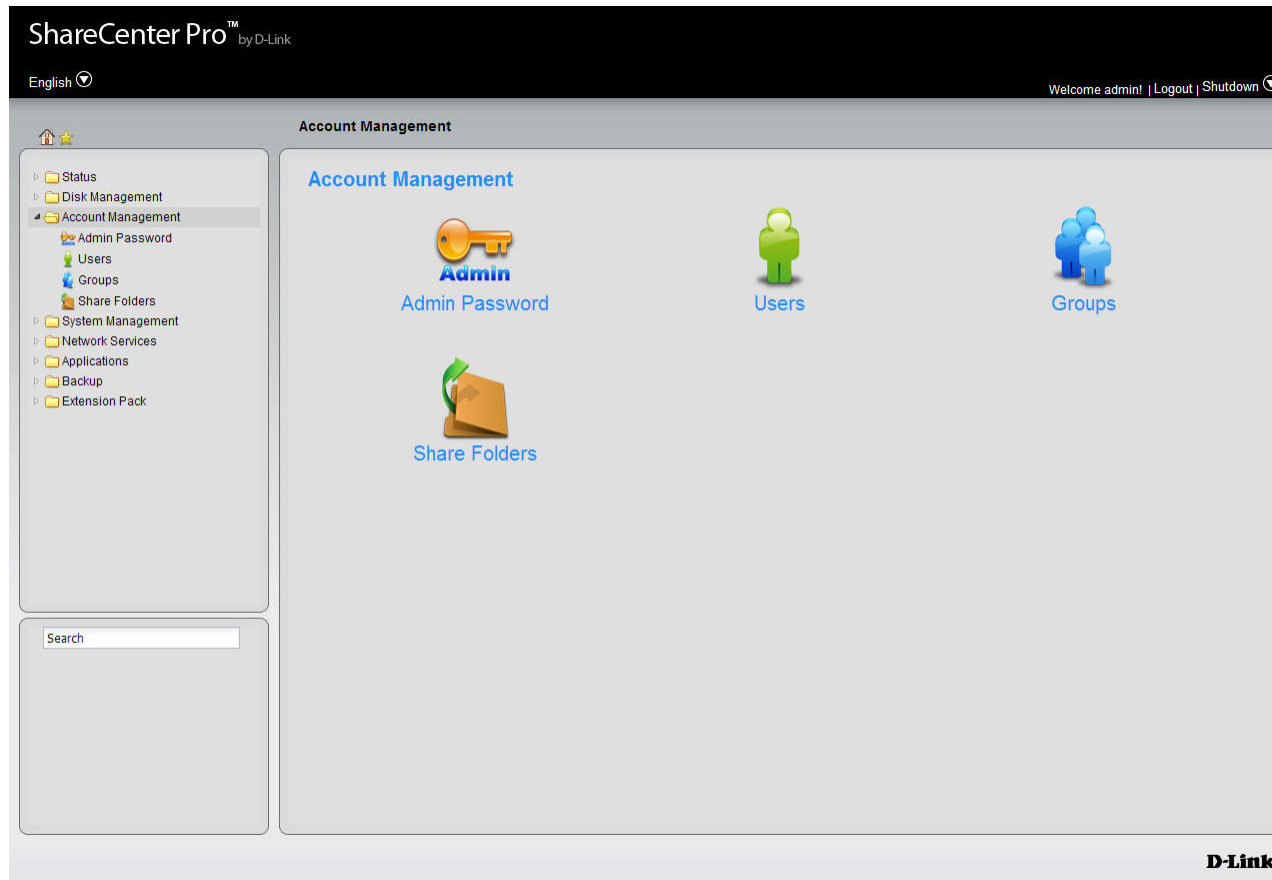

## Admin Password

Click the **Admin Password** icon in the Account Management window or the Admin Password link in the left window to configure the Admin Password. This window is used to change the administrator's password.


**User Name:** Displays administrator's user name.

**Password:** Enter the original password.

**New Password:** Enter a new password.

**Confirm Password:** Retype the new password.

Click **Apply** to save the settings.

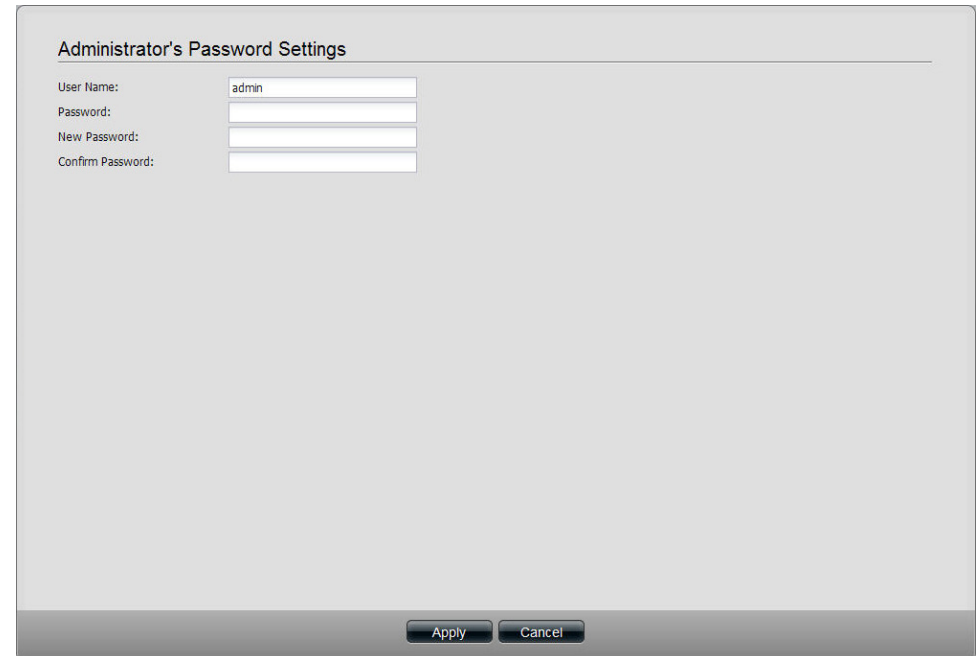

The image shows a dialog box titled "Administrator's Password Settings". It contains four input fields: "User Name" (with the text "admin" entered), "Password", "New Password", and "Confirm Password". At the bottom right of the dialog box are two buttons: "Apply" and "Cancel".

## Users

Click the **Users** icon in the Account Management window or the Users link in the left window to create, edit or delete users. This window also can assign users to various groups.



**Create:** Click the button to create a new user.


**Edit:** Select a user and click the button to configure the user's information.

**Delete:** Select a user and click the button to remove the user from the list.

**Import Users:** Click the button to import a file with a list of users.

**Create Batch:** Click the button to create multiple users at one time.


**Search:** Enter the search keyword and click  to search for the user. Click  to clear the search field and all users' information appears.

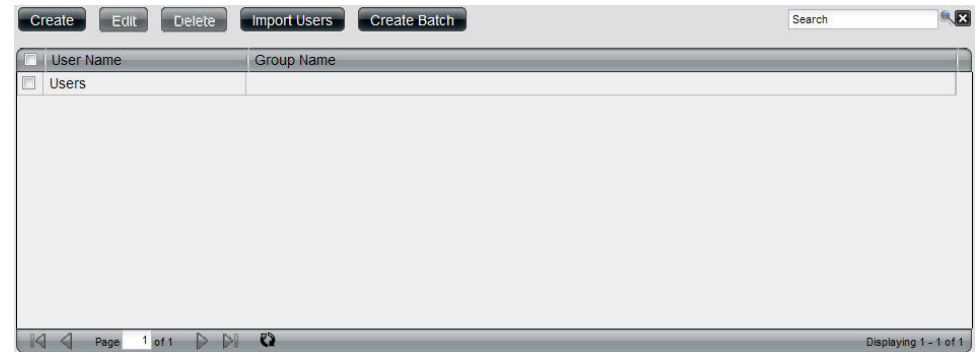

## Create a User

Click the **Create** button to see the welcome window.

Click **Next** to continue.

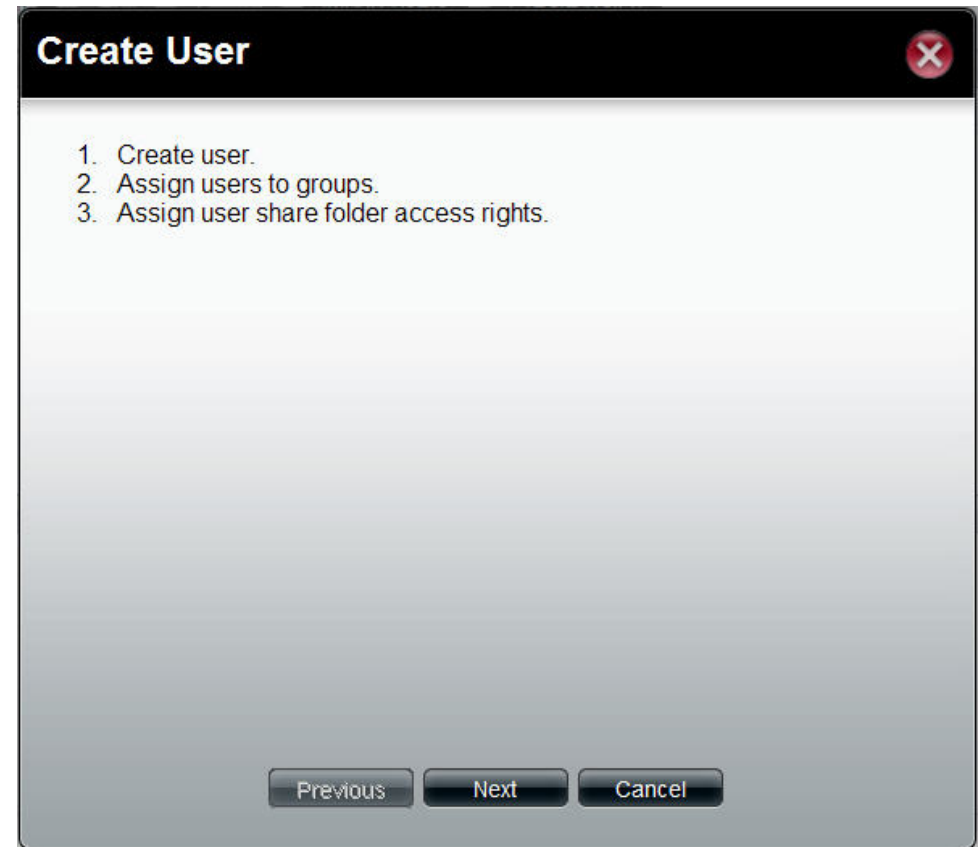



**User Name:** Enter the name of a user.

**Password:** Enter the password of the user.

**Confirm Password:** Retype the password.

**Set Quota:** Click the **Set Quota** check box to limit the storage capacity in megabyte for the user. The value of 0 means an unlimited quota size.

Click **Next** to continue.



The image shows a 'Create User' dialog box with a black title bar and a red close button. It is divided into two sections: 'User Information' and 'Quotas'. The 'User Information' section contains three text input fields labeled 'User Name:', 'Password:', and 'Confirm Password:'. The 'Quotas' section contains a checkbox labeled 'Set Quota' which is currently unchecked. Below the checkbox is a text input field labeled 'Quotas:' with the value '0' and the unit 'MB'. At the bottom of the dialog are three buttons: 'Previous', 'Next', and 'Cancel'.

**Create User**

**User Information**

User Name:

Password:

Confirm Password:



**Quotas**

☐ Set Quota





Quotas:  MB

**Previous** **Next** **Cancel**

This window is used to add the user to a group. If there is no entry in the list, you can go to **Account Management > Groups** to create a group.


**Search:** Enter the search keyword and click  to search for the group. Click  to clear the search field and all groups' information appears.

**Add:** Click the corresponding check box to add the user to the group.

**Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page () , Previous Page () , Next Page () or Last page () to search for the group.



**Refresh:** Click  to update the group list.

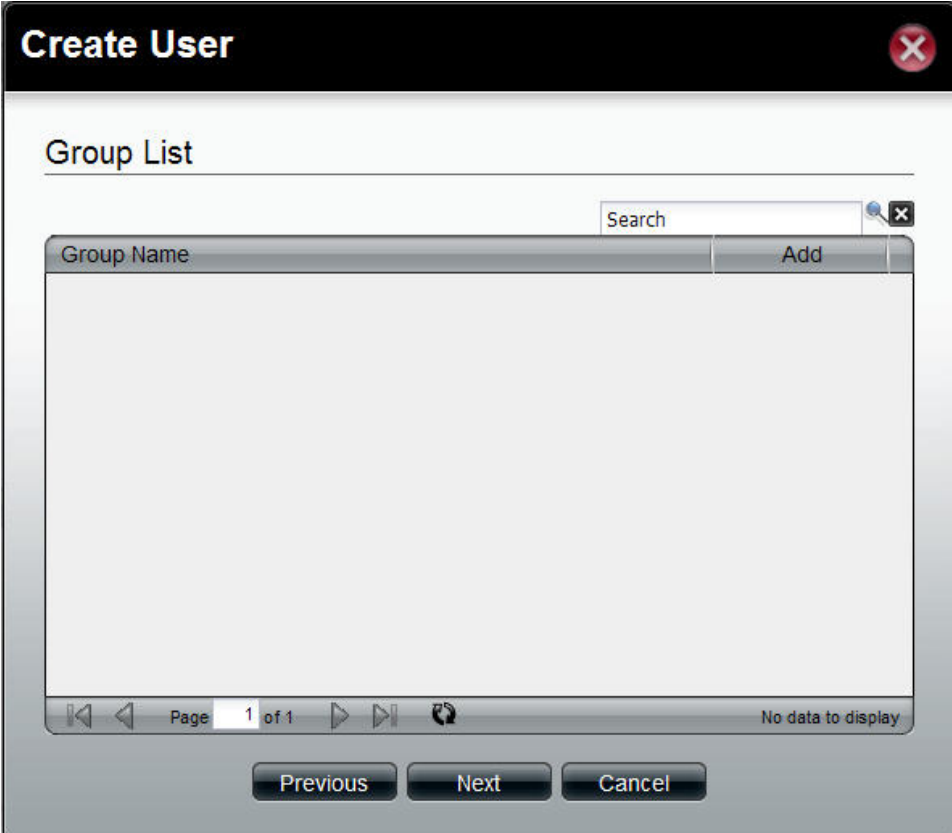Click **Next** to continue.



The 'Create User' window features a 'Group List' section. At the top right of this section is a search bar with a magnifying glass icon and a close button. Below the search bar is a table with a header row containing 'Group Name' and 'Add'. The table body is currently empty. At the bottom of the window, there is a pagination bar showing 'Page 1 of 1' with navigation icons for first, previous, next, and last pages, along with a refresh icon. To the right of the pagination bar, it says 'No data to display'. At the very bottom of the window are three buttons: 'Previous', 'Next', and 'Cancel'.





This window is used to assign access rights to the user for the corresponding share folder(s). If there are no entries in the list, you can go to **Account Management > Share Folders** to create share folders.

**Search:** Enter the search keyword and click  to search for the folder. Click  to clear the search field and all folders appear.

**Read Only:** Click the check box for read only access right.


**Read/Write:** Click the check box for both read and write access rights.

**Deny:** Click the check box for no access right.

**Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page () , Previous Page () , Next Page () or Last page () to search for the group.

**Refresh:** Click  to update the folder list.

Click **Next** to continue.

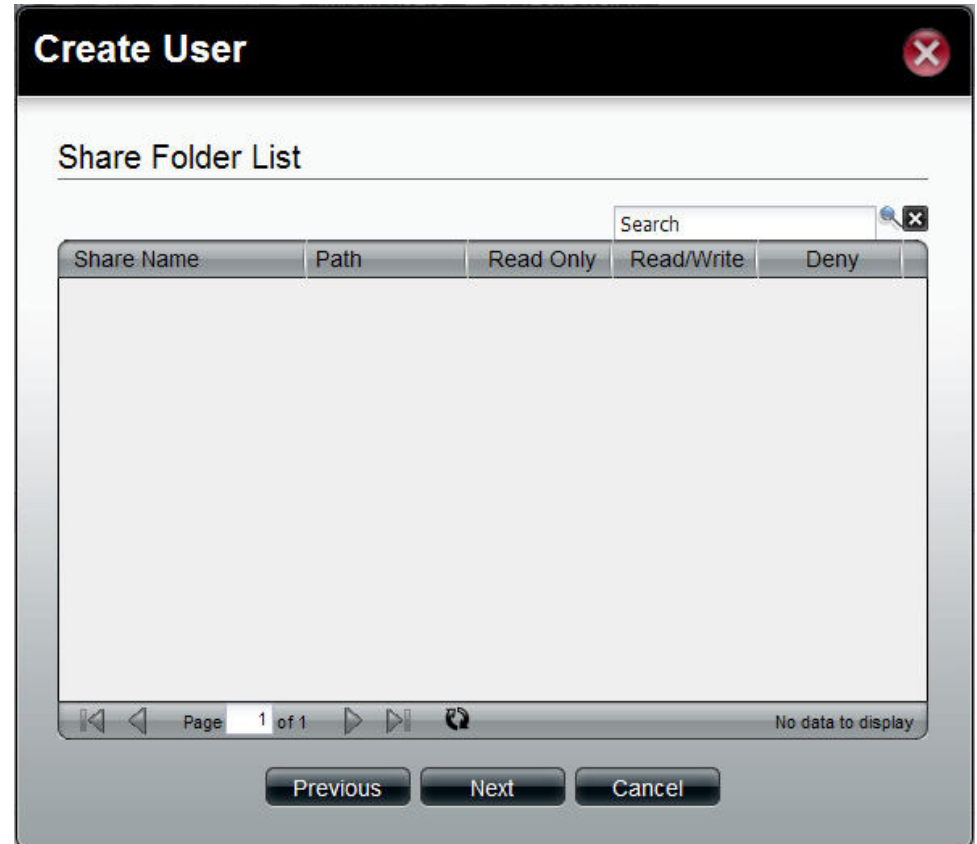

The 'Create User' window displays a 'Share Folder List' table. The table has five columns: 'Share Name', 'Path', 'Read Only', 'Read/Write', and 'Deny'. The table is currently empty, showing 'No data to display'. Above the table is a search bar with a magnifying glass icon and a clear 'X' icon. Below the table is a pagination control showing 'Page 1 of 1' and navigation buttons (First, Previous, Next, Last, Refresh). At the bottom of the window are three buttons: 'Previous', 'Next', and 'Cancel'.

Share Name	Path	Read Only	Read/Write	Deny
------------	------	-----------	------------	------

This window displays a summary of the configured information.

Click **Previous** to modify the settings.

Click **Apply** to save the settings.

Create User

Summary

Options	Settings
User Name	UserName
Group Name	
Quotas	300 MB
Share Folder (RO)	
Share Folder (RW)	
Share Folder (Deny)	

Previous


Apply

Cancel

## Import Users

Click the **Import Users** button to see the welcome window.

Click **Next** to continue.

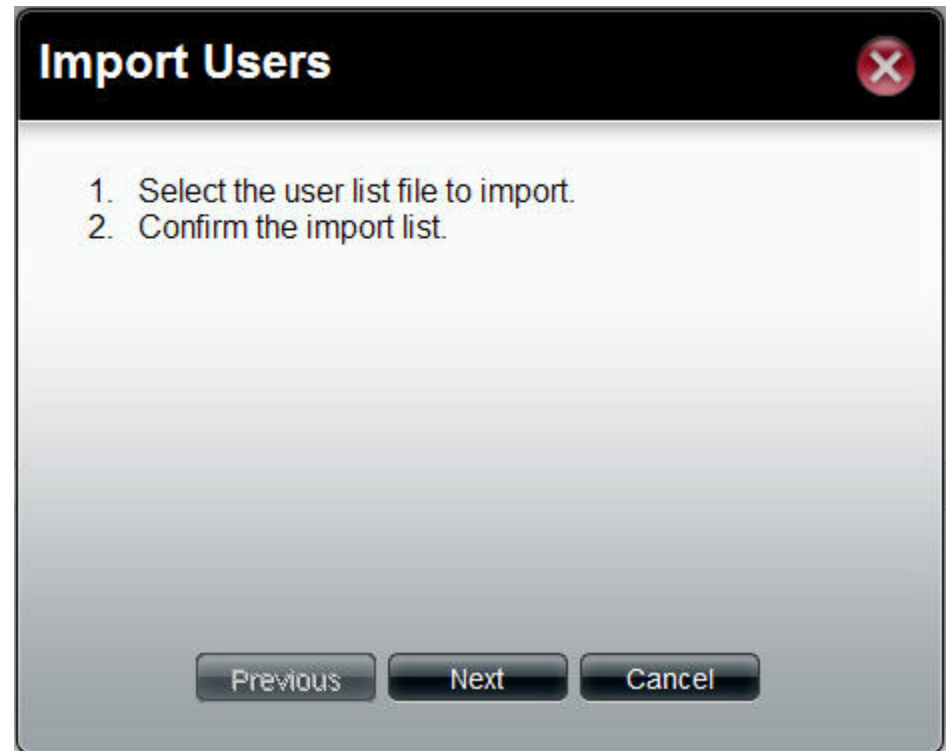

This window allows you to import a user list file.

**Download:** Click this button to see the example for listing the users in the file.

**Overwrite Duplicate Accounts:** Click the check box to replace duplicate accounts.

**User List File:** Click the **Browse** button to locate the file.


Click **Next** to continue.



The image shows a software dialog box titled "Import Users" with a close button (X) in the top right corner. The main heading inside the dialog is "Select the User List File To Import". Below this, there is a text prompt "To reference an example file, press:" followed by a "Download" button. Underneath, there is a checkbox labeled "Overwrite duplicate accounts". Below the checkbox is a text field labeled "User List File:" followed by a "Browse..." button. At the bottom of the dialog, there are three buttons: "Previous", "Next", and "Cancel".


This window displays all the users in the file. If there are any error warnings in the State field. The user will not be able to go to the next window.

Click **Next** to continue.

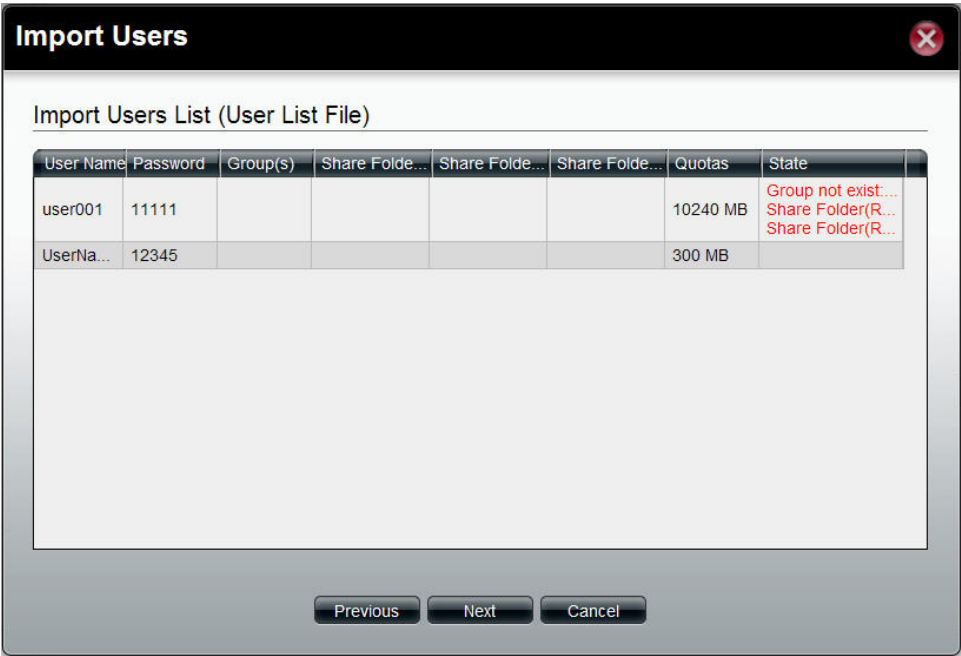

The window displays the final results of importing users to the ShareCenter.


Click **Apply** to save the settings.

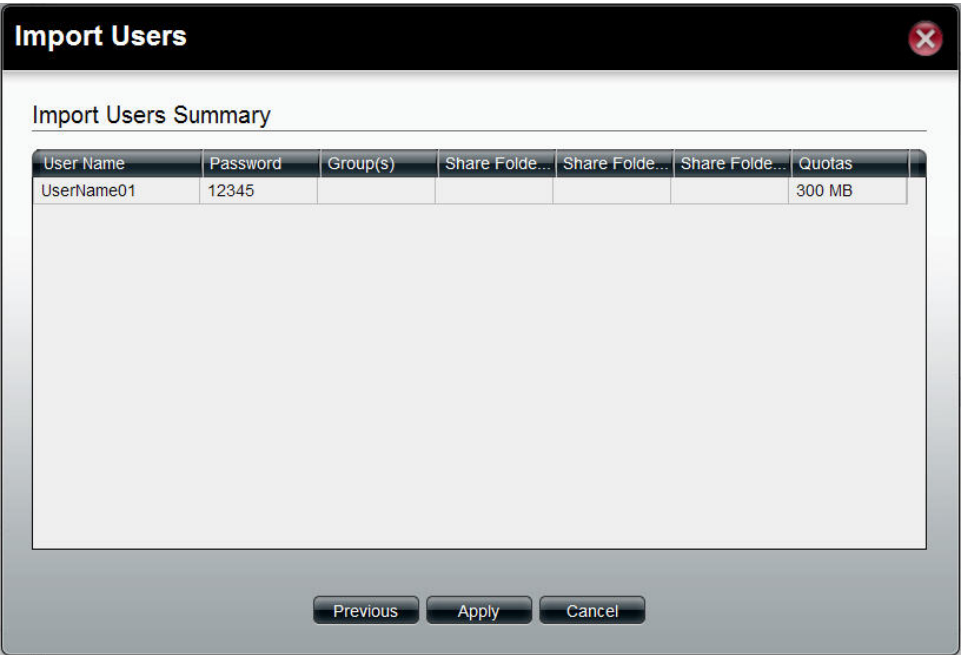

## Create Batch Users

Click the **Create Batch** button to see the welcome window.

Click **Next** to continue.

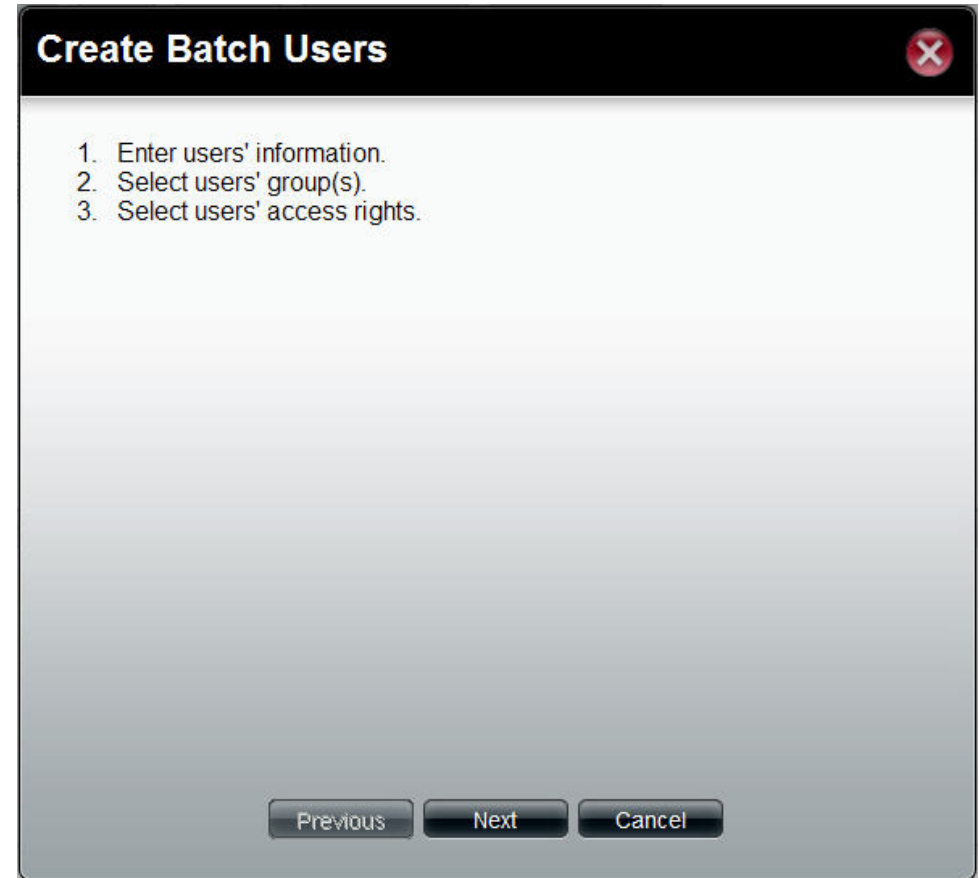



This window allows you to create multiple users.

**User Name Prefix:** Enter the prefix of the users.

**Start Number:** Enter the start number of the users.

**Create Number:** Enter the total number of the users.


**Password:** Enter the password of the users.

**Confirm Password:** Retype the password.

**Overwrite Duplicate Accounts:** Click the check box to replace duplicate accounts.

**Set Quota:** Click the **Set Quota** check box to limit the storage capacity (in megabyte) for the user. The value of 0 means an unlimited quota size.

Click **Next** to continue.

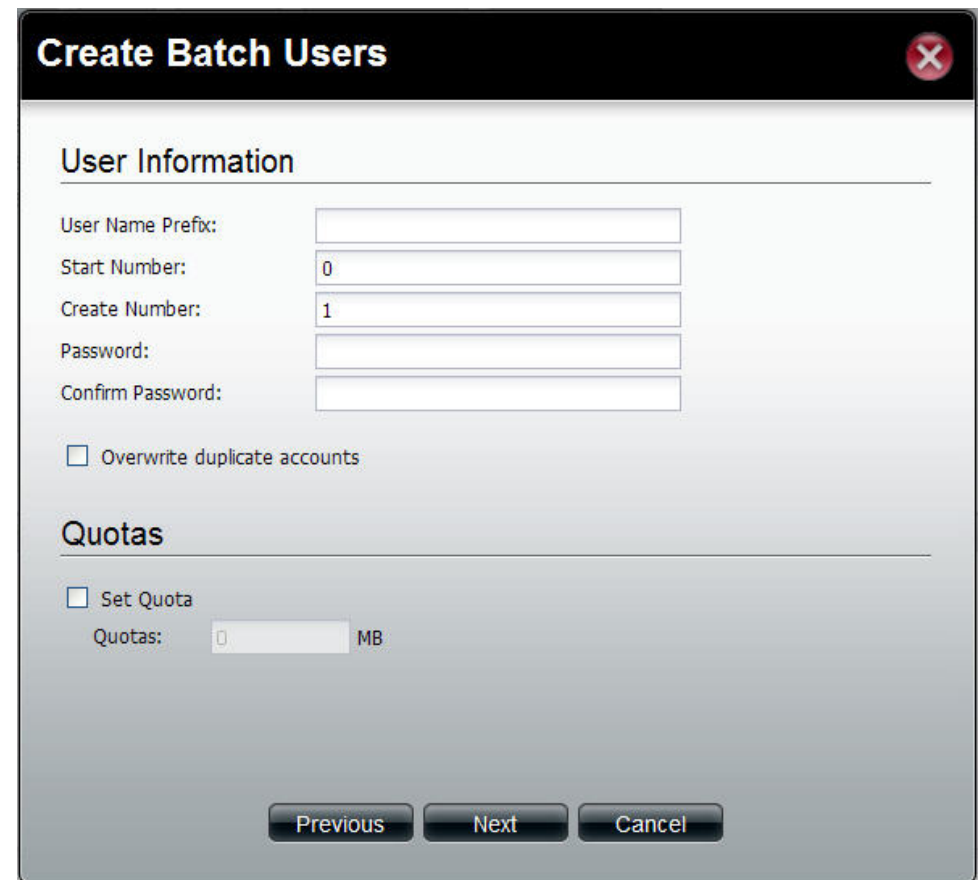

The image shows a 'Create Batch Users' dialog box with a black title bar and a red close button. It is divided into two sections: 'User Information' and 'Quotas'. The 'User Information' section contains five text input fields: 'User Name Prefix', 'Start Number' (with '0' entered), 'Create Number' (with '1' entered), 'Password', and 'Confirm Password'. Below these is an unchecked checkbox labeled 'Overwrite duplicate accounts'. The 'Quotas' section contains an unchecked checkbox labeled 'Set Quota'. Below this checkbox is a text input field for 'Quotas' with '0' entered, followed by the unit 'MB'. At the bottom of the dialog are three buttons: 'Previous', 'Next', and 'Cancel'.

**Create Batch Users**

**User Information**

User Name Prefix:

Start Number:

Create Number:

Password:

Confirm Password:

☐ Overwrite duplicate accounts



**Quotas**

☐ Set Quota





Quotas:  MB

Previous Next Cancel

This window is used to add the users to groups. If there is no entry in the list, you can go to **Account Management > Groups** to create groups.


**Search:** Enter the search keyword and click  to search for the group. Click  to clear the search field and all groups' information appears.

**Add:** Click the corresponding check box to add the users to the groups.

**Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page () , Previous Page () , Next Page () or Last page () to search for the group.



**Refresh:** Click  to update the group list.

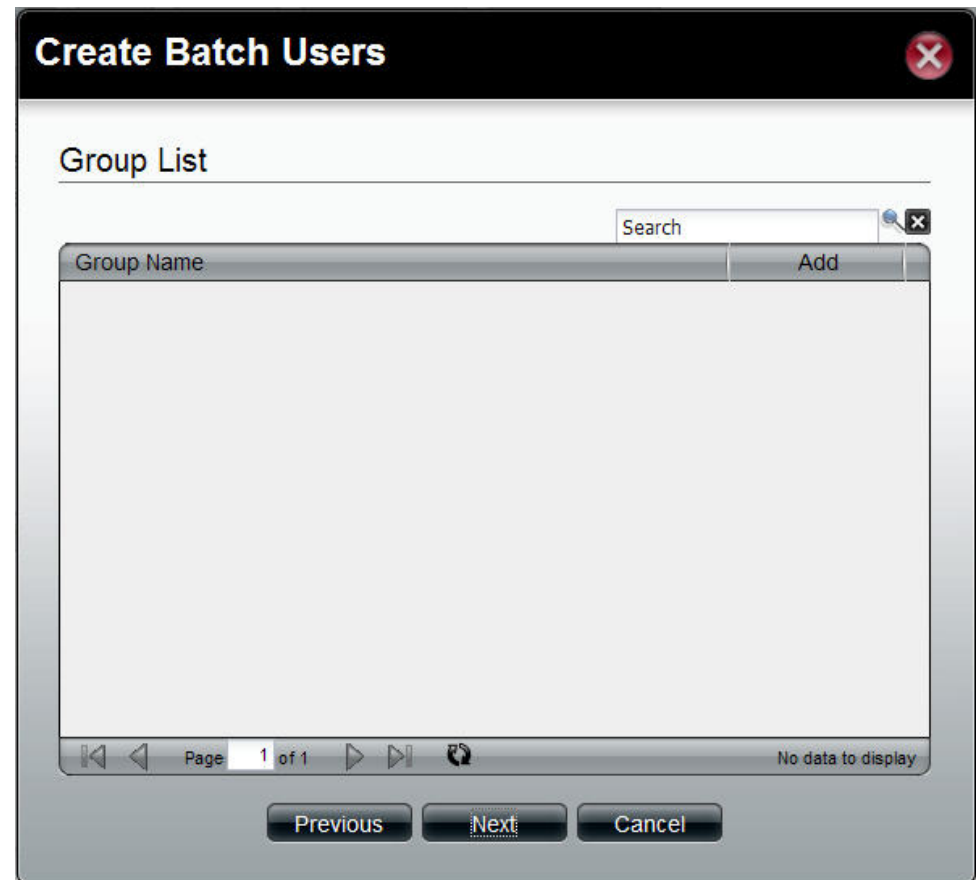Click **Next** to continue.



The screenshot shows a window titled "Create Batch Users" with a close button in the top right corner. Below the title bar is a section labeled "Group List". Inside this section, there is a search bar with the placeholder text "Search" and a magnifying glass icon. To the right of the search bar is a small "x" icon. Below the search bar is a table with two columns: "Group Name" and "Add". The table is currently empty. At the bottom of the window, there is a pagination bar showing "Page 1 of 1" and a "No data to display" message. Below the pagination bar are three buttons: "Previous", "Next", and "Cancel".

This window is used to assign access rights to the users for the corresponding share folder(s) to the share folders. If there is no entry in the list, you can go to **Account Management > Share Folders** to create share folders.

**Search:** Enter the search keyword and click  to search for the folder. Click  to clear the search field and all folders appear.

**Read Only:** Tick the check box for read only access right.

**Read/Write:** Tick the check box for both read and write access rights.

**Deny:** Tick the check box for no access right.

**Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page (⏮), Previous Page (⏪), Next Page (⏩) or Last page (⏭) to search for the group.

**Refresh:** Click  to update the folder list.


Click **Next** to continue.



This window displays a summary of the configured information.

Click **Previous** to modify the settings.

Click **Apply** to save the settings. Depending on the amount of users, the procedure may take a few hours.

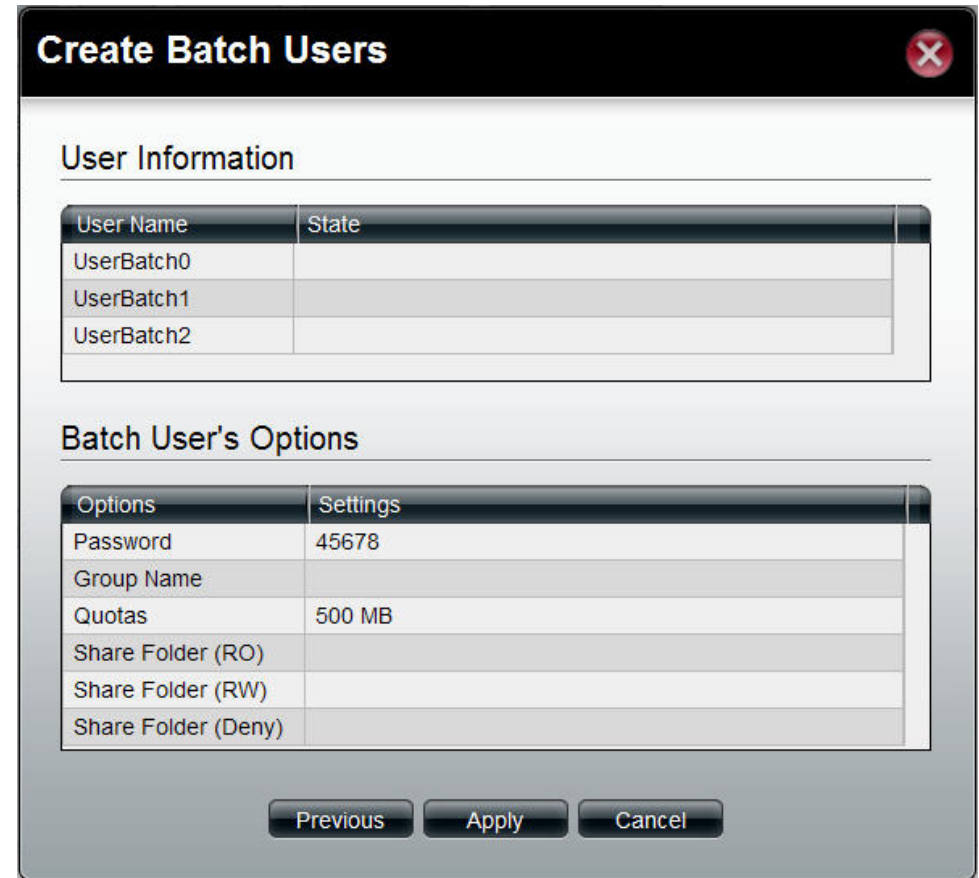

The 'Create Batch Users' window is a configuration interface with a dark title bar and a close button. It contains two main sections: 'User Information' and 'Batch User's Options'. The 'User Information' section has a table with columns 'User Name' and 'State', listing 'UserBatch0', 'UserBatch1', and 'UserBatch2'. The 'Batch User's Options' section has a table with columns 'Options' and 'Settings', showing values for 'Password' (45678), 'Quotas' (500 MB), and several 'Share Folder' options. At the bottom are 'Previous', 'Apply', and 'Cancel' buttons.

User Name	State
UserBatch0	
UserBatch1	
UserBatch2	

Options	Settings
Password	45678
Group Name	
Quotas	500 MB
Share Folder (RO)	
Share Folder (RW)	
Share Folder (Deny)	

Previous Apply Cancel



## Groups


Click the **Groups** icon in the Account Management window or the Groups link in the left window to create, edit or delete a group.

**Create:** Click the button to create a new group.

**Edit:** Select a group and click the button to configure the group's information.

**Delete:** Select a group and click the button to remove the group from the list.

**Search:** Enter the search keyword and click  to search for the group. Click  to clear the search field and all groups' information appears.

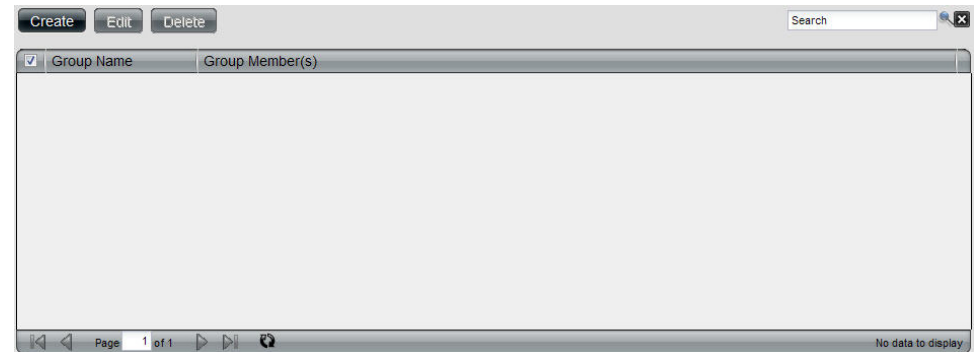


## Create a Group

Click the **Create** button to see the welcome window.



**Group Name:** Enter a name of the group

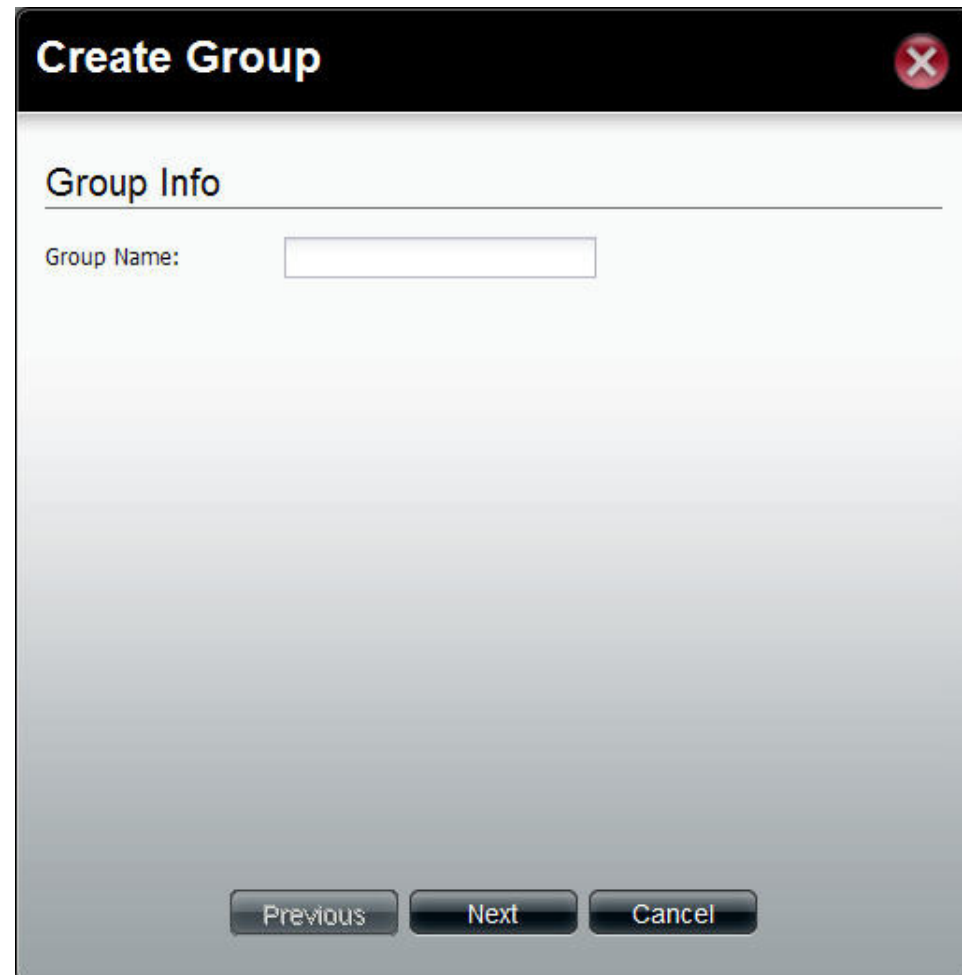Click **Next** to continue.







The screenshot shows a 'Create Group' dialog box with a dark title bar containing the text 'Create Group' and a red close button. The main area is titled 'Group Info' and contains a 'Group Name:' label followed by a text input field. At the bottom, there are three buttons: 'Previous', 'Next', and 'Cancel'.

This window is used to add the users to the group. If there is no entry in the list, you can go to **Account Management > Users** to create users.


**Search:** Enter the search keyword and click  to search for the user. Click  to clear the search field and all users' information appears.

**Add:** Click the corresponding check box to add the user to the group.

**Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page () , Previous Page () , Next Page () or Last page () to search for the group.

**Refresh:** Click  to update the group list.

Click **Apply** to save the settings.

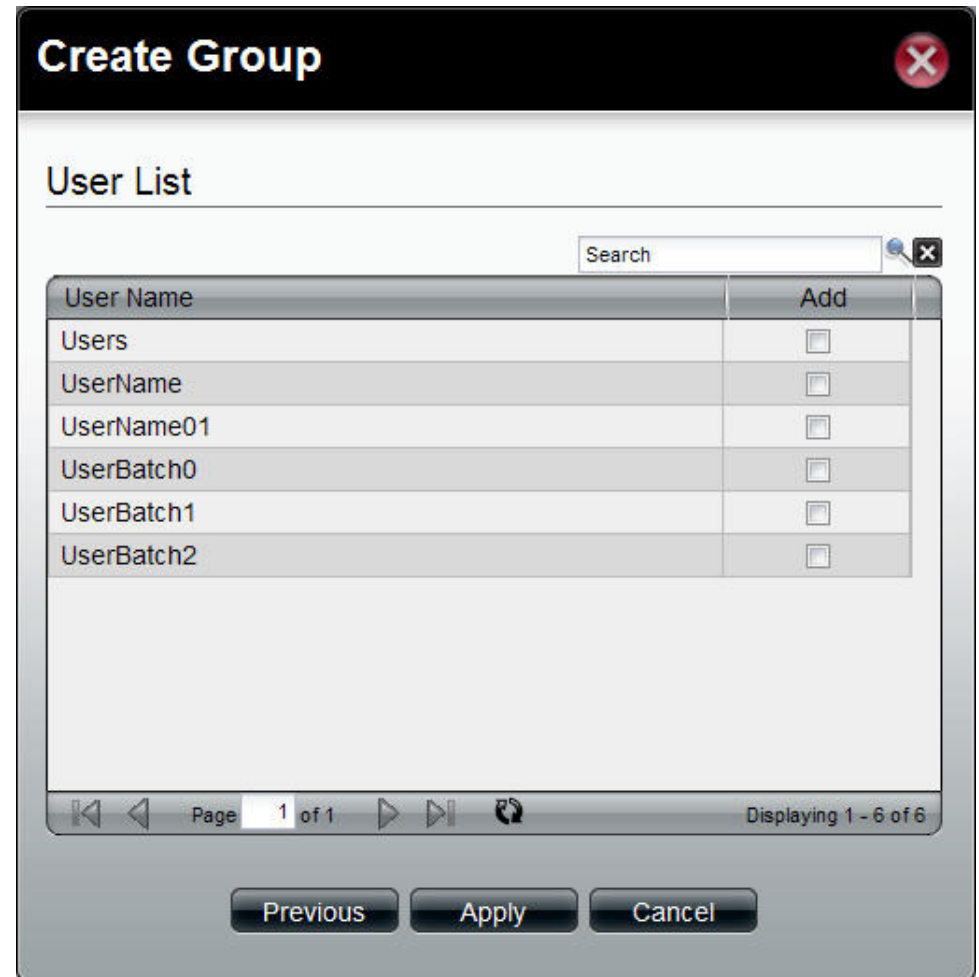








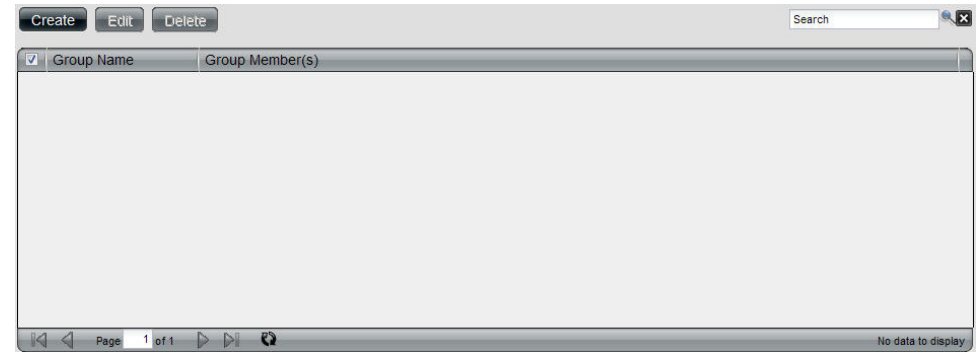
The 'Create Group' dialog box features a 'User List' section with a search bar and a table of users. The search bar has a magnifying glass icon and a clear 'X' icon. The table lists users with checkboxes in the 'Add' column. At the bottom, there are navigation controls for page 1 of 1, a refresh button, and 'Previous', 'Apply', and 'Cancel' buttons. The status bar indicates 'Displaying 1 - 6 of 6'.

User Name	Add
Users	<input type="checkbox"/>
UserName	<input type="checkbox"/>
UserName01	<input type="checkbox"/>
UserBatch0	<input type="checkbox"/>
UserBatch1	<input type="checkbox"/>
UserBatch2	<input type="checkbox"/>

## Share Folders

Click the **Share Folders** icon in the Account Management window or the Share Folders link in the left window to create, edit or delete a share folder.

- Create:** Click the button to create a new folder.
- Edit:** Select a folder and click the button to configure the folder's information.
- Delete:** Select a folder and click the button to remove the folder from the list.
- Search:** Enter the search keyword and click  to search for the folder. Click  to clear the search field and all folders' information appears.
- Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page () , Previous Page () , Next Page () or Last page () to search for the group.
- Refresh:** Click  to update the group list.






## Create a Share Folder

Click the **Create** button to see the welcome window.

Click **Next** to continue.

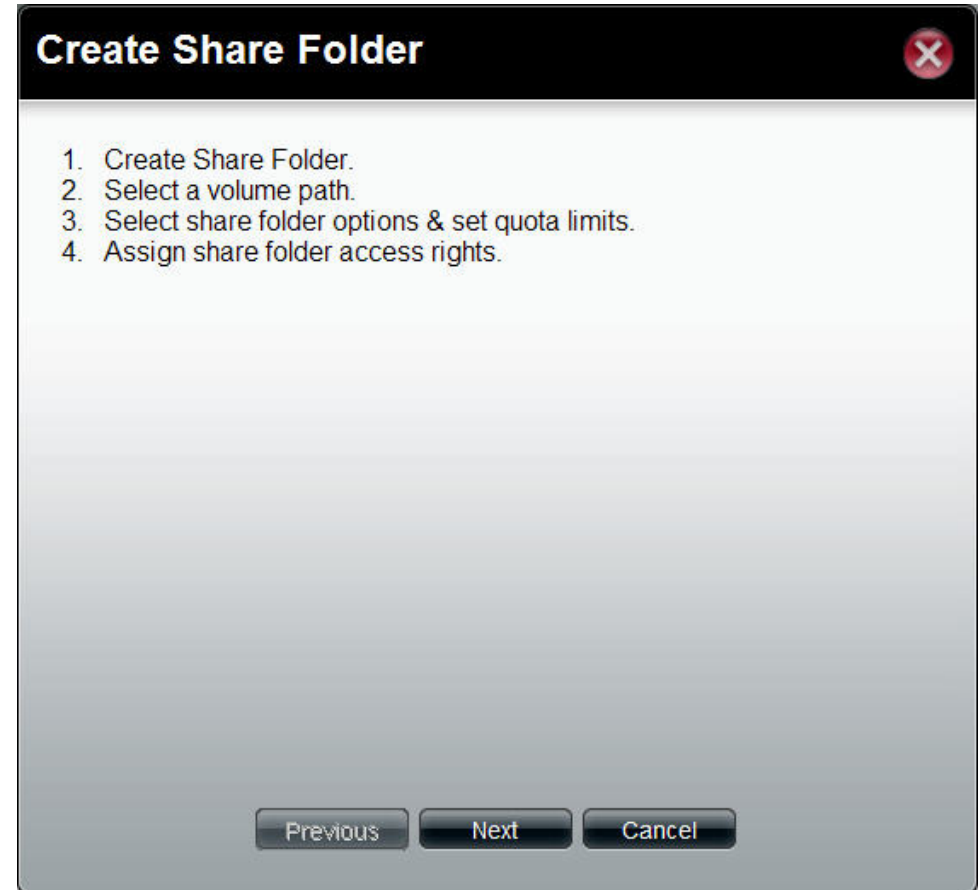

This window allows you to create multiple share folders.

**Select Path:** Click the field to show the available folders. Click the **Create** button to add a new folder. Double-click a folder to select it.


**Oplocks:** Click **Enable** to enable the Opportunistic lock (oplock) mechanism.

**Map Archive:** Click **Enable** to the map archive function.

**Recycle Bin:** Click **Enable** to enable the recycle bin for this share folder.

**Set Quota:** Click the **Set Quota** check box to limit the storage capacity (in megabyte) for the share folder. The value of 0 means an unlimited quota size.

Click **Next** to continue.

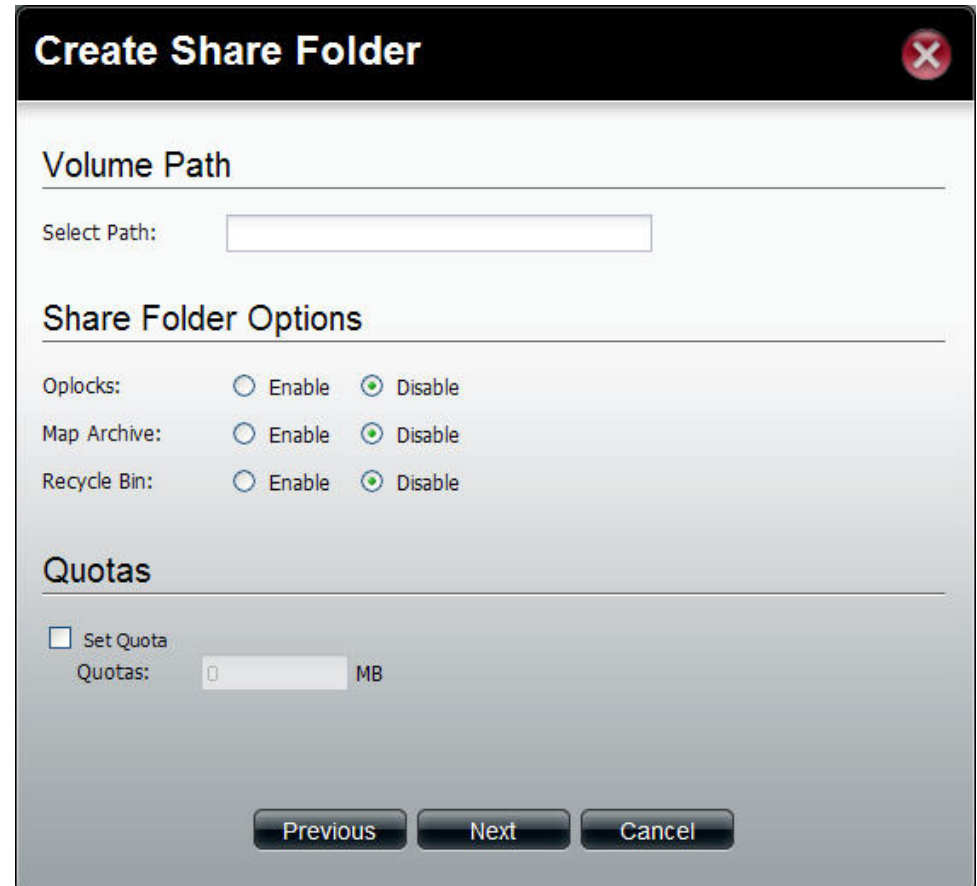

The image shows a 'Create Share Folder' dialog box with a dark title bar and a close button. It is divided into three sections: 'Volume Path', 'Share Folder Options', and 'Quotas'. The 'Volume Path' section has a 'Select Path:' label and an empty text field. The 'Share Folder Options' section contains three rows of radio buttons: 'Oplocks:', 'Map Archive:', and 'Recycle Bin:'. Each row has 'Enable' and 'Disable' options, with 'Disable' being selected in all three. The 'Quotas' section has a 'Set Quota' checkbox (which is unchecked) and a 'Quotas:' label followed by a text field containing '0' and the unit 'MB'. At the bottom, there are three buttons: 'Previous', 'Next', and 'Cancel'.

**Create Share Folder**

**Volume Path**

Select Path:

**Share Folder Options**

Oplocks: ☐ Enable ☒ Disable

Map Archive: ☐ Enable ☒ Disable

Recycle Bin: ☐ Enable ☒ Disable

**Quotas**

☐ Set Quota

Quotas:  MB


Previous Next Cancel

This window assigns the access rights of this folder.

**All Users:** Click the radio button to grant all the users the same access right to the folder.

**Specific User:** Click the check box to grant access rights to the specific users.

Click **Next** to continue.

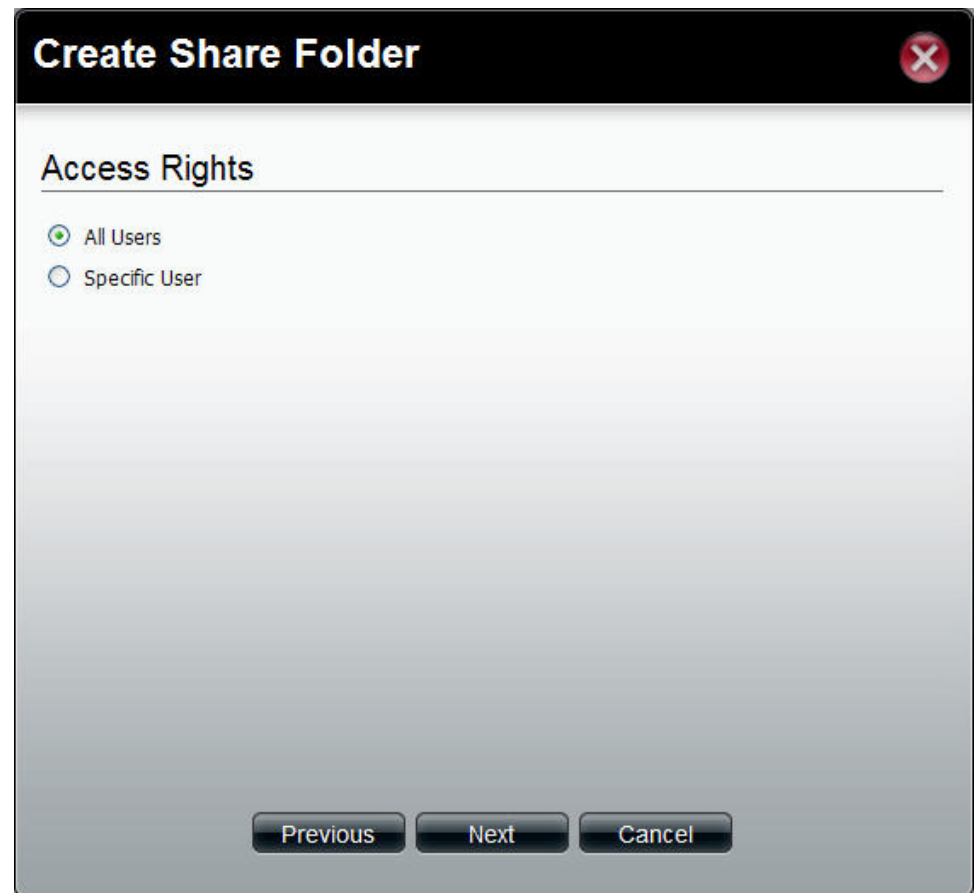


If **All Users** is selected in the previous window, this window appears.

**Read Only:** Click the check box for read only access right.

**Read/Write:** Click the check box for both read and write access rights.



**Deny:** Click the check box for no access right.

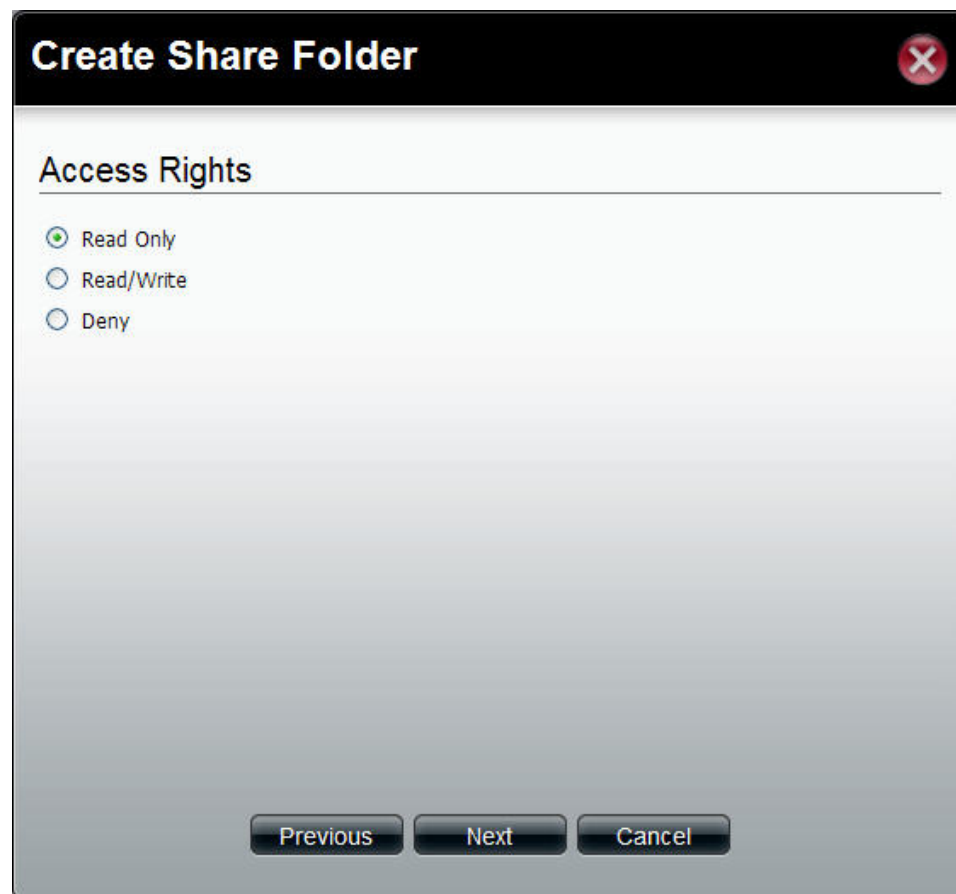Click **Next** to continue.



If **Specific User** is selected in the previous window, this window appears.





**Local User / Local Group:** Use the drop-down menu to toggle between Local User and Local Group.

**Search:** Enter the search keyword and click  to search for the folder. Click  to clear the search field and all folders' information appears

**Read Only:** Click the check box for read only access right.

**Read/Write:** Click the check box for both read and write access rights.

**Deny:** Click the check box for no access right.

**Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page () , Previous Page () , Next Page () or Last page () to search for the group.

**Refresh:** Click  to update the group list.

Click **Next** to continue.

Create Share Folder

Permission

Local User

Search

User Name	Read Only	Read/Write	Deny
Users	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
UserName	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
UserName01	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
UserBatch0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
UserBatch1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
UserBatch2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Page 1 of 1

Displaying 1 - 6 of 6

Previous


Next

Cancel

This window displays a summary of the configured information.


Click **Previous** to modify the settings.

Click **Apply** to save the settings.

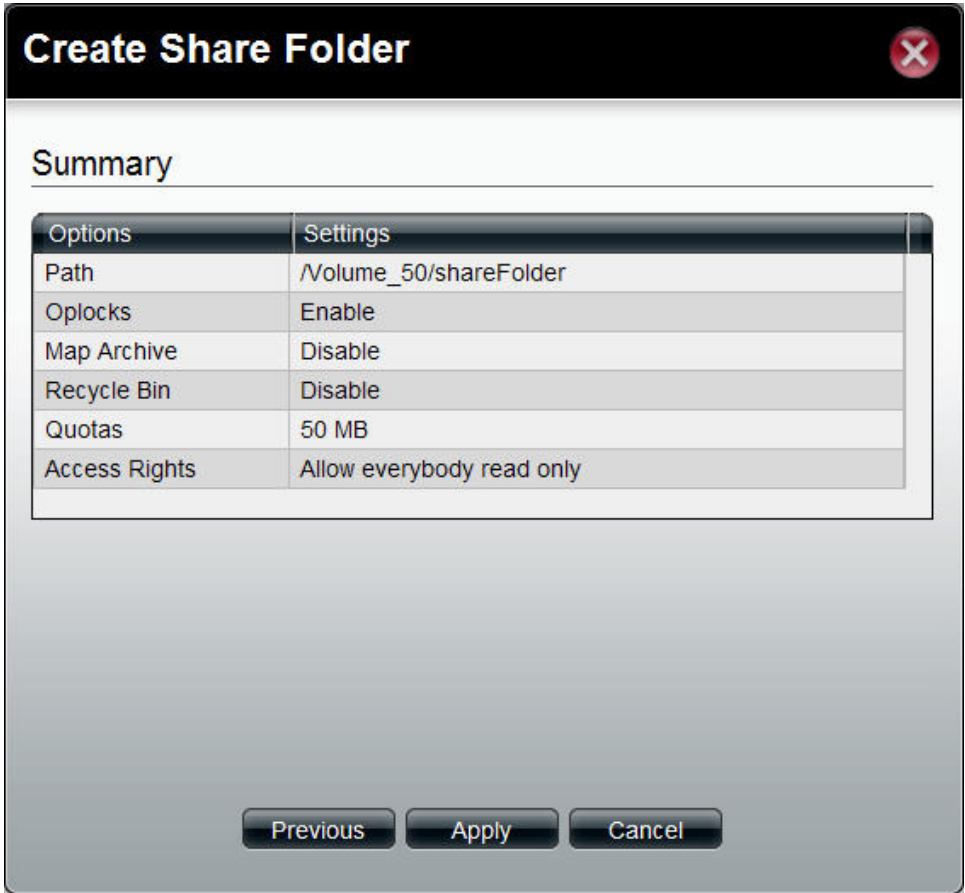

# System Management

This folder contains the Network, Time and Date, System Settings, Power Management, Email Alerts, Firmware Upgrade, and Logs. Click the folder to see the subcategories.

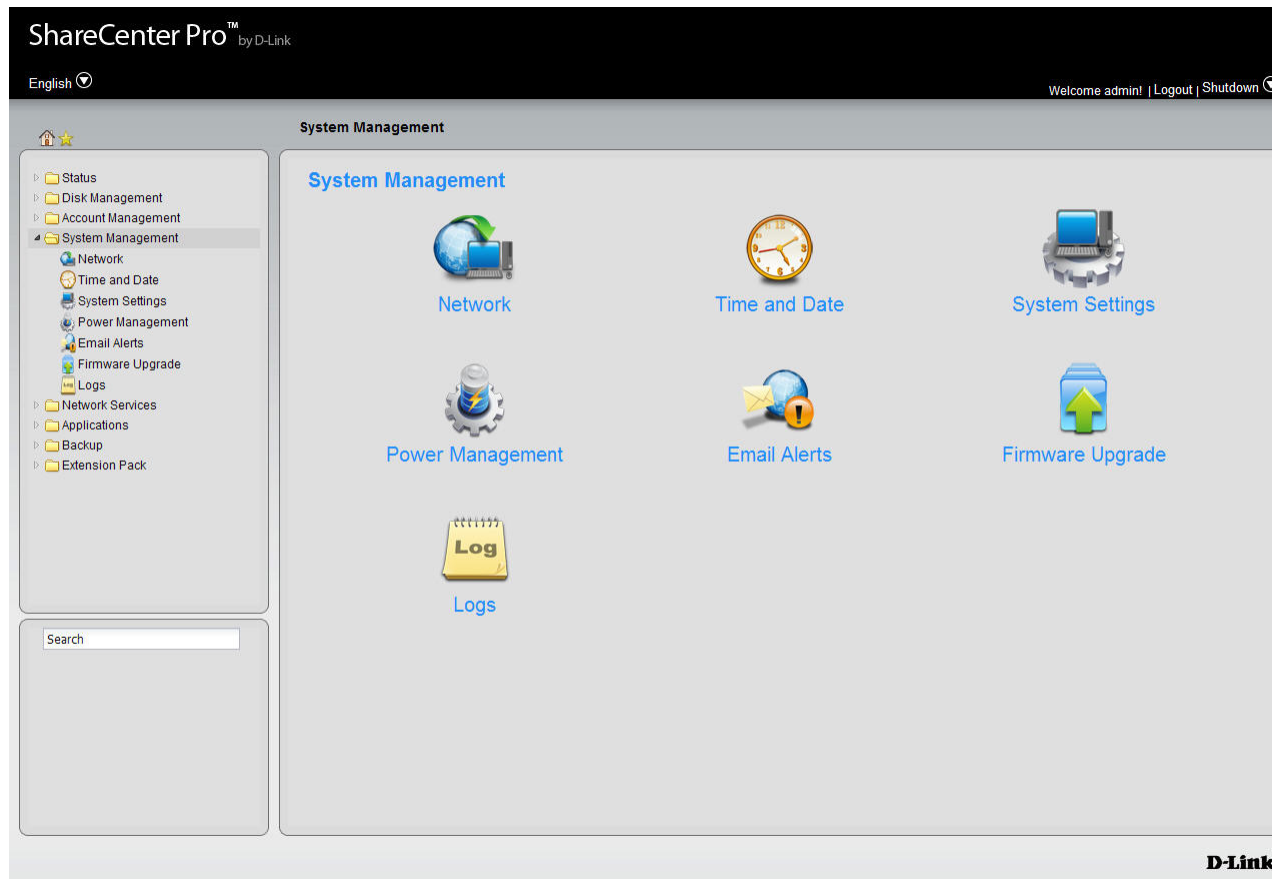

# Network

Click the **Network** icon in the System Management window or the Network link in the left window to configure the Network.

## LAN 1

Click the **LAN 1** tab to see the following window.

**DHCP Client:** Click the radio button to obtain the IP address from a DHCP server.

**Static IP:** Click the radio button to assign a static IP address to the ShareCenter.

**IP Address:** Enter a static IP address.

**Subnet Mask:** Enter the subnet mask for the IP address.

**Jumbo Frame:** Use the drop-down menu to select the larger frame size than standard Ethernet frame size.

**Gateway:** Enter the gateway IP address for the ShareCenter.

**VLAN:** Enable or disable the VLAN.

**VLAN ID:** Enter a VLAN ID when VLAN is enabled.

**Port Bonding:** Enable or disable port bonding which is also known as port trunking.

**Option:** Use the drop-down menu to select the port bonding method. Available methods are Round Robin, Active Backup, XOR, Broadcast, 802.3ad, Adaptive Transmit Load Balancing, and Adaptive Load Balancing.

The screenshot shows the LAN 1 configuration window. The 'Static IP' radio button is selected. The IP Address is 192.168.0.32, Subnet Mask is 255.255.255.0, Jumbo Frame is set to Disabled, and the Gateway is 192.168.0.1. In the VLAN section, the 'Disable' radio button is selected and the VLAN ID is 0. In the Port Bonding section, the 'Disable' radio button is selected and the Option is Round Robin. The window has 'Apply' and 'Cancel' buttons at the bottom.

Click **Apply** to save the settings.



## LAN 2

Click the **LAN 2** tab to see the following window.

**DHCP Client:** Click the radio button to obtain the IP address from a DHCP server.

**Static IP:** Click the radio button to assign a static IP address to the ShareCenter.

**IP Address:** Enter a static IP address.

**Subnet Mask:** Enter the subnet mask for the IP address.

**Jumbo Frame:** Use the drop-down menu to select the larger frame size than standard Ethernet frame size.

**Gateway:** Enter the gateway IP address for the ShareCenter.

**VLAN:** Enable or disable the VLAN.

**VLAN ID:** Enter a VLAN ID when VLAN is enabled.

The screenshot shows the 'LAN 2' configuration window. At the top, there are tabs: 'LAN 1', 'LAN 2' (selected), 'Global Settings', and 'Route'. The window is divided into two main sections: 'LAN 2' and 'VLAN'. In the 'LAN 2' section, there are two radio buttons: 'DHCP Client' (selected) and 'Static IP'. Below these are four input fields: 'IP Address' (192.168.1.32), 'Subnet Mask' (255.255.0.0), 'Jumbo Frame' (a dropdown menu showing 'Disabled'), and 'Gateway' (192.168.1.1). In the 'VLAN' section, there are two radio buttons: 'VLAN' (disabled) and 'Enable'. Below these is a 'VLAN ID' input field with the value '0'. At the bottom right of the window are 'Apply' and 'Cancel' buttons.


Click **Apply** to save the settings.

## Global Settings

Click the **Global Settings** tab to see the following window.

- Host Name:** Enter the name of the ShareCenter.
- Primary DNS:** Enter the main DNS address for the ShareCenter.
- Secondary DNS:** Enter the secondary DNS address for the ShareCenter.
- Gateway:** Use the drop-down menu to select the LAN interface.

Click **Apply** to save the settings.

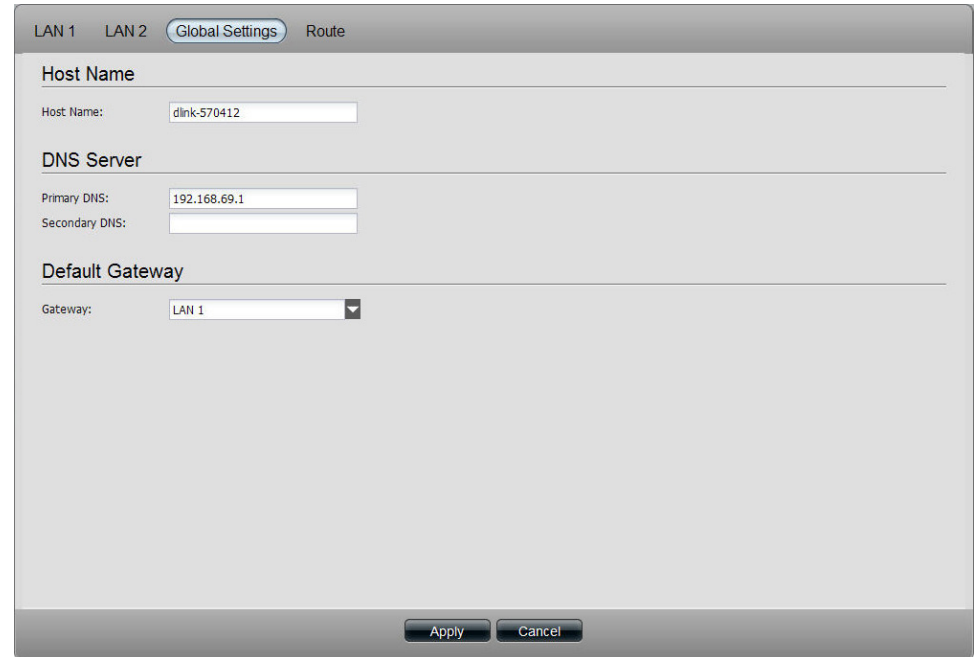

The image shows a web-based configuration window titled "Global Settings". At the top, there are four tabs: "LAN 1", "LAN 2", "Global Settings" (which is selected and highlighted), and "Route". The main content area is divided into three sections:

- Host Name:** A text input field containing "dlink-570412".
- DNS Server:** Two text input fields. The "Primary DNS:" field contains "192.168.69.1", and the "Secondary DNS:" field is empty.
- Default Gateway:** A drop-down menu labeled "Gateway:" with "LAN 1" selected.

At the bottom right of the window, there are two buttons: "Apply" and "Cancel".

## Route

Click the **Route** tab to see the following window.


**Create:** Click to create a new routing path.

**Edit:** Select a routing path and click the button to edit the routing path.

**Delete:** Select a routing path and click the button to remove the entry from the list.

**Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page (◀), Previous Page (◀), Next Page (▶) or Last page (▶) to search for the group.

**Refresh:** Click  to update the group list.

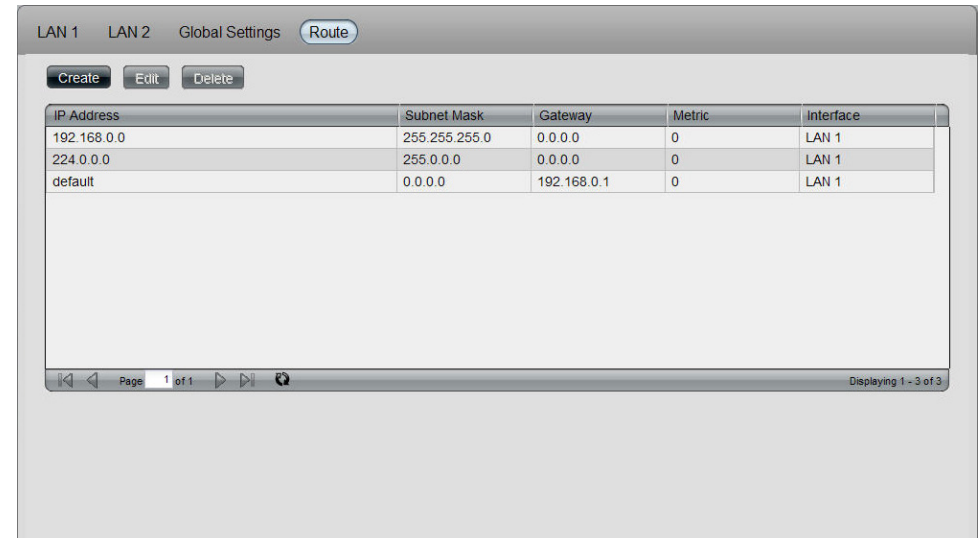

The screenshot shows the 'Route' tab in a configuration window. At the top, there are tabs for 'LAN 1', 'LAN 2', 'Global Settings', and 'Route'. Below the tabs are buttons for 'Create', 'Edit', and 'Delete'. A table lists routing entries with columns for IP Address, Subnet Mask, Gateway, Metric, and Interface. The table contains three entries: 192.168.0.0 with subnet mask 255.255.255.0 and gateway 0.0.0.0; 224.0.0.0 with subnet mask 255.0.0.0 and gateway 0.0.0.0; and a default route with subnet mask 0.0.0.0 and gateway 192.168.0.1. All metrics are 0 and all interfaces are LAN 1. At the bottom, there is a pagination bar showing 'Page 1 of 1' and 'Displaying 1 - 3 of 3'.

IP Address	Subnet Mask	Gateway	Metric	Interface
192.168.0.0	255.255.255.0	0.0.0.0	0	LAN 1
224.0.0.0	255.0.0.0	0.0.0.0	0	LAN 1
default	0.0.0.0	192.168.0.1	0	LAN 1

Click the **Create** button under the Route tab to see the window.


**Network Address:** Enter an IP address of the routing path.

**Subnet Mask:** Enter the subnet mask for the IP address.

**Metric:** Enter an integer cost metric for the route.

**Interface:** Use the drop-down menu to select the interface.

**Gateway:** Enter the forwarding or next hop IP address.

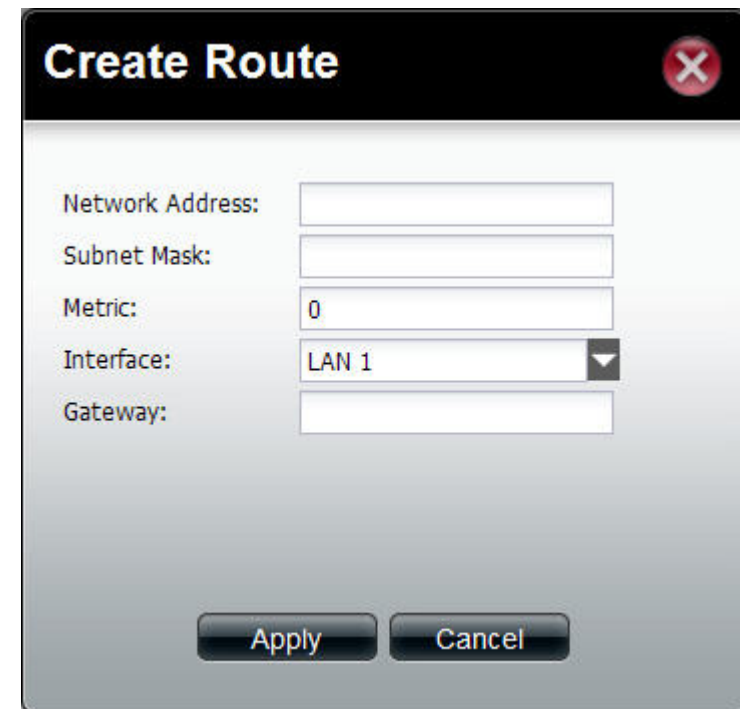

The screenshot shows the 'Create Route' dialog box. It has a title bar with a close button (X). The dialog contains five input fields: 'Network Address', 'Subnet Mask', 'Metric' (with a value of 0), 'Interface' (a drop-down menu showing 'LAN 1'), and 'Gateway'. At the bottom, there are 'Apply' and 'Cancel' buttons.

Click **Apply** to save the settings.

## Time and Date

Click the **Time and Date** icon in the System Management window or the Time and Date link in the left window to configure the time and date of the ShareCenter.

**Current Time:** Displays the current time of the ShareCenter.


**Time Zone:** Use the drop-down menu to select the time zone of your area.

**Set from Computer:** Click the radio button to synchronize the ShareCenter's time with your computer.

**Set Manually:** Click the radio button to set the time and date manually.

**Set from NTP Server:** Click the radio button and select a NTP server to synchronize the ShareCenter's time with the NTP server.

Click **Apply** to save the settings.

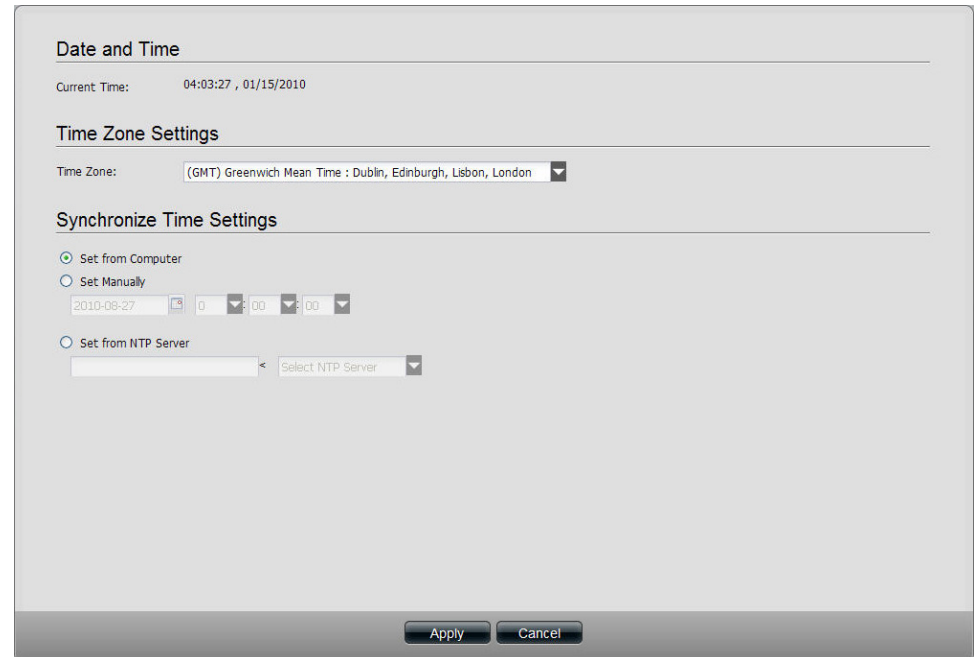

The screenshot shows the 'Date and Time' configuration window. At the top, it displays 'Current Time: 04:03:27 , 01/15/2010'. Below this is the 'Time Zone Settings' section with a dropdown menu currently set to '(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London'. The 'Synchronize Time Settings' section has three radio buttons: 'Set from Computer' (which is selected), 'Set Manually', and 'Set from NTP Server'. Under 'Set Manually', there are input fields for date (2010-08-27) and time (00:00). Under 'Set from NTP Server', there is a dropdown menu labeled 'Select NTP Server'. At the bottom right, there are 'Apply' and 'Cancel' buttons.

## System Settings

Click the **System Settings** icon in the System Management window or the System Settings link in the left window to configure the system settings.


**Save Configuration:** Click the **Save** button to save the current settings to the selected location.

**Load Configuration:** Click the **Browse** button to locate the path for the configuration file and click **Load** to load the file.

**Default Configuration:** Click **Restore** to reset the ShareCenter back to the factory default settings.

**Web Timeout:** Enter a period of time. If the web is idle longer than the time, it will be automatically logged out.

**System Overheat Temperature:** Toggle between Celsius and Fahrenheit and enter a temperature. Once the system temperature is over the entered temperature, the ShareCenter will automatically shut down.

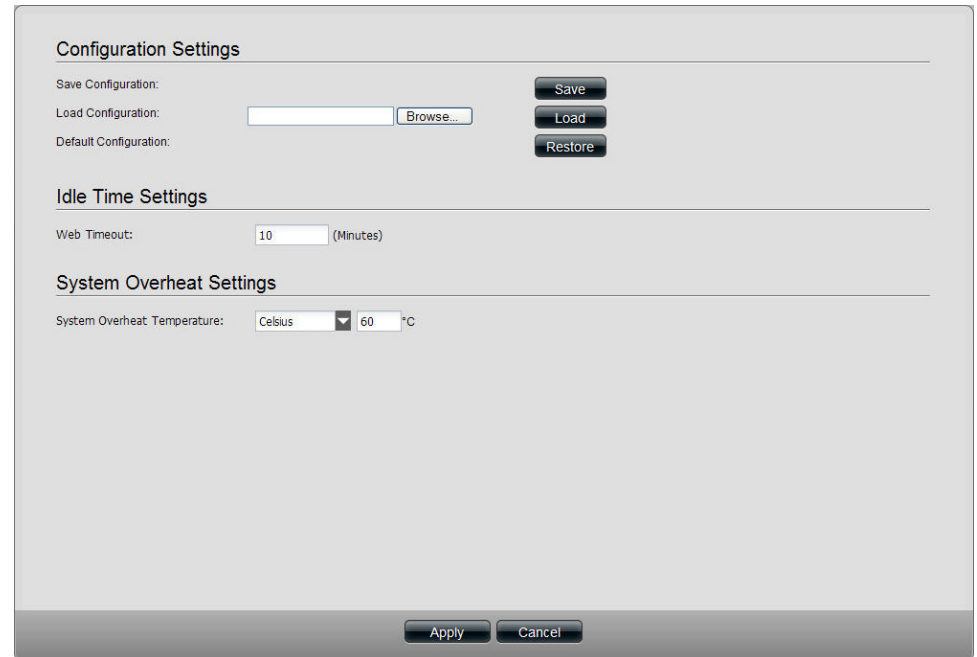

The screenshot shows the 'Configuration Settings' window. It has a title bar 'Configuration Settings'. Below the title bar, there are three sections: 'Save Configuration:', 'Load Configuration:', and 'Default Configuration:'. Each section has a corresponding button: 'Save', 'Load', and 'Restore'. The 'Load Configuration:' section also has a text input field and a 'Browse...' button. Below these sections is the 'Idle Time Settings' section, which has a 'Web Timeout:' label, a text input field with the value '10', and a '(Minutes)' label. Below that is the 'System Overheat Settings' section, which has a 'System Overheat Temperature:' label, a dropdown menu showing 'Celsius', a text input field with the value '60', and a '°C' label. At the bottom of the window, there are two buttons: 'Apply' and 'Cancel'.

Click **Apply** to save the settings.

## Power Management

Click the **Power Management** icon in the System Management window or the Power Management link in the left window to configure the system power settings.

### Power Saving Settings

Click the **Power Saving Settings** tab to see the following window.


**Hard Drive Hibernation:** Click **Enable** to enable the function.

**Turn Off Hard Drive:** Use the drop-down menu to select an idle time, after which the hard drives will enter into hibernation mode.

**OLED Display:** Use the drop-down menu to select an idle time, after which the OLED will be turned off.

**Auto Power Recovery:** Click **Enable** to have the power restored when encountering a power failure.

**Type:** Use the drop-down menu to select the fan speed modes. Available choices are Auto (Off/Low/High), Auto (Low/High) and Manual (Always on High).

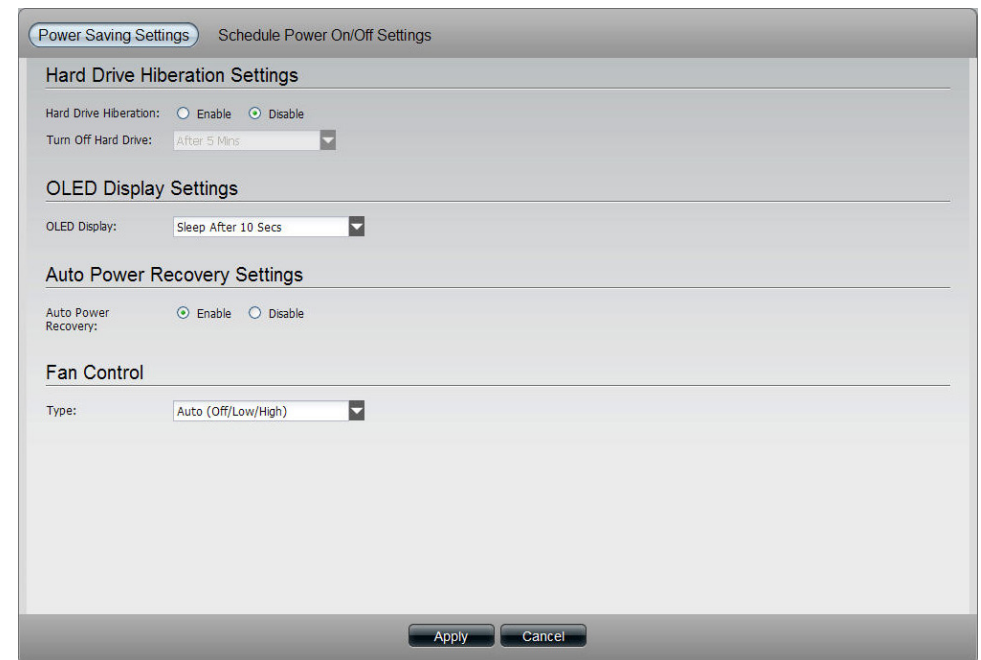

Click **Apply** to save the settings.

## Schedule Power On/Off Settings

Click the **Schedule Power On/Off Settings** tab to see the following window. This function will be deactivated if the schedule is configured at the same time as the firmware update.

**Schedule Power On/Off:** Click **Enable** to set a schedule for automatic system power on and off.

**Schedule On & Schedule Off:** Use the drop-down menus to select the time of system power on and off.

Click **Apply** to save the settings.

The screenshot shows the 'Schedule Power On/Off Settings' window. At the top, there's a tab labeled 'Schedule Power On/Off Settings'. Below the tab, the title is 'Schedule Power On/Off'. Underneath, there are two radio buttons: 'Enable' (selected) and 'Disable'. Below that, there's a section titled 'Schedule On & Schedule Off'. This section contains two columns of settings: 'Schedule On' and 'Schedule Off'. Each column has a table with rows for each day of the week (SUN, MON, TUE, WED, THU, FRI, SAT). Each row has a checkbox, a time selection dropdown (showing '0'), and a '00' value. At the bottom right, there are 'Apply' and 'Cancel' buttons.

	Schedule On			Schedule Off		
SUN:	<input type="checkbox"/>	0	00	<input type="checkbox"/>	0	00
MON:	<input type="checkbox"/>	0	00	<input type="checkbox"/>	0	00
TUE:	<input type="checkbox"/>	0	00	<input type="checkbox"/>	0	00
WED:	<input type="checkbox"/>	0	00	<input type="checkbox"/>	0	00
THU:	<input type="checkbox"/>	0	00	<input type="checkbox"/>	0	00
FRI:	<input type="checkbox"/>	0	00	<input type="checkbox"/>	0	00
SAT:	<input type="checkbox"/>	0	00	<input type="checkbox"/>	0	00

## Email Alerts

Click the **Email Alerts** icon in the System Management window or the Email Alerts link in the left window to configure the Email alert settings.

- Email Alert:** Click the radio buttons to enable or disable the e-mail alert function.
- Login Method:** Use the drop-down menu to select the login method. If the SMTP server requires authentication, select **Login**. If not, select **Anonymous**.
- User Name:** If **Login** is selected in **Login Method**, enter the user name of the e-mail account.
- Password:** If **Login** is selected in **Login Method**, enter the password of the e-mail account.
- Encryption:** Select **SSL/TLS** if the SMTP server requires authentication.
- SMTP Server:** Enter the IP address of the SMTP server.
- Port Number:** Enter the port number of the SMTP server.
- Sender E-mail:** Enter the sender's e-mail address.
- Receiver E-mail:** Enter the e-mail address that the e-mail alert sends to.
- Test E-mail:** Click the **Test E-Mail** button to send a test e-mail.
- Event Alert Settings:** Click the check boxes to select the situation that will cause the e-mail alert to be sent out.

The screenshot shows a configuration window titled "E-Mail Settings" and "Event Alert Settings".

**E-Mail Settings:**

- Email Alert: ☐ Enable ☒ Disable
- Login Method: Anonymous (dropdown menu)
- User Name: (text field)
- Password: (text field)
- Encryption: ☒ SSL/TLS ☐ Disable
- SMTP Server: (text field)
- Port Number: 25 (text field)
- Sender E-mail: (text field)
- Receiver E-mail: (text field)
- Test E-Mail: (button)

**Event Alert Settings:**

- ☐ Administrator's Password Has Been Changed
- ☐ Firmware Has Been Upgraded
- ☐ Network Settings Have Been Changed
- ☐ System Temperature Has Been Exceeded
- ☐ S.M.A.R.T Test Has Finished
- ☐ System Has Rebooted From A Power Failure
- ☐ Volume/Disk Status Has Been Changed
- ☐ Space Status Interval: 00 (Hours) 00 (Minutes)
- ☐ One of The Volumes Is Full

At the bottom, there are "Apply" and "Cancel" buttons.

Click **Apply** to save the settings.




## Firmware Upgrade

Click the **Firmware Upgrade** icon in the System Management window or the Firmware Upgrade link in the left window to update the firmware.

- Current Firmware Version:** Displays the current firmware in the system.
- Firmware Date:** Displays the date of the firmware.
- File Path:** Click the **Browse** button to locate the firmware. You must save the firmware to the local hard drive of your computer before upgrading the firmware.

Click **Apply** to start updating the firmware.

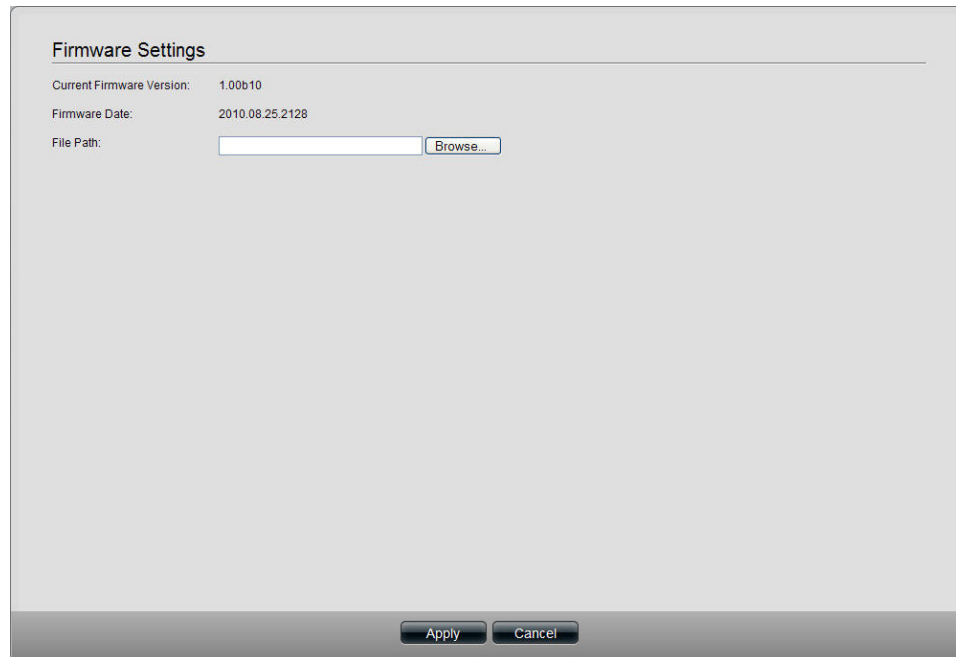A screenshot of a 'Firmware Settings' dialog box. The dialog has a title bar 'Firmware Settings'. Below the title bar, there are three rows of information: 'Current Firmware Version: 1.00b10', 'Firmware Date: 2010.08.25.2128', and 'File Path:'. The 'File Path' row has a text input field and a 'Browse...' button to its right. At the bottom of the dialog, there are two buttons: 'Apply' and 'Cancel'.

## Log Settings


Click the **Log Settings** icon in the System Management window or the Log Settings link in the left window to configure the log settings.

### Log Settings

Click the **Log Settings** tab to see the following window.

**Log Settings:** Click the radio buttons to enable various situations which will be recorded in the logs.

Click **Apply** to save the settings.

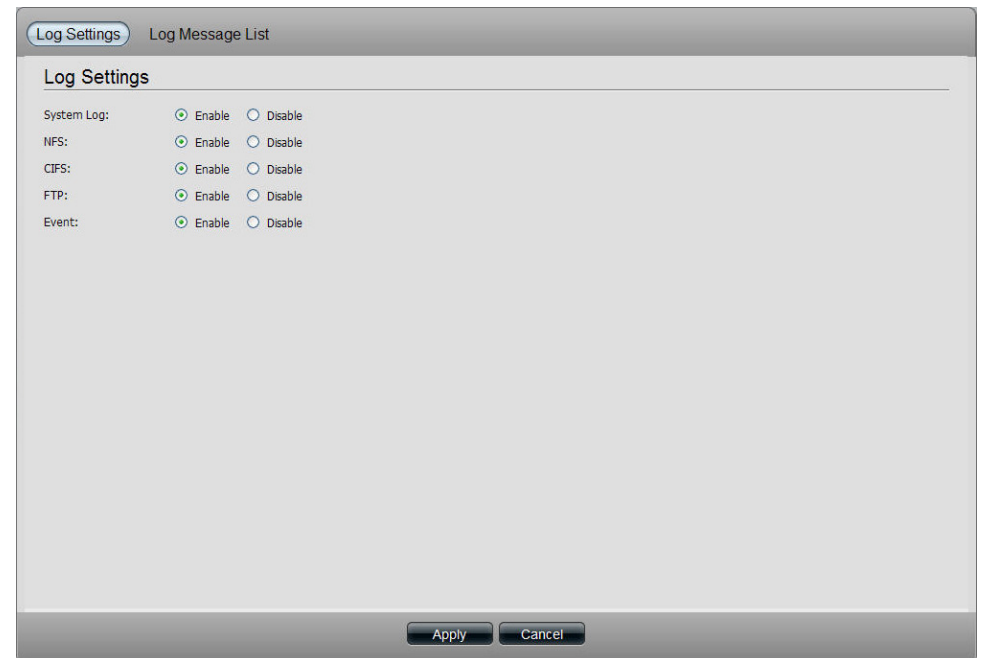

## Log Message List

Click the **Log Message List** tab to see the following window.

**Refresh Log:** Click the button to update the log message list.

**Clear Log:** Click the button to delete all the logs.

**Save Log:** Click the button to save the logs to the local computer.

**Severity:** The numbers below represent different levels of severity.

0: Emergency

1: Critical

2: Alert

3: Error

4: Warning

5: Notice

6: Info


7: Debug

**Date Time:** Displays the time and date for the log.

**Log Message:** Displays detail information about the log.

**Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page (⏪), Previous Page (⏴), Next Page (⏵) or Last page (⏩) to search for the group.


**Refresh:** Click  to update the group list.

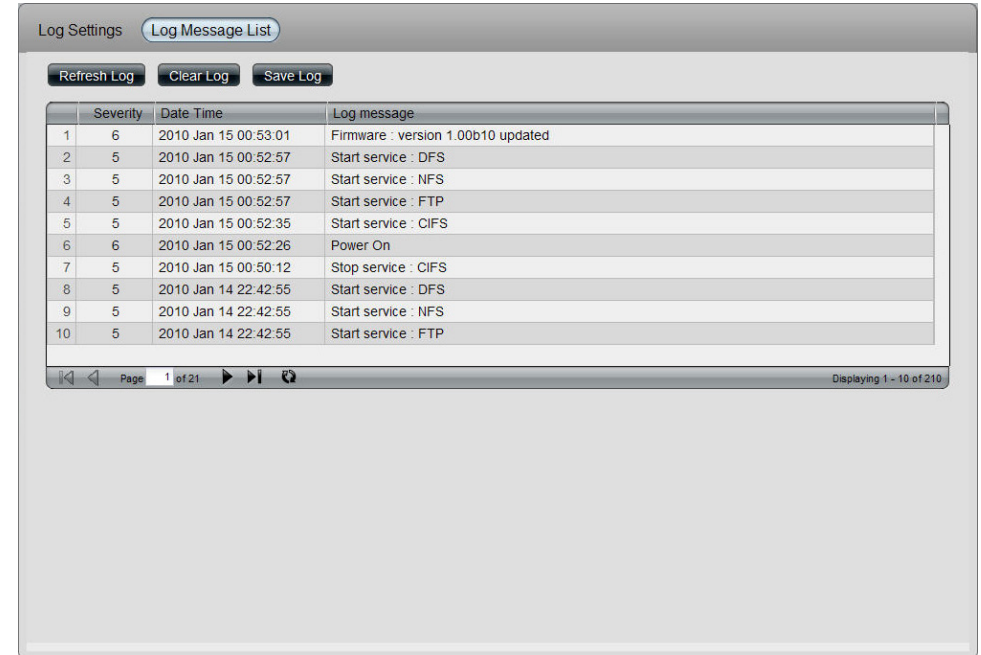

Click **Apply** to save the settings.

# Network Services

This folder contains File Sharing, Dynamic DNS, SNMP and Network Discovery Services. Click the folder to see the subcategories.

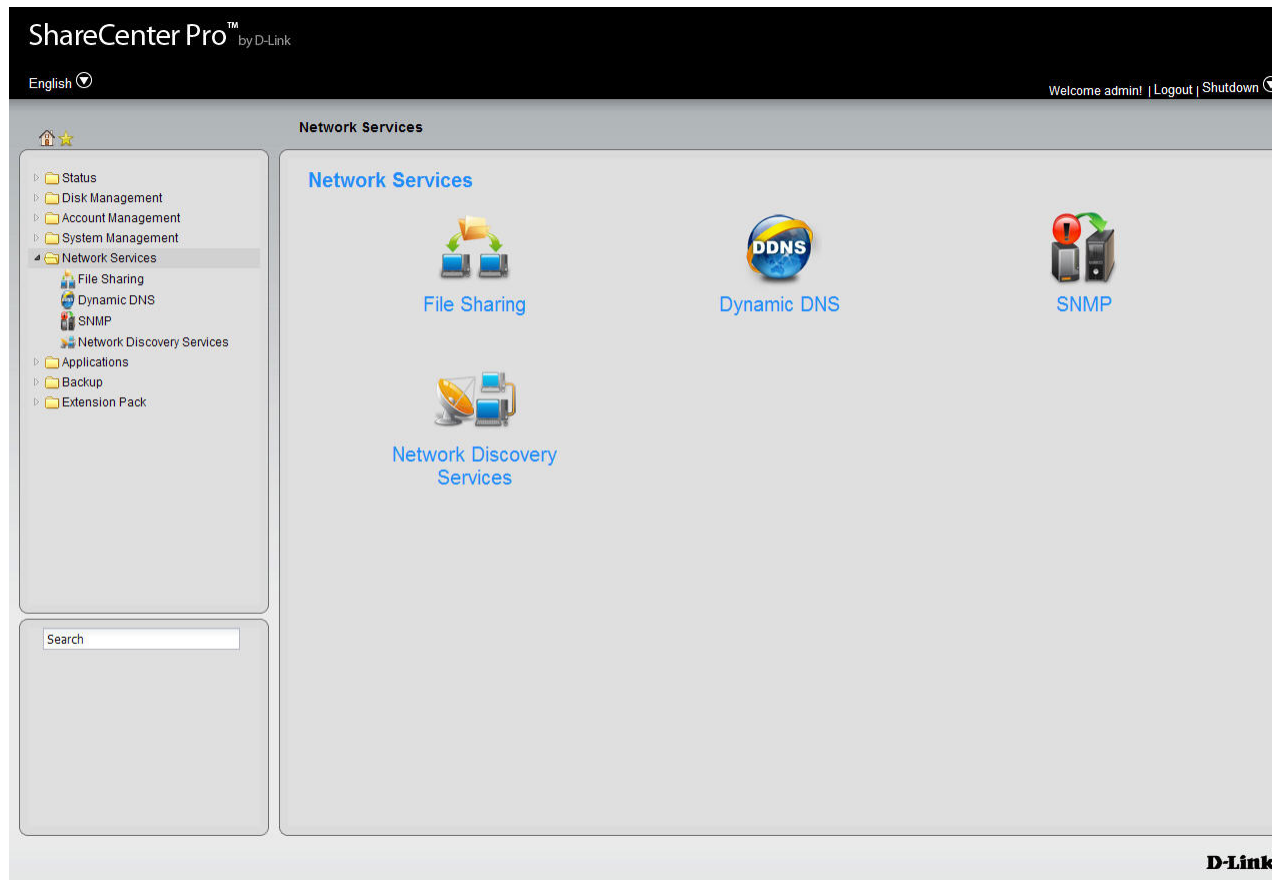

## File Sharing


Click the **File Sharing** icon in the Network Services window or the File Sharing link in the left window to configure the network services.

### File Sharing

Click the **File Sharing** tab to see the following window.

**File Sharing:** Click the radio buttons to enable various network services.

Click **Apply** to save the settings.

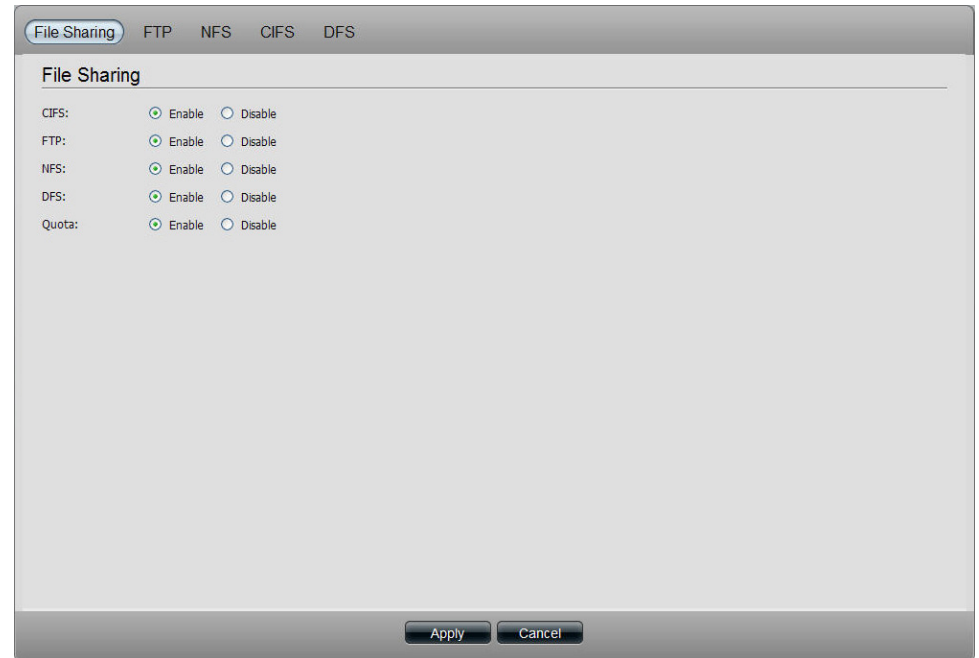

## FTP

Click the **FTP** tab to see the following window.

**Control Port:** The default port for FTP is 21. Enter a port number in the range of 1025 to 3688, 3690 to 49999, and 65501 to 65535.

**Port Range of Passive FTP:** The default port range for passive FTP is from 55536 to 55663. Click the **Use the following port range** radio button and manually enter the port range from 1025 to 65535.

**Respond with external IP address for Passive mode:** Click **Enable** to respond with external IP address for the passive FTP connection request.

**Client Language:** Use the drop-down menu to select the supported language for the FTP clients.

**Max Connections:** Use the drop-down menu to select the maximum number of concurrent FTP connection.

**Max Connections per IP:** Use the drop-down menu to select the maximum number of concurrent FTP per IP connection.

**Connection Idle Time:** Use the drop-down menu to select the time that the FTP server logs out the user after this period of idle time.

**Bandwidth Restriction:** Click **Enable** to restrict the bandwidth of each FTP connection. Enter the number in KB/s for the maximum speed of upload and download.

**Anonymous Support:** Click **Enable** to allow anonymous FTP to log in.

**SSL/TLS Connection Only:** Click **Enable** to only allow SSL or TLS connection requests from the FTP clients.

The screenshot shows the 'File Sharing' configuration window with the 'FTP' tab selected. The window is divided into two main sections: 'Connection Settings' and 'Security Settings'.

**Connection Settings:**

- Control Port:** A text box containing '21'.
- Port range of Passive FTP:** Two radio buttons. The first, 'Use the default port range (55536-55663)', is selected. The second, 'Use the following port range:', has a range of '55536' to '55663' entered in adjacent text boxes.
- Respond with external IP address for Passive mode:** Two radio buttons. 'Enable' is selected, and 'Disable' is unselected.
- External IP address:** A text box.
- Client Language:** A drop-down menu showing 'Unicode'.

**Connection Restrictions:**

- Max Connections:** A drop-down menu showing '64'.
- Max Connections per IP:** A drop-down menu showing '02'.
- Connection Idle Time:** A drop-down menu showing '05' with 'Minutes' indicated to the right.
- Bandwidth restriction:** Two radio buttons. 'Enable' is selected, and 'Disable' is unselected.
- Max upload rate per connection:** A text box with '0' and the label 'KB/s (0 KB/s means unlimited.)'.
- Max download rate per connection:** A text box with '0' and the label 'KB/s (0 KB/s means unlimited.)'.

**Security Settings:**






 

- Anonymous Support:** Two radio buttons. 'Enable' is selected, and 'Disable' is unselected.
- SSL/TLS Connection Only:** Two radio buttons. 'Enable' is unselected, and 'Disable' is selected.


At the bottom right, there are 'Apply' and 'Cancel' buttons.

Click **Apply** to save the settings.



## NFS



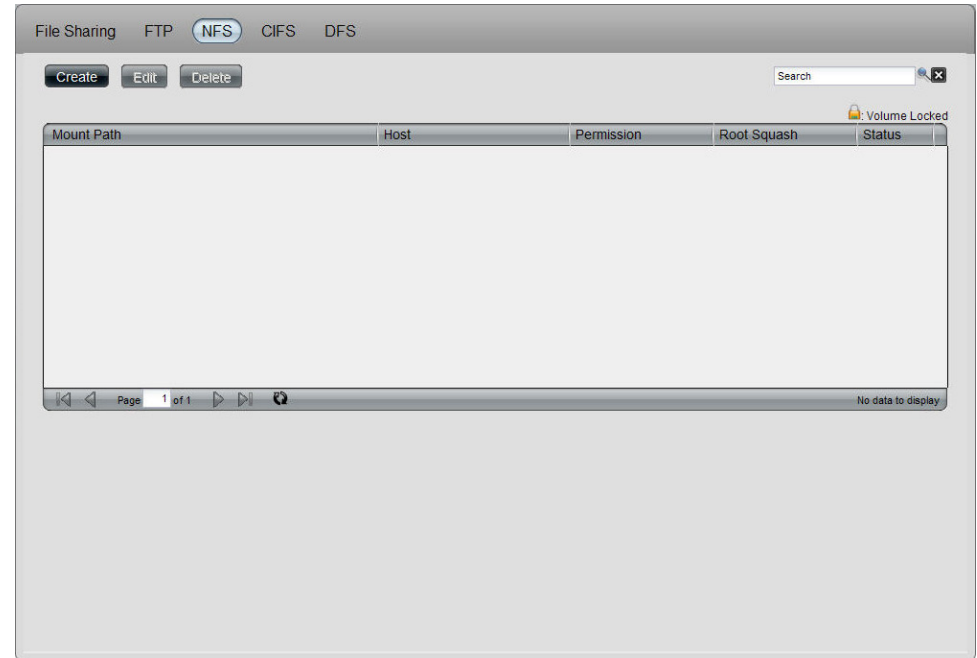

Click the **NFS** tab to see the following window.

- Create:** Click to add a new NFS client.
- Edit:** Select a mount path and click the button to edit the NFS client.
- Delete:** Select amount path and click the button to remove the entry from the list.
- Search:** Enter the search keyword and click  to search for the specific entry. Click  to clear the search field and see all the entries.
- Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page () , Previous Page () , Next Page () or Last page () to search for the group.
- Refresh:** Click  to update the group list.



Click the **Create** button to see this window to select a share folder.

**Search:** Enter the search keyword and click  to search for the specific entry. Click  to clear the search field and see all the entries.

**Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page () , Previous Page () , Next Page () or Last page () to search for the group.

**Refresh:** Click  to update the group list.

Click **Next** to continue.



The "Create NFS Share" window features a title bar with a close button. Below the title bar is the "Share Folder List" section, which includes a search input field with a search icon and a clear icon. A table displays the share folder list with columns for Share Name, Path, and Status. The table contains one entry: "ShareFolder" with the path "/Volume\_50/ShareFolder". At the bottom of the window, there is a pagination bar showing "Page 1 of 1" and a "Displaying 1 - 1 of 1" status. Navigation buttons for "Previous", "Next", and "Cancel" are located at the bottom.

Share Name	Path	Status
ShareFolder	/Volume_50/ShareFolder	



This window is use to configure the permission of the NFS.

**Permission:** Use the drop-down menu to assign NFS access rights, Read or Read/Write.

**Root Squash:** Select **Root Squash** and the system maps requests from uid/gid 0 to the anonymous uid/gid.

**Host:** Enter the host name.

Click **Apply** to save the settings.



The image shows a 'Create NFS Share' dialog box with a title bar containing a close button. The dialog has a section titled 'Permission' with three fields: 'Permission:' with a dropdown menu showing 'Read Only', 'Root Squash:' with a dropdown menu showing 'Root Squash', and 'Host:' with an empty text input field. At the bottom of the dialog are three buttons: 'Previous', 'Apply', and 'Cancel'.

Create NFS Share	
<b>Permission</b>	
Permission:	Read Only
Root Squash:	Root Squash
Host:	
<div>Previous   Apply   Cancel</div>	

## CIFS

Click the **CIFS** tab to see the following window.

**Description:** Enter the description of your device.

**Workgroup:** Click the radio button to choose the system to be in a workgroup. Enter the name of the workgroup in the field.

**Active Directory:** Click the radio button to choose the system to be in an Active Directory (AD).

**User Name:** Enter the AD server account name.

**Password:** Enter the AD server account password.

**DNS:** Enter a DNS IP address to analyze the domain name of the AD server.

**Workgroup:** Enter the name of the workgroup which should be the same as the computers on the network.

**Realm Name:** Enter the AD server domain name.








**AD Server Name** Enter the AD server hostname.


The screenshot shows the CIFS configuration window. The 'Description' field is filled with 'ShareCenter Pro 1200'. Under 'Workgroup Type', the 'Workgroup' radio button is selected, and the 'Workgroup' text field contains 'WORKGROUP'. The 'Active Directory' radio button is unselected. Below it, there are empty text fields for 'User Name', 'Password', 'Workgroup', 'Realm Name', and 'AD Server Name'. The 'DNS' field contains '192.168.69.1'. At the bottom right, there are 'Apply' and 'Cancel' buttons.

Click **Apply** to save the settings.

# DFS

Click the **DFS** tab to see the following window.


- Create:** Click to add a new DFS share.
- Edit:** Select a local share name and click the button to edit the DFS share.
- Delete:** Select a local share name and click the button to remove the entry from the list.
- Search:** Enter the search keyword and click  to search for the DFS share. Click  to clear the search field and see all the entries.
- Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page () , Previous Page () , Next Page () or Last page () to search for the group.
- Refresh:** Click  to update the group list.

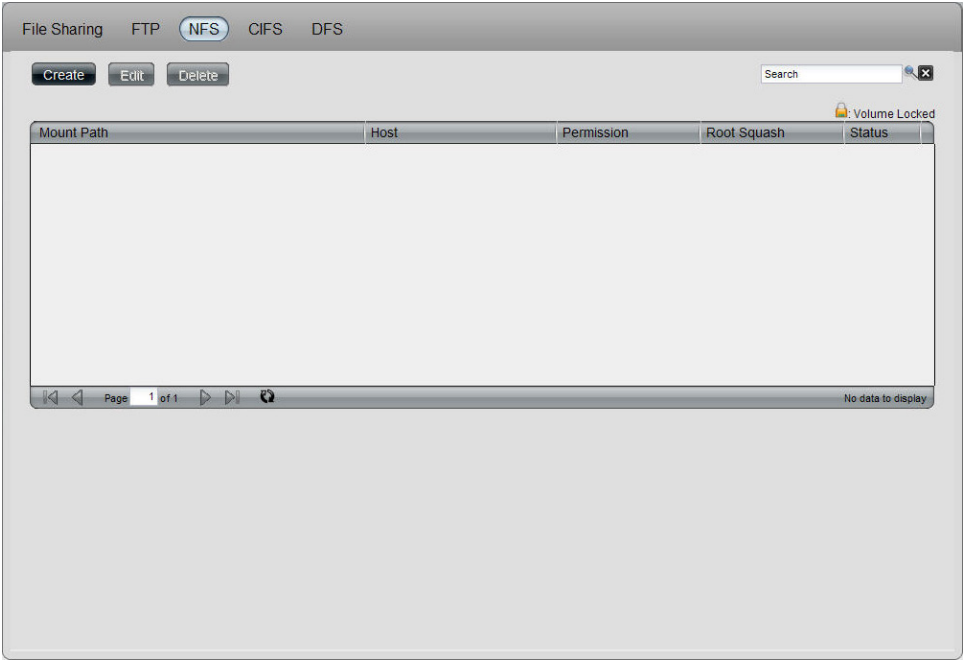

Click the **Create** button to see this window to add a new DFS share.

- Host:** Enter an IP address, a host name or a URL in the field.
- Remote Share Folder:** Enter a remote share folder location manually, or click the **Get Host Share Folder** button to search for one.
- Local Share Name:** Enter the local share name in the field.

Click **Apply** to save the settings.

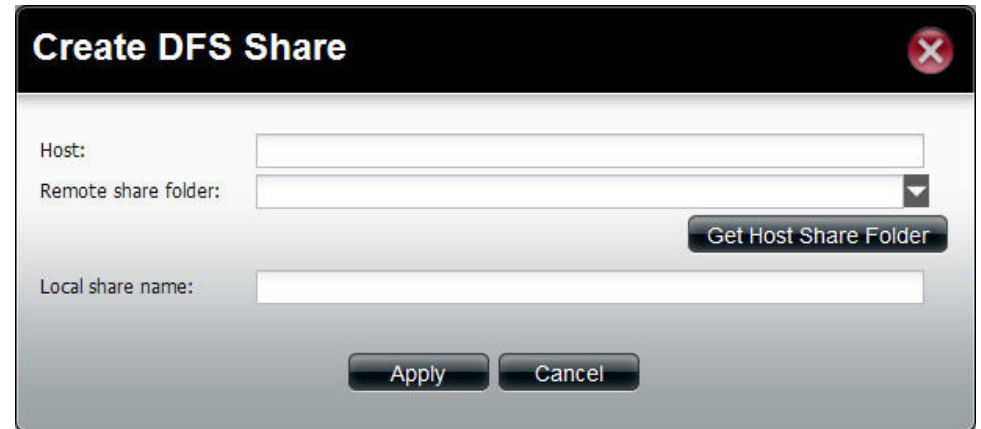

The image shows a 'Create DFS Share' dialog box with a black title bar and a red close button. It contains three input fields: 'Host', 'Remote share folder', and 'Local share name'. The 'Remote share folder' field has a dropdown arrow. A 'Get Host Share Folder' button is positioned to the right of the 'Remote share folder' field. At the bottom, there are 'Apply' and 'Cancel' buttons.

**Create DFS Share**

Host:

Remote share folder:  ▼

**Get Host Share Folder**

Local share name:

**Apply** **Cancel**

## Dynamic DNS

Click the **Dynamic DNS** icon in the Network Services window or the Dynamic DNS link in the left window to configure the dynamic DNS.

**Dynamic DNS:** Click the radio button to enable or disable the dynamic DNS function.

**Server Address:** Use the drop-down menu to select a dynamic DNS service provider.

**Host Name:** Enter the host name.


**Username or Key:** Enter the username or key provided by the dynamic DNS service provider.

**Password or Key:** Enter the password or key provided by the dynamic DNS service provider.

**Verify Password or Key:** Re-type the password or key.

**Timeout:** Enter a time in hours for periodic updates from the dynamic DNS provider.

**Status:** Displays the current status to the server.

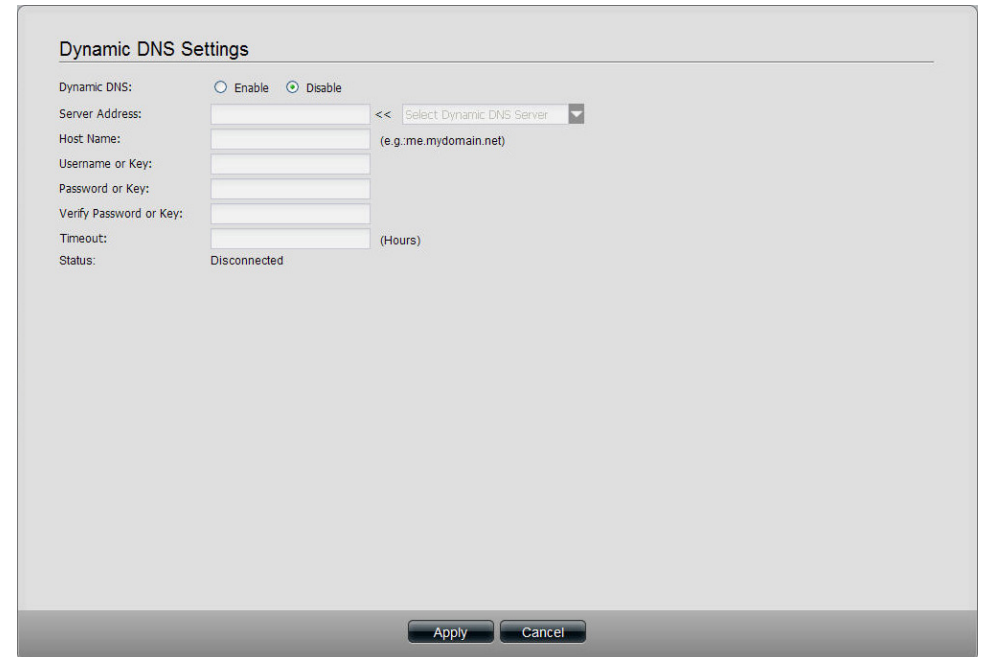

The image shows a 'Dynamic DNS Settings' dialog box. At the top, it has a title bar. Below the title bar, there are two radio buttons: 'Enable' and 'Disable'. The 'Disable' button is selected. Below the radio buttons, there are several input fields: 'Server Address' with a dropdown menu showing '<< Select Dynamic DNS Server', 'Host Name' with a text box containing '(e.g.:me.mydomain.net)', 'Username or Key' with a text box, 'Password or Key' with a text box, 'Verify Password or Key' with a text box, and 'Timeout' with a text box containing '(Hours)'. Below these fields, there is a 'Status' label with the text 'Disconnected'. At the bottom of the dialog box, there are two buttons: 'Apply' and 'Cancel'.

Click **Apply** to save the settings.

## SNMP

Click the **SNMP** icon in the Network Services window or the SNMP link in the left window to configure the SNMP settings. Simple Network Management Protocol (SNMP) is used to monitor the conditions of the network-attached devices.


**SNMP:** **Enable** or **Disable** SNMP.

**SNMP Community:** Enter the name of the SNMP community.

**Notification:** **Enable** or **Disable** trap support.

**Notification IP:** Enter the IP address that will receive the notification.

Click **Apply** to save the settings.

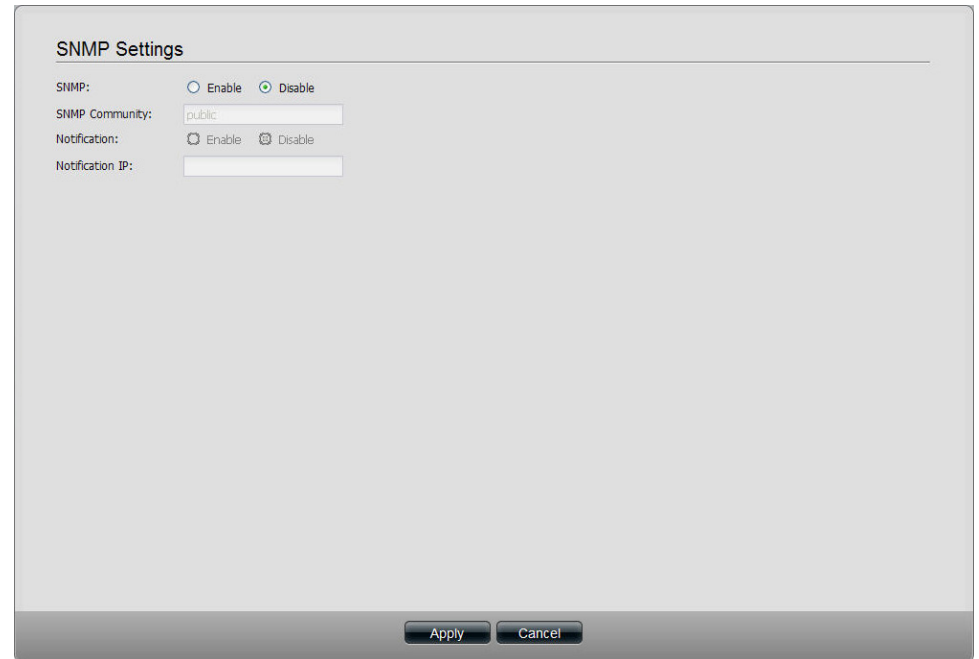

The image shows a screenshot of the 'SNMP Settings' window. The window has a title bar 'SNMP Settings'. Inside, there are four configuration items: 'SNMP:' with radio buttons for 'Enable' and 'Disable' (the 'Disable' button is selected); 'SNMP Community:' with a text input field containing the word 'public'; 'Notification:' with radio buttons for 'Enable' and 'Disable' (the 'Disable' button is selected); and 'Notification IP:' with an empty text input field. At the bottom right of the window, there are two buttons: 'Apply' and 'Cancel'.


## Network Discovery Services

Click the **Network Discovery Services** icon in the Network Services window or the Network Discovery Services link in the left window to configure the settings.

**UPnP Discovery:** Click **Enable** to allow the ShareCenter to be discovered on a network via the UPnP discovery protocol.


**LLTD:** Click **Enable** to allow the ShareCenter to be discovered by the network map under Windows Vista® or Windows® 7.

Click **Apply** to save the settings.

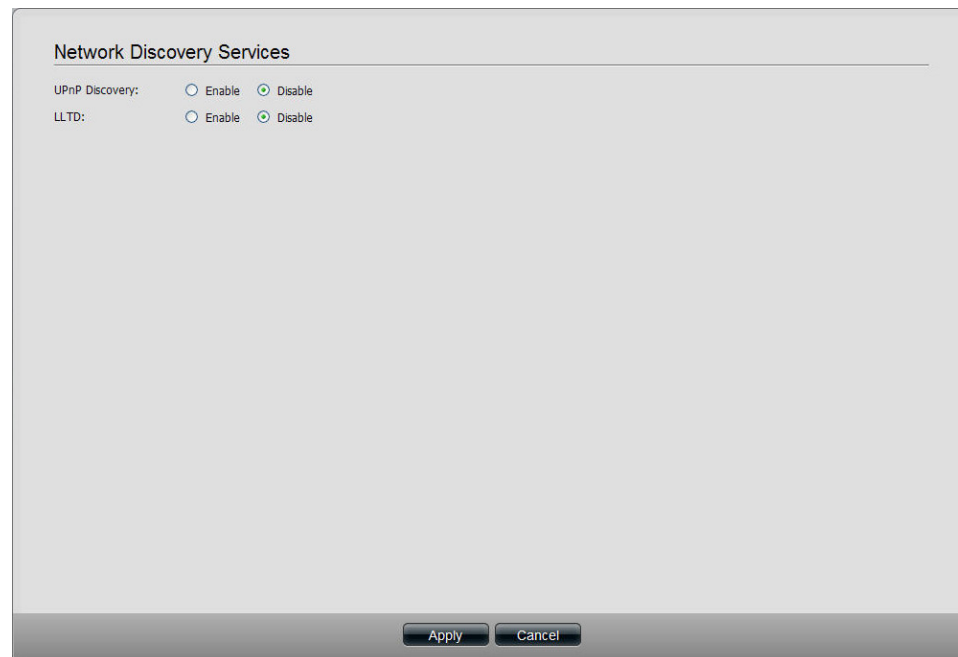

# Applications

This folder contains the Web File Manager and Download Manager. Click the folder to see the subcategories.

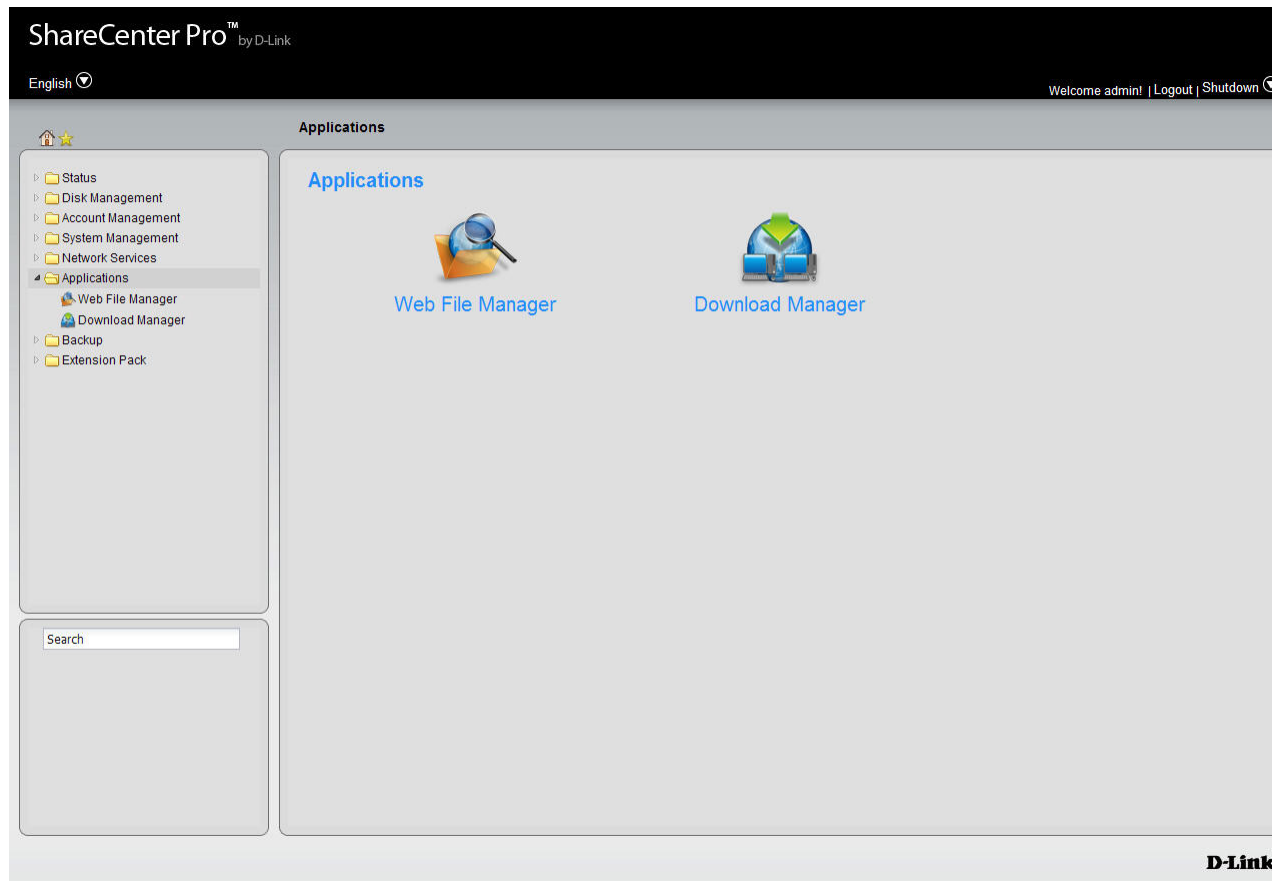



## Web File Manager

Click the **Web File Manager** icon in the Applications window or the Web File Manager link in the left window to configure the settings. This window is used to start a web server for users to upload and download files through the web browser.


**Server:** Click the radio buttons to enable or disable the server.

**HTTP Port:** Enter the port number for the function. Port 80 cannot be used as it is used for administration purposes.

**SSL Connection:** Click the radio buttons to enable or disable the HTTPS connection.

**SSL Port:** Enter the port number for the HTTPS connection.


Click **Apply** to save the settings.

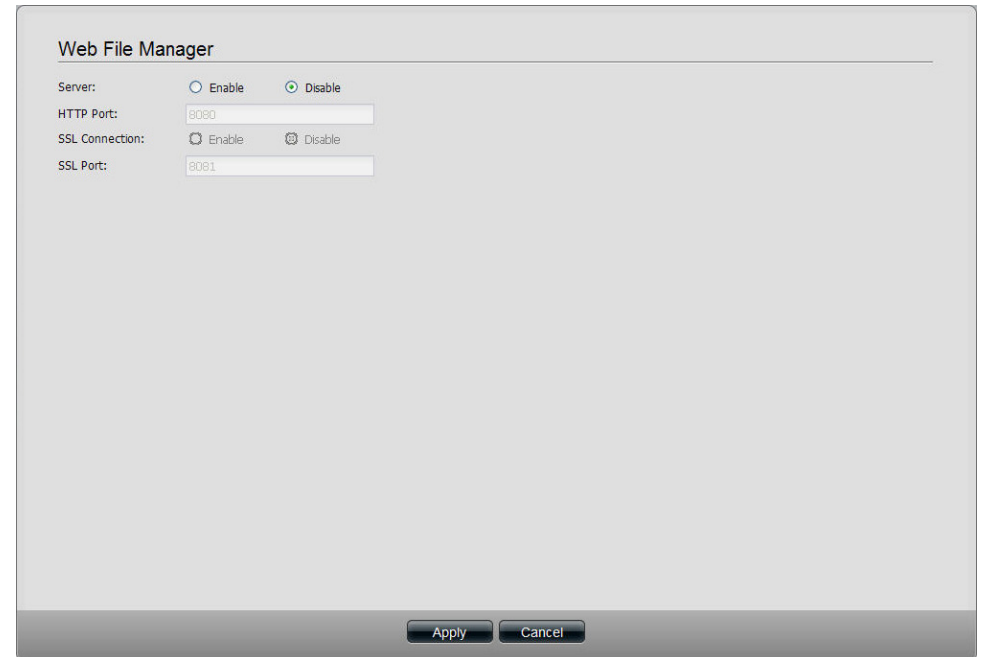


The image shows a 'Web File Manager' configuration window. It has a title bar with the text 'Web File Manager'. Below the title bar, there are four settings: 'Server:' with radio buttons for 'Enable' and 'Disable' (where 'Disable' is selected); 'HTTP Port:' with a text box containing '8080'; 'SSL Connection:' with radio buttons for 'Enable' and 'Disable' (where 'Disable' is selected); and 'SSL Port:' with a text box containing '8081'. At the bottom right of the window, there are two buttons: 'Apply' and 'Cancel'.

# Download Manager

Click the **Download Manager** icon in the Applications window or the Download Manager link in the left window to configure the settings. This window is used to schedule downloading files from FTP or HTTP sites.

- Create:** Click to add a new download job.
- Edit:** Select an entry and click the button to edit.
- Delete:** Select an entry and click the button to remove the entry from the list.
- Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page (◀), Previous Page (◀), Next Page (▶) or Last page (▶) to search for the group.
- Refresh:** Click  to update the group list.

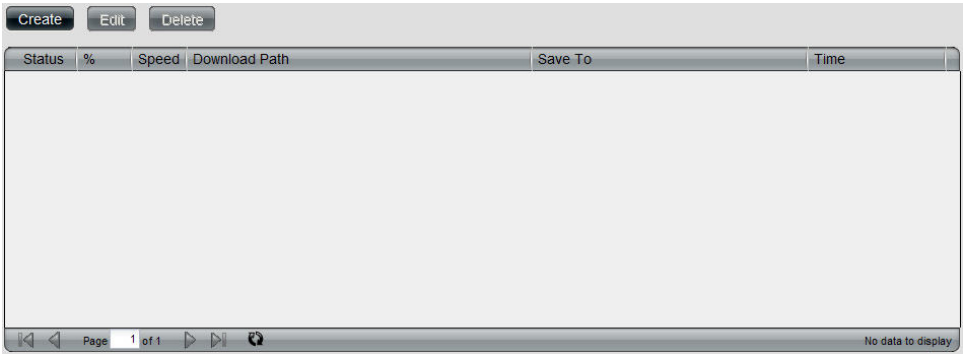

## Create a Downloading Job

Click the **Create** button to see the window.

**Download Type:** Toggle between the FTP or HTTP download methods.

**Login Method:** Click the **Account** radio button when a password is required for downloading files. Click the **Anonymous** where there is no password required for downloading files.


**User Name:** Enter a user name for downloading.

**Password:** Enter a password for downloading.

**Type:** Toggle between File or Folder to download the specific file or all files in a specific folder.

**URL:** Enter the FTP, HTTP or local site address for the scheduled download. Click the **Test** button to see if the URL can be connected.

**Save To:** Click the field to show the available folders. Click the **Create** button to add a new folder. Double click a folder to select it.

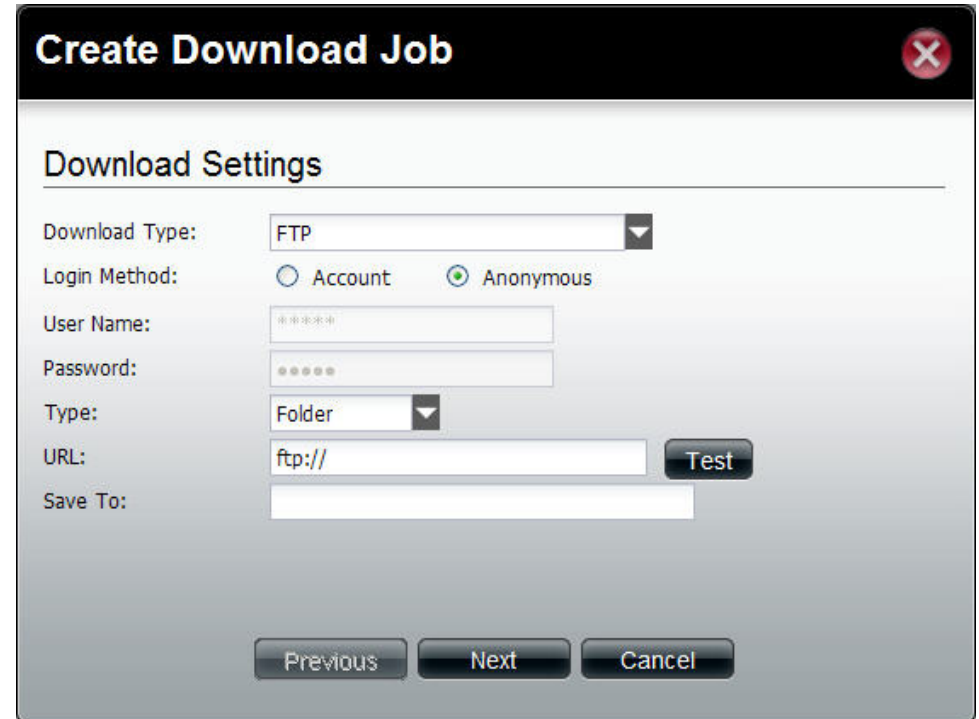

The screenshot shows a dialog box titled "Create Download Job" with a close button (X) in the top right corner. The dialog contains a section titled "Download Settings" with the following fields and controls:


- Download Type:** A dropdown menu currently set to "FTP".
- Login Method:** Two radio buttons: "Account" (unselected) and "Anonymous" (selected).
- User Name:** A text input field with a masked password "\*\*\*\*\*".
- Password:** A text input field with a masked password "\*\*\*\*\*".
- Type:** A dropdown menu currently set to "Folder".
- URL:** A text input field containing "ftp://". To its right is a "Test" button.
- Save To:** An empty text input field.

At the bottom of the dialog, there are three buttons: "Previous", "Next", and "Cancel".

Click **Next** to continue.

This window is used to set the schedule for downloading.

**Recurring Download:** Use the drop-down menu to have repeated scheduled download time every day, week or month. Select **None** to disable the recurring download.


**When:** Click  to select year and date for downloading.

**Time:** Use the drop-down menu to select downloading time.

**Weekly:** Select a day of the week for recurring download.

**Monthly:** Select the month for recurring download.

Click **Apply** to save the settings.

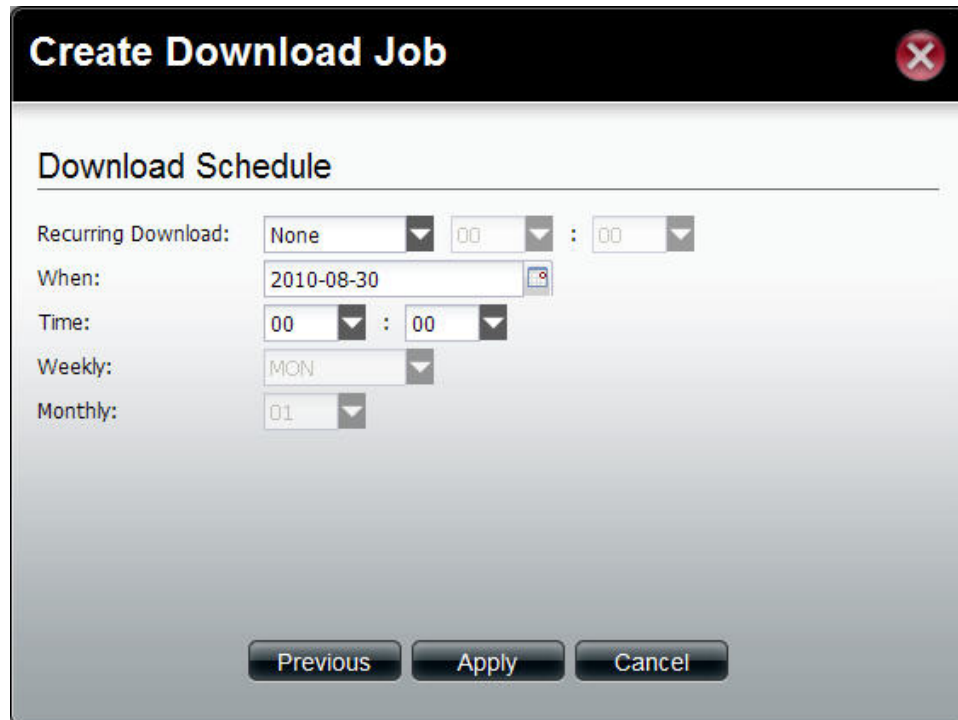


The image shows a 'Create Download Job' dialog box with a 'Download Schedule' section. The 'Recurring Download' is set to 'None'. The 'When' field shows '2010-08-30' with a calendar icon. The 'Time' is set to '00 : 00'. The 'Weekly' field is set to 'MON' and the 'Monthly' field is set to '01'. At the bottom are 'Previous', 'Apply', and 'Cancel' buttons.

Field	Value
Recurring Download:	None
When:	2010-08-30
Time:	00 : 00
Weekly:	MON
Monthly:	01

# Backup


This folder contains the Volume Snapshot, Local Backup, Remote Backup, and External Backup. Click the folder to see the subcategories.

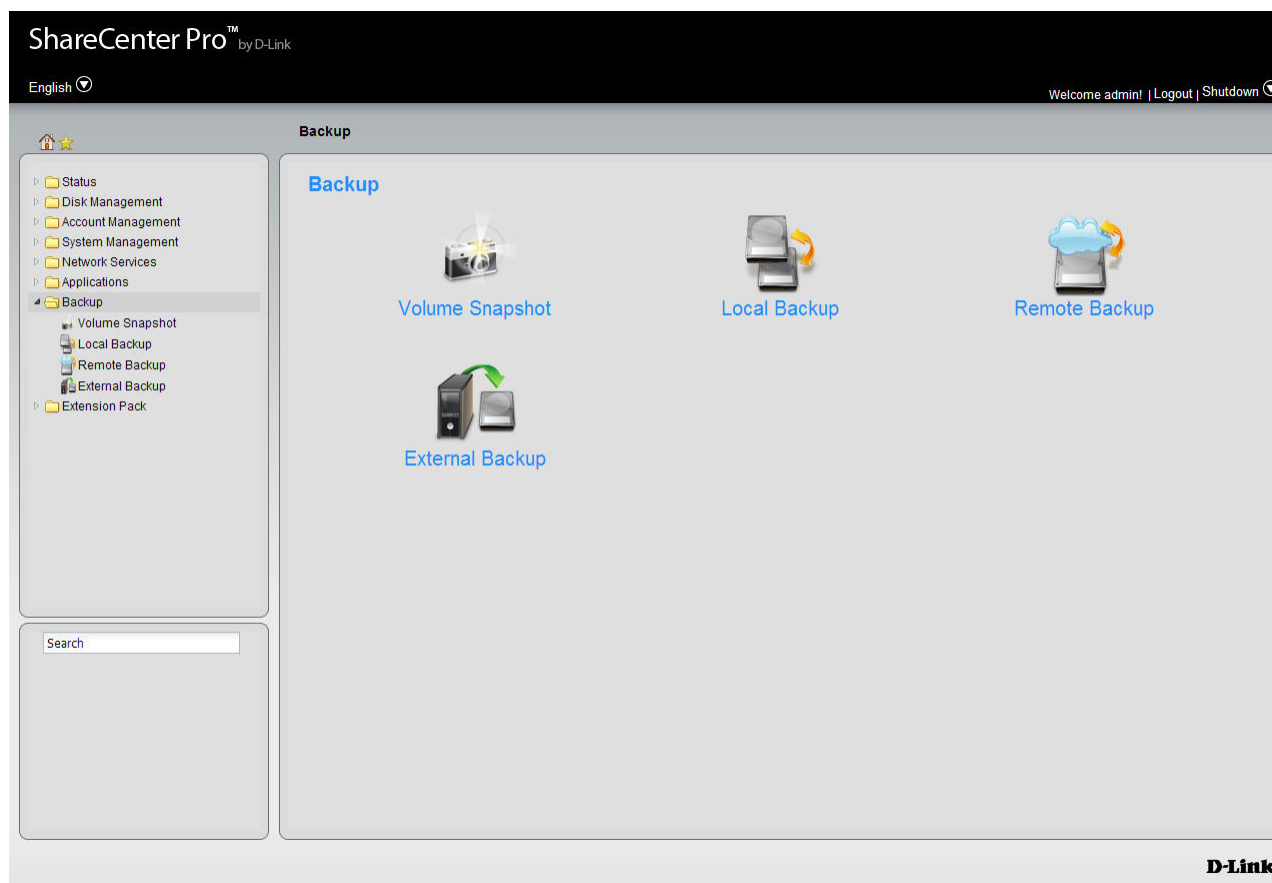

# Volume Snapshot

Click the **Volume Snapshot** icon in the Backup window or the Volume Snapshot link in the left window to configure the settings. This window is used to create, edit or delete a snapshot job. It also allows you to take a snapshot of a volume. The ShareCenter supports up to 10 snapshot jobs and each job can have maximum 20 snapshots.

- Create:** Click to add a new snapshot job.
- Edit:** Select an entry and click the button to edit.
- Delete:** Select an entry and click the button to remove the entry from the list.
- Take Snapshot:** Click the button to take a snapshot of a volume.
- Show Snapshot:** Click the button to show the calendar indicating on which dates a snapshot had been taken.

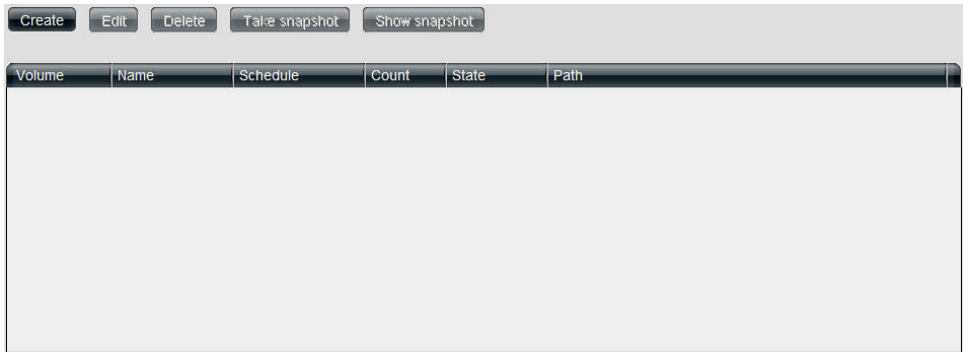

## Create a Snapshot Job

Click the **Create** button to see the window.

- Folder:** Click the field to show the available folders. Click a folder to see the sub-folders. Double-click a folder to select it.
- Count:** Use the drop-down menu to select the number of snapshots for this job.
- Schedule:** Use the drop-down menu to select manually schedule the job, or schedule to take the snapshot on a daily, weekly or monthly basis.
- Time:** Use the drop-down menus to select hour and minute of the day.
- Weekday:** Use the drop-down menu to select the day of the week.
- Date:** Use the drop-down menu to select the day of the month.

Click **Apply** to save the settings.



The screenshot shows a dialog box titled "Create Snapshot Job" with a red close button in the top right corner. The dialog contains several configuration fields:

- Folder:** An empty text input field.
- Count:** A drop-down menu showing "10".
- Schedule:** A drop-down menu showing "Manually".
- Time:** Two drop-down menus for hour and minute, both showing "00".
- Weekday:** A drop-down menu showing "SUN".
- Date:** A drop-down menu showing "01".


At the bottom of the dialog are two buttons: "Apply" and "Cancel".

# Show Snapshot

Click the **Show Snapshot** button to see the calendar.


**Calendar:** Find the year and month of the snapshot on that day. The date cell is highlighted when there are snapshots on that day. Click the cell to view details of the volume's snapshot(s).

Click **Close** to go back to the Volume Snapshot window.

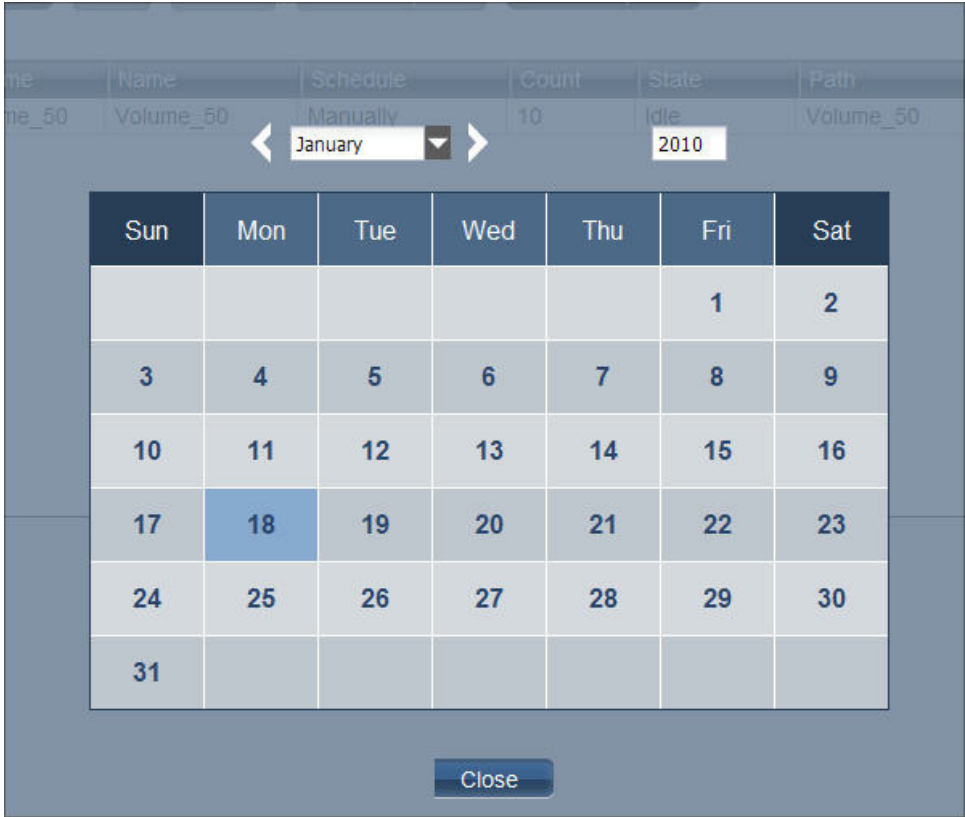




The window displays the volume's snapshot(s) information.

- Delete:** Select an entry and click the button to remove the entry from the list.
- Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page (⏮), Previous Page (⏪), Next Page (⏩) or Last page (⏭) to search for the group.
- Refresh:** Click  to update the group list.


Click **Close** to go back to the previous window.

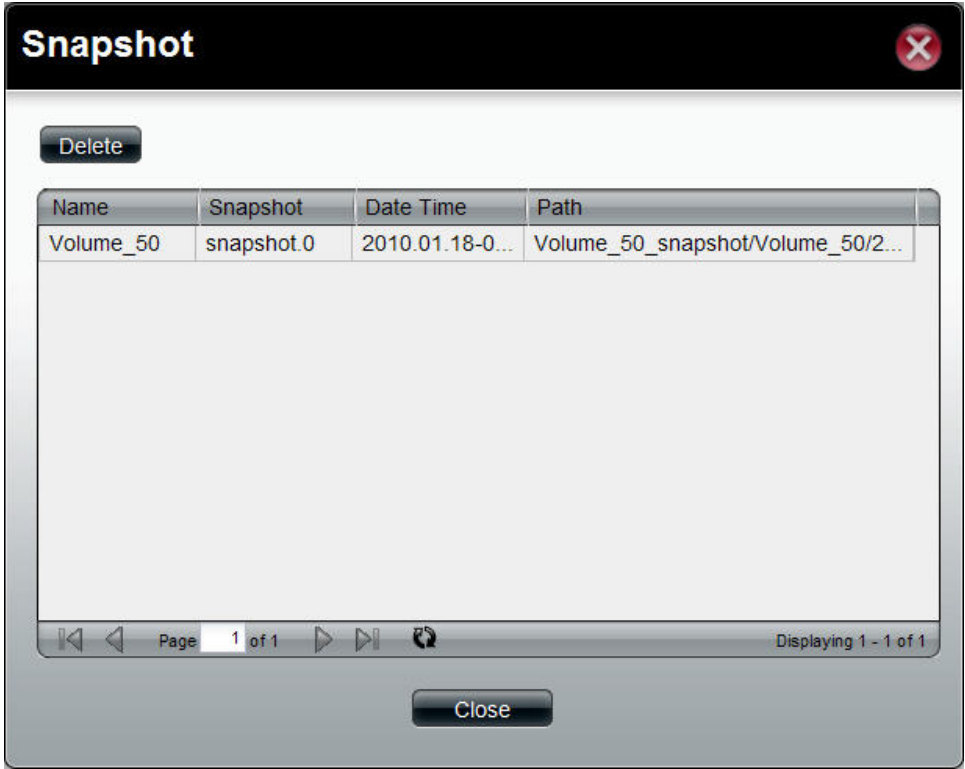

# Local Backup

Click the **Local Backup** icon in the Backup window or the Local Backup link in the left window to configure the settings. This window allows files and folders to be backed up to local folders.

- Create:** Click to add a new backup job.
- Edit:** Select an entry and click the button to edit.
- Delete:** Select an entry and click the button to remove the entry from the list.
- Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page (◀), Previous Page (◀), Next Page (▶) or Last page (▶) to search for the group.
- Refresh:** Click ↻ to update the group list.

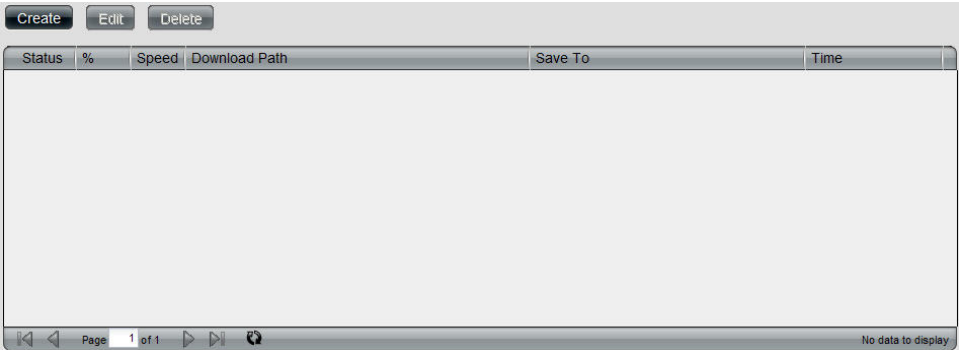

## Create a Local Backup Job

Click the **Create** button to see the window.

**Login Method:** Click the **Account** radio button when a password is required for the procedure. Click the **Anonymous** where there is no password required for the procedure.

**User Name:** Enter a user name for backup.


**Password:** Enter a password for backup.

**Type:** Toggle between File or Folder to download the specific file or all files in a specific folder.

**Path:** Enter the path manually, or click **Local** to locate the path. Click the **Test** button to see if the path can be connected to.

**Save To:** Click the field to show the available folders. Click the **Create** button to add a new folder. Double-click a folder to select it.

**Incremental Backup:** Click the check box to enable the incremental backup method. All backups after the first full backup will be on an incremental basis. Only the changes since the last backup will be backed up.

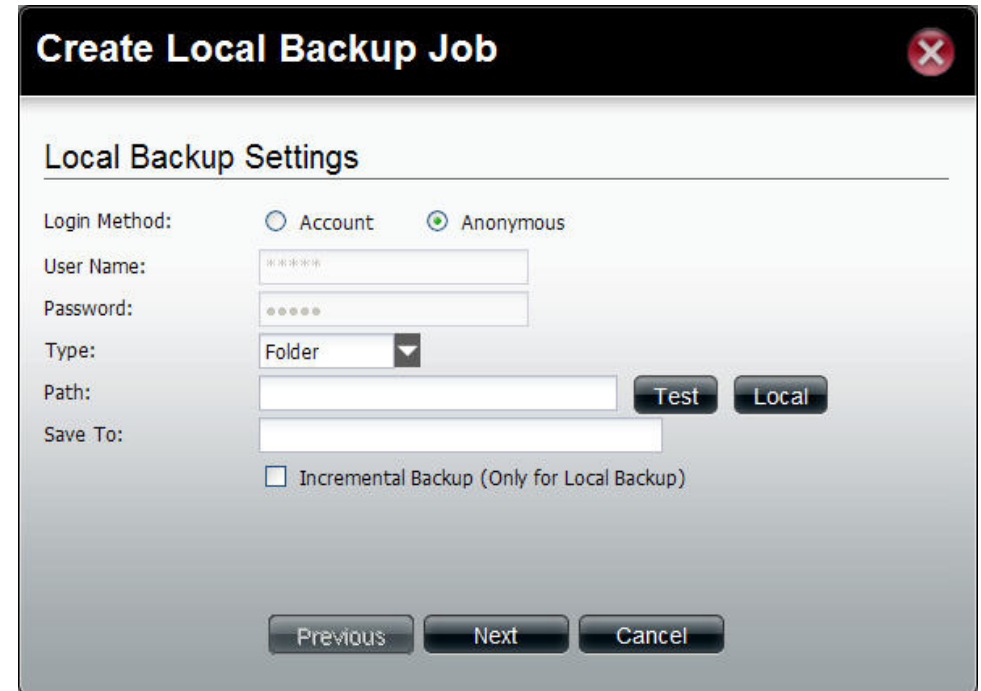

The screenshot shows a window titled "Create Local Backup Job" with a close button in the top right corner. Inside the window, there is a section titled "Local Backup Settings". Below this title, there are several fields and options:

- Login Method:** Two radio buttons are present: "Account" (unselected) and "Anonymous" (selected).
- User Name:** A text input field with a masked password "\*\*\*\*\*".
- Password:** A text input field with a masked password "\*\*\*\*\*".
- Type:** A dropdown menu currently set to "Folder".
- Path:** A text input field.
- Save To:** A text input field.
- Test:** A button next to the Path field.
- Local:** A button next to the Save To field.
- Incremental Backup (Only for Local Backup):** A checkbox that is currently unchecked.
- Navigation Buttons:** At the bottom, there are three buttons: "Previous", "Next", and "Cancel".

Click **Next** to continue.

This window is used to set the schedule for local backup jobs.

**Recurring Backup:** Use the drop-down menu to enable a recurring backup. This can be done on a daily, weekly or monthly basis. Select **None** to disable the recurring backup.


**When:** Click  to select year and date for backup.

**Time:** Use the drop-down menu to select the time for backup.

**Weekly:** Select a day of the week for recurring backup.

**Monthly:** Select the month for recurring backup.

Click **Apply** to save the settings.

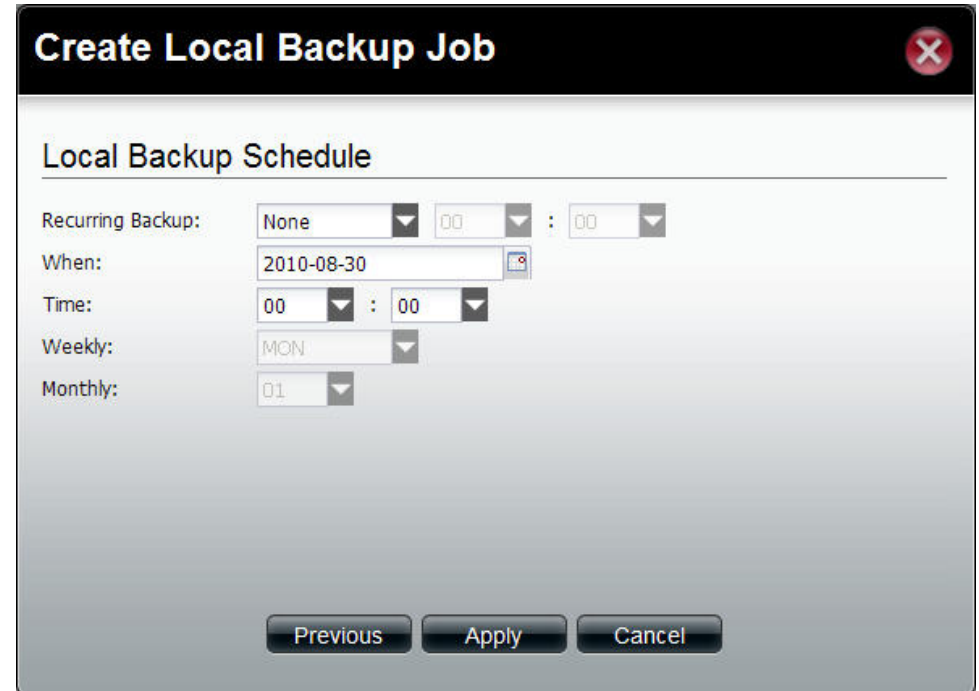

The image shows a screenshot of the 'Create Local Backup Job' dialog box. The title bar is black with white text and a red close button. The main area is titled 'Local Backup Schedule'. It contains several settings: 'Recurring Backup' is set to 'None' with a dropdown arrow; 'When' is set to '2010-08-30' with a calendar icon; 'Time' is set to '00 : 00' with dropdown arrows; 'Weekly' is set to 'MON' with a dropdown arrow; and 'Monthly' is set to '01' with a dropdown arrow. At the bottom, there are three buttons: 'Previous', 'Apply', and 'Cancel'.

Setting	Value
Recurring Backup	None
When	2010-08-30
Time	00 : 00
Weekly	MON
Monthly	01

## Remote Backup

Click the **Remote Backup** icon in the Backup window or the Remote Backup link in the left window to configure the remote backup.


### Remote Backup Server

Click the **Remote Backup Server** tab to see the following window.

**Enable Remote Backup:** Click the check box to enable the function.

**Password:** Enter the password for backing up files and folders from or to the ShareCenter. This is the remote backup password. The password for the remote NAS should be the same as the password of the ShareCenter.

Click **Apply** to save the settings.

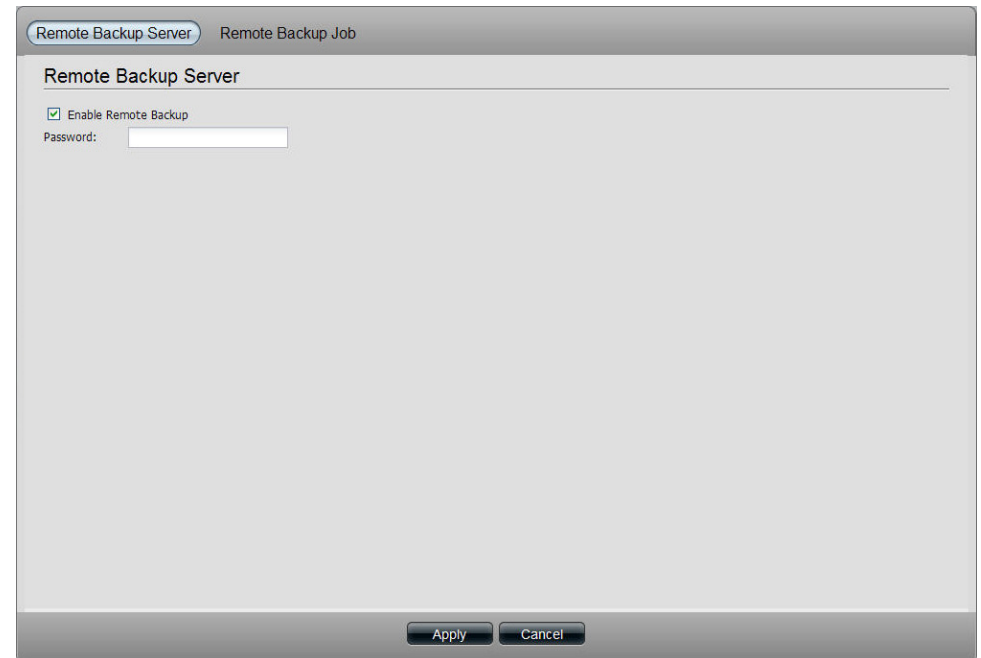

## Remote Backup Job

Click the **Remote Backup Job** tab to see the following window.

**Create:** Click to add a new remote backup job.

**Edit:** Select an entry and click the button to edit.


**Delete:** Select an entry and click the button to remove the entry from the list.

**Backup:** Click the button to back up.

**Enable/Disable Schedule:** Click the button to enable or disable the schedule remote backup function.

**Page:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page (◀), Previous Page (◀), Next Page (▶) or Last page (▶) to search for the group.


**Refresh:** Click ↻ to update the group list.

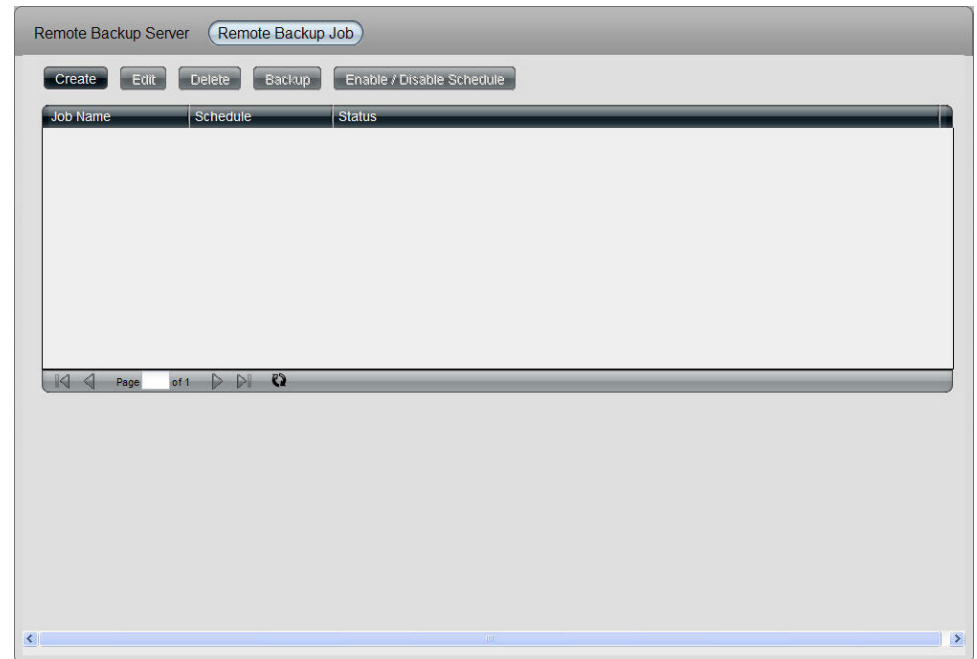

Click **Create** to see the window.

**Server Type:** Use the drop-down menu to select between D-Link NAS Server or Rsync Server.

Click **Next** to continue.

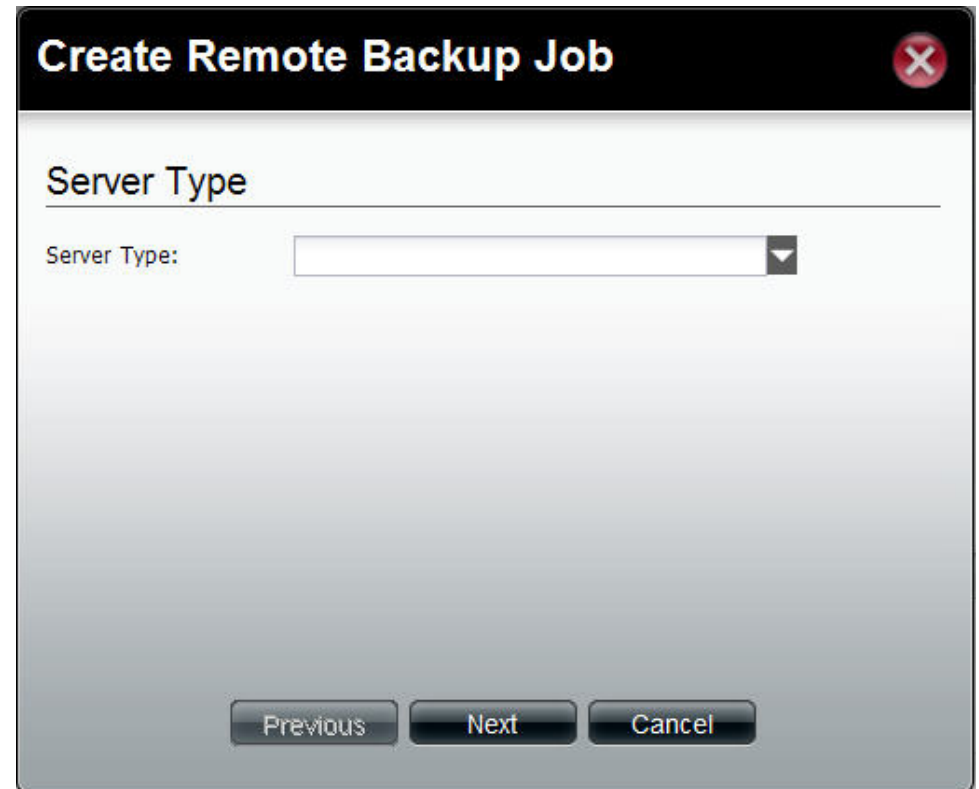


The image shows a software dialog box titled "Create Remote Backup Job" with a red close button in the top right corner. The dialog has a light gray background. Below the title bar, the text "Server Type" is displayed. Underneath, the label "Server Type:" is followed by a white rectangular drop-down menu with a small downward-pointing arrow on its right side. At the bottom of the dialog, there are three buttons: "Previous", "Next", and "Cancel", each with a dark gray background and white text.

This window allows you to configure the source settings.

**Job Name:** Enter the name of the remote backup job.

**Folder Path:** Enter the source file/folder to be backed up remotely.

Click **Next** to continue.

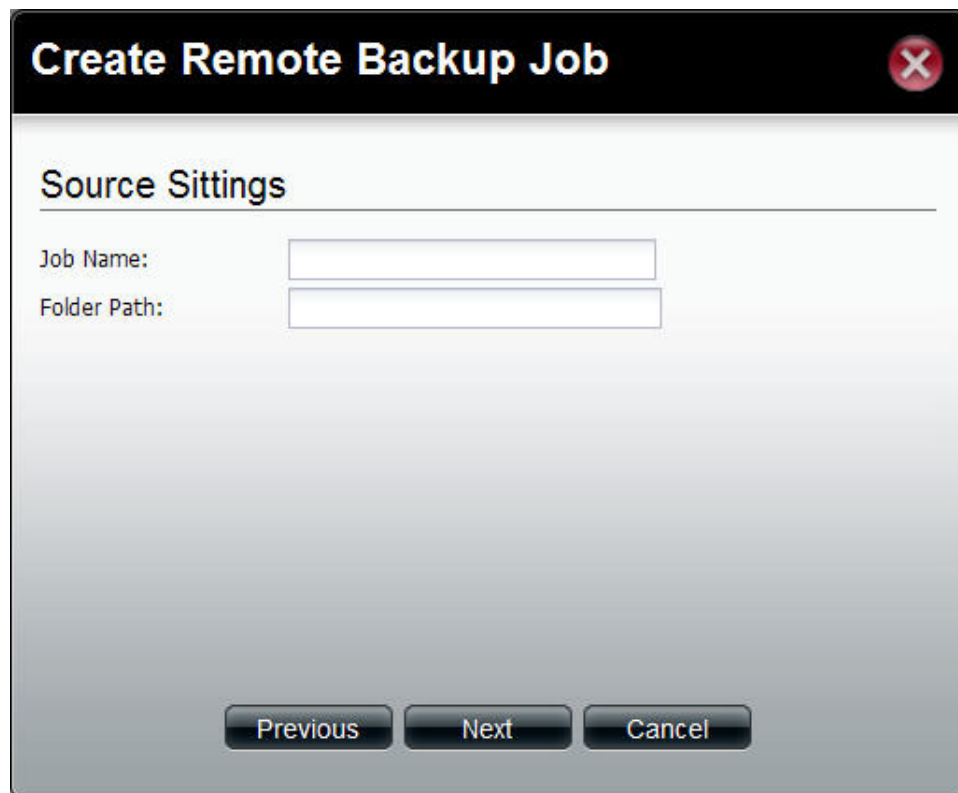


The screenshot shows a dialog box titled "Create Remote Backup Job" with a close button (X) in the top right corner. Below the title bar, the section "Source Settings" is displayed. It contains two input fields: "Job Name:" and "Folder Path:". At the bottom of the dialog, there are three buttons: "Previous", "Next", and "Cancel".



This window is used to configure the destination settings.

- IP of Remote Server:** Enter the IP address of the server.
- Password:** Enter the password of the destination server.
- Encryption Support:** Click the check box to enable SSH encryption.
- Keep Existing File:** Click the check box to keep the existing file the same (not overwrite) at the remote server and create another backup copy.

Click **Next** to continue.

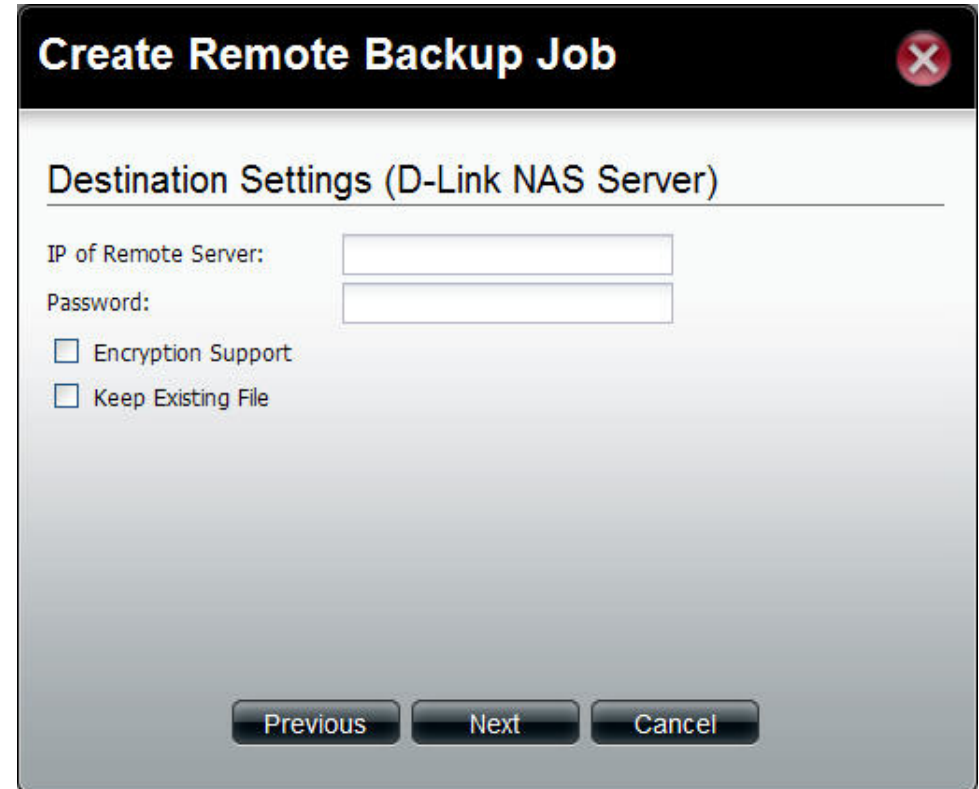


The screenshot shows a window titled "Create Remote Backup Job" with a close button in the top right corner. Below the title bar, the section "Destination Settings (D-Link NAS Server)" is displayed. This section contains two text input fields: "IP of Remote Server:" and "Password:". Below these fields are two checkboxes: "Encryption Support" and "Keep Existing File". At the bottom of the window, there are three buttons: "Previous", "Next", and "Cancel".

This window is used to configure the destination path.

**Destination Path:** Click the field to select the destination path.

Click **Next** to continue.

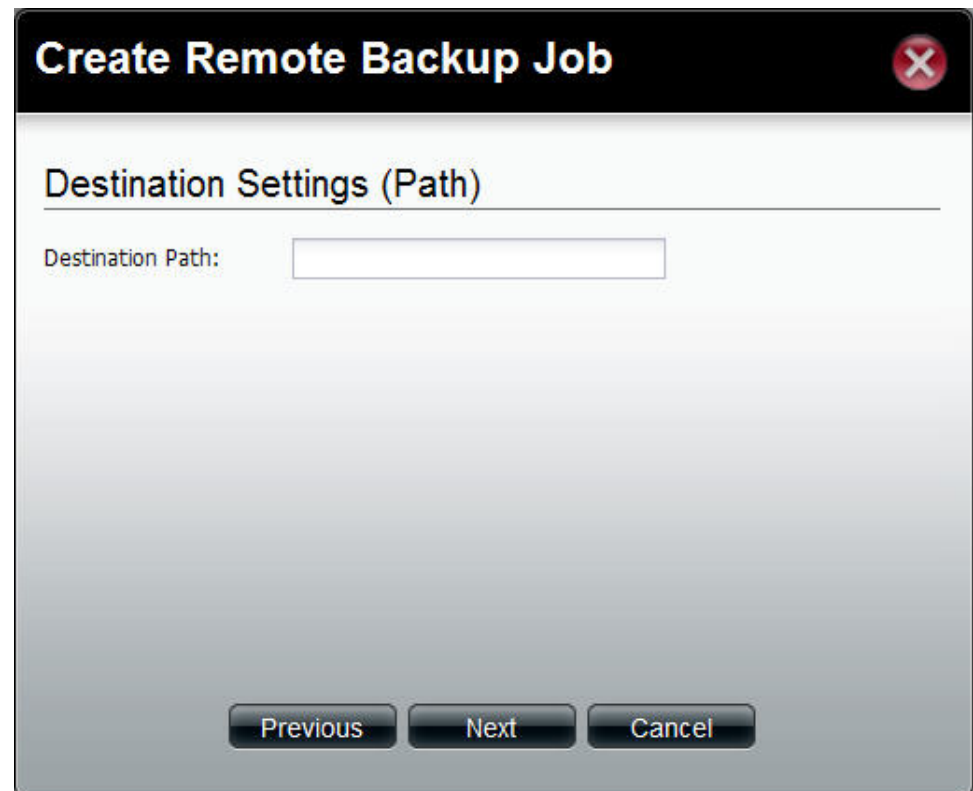

The screenshot shows a window titled "Create Remote Backup Job" with a red close button in the top right corner. Below the title bar, the section "Destination Settings (Path)" is displayed. Under this section, there is a label "Destination Path:" followed by an empty text input field. At the bottom of the window, there are three buttons: "Previous", "Next", and "Cancel".

This window is used to schedule the remote backup job.

**Recurring Backup:** Use the drop-down menu to enable a recurring remote backup. This can be done on a daily, weekly or monthly basis. Select **Backup now** to start the backup.


**When:** Click  to select year and date for backup.

**Time:** Use the drop-down menu to select the time for backup.

**Weekly:** Select a day of the week for recurring backup.

**Monthly:** Select the month for recurring backup.

Click **Apply** to save the settings.

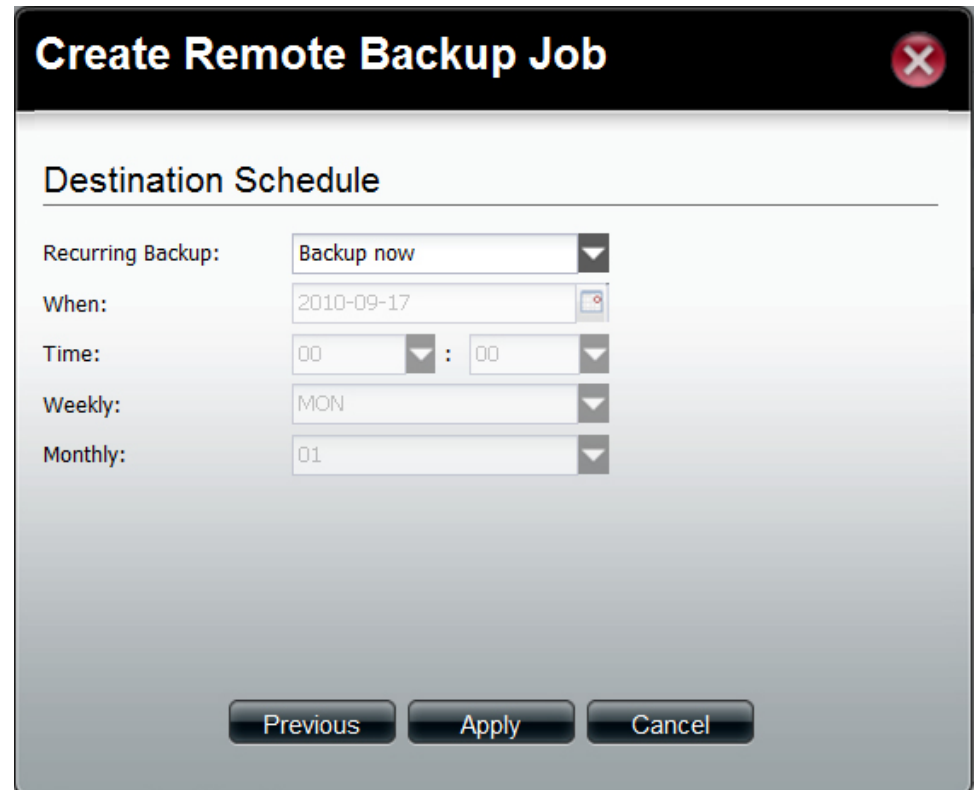

The image shows a dialog box titled "Create Remote Backup Job" with a close button (X) in the top right corner. Below the title bar is a section titled "Destination Schedule". This section contains five rows of settings, each with a label and a control:

- Recurring Backup:** A drop-down menu currently showing "Backup now".
- When:** A date input field showing "2010-09-17" with a calendar icon to its right.
- Time:** Two drop-down menus for hours and minutes, both currently set to "00", separated by a colon.
- Weekly:** A drop-down menu currently showing "MON".
- Monthly:** A drop-down menu currently showing "01".

At the bottom of the dialog box are three buttons: "Previous", "Apply", and "Cancel".


## External Backup

Click the **External Backup** icon in the Backup window or the External Backup link in the left window to configure the settings. This window is used to back up data to external devices.

**Source:** Click the USB port that is connected to an external USB storage device.


**Select Path:** Click the field to show the available folders. Click the **Create** button to add a new folder. Double-click a folder to select it.

**Mode:** Click the **Incremental Backup** check box to enable the incremental backup method. All backups after first full backup will be on an incremental basis. Only the changes since the last backup will be backed up.

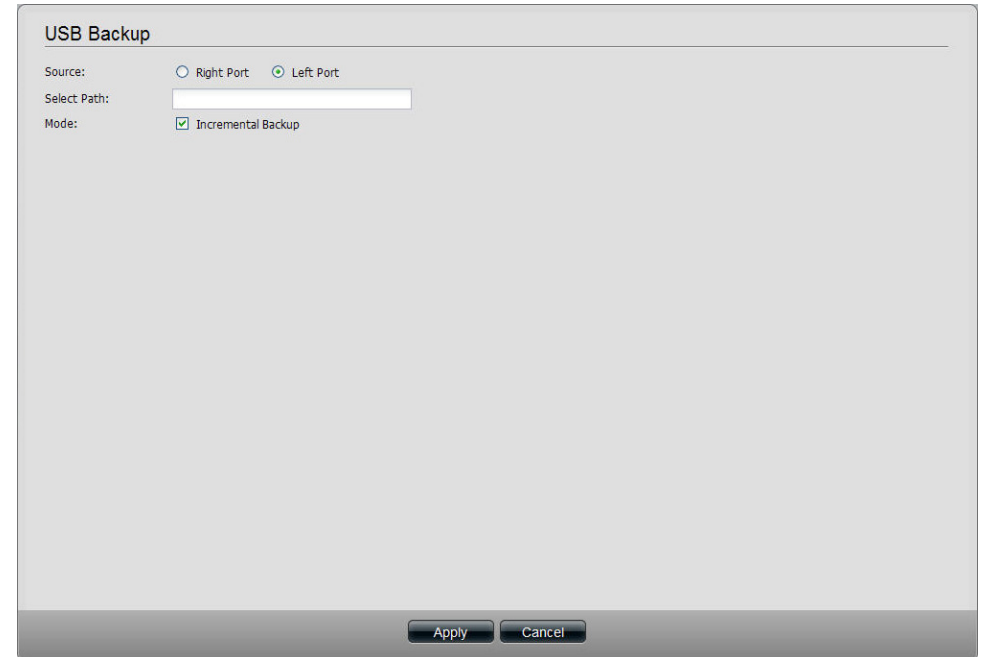

# Extension Pack

This folder contains the Extension Pack. Click the folder to see the subcategories.

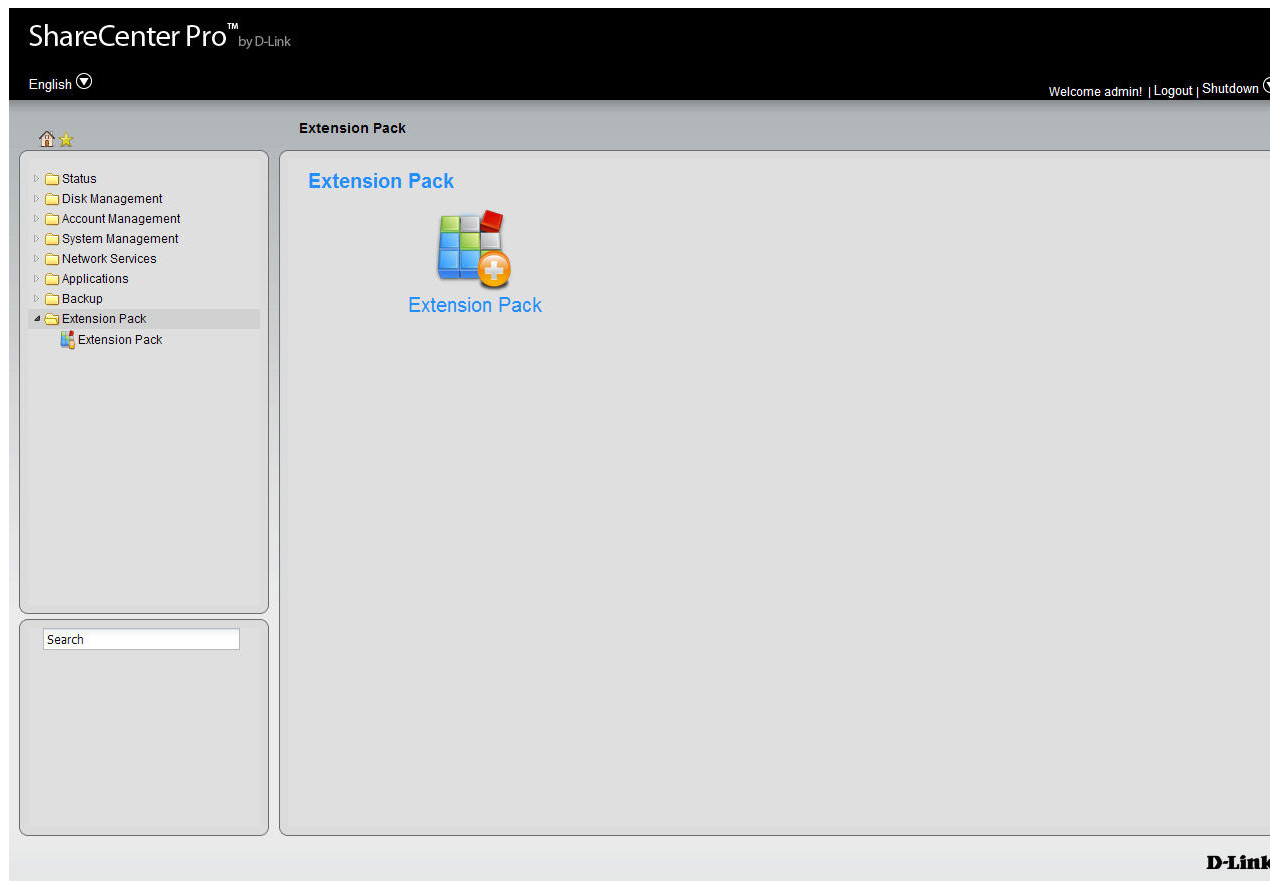

## Extension Pack

Click the **Extension Pack** icon in the Extension Pack window or the Extension Pack link in the left window to configure the add-ons.

- File Path:** Click the **Browse** button to locate the file. Click **Apply** to add the file to the Add-ons list.
- Add-ons List:** Displays a list of all add-ons modules.
  - Status:** Displays if the module is currently activated (Enabled) or deactivated (Disabled).
  - Start/Stop:** Activate/Deactivate the module.
  - Delete:** Remove the add-on module from the list.
  - Refresh:** Displays number of pages. You can enter a page number in the field to jump to the specific page. Click First Page (⏮), Previous Page (⏪), Next Page (⏩) or Last page (⏭) to search for the group.
  - Page:** Click ↻ to update the group list.

The screenshot shows the 'Add-Ons Settings' window. At the top, there is a 'File Path' input field followed by 'Browse' and 'Apply' buttons. Below this is the 'Add-Ons List' section, which contains a table with the following columns: 'Number', 'Module Name', 'Version', 'Status', 'Start/Stop', and 'Delete'. The table is currently empty, and a message at the bottom right of the table area says 'No data to display'. At the bottom of the window, there are navigation controls including 'Page 1 of 1' and icons for navigating between pages and refreshing the list.


# Knowledge Base

## What is RAID?

RAID, short for Redundant Array of Independent Disks, is a combination of two or more disks with the aim of providing fault tolerance and improving performance. There are several different levels of RAID, with each one providing a different method of sharing or distributing data among the drives. The ShareCenter supports **JBOD**, **RAID 0**, **RAID 1**, **RAID 5**, **RAID 6** and **Standalone**.


**RAID 0:** RAID 0 provides data striping, which spreads out blocks of data over all drives, but does not provide data redundancy.

Although performance is improved, the lack of fault tolerance means that if one drive fails, all data in the array will be lost.

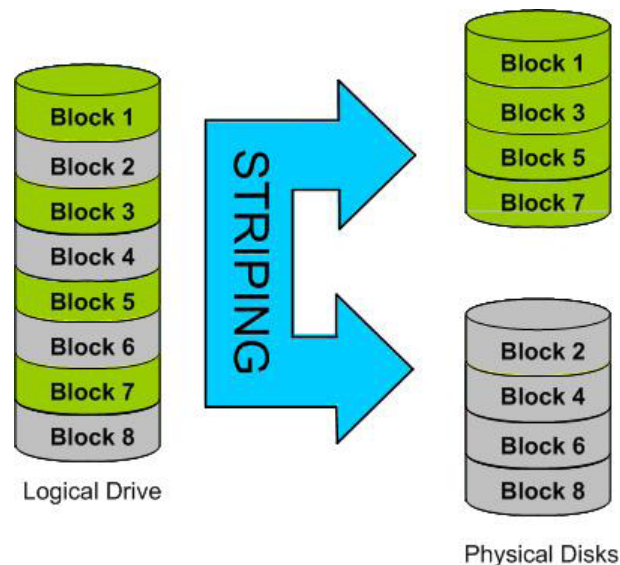

**RAID 1:** RAID 1 provides mirroring over multiple disks, with the same read/write speed of a single disk. A RAID 1 array can only be as large as its smallest member disk.


Because the data is stored on multiple disks, RAID 1 provides fault tolerance and protection, in addition to performance advantages.

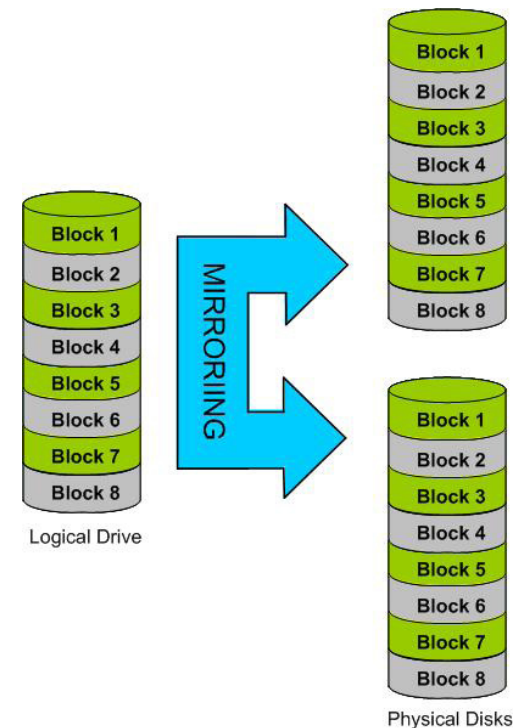

**RAID 5:** RAID 5 provides data striping with distributed parity, which stores information that can be used to reconstruct data. A RAID 5 array will be the size of all the combined disks capacity less the capacity of one disk, e.g. If there are 4x 80GB disks in the array, the arrays capacity will be 240GB (3x80GB).


Implementing RAID 5 on the ShareCenter allows it to continue operating even if one of the disks fails.

The diagram below indicates the operation of RAID 5:

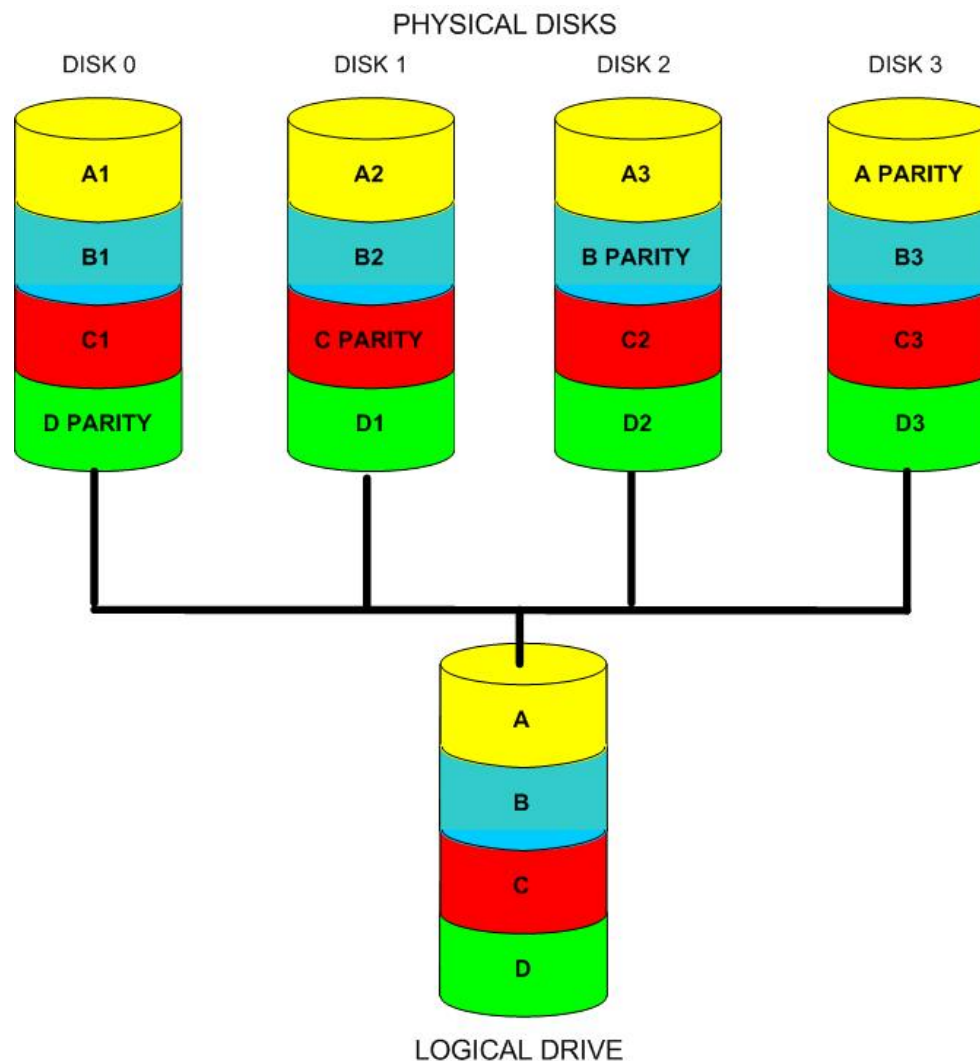




**RAID 6:** RAID 6 is an extension of RAID 5. It adds an additional parity block by using block-level striping with two parity blocks distributed across all the member disks.  
RAID 6 allows the array to continue operating even if two of the disks fail.  
The diagram below indicates the operation of RAID 6:

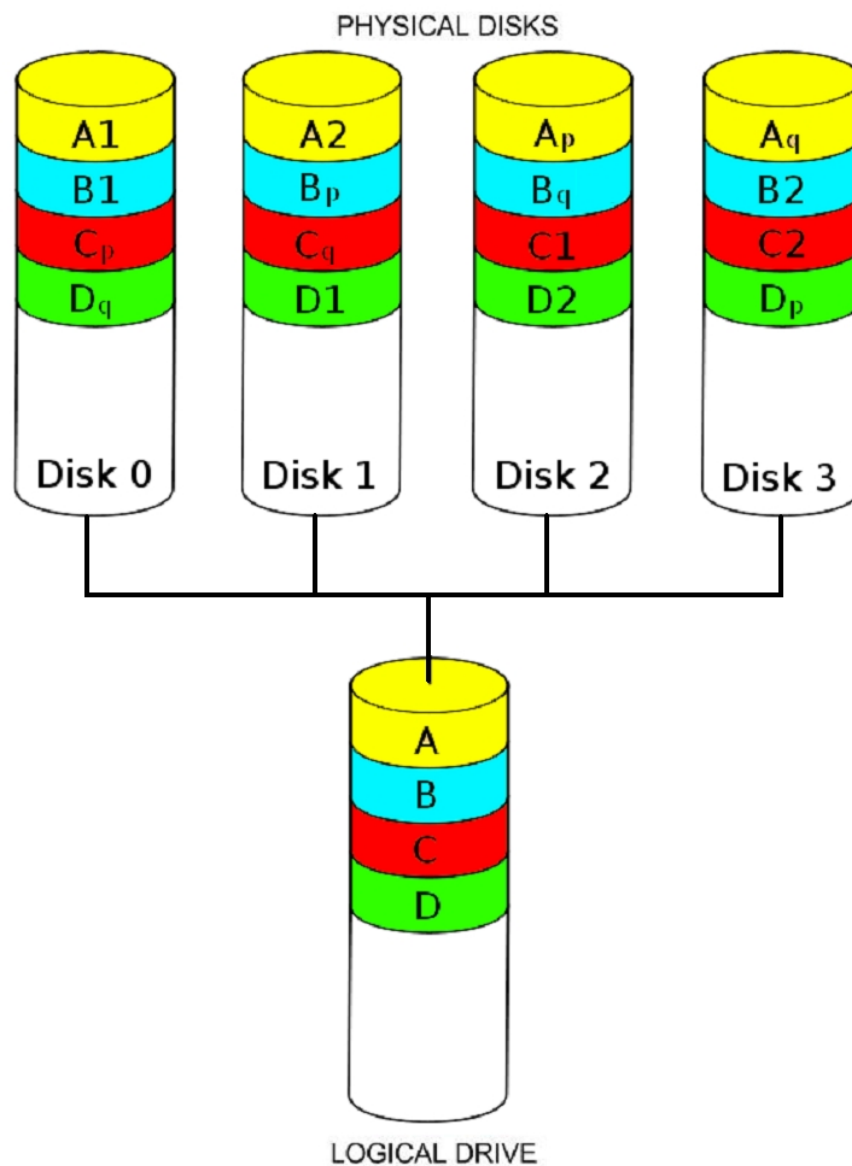

# Mapping a Drive

You can use the D-Link Easy Search Utility to map drives to your computer. Insert the ShareCenter CD into your CD-ROM drive.

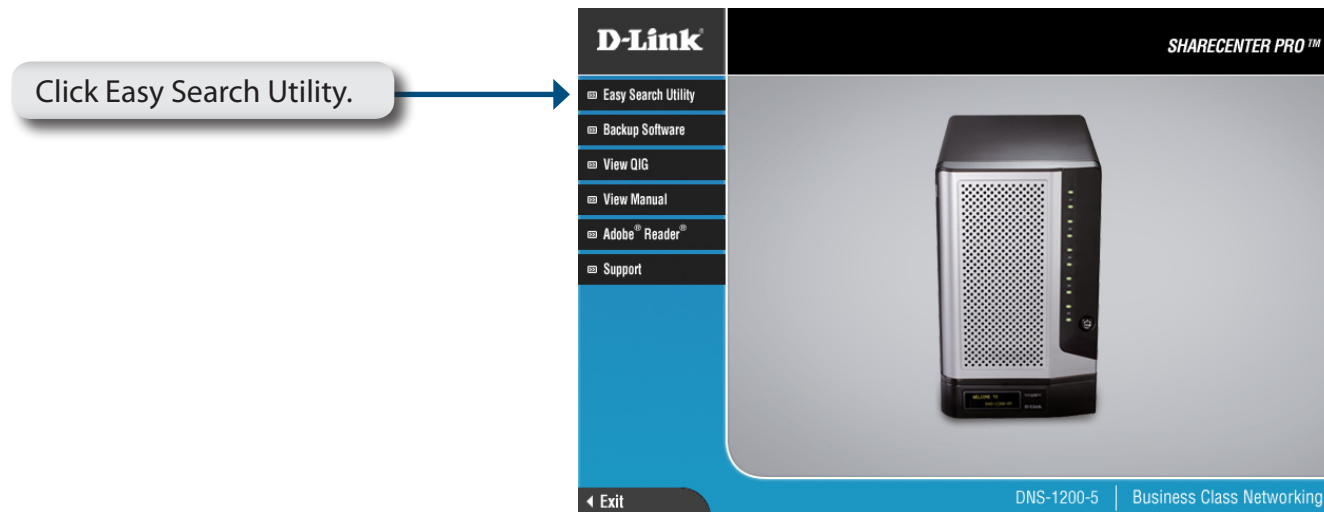

The Easy Search Utility will load and detect any ShareCenter devices that are on the local network.

If the ShareCenter you are working with does not show up in the device list, click **Refresh**.

Highlight an available ShareCenter.

Available volumes will be displayed under Drive Mapping. Highlight the volume you want to map.

Select an available drive letter from the drop-down menu and click **Connect**.

**D-Link's DNS-1200-05 EZSearch**

Network Storage Device

Name	IP	Netmask	Gatewa
dlink-570412	192.168.0.32	255.255.255.0	192.168

Refresh  
Configuration

LAN

IP: 192 . 168 . 0 . 32 Receive DHCP: Disable  
Netmask: 255 . 255 . 255 . 0  
Gateway: 192 . 168 . 0 . 1  
Apply

iSCSI Drive Mapping

Name	Active
------	--------

Connect  
Management

Page: 1

Drive Mapping


Volume Name	Location
sharefolder	Z:

Available Drive Letters :  
Y: [dropdown]  
Connect Disconnect


Page: 1  
About Exit

Once connected, your mapped drive(s) will appear in My Computer.

Double-click the My Computer icon on your desktop.

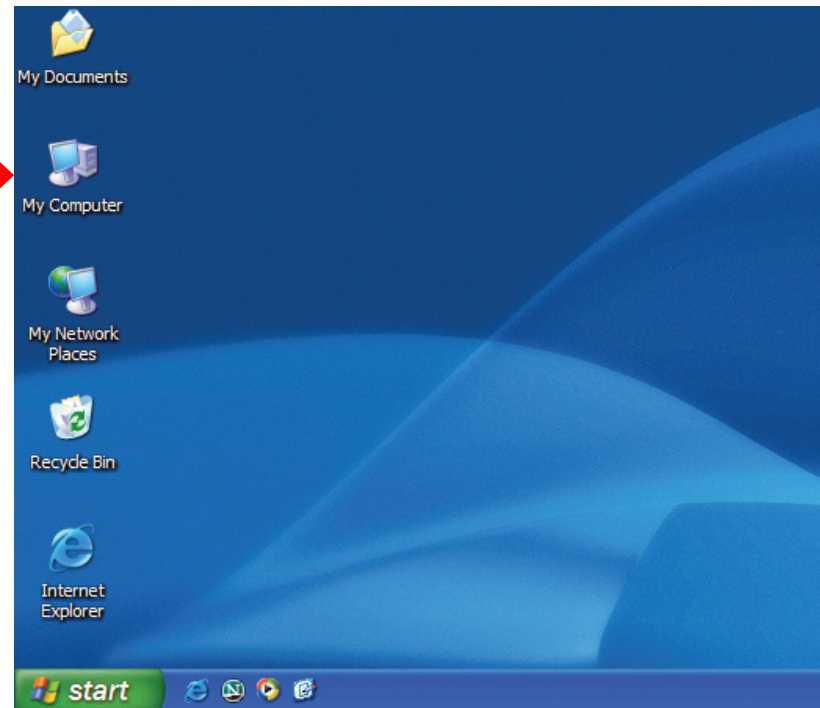

Double-click the mapped drive to access the files and folders.

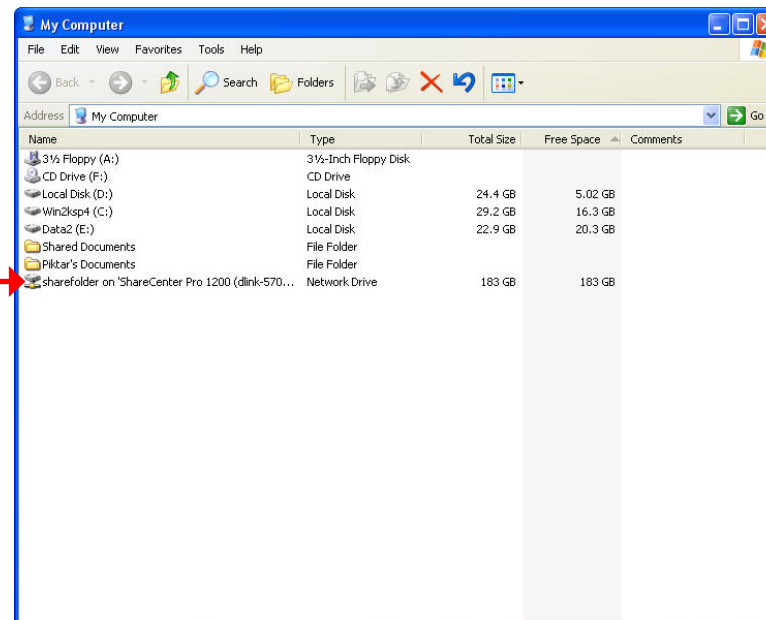


# USB Print Server


The ShareCenter features a built-in USB print server, giving users the ability to share a printer on their local network. Connect a USB printer to the USB port on the back of the ShareCenter. It is important to ensure that any of the printer manufacturer's drivers are already installed on any computer you want to print from.

To add a printer:

Click **Start** and select **Printers and Faxes**.

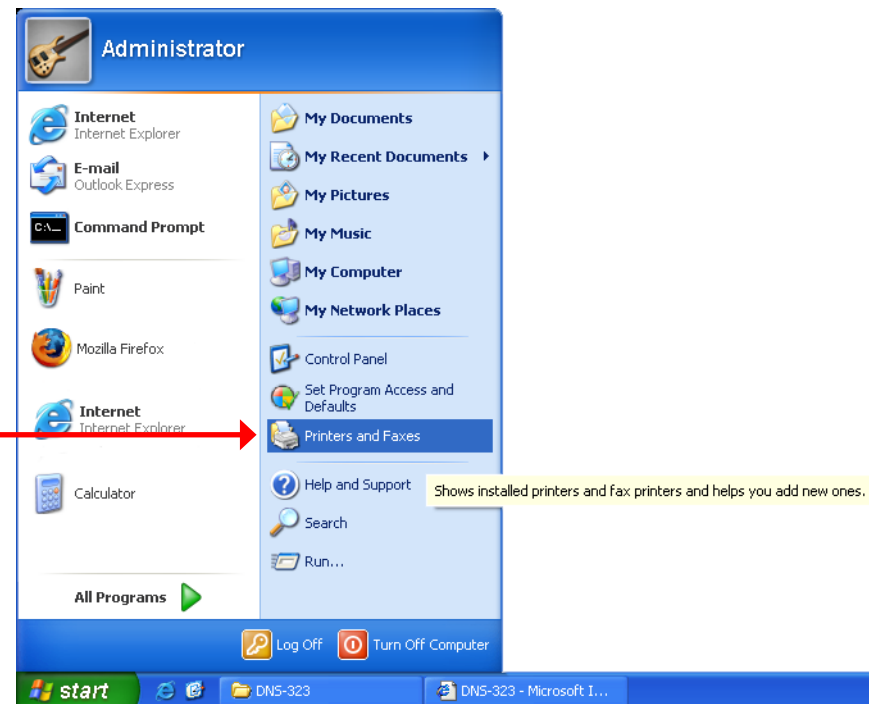

Select **Add a printer.**

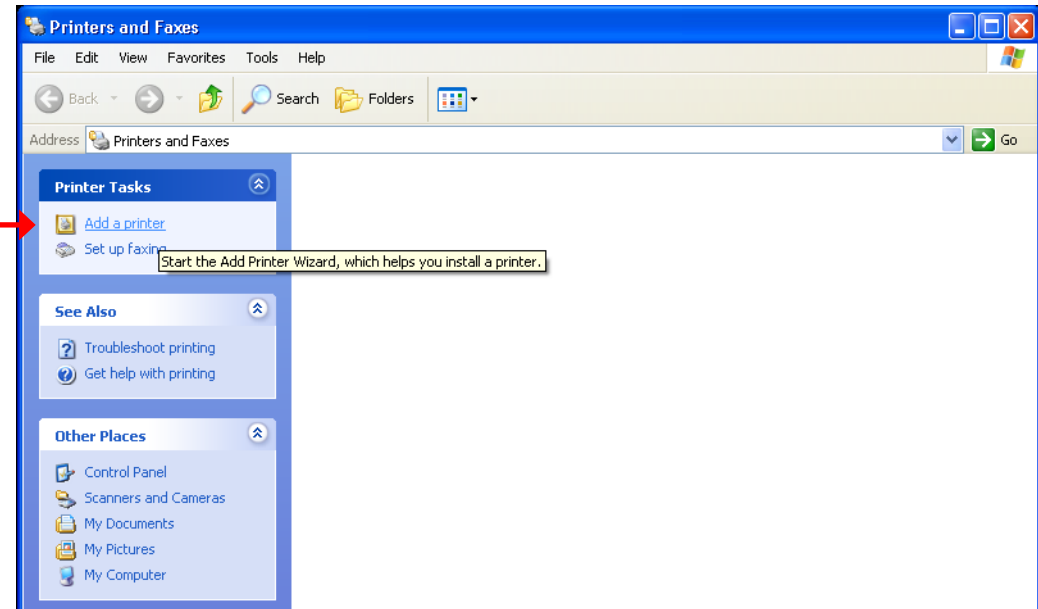


The Windows® Add Printer Wizard will launch:




Click **Next** to continue.

When prompted to choose a local, or network printer, select **"A network printer, or a printer attached to another computer."**


Click **Next** to continue.

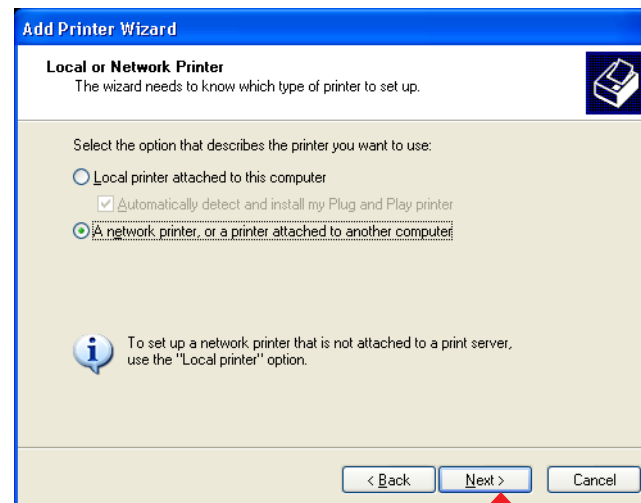


Select **"Browse for a printer"** and click **Next** to continue.

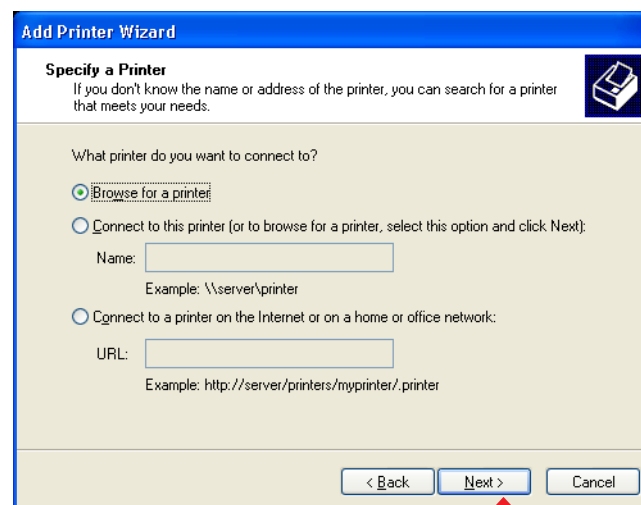

Select Double-click **DNS-1200** from the Shared Printers list to expand the tree.

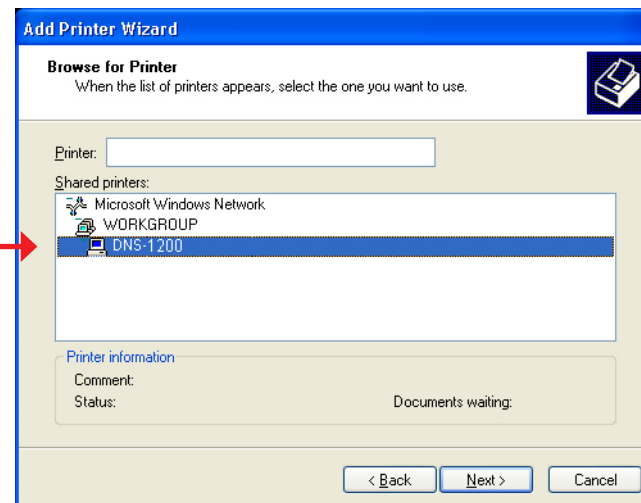


Select the available USB printer, and click **Next** to continue.

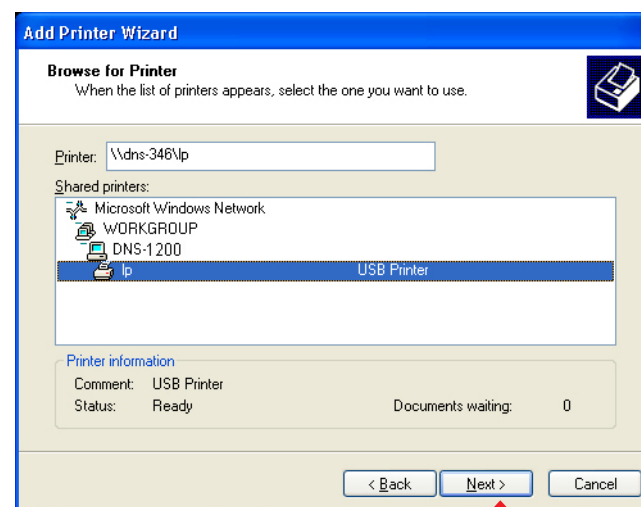




The following printer driver messages will appear:


Click **Yes** to continue.

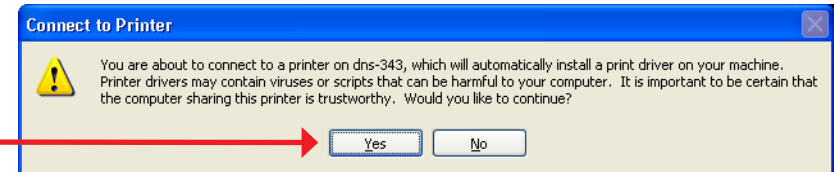


Click **OK** to continue and select a printer driver.

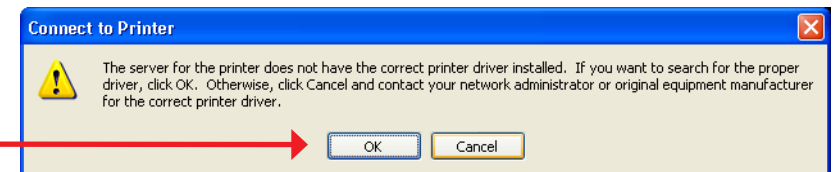


Select the appropriate printer driver from the list and click **OK** to complete the wizard. If the driver is not in the list, select **Have Disk**.

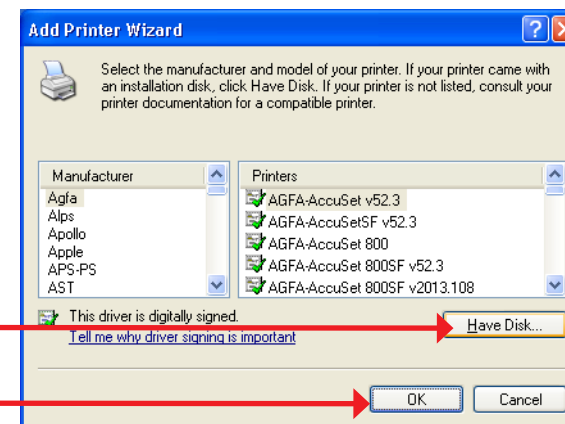


Insert the print driver CD or browse to the appropriate directory.

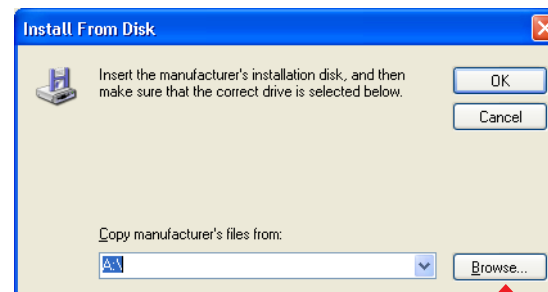


Select the appropriate driver file, and click **Open** to continue.

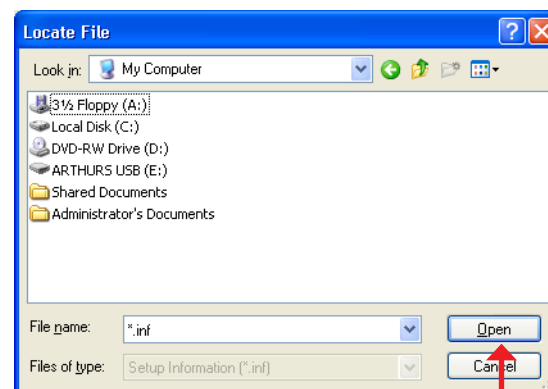


Click **OK** to continue.

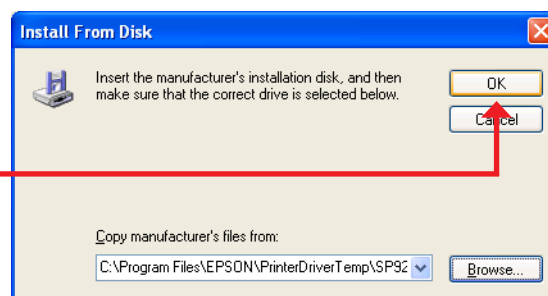

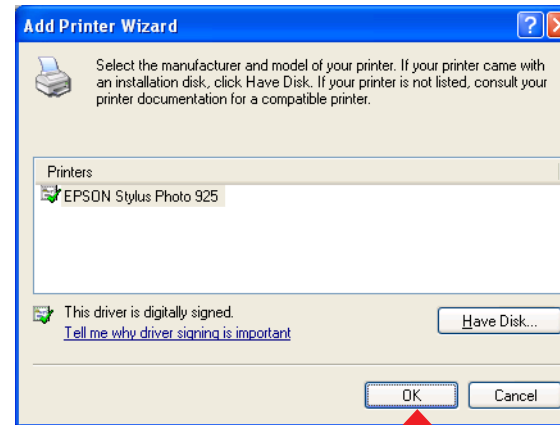


Verify the driver is correct, and click **OK** to continue.

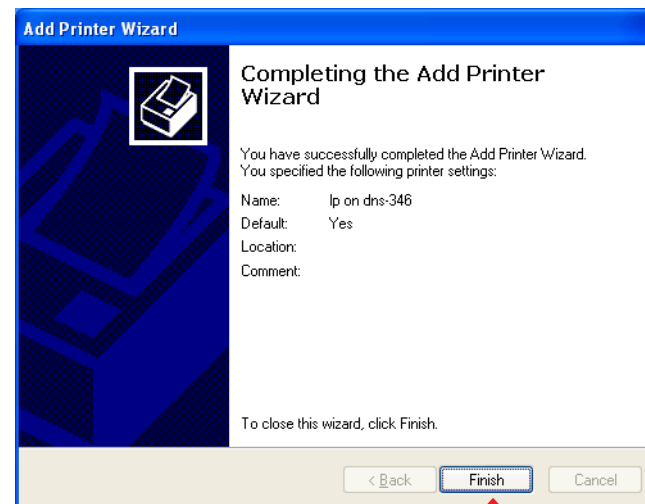

The wizard will install the printer drivers, and return a completion screen. Click **Finish**.

The printer should now appear as an available printer.

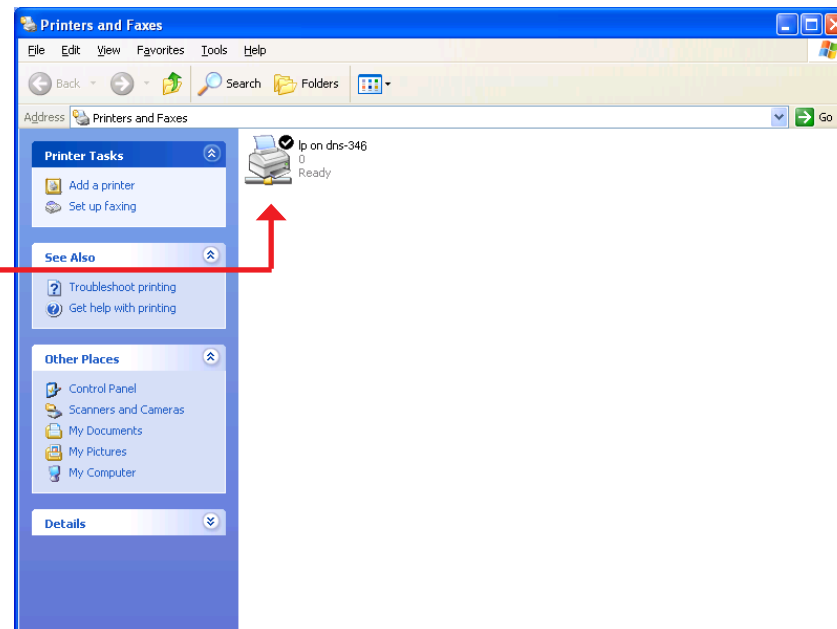


# iSCSI Drive Mapping

The iSCSI Drive Mapping is used to manage the iSCSI settings on the ShareCenter.

Carry out the following to configure the iSCSI settings:

1. Click the listed ShareCenter.

2. The available iSCSI target names in the iSCSI Drive Mapping section appear.

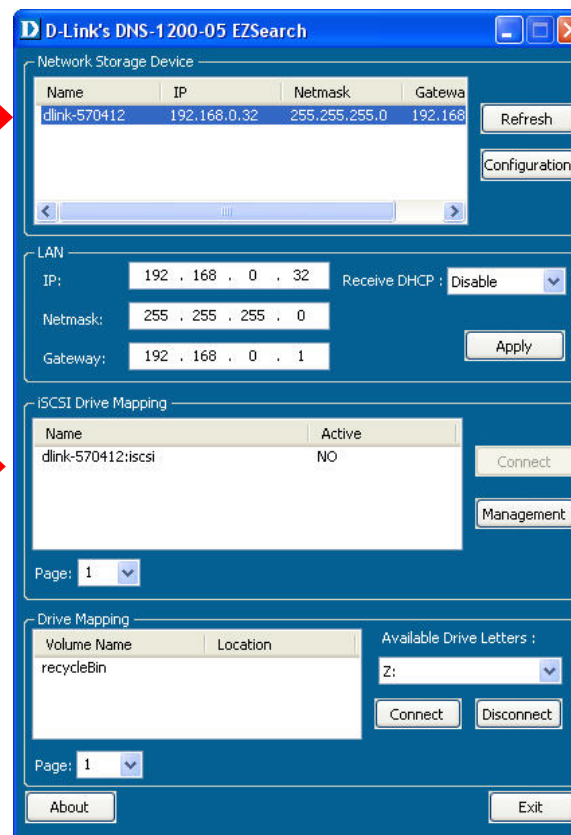

**Note:** If you cannot see the latest list, click the **Refresh** button to update the status.

**Note:** You will need to create iSCSI volume in the **Disk Management** -> **iSCSI Target**. Click the **iSCSI Targets** tab to see the iSCSI target name in this section.


The different parameters in the iSCSI Drive Mapping section are described below:

**Name:** Displays the names of the available iSCSI targets on the ShareCenter.

**Active:** Displays *Yes* if the target is active. Displays *No* if the target is not active.


**Connect/Disconnect:** Choose a target from the list and click the **Connect/Disconnect** button to activate/deactivate the Target. If CHAP authentication has been enabled, then a username and password will be required.

**Management:** Click the button to see the Management window. The window allows you to add, delete, mount and unmount the partition.

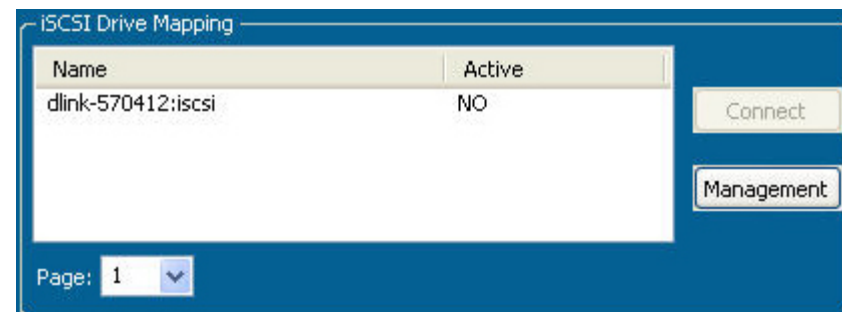


## Configuring Targets

1. When attempting to connect a target for the first time, choose the target from the list

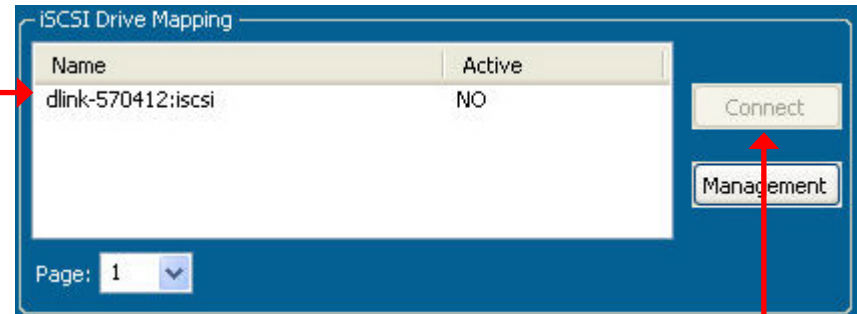

2. Click the **Connect** button.

3. If the CHAP is enabled, you will see this window appears requesting CHAP User and Password.

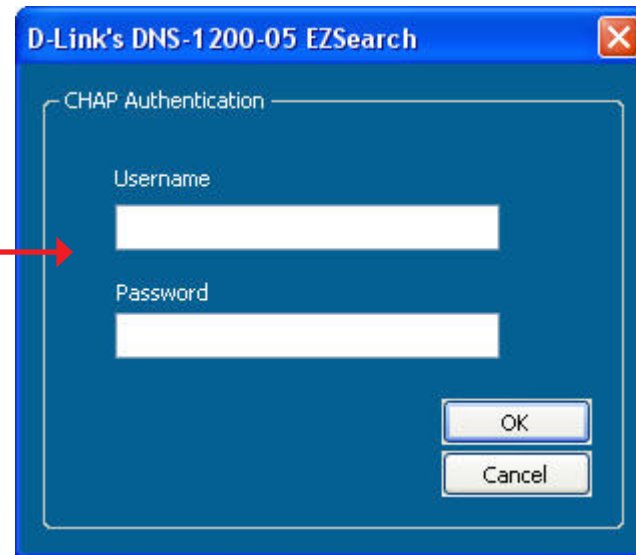

You will see the Format window.


The different parameters in the Format window are described below:

**Target:** Displays the iSCSI target name you chose.

**Partition Size:** Tick the **Use Maximum Available Space** checkbox to specify that the maximum available space on the disk will be used to create the new partition. To specify a size un-tick the checkbox and type in the capacity size of the partition (in megabytes) in the **Megabytes** field.

**Format Type:** Choose whether to format the new partition with *NTFS* or *FAT32* by ticking the appropriate checkbox.

**Drive Letter:** Choose the drive letter that you want to allocate to the iSCSI partition from the drop-down menu.

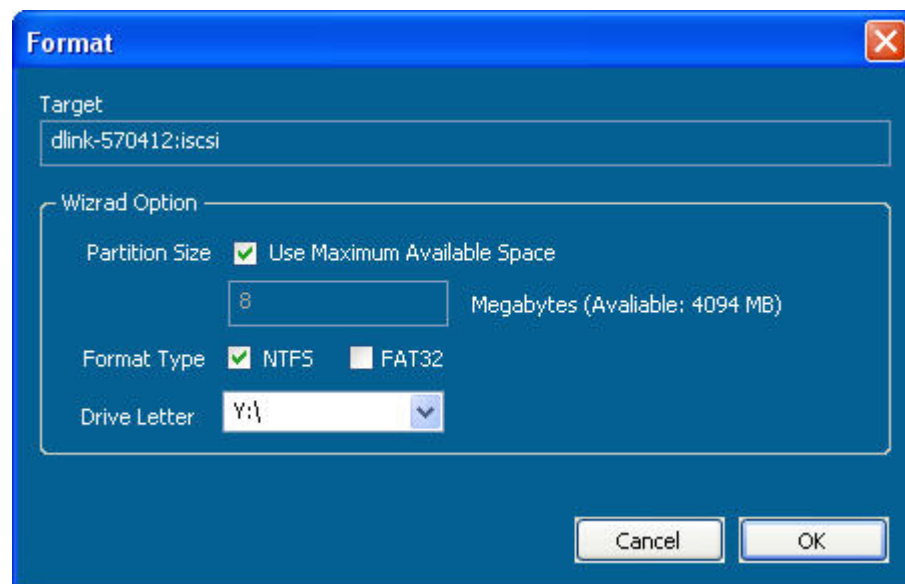

When you have finished configuring the Target Settings, click the **Format** button to see the window below




## Configuring Disks

This window appears after clicking the **Format** button. Or, select a target in the iSCSI Drive Mapping list and click the **Management** button to see the window.

The Management window allows you to manage partition on the disks installed in the ShareCenter and Mount / Unmount the disks installed in the ShareCenter.


The Disk Management section displays the following parameters:

- |                     |  |
|---------------------|--|
| <b>Disk:</b>        | Displays the ID number of the disk installed in the ShareCenter.                 |
| <b>Partition:</b>   | Displays the partition number of the disks partition.                            |
| <b>Volume:</b>      | Displays the drive letter that the partition is mapped to on the client machine. |
| <b>File System:</b> | Displays the File System that the partition was formatted with.                  |
| <b>Capacity:</b>    | Displays the total capacity of the partition.                                    |
| <b>Target:</b>      | Displays the iSCSI target name of the partition.                                 |

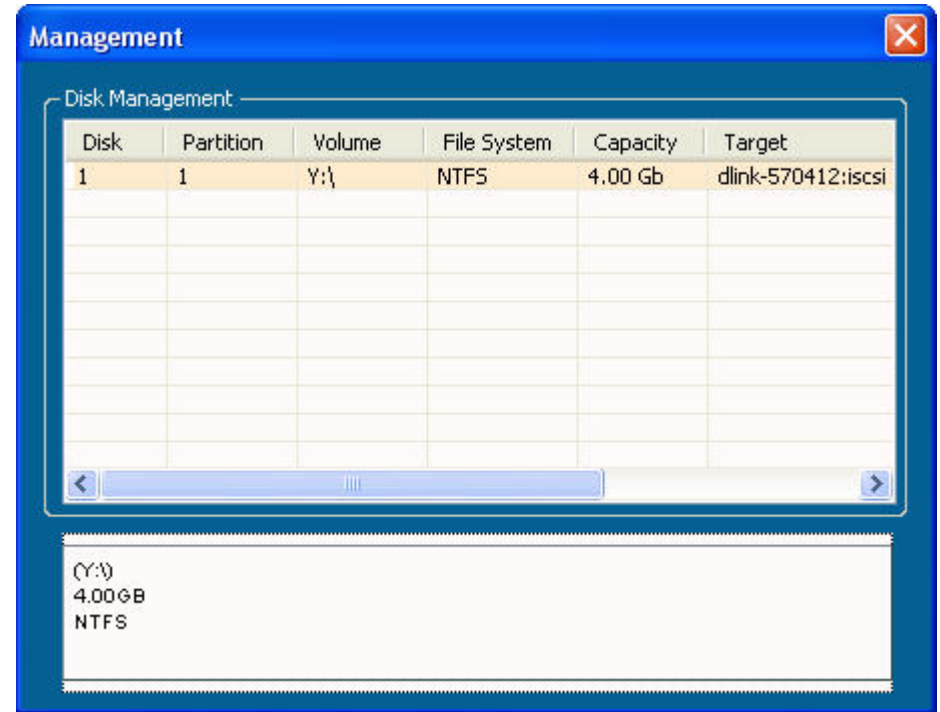

## Adding a new partition

Right-click an unallocated partition and click **Add**.

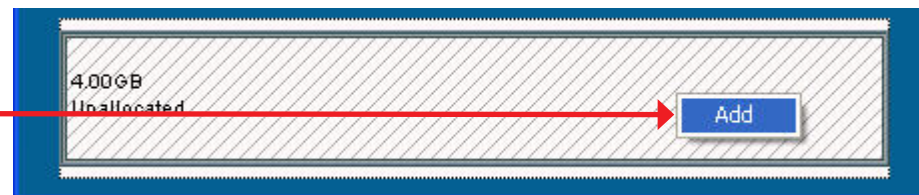


The Partition Manager window opens:

To add a partition, configure the parameters as explained below:

**Partition Size:** Click the **Use Maximum Available Space** check box to specify that the maximum available space on the disk will be used to create the new partition. To specify a size, unclick the check box and type in the capacity of size of the partition (in megabytes) in the **Megabytes** field.

**Format Type:** Choose whether to format the new partition with *NTFS* or *FAT32* by ticking the appropriate checkbox.


**Drive Letter:** Choose the drive letter that you want to allocate to the iSCSI partition from the drop-down menu.

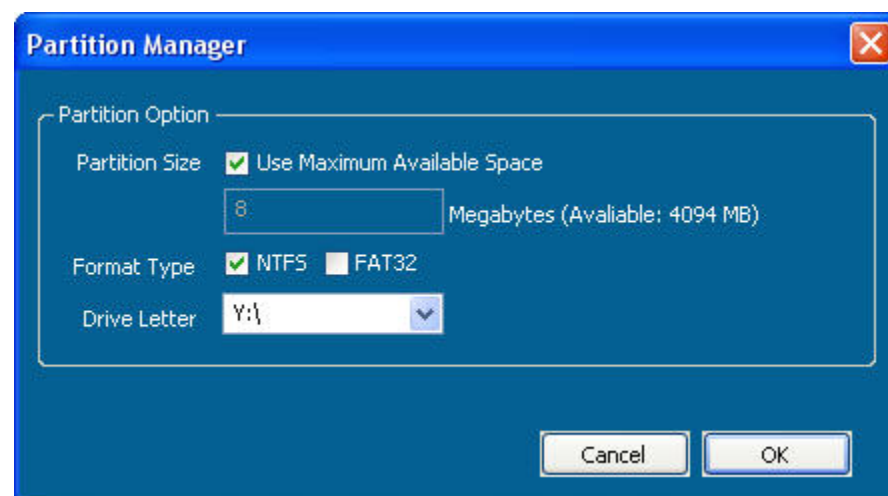

When you have finished configuring the partition settings, click the **Format** button to add the new partition.

## Deleting an existing partition

Right-click an existing partition and click **Delete**.

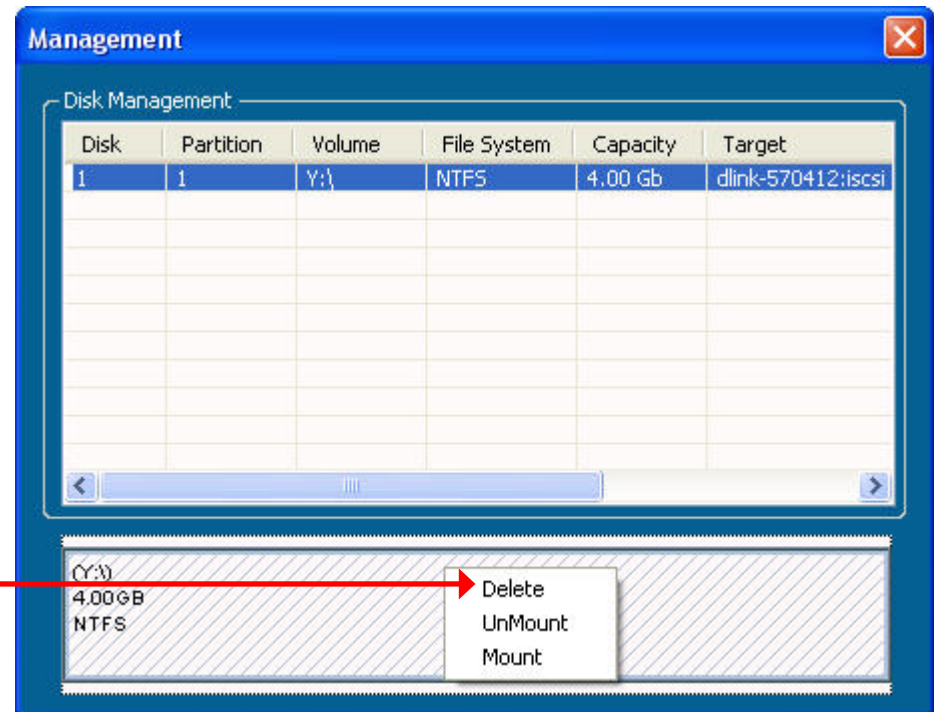

## Mounting Disks

When a partition is not mounted, a \* (star) symbol will appear in the Volume column in the **Disk Management** list.



Carry out the following steps to mount a disk:

1. Right-click an unmounted partition and click **Mount**.

The Drive Select window appears.

2. Select the drive letter in the **Device** drop-down list.


3. Click the **OK** button.

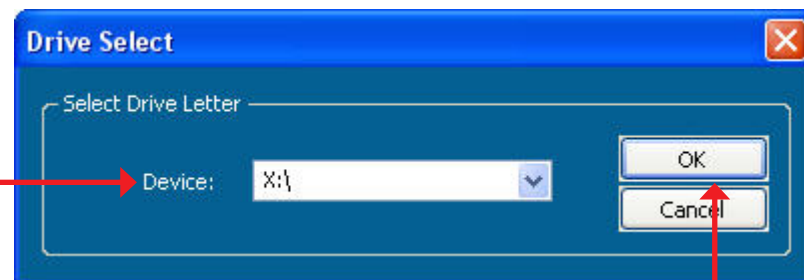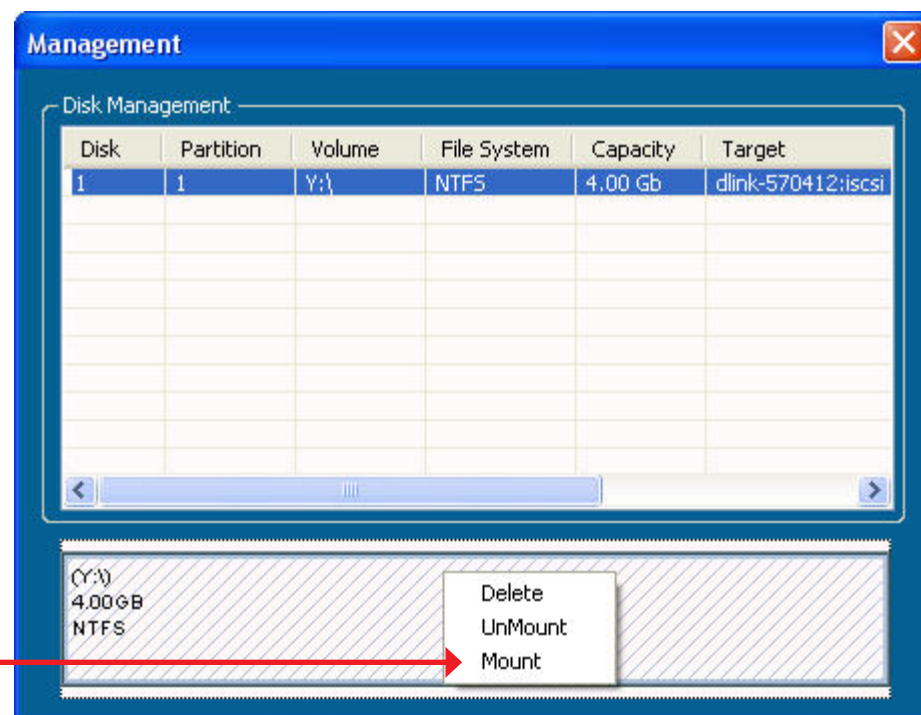

4. The mounted disk is displayed in the **Disk Management** list.



3. The newly mounted disk is displayed in the My Computer window and can be used as if it was a locally attached disk.

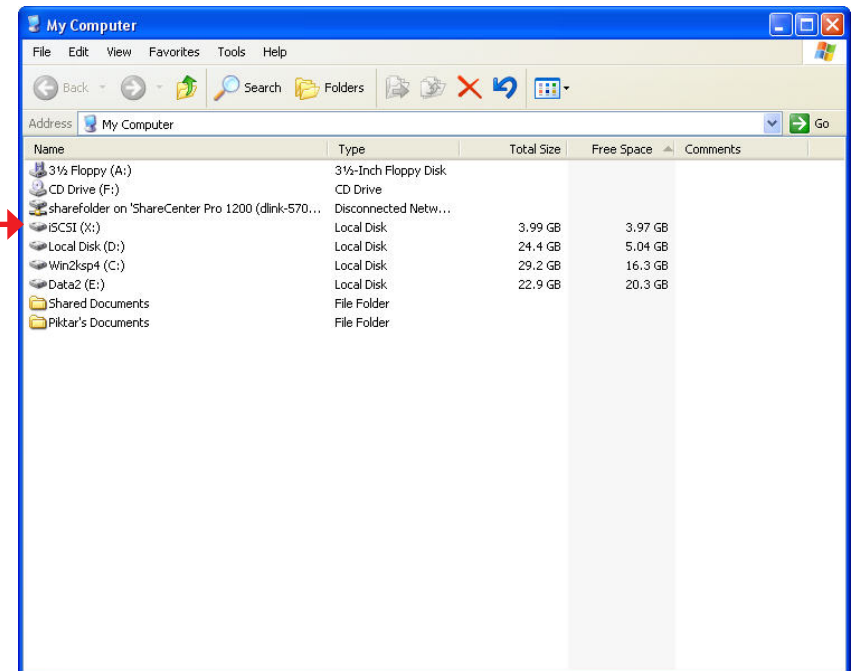

# Hot-swap Function

The ShareCenter supports hot-swap drive trays. You can eject or insert 3.5" SATA hard drive(s) when the ShareCenter is operating.

However, if the hard drives are created into various levels of RAID, you cannot hot swap all the hard drives at the same time. Hot swapping all the hard drives will cause a loss of data, and the RAID volume will need to be re-created again. Different levels of RAID required various numbers of hard drives remaining in the ShareCenter.

**Standalone/JBOD/RAID 0:** The data will be lost and the volume will crash, if any of the hard drives are hot swapped.

**RAID 1:** You can hot swap the hard drives as long as one of the hard drives in the mirror is still in the ShareCenter. Removal of all hard drives will result in a loss of all data and volume will have crashed.

**RAID 5:** In a RAID 5 volume, it is only possible to hot swap 1 hard drive at a time without losing all data. This is because a RAID 5 volume can only tolerate the loss of 1 hard drive and still continue to work. After hot swapping a hard drive, the volume must first be rebuilt before another hard drive can be hot swapped, otherwise this will also result in a loss of all data and the RAID volume will have crashed.

**RAID 6:** In a RAID 6 volume, it is possible to hot swap 2 hard drives at a time without losing all data. This is because a RAID 6 volume can only tolerate the loss of 2 hard drives and still continue to work. After hot swapping 2 hard drives, the volume must first be rebuilt before another hard drive can be hot swapped, otherwise this will also result in a loss of all data and the RAID volume will have crashed.

You can check the RAID configuration from the **Disk Management** -> **Volume** page on the Web UI. When hot swapping hard drives, you will see the changes in the **Disk(s)** column. Hot swap one of the hard drives, make sure the Disk number has disappeared from the **Disk(s)** column, and then hot swap the next hard drive.

# Storing non-English Character Files

By default the ShareCenter will support Unicode which is an industry standard allowing computers to consistently represent and manipulate text expressed in most of the world's writing formats.

# Contacting Technical Support

U.S. and Canadian customers can contact D-Link technical support through our web site or by phone.

Before you contact technical support, please have the following ready:

- Model number of the product (e.g. DNS-1200-05)
- Hardware Revision (located on the label on the bottom of the network camera (e.g. rev A1))
- Serial Number (s/n number located on the label on the bottom of the network camera).

You can find software updates and user documentation on the D-Link website as well as frequently asked questions and answers to technical issues.

## For customers within the United States:

### Phone Support:

(877) 354-6555

### Internet Support:

<http://support.dlink.com>

## For customers within Canada:

### Phone Support:

(877) 354-6560

### Internet Support:

<http://support.dlink.ca>



# Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

## **Limited Warranty:**

D-Link warrants that the hardware portion of the D-Link product described below ("Hardware") will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below ("Warranty Period"), except as otherwise stated herein.

- Hardware (excluding power supplies and fans): One (1) year limited
- Power supplies and fans: One (1) year
- Spare parts and spare kits: Ninety (90) days

The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

### **Limited Software Warranty:**

D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Software Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

### **Non-Applicability of Warranty:**

The Limited Warranty provided hereunder for Hardware and Software portions of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

### **Submitting A Claim:**

The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-877-453-5465, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization ("RMA") number by completing the RMA form and entering the assigned Case ID Number at <https://rma.dlink.com/>.

- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery (“COD”) is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link’s reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

### **What Is Not Covered:**

The Limited Warranty provided herein by D-Link does not cover:

Products that, in D-Link’s judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product.

While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

### **Disclaimer of Other Warranties:**

EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED “AS-IS” WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

### **Limitation of Liability:**

TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NONCONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

### **Governing Law:**

This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

### **Trademarks:**

D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

### **Copyright Statement:**

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright ©2011 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

### **CE Mark Warning:**

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

### **FCC Statement:**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

# Registration

Register your product online at [registration.dlink.com](http://registration.dlink.com)



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.

Version 1.0  
May 5, 2011