



1996-1998 Acura TL Rear Speaker Replacement

This guide explains how to access the rear speaker by removal from the back seat and trunk.

Written By: Brayden




INTRODUCTION

This guide will show you how to access the rear speaker located behind the back seat headrest.

TOOLS:

- Phillips #2 Screwdriver (1)
- Socket Wrench (1)

Step 1 — Rear Speaker

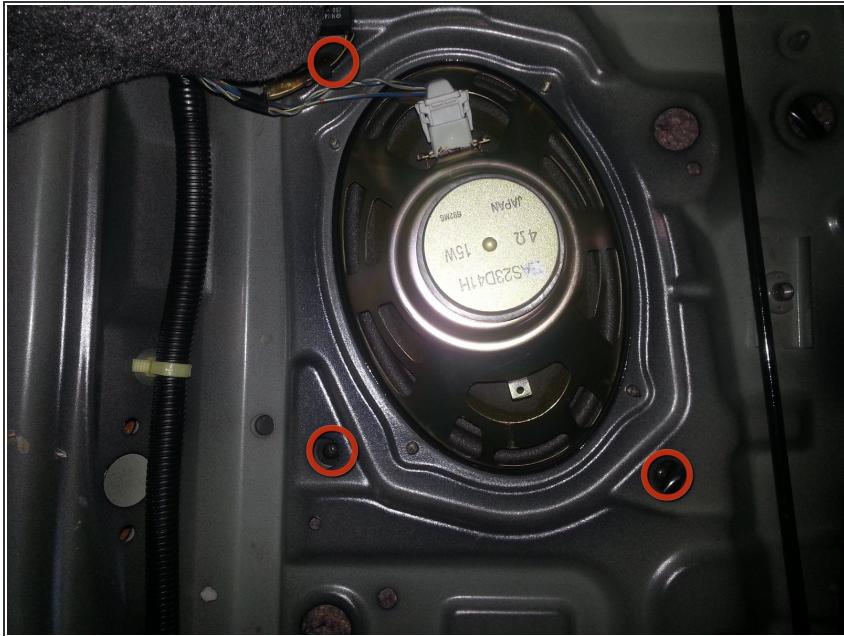

- Remove the three screws holding the speaker panel in place.

Step 2



- Disconnect the wiring harness in trunk.

Step 3



- Slide the speaker panel towards the center of car and pull it out.

Step 4



- Remove the four screws holding the speaker in.
- Lift the speaker out and removal is complete.

To reassemble your device, follow these instructions in reverse order.