



1996-1998 Subaru Legacy Engine Air Filter Replacement

Replace the engine air filter.

Written By: Tim Asp



 **TOOLS:**

- Flathead Screwdriver (1)

Step 1 — Engine Air Filter



- Unclip the power from the tube-thingy

Step 2



- Loosen the clamp

Step 3



- Remove the old air filter.

Step 4



- Install the new air filter.

To reassemble your device, follow these instructions in reverse order.