




# 1996-2000 Honda Civic Drive Axle Replacement

A video tutorial on how to change an axle on a 1996-2000 Honda Civic.

Written By: eCuration

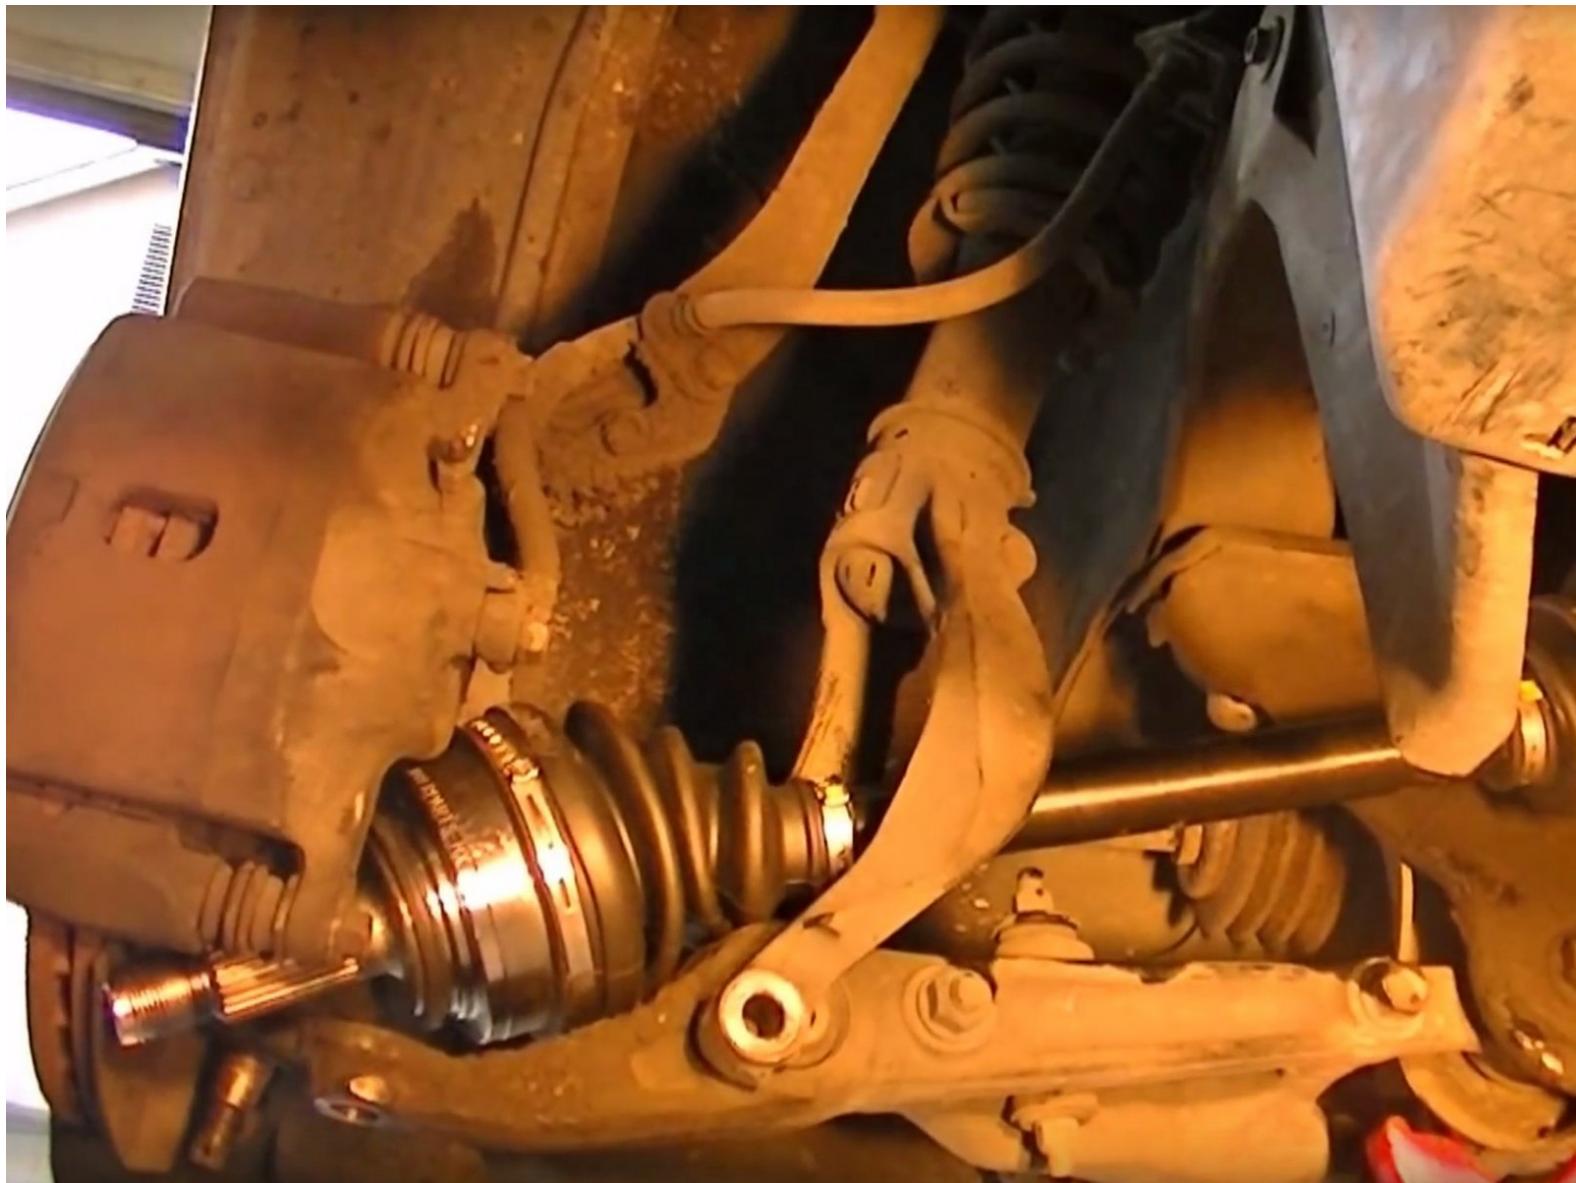

## INTRODUCTION

If you are experiencing excessive vibrations and or a noise when turning, then it may be time to replace a drive axle.

Follow this video tutorial by YouTuber [Paul Wyndham](#) to complete the replacement yourself.

## Safety

If this is your first time working on a vehicle read our [safety tips](#) before proceeding.

### TOOLS:

- Hydraulic Floor Jack (1)
- Jack Stands (1)
- Oil Drain Pan (1)
- Torque Wrench (1)
- 1/2" Drive Ratchet (1)
- 17 mm Box End Wrench (1)
- Hammer (1)
- Pin Punch (1)
- Pry Bar (1)
- Large Needle Nose Pliers (1)
- Phillips #2 Screwdriver (1)
- Safety Glasses (1)
- Latex or nitrile gloves (1)
- Paper Towels (1)
- Socket 17mm (1)

### PARTS:

- CV Drive Axle Honda Civic 1996-2000 (1)

To reassemble your device, follow these instructions in reverse order.