


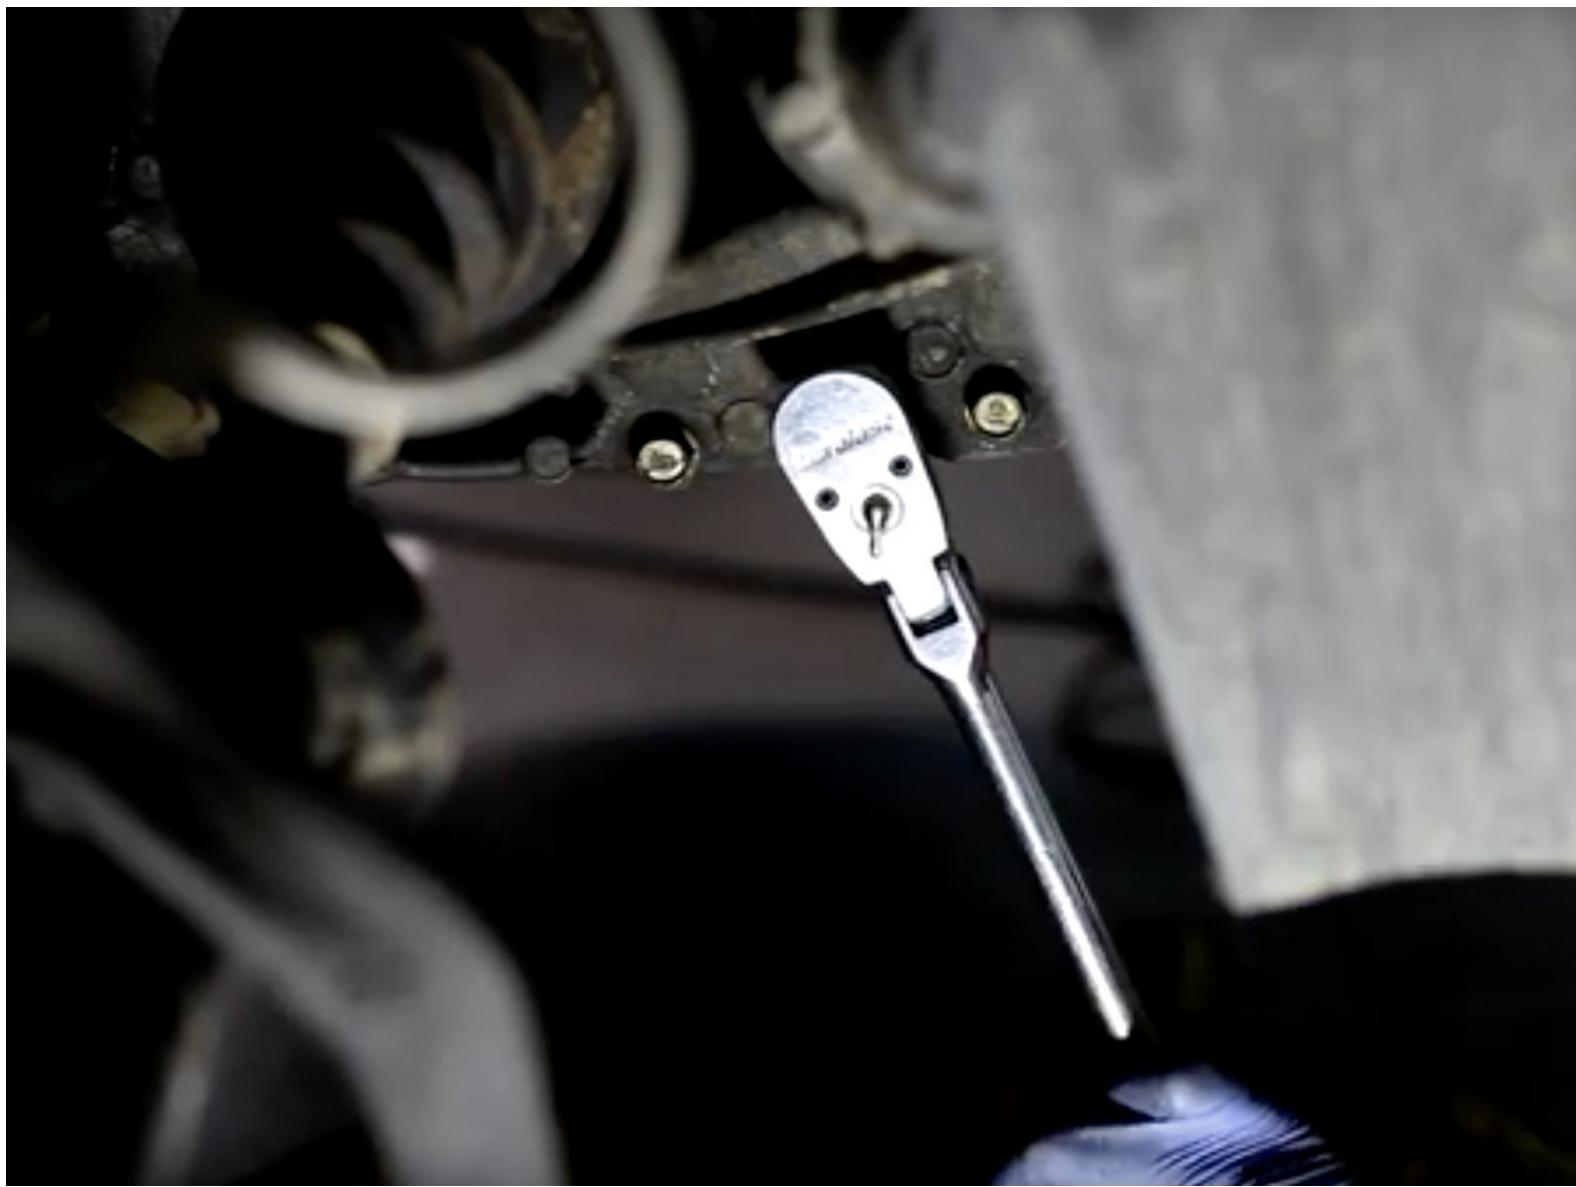

1996-2000 Honda Civic Manual Transmission Fluid Replacement

A video tutorial on how to change the fluid in a manual transmission by doing a drain and fill on a 1996-2000 Honda Civic.

Written By: eCuration



This document was generated on 2019-10-17 06:09:42 AM (MST).

INTRODUCTION

The fluid in your manual transmission should be replaced once every 30,000-60,000 depending on your use.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the swap yourself.

TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stands](#) (1)
- [Wheel Chocks](#) (1)
- [Oil Drain Pan](#) (1)
- [Long Neck Funnel](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [3/8-Inch Drive Extension Bar](#) (1)
- [17 mm Box End Wrench](#) (1)
- [Torque Wrench](#) (1)

PARTS:

- [Manual Transmission Fluid](#) (1)

To reassemble your device, follow these instructions in reverse order.