



1998-2002 Honda Accord Tail Light Bulbs Replacement

Replace the tail light bulbs in a '98 to '02 Honda Accord.

Written By: Miroslav Djuric



INTRODUCTION

Replace the tail light bulbs in a '98 to '02 Honda Accord.



TOOLS:


- [Flathead Screwdriver](#) (1)
-

Step 1 — Tail Light Bulb Assemblies




- Open the trunk using your key in the trunk key slot or by using the lever under the driver's console.

Step 2 — Panel Tail Lights

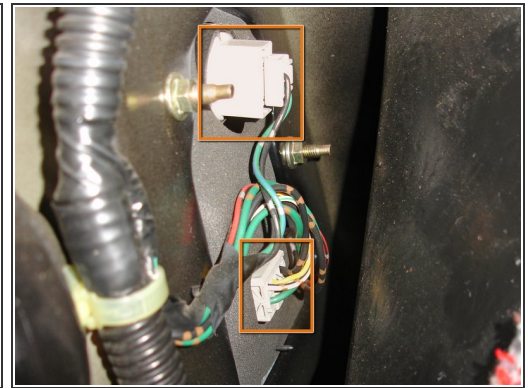

- Remove the small plastic screw along the vertical edge of the trunk entrance using a flathead screwdriver.
- Carefully peel back the trunk liner from around the edge of trunk opening by the light.
- Locate the two panel tail light connectors located between the liner and the panel tail light assembly.

Step 3

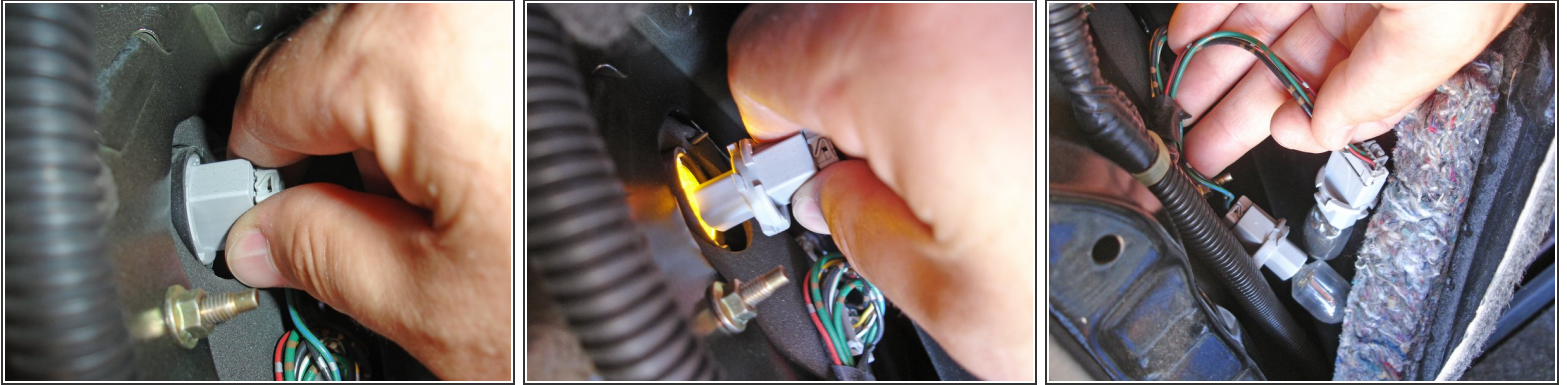

- Grab a light bulb socket and turn it counterclockwise until it can be removed from its hole.
- Repeat this process for the other light bulb socket.

Step 4 — Trunk Lid Tail Lights



- Locate the light bulb sockets in the trunk lid, located on the back side of the trunk tail lights.
- Turn the light bulb sockets counterclockwise and remove them from their holes.

Step 5 — Tail Light Bulbs



- Remove the light bulbs from their sockets by gently pulling them away from the connectors.

To reassemble your device, follow these instructions in reverse order.