


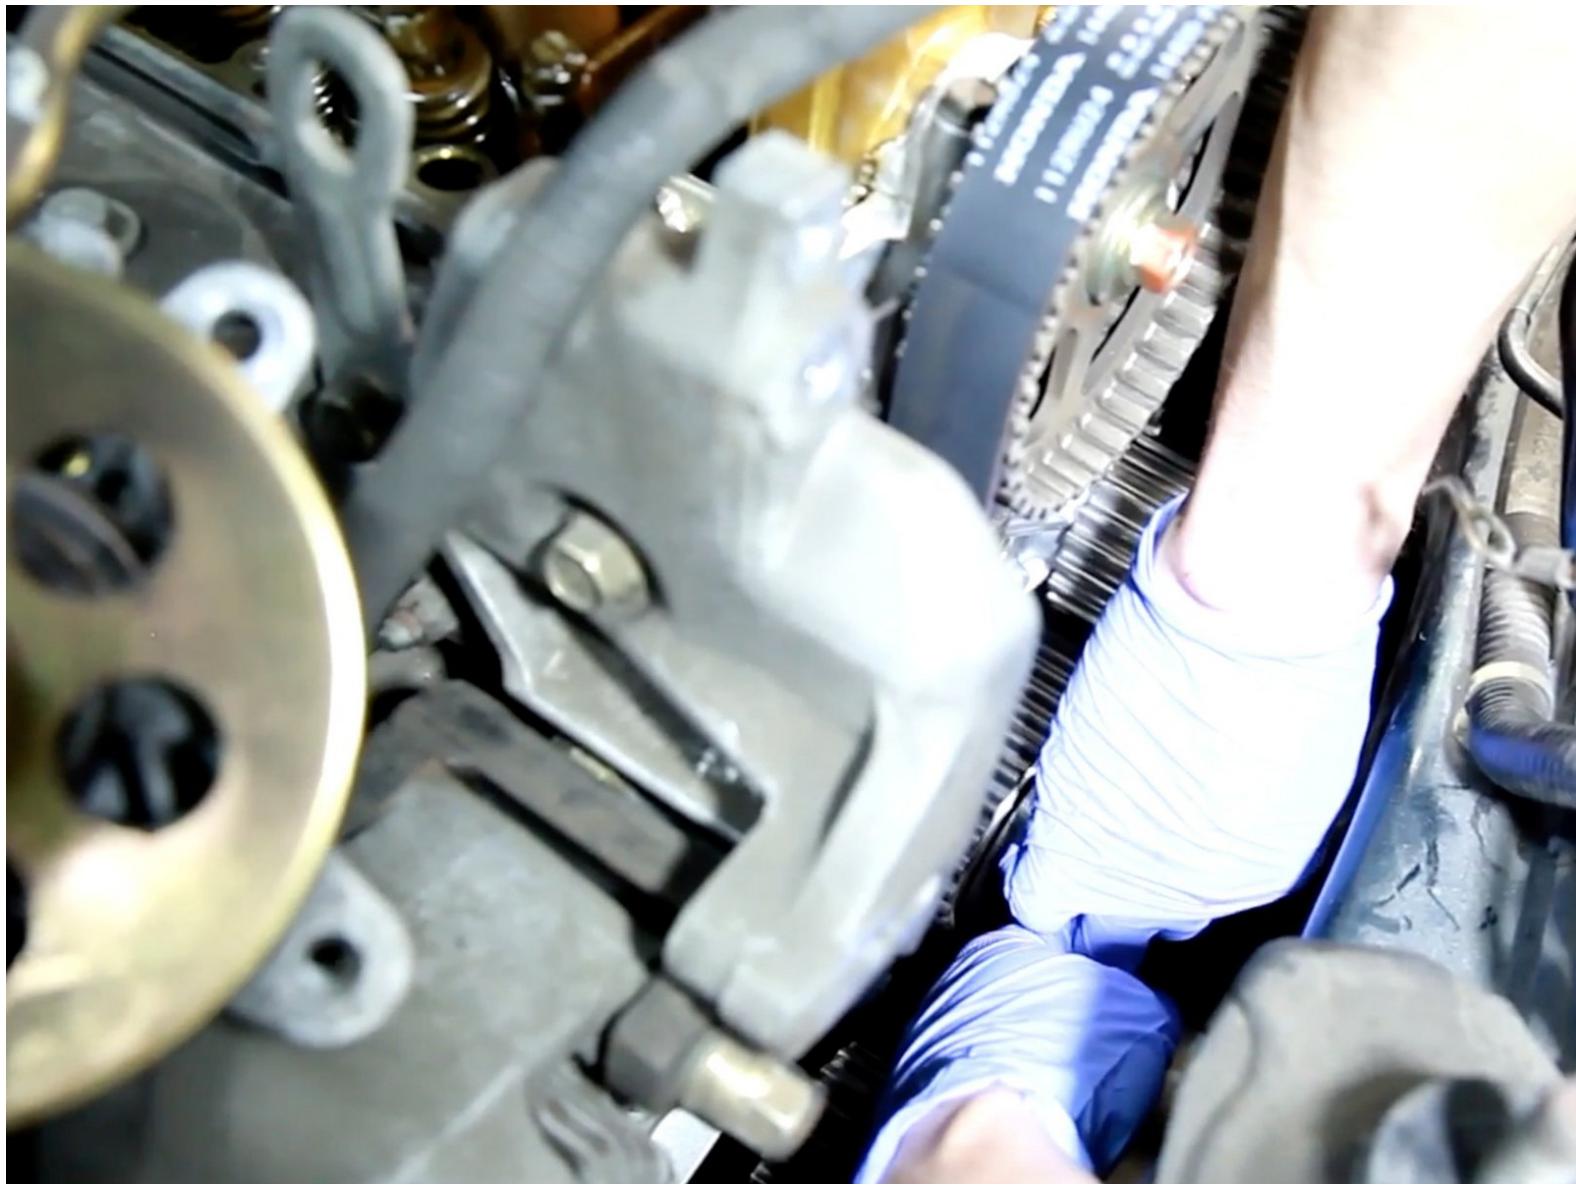

# 1998-2002 Honda Accord Timing Belt and Water Pump Replacement

A video tutorial on how to change the water pump and timing belt on a 1998-2002 Honda Accord.

Written By: eCuration



## INTRODUCTION

The timing belt and water pump should be replaced together every 60,000-75,000 miles.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.

### TOOLS:

- Impact Wrench (1)
- 1/2" Drive Breaker Bar (1)
- 3/8" Drive Ratchet (1)
- Socket 19mm (1)
- 10mm Socket (1)
- Pick Tool (1)
- White Out (1)
- Torque Wrench (1)
- Socket 17mm (1)
- 14mm socket (1)
- 12mm Socket (1)

### PARTS:

- Engine Water Pump (1)
- Timing Belt (1)

To reassemble your device, follow these instructions in reverse order.