



1999-2003 Acura TL Engine Air Filter Replacement

A video tutorial on how to change the engine air filter on a 1999-2003 Acura TL

Written By: eCuration



INTRODUCTION

This short video guide will show you how to replace the engine air filter on your 1999-2003 Acura TL

TOOLS:

- [3/8" Drive Ratchet](#) (1)
- [10" Ratchet Extension](#) (1)
- [8 mm socket](#) (1)

PARTS:

- [Engine Air Filter Acura TL 1999-2003](#) (1)

To reassemble your device, follow these instructions in reverse order.