



# 1999-2003 Acura TL Oil and Oil Filter Replacement

A video tutorial on how to change the engine oil and oil filter on 1999-2003 Acura TL 3.2L.

Written By: eCuration



## INTRODUCTION

This video guide will show you how to replace the engine oil and filter on a 1999-2003 Acura TL 3.2L.

### TOOLS:

- Hydraulic Floor Jack (1)
- Jack Stand (1)
- Wheel Chocks (1)
- Oil Filter Wrench (1)
- Oil Drain Pan (1)
- Long Neck Funnel (1)
- 3/8" Drive Ratchet (1)
- Paper Towels (1)
- Aerosol Brake Cleaner (1)
- Socket 17mm (1)

### PARTS:

- 5W-30 Motor Oil (5)
- Oil Filter (1)

To reassemble your device, follow these instructions in reverse order.