



# 2001-2005 Honda Civic Tail Light Replacement

How to replace a non-functioning tail light

Written By: Tyler Smith



## Step 1 — Tail Light



**⚠** To remove the risk of electrocution, turn off the vehicle before attempting replacement

## Step 2



- Release the trunk latch.
- *i* The release can often be found on the floor, near the fuel access and hood release buttons.

## Step 3



- Remove bulb from tail light assembly.

## Step 4



- Remove the bulb from its' socket.

**⚠** Be sure to only remove the bulb. Removing the socket as well will require another replacement in order to properly function.

To re-install a tail light, follow these steps in reverse.