




# 2002-2008 Dodge Ram 1500 Fuse Replacement

Check for blown fuses and replace them.

Written By: Michael Saggese

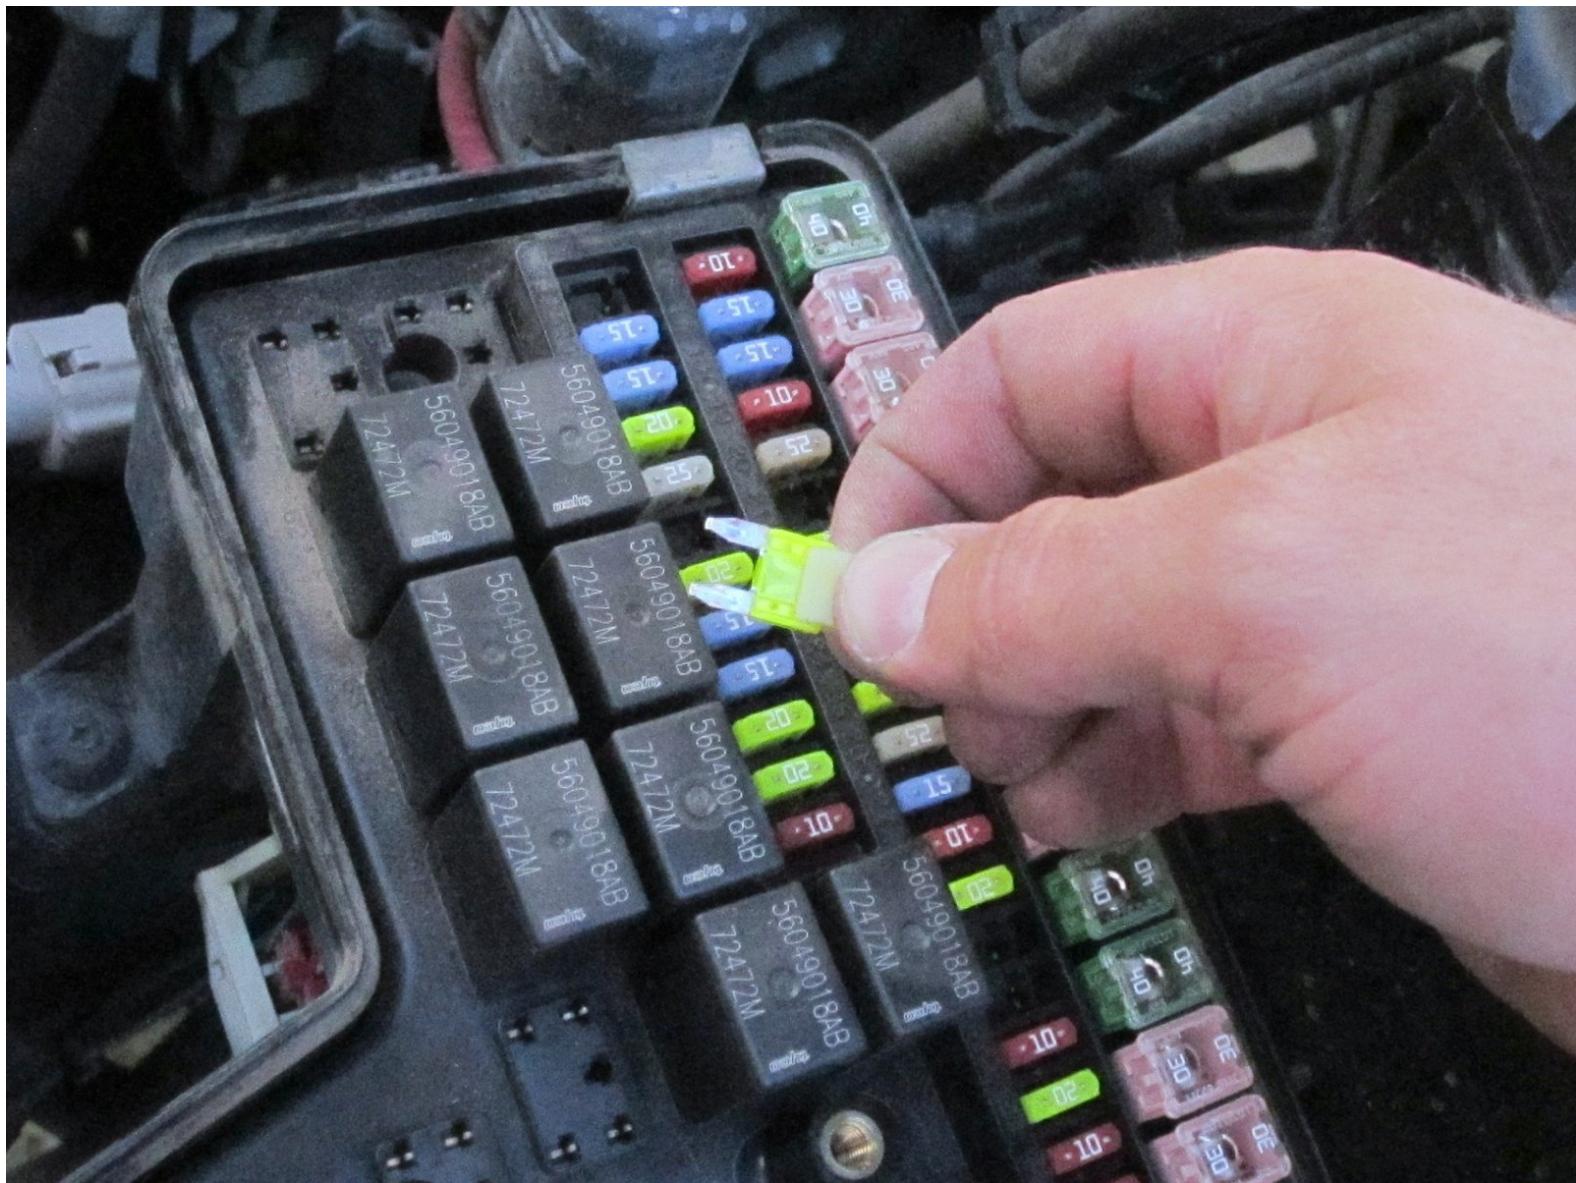

## INTRODUCTION

This guide demonstrates how to remove and replace fuses for your Dodge truck.

### TOOLS:

- [Fuse Box Tool \(1\)](#)

### PARTS:


- [Automotive fuse \(1\)](#)

## Step 1 — 2002-2008 Dodge Ram 1500 Fuse Replacement



- Open the hood by pulling the hood lever in the driver-side footwell.
- Reach under the center of the grille and press the hood latch.

## Step 2

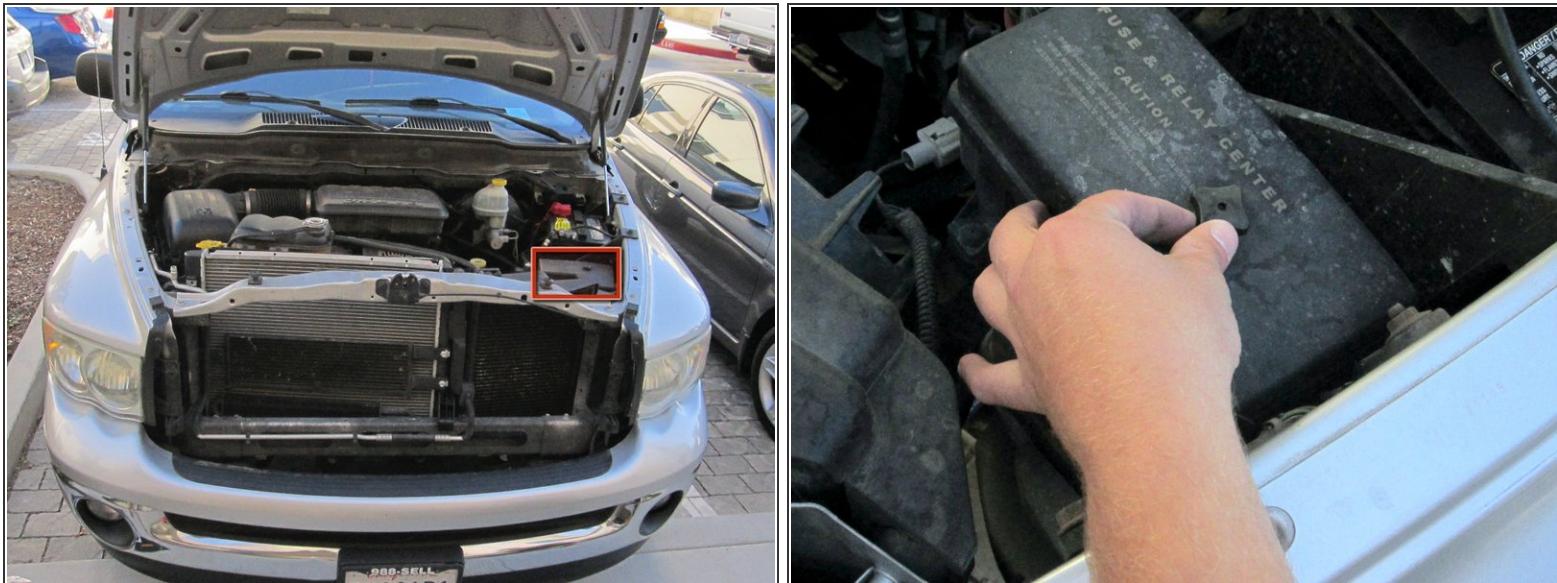


- Locate the fusebox. The fusebox is the box that says "Fuse and Relay Center", near the left front fender of your Dodge.
- Unscrew the plastic nut that holds the cover of the fusebox in place.

## Step 3



- Remove the nut and the cover of the fusebox. Use the inside of the fusebox cover to determine which fuses you need to check.
- Locate the fuse grabber. The fuse grabber is located near the front of the fusebox.
- Remove the fuse grabber from its holder.

## Step 4

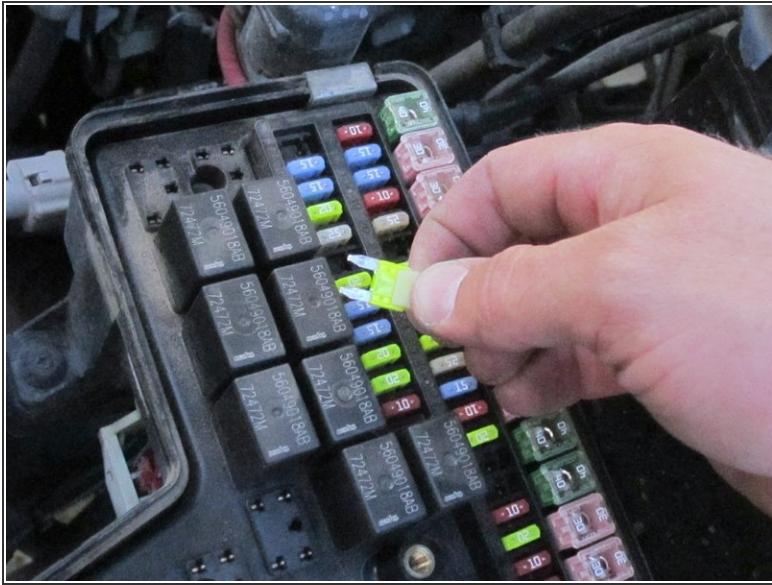

- Use the fuse grabber to carefully pinch the fuse.
- Pull the desired fuse out.

**⚠** Be sure to replace each blown fuse with a fuse of the correct current rating and size. Serious damage can occur if the wrong fuse is used.

To replace a fuse, follow these instructions in reverse order. Make sure you buy the correct fuse to replace a blown fuse. Serious damage can occur if you do not use the correct replacement fuses.