



2003 Toyota Solara Tail Light Replacement

Replace a tail light on the 2003 Toyota Solara.

Written By: Melissa Spinali



INTRODUCTION

Do you have a broken tail light? Follow this guide to learn how to check and then replace a broken taillight on the 2003 Toyota Solara.



PARTS:

- [Sylvania 3157 Long Life Miniature Bulb \(1\)](#)

Step 1 — Tail Light



- Park the vehicle and turn off the engine.
- Step on the brake pedal to confirm whether or not the tail light is responsive.

Step 2



- Reach underneath the steering wheel. Then, place your hand to the left to remove the fuse box cover.

Step 3



- Reference the fuse box guide on the back of the cover.
- Locate the fuse number that corresponds to the tail light (2nd column, last row).
- Replace the tail lamp if the fuse is still functional.

Step 4





- Open the vehicle's trunk.
- Unscrew the plastic fastenings located inside the trunk.
- Detach the panel covering the tail light.

Step 5



- Untwist the wired socket to expose the lamp bulb.
- Check the bulb for discoloration (if it is clouded, replace the bulb).

Step 6

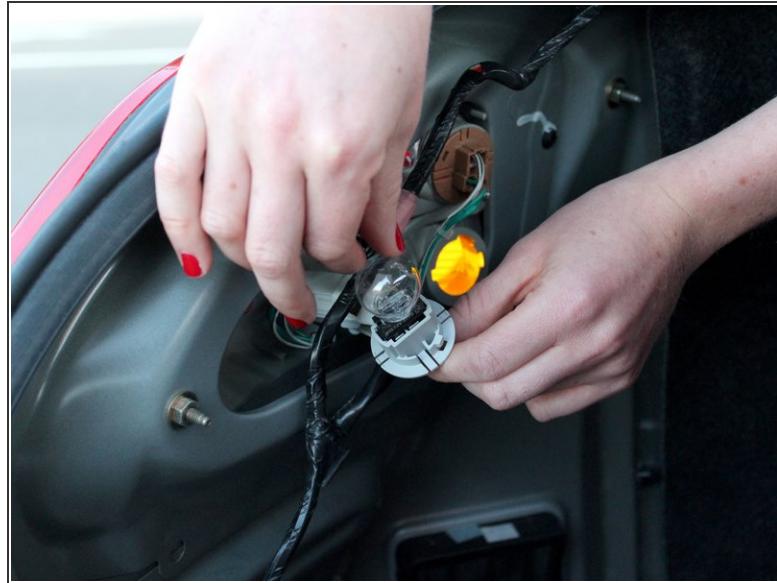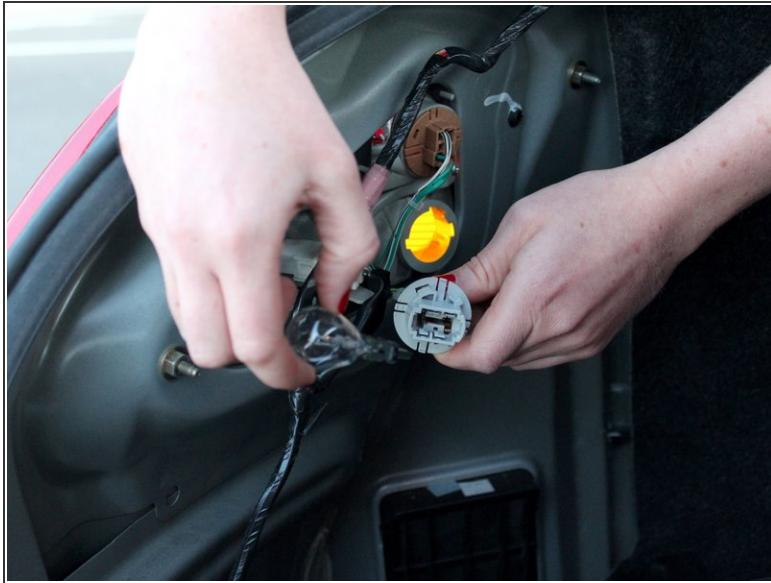

- Insert the new bulb into the socket.
- Push until there is an audible "click".

To reassemble the tail lamp, follow these instructions in reverse order.